

9. Grasp the base line of the left control line and compare the cascade line to the base line and ensure they are even $(\pm 1/2\text{-inch})$.

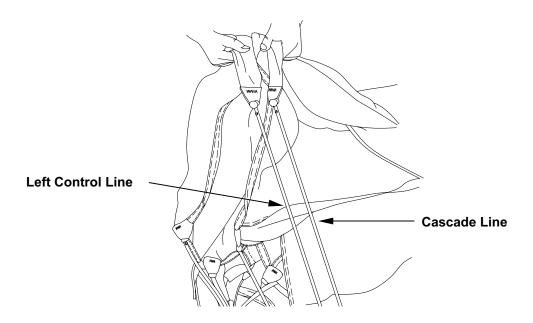

10. Move to the trailing edge of the canopy (tail). Grasp canopy fabric near both main control line attachment loops. Pull control lines and compare to ensure lengths are equal within ½-inch.

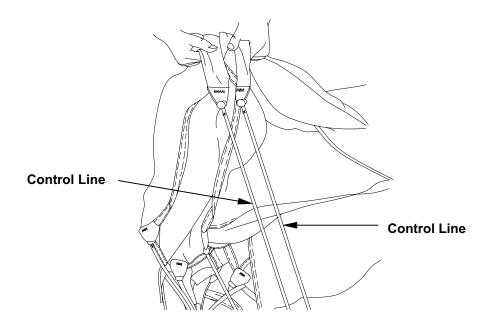

- 11. Remove toggles from finger trap loop.
- 12. Move to leading edge of canopy and ensure connector links are held even with one another.