
11. Route pull-up cords through upper pilot chute grommet tabs. Compress pilot chute, ensuring that canopy fabric is clear of spring, grommets and closing loops. Canopy fabric will be distributed to left and right sides of pilot chute. Pull closing loops up through tabs and insert temporary locking pins.

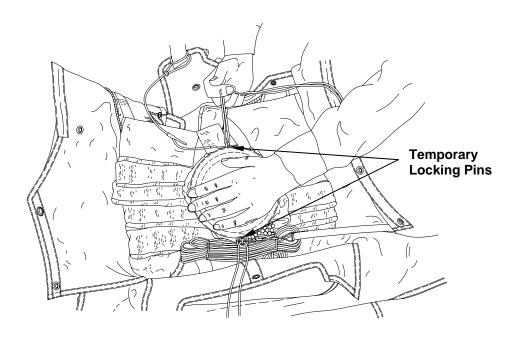

12. Route pull-up cord through grommet in bottom flap. Pull up closing loop and reinsert temporary locking pin.

