

# Computer Technology I

## Lab. 2: Subroutines



Author: Loic GALLAND,

LEONARDO PEDRO

Supervisor:

Semester: Autumn 2019 Area: Computer Science Course code: 1DT301

### Contents

1	Task 1 - Switch – Ring counter / Johnson counter	1
2	Task 2 - Electronic dice	4
3	Task 3 - Change counter	6
4	Task 4 - Delay subroutine with variable delay time	8

#### 1 Task 1 - Switch – Ring counter / Johnson counter


Write a program which switch between Ring counter and Johnson counter. You should not use Interrupt in this lab. The pushbutton must be checked frequently, so there is no delay between the button is pressed and the change between Ring/Johnson. Use SWO (PAO) for the button. Each time you press the button, the program should change counter.

```
; 1DT301, Computer Technology I
; Date: 2016-09-15
; Author:
; Loic GALLAND
; Leonardo PEDRO
; Lab number: 2
; Title: Subroutines
; Hardware: STK600, CPU ATmega2560
; Function: Program that when the Switch number 0 is pressed, it will
   change between the Ring Counter and the Johnson Counter.
; Input ports: PORTA will be used as input to be able to get the
   information from the switches.
; Output ports: PORTB will be used as output to be able to light up the
    LEDs in the corresponding manner.
; Subroutines: To be able to do the delay
; Included files: m2560def.inc
.includes "m2560def.inc"
; Initialize SP, Stack Pointer
ldi r20, HIGH(RAMEND) ; R20 = high part of RAMEND address
out SPH,R20 ; SPH = high part of RAMEND address
ldi R20, low(RAMEND) ; R20 = low part of RAMEND address
out SPL,R20 ; SPL = low part of RAMEND address
ldi r16, 0xFF ; setting up the data direction register port B
out DDRB, r16 ; Set port B as output
ldi r16, 0x00 ;Set the data direction register port A
out DDRA, r16 ;Set portA as input
ldi r24, 0b111111110 ;Desired switch
RC:
        ; Ring Counter Code
       ldi r21, Ob111111111; inital LED state
       out portB, r21 ; Turn off all the lights
       mov r17, r21 ;Copy r21 into r17 ldi r22, 0xFF ;To compare to make it restart when all the
           lights turn off
       RC_loop:
               out portB, r17 ;Show the corresponding lights
               rol r17 ; rotate the bits to make them go left
               CALL Delay1 ; Delay of 0.5 seconds
               in r25, PINA
                             ; Read the input from the switch
                             ; Compare the switches with the desired
               cp r25, r24
```

```
switch
                breq JC ; If they are =, go to Johnson Counter
                cp r17, r22
                                         ; Check if all the lights are
                   turned off
                breq RC_light ;
        rjmp RC_loop
        RC_light:
                rol r17 ; do a rol here because we are not supposed to
                   see it appear.
                out portB, r17 ; light up the desired LEDs
                rjmp RC_loop    ;go back to the loop to make it
                    continue
rjmp RC
JC:
        ; Johnson Counter Code
        ldi r21, 0b11111110
                                ;r21 = to light up the LEDs
        ldi r22, Ob11111111 ;Desired condituon
        ldi r23, 0b00000000 ;Desired condition
        my_loop1:
                       ;Loop to do the going left part of the Johnson
           Counter
                out portB, r21 ; Light up the corresponding LEDs
                LSL r21 ;Logical shift to the left of R21
                CALL Delay1 ; Delay of 0.5s
                in r25, PINA
cp r25,r24
;Get the input from PINA
cp r25,r24
;Compare input and desired switch
                breq RC If equal go back to Ring Counter
                cp r21, r23 ; compare info with desired one
                             ; If equal go to "light" where it is
                breg light
                    going right.
        rjmp my_loop1
        light: ;initialisation process to be able to go right
                out portB, r23 ;Turn on all the lights
                CALL Delay1 ; Delay of 0.5s
                ldi r21, 0b10000000 ;Set up the first iteration to
                   make sure it goes right correctly
                out portB, r21 ;output to PortB
                Second_loop: ;Action of going right here
   in r25, PINA ; check info from switches
                                        ;Compare switches with desired
                         cp r25, r24
                            switch
                        breq RC ; If equal go back to Ring Counter
                         out portB, r21 ;Output it to r21
                        ASR r21 ; Arithmetic Shift right to be able to
                            shift the bits to the right.
                        CALL Delay1 ; Delay of 0.5s
                         cp r21, r22 ; compare info with desired one
                        breq my_loop1 ;if equal go back my_loop1 and
                            go right again
                rjmp Second_loop
rjmp JC
Delay1:
; Generated by delay loop calculator
; at http://www.bretmulvey.com/avrdelay.html
; Delay 1 950 500 cycles
; 500ms at 3.901 MHz
    ldi r18, 10
    ldi r19, 230
```

```
ldi r20, 22
L1: dec r20
brne L1
dec r19
brne L1
dec r18
brne L1
RET
```

This is the flowchart of the task 1:

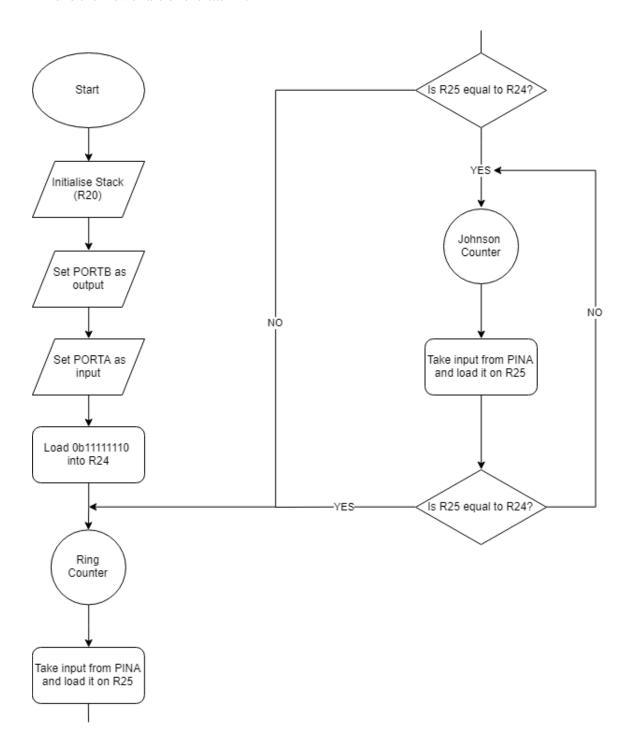

#### 2 Task 2 - Electronic dice

You should create an electronic dice. Think of the LEDs placed as in the picture below. The number 1 to 6 should be generated randomly. You could use the fact that the time you press the button varies in length.

```
; 1DT301, Computer Technology I
; Date: 2016-09-15
; Author:
; Loic GALLAND
; Leonardo PEDRO
; Lab number: 2
; Title: Subroutines
; Hardware: STK600, CPU ATmega2560
; Function: Describe the function of the program, so that you can
  understand it,
; even if you're viewing this in a year from now!
; Input ports: Describe the function of used ports, for example on-
   board switches
; connected to PORTA.
; Output ports: Describe the function of used ports, for example on-
  board LEDs
; connected to PORTB.
; Subroutines: If applicable.
; Included files: m2560def.inc
; Changes in program: (Description and date)
.include "m2560def.inc"
ldi r16, 0xFF ; setting up the data direction register port B
out DDRB, r16 ;Set port B as output
ldi r16,0x00
out DDRA, r16
ldi r19,1; counter
ldi r25, 0xFF
out PortB, r25
ldi r24,0b11111110
Listening_For_Switch_Press:
       in r17, PINA
       cp r17, r24
       breq loop
rjmp Listening_For_Switch_Press
Listening_For_Switch_Release:
       inc r19
       cpi r19,7
```

```
breq reset
         in r17, PINA
        cp r17, r25
        breq RD
rjmp Listening_For_Switch_Release
reset:
ldi r19,1
rjmp Main
RD:
        cpi r19,1
        breq ONE
        cpi r19,2
        breq TWO
        cpi r19,3
        breq THREE
        cpi r19,4
        breq FOUR
        cpi r19,5
        breq FIVE
        cpi r19,6
        breq SIX
rjmp RD
ONE:
ldi r18,0b11101111
out PortB, r18
rjmp Listening_For_Switch_Press
TWO:
ldi r18,0b10111011
out PortB, r18
rjmp Listening_For_Switch_Press
THREE:
ldi r18,0b10101011
out PortB, r18
rjmp Listening_For_Switch_Press
FOUR:
ldi r18,0b00111001
out PortB, r18
rjmp Listening_For_Switch_Press
FIVE:
ldi r18,0b00101001
out PortB, r18
rjmp Listening_For_Switch_Press
SIX:
ldi r18,0b00010001
out PortB, r18
rjmp Listening_For_Switch_Press
```

This is the flowchart of the task 1:

#### 3 Task 3 - Change counter

Write a program that is able to count the number of changes on a switch. As a change we count when the switch SW0 goes from 0 to 1 and from 1 to 0, we expect therefore positive and negative edges. We calculate the changes in a byte variable and display its value on PORTB.

```
; 1DT301, Computer Technology I
; Date: 2016-09-15
; Author:
; Loic GALLAND
; Leonardo PEDRO
; Lab number: 2
; Title: Subroutines
; Hardware: STK600, CPU ATmega2560
; Function: Describe the function of the program, so that you can
  understand it,
 even if you're viewing this in a year from now!
; Input ports: Describe the function of used ports, for example on-
  board switches
; connected to PORTA.
; Output ports: Describe the function of used ports, for example on-
  board LEDs
; connected to PORTB.
; Subroutines: If applicable.
; Included files: m2560def.inc
; Changes in program: (Description and date)
.include "m2560def.inc"
ldi r16, 0xFF ; setting up the data direction register port B
out DDRB, r16 ; Set port B as output
ldi r16,0x00
out DDRA, r16
ldi r25, 0
ldi r24,0
ldi r17, 0b11111111
out PORTB, r17
ldi r18, 0b11111110
my_loop:
```

```
in r19, PINA
        cp r18, r19
        breq counter
rjmp my_loop
counter:
inc r25
mov r20, r25
com r20
out portB, r20
         loop:
                 in r19,PINA
                 cp r19, r17
                breq counter2
        rjmp loop
counter2:
inc r25
mov r20, r25
com r20
out portB,r20
rjmp my_loop
```

#### 4 Task 4 - Delay subroutine with variable delay time

```
; 1DT301, Computer Technology I
; Date: 2016-09-15
; Author:
; Loic GALLAND
; Leonardo PEDRO
; Lab number: 2
; Title: Subroutines
; Hardware: STK600, CPU ATmega2560
; Function: Describe the function of the program, so that you can
   understand it,
; even if you're viewing this in a year from now!
; Input ports: Describe the function of used ports, for example on-
   board switches
; connected to PORTA.
; Output ports: Describe the function of used ports, for example on-
  board LEDs
; connected to PORTB.
; Subroutines: If applicable.
; Included files: m2560def.inc
; Changes in program: (Description and date)
.include "m2560def.inc"
.equ INPUT= 1000
ldi r16, 0xFF ; setting up the data direction register port B
out DDRB, r16 ; Set port B as output
ldi r21, Ob111111111; inital LED state
out portB, r21
mov r17, r21
ldi r22, 0xFF
ldi r23, 0b11111110
RC_loop:
       out portB, r17
       rol r17
       CALL Delay
       cp r17, r22
       breq RC_light
rjmp RC_loop
RC_light:
       rol r17
       out portB, r17
       rjmp RC_loop
```

```
Delay:
        ldi r24, low(INPUT)
        ldi r25, high(INPUT)
        wait_milliseconds:
                call ms_delay
                sbiw r25:r24,1
                cpi r25, high(0)
                breq reset
        rjmp wait_milliseconds
reset:
RET
ms_delay:
       ; Generated by delay loop calculator
        ; at http://www.bretmulvey.com/avrdelay.html
        ; Delay 1 000 cycles
        ; 1ms at 1 MHz
        ldi r18, 2
        ldi r19, 75
L1: dec r19
        brne L1
        dec r18
brne L1
        rjmp PC+1
RET
```

This is the flowchart of the task 1: