






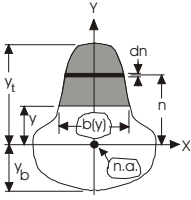
Section	Description	Effective Shear Area
	Rectangular Section Shear Forces parallel to the b or d directions	$\frac{5}{6} bd$
	Wide Flange Section Shear Forces parallel to flange	$\frac{5}{3} t_f b_f$
	Wide Flange Section Shear Forces parallel to web	$t_w d$
	Thin Walled Circular Tube Section Shear Forces from any direction	$\pi r t$
	Solid Circular Section Shear Forces from any direction	$0.9 \pi r^2$
	Thin Walled Rectangular Tube Section Shear Forces parallel to d-direction	$2 t d$
	General Section Shear Forces parallel to Y-direction I_x = moment of inertia of section about X-X $Q(Y) = \int_y^{y_t} n b(n) dn$	$\frac{I_x^2}{\int_{y_b}^{y_t} \frac{Q^2(y)}{b(y)} dy}$

Figure 18
Shear Area Formulae