





PREPARING HOT STAMPING FORMAT IN ADOBE ILLUSTRATOR

1. Select your hot stamping image.


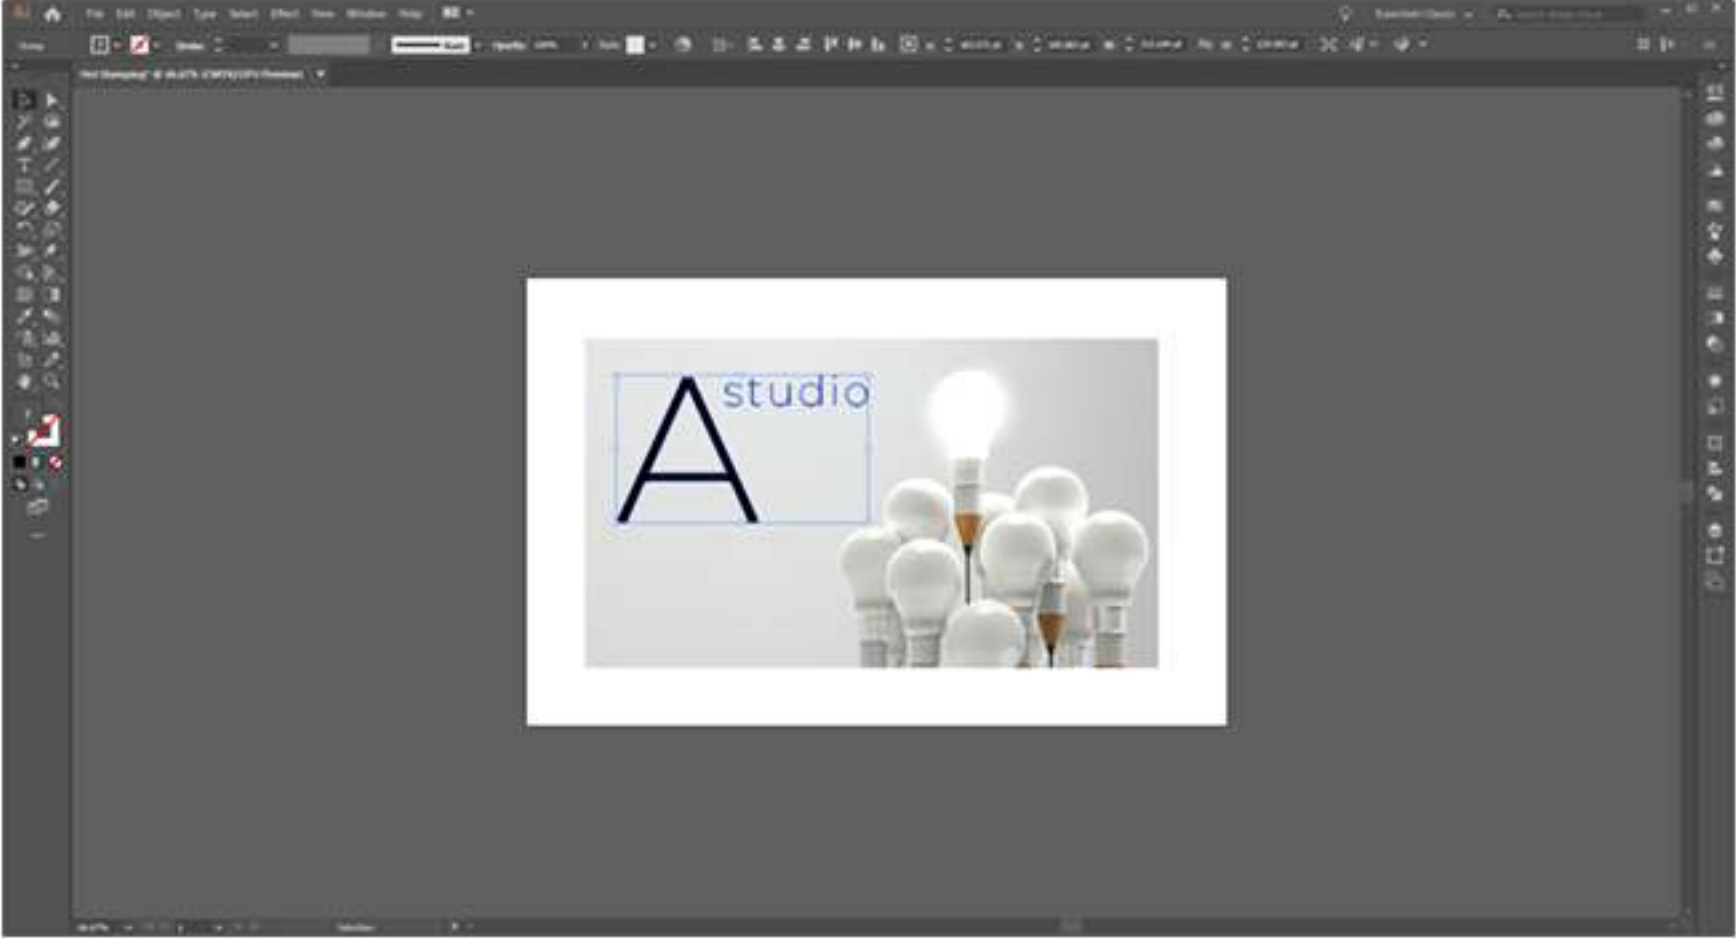


2. Select “Window” > “Swatch Library” > “Color Book”


Select “PANTONE metallic coated” for

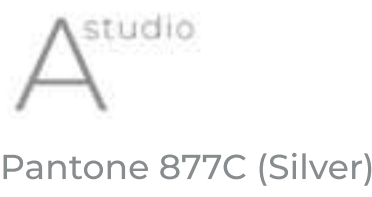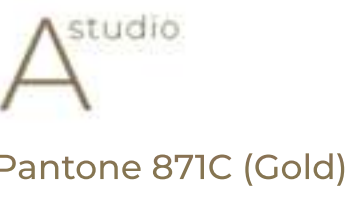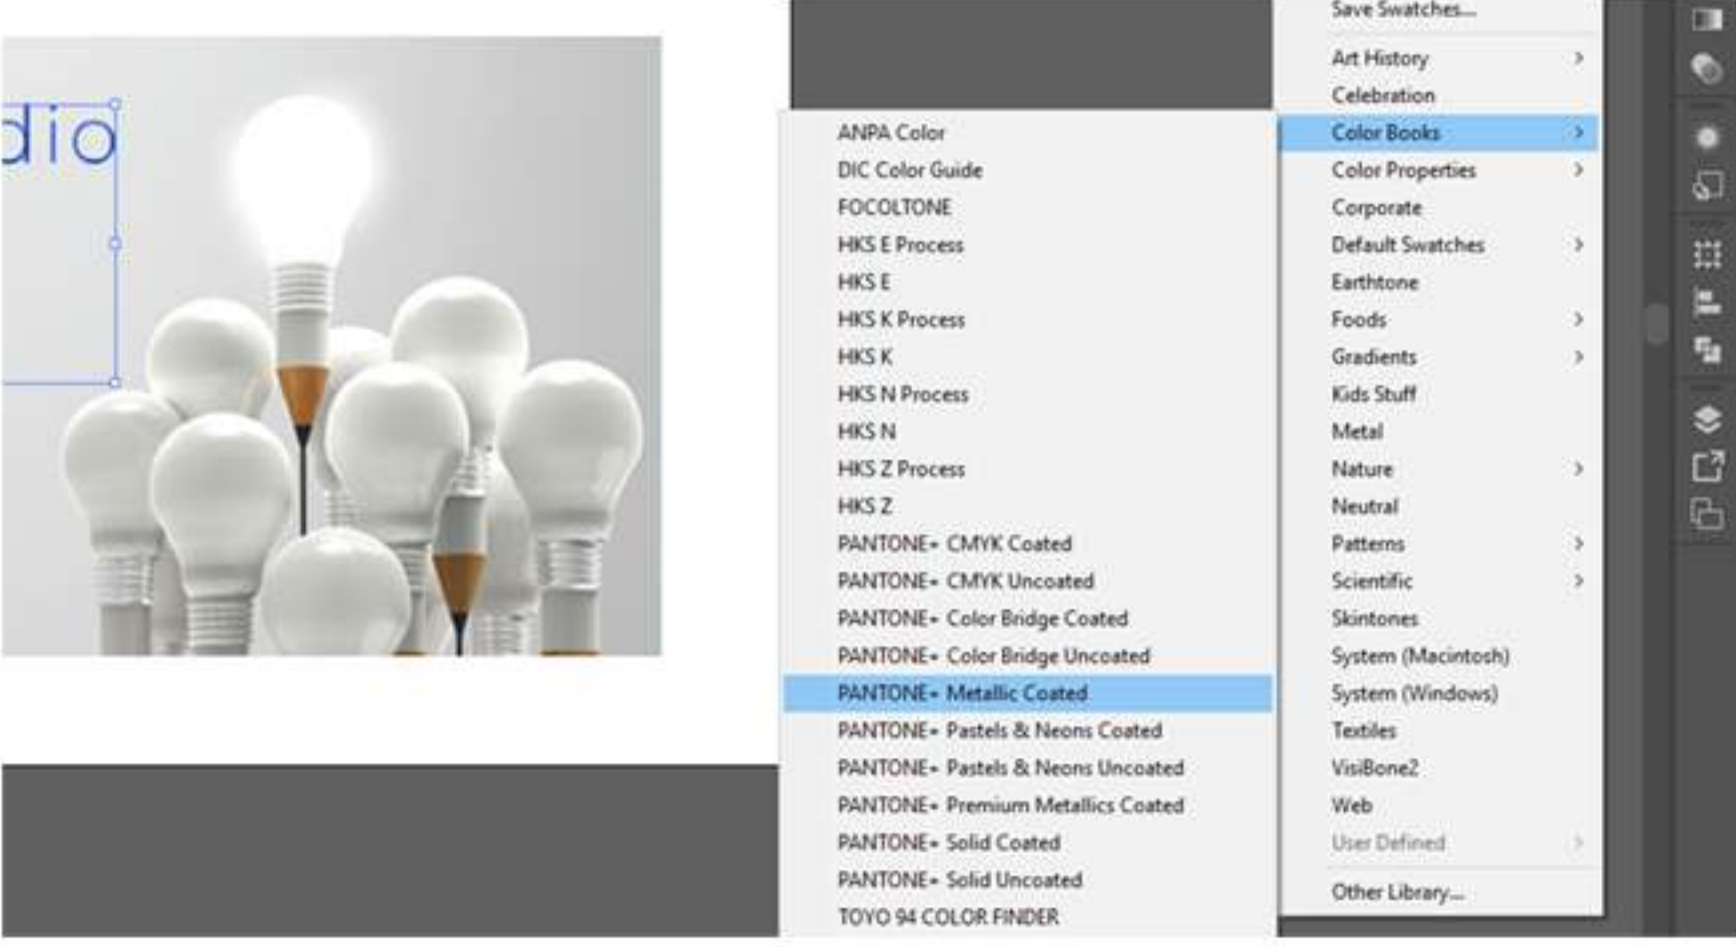

Select “PANTONE solid coated” for

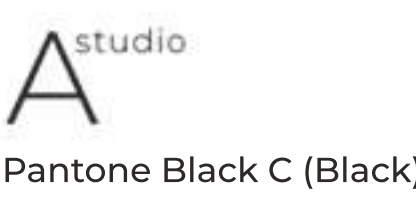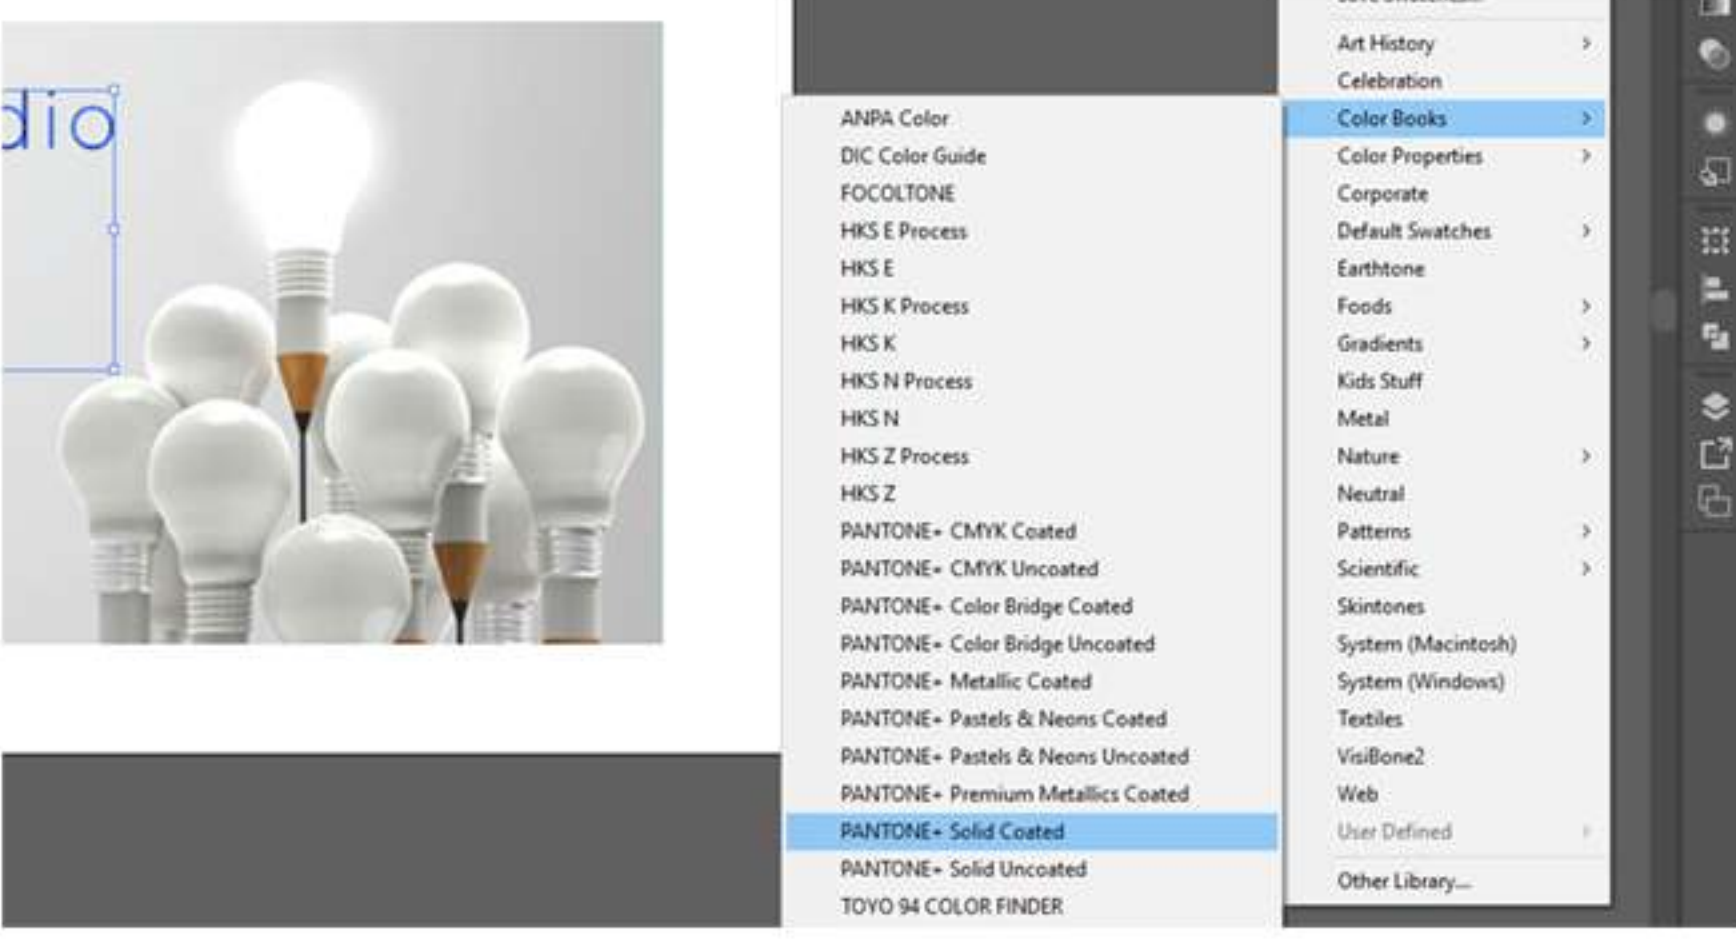

3. Select “Show Find Field”

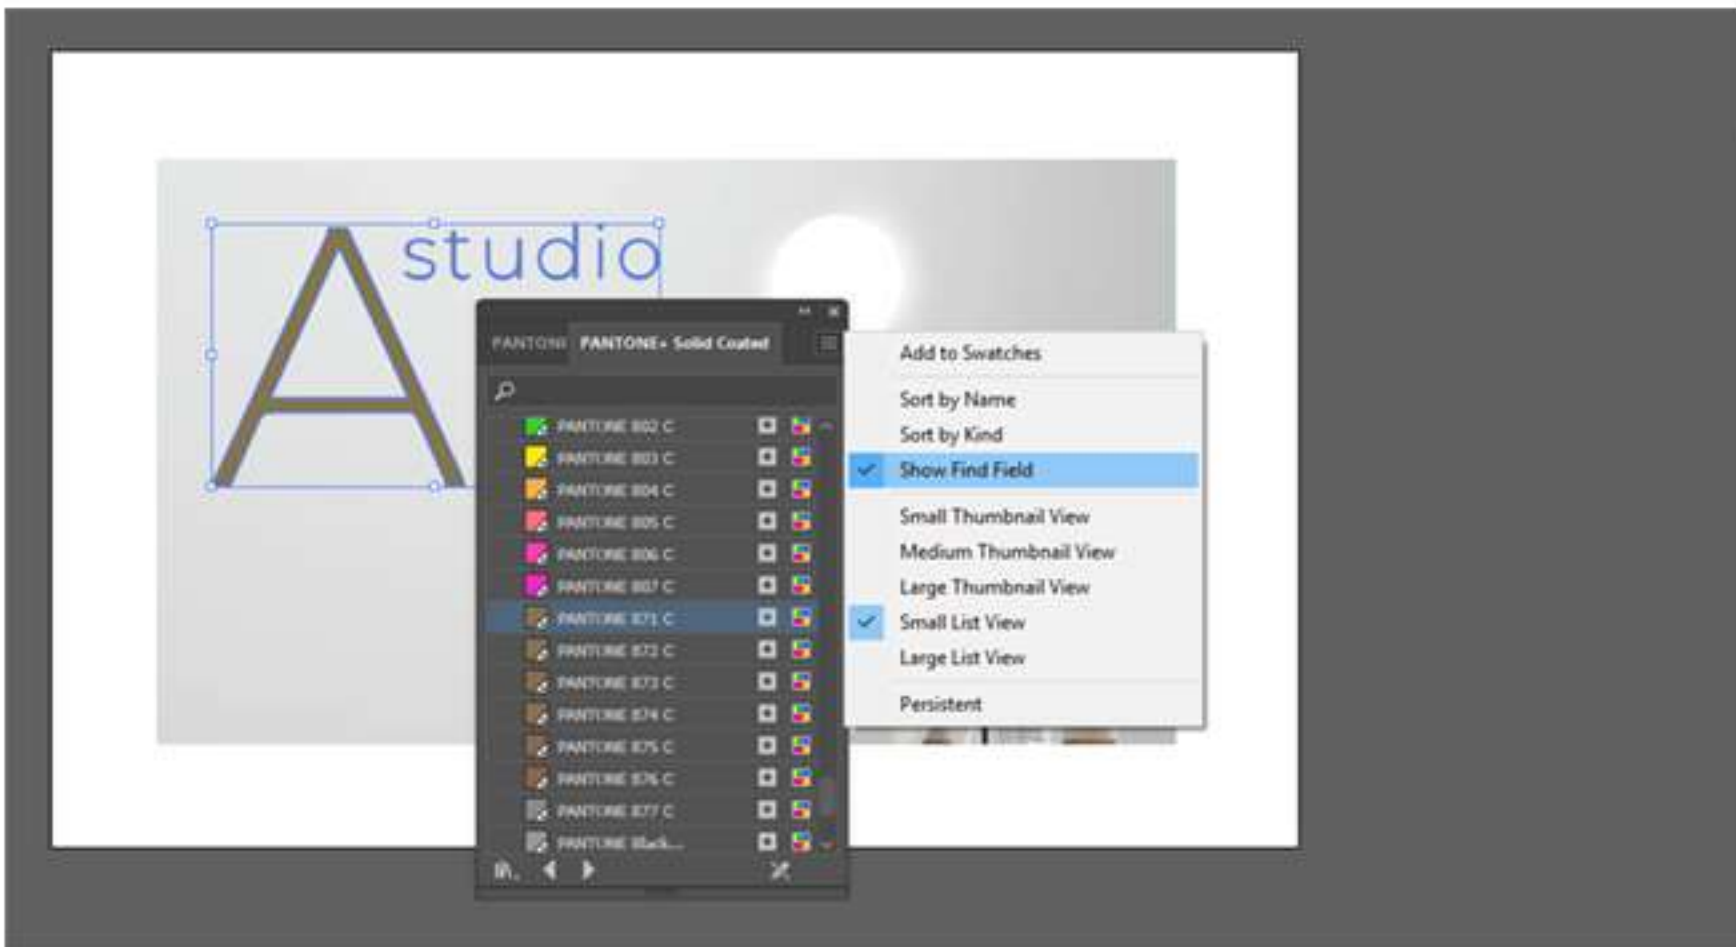

4. Enter your hot stamping code and select the highlighted code.

