

**Scan me!**

Free lifetime after-sale service  
Email: Service@nicetree.com

**Shoe Storage Cabinet**

# Trouble shooting:

Missing/Wrong/Broken parts and installation issues



Send email with your question, pic and order No. to  
**Service@nicetree.co**



Respond within 24hours



Issue resolved

## Product parameter

**Product Size:** 31.50\*9.45\*41.93 in

**Net Weight:** 42.18 lbs

**Package Size:** 38.98\*18.3\*7.48 in

**Gross Weight:** 47.78 lbs

## General Guidelines

Please read the following instructions carefully and use the product accordingly.

Please keep this manual and hand it over when you transfer the product.

This summary may not include every detail of all variations and considered steps.

Please contact us when further information and help are needed.

# **WARNING**



1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. The use of tip-over restraints may reduce but not eliminate the risk of tip-over.
4. Do not set heavy objects on top of this product.
5. Never place toys, food, remote, etc. on top of this product.
6. Never allow children to climb or hang on shelves or doors.

## **Before You Start**

1. Open your item in the area you plan to keep it to avoid excessive heavy lifting.
2. Identify, sort and count the parts before attempting assembly.
3. Please fix all the screws provided to enhance product stability.
4. If using a power drill or power screwdriver for screwing, please slow down and stop when the screw is tight. Otherwise, it may lead to stripped screws.













## **Product Care and Maintenance**

1. Wipe clean with a soft or slightly damp cloth, never use chemicals or cleaning products they will damage the product.
2. Avoid placing your furniture in direct sunlight, as sunlight causes fading.
3. Never push, drag or pull the shoe cabinet, to move to a new location carefully with two or more people carry the unit to its new location.
4. Avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents, and






## **Warranty & Customer Support**

1. We provide 12 months warranty.
2. If you need any assistance or have any questions, please contact our store and we will reply within 24 hours. Please leave your order number and details of your question, so we can help you solve the issue as soon as possible.





## Parts List

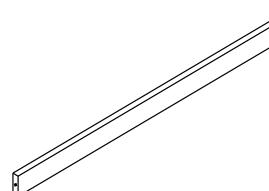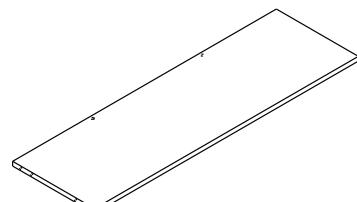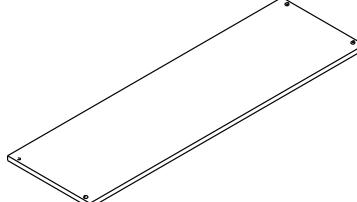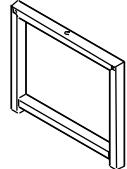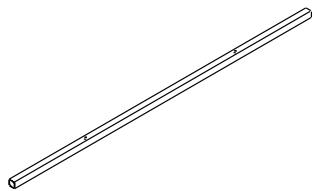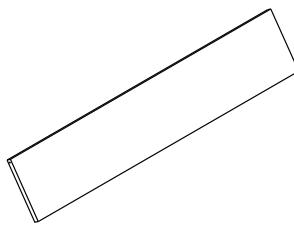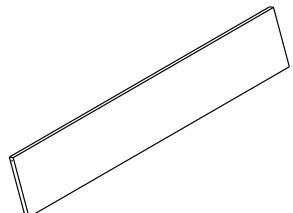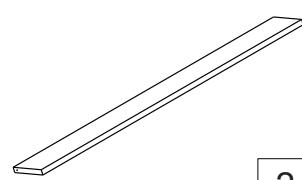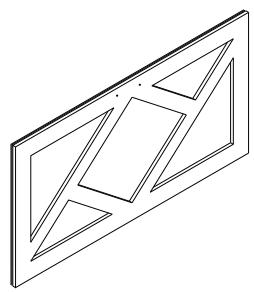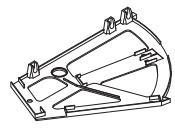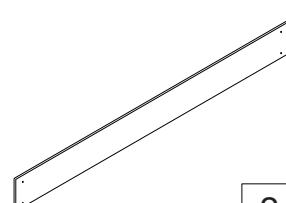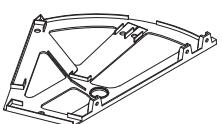		
		
1 PC	1 PC	1 PC
		
2 PCS	2 PCS	2 PCS
		
2 PCS	2 PCS	2 PCS
		
2 PCS		2 PCS

## Parts List

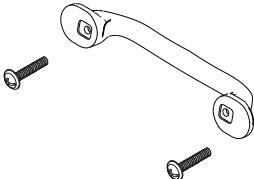		
	6 PCS	4 PCS
		
	6 PCS	10 PCS
		20 PCS
		
	12 PCS	2 PCS
		2 PCS
		
	4 PCS	1 PC
		2 PCS


## Parts List

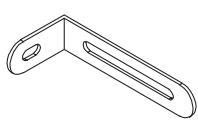		
13	14	15
2 PCS	2 PCS	1 PC
		
16	17	18
4 PCS	4 PCS	4 PCS

\*Optional hook included (mount on side using Phillips screwdriver).


### Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

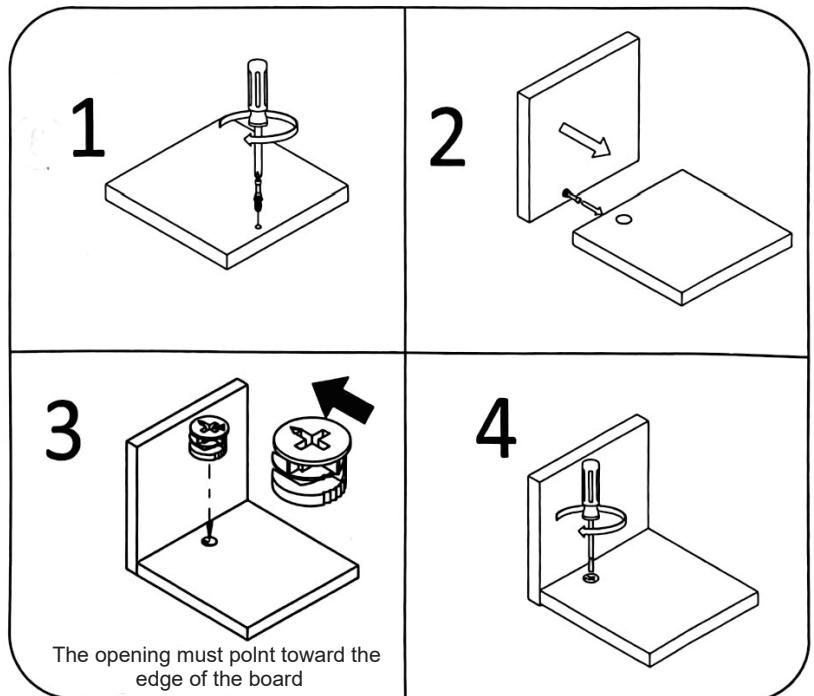


## Let's get started


### Step 1

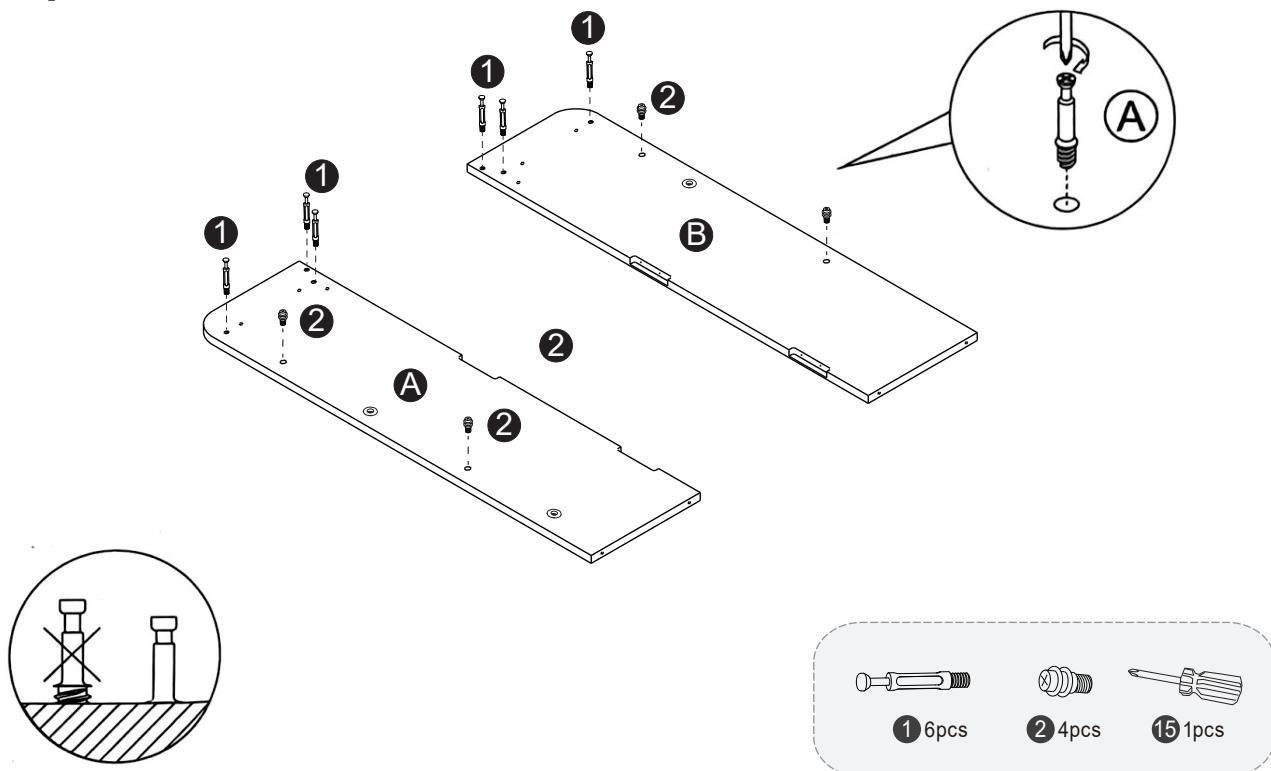


### Step 2

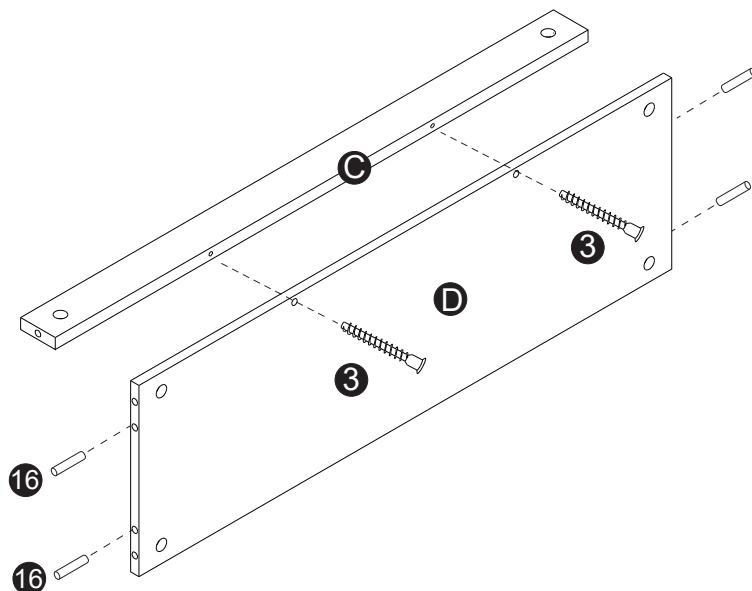


Please tighten the bolts to 80% first,  
and tighten all bolts 100% after all  
parts are assembled.

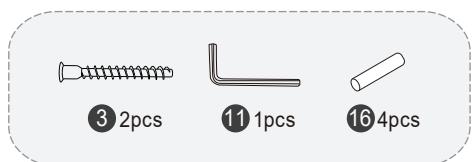



## Step 3

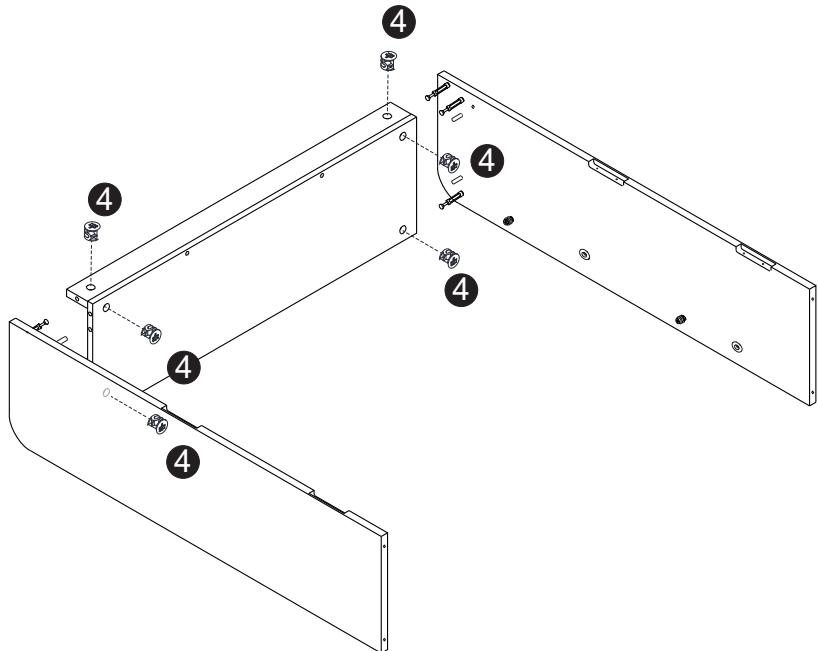



Proper orientation of CAM LOCK

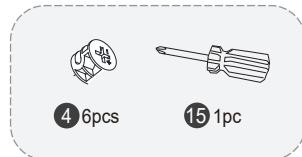



## Step 4

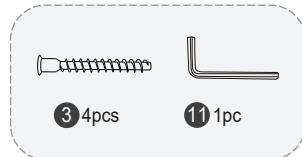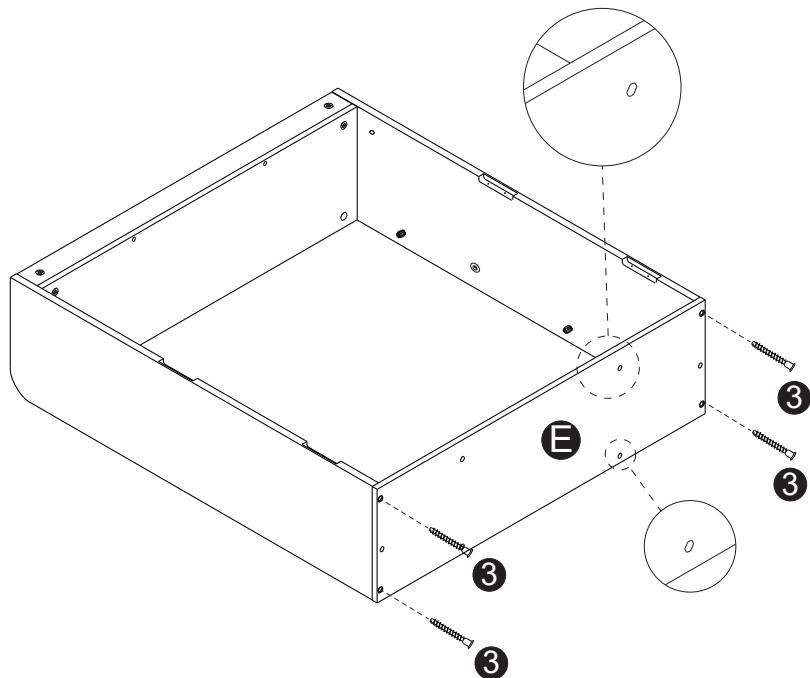


## Step 5

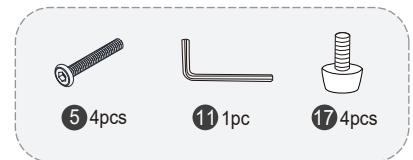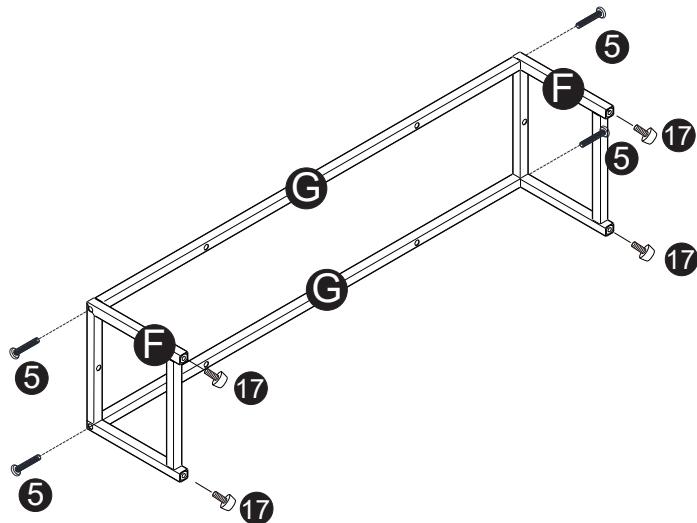



## Step 6

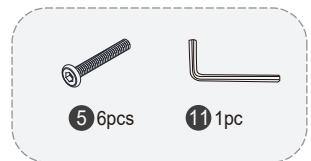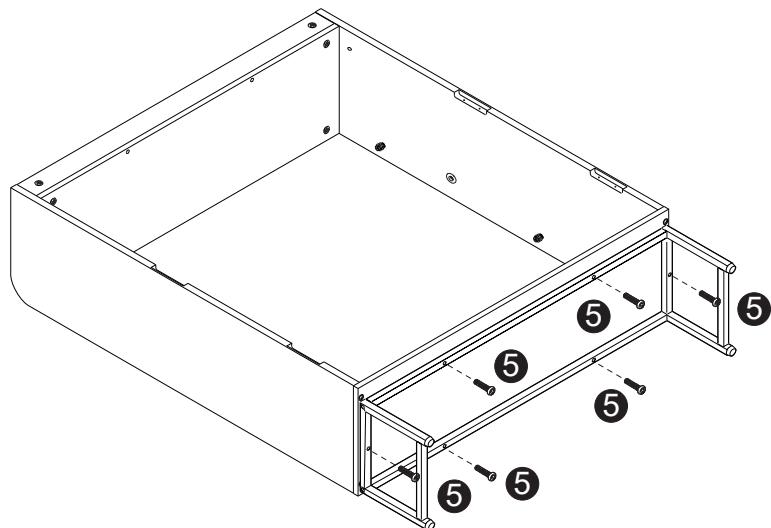



## Step 7

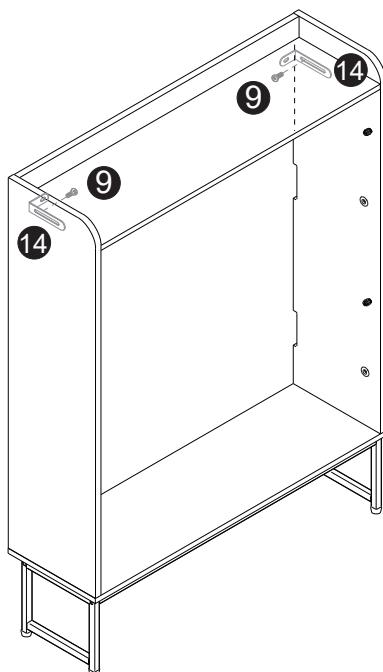



## Step 8

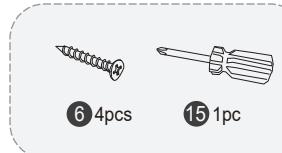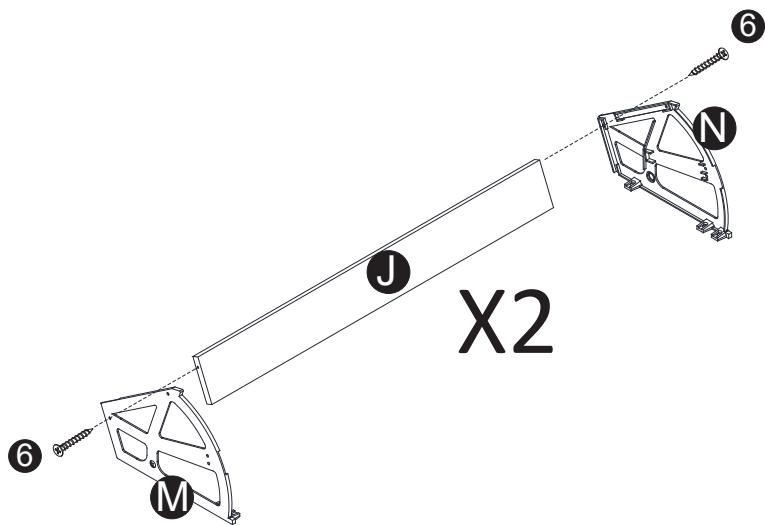


## Step 9

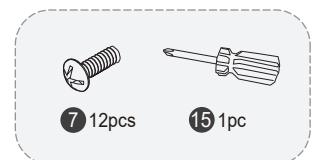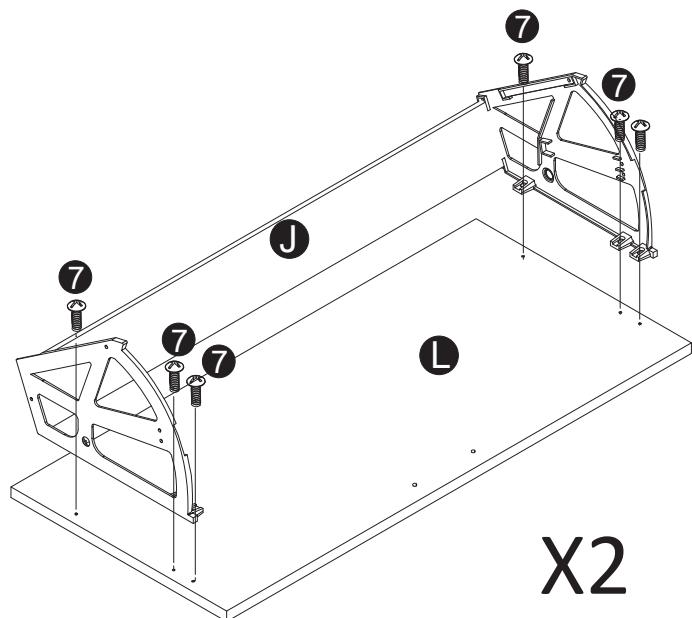

## Step 10

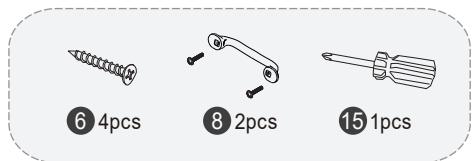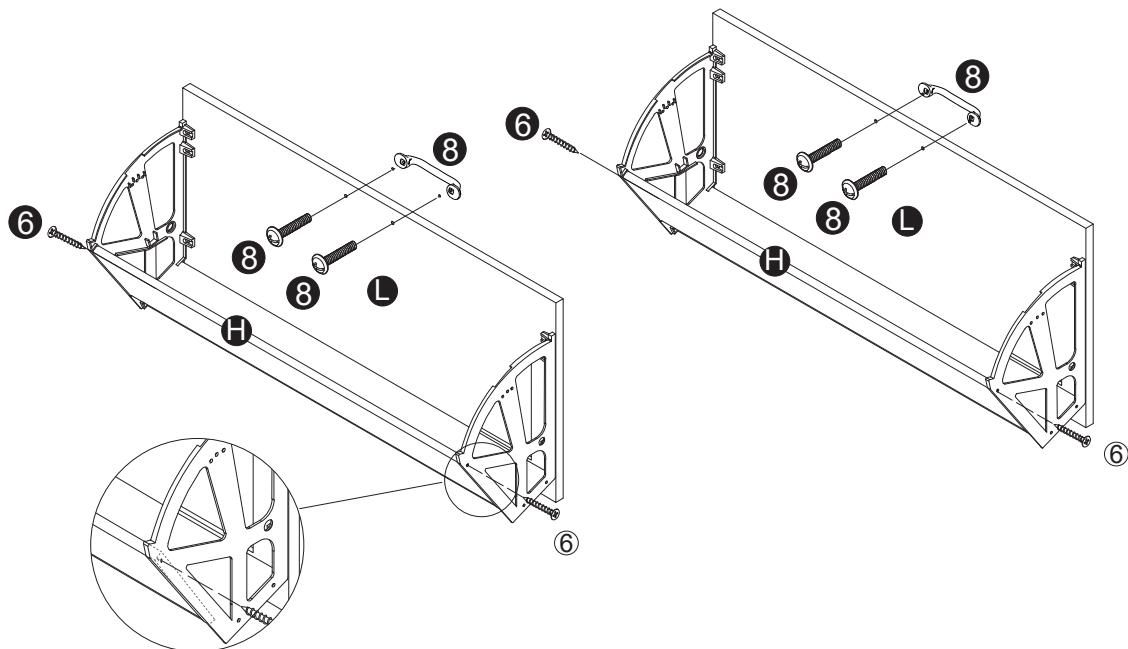


## Step 11

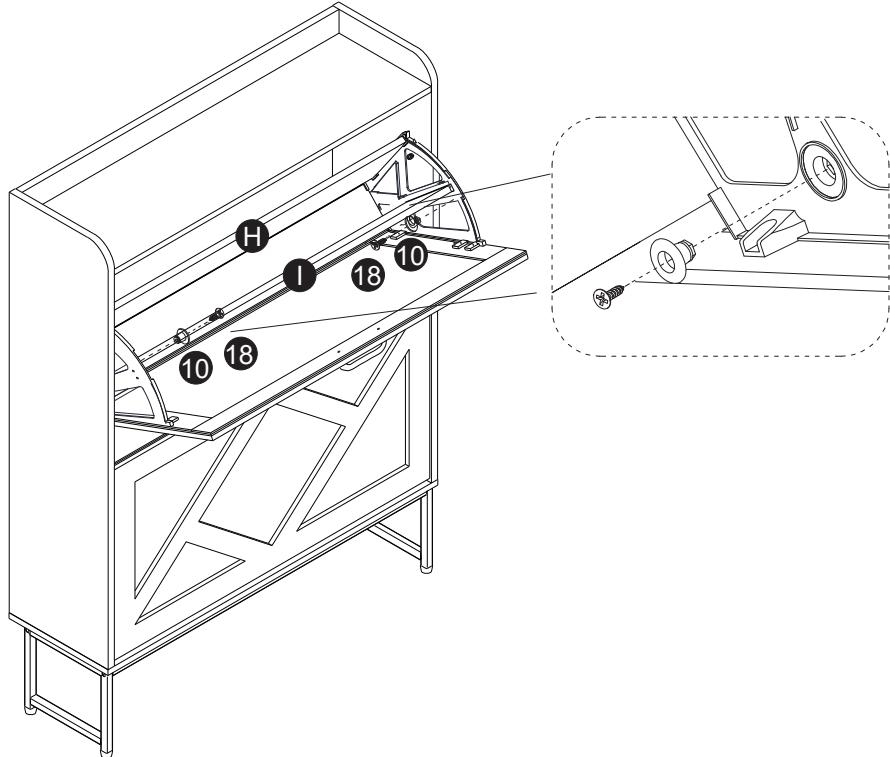

Note: You can lay the cabinet on the floor  
for easy assembly.



18 4pcs      10 4pc      15 1pc

## Step 12

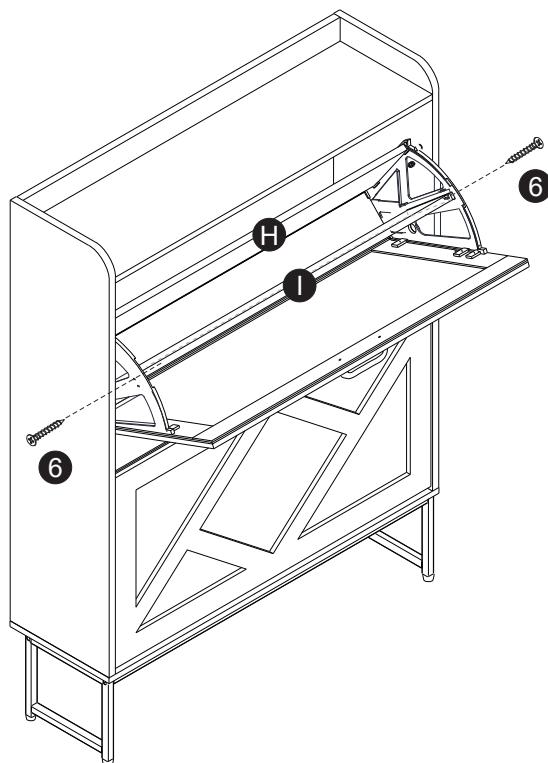


6 4pcs      15 1pc

## Step 13

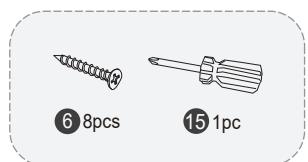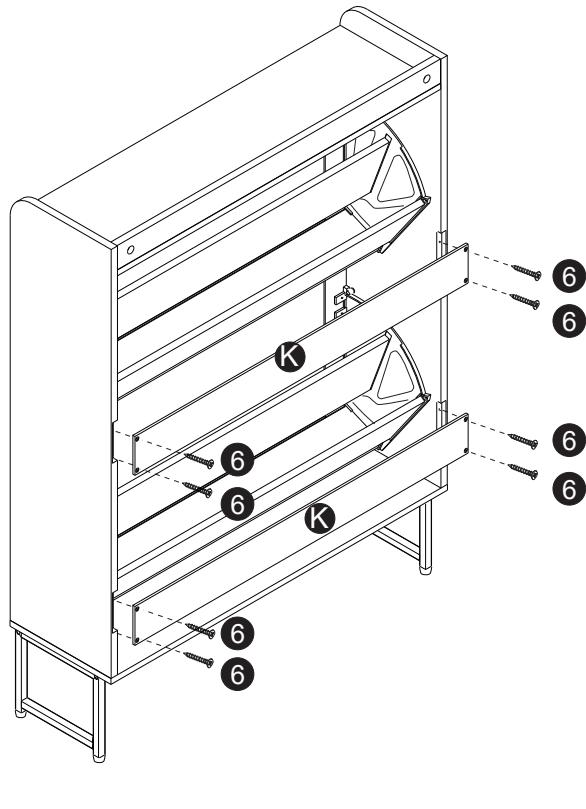


## Step 14

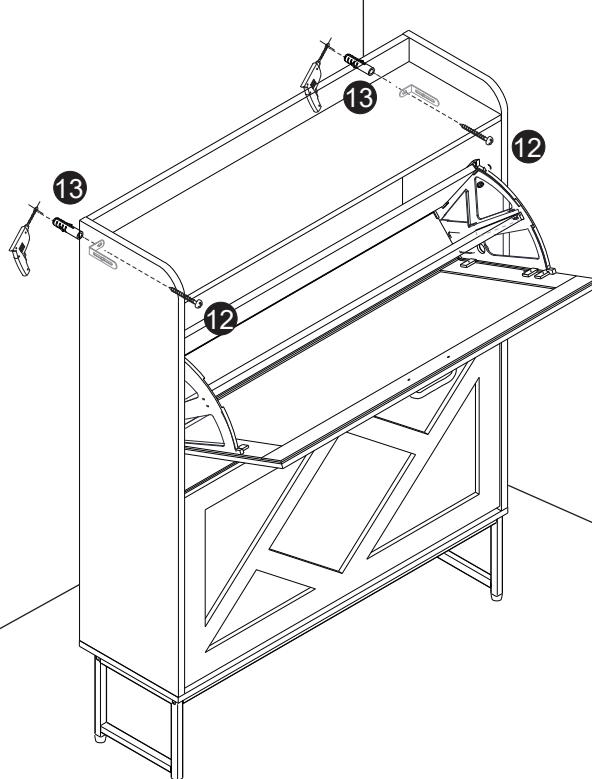

The shoe cabinet must be fixed to the wall to prevent tipping over

1. Mark the drill position on the wall.
2. Drill holes on the marked position.
3. Insert screw ⑬, then fix the cabinet with screws ⑫

# Finished

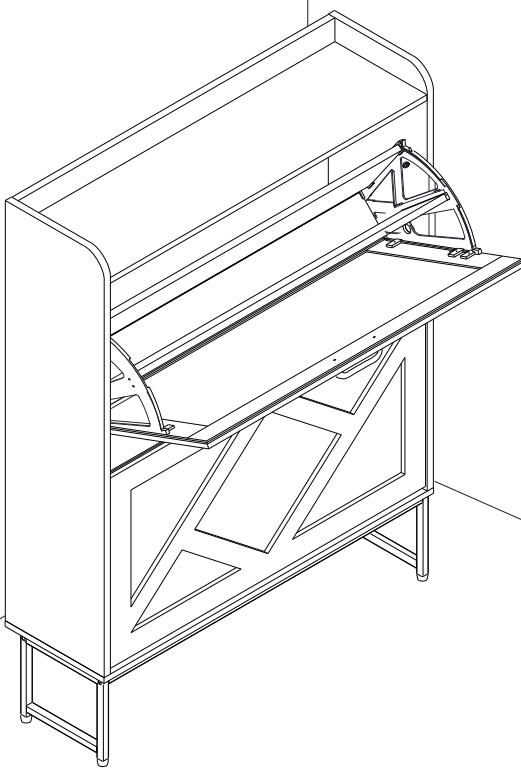

Made in China