

$\overline{\text{FOR NEXT}}$ REVISION/USE: $\overline{\text{VRESET}}$ and $\overline{\text{HRESET}}$ signals need 2k2 / 2k7 pullups. $\overline{\text{VRESET}}$ pin 9 on J8 HRESET pin 8 on J8

V9990 on the back of the PCB!

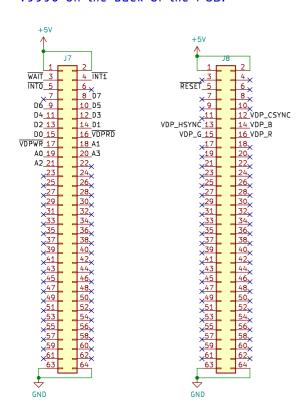

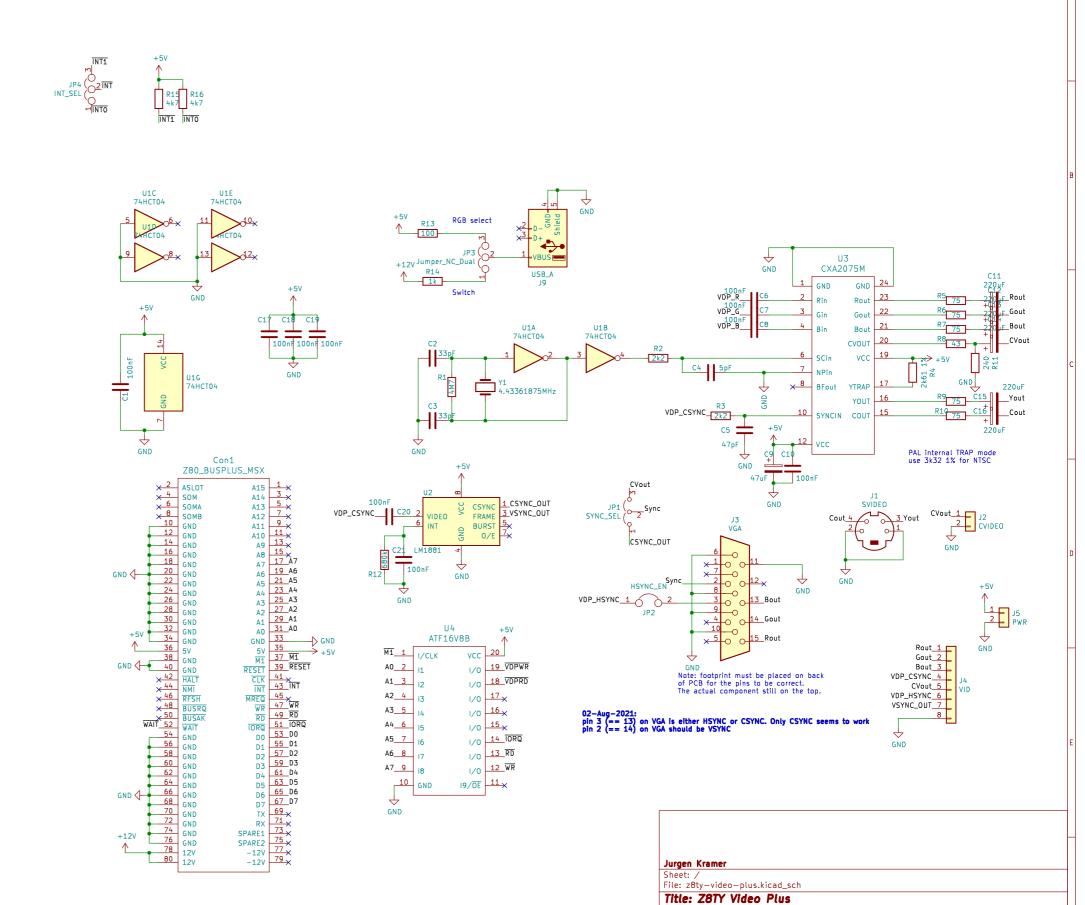

Size: A3 Date: 2021-07-02 KiCad E.D.A. kicad 6.0.7-1.fc36