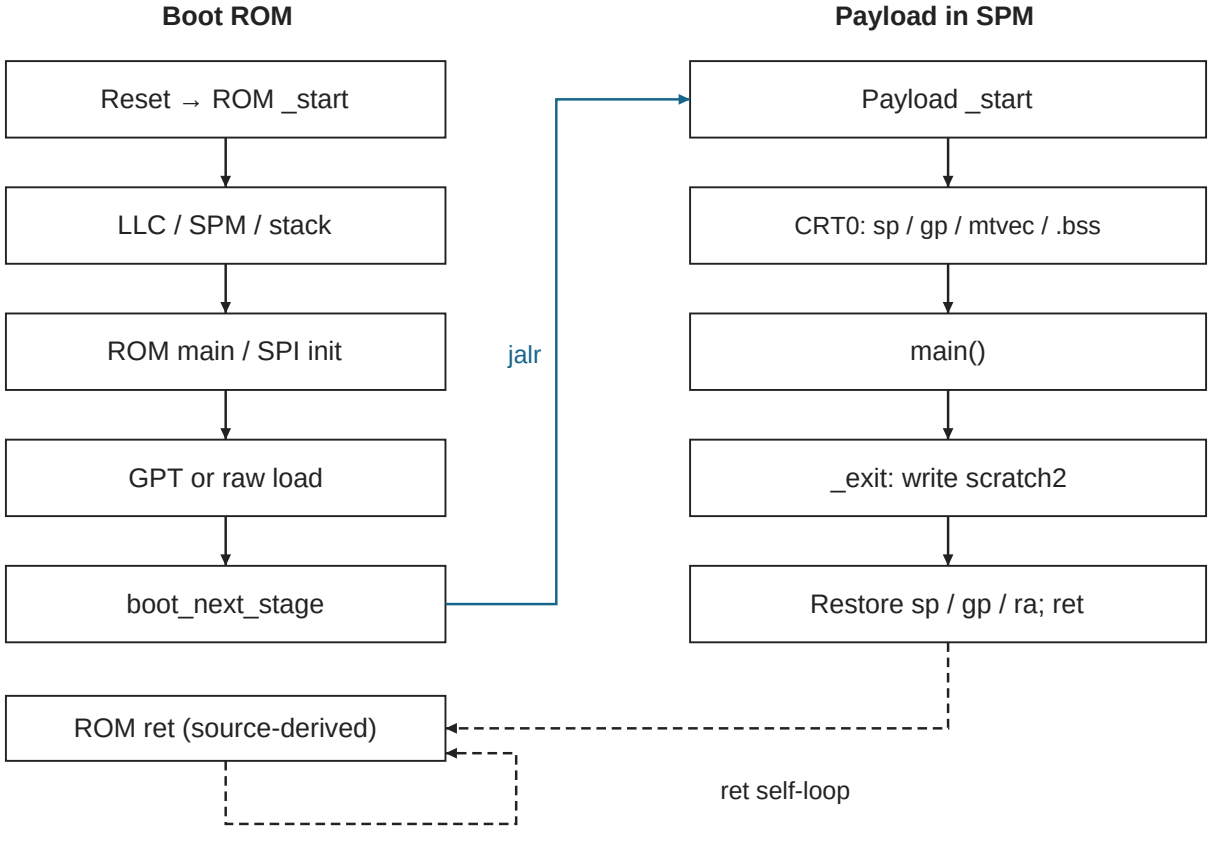
Boot ROM
Payload in SPM
Reset → ROM _start
LLC / SPM / stack
ROM main / SPI init
GPT or raw load
boot_next_stage
jalr
Payload _start
CRT0: sp / gp / mtvec / .bss
main()
_exit: write scratch2
Restore sp / gp / ra; ret
ROM ret (source-derived)
ret self-loop