RONE PLUGINS

USER MANUAL

MOVE ANY KNOB WITH YOUR HAND.

RONE Control

Open the plugin and it shows a code. Your phone - or, on Windows, the computer's own camera - becomes the eye: pinch, lift, twist, and the knob you linked moves in your DAW, recorded as automation like any controller. No app to install, no MIDI keyboard, nothing to map by hand.



VERSION 1.0.0 · VST3 · AU

RONEAUDIO.COM

Contents

1	Welcome to RONE Control	your hand is the controller
2	Installation with the RONE Plugins Center	Center, account, file locations
3	Quick start	your first linked knob
4	Interface tour	every element on screen
5	Controls reference	what every control does
6	Linking to your DAW	LINK in FL, Live, REAPER and Bitwig - the MIDI port everywhere else
7	Step-by-step workflows	recipes
8	Tips, tricks and troubleshooting	

1 Welcome to RONE Control

RONE Control is a controller plug-in: audio passes through it untouched, and its eight **slots** are knobs your DAW can link to anything. Each slot is driven by one move of your hand - lift it, slide it, turn it, open and close your fingers - seen by your phone's camera over Wi-Fi, or by the computer's camera on Windows. Link a slot to a filter cutoff, a send, a fader, and the knob follows your hand while you play. Press record and your DAW writes it as ordinary automation.

The plug-in is the whole program. There is no app to install on the phone (its browser does the work, and it stays paired after one scan), no driver to set up, and in FL Studio, Ableton Live, REAPER and Bitwig Studio no MIDI learn either: **touch a knob, press LINK**.

Where it shines

- **Filter rides and build-ups** - a hand that rises over eight bars is the most natural automation curve there is.
- **Performing in the studio** - two hands, four knobs, one take.
- **Anything you would otherwise draw** - sends, pans, dry/wet, a delay feedback that breathes.
- **Every other RONE plugin** - one pairing feeds them all.

The 10-second version

1. Insert RONE Control on any track and open it.
2. Scan the code with your phone, tap START, allow the camera.
3. Touch a knob in your DAW, press LINK on slot A.
4. Pinch in front of the camera and lift your hand.

> **NOTHING LEAVES YOUR ROOM**
> The phone sends your hand's 21 points straight to this computer over your Wi-Fi, never through a server. The computer's camera runs the hand model inside the plug-in, offline. No picture is stored anywhere.

2 Installation with the RONE Plugins Center

Every RONE product is installed, updated and licensed through one application: the **RONE Plugins Center**. You never download individual installers by hand, and you never enter serial numbers into the plugin itself.

RONE Plugins Center. 1 Navigation · 2 Your account and licence · 3 Sync status · 4 Search · 5 Refresh · 6 Settings · 7 Updates summary · 8 UPDATE ALL · 9 Filters · 10 Sort · 11 A plugin card · 12 Card menu (Details, Open, Manual) · 13 OPEN the standalone app · 14 INSTALL · 15 Your plan

Step by step

1. Download the Center from roneaudio.com and run the installer (Windows: `RONE_Plugins_Center_Installer.exe`, macOS: `RONE_Plugins_Center.dmg`). On Windows the installer also adds the Microsoft WebView2 runtime if your PC does not have it yet; it is required for the plugin interfaces. On macOS (10.15 Catalina or later, Intel and Apple Silicon) the first launch may be blocked because the installer is not yet Apple-notarized: open **System Settings** → **Privacy & Security**, scroll to the message about the blocked app and press **Open Anyway**, then confirm. If macOS calls the file *damaged*, run `xattr -cr "/Applications/RONE Plugins Center.app"` in Terminal once.
2. Open the Center and sign in with your **roneaudio.com account** (the same e-mail and password you used on the website). Your licences and device slots are checked automatically: an active **ALL ACCESS** plan unlocks every plugin, and a **lifetime licence** unlocks the plugin it was bought for — so RONE Control opens either way.
3. Find **RONE Control** in the list and press **INSTALL**. The Center downloads the signed installer, verifies its checksum, installs it silently and registers the version.
4. When the card shows **INSTALLED**, start (or restart) your DAW and rescan plugins if it does not pick up new plugins automatically. All RONE plugins appear next to each other in your plugin list because every name starts with **RONE**.
5. Updates appear on the same card. Press **UPDATE** on one plugin or **UPDATE ALL** at the top. Close the standalone version of a plugin before updating it.

Where the files go

WINDOWS

FILE	LOCATION
VST3	`C:\Program Files\Common Files\VST3\RONE\RONE Control.vst3`
This manual	`C:\Program Files\RONE Plugins\Manuals\`

MACOS

FILE	LOCATION
VST3	`/Library/Audio/Plug-Ins/VST3/RONE Control.vst3`
Audio Unit	`/Library/Audio/Plug-Ins/Components/RONE Control.component`
This manual	`/Users/Shared/RONE Plugins/Manuals/`

MANUAL INSIDE THE CENTER

Every installed plugin has a **Manual** entry in its card menu (the three dots on the card). It opens this PDF from the install folder, or from roneaudio.com if the local copy is missing.

Licence and activation


Licensing is tied to your account, not to a key. The plugin checks the licence file that the Center writes when you sign in. There are two ways to own it: an **ALL ACCESS** plan, which unlocks every RONE plugin for as long as it is active, or a **lifetime licence** for this plugin alone, which never expires. Either one opens RONE Control, and buying the lifetime licence later does not disturb a plan you already have.

If a plugin ever shows a *RONE Bundle License Required* screen, open the Center, make sure you are signed in and the plugin shows as licensed, then reopen it. Two devices can be signed in at the same time on either kind of licence; sign out on an old machine from the Center's Account page to free a slot. A lifetime licence keeps working offline for far longer than a plan does — there is nothing for it to expire against — but the Center still needs to reach the internet occasionally to confirm it.

Uninstalling

Windows: Settings → Apps → *RONE Control (RONE)*. macOS: delete the bundles listed above. Presets and settings in your user folder are kept.

3 Quick start

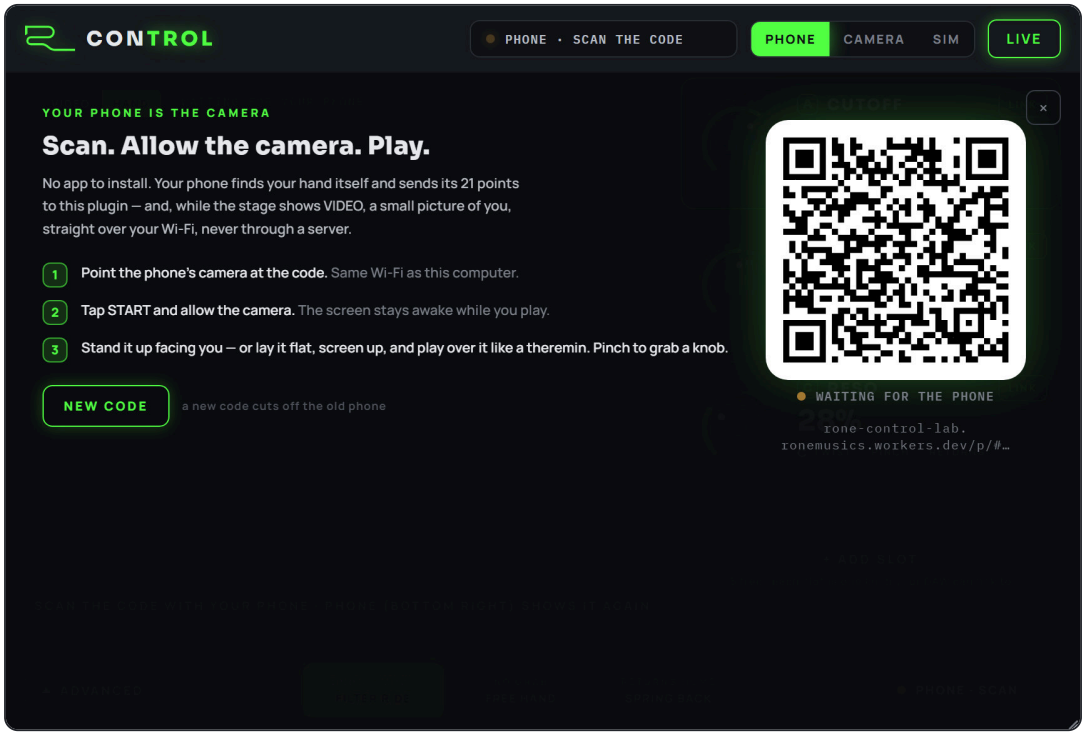

The first thing the plug-in shows: a code for your phone. Same Wi-Fi as the computer; NEW CODE cuts off the old phone.

1. **Insert** RONE Control on any track - a dedicated utility track is tidiest - and open its window.
2. **Scan the code** with your phone's camera. The page that opens asks for the camera: tap START and allow it. Stand the phone up facing you, or lay it flat, screen up, and play over it like a theremin. The screen stays awake while you play.
3. **Your hand appears on the stage** and the status reads PHONE with the frame rate. From now on the phone stays paired: the next time you open any RONE Control it finds it by itself.
4. **Link slot A to a knob.** In FL Studio, Ableton Live, REAPER or Bitwig Studio: touch the knob you want to move, then press LINK on the card. The card shows what it holds. In any other DAW, LINK opens the step-by-step for the MIDI port (see *Linking to your DAW*).
5. **Pinch and lift.** Slot A is CUTOFF in the FILTER RIDE preset: pinch your thumb and index finger to grab, move your hand up and down to turn, open them to let go - the knob stays where you left it.
6. **Record.** Arm the track and record as you would with any hardware controller: the DAW writes the linked knob's own automation.

> **NO PHONE AT HAND?**
> On Windows, choose **CAMERA** at the top and the computer's own webcam is the eye - the hand model runs inside the plug-in, offline. **SIM** makes the mouse a hand (hold = pinch, right button = fist, wheel = twist) so you can try every setting without a camera at all.

4 Interface tour



A right hand holding slot A (CUTOFF): the glove turns green while it grabs, the card reads HELD.

1. **Header logo** — click to flip to the back panel (About, version, licence)
2. **Status** — where the hands come from and how fast they arrive - PHONE · 30 FPS, CAMERA · 30 FPS, or what is missing
3. **PHONE / CAMERA / SIM** — the eye: your phone, the computer's camera (Windows), or the mouse as a hand
4. **LIVE** — off = every slot holds its value and the hands are ignored
5. **The stage** — your hand as a glove - grey when free, green while it holds a knob; VIDEO / HAND shows the picture under it or the hand alone
6. **Slots** — one card per slot: the knob, its name, the value, the move and how it is held, LINK; + ADD SLOT makes another (8 at most)
7. **ADVANCED** — opens the selected slot's editor below the stage
8. **Presets** — FILTER RIDE, FREE HAND, SPRING BACK - three ways of moving
9. **PHONE** — shows the code again, or says the phone is in
10. **Resize grip** — drag to resize the window



ADVANCED: the slot editor, with a demo hand that plays this slot's own settings.

1. **Slot name** — what the DAW sees ('A CUTOFF'); the card and the phone show it too
2. **UNDO MOVE** — puts the knob back where it was before the last grab
3. **LINK** — links this slot to the knob you touched in your DAW
4. **REMOVE** — takes the slot out of the rack (its parameter stays, at its value)
5. **The demo** — an animated hand playing the slot: grey = free, green = holding; the steps PINCH › MOVE › LET GO light up as it goes
6. **MOVE** — which move of the hand is the value: up/down, left/right, near/far, twist, pinch, grip, two hands
7. **HOLD THE KNOB WITH** — PINCH, FIST, or ALWAYS (no grab needed)
8. **WHEN YOU LET GO** — IT STAYS where you left it, or IT RETURNS home
9. **In one sentence** — what this slot does, in words - hover any option to preview it in the demo
10. **FINE TUNE** — HAND, MODE, CURVE and the fine knobs



FINE TUNE: which hand, how the knob takes over, the curve, and the fine knobs.

1. **HAND** — LEFT, RIGHT or EITHER
2. **MODE** — GRAB: the knob moves from where it is as your hand moves. FOLLOW: it jumps to where your hand is
3. **CURVE** — how the hand's travel maps onto the knob: LIN, SOFT, EXP, S
4. **The fine knobs** — SMOOTH, REACH (how far the hand travels for the full range), RANGE LOW and HIGH, HOME, and the slot's MIDI CC

5 Controls reference

The eye

PHONE
`the default`

The plug-in shows a code; the phone's browser opens a page that tracks your hand and sends its 21 points to this computer over your Wi-Fi - straight to the computer, never through a server. One scan pairs it: the pairing is kept on this computer, and every RONE Control (and every other RONE plug-in with hands) uses it. NEW CODE makes a fresh pairing and cuts off the old phone.

Tip: Same Wi-Fi as the computer. If the two cannot see each other directly (a guest network, an isolated Wi-Fi) the hands are relayed through our server with a little more delay - the status says RELAY. The picture never is.

CAMERA
`Windows only`

The computer's own webcam. The hand model (Google's MediaPipe, carried inside the plug-in) runs right here, offline. Pick the camera in the list, see yourself on the stage with VIDEO, aim it so your whole hand is in view 50-80 cm away, in good light.

Tip: A virtual camera with no app behind it (Camo, OBS, NVIDIA Broadcast...) sends a frozen picture and reads NO PICTURE - choose the real camera. On a Mac a plug-in cannot own the camera: use the phone.

SIM

The mouse is the hand: move it over the stage, hold the left button to pinch, the right button to make a fist, the wheel to twist (Shift + wheel: near / far). Try every setting without a camera.

VIDEO / HAND
`per computer`


On the stage: your picture under the hand, or the hand alone. The picture flows only while a window shows VIDEO.

LIVE
`on / off`
`automatable`

Off: the slots hold their values and the hands are ignored - a safe switch for playback. The LIVE parameter can be automated, so a section of the song can take the hands away.

Tip: An offline render (export) always plays what is written: a hand in front of the camera never changes a bounce.

A slot

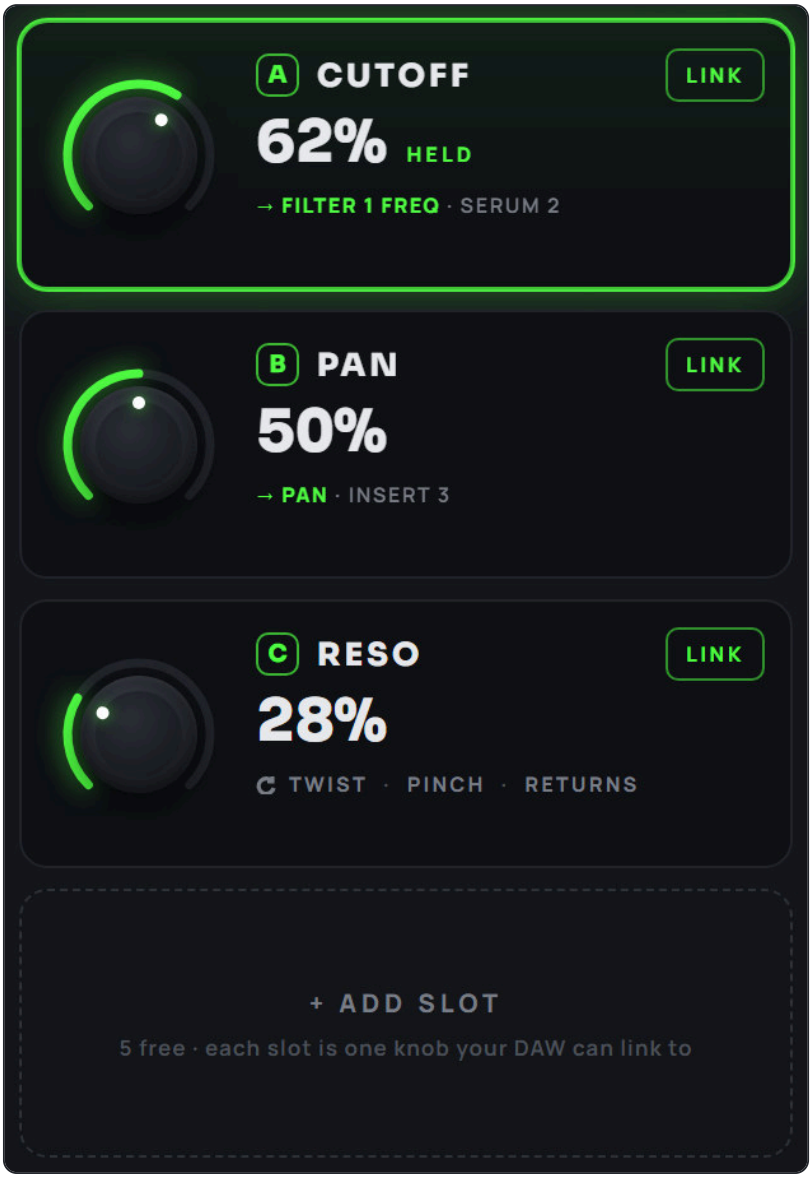

The cards. The knob and its value, HELD while your hand has it, what the slot holds in the DAW (or the move and how it is held), LINK; + ADD SLOT for the next one.

MOVE

`UP / DOWN · LEFT / RIGHT · NEAR / FAR · TWIST · PINCH · GRIP · 2 HANDS`

Which move of the hand is the value. **UP / DOWN**, **LEFT / RIGHT** and **NEAR / FAR** are the hand's position in the picture; **TWIST** turns the hand like a knob; **PINCH** is the gap between thumb and finger; **GRIP** is how closed the hand is (open = bottom, fist = top); **2 HANDS** is the distance between both hands.

HOLD THE KNOB WITH

`PINCH / FIST / ALWAYS`
`default PINCH`

What grabs the knob. **PINCH**: thumb and index together. **FIST**: a closed hand. **ALWAYS**: no grab - the knob follows the hand whenever it is in view (the FREE HAND preset). PINCH and GRIP moves need no hold: the fingers are the value.

WHEN YOU LET GO

`IT STAYS / IT RETURNS`
`default IT STAYS`

IT STAYS leaves the knob where you released it. **IT RETURNS** glides it back to HOME - a filter that falls back shut, a send that fades out by itself (the SPRING BACK preset).

HAND

`LEFT / RIGHT / EITHER`

Which hand drives this slot. With two hands in view, give the left one CUTOFF and the right one RESO.

MODE

`GRAB / FOLLOW`
`default GRAB`

GRAB is relative: the knob moves from where it is by as much as your hand moves - it never jumps, and REACH sets how far a full turn is. **FOLLOW** is absolute: the knob jumps to where the hand is.

CURVE

`LIN / SOFT / EXP / S`

How the hand's travel maps onto the knob: LIN is straight, SOFT and EXP give more precision at the bottom, S at both ends.

Fine knobs

`SMOOTH · REACH · RANGE LOW · RANGE HIGH · HOME · MIDI CC`

SMOOTH: steadies a shaky hand - TIGHT follows every tremor, SILK glides. **REACH**: how far the hand travels for the full range of the knob (SHORT, MID, LONG). **RANGE LOW / HIGH**: the part of the knob's range the hand covers. **HOME**: where IT RETURNS goes. **MIDI CC**: the control this slot plays on the RONE Control port - LINK sets it for you; change it only for a hand-made MIDI learn.

Presets


`FILTER RIDE / FREE HAND / SPRING BACK`

Three ways of moving, loaded into the slots. **FILTER RIDE**: pinch and move - height = CUTOFF, side = PAN, twist = RESO. **FREE HAND**: no grab, the knobs follow the hand. **SPRING BACK**: everything returns home when you let go. A preset keeps a linked slot's knob, so switching the way of moving never unlinks anything.

Right-click

Right-click a card for the host's own parameter menu - in FL Studio that is where you create an automation clip or link the slot by hand.

6 Linking to your DAW

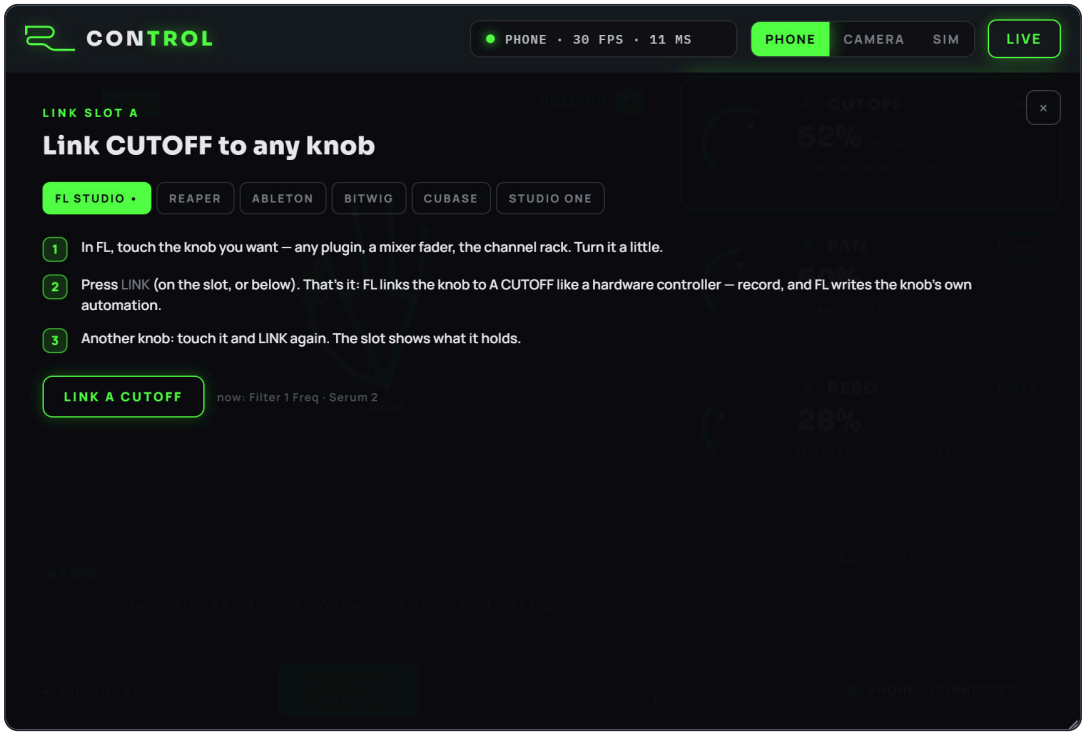

The LINK helper opens from a card: the steps for your DAW, and SEND for any other.

FL Studio

1. Install RONE Control with the Center and **start the Center before FL Studio** once. The Center keeps the *RONE Control* MIDI port open and puts the plug-in's controller script where FL finds it; FL attaches it the next time it starts.
2. In FL, **touch the knob** you want to move - a plug-in knob, a mixer fader, a channel's volume.
3. Press LINK on the slot. The card shows the knob's name (and its plug-in or mixer track). For a plug-in's knob FL may open its own link window: press *Accept* there (or turn on Options → MIDI settings → *Auto accept detected controller* once).
4. Record with the track armed: FL writes the linked knob's automation, as with any hardware controller. The link is saved in the project.

> **WHY THE CENTER FIRST**
> FL attaches a controller script only to a MIDI device it meets when it starts. The RONE Plugins Center starts with Windows and keeps the RONE Control port open from login, so FL always meets it. Without the Center, LINK still works on mixer faders, and a plug-in's knob links through FL's own window.

Ableton Live

1. Once: Settings → Link, Tempo & MIDI → a free *Control Surface* slot → **RONE_Control**, Input **RONE Control**. Restart Live once (Live finds a new control surface only when it starts).
2. Click the knob in Live (a device's knob, a mixer control). A knob turned inside a plug-in's own window counts too - the one that moved last.
3. Press LINK. Live moves the knob from the slot and records it as the knob's own automation; the link is kept in the Set.

Only parameters Live shows can be linked: for a big plug-in, add the knob with Live's *Configure* button first - Live's own rule for every controller.

REAPER

1. Touch the knob (any FX parameter on any track).
2. Press LINK. On RONE Control's own track the knob is linked through REAPER's parameter modulation - full resolution, no MIDI at all. On another track it is REAPER's MIDI learn on the slot's control; once, enable *RONE Control* under Preferences → MIDI Inputs with *Enable input for control messages* - the card says so when it is missing.

Bitwig Studio

1. Once: Settings → Controllers → Add Controller → RONE PLUGINS → **RONE Control** (the port is filled in).
2. Click the knob (Bitwig's *last clicked parameter*), press LINK. The link is saved with the project.

Every other DAW: the MIDI port

RONE Control is also a MIDI controller called **RONE Control**, which every DAW can learn from. Each slot plays one CC on it. The LINK helper walks you through it: press SEND and for 12 seconds only that slot sends its CC - at its current value, so nothing moves - then open your DAW's MIDI learn on the knob and it picks exactly this slot. On Windows the port needs the free loopMIDI driver (the helper offers it); on a Mac it is built in.

> **ONE LINK PER COMPUTER**
> Two DAWs open at once (or a DAW that runs plug-ins in separate processes) share the hands: the first RONE Control to start owns the camera or phone, the others take their hands from it and read THROUGH YOUR OTHER DAW. When the first closes, the next takes over by itself.

7 Step-by-step workflows

The filter ride

FILTER RIDE, one hand

1. FILTER RIDE. Link slot A (CUTOFF) to a filter's cutoff and slot C (RESO) to its resonance.
2. Pinch, lift slowly over the last eight bars, open your fingers on the drop: the cutoff stays open.
3. Pinch and twist the hand: resonance. Let go and RESO springs back - it is set to IT RETURNS.

Two hands, two knobs

HAND = LEFT / RIGHT

1. Give slot A HAND = LEFT and slot B HAND = RIGHT in FINE TUNE.
2. Link A to a reverb send and B to a delay feedback.
3. Both hands in view: each drives its own knob, independently.

A send that falls back by itself

SPRING BACK

1. SPRING BACK, or set WHEN YOU LET GO to IT RETURNS on one slot and its HOME to 0.
2. Link it to a send. Pinch and lift for the fill; open your fingers and the send glides back to silence.

Record it

any DAW

1. Arm the track and record as with a hardware controller: in FL, Live, REAPER and Bitwig the DAW writes the linked knob's own automation.
2. In other DAWs the automation lands on the MIDI-learned knob, as with any controller.
3. Or automate RONE Control's own slot parameters (A CUTOFF, B PAN...) and link afterwards - the slots are ordinary parameters.

8 Tips, tricks and troubleshooting

Tips

- **Light on your hand.** The hand model wants your whole hand in view, 50-80 cm from the camera, lit from the front. The stage shows MORE LIGHT and KEEP YOUR WHOLE HAND IN VIEW when it matters.
- **GRAB never jumps.** A grab starts from where the knob is - so a knob you moved with the mouse, or automation left somewhere, is picked up exactly there.
- **REACH is your resolution.** A long REACH means a small hand move for a small change; a short one gets the full range in a flick.
- **SMOOTH for a steady hand.** More smoothing steadies a shaky picture at the cost of a little delay.
- **UNDO MOVE** on the slot puts the knob back where it was before the last grab.
- **The phone screen stays awake** while it tracks. Lock it when you are done - the pairing is kept.

Troubleshooting

SYMPTOM	CAUSE	FIX
WAITING FOR THE PHONE	The phone is not on the same network, or the page was closed	Same Wi-Fi as the computer; open the code again from PHONE and tap START
PHONE · RELAY	No direct path between phone and computer (guest Wi-Fi, an isolated network)	The hands still work, with a little more delay; a shared Wi-Fi makes it direct
NO CAMERA / BLOCKED BY WINDOWS	Windows denies desktop apps the camera, or another app holds it	Settings → Privacy → Camera → let desktop apps use it; close the other app; TRY AGAIN
NO PICTURE	A virtual camera with nothing behind it (Camo, OBS...)	Choose the real camera in the list
The knob does not move	LIVE is off, the slot is not linked, or ARMED elsewhere	Turn LIVE on; press LINK; with several RONE plug-ins open, the one in front gets the hands
LINK says TOUCH A KNOB FIRST	Nothing was touched in the DAW since the last link	Move the knob you want, then press LINK
LINKED · NO NAME (FL)	FL met the RONE Control port after it started	Start the RONE Plugins Center before FL Studio once
LINK is not offered in my DAW	Only FL Studio, Live, REAPER and Bitwig have a direct link	SEND, then your DAW's MIDI learn on the knob
Only slot A works	LITE: without a licence slot A is free, the rest need RONE Control or ALL ACCESS	Sign in in the RONE Plugins Center
The first grab after linking did nothing (FL)	FL's takeover mode waits for the controller to pass the knob's value	Grab again - the plug-in steps across the value for you from then on