

INSTALLATION INSTRUCTIONS

Necessary tools:

Utility knife with trapeze blade, square, wall spacers, chalk line with white chalk, measuring tape and pencil.

Necessary quantities:

Accurately measure the room where the flooring is to be installed, and then add 5% extra material for the cut. Please, only work with material with the same batch number. To achieve a more uniform and natural surface look, alternately mix planks / tiles from 3-4 different open packages. Take care not to install similar planks, with distinctive wood patterns, immediately before or beside one another.

Unsuitable areas for installation:

Rigid vinyl click must never be installed on preexisting carpet or smooth subfloors. This product is also unsuitable for exterior use, or for use in solariums, saunas or other rooms which are frequently or permanently wet. Prolonged exposure to direct sunlight without protection can cause discoloration of the surface due to high temperature.

Storage and Acclimatization:

Before installation, planks / tiles must be allowed to acclimatize to the room conditions. For that purpose, the original packages shall be horizontally stored unopened in groups of 4-5 for at least 48 hours in the room with normal temperature conditions. Make sure that temperature in the room of installation lies between 18 °C and 25 °C. Relative humidity should lie between 40%-65% (minimum and maximum values, respectively). Both limit values must also be maintained during installation and afterwards, in the course of regular living use. Subfloor temperature must be at least 15 °C. To avoid damage to the product, handle packages carefully and open them just prior to installation.

USEFUL TIP: Planks / tiles should rather be kept in the original package until the moment of installation.

Impact Sound Insulation:

As flooring elements already have built-in impact noise insulation, it is not necessary to take further measures; it would bring no improvement and it could create an excessively soft subfloor.

Screed moisture measurement test:

The maximum permissible residual humidity is 2.0% for cement screed and 0.5% for anhydrite screed (CM measurement method).

Installation with hot water underfloor heating:

In this case the surface temperature of the heated screed may not exceed 28 °C. When the floor heating is functioning, relative air humidity drops at floor level and this may lead to small gaps. Help can be provided through humidifiers. The maximum permissible residual humidity is 1.5% for cement screed and 0.3% for anhydrite screed (CM measurement method).

These values must be tested prior to installation and maintained afterwards. Prior to installation, a heating- and checking protocol must be conducted by the installation technician and compliance with the permissible residual humidity values must be checked and certified after completion of the protocol.

Rooms without cellars (flooring which come in contact with the ground) must be sealed against rising residual humidity, in compliance with current standards.

USEFUL TIP: If you want to install design floorings on a preexisting floor, such as wood parquet or ceramic tiles, check first if the subfloor is firm. The level surface irregularities shall be levelled with an appropriate levelling compound.

Installation of Unilin rigid click:

USEFUL TIP: Before starting installation works, check if the wall where you intend to start installation runs parallel to the opposite wall. For that purpose, measure the opposing walls. If the measurements do not match, you can correct the difference in the first row to avoid imperfections in the last row (too narrow or even wedge-shaped).

Remember to keep some spare planks / tiles for later. You may need them later on to repair planks /tiles with mechanical damage or discolorations.

Start in a corner by placing the first plank with the tongue side facing the wall. Use spacers along each wall to maintain an expansion space of 8-12 mm (5/16 in - 3/8 in) between the wall and the flooring. Diagram 1.

To attach the second plank, insert the end tongue into the end groove of the very first plank at an angle of approx. 15-20 degrees. When lowered, the plank will click into place. Line up edges carefully. The planks should be flat to the floor. Diagram 2.

Continue connecting the first row until you reach the last full plank. Fit the last plank by rotating the plank 180° with the pattern side upward, place beside row. Measure and mark, then using a ruler and utility knife, score the plank and snap off. Attach as described above. Diagram 3.

Begin the next row with the off cut piece from the previous row to stagger the pattern. Pieces should be a minimum of 20 cm (8 in) long and joint offset should be at least 40 cm (16 in). Diagram 4.


NOTE: It is faster to assemble planks into a new row at the ends and then attach the entire row to the previous row on the long sides. To start your second row, lay your first plank on the subfloor. Take your second plank, insert the end tongue into the end groove of the first plank at an angle of approx. 15-20 degrees. When lowered, the plank will click into place with light pressure. The planks should be flat to the floor. Make sure gaps are as small as possible. Continue assembling the planks this way until you have your second row complete.

To attach the second row to the first row, tilt and push the side tongue into the side groove of the first panel at an angle of approx. 15-20 degrees. Lower and click into place lining the edges up carefully. Continue laying remaining planks in this manner. Diagram 5.

To fit the last row, lay a plank on top of the previous row. With the tongue to the wall, lay another plank upside down on the one to be measured and use it as a ruler. Don't forget to allow room for spacers. Cut the plank and attach into position. Diagram 6.

Door frames and heating vents also require expansion room. First cut the plank to the correct length. Then place the cut plank next to its actual position and use a ruler to measure the areas to be cut out and mark them. Cut out the marked points allowing the necessary expansion distance on each side. Diagram 7.

You can trim door frames by turning a plank upside down and using a handsaw to cut away the necessary height so that planks slide easily under the frames. Diagram 8.

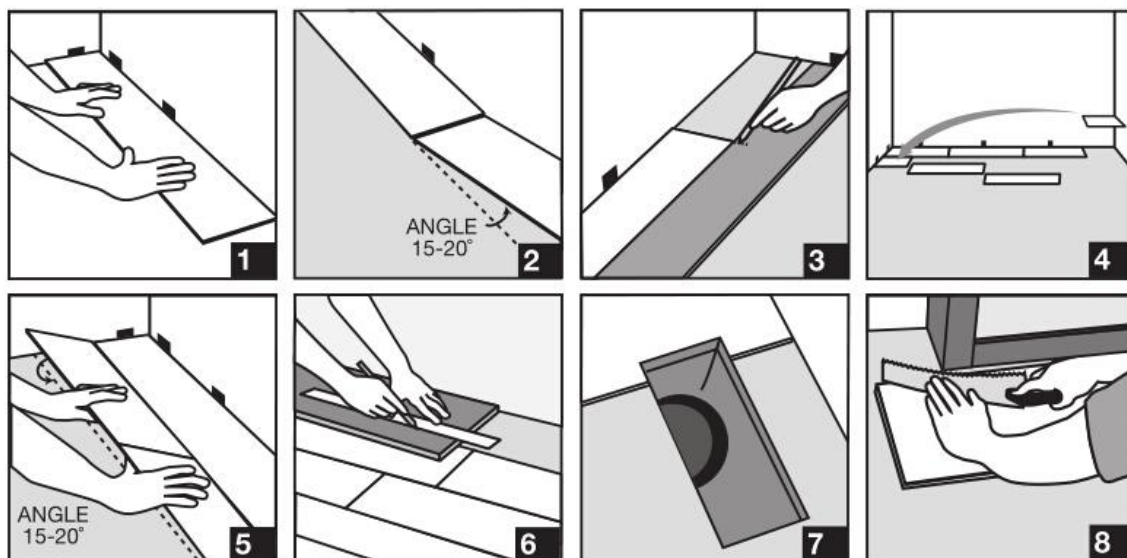

Surface limitation: rectangular areas with maximum 12 x 8 meters can be installed with a continuous movement profile, without interruption, provided that no structural expansion joints are present. Profiles must be installed in case of very narrow or extremely long areas, such as long corridors. In areas interrupted by fixed components, such as doorways, partition walls, pillars, etc., expansion gaps with at least 8 mm must be installed over the whole height of the components.

Attention! Always make sure that all types of end profiles, threshold strips or skirting boards are never fixed to the flooring itself. The flooring shall not be firmly fixed to the subfloor or to other fixed components at any point.

After finishing the installation:

1. Please remove all spacers you have inserted during installation.
2. Place appropriate felt glides under all movable furniture feet.
3. All chairs and furniture with casters must be provided with soft, W-type wheels (casters).

Cleaning / Maintenance:

After installation works, end-of-work cleaning must be carried out. Routine cleaning can easily be done through sweeping, vacuum cleaning or damp wiping. Persistent stains shall be removed by means of an appropriate PU-cleaner. Always avoid contact of aggressive or staining agents with the flooring. We advise placing a mat in the entrance to minimize dirt ingress, and to extend the durability and beauty of your new floor.