

# 掌握 FreeRTOS™ 实时内核

## Mastering the FreeRTOS™ Real Time Kernel

这是尚未涵盖 FreeRTOS V9.0.0、FreeRTOS V10.0.0 或低功耗无滴答操作的 161204 副本。

This is the 161204 copy which does not yet cover FreeRTOS V9.0.0, FreeRTOS V10.0.0, or  
定期查看 <http://www.FreeRTOS.org> 以获取本书的其他文档和更新。  
low power tick-less operation. Check <http://www.FreeRTOS.org> regularly for additional  
有关 FreeRTOS V9.x.x 的信息 , 请参阅 <http://www.FreeRTOS.org/FreeRTOS-V9.html>。  
documentation and updates to this book. See <http://www.FreeRTOS.org/FreeRTOS-V9.html>  
有关 FreeRTOS V10.x.x 的信息 , 请参阅 <https://www.freertos.org/FreeRTOS-V10.html>。  
for information on FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for  
information on FreeRTOS V10.x.x. Applications created using FreeRTOS V9.x.x onwards can  
allocate all kernel objects statically at compile time, removing the need to include a heap  
memory manager.

This text is being provided for free. In return we ask that you use the business contact  
email link on <http://www.FreeRTOS.org/contact> to provide feedback, comments and  
corrections. Thank you.





# **Mastering the FreeRTOS™ Real Time Kernel**

**A Hands-On Tutorial Guide**

**动手教程指南**

**Richard Barry**

Pre-release 161204 Edition.

All text, source code, and diagrams are the exclusive property of Real Time Engineers Ltd.  
unless otherwise noted inline.

© Real Time Engineers Ltd. 2016. All rights reserved.

<http://www.FreeRTOS.org>

<http://www.FreeRTOS.org/plus>

<http://www.FreeRTOS.org/labs>

FreeRTOS™, FreeRTOS.org™ and the FreeRTOS logo are trademarks of Real Time Engineers Ltd. OPENRTOS® and SAFERTOS® are trademarks of WITTENSTEIN Aerospace and Simulation Ltd. All other brands or product names are the property of their respective holders.



To Caroline, India and Max.



# Contents

Contents .....	ix
List of Figures .....	xvi
List of Code Listings .....	xix
List of Tables .....	xxiii
List of Notation.....	xxvi
<b>Preface .....</b>	<b>1</b>
Multitasking in Small Embedded Systems .....	2
About FreeRTOS .....	2
Value Proposition.....	3
A Note About Terminology .....	3
Why Use a Real-time Kernel?	3
FreeRTOS Features .....	5
Licensing, and The FreeRTOS, OpenRTOS, and SafeRTOS Family .....	6
Included Source Files and Projects .....	7
Obtaining the Examples that Accompany this Book .....	7
<b>Chapter 1 The FreeRTOS Distribution .....</b>	<b>9</b>
1.1 Chapter Introduction and Scope.....	10
Scope .....	10
1.2 Understanding the FreeRTOS Distribution .....	11
Definition: FreeRTOS Port .....	11
Building FreeRTOS.....	11
FreeRTOSConfig.h .....	11
The Official FreeRTOS Distribution .....	12
The Top Directories in the FreeRTOS Distribution .....	12
FreeRTOS Source Files Common to All Ports .....	12
FreeRTOS Source Files Specific to a Port .....	14
Header Files .....	15
1.3 Demo Applications .....	16
1.4 Creating a FreeRTOS Project .....	18
Adapting One of the Supplied Demo Projects .....	18
Creating a New Project from Scratch .....	19
1.5 Data Types and Coding Style Guide .....	20
Data Types .....	21
Variable Names .....	22
Function Names.....	22
Formatting.....	23

Macro Names.....	23
Rationale for Excessive Type Casting .....	24
<b>Chapter 2</b> Heap Memory Management.....	25
2.1 Chapter Introduction and Scope .....	26
Prerequisites .....	26
Dynamic Memory Allocation and its Relevance to FreeRTOS .....	26
Options for Dynamic Memory Allocation.....	27
Scope.....	28
2.2 Example Memory Allocation Schemes .....	29
From FreeRTOS V9.0.0 FreeRTOS applications can be completely statically allocated, removing the need to include a heap memory manager.....	29
Heap_1 .....	29
Heap_2 .....	30
Heap_3 .....	32
Heap_4 .....	32
Setting a Start Address for the Array Used By Heap_4 .....	34
Heap_5 .....	35
The vPortDefineHeapRegions() API Function .....	36
2.3 Heap Related Utility Functions .....	41
The xPortGetFreeHeapSize() API Function.....	41
The xPortGetMinimumEverFreeHeapSize() API Function .....	41
Malloc Failed Hook Functions .....	42
<b>Chapter 3</b> Task Management .....	44
3.1 Chapter Introduction and Scope .....	45
Scope.....	45
3.2 Task Functions.....	46
3.3 Top Level Task States.....	47
3.4 Creating Tasks .....	48
The xTaskCreate() API Function .....	48
Example 1. Creating tasks .....	51
Example 2. Using the task parameter.....	55
3.5 Task Priorities .....	58
3.6 Time Measurement and the Tick Interrupt .....	60
Example 3. Experimenting with priorities .....	62
3.7 Expanding the ‘Not Running’ State .....	64
The Blocked State.....	64
The Suspended State.....	65
The Ready State .....	65
Completing the State Transition Diagram .....	65
Example 4. Using the Blocked state to create a delay .....	66
The vTaskDelayUntil() API Function.....	70
Example 5. Converting the example tasks to use vTaskDelayUntil() .....	71

Example 6. Combining blocking and non-blocking tasks .....	72
3.8 The Idle Task and the Idle Task Hook .....	75
Idle Task Hook Functions.....	75
Limitations on the Implementation of Idle Task Hook Functions .....	76
Example 7. Defining an idle task hook function .....	76
3.9 Changing the Priority of a Task .....	79
The vTaskPrioritySet() API Function .....	79
The uxTaskPriorityGet() API Function.....	79
Example 8. Changing task priorities .....	80
3.10 Deleting a Task .....	85
The vTaskDelete() API Function .....	85
Example 9. Deleting tasks.....	86
3.11 Thread Local Storage.....	89
3.12 Scheduling Algorithms .....	90
A Recap of Task States and Events.....	90
Configuring the Scheduling Algorithm .....	90
Prioritized Pre-emptive Scheduling with Time Slicing.....	91
Prioritized Pre-emptive Scheduling (without Time Slicing).....	95
Co-operative Scheduling.....	97
<b>Chapter 4 Queue Management .....</b>	101
4.1 Chapter Introduction and Scope.....	102
Scope .....	102
4.2 Characteristics of a Queue.....	103
Data Storage.....	103
Access by Multiple Tasks.....	106
Blocking on Queue Reads .....	106
Blocking on Queue Writes.....	106
Blocking on Multiple Queues.....	107
4.3 Using a Queue .....	108
The xQueueCreate() API Function.....	108
The xQueueSendToBack() and xQueueSendToFront() API Functions .....	109
The xQueueReceive() API Function.....	111
The uxQueueMessagesWaiting() API Function.....	113
Example 10. Blocking when receiving from a queue .....	114
4.4 Receiving Data From Multiple Sources .....	119
Example 11. Blocking when sending to a queue, and sending structures on a queue..	120
4.5 Working with Large or Variable Sized Data .....	126
Queuing Pointers .....	126
Using a Queue to Send Different Types and Lengths of Data .....	128
4.6 Receiving From Multiple Queues .....	131
Queue Sets.....	131
The xQueueCreateSet() API Function.....	132
The xQueueAddToSet() API Function.....	134

The xQueueSelectFromSet() API Function .....	135
Example 12. Using a Queue Set .....	137
More Realistic Queue Set Use Cases .....	141
<b>4.7 Using a Queue to Create a Mailbox.....</b>	<b>143</b>
The xQueueOverwrite() API Function.....	144
The xQueuePeek() API Function.....	145
<b>Chapter 5 Software Timer Management.....</b>	<b>147</b>
<b>5.1 Chapter Introduction and Scope .....</b>	<b>148</b>
Scope.....	148
<b>5.2 Software Timer Callback Functions .....</b>	<b>149</b>
<b>5.3 Attributes and States of a Software Timer .....</b>	<b>150</b>
Period of a Software Timer.....	150
One-shot and Auto-reload Timers .....	150
Software Timer States.....	151
<b>5.4 The Context of a Software Timer.....</b>	<b>153</b>
The RTOS Daemon (Timer Service) Task.....	153
The Timer Command Queue.....	153
Daemon Task Scheduling .....	154
<b>5.5 Creating and Starting a Software Timer.....</b>	<b>158</b>
The xTimerCreate() API Function.....	158
The xTimerStart() API Function.....	159
Example 13. Creating one-shot and auto-reload timers.....	163
<b>5.6 The Timer ID .....</b>	<b>166</b>
The vTimerSetTimerID() API Function .....	166
The pvTimerGetTimerID() API Function .....	166
Example 14. Using the callback function parameter and the software timer ID.....	167
<b>5.7 Changing the Period of a Timer.....</b>	<b>170</b>
The xTimerChangePeriod() API Function.....	170
<b>5.8 Resetting a Software Timer .....</b>	<b>174</b>
The xTimerReset() API Function .....	174
Example 15. Resetting a software timer .....	176
<b>Chapter 6 Interrupt Management.....</b>	<b>181</b>
<b>6.1 Chapter Introduction and Scope .....</b>	<b>182</b>
Events.....	182
Scope.....	183
<b>6.2 Using the FreeRTOS API from an ISR .....</b>	<b>184</b>
The Interrupt Safe API.....	184
The Benefits of Using a Separate Interrupt Safe API .....	184
The Disadvantages of Using a Separate Interrupt Safe API .....	185
The xHigherPriorityTaskWoken Parameter .....	185
The portYIELD_FROM_ISR() and portEND_SWITCHING_ISR() Macros.....	187
<b>6.3 Deferred Interrupt Processing.....</b>	<b>189</b>

6.4	Binary Semaphores Used for Synchronization .....	191
	The xSemaphoreCreateBinary() API Function .....	194
	The xSemaphoreTake() API Function .....	194
	The xSemaphoreGiveFromISR() API Function .....	196
	Example 16. Using a binary semaphore to synchronize a task with an interrupt .....	198
	Improving the Implementation of the Task Used in Example 16 .....	202
6.5	Counting Semaphores .....	208
	The xSemaphoreCreateCounting() API Function .....	210
	Example 17. Using a counting semaphore to synchronize a task with an interrupt.....	211
6.6	Deferring Work to the RTOS Daemon Task .....	213
	The xTimerPendFunctionCallFromISR() API Function .....	214
	Example 18. Centralized deferred interrupt processing.....	216
6.7	Using Queues within an Interrupt Service Routine .....	220
	The xQueueSendToFrontFromISR() and xQueueSendToBackFromISR() API Functions .....	220
	Considerations When Using a Queue From an ISR .....	222
	Example 19. Sending and receiving on a queue from within an interrupt .....	222
6.8	Interrupt Nesting .....	228
	A Note to ARM Cortex-M and ARM GIC Users .....	230
<b>Chapter 7</b>	Resource Management .....	233
7.1	Chapter Introduction and Scope.....	234
	Mutual Exclusion.....	236
	Scope .....	237
7.2	Critical Sections and Suspending the Scheduler .....	238
	Basic Critical Sections .....	238
	Suspending (or Locking) the Scheduler .....	240
	The vTaskSuspendAll() API Function.....	241
	The xTaskResumeAll() API Function .....	241
7.3	Mutexes (and Binary Semaphores) .....	243
	The xSemaphoreCreateMutex() API Function.....	245
	Example 20. Rewriting vPrintString() to use a semaphore .....	245
	Priority Inversion .....	249
	Priority Inheritance .....	250
	Deadlock (or Deadly Embrace) .....	251
	Recursive Mutexes .....	252
	Mutexes and Task Scheduling .....	255
7.4	Gatekeeper Tasks.....	259
	Example 21. Re-writing vPrintString() to use a gatekeeper task.....	259
<b>Chapter 8</b>	Event Groups.....	265
8.1	Chapter Introduction and Scope.....	266
	Scope .....	266
8.2	Characteristics of an Event Group.....	268

Event Groups, Event Flags and Event Bits.....	268
More About the EventBits_t Data Type .....	269
Access by Multiple Tasks .....	269
A Practical Example of Using an Event Group .....	269
<b>8.3 Event Management Using Event Groups.....</b>	<b>271</b>
The xEventGroupCreate() API Function .....	271
The xEventGroupSetBits() API Function .....	271
The xEventGroupSetBitsFromISR() API Function .....	272
The xEventGroupWaitBits() API Function.....	275
Example 22. Experimenting with event groups.....	279
<b>8.4 Task Synchronization Using an Event Group .....</b>	<b>285</b>
The xEventGroupSync() API Function.....	287
Example 23. Synchronizing tasks.....	289
<b>Chapter 9 Task Notifications.....</b>	<b>293</b>
<b>9.1 Chapter Introduction and Scope .....</b>	<b>294</b>
Communicating Through Intermediary Objects.....	294
Task Notifications—Direct to Task Communication .....	294
Scope.....	295
<b>9.2 Task Notifications; Benefits and Limitations.....</b>	<b>296</b>
Performance Benefits of Task Notifications .....	296
RAM Footprint Benefits of Task Notifications .....	296
Limitations of Task Notifications .....	296
<b>9.3 Using Task Notifications .....</b>	<b>298</b>
Task Notification API Options.....	298
The xTaskNotifyGive() API Function .....	298
The vTaskNotifyGiveFromISR() API Function .....	299
The ulTaskNotifyTake() API Function .....	300
Example 24. Using a task notification in place of a semaphore, method 1.....	302
Example 25. Using a task notification in place of a semaphore, method 2.....	305
The xTaskNotify() and xTaskNotifyFromISR() API Functions .....	307
The xTaskNotifyWait() API Function.....	310
Task Notifications Used in Peripheral Device Drivers: UART Example.....	313
Task Notifications Used in Peripheral Device Drivers: ADC Example.....	320
Task Notifications Used Directly Within an Application .....	322
<b>Chapter 10 Low Power Support.....</b>	<b>327</b>
<b>Chapter 11 Developer Support.....</b>	<b>328</b>
<b>11.1 Chapter Introduction and Scope .....</b>	<b>329</b>
<b>11.2 configASSERT().....</b>	<b>330</b>
Example configASSERT() definitions .....	330
<b>11.3 FreeRTOS+Trace.....</b>	<b>332</b>
<b>11.4 Debug Related Hook (Callback) Functions .....</b>	<b>336</b>

Malloc failed hook .....	336
<b>11.5 Viewing Run-time and Task State Information.....</b>	<b>337</b>
Task Run-Time Statistics .....	337
The Run-Time Statistics Clock.....	337
Configuring an Application to Collect Run-Time Statistics .....	338
The uxTaskGetSystemState() API Function.....	339
The vTaskList() Helper Function .....	342
The vTaskGetRunTimeStats() Helper Function.....	344
Generating and Displaying Run-Time Statistics, a Worked Example.....	345
<b>11.6 Trace Hook Macros.....</b>	<b>348</b>
Available Trace Hook Macros .....	348
Defining Trace Hook Macros.....	352
FreeRTOS Aware Debugger Plug-ins .....	353
<b>Chapter 12     Trouble Shooting .....</b>	<b>355</b>
12.1 Chapter Introduction and Scope.....	356
12.2 Interrupt Priorities.....	357
12.3 Stack Overflow.....	359
The uxTaskGetStackHighWaterMark() API Function .....	359
Run Time Stack Checking—Overview .....	360
Run Time Stack Checking—Method 1 .....	360
Run Time Stack Checking—Method 2 .....	361
12.4 Inappropriate Use of printf() and sprintf().....	362
Printf-stdarg.c .....	362
12.5 Other Common Sources of Error.....	364
Symptom: Adding a simple task to a demo causes the demo to crash .....	364
Symptom: Using an API function within an interrupt causes the application to crash ...	364
Symptom: Sometimes the application crashes within an interrupt service routine .....	364
Symptom: The scheduler crashes when attempting to start the first task .....	365
Symptom: Interrupts are unexpectedly left disabled, or critical sections do not nest correctly .....	365
Symptom: The application crashes even before the scheduler is started .....	365
Symptom: Calling API functions while the scheduler is suspended, or from inside a critical section, causes the application to crash.....	366
<b>INDEX .....</b>	<b>368</b>

## List of Figures

---

Figure 1. Top level directories within the FreeRTOS distribution .....	12
Figure 2. Core FreeRTOS source files within the FreeRTOS directory tree.....	13
Figure 3. Port specific source files within the FreeRTOS directory tree .....	14
Figure 4. The demo directory hierarchy.....	17
Figure 5. RAM being allocated from the heap_1 array each time a task is created .....	30
Figure 6. RAM being allocated and freed from the heap_2 array as tasks are created and deleted.....	31
Figure 7. RAM being allocated and freed from the heap_4 array .....	33
Figure 8 Memory Map .....	37
Figure 9. Top level task states and transitions.....	47
Figure 10. The output produced when Example 1 is executed .....	53
Figure 11. The actual execution pattern of the two Example 1 tasks .....	54
Figure 12. The execution sequence expanded to show the tick interrupt executing .....	61
Figure 13. Running both tasks at different priorities .....	63
Figure 14. The execution pattern when one task has a higher priority than the other .....	63
Figure 15. Full task state machine.....	66
Figure 16. The output produced when Example 4 is executed .....	68
Figure 17. The execution sequence when the tasks use vTaskDelay() in place of the NULL loop.....	69
Figure 18. Bold lines indicate the state transitions performed by the tasks in Example 4 .....	70
Figure 19. The output produced when Example 6 is executed .....	74
Figure 20. The execution pattern of Example 6.....	74
Figure 21. The output produced when Example 7 is executed .....	78
Figure 22. The sequence of task execution when running Example 8 .....	83
Figure 23. The output produced when Example 8 is executed .....	84
Figure 24. The output produced when Example 9 is executed .....	87
Figure 25. The execution sequence for example 9.....	88
Figure 26. Execution pattern highlighting task prioritization and pre-emption in a hypothetical application in which each task has been assigned a unique priority.....	92
Figure 27 Execution pattern highlighting task prioritization and time slicing in a hypothetical application in which two tasks run at the same priority .....	94
Figure 28 The execution pattern for the same scenario as shown in Figure 27, but this time with configIDLE_SHOULD_YIELD set to 1 .....	95
Figure 29 Execution pattern that demonstrates how tasks of equal priority can receive hugely different amounts of processing time when time slicing is not used .....	96
Figure 30 Execution pattern demonstrating the behavior of the co-operative scheduler .....	98
Figure 31. An example sequence of writes to, and reads from a queue .....	104
Figure 32. The output produced when Example 10 is executed .....	118
Figure 33. The sequence of execution produced by Example 10 .....	118
Figure 34. An example scenario where structures are sent on a queue .....	119
Figure 35 The output produced by Example 11 .....	123

Figure 36. The sequence of execution produced by Example 11 .....	124
Figure 37 The output produced when Example 12 is executed.....	141
Figure 38 The difference in behavior between one-shot and auto-reload software timers ....	150
Figure 39 Auto-reload software timer states and transitions.....	152
Figure 40 One-shot software timer states and transitions .....	152
Figure 41 The timer command queue being used by a software timer API function to communicate with the RTOS daemon task .....	154
Figure 42 The execution pattern when the priority of a task calling xTimerStart() is above the priority of the daemon task.....	154
Figure 43 The execution pattern when the priority of a task calling xTimerStart() is below the priority of the daemon task.....	156
Figure 44 The output produced when Example 13 is executed.....	165
Figure 45 The output produced when Example 14 is executed.....	169
Figure 46 Starting and resetting a software timer that has a period of 6 ticks.....	174
Figure 47 The output produced when Example 15 is executed.....	179
Figure 48 Completing interrupt processing in a high priority task .....	190
Figure 49. Using a binary semaphore to implement deferred interrupt processing .....	191
Figure 50. Using a binary semaphore to synchronize a task with an interrupt .....	193
Figure 51. The output produced when Example 16 is executed .....	201
Figure 52. The sequence of execution when Example 16 is executed .....	202
Figure 53. The scenario when one interrupt occurs before the task has finished processing the first event.....	204
Figure 54 The scenario when two interrupts occur before the task has finished processing the first event.....	205
Figure 55. Using a counting semaphore to 'count' events .....	209
Figure 56. The output produced when Example 17 is executed .....	212
Figure 57. The output produced when Example 18 is executed .....	218
Figure 58 The sequence of execution when Example 18 is executed .....	219
Figure 59. The output produced when Example 19 is executed .....	226
Figure 60. The sequence of execution produced by Example 19 .....	227
Figure 61. Constants affecting interrupt nesting behavior .....	230
Figure 62 How a priority of binary 101 is stored by a Cortex-M microcontroller that implements four priority bits .....	231
Figure 63. Mutual exclusion implemented using a mutex .....	244
Figure 64. The output produced when Example 20 is executed .....	248
Figure 65. A possible sequence of execution for Example 20 .....	249
Figure 66. A worst case priority inversion scenario .....	250
Figure 67. Priority inheritance minimizing the effect of priority inversion .....	251
Figure 68 A possible sequence of execution when tasks that have the same priority use the same mutex .....	255
Figure 69 A sequence of execution that could occur if two instances of the task shown by Listing 125 are created at the same priority .....	257
Figure 70. The output produced when Example 21 is executed .....	264
Figure 71 Event flag to bit number mapping in a variable of type EventBits_t .....	268

Figure 72 An event group in which only bits 1, 4 and 7 are set, and all the other event flags are clear, making the event group's value 0x92 .....	268
Figure 73 The output produced when Example 22 is executed with xWaitForAllBits set to pdFALSE .....	283
Figure 74 The output produced when Example 22 is executed with xWaitForAllBits set to pdTRUE.....	284
Figure 75 The output produced when Example 23 is executed .....	292
Figure 76 A communication object being used to send an event from one task to another....	294
Figure 77 A task notification used to send an event directly from one task to another .....	295
Figure 78. The output produced when Example 16 is executed .....	304
Figure 79. The sequence of execution when Example 24 is executed .....	305
Figure 80. The output produced when Example 25 is executed .....	307
Figure 81 The communication paths from the application tasks to the cloud server, and back again .....	323
Figure 82 FreeRTOS+Trace includes more than 20 interconnected views .....	332
Figure 83 FreeRTOS+Trace main trace view - one of more than 20 interconnected trace views .....	333
Figure 84 FreeRTOS+Trace CPU load view - one of more than 20 interconnected trace views .....	334
Figure 85 FreeRTOS+Trace response time view - one of more than 20 interconnected trace views.....	334
Figure 86 FreeRTOS+Trace user event plot view - one of more than 20 interconnected trace views.....	335
Figure 87 FreeRTOS+Trace kernel object history view - one of more than 20 interconnected trace views.....	335
Figure 88 Example output generated by vTaskList() .....	344
Figure 89 Example output generated by vTaskGetRunTimeStats().....	345
Figure 90 FreeRTOS ThreadSpy Eclipse plug-in from Code Confidence Ltd. .....	353

## List of Code Listings

Listing 1. The template for a new main() function.....	18
Listing 2. Using GCC syntax to declare the array that will be used by heap_4, and place the array in a memory section named .my_heap .....	35
Listing 3. Using IAR syntax to declare the array that will be used by heap_4, and place the array at the absolute address 0x20000000 .....	35
Listing 4. The vPortDefineHeapRegions() API function prototype .....	36
Listing 5. The HeapRegion_t structure.....	36
Listing 6. An array of HeapRegion_t structures that together describe the 3 regions of RAM in their entirety .....	38
Listing 7. An array of HeapRegion_t structures that describe all of RAM2, all of RAM3, but only part of RAM1 .....	39
Listing 8. The xPortGetFreeHeapSize() API function prototype.....	41
Listing 9. The xPortGetMinimumEverFreeHeapSize() API function prototype .....	41
Listing 10. The malloc failed hook function name and prototype. ....	42
Listing 11. The task function prototype.....	46
Listing 12. The structure of a typical task function.....	46
Listing 13. The xTaskCreate() API function prototype .....	48
Listing 14. Implementation of the first task used in Example 1 .....	52
Listing 15. Implementation of the second task used in Example 1 .....	52
Listing 16. Starting the Example 1 tasks .....	53
Listing 17. Creating a task from within another task after the scheduler has started .....	55
Listing 18. The single task function used to create two tasks in Example 2.....	56
Listing 19. The main() function for Example 2 .....	57
Listing 20. Using the pdMS_TO_TICKS() macro to convert 200 milliseconds into an equivalent time in tick periods.....	61
Listing 21. Creating two tasks at different priorities .....	62
Listing 22. The vTaskDelay() API function prototype.....	67
Listing 23. The source code for the example task after the null loop delay has been replaced by a call to vTaskDelay() .....	68
Listing 24. vTaskDelayUntil() API function prototype.....	71
Listing 25. The implementation of the example task using vTaskDelayUntil() .....	72
Listing 26. The continuous processing task used in Example 6.....	73
Listing 27. The periodic task used in Example 6 .....	73
Listing 28. The idle task hook function name and prototype .....	76
Listing 29. A very simple Idle hook function .....	77
Listing 30. The source code for the example task now prints out the ullidleCycleCount value.....	77
Listing 31. The vTaskPrioritySet() API function prototype .....	79
Listing 32. The uxTaskPriorityGet() API function prototype .....	79
Listing 33. The implementation of Task 1 in Example 8 .....	81
Listing 34. The implementation of Task 2 in Example 8 .....	82
Listing 35. The implementation of main() for Example 8.....	83

Listing 36. The vTaskDelete() API function prototype.....	85
Listing 37. The implementation of main() for Example 9 .....	86
Listing 38. The implementation of Task 1 for Example 9 .....	87
Listing 39. The implementation of Task 2 for Example 9 .....	87
Listing 40. The xQueueCreate() API function prototype .....	108
Listing 41. The xQueueSendToFront() API function prototype .....	109
Listing 42. The xQueueSendToBack() API function prototype.....	109
Listing 43. The xQueueReceive() API function prototype .....	112
Listing 44. The uxQueueMessagesWaiting() API function prototype .....	113
Listing 45. Implementation of the sending task used in Example 10.....	115
Listing 46. Implementation of the receiver task for Example 10.....	116
Listing 47. The implementation of main() in Example 10 .....	117
Listing 48. The definition of the structure that is to be passed on a queue, plus the declaration of two variables for use by the example .....	120
Listing 49. The implementation of the sending task for Example 11 .....	121
Listing 50. The definition of the receiving task for Example 11 .....	122
Listing 51. The implementation of main() for Example 11 .....	123
Listing 52. Creating a queue that holds pointers.....	127
Listing 53. Using a queue to send a pointer to a buffer.....	127
Listing 54. Using a queue to receive a pointer to a buffer.....	127
Listing 55. The structure used to send events to the TCP/IP stack task in FreeRTOS+TCP .....	128
Listing 56. Pseudo code showing how an IPStackEvent_t structure is used to send data received from the network to the TCP/IP task .....	129
Listing 57. Pseudo code showing how an IPStackEvent_t structure is used to send the handle of a socket that is accepting a connection to the TCP/IP task.....	129
Listing 58. Pseudo code showing how an IPStackEvent_t structure is used to send a network down event to the TCP/IP task .....	130
Listing 59. Pseudo code showing how an IPStackEvent_t structure is used to send a network down to the TCP/IP task .....	130
Listing 60. The xQueueCreateSet() API function prototype .....	132
Listing 61. The xQueueAddToSet() API function prototype .....	134
Listing 62. The xQueueSelectFromSet() API function prototype .....	135
Listing 63. Implementation of main() for Example 12.....	138
Listing 64. The sending tasks used in Example 12.....	139
Listing 65. The receive task used in Example 12.....	140
Listing 66. Using a queue set that contains queues and semaphores .....	142
Listing 67. A queue being created for use as a mailbox .....	144
Listing 68. The xQueueOverwrite() API function prototype .....	144
Listing 69. Using the xQueueOverwrite() API function.....	145
Listing 70. The xQueuePeek() API function prototype .....	146
Listing 71. Using the xQueuePeek() API function.....	146
Listing 72. The software timer callback function prototype .....	149
Listing 73. The xTimerCreate() API function prototype .....	158

Listing 74. The xTimerStart() API function prototype .....	160
Listing 75. Creating and starting the timers used in Example 13 .....	163
Listing 76. The callback function used by the one-shot timer in Example 13 .....	164
Listing 77. The callback function used by the auto-reload timer in Example 13.....	164
Listing 78. The vTimerSetTimerID() API function prototype .....	166
Listing 79. The pvTimerGetTimerID() API function prototype .....	166
Listing 80. Creating the timers used in Example 14 .....	167
Listing 81. The timer callback function used in Example 14 .....	168
Listing 82. The xTimerChangePeriod() API function prototype.....	170
Listing 83. Using xTimerChangePeriod() .....	173
Listing 84. The xTimerReset() API function prototype .....	175
Listing 85. The callback function for the one-shot timer used in Example 15.....	177
Listing 86. The task used to reset the software timer in Example 15.....	178
Listing 87. The portEND_SWITCHING_ISR() macros.....	188
Listing 88. The portYIELD_FROM_ISR() macros.....	188
Listing 89. The xSemaphoreCreateBinary() API function prototype .....	194
Listing 90. The xSemaphoreTake() API function prototype .....	195
Listing 91. The xSemaphoreGiveFromISR() API function prototype .....	196
Listing 92. Implementation of the task that periodically generates a software interrupt in Example 16 .....	198
Listing 93. The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 16.....	199
Listing 94. The ISR for the software interrupt used in Example 16 .....	200
Listing 95. The implementation of main() for Example 16.....	201
Listing 96. The recommended structure of a deferred interrupt processing task, using a UART receive handler as an example .....	207
Listing 97. The xSemaphoreCreateCounting() API function prototype .....	210
Listing 98. The call to xSemaphoreCreateCounting() used to create the counting semaphore in Example 17 .....	211
Listing 99. The implementation of the interrupt service routine used by Example 17.....	212
Listing 100. The xTimerPendFunctionCallFromISR() API function prototype .....	214
Listing 101. The prototype to which a function passed in the xFunctionToPend parameter of xTimerPendFunctionCallFromISR() must conform.....	214
Listing 102. The software interrupt handler used in Example 18 .....	217
Listing 103. The function that performs the processing necessitated by the interrupt in Example 18. ....	217
Listing 104. The implementation of main() for Example 18.....	218
Listing 105. The xQueueSendToFrontFromISR() API function prototype .....	220
Listing 106. The xQueueSendToBackFromISR() API function prototype .....	220
Listing 107. The implementation of the task that writes to the queue in Example 19 .....	223
Listing 108. The implementation of the interrupt service routine used by Example 19.....	224
Listing 109. The task that prints out the strings received from the interrupt service routine in Example 19.....	225
Listing 110. The main() function for Example 19 .....	226
Listing 111. An example read, modify, write sequence .....	234

Listing 112. An example of a reentrant function.....	236
Listing 113. An example of a function that is not reentrant .....	236
Listing 114. Using a critical section to guard access to a register .....	238
Listing 115. A possible implementation of vPrintString() .....	239
Listing 116. Using a critical section in an interrupt service routine .....	240
Listing 117. The vTaskSuspendAll() API function prototype .....	241
Listing 118. The xTaskResumeAll() API function prototype .....	241
Listing 119. The implementation of vPrintString() .....	242
Listing 120. The xSemaphoreCreateMutex() API function prototype .....	245
Listing 121. The implementation of prvNewPrintString() .....	246
Listing 122. The implementation of prvPrintTask() for Example 20.....	247
Listing 123. The implementation of main() for Example 20.....	248
Listing 124. Creating and using a recursive mutex .....	254
Listing 125. A task that uses a mutex in a tight loop .....	256
Listing 126. Ensuring tasks that use a mutex in a loop receive a more equal amount of processing time, while also ensuring processing time is not wasted by switching between tasks too rapidly .....	258
Listing 127. The name and prototype for a tick hook function.....	260
Listing 128. The gatekeeper task .....	260
Listing 129. The print task implementation for Example 21 .....	261
Listing 130. The tick hook implementation.....	262
Listing 131. The implementation of main() for Example 21 .....	263
Listing 132. The xEventGroupCreate() API function prototype .....	271
Listing 133. The xEventGroupSetBits() API function prototype.....	272
Listing 134. The xEventGroupSetBitsFromISR() API function prototype.....	273
Listing 135. The xEventGroupWaitBits() API function prototype.....	275
Listing 136. Event bit definitions used in Example 22 .....	279
Listing 137. The task that sets two bits in the event group in Example 22 .....	280
Listing 138. The ISR that sets bit 2 in the event group in Example 22 .....	281
Listing 139. The task that blocks to wait for event bits to become set in Example 22 .....	282
Listing 140. Creating the event group and tasks in Example 22 .....	283
Listing 141. Pseudo code for two tasks that synchronize with each other to ensure a shared TCP socket is no longer in use by either task before the socket is closed .....	286
Listing 142. The xEventGroupSync() API function prototype .....	288
Listing 143. The implementation of the task used in Example 23 .....	290
Listing 144. The main() function used in Example 23 .....	291
Listing 145. The xTaskNotifyGive() API function prototype.....	298
Listing 146. The vTaskNotifyGiveFromISR() API function prototype.....	299
Listing 147. The ulTaskNotifyTake() API function prototype .....	300
Listing 148. The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 24.....	303
Listing 149. The implementation of the interrupt service routine used in Example 24 .....	304

Listing 150. The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 25.....	306
Listing 151. The implementation of the interrupt service routine used in Example 25.....	306
Listing 152. Prototypes for the xTaskNotify() and xTaskNotifyFromISR() API functions .....	308
Listing 153. The xTaskNotifyWait() API function prototype.....	310
Listing 154. Pseudo code demonstrating how a binary semaphore can be used in a driver library transmit function.....	315
Listing 155. Pseudo code demonstrating how a task notification can be used in a driver library transmit function.....	317
Listing 156. Pseudo code demonstrating how a task notification can be used in a driver library receive function.....	319
Listing 157. Pseudo code demonstrating how a task notification can be used to pass a value to a task .....	321
Listing 158. The structure and data type sent on a queue to the server task.....	323
Listing 159. The Implementation of the Cloud Read API Function .....	324
Listing 160. The Server Task Processing a Read Request .....	324
Listing 161. The Implementation of the Cloud Write API Function.....	325
Listing 162. The Server Task Processing a Send Request .....	326
Listing 163 Using the standard C assert() macro to check pxMyPointer is not NULL .....	330
Listing 164 A simple configASSERT() definition useful when executing under the control of a debugger .....	331
Listing 165 A configASSERT() definition that records the source code line that failed an assertion.....	331
Listing 166. The uxTaskGetSystemState() API function prototype .....	339
Listing 167. The TaskStatus_t structure.....	341
Listing 168. The vTaskList() API function prototype .....	343
Listing 169. The vTaskGetRunTimeStats() API function prototype.....	344
Listing 170. 16-bit timer overflow interrupt handler used to count timer overflows .....	346
Listing 171. Macros added to FreeRTOSConfig.h to enable the collection of run-time statistics.....	346
Listing 172. The task that prints out the collected run-time statistics .....	347
Listing 173. The uxTaskGetStackHighWaterMark() API function prototype.....	359
Listing 174. The stack overflow hook function prototype .....	360

## List of Tables

---

Table 1. FreeRTOS source files to include in the project .....	20
Table 2. Port specific data types used by FreeRTOS.....	21
Table 3. Macro prefixes .....	23
Table 4. Common macro definitions.....	23
Table 5. vPortDefineHeapRegions() parameters.....	37
Table 6. xPortGetFreeHeapSize() return value .....	41
Table 7. xPortGetMinimumEverFreeHeapSize() return value.....	42
Table 8. xTaskCreate() parameters and return value .....	48
Table 9. vTaskDelay() parameters .....	67

Table 10. vTaskDelayUntil() parameters .....	71
Table 11. vTaskPrioritySet() parameters .....	79
Table 12. uxTaskPriorityGet() parameters and return value .....	80
Table 13. vTaskDelete() parameters .....	85
Table 14. The FreeRTOSConfig.h settings that configure the kernel to use Prioritized Pre-emptive Scheduling with Time Slicing .....	91
Table 15. An explanation of the terms used to describe the scheduling policy .....	92
Table 16. The FreeRTOSConfig.h settings that configure the kernel to use Prioritized Pre-emptive Scheduling without Time Slicing.....	96
Table 17. The FreeRTOSConfig.h settings that configure the kernel to use co-operative scheduling .....	98
Table 18. xQueueCreate() parameters and return value .....	108
Table 19. xQueueSendToFront() and xQueueSendToBack() function parameters and return value.....	109
Table 20. xQueueReceive() function parameters and return values .....	112
Table 21. uxQueueMessagesWaiting() function parameters and return value.....	114
Table 22. Key to Figure 36 .....	124
Table 23. xQueueCreateSet() parameters and return value .....	133
Table 24. xQueueAddToSet() parameters and return value .....	134
Table 25. xQueueSelectFromSet() parameters and return value .....	136
Table 26. xQueueOverwrite() parameters and return value.....	145
Table 27. xTimerCreate() parameters and return value.....	158
Table 28. xTimerStart() parameters and return value .....	160
Table 29. vTimerSetTimerID() parameters .....	166
Table 30. pvTimerGetTimerID() parameters and return value .....	167
Table 31. xTimerChangePeriod() parameters and return value.....	171
Table 32. xTimerReset() parameters and return value .....	175
Table 33. xSemaphoreCreateBinary() Return Value .....	194
Table 34. xSemaphoreTake() parameters and return value .....	195
Table 35. xSemaphoreGiveFromISR() parameters and return value .....	197
Table 36. xSemaphoreCreateCounting() parameters and return value .....	210
Table 37. xTimerPendFunctionCallFromISR() parameters and return value .....	214
Table 38. xQueueSendToFrontFromISR() and xQueueSendToBackFromISR() parameters and return values .....	220
Table 39. Constants that control interrupt nesting .....	228
Table 40. xTaskResumeAll() return value .....	241
Table 41. xSemaphoreCreateMutex() return value.....	245
Table 42, xEventGroupCreate() return value.....	271
Table 43, xEventGroupSetBits() parameters and return value .....	272
Table 44, xEventGroupSetBitsFromISR() parameters and return value .....	273
Table 45, The Effect of the uxBitsToWaitFor and xWaitForAllBits Parameters .....	275
Table 46, xEventGroupWaitBits() parameters and return value.....	277
Table 47, xEventGroupSync() parameters and return value.....	288
Table 48. xTaskNotifyGive() parameters and return value .....	299

Table 49. vTaskNotifyGiveFromISR() parameters and return value .....	299
Table 50. ulTaskNotifyTake() parameters and return value.....	301
Table 51. xTaskNotify() parameters and return value .....	308
Table 52. Valid xTaskNotify() eNotifyAction Parameter Values, and Their Resultant Effect on the Receiving Task's Notification Value .....	309
Table 53. xTaskNotifyWait() parameters and return value .....	310
Table 54. Macros used in the collection of run-time statistics.....	338
Table 55, uxTaskGetSystemState() parameters and return value .....	340
Table 56. TaskStatus_t structure members.....	341
Table 57. vTaskList() parameters .....	343
Table 58. vTaskGetRunTimeStats() parameters .....	344
Table 59. A selection of the most commonly used trace hook macros .....	348
Table 60. uxTaskGetStackHighWaterMark() parameters and return value.....	359

## List of Notation

---

ADC	Analog to Digital Converter
API	Application Programming Interface
DMA	Direct Memory Access
FAQ	Frequently Asked Question
FIFO	First In First Out
HMI	Human Machine Interface
IDE	Integrated Development Environment
IRQ	Interrupt Request
ISR	Interrupt Service Routine
LCD	Liquid Crystal Display
MCU	Microcontroller
RMS	Rate Monotonic Scheduling
RTOS	Real-time Operating System
SIL	Safety Integrity Level
SPI	Serial Peripheral Interface
TCB	Task Control Block
UART	Universal Asynchronous Receiver/Transmitter

# **Preface**

---

# Multitasking in Small Embedded Systems

---

## About FreeRTOS

FreeRTOS is solely owned, developed and maintained by Real Time Engineers Ltd. Real Time Engineers Ltd. have been working in close partnership with the world's leading chip companies for well over a decade to provide you award winning, commercial grade, and completely free high quality software.

FreeRTOS is ideally suited to deeply embedded real-time applications that use microcontrollers or small microprocessors. This type of application normally includes a mix of both hard and soft real-time requirements.

Soft real-time requirements are those that state a time deadline—but breaching the deadline would not render the system useless. For example, responding to keystrokes too slowly might make a system seem annoyingly unresponsive without actually making it unusable.

Hard real-time requirements are those that state a time deadline—and breaching the deadline would result in absolute failure of the system. For example, a driver's airbag has the potential to do more harm than good if it responded to crash sensor inputs too slowly.

FreeRTOS is a real-time kernel (or real-time scheduler) on top of which embedded applications can be built to meet their hard real-time requirements. It allows applications to be organized as a collection of independent threads of execution. On a processor that has only one core, only a single thread can be executing at any one time. The kernel decides which thread should be executing by examining the priority assigned to each thread by the application designer. In the simplest case, the application designer could assign higher priorities to threads that implement hard real-time requirements, and lower priorities to threads that implement soft real-time requirements. This would ensure that hard real-time threads are always executed ahead of soft real-time threads, but priority assignment decisions are not always that simplistic.

Do not be concerned if you do not fully understand the concepts in the previous paragraph yet. The following chapters provide a detailed explanation, with many examples, to help you understand how to use a real-time kernel, and how to use FreeRTOS, in particular.

## **Value Proposition**

The unprecedented global success of FreeRTOS comes from its compelling value proposition; FreeRTOS is professionally developed, strictly quality controlled, robust, supported, does not contain any intellectual property ownership ambiguity, and is truly free to use in commercial applications without any requirement to expose your proprietary source code. You can take a product to market using FreeRTOS without even talking to Real Time Engineers Ltd., let alone paying any fees, and thousands of people do just that. If, at any time, you would like to receive additional backup, or if your legal team require additional written guarantees or indemnification, then there is a simple low cost commercial upgrade path. Peace of mind comes with the knowledge that you can opt to take the commercial route at any time you choose.

## **A Note About Terminology**

In FreeRTOS, each thread of execution is called a ‘task’. There is no consensus on terminology within the embedded community, but I prefer ‘task’ to ‘thread,’ as thread can have a more specific meaning in some fields of application.

## **Why Use a Real-time Kernel?**

There are many well established techniques for writing good embedded software without the use of a kernel, and, if the system being developed is simple, then these techniques might provide the most appropriate solution. In more complex cases, it is likely that using a kernel would be preferable, but where the crossover point occurs will always be subjective.

As already described, task prioritization can help ensure an application meets its processing deadlines, but a kernel can bring other less obvious benefits, too. Some of these are listed very briefly below.

- Abstracting away timing information

The kernel is responsible for execution timing and provides a time-related API to the application. This allows the structure of the application code to be simpler, and the overall code size to be smaller.

- Maintainability/Extensibility

Abstracting away timing details results in fewer interdependencies between modules, and allows the software to evolve in a controlled and predictable way. Also, the kernel is responsible for timing, so application performance is less susceptible to changes in the underlying hardware.

- Modularity

Tasks are independent modules, each of which should have a well-defined purpose.

- Team development

Tasks should also have well-defined interfaces, allowing easier development by teams.

- Easier testing

If tasks are well-defined independent modules with clean interfaces, they can be tested in isolation.

- Code reuse

Greater modularity and fewer interdependencies results in code that can be reused with less effort.

- Improved efficiency

Using a kernel allows software to be completely event-driven, so no processing time is wasted by polling for events that have not occurred. Code executes only when there is something that must be done.

Counter to the efficiency saving is the need to process the RTOS tick interrupt, and to switch execution from one task to another. However, applications that don't make use of an RTOS normally include some form of tick interrupt anyway.

- Idle time

The Idle task is created automatically when the scheduler is started. It executes whenever there are no application tasks wishing to execute. The idle task can be used to measure spare processing capacity, to perform background checks, or simply to place the processor into a low-power mode.

- Power Management

The efficiency gains that are obtained by using an RTOS allow the processor to spend more time in a low power mode.

Power consumption can be decreased significantly by placing the processor into a low power state each time the Idle task runs. FreeRTOS also has a special tick-less mode. Using the tick-less mode allows the processor to enter a lower power mode than would otherwise be possible, and remain in the low power mode for longer.

- Flexible interrupt handling

Interrupt handlers can be kept very short by deferring processing to either a task created by the application writer, or the FreeRTOS daemon task.

- Mixed processing requirements

Simple design patterns can achieve a mix of periodic, continuous and event-driven processing within an application. In addition, hard and soft real-time requirements can be met by selecting appropriate task and interrupt priorities.

## **FreeRTOS Features**

FreeRTOS has the following standard features:

- Pre-emptive or co-operative operation
- Very flexible task priority assignment
- Flexible, fast and light weight task notification mechanism
- Queues
- Binary semaphores
- Counting semaphores
- Mutexes
- Recursive Mutexes
- Software timers
- Event groups
- Tick hook functions
- Idle hook functions
- Stack overflow checking
- Trace recording
- Task run-time statistics gathering

- Optional commercial licensing and support
- Full interrupt nesting model (for some architectures)
- A tick-less capability for extreme low power applications
- Software managed interrupt stack when appropriate (this can help save RAM)

## Licensing, and The FreeRTOS, OpenRTOS, and SafeRTOS Family

The **FreeRTOS** open source license is designed to ensure:

1. FreeRTOS can be used in commercial applications.
2. FreeRTOS itself remains freely available to everybody.
3. FreeRTOS users retain ownership of their intellectual property.

See <http://www.FreeRTOS.org/license> for the latest open source license information.

**OpenRTOS** is a commercially licensed version of FreeRTOS provided under license from Real Time Engineers Ltd. by a third party.

**SafeRTOS** shares the same usage model as FreeRTOS, but has been developed in accordance with the practices, procedures, and processes necessary to claim compliance with various internationally recognized safety related standards.

# Included Source Files and Projects

---

## Obtaining the Examples that Accompany this Book

Source code, pre-configured project files, and full build instructions for all the examples presented in this book are provided in an accompanying zip file. You can download the zip file from <http://www.FreeRTOS.org/Documentation/code> if you did not receive a copy with the book. **The zip file may not include the latest version of FreeRTOS.**

The screen shots included in this book were taken while the examples were executing in a Microsoft Windows environment, using the FreeRTOS Windows port. The project that uses the FreeRTOS Windows port is pre-configured to build using the free Express edition of Visual Studio, which can be downloaded from <http://www.microsoft.com/express>. Note that, while the FreeRTOS Windows port provides a convenient evaluation, test and development platform, it does *not* provide true real-time behavior.

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

# **Chapter 1**

## **The FreeRTOS Distribution**

---

## 1.1 Chapter Introduction and Scope

---

FreeRTOS is distributed as a single zip file archive that contains all the official FreeRTOS ports, and a large number of pre-configured demo applications.

### Scope

This chapter aims to help users orientate themselves with the FreeRTOS files and directories by:

- Providing a top level view of the FreeRTOS directory structure.
- Describing which files are actually required by any particular FreeRTOS project.
- Introducing the demo applications.
- Providing information on how a new project can be created.

The description here relates only to the official FreeRTOS distribution. The examples that come with this book use a slightly different organization.

## 1.2 Understanding the FreeRTOS Distribution

---

### Definition: FreeRTOS Port

FreeRTOS can be built with approximately twenty different compilers, and can run on more than thirty different processor architectures. Each supported combination of compiler and processor is considered to be a separate FreeRTOS port.

### Building FreeRTOS

FreeRTOS can be thought of as a library that provides multi-tasking capabilities to what would otherwise be a bare metal application.

FreeRTOS is supplied as a set of C source files. Some of the source files are common to all ports, while others are specific to a port. Build the source files as part of your project to make the FreeRTOS API available to your application. To make this easy for you, each official FreeRTOS port is provided with a demo application. The demo application is pre-configured to build the correct source files, and include the correct header files.

Demo applications should build ‘out of the box’, although some demos are older than others, and sometimes a change in the build tools made since the demo was released can cause an issue. Section 1.3 describes the demo applications.

### FreeRTOSConfig.h

FreeRTOS is configured by a header file called FreeRTOSConfig.h.

FreeRTOSConfig.h is used to tailor FreeRTOS for use in a specific application. For example, FreeRTOSConfig.h contains constants such as configUSE\_PREEMPTION, the setting of which defines whether the co-operative or pre-emptive scheduling algorithm will be used<sup>1</sup>. As FreeRTOSConfig.h contains application specific definitions, it should be located in a directory that is part of the application being built, not in a directory that contains the FreeRTOS source code.

A demo application is provided for every FreeRTOS port, and every demo application contains a FreeRTOSConfig.h file. It is therefore never necessary to create a FreeRTOSConfig.h file

---

<sup>1</sup> Scheduling algorithms are described in section 3.12.

from scratch. Instead, it is recommended to start with, then adapt, the FreeRTOSConfig.h used by the demo application provided for the FreeRTOS port in use.

## The Official FreeRTOS Distribution

FreeRTOS is distributed in a single zip file. The zip file contains source code for all the FreeRTOS ports, and project files for all the FreeRTOS demo applications. It also contains a selection of FreeRTOS+ ecosystem components, and a selection of FreeRTOS+ ecosystem demo applications.

Do not be put off by the number of files in the FreeRTOS distribution! Only a very small number of files are required in any one application.

## The Top Directories in the FreeRTOS Distribution

The first and second level directories of the FreeRTOS distribution are shown and described in Figure 1.

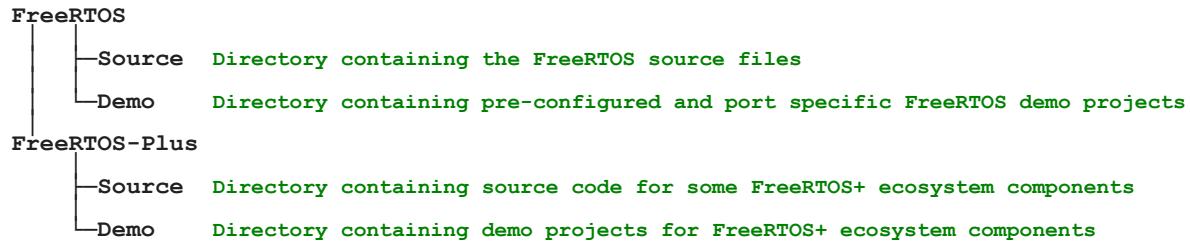


Figure 1. Top level directories within the FreeRTOS distribution

The zip file only contains one copy of the FreeRTOS source files; all the FreeRTOS demo projects, and all the FreeRTOS+ demo projects, expect to find the FreeRTOS source files in the FreeRTOS/Source directory, and may not build if the directory structure is changed.

## FreeRTOS Source Files Common to All Ports

The core FreeRTOS source code is contained in just two C files that are common to all the FreeRTOS ports. These are called tasks.c, and list.c, and they are located directly in the FreeRTOS/Source directory, as shown in Figure 2. In addition to these two files, the following source files are located in the same directory:

- queue.c

queue.c provides both queue and semaphore services, as described later in this book. queue.c is nearly always required.

- timers.c


timers.c provides software timer functionality, as described later in this book. It need only be included in the build if software timers are actually going to be used.

- event\_groups.c

event\_groups.c provides event group functionality, as described later in this book. It need only be included in the build if event groups are actually going to be used.

- croutine.c

croutine.c implements the FreeRTOS co-routine functionality. It need only be included in the build if co-routines are actually going to be used. Co-routines were intended for use on very small microcontrollers, are rarely used now, and are therefore not maintained to the same level as other FreeRTOS features. Co-routines are not described in this book.

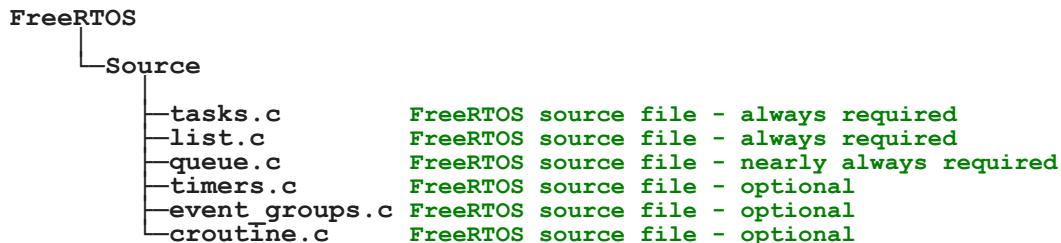

**Figure 2. Core FreeRTOS source files within the FreeRTOS directory tree**

It is recognized that the file names may result in name space clashes, as many projects will already include files that have the same names. It is however considered that changing the names of the files now would be problematic, as to do so would break compatibility with the many thousands of projects that use FreeRTOS, as well as automation tools, and IDE plugins.

## FreeRTOS Source Files Specific to a Port

Source files specific to a FreeRTOS port are contained within the FreeRTOS/Source/portable directory. The portable directory is arranged as a hierarchy, first by compiler, then by processor architecture. The hierarchy is shown in Figure 3.

If you are running FreeRTOS on a processor with architecture '*architecture*' using compiler '*compiler*' then, in addition to the core FreeRTOS source files, you must also build the files located in FreeRTOS/Source/portable/[*compiler*]/[*architecture*] directory.

As will be described in Chapter 2, Heap Memory Management, FreeRTOS also considers heap memory allocation to be part of the portable layer. Projects that use a FreeRTOS version older than V9.0.0 must include a heap memory manager. From FreeRTOS V9.0.0 a heap memory manager is only required if configSUPPORT\_DYNAMIC\_ALLOCATION is set to 1 in FreeRTOSConfig.h, or if configSUPPORT\_DYNAMIC\_ALLOCATION is left undefined.

FreeRTOS provides five example heap allocation schemes. The five schemes are named heap\_1 to heap\_5, and are implemented by the source files heap\_1.c to heap\_5.c respectively. The example heap allocation schemes are contained in the FreeRTOS/Source/portable/MemMang directory. If you have configured FreeRTOS to use dynamic memory allocation then it is necessary to build one of these five source files in your project, unless your application provides an alternative implementation.

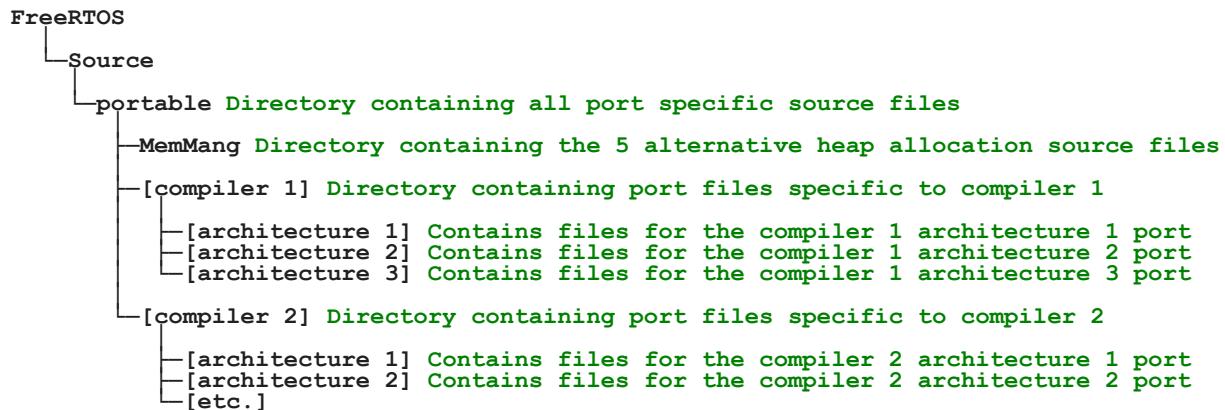


Figure 3. Port specific source files within the FreeRTOS directory tree

## Include Paths

FreeRTOS requires three directories to be included in the compiler's include path. These are:

1. The path to the core FreeRTOS header files, which is always FreeRTOS/Source/include.
2. The path to the source files that are specific to the FreeRTOS port in use. As described above, this is FreeRTOS/Source/portable/[compiler]/[architecture].
3. A path to the FreeRTOSConfig.h header file.

## **Header Files**

A source file that uses the FreeRTOS API must include ‘FreeRTOS.h’, followed by the header file that contains the prototype for the API function being used—either ‘task.h’, ‘queue.h’, ‘semphr.h’, ‘timers.h’ or ‘event\_groups.h’.

## 1.3 Demo Applications

---

Each FreeRTOS port comes with at least one demo application that should build with no errors or warnings being generated, although some demos are older than others, and sometimes a change in the build tools made since the demo was released can cause an issue.

*A note to Linux users:* FreeRTOS is developed and tested on a Windows host. Occasionally this results in build errors when demo projects are built on a Linux host. Build errors are almost always related to the case of letters used when referencing file names, or the direction of slash characters used in file paths. Please use the FreeRTOS contact form (<http://www.FreeRTOS.org/contact>) to alert us to any such errors.

The demo application has several purposes:

- To provide an example of a working and pre-configured project, with the correct files included, and the correct compiler options set.
- To allow ‘out of the box’ experimentation with minimal setup or prior knowledge.
- As a demonstration of how the FreeRTOS API can be used.
- As a base from which real applications can be created.

Each demo project is located in a unique sub-directory under the FreeRTOS/Demo directory. The name of the sub-directory indicates the port to which the demo project relates.

Every demo application is also described by a web page on the FreeRTOS.org web site. The web page includes information on:

- How to locate the project file for the demo within the FreeRTOS directory structure.
- Which hardware the project is configured to use.
- How to set up the hardware for running the demo.
- How to build the demo.
- How the demo is expected to behave.

All the demo projects create a subset of the common demo tasks, the implementations of which are contained in the FreeRTOS/Demo/Common/Minimal directory. The common demo tasks exist purely to demonstrate how the FreeRTOS API can be used—they do not implement any particular useful functionality.

More recent demo projects can also build a beginners ‘blinky’ project. Blinky projects are very basic. Typically they will create just two tasks and one queue.

Every demo project includes a file called main.c. This contains the main() function, from where all the demo application tasks are created. See the comments within the individual main.c files for information specific to that demo.

The FreeRTOS/Demo directory hierarchy is shown in Figure 4.

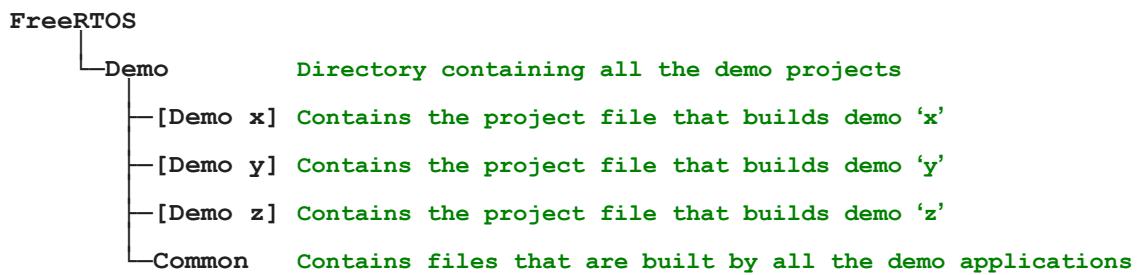


Figure 4. The demo directory hierarchy

## 1.4 Creating a FreeRTOS Project

---

### Adapting One of the Supplied Demo Projects

Every FreeRTOS port comes with at least one pre-configured demo application that should build with no errors or warnings. It is recommended that new projects are created by adapting one of these existing projects; this will allow the project to have the correct files included, the correct interrupt handlers installed, and the correct compiler options set.

To start a new application from an existing demo project:

1. Open the supplied demo project and ensure that it builds and executes as expected.
2. Remove the source files that define the demo tasks. Any file that is located within the Demo/Common directory can be removed from the project.
3. Delete all the function calls within main(), except prvSetupHardware() and vTaskStartScheduler(), as shown in Listing 1.
4. Check the project still builds.

Following these steps will create a project that includes the correct FreeRTOS source files, but does not define any functionality.

---

```
int main( void )
{
    /* Perform any hardware setup necessary. */
    prvSetupHardware();

    /* --- APPLICATION TASKS CAN BE CREATED HERE --- */

    /* Start the created tasks running. */
    vTaskStartScheduler();

    /* Execution will only reach here if there was insufficient heap to
     * start the scheduler. */
    for( ; );
    return 0;
}
```

---

**Listing 1. The template for a new main() function**

## **Creating a New Project from Scratch**

As already mentioned, it is recommended that new projects are created from an existing demo project. If this is not desirable, then a new project can be created using the following procedure:

1. Using your chosen tool chain, create a new project that does not yet include any FreeRTOS source files.
2. Ensure the new project can be built, downloaded to your target hardware, and executed.
3. Only when you are sure you already have a working project, add the FreeRTOS source files detailed in Table 1 to the project.
4. Copy the FreeRTOSConfig.h header file used by the demo project provided for the port in use into the project directory.
5. Add the following directories to the path the project will search to locate header files:
  - FreeRTOS/Source/include
  - FreeRTOS/Source/portable/[compiler]/[architecture] (where [compiler] and [architecture] are correct for your chosen port)
  - The directory containing the FreeRTOSConfig.h header file
6. Copy the compiler settings from the relevant demo project.
7. Install any FreeRTOS interrupt handlers that might be necessary. Use the web page that describes the port in use, and the demo project provided for the port in use, as a reference.

**Table 1. FreeRTOS source files to include in the project**

File	Location
tasks.c	FreeRTOS/Source
queue.c	FreeRTOS/Source
list.c	FreeRTOS/Source
timers.c	FreeRTOS/Source
event_groups.c	FreeRTOS/Source
All C and assembler files	FreeRTOS/Source/portable/[compiler]/[architecture]
heap_n.c	FreeRTOS/Source/portable/MemMang, where n is either 1, 2, 3, 4 or 5. This file became optional from FreeRTOS V9.0.0.

Projects that use a FreeRTOS version older than V9.0.0 must build one of the heap\_n.c files. From FreeRTOS V9.0.0 a heap\_n.c file is only required if configSUPPORT\_DYNAMIC\_ALLOCATION is set to 1 in FreeRTOSConfig.h or if configSUPPORT\_DYNAMIC\_ALLOCATION is left undefined. Refer to Chapter 2, Heap Memory Management, for more information.

## 1.5 Data Types and Coding Style Guide

---

### Data Types

Each port of FreeRTOS has a unique portmacro.h header file that contains (amongst other things) definitions for two port specific data types: TickType\_t and BaseType\_t. These data types are described in Table 2.

Table 2. Port specific data types used by FreeRTOS

Macro or typedef used	Actual type
TickType_t	FreeRTOS configures a periodic interrupt called the tick interrupt.  The number of tick interrupts that have occurred since the FreeRTOS application started is called the <i>tick count</i> . The tick count is used as a measure of time.
	The time between two tick interrupts is called the <i>tick period</i> . Times are specified as multiples of tick periods.
	TickCount_t is the data type used to hold the tick count value, and to specify times.
	TickCount_t can be either an unsigned 16-bit type, or an unsigned 32-bit type, depending on the setting of configUSE_16_BIT_TICKS within FreeRTOSConfig.h. If configUSE_16_BIT_TICKS is set to 1, then TickType_t is defined as uint16_t. If configUSE_16_BIT_TICKS is set to 0 then TickType_t is defined as uint32_t.
	Using a 16-bit type can greatly improve efficiency on 8-bit and 16-bit architectures, but severely limits the maximum block period that can be specified. There is no reason to use a 16-bit type on a 32-bit architecture.

**Table 2. Port specific data types used by FreeRTOS**

Macro or <code>typedef</code> used	Actual type
<code>BaseType_t</code>	<p>This is always defined as the most efficient data type for the architecture. Typically, this is a 32-bit type on a 32-bit architecture, a 16-bit type on a 16-bit architecture, and an 8-bit type on an 8-bit architecture.</p> <p><code>BaseType_t</code> is generally used for return types that can take only a very limited range of values, and for <code>pdTRUE/pdFALSE</code> type Booleans.</p>

Some compilers make all unqualified `char` variables `unsigned`, while others make them `signed`. For this reason, the FreeRTOS source code explicitly qualifies every use of `char` with either '`signed`' or '`unsigned`', unless the `char` is used to hold an ASCII character, or a pointer to `char` is used to point to a string.

Plain `int` types are never used.

## Variable Names

Variables are prefixed with their type: '`c`' for `char`, '`s`' for `int16_t` (`short`), '`l`' `int32_t` (`long`), and '`x`' for `BaseType_t` and any other non-standard types (structures, task handles, queue handles, etc.).

If a variable is `unsigned`, it is also prefixed with a '`u`'. If a variable is a pointer, it is also prefixed with a '`p`'. For example, a variable of type `uint8_t` will be prefixed with '`uc`', and a variable of type pointer to `char` will be prefixed with '`pc`'.

## Function Names

Functions are prefixed with both the type they return, and the file they are defined within. For example:

- `vTaskPrioritySet()` returns a `void` and is defined within `task.c`.
- `xQueueReceive()` returns a variable of type `BaseType_t` and is defined within `queue.c`.
- `pvTimerGetTimerID()` returns a pointer to `void` and is defined within `timers.c`.

File scope (private) functions are prefixed with '`prv`'.

## Formatting

One tab is always set to equal four spaces.

## Macro Names

Most macros are written in upper case, and prefixed with lower case letters that indicate where the macro is defined. Table 3 provides a list of prefixes.

**Table 3. Macro prefixes**

Prefix	Location of macro definition
port (for example, portMAX_DELAY)	portable.h or portmacro.h
task (for example, taskENTER_CRITICAL())	task.h
pd (for example, pdTRUE)	projdefs.h
config (for example, configUSE_PREEMPTION)	FreeRTOSConfig.h
err (for example, errQUEUE_FULL)	projdefs.h

Note that the semaphore API is written almost entirely as a set of macros, but follows the function naming convention, rather than the macro naming convention.

The macros defined in Table 4 are used throughout the FreeRTOS source code.

**Table 4. Common macro definitions**

Macro	Value
pdTRUE	1
pdFALSE	0
pdPASS	1
pdFAIL	0

## Rationale for Excessive Type Casting

The FreeRTOS source code can be compiled with many different compilers, all of which differ in how and when they generate warnings. In particular, different compilers want casting to be used in different ways. As a result, the FreeRTOS source code contains more type casting than would normally be warranted.

# **Chapter 2**

## **Heap Memory Management**

---

From FreeRTOS V9.0.0 FreeRTOS applications can be completely statically allocated,  
removing the need to include a heap memory manager

## 2.1 Chapter Introduction and Scope

---

### Prerequisites

FreeRTOS 以一组 C 源文件的形式提供，因此成为一名称职的 C 程序员是使用 FreeRTOS 的先决条件，因此本章假设读者熟悉以下概念：FreeRTOS is provided as a set of C source files, so being a competent C programmer is a prerequisite for using FreeRTOS, and therefore this chapter assumes the reader is familiar with concepts such as:

如何构建 C 项目，包括不同的编译和链接阶段。

- How a C project is built, including the different compiling and linking phases.
- 堆栈和堆是什么。
- What the stack and heap are.
- 标准 C 库 malloc() 和 free() 函数。
- The standard C library malloc() and free() functions.

动态内存分配及其与 FreeRTOS 的相关性

### Dynamic Memory Allocation and its Relevance to FreeRTOS

从 FreeRTOS V9.0.0 开始，内核对象可以在编译时静态分配，也可以在运行时动态分配：

From FreeRTOS V9.0.0 kernel objects can be allocated statically at compile time, or dynamically at run time:  
本书的后续章节将介绍内核对象，例如任务、队列、信号量和事件组。

Following chapters of this book will introduce kernel objects such as tasks, queues,  
为了使 FreeRTOS 尽可能易于使用，这些内核对象不是在编译时静态分配的，而是在运行时动态分配的；  
semaphores and event groups. To make FreeRTOS as easy to use as possible, these kernel  
objects are not statically allocated at compile-time, but dynamically allocated at run-time;  
FreeRTOS 会在每次创建内核对象时分配 RAM，并在每次删除内核对象时释放 RAM。  
FreeRTOS allocates RAM each time a kernel object is created, and frees RAM each time a  
该策略减少了设计和规划工作，简化了 API，并最大限度地减少了 RAM 占用。  
kernel object is deleted. This policy reduces design and planning effort, simplifies the API, and  
minimizes the RAM footprint.

This chapter discusses dynamic memory allocation. Dynamic memory allocation is a C programming concept, and not a concept that is specific to either FreeRTOS or multitasking. It is relevant to FreeRTOS because kernel objects are allocated dynamically, and the dynamic memory allocation schemes provided by general purpose compilers are not always suitable for real-time applications.

Memory can be allocated using the standard C library malloc() and free() functions, but they may not be suitable, or appropriate, for one or more of the following reasons:

- They are not always available on small embedded systems.
- Their implementation can be relatively large, taking up valuable code space.
- They are rarely thread-safe.

- They are not deterministic; the amount of time taken to execute the functions will differ from call to call.
- They can suffer from fragmentation<sup>1</sup>.
- They can complicate the linker configuration.
- They can be the source of difficult to debug errors if the heap space is allowed to grow into memory used by other variables.

## Options for Dynamic Memory Allocation

From FreeRTOS V9.0.0 kernel objects can be allocated statically at compile time, or dynamically at run time: Early versions of FreeRTOS used a memory pools allocation scheme, whereby pools of different size memory blocks were pre-allocated at compile time, then returned by the memory allocation functions. Although this is a common scheme to use in real-time systems, it proved to be the source of many support requests, predominantly because it could not use RAM efficiently enough to make it viable for really small embedded systems—so the scheme was dropped.

FreeRTOS now treats memory allocation as part of the portable layer (as opposed to part of the core code base). This is in recognition of the fact that different embedded systems have varying dynamic memory allocation and timing requirements, so a single dynamic memory allocation algorithm will only ever be appropriate for a subset of applications. Also, removing dynamic memory allocation from the core code base enables application writer's to provide their own specific implementations, when appropriate.

When FreeRTOS requires RAM, instead of calling `malloc()`, it calls `pvPortMalloc()`. When RAM is being freed, instead of calling `free()`, the kernel calls `vPortFree()`. `pvPortMalloc()` has the same prototype as the standard C library `malloc()` function, and `vPortFree()` has the same prototype as the standard C library `free()` function.

`pvPortMalloc()` and `vPortFree()` are public functions, so can also be called from application code.

<sup>1</sup> The heap is considered to be fragmented if the free RAM within the heap is broken up into small blocks that are separated from each other. If the heap is fragmented, then an attempt to allocate a block will fail if no single free block in the heap is large enough to contain the block, even if the total size of all the separate free blocks in the heap is many times greater than the size of the block that cannot be allocated.

From FreeRTOS V9.0.0 kernel objects can be allocated statically at compile time, or dynamically at run time: FreeRTOS comes with five example implementations of both `pvPortMalloc()` and `vPortFree()`, all of which are documented in this chapter. FreeRTOS applications can use one of the example implementations, or provide their own.

The five examples are defined in the `heap_1.c`, `heap_2.c`, `heap_3.c`, `heap_4.c` and `heap_5.c` source files respectively, all of which are located in the `FreeRTOS/Source/portable/MemMang` directory.

## Scope

This chapter aims to give readers a good understanding of:

- When FreeRTOS allocates RAM.
- The five example memory allocation schemes supplied with FreeRTOS.
- Which memory allocation scheme to select.

## 2.2 Example Memory Allocation Schemes

---

From FreeRTOS V9.0.0 FreeRTOS applications can be completely statically allocated, removing the need to include a heap memory manager

### Heap\_1

It is common for small dedicated embedded systems to only create tasks and other kernel objects before the scheduler has been started. When this is the case, memory only gets dynamically allocated by the kernel before the application starts to perform any real-time functionality, and the memory remains allocated for the lifetime of the application. This means the chosen allocation scheme does not have to consider any of the more complex memory allocation issues, such as determinism and fragmentation, and can instead just consider attributes such as code size and simplicity.

Heap\_1.c implements a very basic version of `pvPortMalloc()`, and does not implement `vPortFree()`. Applications that never delete a task, or other kernel object, have the potential to use `heap_1`.

Some commercially critical and safety critical systems that would otherwise prohibit the use of dynamic memory allocation also have the potential to use `heap_1`. Critical systems often prohibit dynamic memory allocation because of the uncertainties associated with non-determinism, memory fragmentation, and failed allocations—but `Heap_1` is always deterministic, and cannot fragment memory.

The `heap_1` allocation scheme subdivides a simple array into smaller blocks, as calls to `pvPortMalloc()` are made. The array is called the FreeRTOS heap.

The total size (in bytes) of the array is set by the definition `configTOTAL_HEAP_SIZE` within `FreeRTOSConfig.h`. Defining a large array in this manner can make the application appear to consume a lot of RAM—even before any memory has been allocated from the array.

Each created task requires a task control block (TCB) and a stack to be allocated from the heap. Figure 5 demonstrates how `heap_1` subdivides the simple array as tasks are created.

Referring to Figure 5:

- A shows the array before any tasks have been created—the entire array is free.

- B shows the array after one task has been created.
- C shows the array after three tasks have been created.

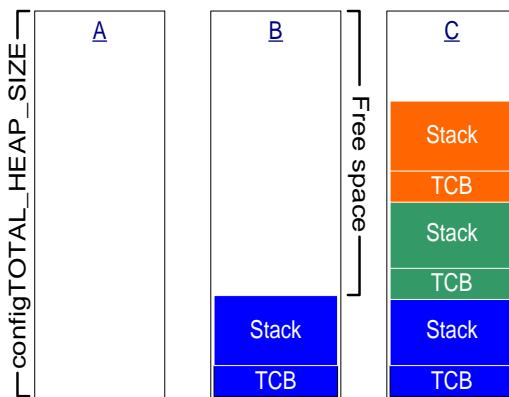


Figure 5. RAM being allocated from the `heap_1` array each time a task is created

## Heap\_2

`Heap_2` is retained in the FreeRTOS distribution for backward compatibility, but its use is not recommended for new designs. Consider using `heap_4` instead of `heap_2`, as `heap_4` provides enhanced functionality.

`Heap_2.c` also works by subdividing an array that is dimensioned by `configTOTAL_HEAP_SIZE`. It uses a best fit algorithm to allocate memory and, unlike `heap_1`, it does allow memory to be freed. Again, the array is statically declared, so will make the application appear to consume a lot of RAM, even before any memory from the array has been assigned.


The best fit algorithm ensures that `pvPortMalloc()` uses the free block of memory that is closest in size to the number of bytes requested. For example, consider the scenario where:

- The heap contains three blocks of free memory that are 5 bytes, 25 bytes, and 100 bytes, respectively.
- `pvPortMalloc()` is called to request 20 bytes of RAM.

The smallest free block of RAM into which the requested number of bytes will fit is the 25-byte block, so `pvPortMalloc()` splits the 25-byte block into one block of 20 bytes and one block of 5

bytes<sup>1</sup>, before returning a pointer to the 20-byte block. The new 5-byte block remains available to future calls to `pvPortMalloc()`.

Unlike `heap_4`, `Heap_2` does not combine adjacent free blocks into a single larger block, so it is more susceptible to fragmentation. However, fragmentation is not an issue if the blocks being allocated and subsequently freed are always the same size. `Heap_2` is suitable for an application that creates and deletes tasks repeatedly, provided the size of the stack allocated to the created tasks does not change.

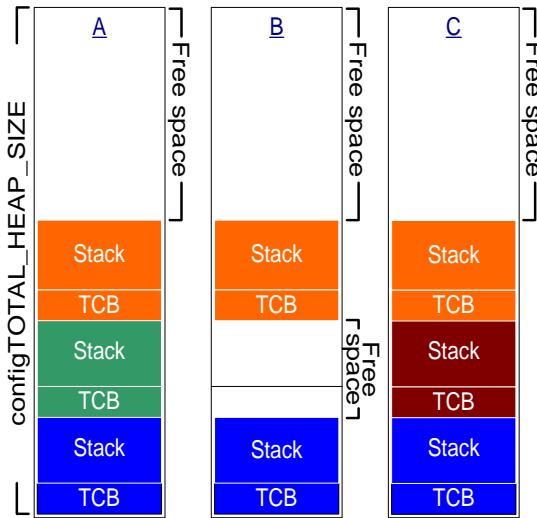

**Figure 6. RAM being allocated and freed from the `heap_2` array as tasks are created and deleted**

Figure 6 demonstrates how the best fit algorithm works when a task is created, deleted, and then created again. Referring to Figure 6:

1. A shows the array after three tasks have been created. A large free block remains at the top of the array.
2. B shows the array after one of the tasks has been deleted. The large free block at the top of the array remains. There are now also two smaller free blocks that were previously allocated to the TCB and stack of the deleted task.
3. C shows the situation after another task has been created. Creating the task has resulted in two calls to `pvPortMalloc()`, one to allocate a new TCB, and one to allocate the task stack. Tasks are created using the `xTaskCreate()` API function, which is

---

<sup>1</sup> This is an oversimplification, because `heap_2` stores information on the block sizes within the heap area, so the sum of the two split blocks will actually be less than 25.

described in section 3.4. The calls to `pvPortMalloc()` occur internally within `xTaskCreate()`.

Every TCB is exactly the same size, so the best fit algorithm ensures that the block of RAM previously allocated to the TCB of the deleted task is reused to allocate the TCB of the new task.

The size of the stack allocated to the newly created task is identical to that allocated to the previously deleted task, so the best fit algorithm ensures that the block of RAM previously allocated to the stack of the deleted task is reused to allocate the stack of the new task.

The larger unallocated block at the top of the array remains untouched.

`Heap_2` is not deterministic, but is faster than most standard library implementations of `malloc()` and `free()`.

### **Heap\_3**

`Heap_3.c` uses the standard library `malloc()` and `free()` functions, so the size of the heap is defined by the linker configuration, and the `configTOTAL_HEAP_SIZE` setting has no affect.

`Heap_3` makes `malloc()` and `free()` thread-safe by temporarily suspending the FreeRTOS scheduler. Thread safety, and scheduler suspension, are both topics that are covered in Chapter 7, Resource Management.

### **Heap\_4**

Like `heap_1` and `heap_2`, `heap_4` works by subdividing an array into smaller blocks. As before, the array is statically declared, and dimensioned by `configTOTAL_HEAP_SIZE`, so will make the application appear to consume a lot of RAM, even before any memory has actually been allocated from the array.


`Heap_4` uses a first fit algorithm to allocate memory. Unlike `heap_2`, `heap_4` combines (coalescences) adjacent free blocks of memory into a single larger block, which minimizes the risk of memory fragmentation.

The first fit algorithm ensures `pvPortMalloc()` uses the first free block of memory that is large enough to hold the number of bytes requested. For example, consider the scenario where:

- The heap contains three blocks of free memory that, in the order in which they appear in the array, are 5 bytes, 200 bytes, and 100 bytes, respectively.
- `pvPortMalloc()` is called to request 20 bytes of RAM.

The first free block of RAM into which the requested number of bytes will fit is the 200-byte block, so `pvPortMalloc()` splits the 200-byte block into one block of 20 bytes, and one block of 180 bytes<sup>1</sup>, before returning a pointer to the 20-byte block. The new 180-byte block remains available to future calls to `pvPortMalloc()`.

`Heap_4` combines (coalescences) adjacent free blocks into a single larger block, minimizing the risk of fragmentation, and making it suitable for applications that repeatedly allocate and free different sized blocks of RAM.

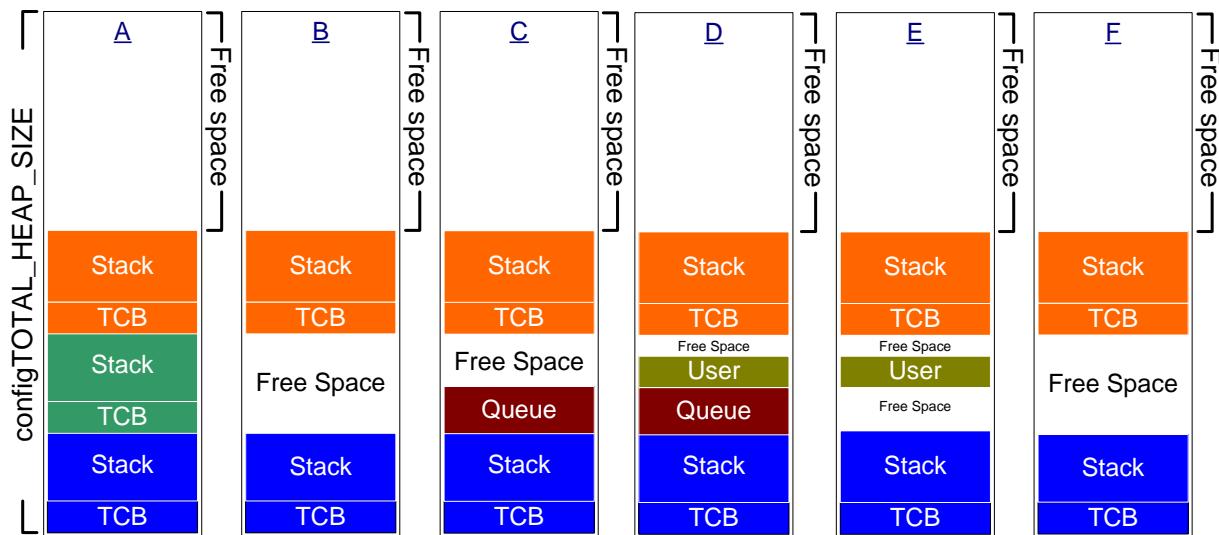

**Figure 7. RAM being allocated and freed from the `heap_4` array**

Figure 7 demonstrates how the `heap_4` first fit algorithm with memory coalescence works, as memory is allocated and freed. Referring to Figure 7:

1. A shows the array after three tasks have been created. A large free block remains at the top of the array.
2. B shows the array after one of the tasks has been deleted. The large free block at the top of the array remains. There is also a free block where the TCB and stack of the

---

<sup>1</sup> This is an oversimplification, because `heap_4` stores information on the block sizes within the heap area, so the sum of the two split blocks will actually be less than 200 bytes.

task that has been deleted were previously allocated. Note that, unlike when heap\_2 was demonstrated, the memory freed when the TCB was deleted, and the memory freed when the stack was deleted, does not remain as two separate free blocks, but is instead combined to create a larger single free block.

3. C shows the situation after a FreeRTOS queue has been created. Queues are created using the `xQueueCreate()` API function, which is described in section 4.3. `xQueueCreate()` calls `pvPortMalloc()` to allocate the RAM used by the queue. As heap\_4 uses a first fit algorithm, `pvPortMalloc()` will allocate RAM from the first free RAM block that is large enough to hold the queue, which in Figure 7, was the RAM freed when the task was deleted. The queue does not consume all the RAM in the free block however, so the block is split into two, and the unused portion remains available to future calls to `pvPortMalloc()`.
4. D shows the situation after `pvPortMalloc()` has been called directly from application code, rather than indirectly by calling a FreeRTOS API function. The user allocated block was small enough to fit in the first free block, which was the block between the memory allocated to the queue, and the memory allocated to the following TCB.

The memory freed when the task was deleted has now been split into three separate blocks; the first block holds the queue, the second block holds the user allocated memory, and the third block remains free.

5. E show the situation after the queue has been deleted, which automatically frees the memory that had been allocated to the deleted queue. There is now free memory on either side of the user allocated block.
6. F shows the situation after the user allocated memory has also been freed. The memory that had been used by the user allocated block has been combined with the free memory on either side to create a larger single free block.

Heap\_4 is not deterministic, but is faster than most standard library implementations of `malloc()` and `free()`.

## Setting a Start Address for the Array Used By Heap\_4

This section contains advanced level information. It is not necessary to read or understand this section in order to use Heap\_4.

Sometimes it is necessary for an application writer to place the array used by heap\_4 at a specific memory address. For example, the stack used by a FreeRTOS task is allocated from the heap, so it might be necessary to ensure the heap is located in fast internal memory, rather than slow external memory.

By default, the array used by heap\_4 is declared inside the heap\_4.c source file, and its start address is set automatically by the linker. However, if the configAPPLICATION\_ALLOCATED\_HEAP compile time configuration constant is set to 1 in FreeRTOSConfig.h, then the array must instead be declared by the application that is using FreeRTOS. If the array is declared as part of the application, then the application's writer can set its start address.

If configAPPLICATION\_ALLOCATED\_HEAP is set to 1 in FreeRTOSConfig.h, then a uint8\_t array called ucHeap, and dimensioned by the configTOTAL\_HEAP\_SIZE setting, must be declared in one of the application's source files.

The syntax required to place a variable at a specific memory address is dependent on the compiler in use, so refer to your compiler's documentation. Examples for two compilers follow:

- Listing 2 shows the syntax required by the GCC compiler to declare the array, and place the array in a memory section called .my\_heap.
- Listing 3 shows the syntax required by the IAR compiler to declare the array, and place the array at the absolute memory address 0x20000000.

---

```
uint8_t ucHeap[ configTOTAL_HEAP_SIZE ] __attribute__ ( ( section( ".my_heap" ) ) );
```

---

**Listing 2. Using GCC syntax to declare the array that will be used by heap\_4, and place the array in a memory section named .my\_heap**

---

```
uint8_t ucHeap[ configTOTAL_HEAP_SIZE ] @ 0x20000000;
```

---

**Listing 3. Using IAR syntax to declare the array that will be used by heap\_4, and place the array at the absolute address 0x20000000**

## Heap\_5

The algorithm used by heap\_5 to allocate and free memory is identical to that used by heap\_4. Unlike heap\_4, heap\_5 is not limited to allocating memory from a single statically declared array; heap\_5 can allocate memory from multiple and separated memory spaces. Heap\_5 is

useful when the RAM provided by the system on which FreeRTOS is running does not appear as a single contiguous (without space) block in the system's memory map.

At the time of writing, heap\_5 is the only provided memory allocation scheme that must be explicitly initialized before pvPortMalloc() can be called. Heap\_5 is initialized using the vPortDefineHeapRegions() API function. When heap\_5 is used, vPortDefineHeapRegions() must be called before any kernel objects (tasks, queues, semaphores, etc.) can be created.

### The vPortDefineHeapRegions() API Function

vPortDefineHeapRegions() is used to specify the start address and size of each separate memory area that together makes up the total memory used by heap\_5.

---

```
void vPortDefineHeapRegions( const HeapRegion_t * const pxHeapRegions );
```

---

**Listing 4. The vPortDefineHeapRegions() API function prototype**

Each separate memory areas is described by a structure of type HeapRegion\_t. A description of all the available memory areas is passed into vPortDefineHeapRegions() as an array of HeapRegion\_t structures.

---

```
typedef struct HeapRegion
{
    /* The start address of a block of memory that will be part of the heap.*/
    uint8_t *pucStartAddress;

    /* The size of the block of memory in bytes. */
    size_t xSizeInBytes;
} HeapRegion_t;
```


---

**Listing 5. The HeapRegion\_t structure**

**Table 5. vPortDefineHeapRegions() parameters**

Parameter Name/ Returned Value	Description
pxHeapRegions	<p>A pointer to the start of an array of HeapRegion_t structures. Each structure in the array describes the start address and length of a memory area that will be part of the heap when heap_5 is used.</p> <p>The HeapRegion_t structures in the array must be ordered by start address; the HeapRegion_t structure that describes the memory area with the lowest start address must be the first structure in the array, and the HeapRegion_t structure that describes the memory area with the highest start address must be the last structure in the array.</p> <p>The end of the array is marked by a HeapRegion_t structure that has its pucStartAddress member set to NULL.</p>

By way of example, consider the hypothetical memory map shown in Figure 8 **A**, which contains three separate blocks of RAM: RAM1, RAM2 and RAM3. It is assumed executable code is placed in read only memory, which is not shown.

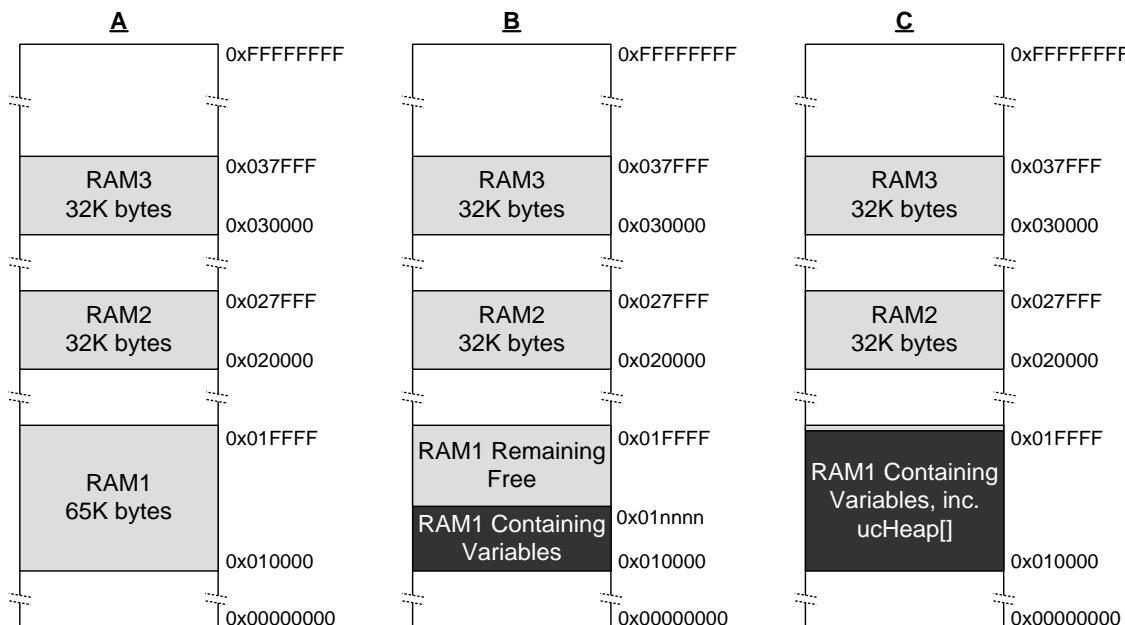

**Figure 8 Memory Map**

Listing 6 shows an array of HeapRegion\_t structures that together describe the three blocks of RAM in their entirety.

---

```
/* Define the start address and size of the three RAM regions. */
#define RAM1_START_ADDRESS      ( ( uint8_t * ) 0x00010000 )
#define RAM1_SIZE                ( 65 * 1024 )

#define RAM2_START_ADDRESS      ( ( uint8_t * ) 0x00020000 )
#define RAM2_SIZE                ( 32 * 1024 )

#define RAM3_START_ADDRESS      ( ( uint8_t * ) 0x00030000 )
#define RAM3_SIZE                ( 32 * 1024 )

/* Create an array of HeapRegion_t definitions, with an index for each of the three
RAM regions, and terminating the array with a NULL address. The HeapRegion_t
structures must appear in start address order, with the structure that contains the
lowest start address appearing first. */
const HeapRegion_t xHeapRegions[] =
{
    { RAM1_START_ADDRESS, RAM1_SIZE },
    { RAM2_START_ADDRESS, RAM2_SIZE },
    { RAM3_START_ADDRESS, RAM3_SIZE },
    { NULL,                 0 } /* Marks the end of the array. */
};

int main( void )
{
    /* Initialize heap_5. */
    vPortDefineHeapRegions( xHeapRegions );

    /* Add application code here. */
}
```

---

**Listing 6. An array of HeapRegion\_t structures that together describe the 3 regions of RAM in their entirety**

While Listing 6 correctly describes the RAM, it does not demonstrate a usable example, because it allocates all the RAM to the heap, leaving no RAM free for use by other variables.

When a project is built, the linking phase of the build process allocates a RAM address to each variable. The RAM available for use by the linker is normally described by a linker configuration file, such as a linker script. In Figure 8 **B** it is assumed the linker script included information on RAM1, but did not include information on RAM2 or RAM3. The linker has therefore placed variables in RAM1, leaving only the portion of RAM1 above address 0x0001nnnn available for use by heap\_5. The actual value of 0x0001nnnn will depend on the combined size of all the variables included in the application being linked. The linker has left all of RAM2 and all of RAM3 unused, leaving the whole of RAM2 and the whole of RAM3 available for use by heap\_5.

If the code shown in Listing 6 was used, the RAM allocated to heap\_5 below address 0x0001nnnn would overlap the RAM used to hold variables. To avoid that, the first HeapRegion\_t structure within the xHeapRegions[] array could use a start address of 0x0001nnnn, rather than a start address of 0x00010000. However, that is not a recommended solution because:

1. The start address might not be easy to determine.
2. The amount of RAM used by the linker might change in future builds, necessitating an update to the start address used in the HeapRegion\_t structure.
3. The build tools will not know, and therefore cannot warn the application writer, if the RAM used by the linker and the RAM used by heap\_5 overlap.

Listing 7 demonstrates a more convenient and maintainable example. It declares an array called ucHeap. ucHeap is a normal variable, so it becomes part of the data allocated to RAM1 by the linker. The first HeapRegion\_t structure in the xHeapRegions array describes the start address and size of ucHeap, so ucHeap becomes part of the memory managed by heap\_5. The size of ucHeap can be increased until the RAM used by the linker consumes all of RAM1, as shown in Figure 8 C.

---

```
/* Define the start address and size of the two RAM regions not used by the
linker. */
#define RAM2_START_ADDRESS      ( ( uint8_t * ) 0x00020000 )
#define RAM2_SIZE                ( 32 * 1024 )

#define RAM3_START_ADDRESS      ( ( uint8_t * ) 0x00030000 )
#define RAM3_SIZE                ( 32 * 1024 )

/* Declare an array that will be part of the heap used by heap_5. The array will be
placed in RAM1 by the linker. */
#define RAM1_HEAP_SIZE ( 30 * 1024 )
static uint8_t ucHeap[ RAM1_HEAP_SIZE ];

/* Create an array of HeapRegion_t definitions. Whereas in Listing 6 the first entry
described all of RAM1, so heap_5 will have used all of RAM1, this time the first
entry only describes the ucHeap array, so heap_5 will only use the part of RAM1 that
contains the ucHeap array. The HeapRegion_t structures must still appear in start
address order, with the structure that contains the lowest start address appearing
first. */
const HeapRegion_t xHeapRegions[] =
{
    { ucHeap,                  RAM1_HEAP_SIZE },
    { RAM2_START_ADDRESS,     RAM2_SIZE },
    { RAM3_START_ADDRESS,     RAM3_SIZE },
    { NULL,                   0 } /* Marks the end of the array. */
};
```

---

Listing 7. An array of HeapRegion\_t structures that describe all of RAM2, all of RAM3, but only part of RAM1

The advantages of the technique demonstrated in Listing 7 include:

1. It is not necessary to use a hard coded start address.
2. The address used in the HeapRegion\_t structure will be set automatically, by the linker, so will always be correct, even if the amount of RAM used by the linker changes in future builds.
3. It is not possible for RAM allocated to heap\_5 to overlap data placed into RAM1 by the linker.
4. The application will not link if ucHeap is too big.

## 2.3 Heap Related Utility Functions

---

### The xPortGetFreeHeapSize() API Function

The xPortGetFreeHeapSize() API function returns the number of free bytes in the heap at the time the function is called. It can be used to optimize the heap size. For example, if xPortGetFreeHeapSize() returns 2000 after all the kernel objects have been created, then the value of configTOTAL\_HEAP\_SIZE can be reduced by 2000.

xPortGetFreeHeapSize() is not available when heap\_3 is used.

---

```
size_t xPortGetFreeHeapSize( void );
```

---

**Listing 8. The xPortGetFreeHeapSize() API function prototype**

**Table 6. xPortGetFreeHeapSize() return value**

Parameter Name/ Returned Value	Description
Returned value	The number of bytes that remain unallocated in the heap at the time xPortGetFreeHeapSize() is called.

### The xPortGetMinimumEverFreeHeapSize() API Function

The xPortGetMinimumEverFreeHeapSize() API function returns the minimum number of unallocated bytes that have ever existed in the heap since the FreeRTOS application started executing.

The value returned by xPortGetMinimumEverFreeHeapSize() is an indication of how close the application has ever come to running out of heap space. For example, if xPortGetMinimumEverFreeHeapSize() returns 200, then, at some time since the application started executing, it came within 200 bytes of running out of heap space.

xPortGetMinimumEverFreeHeapSize() is only available when heap\_4 or heap\_5 is used.

---

```
size_t xPortGetMinimumEverFreeHeapSize( void );
```

---

**Listing 9. The xPortGetMinimumEverFreeHeapSize() API function prototype**

**Table 7. xPortGetMinimumEverFreeHeapSize() return value**

Parameter Name/ Returned Value	Description
Returned value	The minimum number of unallocated bytes that have existed in the heap since the FreeRTOS application started executing.

## Malloc Failed Hook Functions

pvPortMalloc() can be called directly from application code. It is also called within FreeRTOS source files each time an kernel object is created. Examples of kernel objects include tasks, queues, semaphores, and event groups—all of which are described in later chapters of this book.

Just like the standard library malloc() function, if pvPortMalloc() cannot return a block of RAM because a block of the requested size does not exist, then it will return NULL. If pvPortMalloc() is executed because the application writer is creating a kernel object, and the call to pvPortMalloc() returns NULL, then the kernel object will not be created.

All the example heap allocation schemes can be configured to call a hook (or callback) function if a call to pvPortMalloc() returns NULL.

If configUSE\_MALLOC\_FAILED\_HOOK is set to 1 in FreeRTOSConfig.h, then the application must provide a malloc failed hook function that has the name and prototype shown by Listing 10. The function can be implemented in any way that is appropriate for the application.

---

```
void vApplicationMallocFailedHook( void );
```

---

**Listing 10. The malloc failed hook function name and prototype.**



# Chapter 3

## Task Management

---

## 3.1 Chapter Introduction and Scope

---

### Scope

This chapter aims to give readers a good understanding of:

- How FreeRTOS allocates processing time to each task within an application.
- How FreeRTOS chooses which task should execute at any given time.
- How the relative priority of each task affects system behavior.
- The states that a task can exist in.

Readers should also gain a good understanding of:

- How to implement tasks.
- How to create one or more instances of a task.
- How to use the task parameter.
- How to change the priority of a task that has already been created.
- How to delete a task.
- How to implement periodic processing using a task (software timers are discussed in a later chapter).
- When the idle task will execute and how it can be used.

The concepts presented in this chapter are fundamental to understanding how to use FreeRTOS, and how FreeRTOS applications behave. This is, therefore, the most detailed chapter in the book.

## 3.2 Task Functions

---

Tasks are implemented as C functions. The only thing special about them is their prototype, which must return void and take a void pointer parameter. The prototype is demonstrated by Listing 11.

---

```
void ATTaskFunction( void *pvParameters );
```

---

**Listing 11. The task function prototype**

Each task is a small program in its own right. It has an entry point, will normally run forever within an infinite loop, and will not exit. The structure of a typical task is shown in Listing 12.

FreeRTOS tasks must not be allowed to return from their implementing function in any way—they must not contain a ‘return’ statement and must not be allowed to execute past the end of the function. If a task is no longer required, it should instead be explicitly deleted. This is also demonstrated in Listing 12.

A single task function definition can be used to create any number of tasks—each created task being a separate execution instance, with its own stack and its own copy of any automatic (stack) variables defined within the task itself.

---

```
void ATaskFunction( void *pvParameters )
{
    /* Variables can be declared just as per a normal function. Each instance of a task
     * created using this example function will have its own copy of the lVariableExample
     * variable. This would not be true if the variable was declared static - in which case
     * only one copy of the variable would exist, and this copy would be shared by each
     * created instance of the task. (The prefixes added to variable names are described in
     * section 1.5, Data Types and Coding Style Guide.) */
    int32_t lVariableExample = 0;

    /* A task will normally be implemented as an infinite loop. */
    for( ;; )
    {
        /* The code to implement the task functionality will go here. */

    }

    /* Should the task implementation ever break out of the above loop, then the task
     * must be deleted before reaching the end of its implementing function. The NULL
     * parameter passed to the vTaskDelete() API function indicates that the task to be
     * deleted is the calling (this) task. The convention used to name API functions is
     * described in section 0, Projects that use a FreeRTOS version older than V9.0.0
     * must build one of the heap_n.c files. From FreeRTOS V9.0.0 a heap_n.c file is only
     * required if configSUPPORT_DYNAMIC_ALLOCATION is set to 1 in FreeRTOSConfig.h or if
     * configSUPPORT_DYNAMIC_ALLOCATION is left undefined. Refer to Chapter 2, Heap Memory
     * Management, for more information.
     * Data Types and Coding Style Guide. */
    vTaskDelete( NULL );
}
```

---

Listing 12. The structure of a typical task function

### 3.3 Top Level Task States

---

An application can consist of many tasks. If the processor running the application contains a single core, then only one task can be executing at any given time. This implies that a task can exist in one of two states, Running and Not Running. This simplistic model is considered first—but keep in mind that it is an over simplification. Later in the chapter it is shown that the Not Running state actually contains a number of sub-states.

When a task is in the Running state the processor is executing the task's code. When a task is in the Not Running state, the task is dormant, its status having been saved ready for it to resume execution the next time the scheduler decides it should enter the Running state. When a task resumes execution, it does so from the instruction it was about to execute before it last left the Running state.

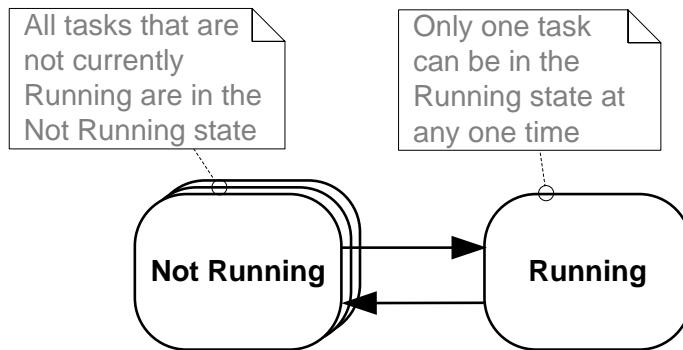


Figure 9. Top level task states and transitions

A task transitioned from the Not Running state to the Running state is said to have been 'switched in' or 'swapped in'. Conversely, a task transitioned from the Running state to the Not Running state is said to have been 'switched out' or 'swapped out'. The FreeRTOS scheduler is the only entity that can switch a task in and out.

## 3.4 Creating Tasks

---

### The xTaskCreate() API Function

FreeRTOS V9.0.0 also includes the `xTaskCreateStatic()` function, which allocates the memory required to create a task statically at compile time: Tasks are created using the FreeRTOS `xTaskCreate()` API function. This is probably the most complex of all the API functions, so it is unfortunate that it is the first encountered, but tasks must be mastered first as they are the most fundamental component of a multitasking system. All the examples that accompany this book make use of the `xTaskCreate()` function, so there are plenty of examples to reference.

Section 1.5, Data Types and Coding Style Guide, describes the data types and naming conventions used.

---

```
BaseType_t xTaskCreate( TaskFunction_t pvTaskCode,
                        const char * const pcName,
                        uint16_t usStackDepth,
                        void *pvParameters,
                        UBaseType_t uxPriority,
                        TaskHandle_t *pxCreatedTask );
```

---

**Listing 13. The `xTaskCreate()` API function prototype**

**Table 8. `xTaskCreate()` parameters and return value**

Parameter Name/ Returned Value	Description
pvTaskCode	Tasks are simply C functions that never exit and, as such, are normally implemented as an infinite loop. The <code>pvTaskCode</code> parameter is simply a pointer to the function that implements the task (in effect, just the name of the function).

**Table 8. xTaskCreate() parameters and return value**

Parameter Name/ Returned Value	Description
pcName	<p>A descriptive name for the task. This is not used by FreeRTOS in any way. It is included purely as a debugging aid. Identifying a task by a human readable name is much simpler than attempting to identify it by its handle.</p> <p>The application-defined constant configMAX_TASK_NAME_LEN defines the maximum length a task name can take—including the NULL terminator. Supplying a string longer than this maximum will result in the string being silently truncated.</p>

**Table 8. xTaskCreate() parameters and return value**

Parameter Name/ Returned Value	Description
usStackDepth	<p>Each task has its own unique stack that is allocated by the kernel to the task when the task is created. The usStackDepth value tells the kernel how large to make the stack.</p> <p>The value specifies the number of words the stack can hold, not the number of bytes. For example, if the stack is 32-bits wide and usStackDepth is passed in as 100, then 400 bytes of stack space will be allocated (<math>100 * 4</math> bytes). The stack depth multiplied by the stack width must not exceed the maximum value that can be contained in a variable of type <code>uint16_t</code>.</p> <p>The size of the stack used by the Idle task is defined by the application-defined constant <code>configMINIMAL_STACK_SIZE</code><sup>1</sup>. The value assigned to this constant in the FreeRTOS demo application for the processor architecture being used is the minimum recommended for any task. If your task uses a lot of stack space, then you must assign a larger value.</p> <p>There is no easy way to determine the stack space required by a task. It is possible to calculate, but most users will simply assign what they think is a reasonable value, then use the features provided by FreeRTOS to ensure that the space allocated is indeed adequate, and that RAM is not being wasted unnecessarily. Section 12.3, Stack Overflow, contains information on how to query the maximum stack space that has actually been used by a task.</p>
pvParameters	Task functions accept a parameter of type pointer to void ( <code>void*</code> ). The value assigned to pvParameters is the value passed into the task. Some examples in this book demonstrate how the parameter can be used.

---

<sup>1</sup> This is the only way the FreeRTOS source code uses the `configMINIMAL_STACK_SIZE` setting, although the constant is also used inside demo applications to help make the demos portable across multiple processor architectures.

**Table 8. xTaskCreate() parameters and return value**

Parameter Name/ Returned Value	Description
uxPriority	<p>Defines the priority at which the task will execute. Priorities can be assigned from 0, which is the lowest priority, to (configMAX_PRIORITIES – 1), which is the highest priority. configMAX_PRIORITIES is a user defined constant that is described in section 3.5.</p> <p>Passing a uxPriority value above (configMAX_PRIORITIES – 1) will result in the priority assigned to the task being capped silently to the maximum legitimate value.</p>
pxCreatedTask	<p>pxCreatedTask can be used to pass out a handle to the task being created. This handle can then be used to reference the task in API calls that, for example, change the task priority or delete the task.</p> <p>If your application has no use for the task handle, then pxCreatedTask can be set to NULL.</p>
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>This indicates that the task has been created successfully.</p> <ol style="list-style-type: none"><li>2. pdFAIL</li></ol> <p>This indicates that the task has not been created because there is insufficient heap memory available for FreeRTOS to allocate enough RAM to hold the task data structures and stack.</p> <p>Chapter 2 provides more information on heap memory management.</p>

### **Example 1. Creating tasks**

This example demonstrates the steps needed to create two simple tasks, then start the tasks executing. The tasks simply print out a string periodically, using a crude null loop to create the

period delay. Both tasks are created at the same priority, and are identical except for the string they print out—see Listing 14 and Listing 15 for their respective implementations.

---

```
void vTask1( void *pvParameters )
{
const char *pcTaskName = "Task 1 is running\r\n";
volatile uint32_t ul; /* volatile to ensure ul is not optimized away. */

/* As per most tasks, this task is implemented in an infinite loop. */
for( ;; )
{
    /* Print out the name of this task. */
    vPrintString( pcTaskName );

    /* Delay for a period. */
    for( ul = 0; ul < mainDELAY_LOOP_COUNT; ul++ )
    {
        /* This loop is just a very crude delay implementation. There is
        nothing to do in here. Later examples will replace this crude
        loop with a proper delay/sleep function. */
    }
}
}
```

---

**Listing 14. Implementation of the first task used in Example 1**

---

```
void vTask2( void *pvParameters )
{
const char *pcTaskName = "Task 2 is running\r\n";
volatile uint32_t ul; /* volatile to ensure ul is not optimized away. */

/* As per most tasks, this task is implemented in an infinite loop. */
for( ;; )
{
    /* Print out the name of this task. */
    vPrintString( pcTaskName );

    /* Delay for a period. */
    for( ul = 0; ul < mainDELAY_LOOP_COUNT; ul++ )
    {
        /* This loop is just a very crude delay implementation. There is
        nothing to do in here. Later examples will replace this crude
        loop with a proper delay/sleep function. */
    }
}
}
```

---

**Listing 15. Implementation of the second task used in Example 1**

---

The `main()` function creates the tasks before starting the scheduler—see Listing 16 for its implementation.

```

int main( void )
{
    /* Create one of the two tasks. Note that a real application should check
    the return value of the xTaskCreate() call to ensure the task was created
    successfully. */
    xTaskCreate(      vTask1,    /* Pointer to the function that implements the task. */
                    "Task 1", /* Text name for the task. This is to facilitate
                               debugging only. */
                    1000,     /* Stack depth - small microcontrollers will use much
                               less stack than this. */
                    NULL,     /* This example does not use the task parameter. */
                    1,         /* This task will run at priority 1. */
                    NULL );   /* This example does not use the task handle. */


    /* Create the other task in exactly the same way and at the same priority. */
    xTaskCreate( vTask2, "Task 2", 1000, NULL, 1, NULL );

    /* Start the scheduler so the tasks start executing. */
    vTaskStartScheduler();

    /* If all is well then main() will never reach here as the scheduler will
    now be running the tasks. If main() does reach here then it is likely that
    there was insufficient heap memory available for the idle task to be created.
    Chapter 2 provides more information on heap memory management. */
    for( ; );
```

**Listing 16. Starting the Example 1 tasks**

Executing the example produces the output shown in Figure 10.

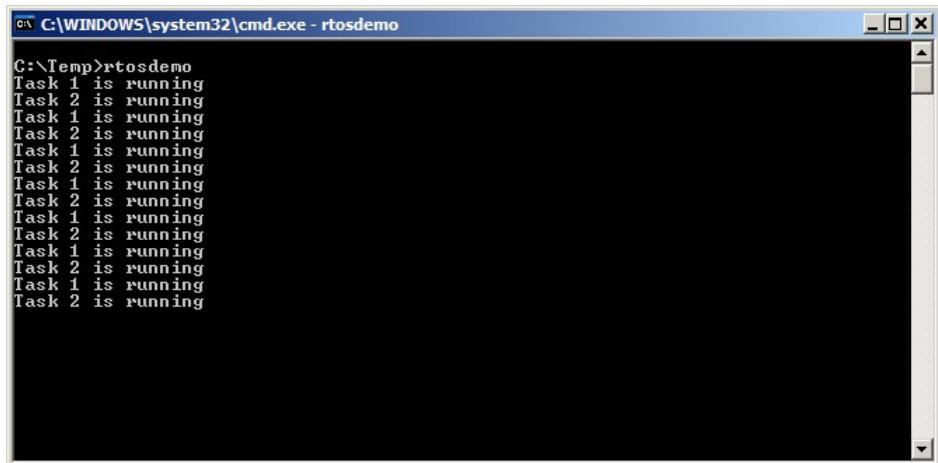


**Figure 10.** The output produced when Example 1 is executed<sup>1</sup>

<sup>1</sup> The screen shot shows each task printing out its message exactly once before the next task executes. This is an artificial scenario that results from using the FreeRTOS Windows simulator. The Windows simulator is not truly real time. Also writing to the Windows console takes a relatively long time and results in a chain of Windows system calls. Executing the same code on a genuine embedded target with a fast and non-blocking print function may result in each task printing its string many times before being switched out to allow the other task to run.

Figure 10 shows the two tasks appearing to execute simultaneously; however, as both tasks are executing on the same processor core, this cannot be the case. In reality, both tasks are rapidly entering and exiting the Running state. Both tasks are running at the same priority, and so share time on the same processor core. Their actual execution pattern is shown in Figure 11.

The arrow along the bottom of Figure 11 shows the passing of time from time  $t_1$  onwards. The colored lines show which task is executing at each point in time—for example, Task 1 is executing between time  $t_1$  and time  $t_2$ .

Only one task can exist in the Running state at any one time. So, as one task enters the Running state (the task is switched in), the other enters the Not Running state (the task is switched out).

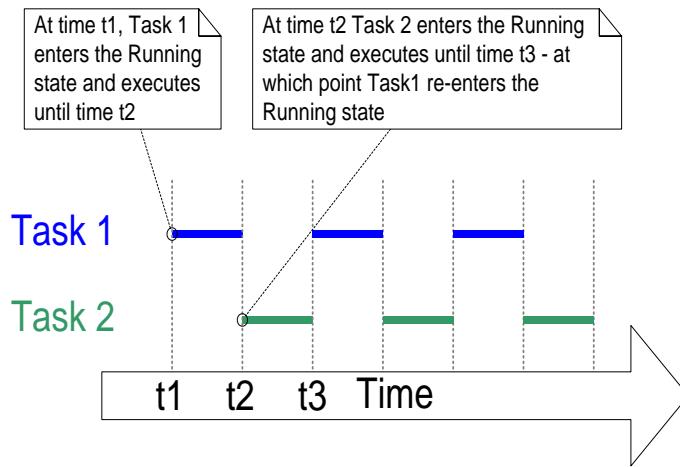

**Figure 11. The actual execution pattern of the two Example 1 tasks**

Example 1 created both tasks from within `main()`, prior to starting the scheduler. It is also possible to create a task from within another task. For example, Task 2 could have been created from within Task 1, as shown by Listing 17.

```
void vTask1( void *pvParameters )
{
const char *pcTaskName = "Task 1 is running\r\n";
volatile uint32_t ul; /* volatile to ensure ul is not optimized away. */

/* If this task code is executing then the scheduler must already have
been started. Create the other task before entering the infinite loop. */
xTaskCreate( vTask2, "Task 2", 1000, NULL, 1, NULL );

for( ;; )
{
    /* Print out the name of this task. */
    vPrintString( pcTaskName );

    /* Delay for a period. */
    for( ul = 0; ul < mainDELAY_LOOP_COUNT; ul++ )
    {
        /* This loop is just a very crude delay implementation. There is
        nothing to do in here. Later examples will replace this crude
        loop with a proper delay/sleep function. */
    }
}
}
```

---

**Listing 17. Creating a task from within another task after the scheduler has started**

### **Example 2. Using the task parameter**

The two tasks created in Example 1 are almost identical, the only difference between them being the text string they print out. This duplication can be removed by, instead, creating two instances of a single task implementation. The task parameter can then be used to pass into each task the string that it should print out.

Listing 18 contains the code of the single task function (vTaskFunction) used by Example 2. This single function replaces the two task functions (vTask1 and vTask2) used in Example 1. Note how the task parameter is cast to a char \* to obtain the string the task should print out.

---

```
void vTaskFunction( void *pvParameters )
{
    char *pcTaskName;
    volatile uint32_t ul; /* volatile to ensure ul is not optimized away. */

    /* The string to print out is passed in via the parameter.  Cast this to a
    character pointer. */
    pcTaskName = ( char * ) pvParameters;

    /* As per most tasks, this task is implemented in an infinite loop. */
    for( ; ; )
    {
        /* Print out the name of this task. */
        vPrintString( pcTaskName );

        /* Delay for a period. */
        for( ul = 0; ul < mainDELAY_LOOP_COUNT; ul++ )
        {
            /* This loop is just a very crude delay implementation. There is
            nothing to do in here. Later exercises will replace this crude
            loop with a proper delay/sleep function. */
        }
    }
}
```

---

**Listing 18.** The single task function used to create two tasks in Example 2

Even though there is now only one task implementation (`vTaskFunction`), more than one instance of the defined task can be created. Each created instance will execute independently under the control of the FreeRTOS scheduler.

Listing 19 shows how the `pvParameters` parameter to the `xTaskCreate()` function is used to pass the text string into the task.

```
/* Define the strings that will be passed in as the task parameters. These are
defined const and not on the stack to ensure they remain valid when the tasks are
executing. */
static const char *pcTextForTask1 = "Task 1 is running\r\n";
static const char *pcTextForTask2 = "Task 2 is running\r\n";

int main( void )
{
    /* Create one of the two tasks. */
    xTaskCreate(     vTaskFunction,
                    "Task 1",
                    1000,
                    (void*)pcTextForTask1,
                    1,
                    NULL );
                    /* Pointer to the function that
                     implements the task. */
                    /* Text name for the task. This is to
                     facilitate debugging only. */
                    /* Stack depth - small microcontrollers
                     will use much less stack than this. */
                    /* Pass the text to be printed into the
                     task using the task parameter. */
                    /* This task will run at priority 1. */
                    /* The task handle is not used in this
                     example. */

    /* Create the other task in exactly the same way. Note this time that multiple
     tasks are being created from the SAME task implementation (vTaskFunction). Only
     the value passed in the parameter is different. Two instances of the same
     task are being created. */
    xTaskCreate( vTaskFunction, "Task 2", 1000, (void*)pcTextForTask2, 1, NULL );

    /* Start the scheduler so the tasks start executing. */
    vTaskStartScheduler();

    /* If all is well then main() will never reach here as the scheduler will
     now be running the tasks. If main() does reach here then it is likely that
     there was insufficient heap memory available for the idle task to be created.
     Chapter 2 provides more information on heap memory management. */
    for( ; );
}
```

---

**Listing 19. The main() function for Example 2.**

The output from Example 2 is exactly as per that shown for example 1 in Figure 10.

## 3.5 Task Priorities

---

The uxPriority parameter of the xTaskCreate() API function assigns an initial priority to the task being created. The priority can be changed after the scheduler has been started by using the vTaskPrioritySet() API function.

The maximum number of priorities available is set by the application-defined configMAX\_PRIORITIES compile time configuration constant within FreeRTOSConfig.h. Low numeric priority values denote low-priority tasks, with priority 0 being the lowest priority possible. Therefore, the range of available priorities is 0 to (configMAX\_PRIORITIES – 1). Any number of tasks can share the same priority—ensuring maximum design flexibility.

The FreeRTOS scheduler can use one of two methods to decide which task will be in the Running state. The maximum value to which configMAX\_PRIORITIES can be set depends on the method used:

1. Generic Method

The generic method is implemented in C, and can be used with all the FreeRTOS architecture ports.

When the generic method is used, FreeRTOS does not limit the maximum value to which configMAX\_PRIORITIES can be set. However, it is always advisable to keep the configMAX\_PRIORITIES value at the minimum necessary, because the higher its value, the more RAM will be consumed, and the longer the worst case execution time will be.

The generic method will be used if configUSE\_PORT\_OPTIMISED\_TASK\_SELECTION is set to 0 in FreeRTOSConfig.h, or if configUSE\_PORT\_OPTIMISED\_TASK\_SELECTION is left undefined, or if the generic method is the only method provided for the FreeRTOS port in use.

2. Architecture Optimized Method

The architecture optimized method uses a small amount of assembler code, and is faster than the generic method. The configMAX\_PRIORITIES setting does not affect the worst case execution time.

If the architecture optimized method is used then configMAX\_PRIORITIES cannot be greater than 32. As with the generic method, it is advisable to keep configMAX\_PRIORITIES at the minimum necessary, as the higher its value, the more RAM will be consumed.

The architecture optimized method will be used if configUSE\_PORT\_OPTIMISED\_TASK\_SELECTION is set to 1 in FreeRTOSConfig.h.

Not all FreeRTOS ports provide an architecture optimized method.

The FreeRTOS scheduler will always ensure that the highest priority task that is able to run is the task selected to enter the Running state. Where more than one task of the same priority is able to run, the scheduler will transition each task into and out of the Running state, in turn.

## 3.6 Time Measurement and the Tick Interrupt

---

Section 3.12, Scheduling Algorithms, describes an optional feature called ‘time slicing’. Time slicing was used in the examples presented so far, and is the behavior observed in the output they produced. In the examples, both tasks were created at the same priority, and both tasks were always able to run. Therefore, each task executed for a ‘time slice’, entering the Running state at the start of a time slice, and exiting the Running state at the end of a time slice. In Figure 11, the time between t1 and t2 equals a single time slice.

To be able to select the next task to run, the scheduler itself must execute at the end of each time slice<sup>1</sup>. A periodic interrupt, called the ‘tick interrupt’, is used for this purpose. The length of the time slice is effectively set by the tick interrupt frequency, which is configured by the application-defined `configTICK_RATE_HZ` compile time configuration constant within `FreeRTOSConfig.h`. For example, if `configTICK_RATE_HZ` is set to 100 (Hz), then the time slice will be 10 milliseconds. The time between two tick interrupts is called the ‘tick period’. One time slice equals one tick period.

Figure 11 can be expanded to show the execution of the scheduler itself in the sequence of execution. This is shown in Figure 12, in which the top line shows when the scheduler is executing, and the thin arrows show the sequence of execution from a task to the tick interrupt, then from the tick interrupt back to a different task.

The optimal value for `configTICK_RATE_HZ` is dependent on the application being developed, although a value of 100 is typical.

---

<sup>1</sup> It is important to note that the end of a time slice is not the only place that the scheduler can select a new task to run; as will be demonstrated throughout this book, the scheduler will also select a new task to run immediately after the currently executing task enters the Blocked state, or when an interrupt moves a higher priority task into the Ready state.

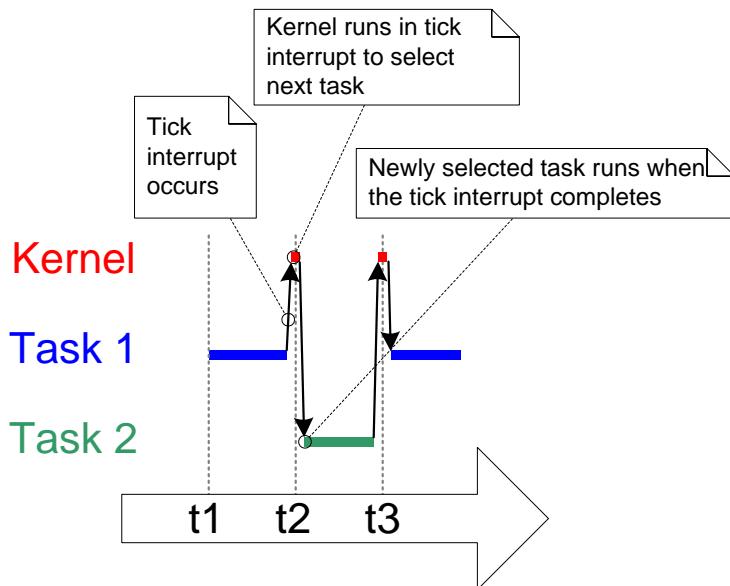


Figure 12. The execution sequence expanded to show the tick interrupt executing

FreeRTOS API calls always specify time in multiples of tick periods, which are often referred to simply as ‘ticks’. The pdMS\_TO\_TICKS() macro converts a time specified in milliseconds into a time specified in ticks. The resolution available depends on the defined tick frequency, and pdMS\_TO\_TICKS() cannot be used if the tick frequency is above 1KHz (if configTICK\_RATE\_HZ is greater than 1000). Listing 20 shows how to use pdMS\_TO\_TICKS() to convert a time specified as 200 milliseconds into an equivalent time specified in ticks.

---

```
/* pdMS_TO_TICKS() takes a time in milliseconds as its only parameter, and evaluates to the equivalent time in tick periods. This example shows xTimeInTicks being set to the number of tick periods that are equivalent to 200 milliseconds. */
TickType_t xTimeInTicks = pdMS_TO_TICKS( 200 );
```

---

Listing 20. Using the pdMS\_TO\_TICKS() macro to convert 200 milliseconds into an equivalent time in tick periods

*Note: It is not recommended to specify times in ticks directly within the application, but instead to use the pdMS\_TO\_TICKS() macro to specify times in milliseconds, and in so doing, ensuring times specified within the application do not change if the tick frequency is changed.*

The ‘tick count’ value is the total number of tick interrupts that have occurred since the scheduler was started, assuming the tick count has not overflowed. User applications do not have to consider overflows when specifying delay periods, as time consistency is managed internally by FreeRTOS.

Section 3.12, Scheduling Algorithms, describes configuration constants that affect when the scheduler will select a new task to run, and when a tick interrupt will execute.

### Example 3. Experimenting with priorities

The scheduler will always ensure that the highest priority task that is able to run is the task selected to enter the Running state. In our examples so far, two tasks have been created at the same priority, so both entered and exited the Running state in turn. This example looks at what happens when the priority of one of the two tasks created in Example 2 is changed. This time, the first task will be created at priority 1, and the second at priority 2. The code to create the tasks is shown in Listing 21. The single function that implements both tasks has not changed; it still simply prints out a string periodically, using a null loop to create a delay.

---

```
/* Define the strings that will be passed in as the task parameters. These are
defined const and not on the stack to ensure they remain valid when the tasks are
executing. */
static const char *pcTextForTask1 = "Task 1 is running\r\n";
static const char *pcTextForTask2 = "Task 2 is running\r\n";

int main( void )
{
    /* Create the first task at priority 1. The priority is the second to last
    parameter. */
    xTaskCreate( vTaskFunction, "Task 1", 1000, (void*)pcTextForTask1, 1, NULL );

    /* Create the second task at priority 2, which is higher than a priority of 1.
    The priority is the second to last parameter. */
    xTaskCreate( vTaskFunction, "Task 2", 1000, (void*)pcTextForTask2, 2, NULL );

    /* Start the scheduler so the tasks start executing. */
    vTaskStartScheduler();

    /* Will not reach here. */
    return 0;
}
```

---

**Listing 21. Creating two tasks at different priorities**


The output produced by Example 3 is shown in Figure 13.

The scheduler will always select the highest priority task that is able to run. Task 2 has a higher priority than Task 1 and is always able to run; therefore, Task 2 is the only task to ever enter the Running state. As Task 1 never enters the Running state, it never prints out its string. Task 1 is said to be ‘starved’ of processing time by Task 2.

**Figure 13.** Running both tasks at different priorities

Task 2 is always able to run because it never has to wait for anything—it is either cycling around a null loop, or printing to the terminal.

Figure 14 shows the execution sequence for Example 3.

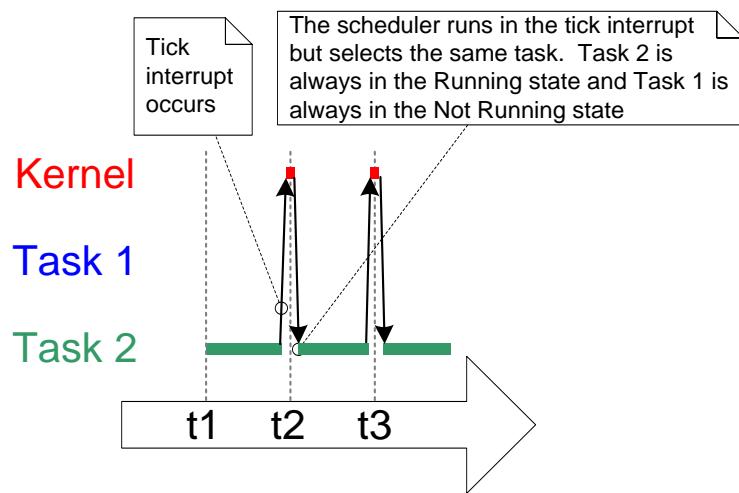

**Figure 14.** The execution pattern when one task has a higher priority than the other

## 3.7 Expanding the ‘Not Running’ State

---

So far, the created tasks have always had processing to perform and have never had to wait for anything—as they never have to wait for anything, they are always able to enter the Running state. This type of ‘continuous processing’ task has limited usefulness, because they can only be created at the very lowest priority. If they run at any other priority, they will prevent tasks of lower priority ever running at all.

To make the tasks useful they must be re-written to be event-driven. An event-driven task has work (processing) to perform only after the occurrence of the event that triggers it, and is not able to enter the Running state before that event has occurred. The scheduler always selects the highest priority task that is able to run. High priority tasks not being able to run means that the scheduler cannot select them and must, instead, select a lower priority task that is able to run. Therefore, using event-driven tasks means that tasks can be created at different priorities without the highest priority tasks starving all the lower priority tasks of processing time.

### The Blocked State

A task that is waiting for an event is said to be in the ‘Blocked’ state, which is a sub-state of the Not Running state.

Tasks can enter the Blocked state to wait for two different types of event:

1. Temporal (time-related) events—the event being either a delay period expiring, or an absolute time being reached. For example, a task may enter the Blocked state to wait for 10 milliseconds to pass.
2. Synchronization events—where the events originate from another task or interrupt. For example, a task may enter the Blocked state to wait for data to arrive on a queue. Synchronization events cover a broad range of event types.

FreeRTOS queues, binary semaphores, counting semaphores, mutexes, recursive mutexes, event groups and direct to task notifications can all be used to create synchronization events. All these features are covered in future chapters of this book.

It is possible for a task to block on a synchronization event with a timeout, effectively blocking on both types of event simultaneously. For example, a task may choose to wait for a

maximum of 10 milliseconds for data to arrive on a queue. The task will leave the Blocked state if either data arrives within 10 milliseconds, or 10 milliseconds pass with no data arriving.

## The Suspended State

'Suspended' is also a sub-state of Not Running. Tasks in the Suspended state are not available to the scheduler. The only way into the Suspended state is through a call to the vTaskSuspend() API function, the only way out being through a call to the vTaskResume() or xTaskResumeFromISR() API functions. Most applications do not use the Suspended state.

## The Ready State

Tasks that are in the Not Running state but are not Blocked or Suspended are said to be in the Ready state. They are able to run, and therefore 'ready' to run, but are not currently in the Running state.

## Completing the State Transition Diagram

Figure 15 expands on the previous over-simplified state diagram to include all the Not Running sub-states described in this section. The tasks created in the examples so far have not used the Blocked or Suspended states; they have only transitioned between the Ready state and the Running state—highlighted by the bold lines in Figure 15.

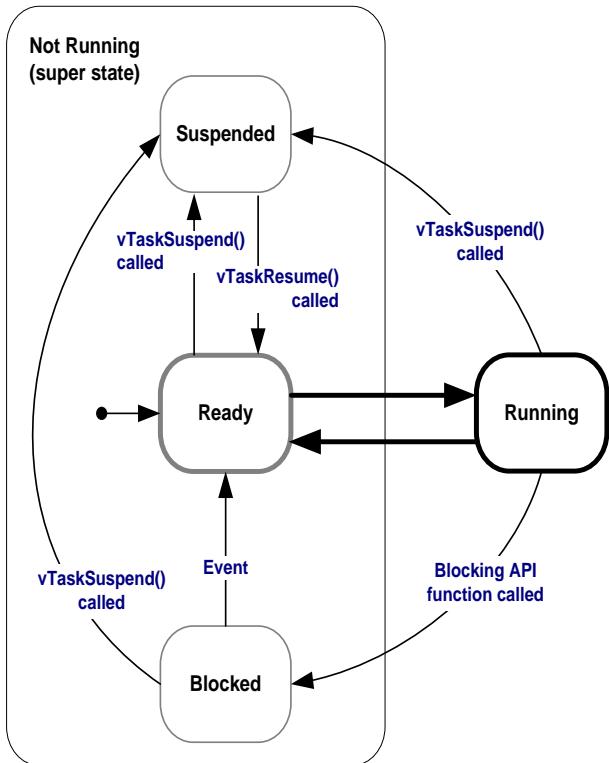


Figure 15. Full task state machine

#### Example 4. Using the Blocked state to create a delay

All the tasks created in the examples presented so far have been ‘periodic’—they have delayed for a period and printed out their string, before delaying once more, and so on. The delay has been generated very crudely using a null loop—the task effectively polled an incrementing loop counter until it reached a fixed value. Example 3 clearly demonstrated the disadvantage of this method. The higher priority task remained in the Running state while it executed the null loop, ‘starving’ the lower priority task of any processing time.

There are several other disadvantages to any form of polling, not least of which is its inefficiency. During polling, the task does not really have any work to do, but it still uses maximum processing time, and so wastes processor cycles. Example 4 corrects this behavior by replacing the polling null loop with a call to the `vTaskDelay()` API function, the prototype for which is shown in Listing 22. The new task definition is shown in Listing 23. Note that the `vTaskDelay()` API function is available only when `INCLUDE_vTaskDelay` is set to 1 in `FreeRTOSConfig.h`.

`vTaskDelay()` places the calling task into the Blocked state for a fixed number of tick interrupts. The task does not use any processing time while it is in the Blocked state, so the task only uses processing time when there is actually work to be done.

```
void vTaskDelay( TickType_t xTicksToDelay );
```

---

**Listing 22. The vTaskDelay() API function prototype**

**Table 9. vTaskDelay() parameters**

Parameter Name	Description
xTicksToDelay	<p>The number of tick interrupts that the calling task will remain in the Blocked state before being transitioned back into the Ready state.</p> <p>For example, if a task called vTaskDelay( 100 ) when the tick count was 10,000, then it would immediately enter the Blocked state, and remain in the Blocked state until the tick count reached 10,100.</p> <p>The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks. For example, calling vTaskDelay( pdMS_TO_TICKS( 100 ) ) will result in the calling task remaining in the Blocked state for 100 milliseconds.</p>

---

```

void vTaskFunction( void *pvParameters )
{
char *pcTaskName;
const TickType_t xDelay250ms = pdMS_TO_TICKS( 250 );

/* The string to print out is passed in via the parameter. Cast this to a
character pointer. */
pcTaskName = ( char * ) pvParameters;

/* As per most tasks, this task is implemented in an infinite loop. */
for( ; ; )
{
    /* Print out the name of this task. */
    vPrintString( pcTaskName );


    /* Delay for a period. This time a call to vTaskDelay() is used which places
the task into the Blocked state until the delay period has expired. The
parameter takes a time specified in 'ticks', and the pdMS_TO_TICKS() macro
is used (where the xDelay250ms constant is declared) to convert 250
milliseconds into an equivalent time in ticks. */
    vTaskDelay( xDelay250ms );
}
}

```

---

**Listing 23. The source code for the example task after the null loop delay has been replaced by a call to vTaskDelay()**


Even though the two tasks are still being created at different priorities, both will now run. The output of Example 4, which is shown in Figure 16, confirms the expected behavior.

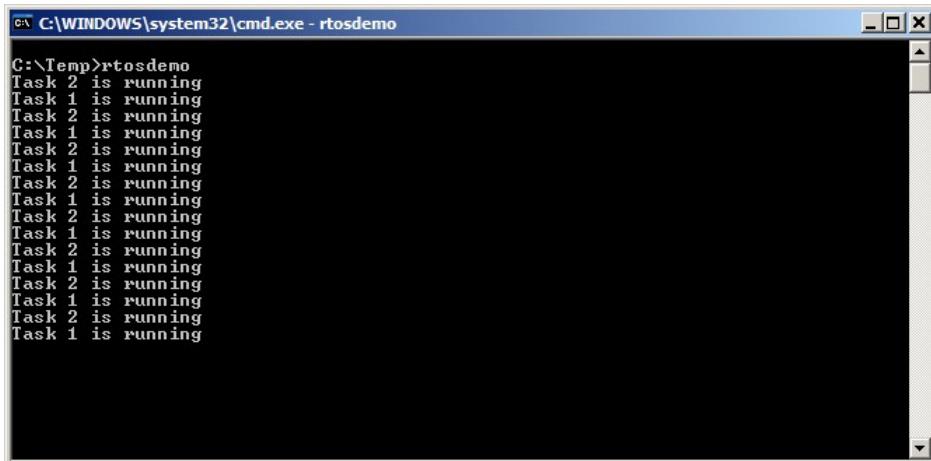

**Figure 16. The output produced when Example 4 is executed**

The execution sequence shown in Figure 17 explains why both tasks run, even though they are created at different priorities. The execution of the scheduler itself is omitted for simplicity.

The idle task is created automatically when the scheduler is started, to ensure there is always at least one task that is able to run (at least one task in the Ready state). Section 3.8, The Idle Task and the Idle Task Hook, describes the Idle task in more detail.

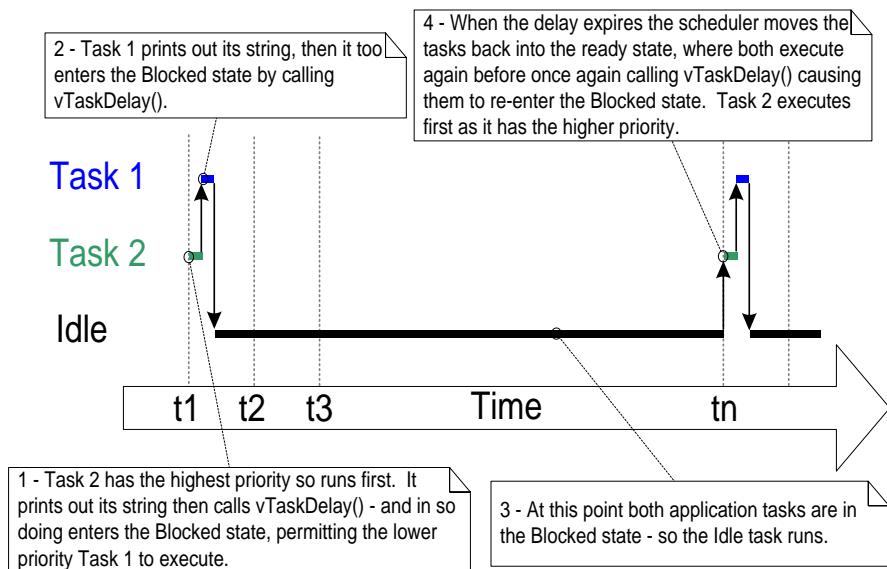


**Figure 17. The execution sequence when the tasks use `vTaskDelay()` in place of the NULL loop**

Only the implementation of the two tasks has changed, not their functionality. Comparing Figure 17 with Figure 12 demonstrates clearly that this functionality is being achieved in a much more efficient manner.

Figure 12 shows the execution pattern when the tasks use a null loop to create a delay—so are always able to run, and as a result use one hundred percent of the available processor time between them. Figure 17 shows the execution pattern when the tasks enter the Blocked state for the entirety of their delay period, so use processor time only when they actually have work that needs to be performed (in this case simply a message to be printed out), and as a result only use a tiny fraction of the available processing time.

In the Figure 17 scenario, each time the tasks leave the Blocked state they execute for a fraction of a tick period before re-entering the Blocked state. Most of the time there are no application tasks that are able to run (no application tasks in the Ready state) and, therefore, no application tasks that can be selected to enter the Running state. While this is the case, the idle task will run. The amount of processing time allocated to the idle is a measure of the spare processing capacity in the system. Using an RTOS can significantly increase the spare processing capacity simply by allowing an application to be completely event driven.

The bold lines in Figure 18 show the transitions performed by the tasks in Example 4, with each now transitioning through the Blocked state before being returned to the Ready state.

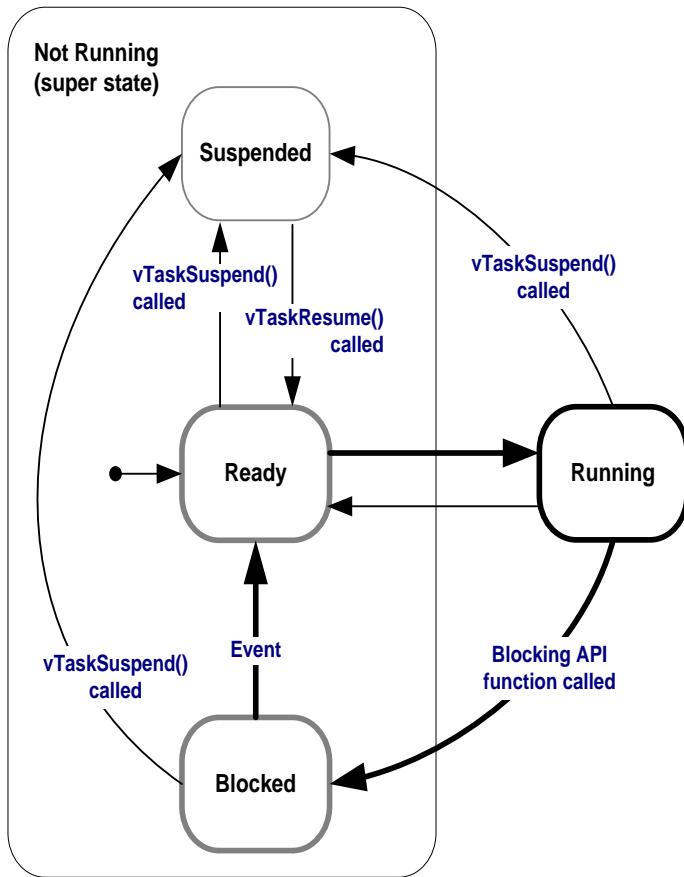

**Figure 18.** Bold lines indicate the state transitions performed by the tasks in Example 4

### The vTaskDelayUntil() API Function

vTaskDelayUntil() is similar to vTaskDelay(). As just demonstrated, the vTaskDelay() parameter specifies the number of tick interrupts that should occur between a task calling vTaskDelay(), and the same task once again transitioning out of the Blocked state. The length of time the task remains in the blocked state is specified by the vTaskDelay() parameter, but the time at which the task leaves the blocked state is relative to the time at which vTaskDelay() was called.

The parameters to vTaskDelayUntil() specify, instead, the exact tick count value at which the calling task should be moved from the Blocked state into the Ready state. vTaskDelayUntil() is the API function that should be used when a fixed execution period is required (where you want your task to execute periodically with a fixed frequency), as the time at which the calling task is unblocked is absolute, rather than relative to when the function was called (as is the case with vTaskDelay()).

---

```
void vTaskDelayUntil( TickType_t * pxPreviousWakeTime, TickType_t xTimeIncrement );
```

---

**Listing 24. vTaskDelayUntil() API function prototype**

**Table 10. vTaskDelayUntil() parameters**

Parameter Name	Description
pxPreviousWakeTime	This parameter is named on the assumption that vTaskDelayUntil() is being used to implement a task that executes periodically and with a fixed frequency. In this case, pxPreviousWakeTime holds the time at which the task last left the Blocked state (was ‘woken’ up). This time is used as a reference point to calculate the time at which the task should next leave the Blocked state.  The variable pointed to by pxPreviousWakeTime is updated automatically within the vTaskDelayUntil() function; it would not normally be modified by the application code, but must be initialized to the current tick count before it is used for the first time. Listing 25 demonstrates how the initialization is performed.
xTimeIncrement	This parameter is also named on the assumption that vTaskDelayUntil() is being used to implement a task that executes periodically and with a fixed frequency—the frequency being set by the xTimeIncrement value.  xTimeIncrement is specified in ‘ticks’. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.

### **Example 5. Converting the example tasks to use vTaskDelayUntil()**

The two tasks created in Example 4 are periodic tasks, but using vTaskDelay() does not guarantee that the frequency at which they run is fixed, as the time at which the tasks leave the Blocked state is relative to when they call vTaskDelay(). Converting the tasks to use vTaskDelayUntil() instead of vTaskDelay() solves this potential problem.

---

```
void vTaskFunction( void *pvParameters )
{
    char *pcTaskName;
    TickType_t xLastWakeTime;

    /* The string to print out is passed in via the parameter.  Cast this to a
       character pointer. */
    pcTaskName = ( char * ) pvParameters;

    /* The xLastWakeTime variable needs to be initialized with the current tick
       count.  Note that this is the only time the variable is written to explicitly.
       After this xLastWakeTime is automatically updated within vTaskDelayUntil(). */
    xLastWakeTime = xTaskGetTickCount();

    /* As per most tasks, this task is implemented in an infinite loop. */
    for( ; ; )
    {
        /* Print out the name of this task. */
        vPrintString( pcTaskName );

        /* This task should execute every 250 milliseconds exactly.  As per
           the vTaskDelay() function, time is measured in ticks, and the
           pdMS_TO_TICKS() macro is used to convert milliseconds into ticks.
           xLastWakeTime is automatically updated within vTaskDelayUntil(), so is not
           explicitly updated by the task. */
        vTaskDelayUntil( &xLastWakeTime, pdMS_TO_TICKS( 250 ) );
    }
}
```

---

**Listing 25.** The implementation of the example task using vTaskDelayUntil()

The output produced by Example 5 is exactly as per that shown for Example 4 in Figure 16.

### Example 6. Combining blocking and non-blocking tasks

Previous examples have examined the behavior of both polling and blocking tasks in isolation. This example re-enforces the stated expected system behavior by demonstrating an execution sequence when the two schemes are combined, as follows.

1. Two tasks are created at priority 1. These do nothing other than continuously print out a string.

These tasks never make any API function calls that could cause them to enter the Blocked state, so are always in either the Ready or the Running state. Tasks of this nature are called ‘continuous processing’ tasks, as they always have work to do (albeit rather trivial work, in this case). The source for the continuous processing tasks is shown in Listing 26.

2. A third task is then created at priority 2, so above the priority of the other two tasks. The third task also just prints out a string, but this time periodically, so uses the

vTaskDelayUntil() API function to place itself into the Blocked state between each print iteration.

The source for the periodic task is shown in Listing 27.

---

```
void vContinuousProcessingTask( void *pvParameters )
{
char *pcTaskName;

/* The string to print out is passed in via the parameter.  Cast this to a
character pointer. */
pcTaskName = ( char * ) pvParameters;

/* As per most tasks, this task is implemented in an infinite loop. */
for( ;; )
{
    /* Print out the name of this task.  This task just does this repeatedly
without ever blocking or delaying. */
    vPrintString( pcTaskName );
}
}
```

---

Listing 26. The continuous processing task used in Example 6

---

```
void vPeriodicTask( void *pvParameters )
{
TickType_t xLastWakeTime;
const TickType_t xDelay3ms = pdMS_TO_TICKS( 3 );

/* The xLastWakeTime variable needs to be initialized with the current tick
count. Note that this is the only time the variable is explicitly written to.
After this xLastWakeTime is managed automatically by the vTaskDelayUntil()
API function. */
xLastWakeTime = xTaskGetTickCount();

/* As per most tasks, this task is implemented in an infinite loop. */
for( ;; )
{
    /* Print out the name of this task. */
    vPrintString( "Periodic task is running\r\n" );

    /* The task should execute every 3 milliseconds exactly - see the
declaration of xDelay3ms in this function. */
    vTaskDelayUntil( &xLastWakeTime, xDelay3ms );
}
}
```

---

Listing 27. The periodic task used in Example 6

Figure 19 shows the output produced by Example 6, with an explanation of the observed behavior given by the execution sequence shown in Figure 20.


The screenshot shows a command prompt window titled 'C:\Windows\system32\cmd.exe'. The window contains the following text output:

```

Continuous task 2 running
Continuous task 2 running
Periodic task is running
Continuous task 1 running
Continuous task 2 running
Continuous task 2 running
Continuous task 2 running
Continuous task 2 running
Continuous task 1 running
Periodic task is running
Continuous task 2 running
Continuous task 2 running

```

**Figure 19.** The output produced when Example 6 is executed

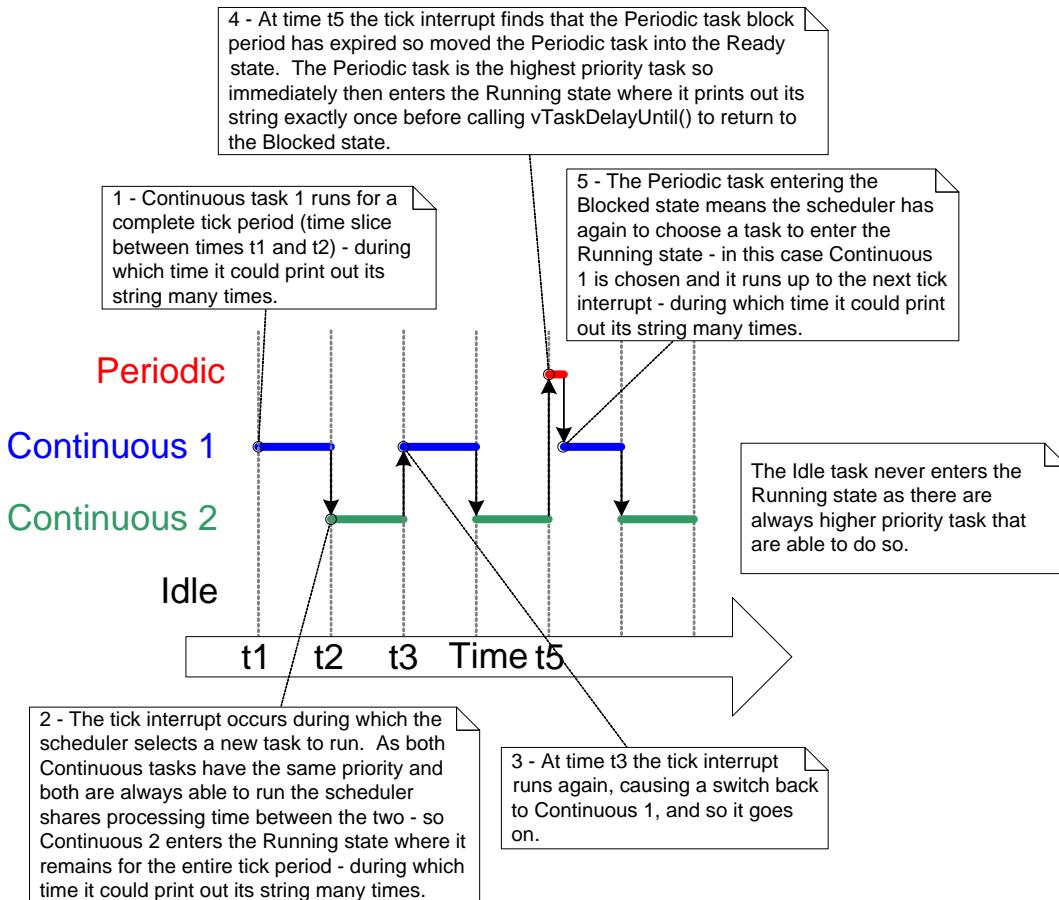

**Figure 20.** The execution pattern of Example 6

## 3.8 The Idle Task and the Idle Task Hook

---

The tasks created in Example 4 spend most of their time in the Blocked state. While in this state, they are not able to run, so cannot be selected by the scheduler.

There must always be at least one task that can enter the Running state<sup>1</sup>. To ensure this is the case, an Idle task is automatically created by the scheduler when vTaskStartScheduler() is called. The idle task does very little more than sit in a loop—so, like the tasks in the original first examples, it is always able to run.

The idle task has the lowest possible priority (priority zero), to ensure it never prevents a higher priority application task from entering the Running state—although there is nothing to prevent application designers creating tasks at, and therefore sharing, the idle task priority, if desired. The configIDLE\_SHOULD\_YIELD compile time configuration constant in FreeRTOSConfig.h can be used to prevent the Idle task from consuming processing time that would be more productively allocated to applications tasks. configIDLE\_SHOULD\_YIELD is described in section 3.12, Scheduling Algorithms.

Running at the lowest priority ensures the Idle task is transitioned out of the Running state as soon as a higher priority task enters the Ready state. This can be seen at time  $t_n$  in Figure 17, where the Idle task is immediately swapped out to allow Task 2 to execute at the instant Task 2 leaves the Blocked state. Task 2 is said to have pre-empted the idle task. Pre-emption occurs automatically, and without the knowledge of the task being pre-empted.

*Note: If an application uses the vTaskDelete() API function then it is essential that the Idle task is not starved of processing time. This is because the Idle task is responsible for cleaning up kernel resources after a task has been deleted.*

### Idle Task Hook Functions

It is possible to add application specific functionality directly into the idle task through the use of an idle hook (or idle callback) function—a function that is called automatically by the idle task once per iteration of the idle task loop.

---

<sup>1</sup> This is the case even when the special low power features of FreeRTOS are being used, in which case the microcontroller on which FreeRTOS is executing will be placed into a low power mode if none of the tasks created by the application are able to execute.

Common uses for the Idle task hook include:

- Executing low priority, background, or continuous processing functionality.
- Measuring the amount of spare processing capacity. (The idle task will run only when all higher priority application tasks have no work to perform; so measuring the amount of processing time allocated to the idle task provides a clear indication of how much processing time is spare.)
- Placing the processor into a low power mode, providing an easy and automatic method of saving power whenever there is no application processing to be performed (although the power saving that can be achieved using this method is less than can be achieved by using the tick-less idle mode described in Chapter 10, Low Power Support).

### **Limitations on the Implementation of Idle Task Hook Functions**

Idle task hook functions must adhere to the following rules.

1. An Idle task hook function must never attempt to block or suspend.

*Note: Blocking the idle task in any way could cause a scenario where no tasks are available to enter the Running state.*

2. If the application makes use of the vTaskDelete() API function, then the Idle task hook must always return to its caller within a reasonable time period. This is because the Idle task is responsible for cleaning up kernel resources after a task has been deleted. If the idle task remains permanently in the Idle hook function, then this clean-up cannot occur.

Idle task hook functions must have the name and prototype shown by Listing 28.

---

```
void vApplicationIdleHook( void );
```

---

**Listing 28. The idle task hook function name and prototype**

### **Example 7. Defining an idle task hook function**

The use of blocking vTaskDelay() API calls in Example 4 created a lot of idle time—time when the Idle task is executing because both application tasks are in the Blocked state. Example 7

makes use of this idle time through the addition of an Idle hook function, the source for which is shown in Listing 29.

---

```
/* Declare a variable that will be incremented by the hook function. */
volatile uint32_t ulIdleCycleCount = 0UL;

/* Idle hook functions MUST be called vApplicationIdleHook(), take no parameters,
and return void. */
void vApplicationIdleHook( void )
{
    /* This hook function does nothing but increment a counter. */
    ulIdleCycleCount++;
}
```

---

**Listing 29. A very simple Idle hook function**

configUSE\_IDLE\_HOOK must be set to 1 in FreeRTOSConfig.h for the idle hook function to get called.

The function that implements the created tasks is modified slightly to print out the ulIdleCycleCount value, as shown in Listing 30.

---

```
void vTaskFunction( void *pvParameters )
{
char *pcTaskName;
const TickType_t xDelay250ms = pdMS_TO_TICKS( 250 );

/* The string to print out is passed in via the parameter. Cast this to a
character pointer. */
pcTaskName = ( char * ) pvParameters;

/* As per most tasks, this task is implemented in an infinite loop. */
for( ;; )
{
    /* Print out the name of this task AND the number of times ulIdleCycleCount
has been incremented. */
    vPrintStringAndNumber( pcTaskName, ulIdleCycleCount );

    /* Delay for a period of 250 milliseconds. */
    vTaskDelay( xDelay250ms );
}
}
```

---

**Listing 30. The source code for the example task now prints out the ulIdleCycleCount value**

The output produced by Example 7 is shown in Figure 21. It shows the idle task hook function is called approximately 4 million times between each iteration of the application tasks (the number of iterations is dependent on the speed of the hardware on which the demo is executed).

```
C:\Temp>rtosdemo
Task 2 is running
ullidleCycleCount = 0
Task 1 is running
ullidleCycleCount = 0
Task 2 is running
ullidleCycleCount = 3869504
Task 1 is running
ullidleCycleCount = 3869504
Task 2 is running
ullidleCycleCount = 8564623
Task 1 is running
ullidleCycleCount = 8564623
Task 2 is running
ullidleCycleCount = 13181489
Task 1 is running
ullidleCycleCount = 13181489
Task 2 is running
ullidleCycleCount = 17838406
Task 1 is running
ullidleCycleCount = 17838406
```

Figure 21. The output produced when Example 7 is executed

## 3.9 Changing the Priority of a Task

---

### The vTaskPrioritySet() API Function

The vTaskPrioritySet() API function can be used to change the priority of any task after the scheduler has been started. Note that the vTaskPrioritySet() API function is available only when INCLUDE\_vTaskPrioritySet is set to 1 in FreeRTOSConfig.h.

---

```
void vTaskPrioritySet( TaskHandle_t pxTask, UBaseType_t uxNewPriority );
```

---

**Listing 31. The vTaskPrioritySet() API function prototype**

**Table 11. vTaskPrioritySet() parameters**

Parameter Name	Description
pxTask	The handle of the task whose priority is being modified (the subject task)—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.  A task can change its own priority by passing NULL in place of a valid task handle.
uxNewPriority	The priority to which the subject task is to be set. This is capped automatically to the maximum available priority of (configMAX_PRIORITIES – 1), where configMAX_PRIORITIES is a compile time constant set in the FreeRTOSConfig.h header file.

### The uxTaskPriorityGet() API Function

The uxTaskPriorityGet() API function can be used to query the priority of a task. Note that the uxTaskPriorityGet() API function is available only when INCLUDE\_uxTaskPriorityGet is set to 1 in FreeRTOSConfig.h.

---

```
UBaseType_t uxTaskPriorityGet( TaskHandle_t pxTask );
```

---

**Listing 32. The uxTaskPriorityGet() API function prototype**

**Table 12. uxTaskPriorityGet() parameters and return value**

Parameter Name/ Return Value	Description
pxTask	The handle of the task whose priority is being queried (the subject task)—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.  A task can query its own priority by passing NULL in place of a valid task handle.
Returned value	The priority currently assigned to the task being queried.

### **Example 8. Changing task priorities**

The scheduler will always select the highest Ready state task as the task to enter the Running state. Example 8 demonstrates this by using the vTaskPrioritySet() API function to change the priority of two tasks relative to each other.

Example 8 creates two tasks at two different priorities. Neither task makes any API function calls that could cause it to enter the Blocked state, so both are always in either the Ready state or the Running state. Therefore, the task with the highest relative priority will always be the task selected by the scheduler to be in the Running state.

Example 8 behaves as follows:

1. Task 1 (Listing 33) is created with the highest priority, so is guaranteed to run first. Task 1 prints out a couple of strings before raising the priority of Task 2 (Listing 34) to above its own priority.
2. Task 2 starts to run (enters the Running state) as soon as it has the highest relative priority. Only one task can be in the Running state at any one time, so when Task 2 is in the Running state, Task 1 is in the Ready state.
3. Task 2 prints out a message before setting its own priority back down to below that of Task 1.
4. Task 2 setting its priority back down means Task 1 is once again the highest priority task, so Task 1 re-enters the Running state, forcing Task 2 back into the Ready state.

```
void vTask1( void *pvParameters )
{
    UBaseType_t uxPriority;

    /* This task will always run before Task 2 as it is created with the higher
     priority. Neither Task 1 nor Task 2 ever block so both will always be in
     either the Running or the Ready state.

    Query the priority at which this task is running - passing in NULL means
    "return the calling task's priority". */
    uxPriority = uxTaskPriorityGet( NULL );

    for( ;; )
    {
        /* Print out the name of this task. */
        vPrintString( "Task 1 is running\r\n" );

        /* Setting the Task 2 priority above the Task 1 priority will cause
         Task 2 to immediately start running (as then Task 2 will have the higher
         priority of the two created tasks). Note the use of the handle to task
         2 (xTask2Handle) in the call to vTaskPrioritySet(). Listing 35 shows how
         the handle was obtained. */
        vPrintString( "About to raise the Task 2 priority\r\n" );
        vTaskPrioritySet( xTask2Handle, ( uxPriority + 1 ) );

        /* Task 1 will only run when it has a priority higher than Task 2.
         Therefore, for this task to reach this point, Task 2 must already have
         executed and set its priority back down to below the priority of this
         task. */
    }
}
```

---

**Listing 33. The implementation of Task 1 in Example 8**

---

```
void vTask2( void *pvParameters )
{
    UBaseType_t uxPriority;

    /* Task 1 will always run before this task as Task 1 is created with the
     higher priority. Neither Task 1 nor Task 2 ever block so will always be
     in either the Running or the Ready state.

    Query the priority at which this task is running - passing in NULL means
    "return the calling task's priority". */
    uxPriority = uxTaskPriorityGet( NULL );

    for( ;; )
    {
        /* For this task to reach this point Task 1 must have already run and
         set the priority of this task higher than its own.

        Print out the name of this task. */
        vPrintString( "Task 2 is running\r\n" );

        /* Set the priority of this task back down to its original value.
         Passing in NULL as the task handle means "change the priority of the
         calling task". Setting the priority below that of Task 1 will cause
         Task 1 to immediately start running again - pre-empting this task. */
        vPrintString( "About to lower the Task 2 priority\r\n" );
        vTaskPrioritySet( NULL, ( uxPriority - 2 ) );
    }
}
```

---

**Listing 34. The implementation of Task 2 in Example 8**

Each task can both query and set its own priority without the use of a valid task handle, by simply using NULL, instead. A task handle is required only when a task wishes to reference a task other than itself, such as when Task 1 changes the priority of Task 2. To allow Task 1 to do this, the Task 2 handle is obtained and saved when Task 2 is created, as highlighted in the comments in Listing 35.

```
/* Declare a variable that is used to hold the handle of Task 2. */
TaskHandle_t xTask2Handle = NULL;

int main( void )
{
    /* Create the first task at priority 2.  The task parameter is not used
    and set to NULL.  The task handle is also not used so is also set to NULL. */
    xTaskCreate( vTask1, "Task 1", 1000, NULL, 2, NULL );
    /* The task is created at priority 2 ____^ */


    /* Create the second task at priority 1 - which is lower than the priority
    given to Task 1. Again the task parameter is not used so is set to NULL -
    BUT this time the task handle is required so the address of xTask2Handle
    is passed in the last parameter. */
    xTaskCreate( vTask2, "Task 2", 1000, NULL, 1, &xTask2Handle );
    /* The task handle is the last parameter _____ ^^^^^^^^^^ */

    /* Start the scheduler so the tasks start executing. */
    vTaskStartScheduler();

    /* If all is well then main() will never reach here as the scheduler will
    now be running the tasks. If main() does reach here then it is likely there
    was insufficient heap memory available for the idle task to be created.
    Chapter 2 provides more information on heap memory management. */
    for( ; );
}
```

**Listing 35. The implementation of main() for Example 8**

Figure 22 demonstrates the sequence in which the Example 8 tasks execute, with the resultant output shown in Figure 23.

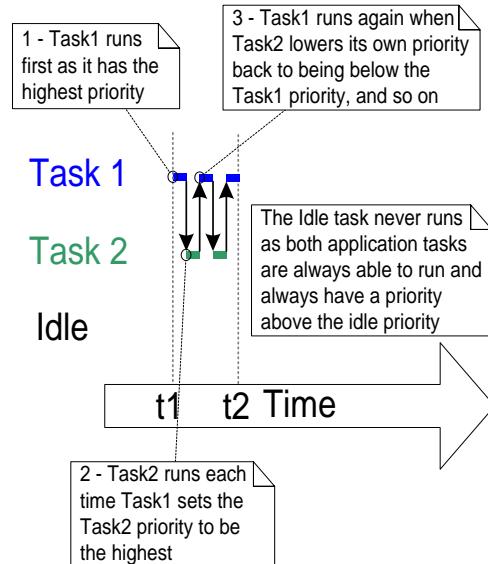

**Figure 22. The sequence of task execution when running Example 8**

```
C:\Windows\system32\cmd.exe
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
Task2 is running
<about to lower the Task2 priority
Task1 is running
<about to raise the Task2 priority
```

Figure 23. The output produced when Example 8 is executed

## 3.10 Deleting a Task

---

### The vTaskDelete() API Function

A task can use the vTaskDelete() API function to delete itself, or any other task. Note that the vTaskDelete() API function is available only when INCLUDE\_vTaskDelete is set to 1 in FreeRTOSConfig.h.

Deleted tasks no longer exist and cannot enter the Running state again.

It is the responsibility of the idle task to free memory allocated to tasks that have since been deleted. Therefore, it is important that applications using the vTaskDelete() API function do not completely starve the idle task of all processing time.

*Note: Only memory allocated to a task by the kernel itself will be freed automatically when the task is deleted. Any memory or other resource that the implementation of the task allocated must be freed explicitly.*

---

```
void vTaskDelete( TaskHandle_t pxTaskToDelete );
```

---

**Listing 36. The vTaskDelete() API function prototype**

**Table 13. vTaskDelete() parameters**

Parameter Name/ Return Value	Description
pxTaskToDelete	The handle of the task that is to be deleted (the subject task)—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.  A task can delete itself by passing NULL in place of a valid task handle.

## Example 9. Deleting tasks

This is a very simple example that behaves as follows.

1. Task 1 is created by main() with priority 1. When it runs, it creates Task 2 at priority 2. Task 2 is now the highest priority task, so it starts to execute immediately. The source for main() is shown in Listing 37, and the source for Task 1 is shown in Listing 38.
2. Task 2 does nothing other than delete itself. It could delete itself by passing NULL to vTaskDelete() but instead, for demonstration purposes, it uses its own task handle. The source for Task 2 is shown in Listing 39.
3. When Task 2 has been deleted, Task 1 is again the highest priority task, so continues executing—at which point it calls vTaskDelay() to block for a short period.
4. The Idle task executes while Task 1 is in the blocked state and frees the memory that was allocated to the now deleted Task 2.
5. When Task 1 leaves the blocked state it again becomes the highest priority Ready state task and so pre-empts the Idle task. When it enters the Running state it creates Task 2 again, and so it goes on.

---

```
int main( void )
{
    /* Create the first task at priority 1. The task parameter is not used
     * so is set to NULL. The task handle is also not used so likewise is set
     * to NULL. */
    xTaskCreate( vTask1, "Task 1", 1000, NULL, 1, NULL );
    /* The task is created at priority 1 ____^ */

    /* Start the scheduler so the task starts executing. */
    vTaskStartScheduler();

    /* main() should never reach here as the scheduler has been started. */
    for( ;; );
}
```

---

Listing 37. The implementation of main() for Example 9

```
TaskHandle_t xTask2Handle = NULL;

void vTask1( void *pvParameters )
{
const TickType_t xDelay100ms = pdMS_TO_TICKS( 100UL );

    for( ;; )
    {
        /* Print out the name of this task. */
        vPrintString( "Task 1 is running\r\n" );

        /* Create task 2 at a higher priority. Again the task parameter is not
        used so is set to NULL - BUT this time the task handle is required so
        the address of xTask2Handle is passed as the last parameter. */
        xTaskCreate( vTask2, "Task 2", 1000, NULL, 2, &xTask2Handle );
        /* The task handle is the last parameter _____ ^^^^^^ */

        /* Task 2 has/had the higher priority, so for Task 1 to reach here Task 2
        must have already executed and deleted itself. Delay for 100
        milliseconds. */
        vTaskDelay( xDelay100ms );
    }
}
```


---

**Listing 38. The implementation of Task 1 for Example 9**


```
void vTask2( void *pvParameters )
{
    /* Task 2 does nothing but delete itself. To do this it could call vTaskDelete()
    using NULL as the parameter, but instead, and purely for demonstration purposes,
    it calls vTaskDelete() passing its own task handle. */
    vPrintString( "Task 2 is running and about to delete itself\r\n" );
    vTaskDelete( xTask2Handle );
}
```

---

**Listing 39. The implementation of Task 2 for Example 9**

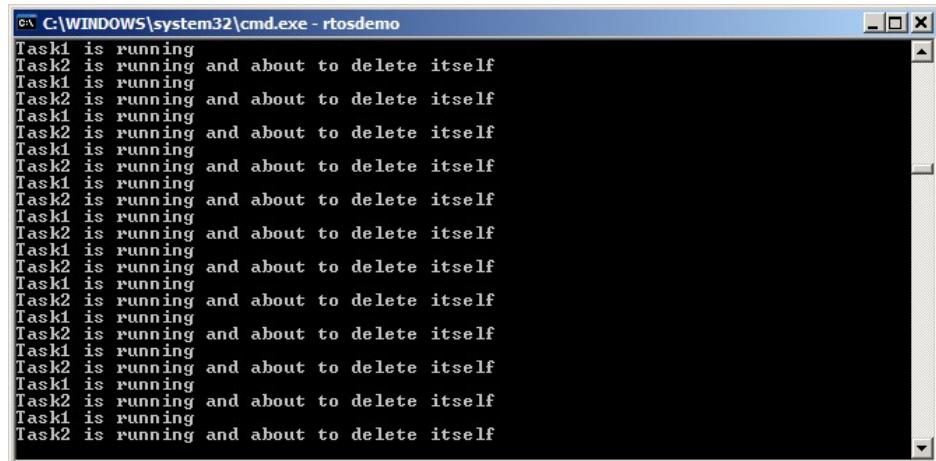

**Figure 24. The output produced when Example 9 is executed**

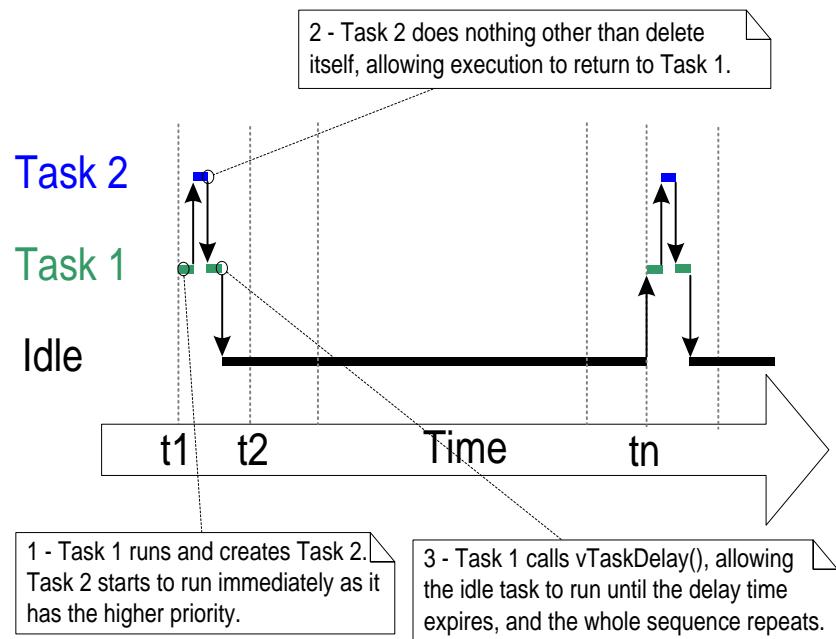

**Figure 25. The execution sequence for example 9**

## 3.11 Thread Local Storage

---

TBD. This section will be written prior to final publication.

## 3.12 Scheduling Algorithms

---

### A Recap of Task States and Events

The task that is actually running (using processing time) is in the Running state. On a single core processor there can only be one task in the Running state at any given time.

Tasks that are not actually running, but are not in either the Blocked state or the Suspended state, are in the Ready state. Tasks that are in the Ready state are available to be selected by the scheduler as the task to enter the Running state. The scheduler will always choose the highest priority Ready state task to enter the Running state.

Tasks can wait in the Blocked state for an event and are automatically moved back to the Ready state when the event occurs. Temporal events occur at a particular time, for example, when a block time expires, and are normally used to implement periodic or timeout behavior. Synchronization events occur when a task or interrupt service routine sends information using a task notification, queue, event group, or one of the many types of semaphore. They are generally used to signal asynchronous activity, such as data arriving at a peripheral.

### Configuring the Scheduling Algorithm

The scheduling algorithm is the software routine that decides which Ready state task to transition into the Running state.

All the examples so far have used the same scheduling algorithm, but the algorithm can be changed using the configUSE\_PREEMPTION and configUSE\_TIME\_SLICING configuration constants. Both constants are defined in FreeRTOSConfig.h.

A third configuration constant, configUSE\_TICKLESS\_IDLE, also affects the scheduling algorithm, as its use can result in the tick interrupt being turned off completely for extended periods. configUSE\_TICKLESS\_IDLE is an advanced option provided specifically for use in applications that must minimize their power consumption. configUSE\_TICKLESS\_IDLE is described in Chapter 10, Low Power Support. The descriptions provided in this section assume configUSE\_TICKLESS\_IDLE is set to 0, which is the default setting if the constant is left undefined.

In all possible configurations the FreeRTOS scheduler will ensure tasks that share a priority are selected to enter the Running state in turn. This ‘take it in turn’ policy is often referred to

as ‘Round Robin Scheduling’. A Round Robin scheduling algorithm does not guarantee time is shared equally between tasks of equal priority, only that Ready state tasks of equal priority will enter the Running state in turn.

### Prioritized Pre-emptive Scheduling with Time Slicing

The configuration shown in Table 14 sets the FreeRTOS scheduler to use a scheduling algorithm called ‘Fixed Priority Pre-emptive Scheduling with Time Slicing’, which is the scheduling algorithm used by most small RTOS applications, and the algorithm used by all the examples presented in this book so far. A description of the terminology used in the algorithm’s name is provided in Table 15.


**Table 14. The FreeRTOSConfig.h settings that configure the kernel to use Prioritized Pre-emptive Scheduling with Time Slicing**

Constant	Value
configUSE_PREEMPTION	1
configUSE_TIME_SLICING	1

**Table 15. An explanation of the terms used to describe the scheduling policy**

Term	Definition
Fixed Priority	Scheduling algorithms described as ‘Fixed Priority’ do not change the priority assigned to the tasks being scheduled, but also do not prevent the tasks themselves from changing their own priority, or that of other tasks.
Pre-emptive	Pre-emptive scheduling algorithms will immediately ‘pre-empt’ the Running state task if a task that has a priority higher than the Running state task enters the Ready state. Being pre-empted means being involuntarily (without explicitly yielding or blocking) moved out of the Running state and into the Ready state to allow a different task to enter the Running state.
Time Slicing	Time slicing is used to share processing time between tasks of equal priority, even when the tasks do not explicitly yield or enter the Blocked state. Scheduling algorithms described as using ‘Time Slicing’ will select a new task to enter the Running state at the end of each time slice if there are other Ready state tasks that have the same priority as the Running task. A time slice is equal to the time between two RTOS tick interrupts.

Figure 26 and Figure 27 demonstrate how tasks are scheduled when a fixed priority preemptive scheduling with time slicing algorithm is used. Figure 26 shows the sequence in which tasks are selected to enter the Running state when all the tasks in an application have a unique priority. Figure 27 shows the sequence in which tasks are selected to enter the Running state when two tasks in an application share a priority.

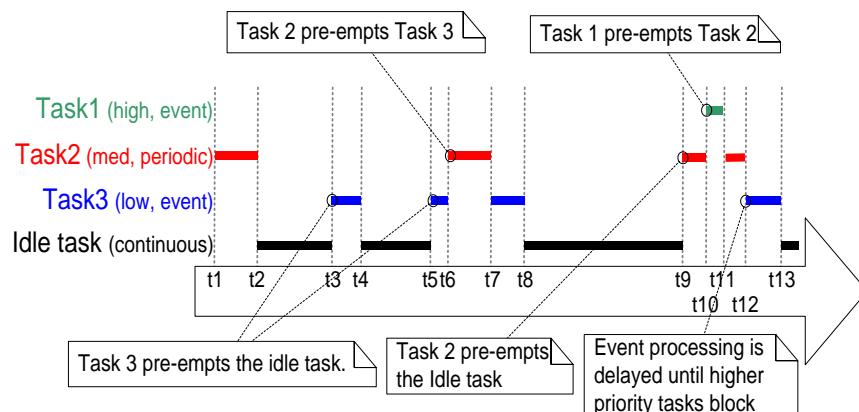

**Figure 26. Execution pattern highlighting task prioritization and pre-emption in a hypothetical application in which each task has been assigned a unique priority**

Referring to Figure 26:

1. Idle Task

The idle task is running at the lowest priority, so gets pre-empted every time a higher priority task enters the Ready state—for example, at times t3, t5 and t9.

2. Task 3

Task 3 is an event-driven task that executes with a relatively low priority, but above the Idle priority. It spends most of its time in the Blocked state waiting for its event of interest, transitioning from the Blocked state to the Ready state each time the event occurs. All FreeRTOS inter-task communication mechanisms (task notifications, queues, semaphores, event groups, etc.) can be used to signal events and unblock tasks in this way.

Events occur at times t3 and t5, and also somewhere between t9 and t12. The events occurring at times t3 and t5 are processed immediately as, at these times, Task 3 is the highest priority task that is able to run. The event that occurs somewhere between times t9 and t12 is not processed until t12 because, until then, the higher priority tasks Task 1 and Task 2 are still executing. It is only at time t12 that both Task 1 and Task 2 are in the Blocked state, making Task 3 the highest priority Ready state task.


3. Task 2

Task 2 is a periodic task that executes at a priority above the priority of Task 3, but below the priority of Task 1. The task's period interval means Task 2 wants to execute at times t1, t6, and t9.

At time t6, Task 3 is in the Running state, but Task 2 has the higher relative priority so pre-empts Task 3 and starts executing immediately. Task 2 completes its processing and re-enters the Blocked state at time t7, at which point Task 3 can re-enter the Running state to complete its processing. Task 3 itself Blocks at time t8.

4. Task 1

Task 1 is also an event-driven task. It executes with the highest priority of all, so can pre-empt any other task in the system. The only Task 1 event shown occurs at time t10, at which time Task 1 pre-empts Task 2. Task 2 can complete its processing only after Task 1 has re-entered the Blocked state at time t11.

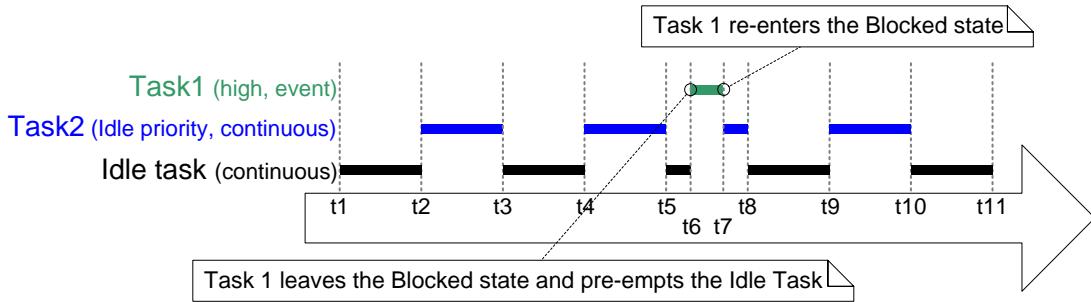

**Figure 27 Execution pattern highlighting task prioritization and time slicing in a hypothetical application in which two tasks run at the same priority**

Referring to Figure 27:

## 1. The Idle Task and Task 2

The Idle task and Task 2 are both continuous processing tasks, and both have a priority of 0 (the lowest possible priority). The scheduler only allocates processing time to the priority 0 tasks when there are no higher priority tasks that are able to run, and shares the time that is allocated to the priority 0 tasks by time slicing. A new time slice starts on each tick interrupt, which in Figure 27 is at times t1, t2, t3, t4, t5, t8, t9, t10 and t11.

The Idle task and Task 2 enter the Running state in turn, which can result in both tasks being in the Running state for part of the same time slice, as happens between time t5 and time t8.

## 2. Task 1

The priority of Task 1 is higher than the Idle priority. Task 1 is an event driven task that spends most of its time in the Blocked state waiting for its event of interest, transitioning from the Blocked state to the Ready state each time the event occurs.


The event of interest occurs at time t6, so at t6 Task 1 becomes the highest priority task that is able to run, and therefore Task 1 pre-empts the Idle task part way through a time slice. Processing of the event completes at time t7, at which point Task 1 re-enters the Blocked state.

Figure 27 shows the Idle task sharing processing time with a task created by the application writer. Allocating that much processing time to the Idle task might not be desirable if the Idle

priority tasks created by the application writer have work to do, but the Idle task does not. The configIDLE\_SHOULD\_YIELD compile time configuration constant can be used to change how the Idle task is scheduled:

- If configIDLE\_SHOULD\_YIELD is set to 0 then the Idle task will remain in the Running state for the entirety of its time slice, unless it is preempted by a higher priority task.
- If configIDLE\_SHOULD\_YIELD is set to 1 then the Idle task will yield (voluntarily give up whatever remains of its allocated time slice) on each iteration of its loop if there are other Idle priority tasks in the Ready state.

The execution pattern shown in Figure 27 is what would be observed when configIDLE\_SHOULD\_YIELD is set to 0. The execution pattern shown in Figure 28 is what would be observed in the same scenario when configIDLE\_SHOULD\_YIELD is set to 1.

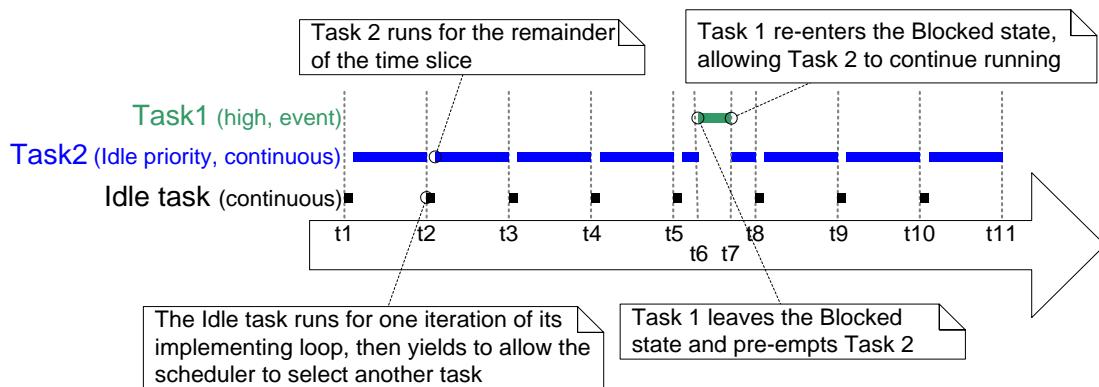

**Figure 28 The execution pattern for the same scenario as shown in Figure 27, but this time with configIDLE\_SHOULD\_YIELD set to 1**

Figure 28 also shows that, when configIDLE\_SHOULD\_YIELD is set to 1, the task selected to enter the Running state after the Idle task does not execute for an entire time slice, but instead executes for whatever remains of the time slice during which the Idle task yielded.

### Prioritized Pre-emptive Scheduling (without Time Slicing)

Prioritized Preemptive Scheduling without time slicing maintains the same task selection and pre-emption algorithms as described in the previous section, but does not use time slicing to share processing time between tasks of equal priority.

The FreeRTOSConfig.h settings that configure the FreeRTOS scheduler to use prioritized preemptive scheduling without time slicing are shown in Table 16.


**Table 16. The FreeRTOSConfig.h settings that configure the kernel to use Prioritized Pre-emptive Scheduling without Time Slicing**

Constant	Value
configUSE_PREEMPTION	1
configUSE_TIME_SLICING	0

As was demonstrated in Figure 27, if time slicing is used, and there is more than one ready state task at the highest priority that is able to run, then the scheduler will select a new task to enter the Running state during each RTOS tick interrupt (a tick interrupt marking the end of a time slice). If time slicing is not used, then the scheduler will only select a new task to enter the Running state when either:

- A higher priority task enters the Ready state.
- The task in the Running state enters the Blocked or Suspended state.

There are fewer task context switches when time slicing is not used than when time slicing is used. Therefore, turning time slicing off results in a reduction in the scheduler's processing overhead. However, turning time slicing off can also result in tasks of equal priority receiving greatly different amounts of processing time, a scenario demonstrated by Figure 29. For this reason, running the scheduler without time slicing is considered an advanced technique that should only be used by experienced users.

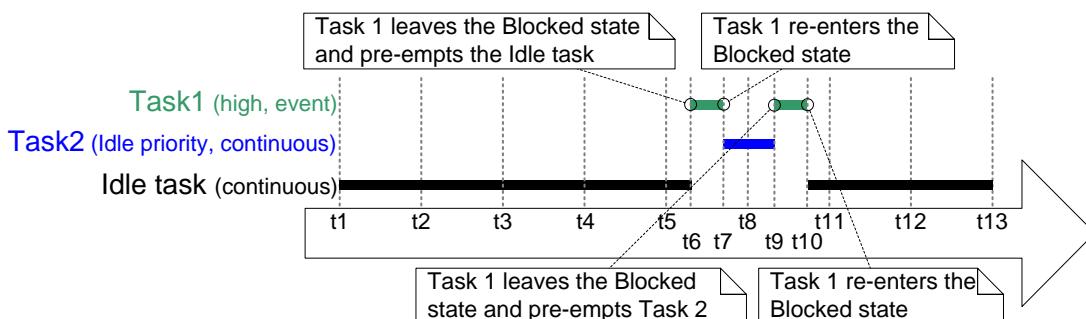

**Figure 29 Execution pattern that demonstrates how tasks of equal priority can receive hugely different amounts of processing time when time slicing is not used**

Referring to Figure 29, which assumes configIDLE\_SHOULD\_YIELD is set to 0:

## 1. Tick Interrupts

Tick interrupts occur at times t1, t2, t3, t4, t5, t8, t11, t12 and t13.

## 2. Task 1

Task 1 is a high priority event driven task that spends most of its time in the Blocked state waiting for its event of interest. Task 1 transitions from the Blocked state to the Ready state (and subsequently, as it is the highest priority Ready state task, on into the Running state) each time the event occurs. Figure 29 shows Task 1 processing an event between times t6 and t7, then again between times t9 and t10.

## 3. The Idle Task and Task 2

The Idle task and Task 2 are both continuous processing tasks, and both have a priority of 0 (the idle priority). Continuous processing tasks do not enter the Blocked state.

Time slicing is not being used, so an idle priority task that is in the Running state will remain in the Running state until it is pre-empted by the higher priority Task 1.

In Figure 29 the Idle task starts running at time t1, and remains in the Running state until it is pre-empted by Task 1 at time t6—which is more than four complete tick periods after it entered the Running state.

Task 2 starts running at time t7, which is when Task 1 re-enters the Blocked state to wait for another event. Task 2 remains in the Running state until it too is pre-empted by Task 1 at time t9—which is less than one tick period after it entered the Running state.

At time t10 the Idle task re-enters the Running state, despite having already received more than four times more processing time than the Task 2.

## Co-operative Scheduling


This book focuses on pre-emptive scheduling, but FreeRTOS can also use co-operative scheduling. The FreeRTOSConfig.h settings that configure the FreeRTOS scheduler to use co-operative scheduling are shown in Table 17.

**Table 17. The FreeRTOSConfig.h settings that configure the kernel to use co-operative scheduling**

Constant	Value
configUSE_PREEMPTION	0
configUSE_TIME_SLICING	Any value

When the co-operative scheduler is used, a context switch will only occur when the Running state task enters the Blocked state, or the Running state task explicitly yields (manually requests a re-schedule) by calling taskYIELD(). Tasks are never pre-empted, so time slicing cannot be used.

Figure 30 demonstrates the behavior of the co-operative scheduler. The horizontal dashed lines in Figure 30 show when a task is in the Ready state.

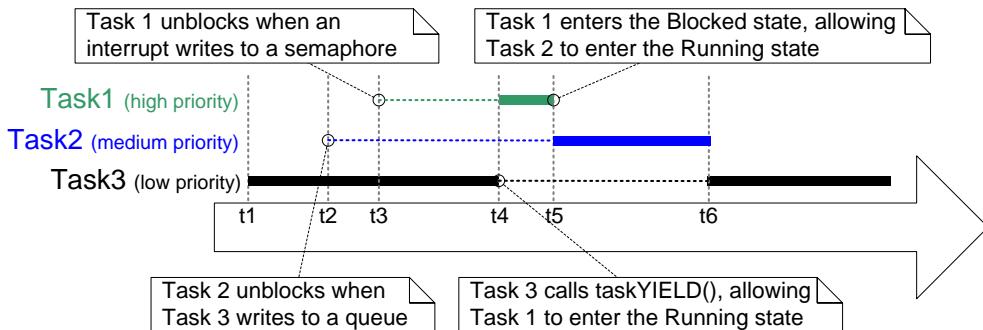

**Figure 30 Execution pattern demonstrating the behavior of the co-operative scheduler**

Referring to Figure 30:

1. Task 1

Task 1 has the highest priority. It starts in the Blocked state, waiting for a semaphore.

At time t3 an interrupt gives the semaphore, causing Task 1 to leave the Blocked state and enter the Ready state (giving semaphores from interrupts is covered in Chapter 6).

At time t3 Task 1 is the highest priority Ready state task, and if the pre-emptive scheduler had been used Task 1 would become the Running state task. However, as

the co-operative scheduler is being used, Task 1 remains in the Ready state until time t4—which is when the Running state task calls taskYIELD().

## 2. Task 2

The priority of Task 2 is between that of Task 1 and Task 3. It starts in the Blocked state, waiting for a message that is sent to it by Task 3 at time t2.

At time t2 Task 2 is the highest priority Ready state task, and if the pre-emptive scheduler had been used Task 2 would become the Running state task. However, as the co-operative scheduler is being used, Task 2 remains in the Ready state until the Running state task either enters the Blocked state or calls taskYIELD().

The running state task calls taskYIELD() at time t4, but by then Task 1 is the highest priority Ready state task, so Task 2 does not actually become the Running state task until Task 1 re-enters the Blocked state at time t5.

At time t6 Task 2 re-enters the Blocked state to wait for the next message, at which point Task 3 is once again the highest priority Ready state task.

In a multi-tasking application the application writer must take care that a resource is not accessed by more than one task simultaneously, as simultaneous access could corrupt the resource. As an example, consider the following scenario in which the resource being accessed is a UART (serial port). Two tasks are writing strings to the UART; Task 1 is writing “abcdefgijklmnop”, and Task 2 is writing “123456789”:

1. Task 1 is in the Running state and starts to write its string. It writes “abcdefg” to the UART, but leaves the Running state before writing any further characters.
2. Task 2 enters the Running state and writes “123456789” to the UART, before leaving the Running state.
3. Task 1 re-enters the Running state and writes the remaining characters of its string to the UART.

In that scenario what is actually written to the UART is “abcdefg123456789hijklmnop”. The string written by Task 1 has not been written to the UART in an unbroken sequence as intended, but instead it has been corrupted, because the string written to the UART by Task 2 appears within it.

It is normally easier to avoid problems caused by simultaneous access when the co-operative scheduler is used than when the pre-emptive scheduler is used<sup>1</sup>:

- When the pre-emptive scheduler is used the Running state task can be pre-empted at any time, including when a resource it is sharing with another task is in an inconsistent state. As just demonstrated by the UART example, leaving a resource in an inconsistent state can result in data corruption.
- When the co-operative scheduler is used the application writer controls when a switch to another task can occur. The application writer can therefore ensure a switch to another task does not occur while a resource is in an inconsistent state.
- In the above UART example, the application writer can ensure Task 1 does not leave the Running state until its entire string has been written to the UART, and in doing so, removing the possibility of the string being corrupted by the activates of another task.

As demonstrated in Figure 30, systems will be less responsive when the co-operative scheduler is used than when the pre-emptive scheduler is used:

- When the pre-emptive scheduler is used the scheduler will start running a task immediately that the task becomes the highest priority Ready state task. This is often essential in real-time systems that must respond to high priority events within a defined time period.
- When the co-operative scheduler is used a switch to a task that has become the highest priority Ready state task is not performed until the Running state task enters the Blocked state or calls taskYIELD().

---

<sup>1</sup> Methods of safely sharing resources between tasks are covered later in this book. Resources provided by FreeRTOS itself, such as queues and semaphores, are always safe to share between tasks.

# Chapter 4

## Queue Management

---

## 4.1 Chapter Introduction and Scope

---

'Queues' provide a task-to-task, task-to-interrupt, and interrupt-to-task communication mechanism. “队列”提供了任务到任务、任务到中断和中断到任务的通信机制。

### Scope

本章旨在让读者更好地理解：

This chapter aims to give readers a good understanding of:

- How to create a queue. 如何创建队列。
- How a queue manages the data it contains. 队列如何管理它包含的数据。
- How to send data to a queue. 如何将数据发送到队列。
- How to receive data from a queue. 如何从队列中接收数据。
- What it means to block on a queue. 阻塞队列意味着什么。
- How to block on multiple queues. 如何阻止多个队列。
- How to overwrite data in a queue. 如何覆盖队列中的数据。
- How to clear a queue. 如何清除队列。  
写入和读取队列时任务优先级的影响。
- The effect of task priorities when writing to and reading from a queue.

Only task-to-task communication is covered in this chapter. Task-to-interrupt and interrupt-to-task communication is covered in Chapter 6.

本章仅介绍任务到任务的通信。第 6 章介绍了任务到中断和中断到任务的通信。

## 4.2 Characteristics of a Queue

---



### Data Storage

一个队列可以容纳有限数量的固定大小的数据项。队列可以容纳的最大项目数称为“长度”。  
每个数据项的长度和大小都是在创建队列时设置的。


A queue can hold a finite number of fixed size data items. The maximum number of items a queue can hold is called its ‘length’. Both the length and the size of each data item are set when the queue is created.

队列通常用作先进先出 (FIFO) 缓冲区，其中数据被写入队列的末端（尾部）并从队列的前端（头部）移除。  
Queues are normally used as First In First Out (FIFO) buffers, where data is written to the end (tail) of the queue and removed from the front (head) of the queue. Figure 31 demonstrates data being written to and read from a queue that is being used as a FIFO. It is also possible to write to the front of a queue, and to overwrite data that is already at the front of a queue.



图 31 演示了数据被写入和读取一个用作 FIFO 的队列。  
也可以写入队列的前面，并覆盖已经在队列前面的数据。

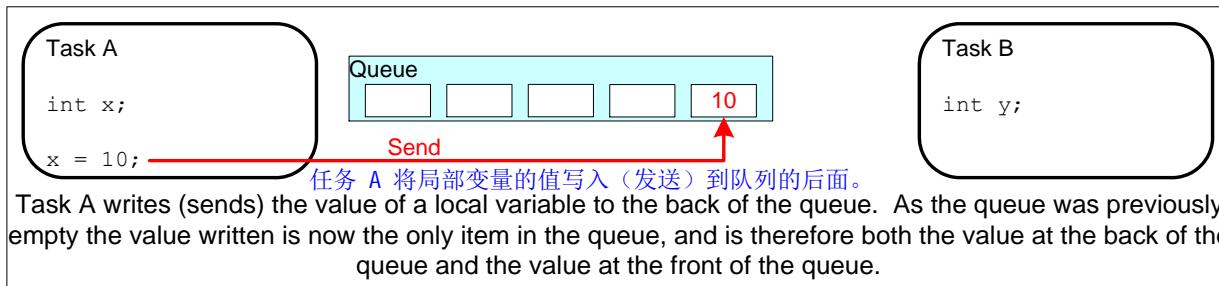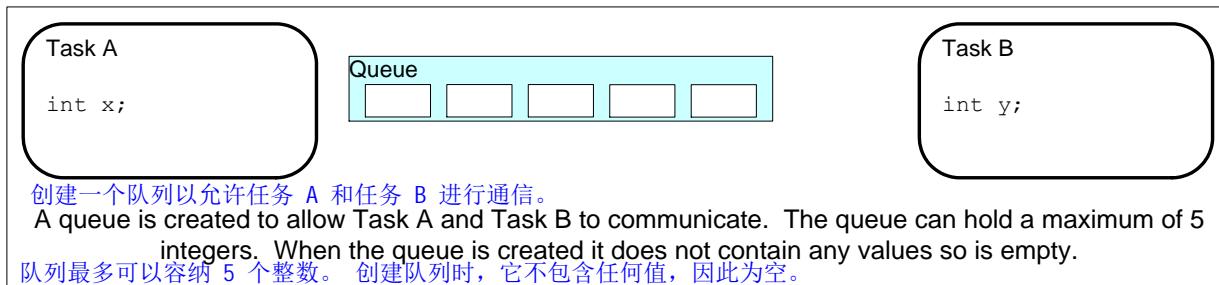

由于队列之前是空的，写入的值现在是队列中唯一的项目，因此既是队列后面的值，也是队列前面的值。

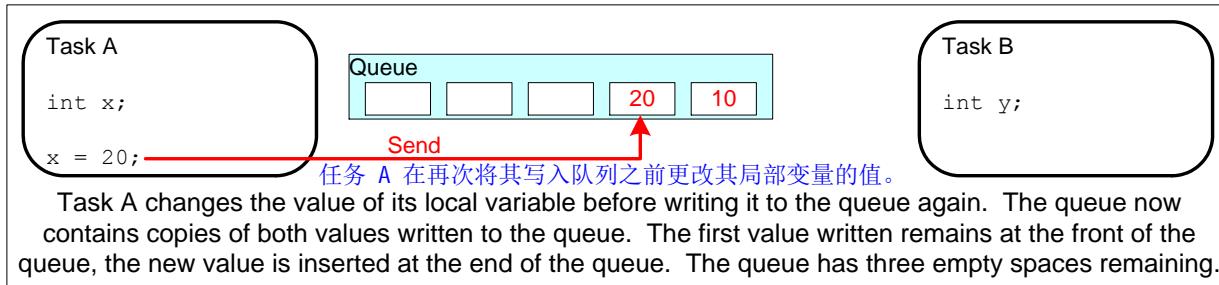

队列现在包含写入队列的两个值的副本。写入的第一个值保留在队列的前面，新值插入到队列的末尾。队列还剩下三个空位。

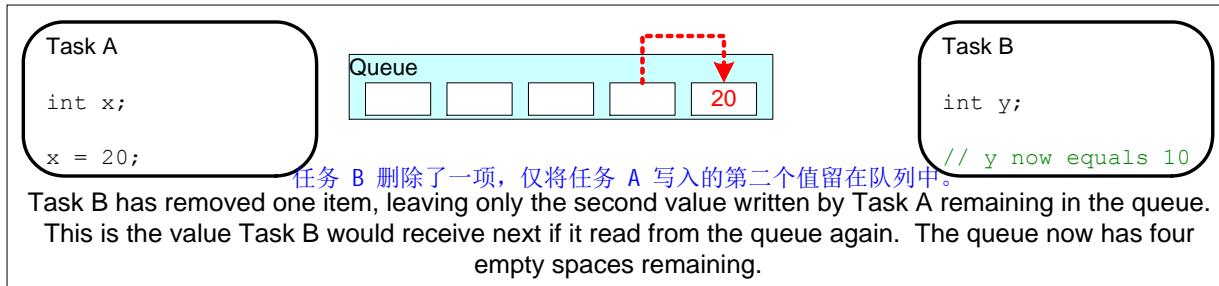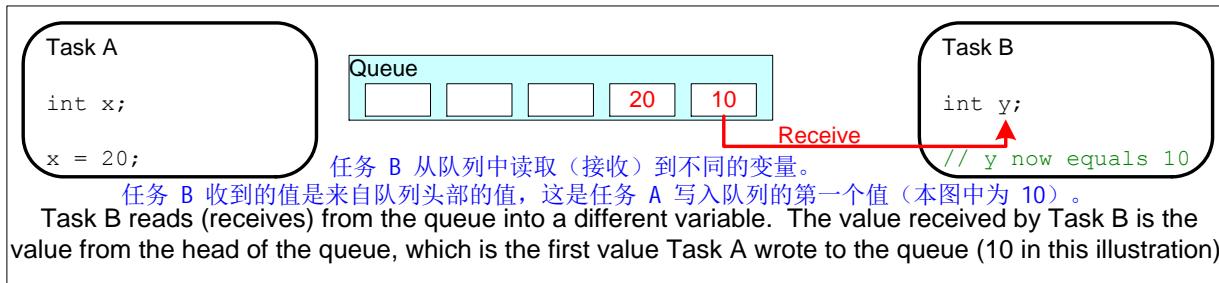

如果任务 B 再次从队列中读取，这是它接下来会收到的值。队列现在有四个剩余空间。

**Figure 31. An example sequence of writes to, and reads from a queue**

图 31. 写入队列和从队列读取的示例序列

There are two ways in which queue behavior could have been implemented:

有两种方式可以实现队列行为：

1. Queue by copy

复制队列意味着发送到队列的数据被逐字节复制到队列中。

Queuing by copy means the data sent to the queue is copied byte for byte into the queue.

2. Queue by reference

通过引用队列意味着队列只保存指向发送到队列的数据的指针，而不是数据本身。

Queuing by reference means the queue only holds pointers to the data sent to the queue, not the data itself.

FreeRTOS 通过复制方法使用队列。

FreeRTOS uses the queue by copy method. Queuing by copy is considered to be 复制队列被认为比引用队列更强大且更易于使用，因为： simultaneously more powerful and simpler to use than queueing by reference because:

堆栈变量可以直接发送到队列，即使在声明它的函数退出后该变量将不存在。

- Stack variable can be sent directly to a queue, even though the variable will not exist after the function in which it is declared has exited.

可以将数据发送到队列，而无需先分配缓冲区来保存数据，然后将数据复制到分配的缓冲区中。

- Data can be sent to a queue without first allocating a buffer to hold the data, and then copying the data into the allocated buffer.

发送任务可以立即重新使用发送到队列的变量或缓冲区。

- The sending task can immediately re-use the variable or buffer that was sent to the queue.

发送任务和接收任务是完全解耦的——应用程序设计者不需要关心哪个任务“拥有”数据，或者哪个任务负责释放数据。

- The sending task and the receiving task are completely de-coupled—the application designer does not need to concern themselves with which task ‘owns’ the data, or which task is responsible for releasing the data.

复制队列不会阻止队列也被用于引用队列。

- Queuing by copy does not prevent the queue from also being used to queue by reference. For example, when the size of the data being queued makes it impractical to copy the data into the queue, then a pointer to the data can be copied into the queue instead.

RTOS 完全负责分配用于存储数据的内存。

- The RTOS takes complete responsibility for allocating the memory used to store data.

在内存保护系统中，任务可以访问的 RAM 将受到限制。

- In a memory protected system, the RAM that a task can access will be restricted. In 在这种情况下，只有在发送和接收任务都可以访问存储数据的 RAM 时，才能使用按引用排队。 that case queueing by reference could only be used if the sending and receiving task 复制排队不会施加这种限制；内核始终以完全权限运行，允许使用队列跨内存保护边界传递数据。 could both access the RAM in which the data was stored. Queuing by copy does not impose that restriction; the kernel always runs with full privileges, allowing a queue to be used to pass data across memory protection boundaries.

## Access by Multiple Tasks 多任务访问

队列本身就是对象，任何知道它们存在的任务或 ISR 都可以访问这些对象。

Queues are objects in their own right that can be accessed by any task or ISR that knows of

任意数量的任务可以写入同一个队列，任意数量的任务可以从同一个队列中读取。

their existence. Any number of tasks can write to the same queue, and any number of tasks  
在实践中，一个队列有多个写入者是很常见的，但一个队列有多个读取者的情况就少得多了。

can read from the same queue. In practice it is very common for a queue to have multiple  
writers, but much less common for a queue to have multiple readers.

## Blocking on Queue Reads 阻塞队列读取

当任务尝试从队列中读取时，它可以选择指定一个“阻塞”时间。

When a task attempts to read from a queue, it can optionally specify a ‘block’ time. This is the  
如果队列已经为空，这时任务将保持在阻塞状态以等待队列中可用数据的时间。

time the task will be kept in the Blocked state to wait for data to be available from the queue,  
处于阻塞状态的任务正在等待队列中的数据可用，当另一个任务或中断将数据放入队列时，它会自动移动到就绪状态。  
should the queue already be empty. A task that is in the Blocked state, waiting for data to  
如果指定的阻塞时间在数据可用之前到期，任务也将自动从阻塞状态移动到就绪状态。

become available from a queue, is automatically moved to the Ready state when another task  
or interrupt places data into the queue. The task will also be moved automatically from the  
Blocked state to the Ready state if the specified block time expires before data becomes  
available.

队列可以有多个读取器，因此单个队列可能会阻止多个任务在其上等待数据。

Queues can have multiple readers, so it is possible for a single queue to have more than one  
在这种情况下，当数据可用时，只有一个任务会被解除阻塞。

task blocked on it waiting for data. When this is the case, only one task will be unblocked  
未阻塞的任务将始终是等待数据的最高优先级任务。

when data becomes available. The task that is unblocked will always be the highest priority  
如果阻塞的任务具有相同的优先级，则等待数据时间最长的任务将被解除阻塞。

task that is waiting for data. If the blocked tasks have equal priority, then the task that has  
been waiting for data the longest will be unblocked.

## Blocking on Queue Writes 阻塞队列写入

就像从队列中读取一样，任务在写入队列时可以选择指定阻塞时间。

Just as when reading from a queue, a task can optionally specify a block time when writing to  
在这种情况下，阻塞时间是任务应该保持在阻塞状态以等待队列上可用空间的最长时间，如果队列已经满的话。  
a queue. In this case, the block time is the maximum time the task should be held in the

Blocked state to wait for space to become available on the queue, should the queue already  
be full.

队列可以有多个写入者，因此一个完整的队列可能会阻止多个任务在其上等待完成发送操作。

Queues can have multiple writers, so it is possible for a full queue to have more than one task  
在这种情况下，当队列上的空间可用时，只有一个任务会被解除阻塞。

blocked on it waiting to complete a send operation. When this is the case, only one task will  
未阻塞的任务将始终是等待空间的最高优先级任务。

be unblocked when space on the queue becomes available. The task that is unblocked will  
如果阻塞的任务具有相同的优先级，则等待空间时间最长的任务将被解除阻塞。

always be the highest priority task that is waiting for space. If the blocked tasks have equal  
priority, then the task that has been waiting for space the longest will be unblocked.

## Blocking on Multiple Queues 阻塞多个队列

队列可以分组到集合中，允许任务进入阻塞状态以等待数据在集合中的任何队列上可用。

Queues can be grouped into sets, allowing a task to enter the Blocked state to wait for data to become available on any of the queues in the set. Queue sets are demonstrated in section 4.6, Receiving From Multiple Queues.

队列集在第 4.6 节“从多个队列接收”中演示。

## 4.3 Using a Queue

---

### The xQueueCreate() API Function

队列必须先显式创建，然后才能使用。

A queue must be explicitly created before it can be used.

队列由句柄引用，句柄是 QueueHandle\_t 类型的变量。

Queues are referenced by handles, which are variables of type QueueHandle\_t. The

xQueueCreate() API 函数创建一个队列并返回一个引用它创建的队列的 QueueHandle\_t

xQueueCreate() API function creates a queue and returns a QueueHandle\_t that references the queue it created.

FreeRTOS V9.0.0 还包括 xQueueCreateStatic() 函数，该函数在编译时分配静态创建队列所需的内存。  
FreeRTOS V9.0.0 also includes the xQueueCreateStatic() function, which allocates the memory required to create FreeRTOS 在创建队列时从 FreeRTOS 堆分配 RAM。  
a queue statically at compile time: FreeRTOS allocates RAM from the FreeRTOS heap when a RAM 用于保存队列数据结构和队列中包含的项目。  
queue is created. The RAM is used to hold both the queue data structures and the items that 如果没有足够的堆 RAM 可用于创建队列，xQueueCreate() 将返回 NULL。  
are contained in the queue. xQueueCreate() will return NULL if there is insufficient heap RAM 第 2 章提供了有关 FreeRTOS 堆的更多信息。  
available for the queue to be created. Chapter 2 provides more information on the FreeRTOS  
heap.

---

```
QueueHandle_t xQueueCreate( UBaseType_t uxQueueLength, UBaseType_t uxItemSize );
```

---

**Listing 40. The xQueueCreate() API function prototype**

**Table 18. xQueueCreate() parameters and return value**

Parameter Name	Description
uxQueueLength	正在创建的队列在任何时候可以容纳的最大项目数。 The maximum number of items that the queue being created can hold at any one time.
uxItemSize	可以存储在队列中的每个数据项的大小（以字节为单位）。 The size in bytes of each data item that can be stored in the queue.
Return Value	如果返回 NULL，则无法创建队列，因为 FreeRTOS 没有足够的堆内存来分配队列数据结构和存储区域。 If NULL is returned, then the queue cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the queue data structures and storage area. 返回非 NULL 值表示队列已成功创建。 返回值应存储为创建队列的句柄。 A non-NUL value being returned indicates that the queue has been created successfully. The returned value should be stored as the handle to the created queue.

创建队列后，可以使用 xQueueReset() API 函数将队列返回到其原始空状态。

After a queue has been created the xQueueReset() API function can be used to return the queue to its original empty state.

## The xQueueSendToBack() and xQueueSendToFront() API Functions

正如所料, xQueueSendToBack() 用于将数据发送到队列的后端 (尾部), 而 xQueueSendToFront() 用于将数据发送到队列的前端 (头部)。

As might be expected, xQueueSendToBack() is used to send data to the back (tail) of a queue, and xQueueSendToFront() is used to send data to the front (head) of a queue.

xQueueSend() 与 xQueueSendToBack() 等价并且完全相同。

xQueueSend() is equivalent to, and exactly the same as, xQueueSendToBack().

*Note: Never call xQueueSendToFront() or xQueueSendToBack() from an interrupt service routine. The interrupt-safe versions xQueueSendToFrontFromISR() and xQueueSendToBackFromISR() should be used in their place. These are described in Chapter 6.*

注意: 切勿从中断服务例程调用 xQueueSendToFront() 或 xQueueSendToBack()。应使用中断安全版本 xQueueSendToFrontFromISR() 和 xQueueSendToBackFromISR() 代替它们。这些在第 6 章中进行了描述。

---

```
BaseType_t xQueueSendToFront( QueueHandle_t xQueue,
                               const void * pvItemToQueue,
                               TickType_t xTicksToWait );
```

---

**Listing 41. The xQueueSendToFront() API function prototype**

---

```
BaseType_t xQueueSendToBack( QueueHandle_t xQueue,
                            const void * pvItemToQueue,
                            TickType_t xTicksToWait );
```

---

**Listing 42. The xQueueSendToBack() API function prototype**

**Table 19. xQueueSendToFront() and xQueueSendToBack() function parameters and return value**

Parameter Name/ Returned Value	Description
xQueue	正在向其发送 (写入) 数据的队列句柄。队列句柄将从用于创建队列的 xQueueCreate() 调用中返回。 The handle of the queue to which the data is being sent (written). The queue handle will have been returned from the call to xQueueCreate() used to create the queue.
pvItemToQueue	指向要复制到队列中的数据的指针。 A pointer to the data to be copied into the queue. 队列可以容纳的每个项目的大小是在创建队列时设置的, 因此会从 pvItemToQueue 将这么多字节复制到队列存储区中。 The size of each item that the queue can hold is set when the queue is created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

**Table 19. xQueueSendToFront() and xQueueSendToBack() function parameters and return value**

Parameter Name/ Returned Value	Description
xTicksToWait	<p>如果队列已满，任务应保持在 Blocked 状态以等待队列上可用空间的最长时间。  The maximum amount of time the task should remain in the Blocked state to wait for space to become available on the queue, should the queue already be full.</p> <p>如果 xTicksToWait 为零且队列已满，则 xQueueSendToFront() 和 xQueueSendToBack() 都将立即返回。  Both xQueueSendToFront() and xQueueSendToBack() will return immediately if xTicksToWait is zero and the queue is already full.</p> <p>块时间以滴答周期指定，因此它所代表的绝对时间取决于滴答频率。  The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() 可用于将以毫秒为单位的时间转换为以滴答为单位的时间。  pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out), provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.  将 xTicksToWait 设置为 portMAX_DELAY 将导致任务无限期等待（不会超时），前提是将 INCLUDE_vTaskSuspend 在 FreeRTOSConfig.h 中设置为 1。</p>

**Table 19. xQueueSendToFront() and xQueueSendToBack() function parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>有两种可能的返回值: There are two possible return values:</p> <p>1. pdPASS 仅当数据成功发送到队列时才会返回 pdPASS。 pdPASS will be returned only if data was successfully sent to the queue. 如果指定了阻塞时间 (xTicksToWait 不为零) , 那么调用任务可能被置于阻塞状态, 等待队列中的空间可用, 然后函数返回, 但是在块时间到期之前数据已成功写入队列。 If a block time was specified (xTicksToWait was not zero), then it is possible the calling task was placed into the Blocked state, to wait for space to become available in the queue, before the function returned, but data was successfully written to the queue before the block time expired.</p> <p>2. errQUEUE_FULL 如果由于队列已满而无法将数据写入队列, 则将返回 errQUEUE_FULL。 errQUEUE_FULL will be returned if data could not be written to the queue because the queue was already full. 如果指定了阻塞时间 (xTicksToWait 不为零) , 则调用任务将被置于阻塞状态以等待另一个任务或中断以在队列中腾出空间, 但指定的阻塞时间在此之前已过期。 If a block time was specified (xTicksToWait was not zero) then the calling task will have been placed into the Blocked state to wait for another task or interrupt to make space in the queue, but the specified block time expired before that happened.</p>

### The xQueueReceive() API Function

xQueueReceive() 用于从队列中接收 (读取) 项目。 收到的项目将从队列中删除。  
xQueueReceive() is used to receive (read) an item from a queue. The item that is received is removed from the queue.

注意: 切勿从中断服务程序调用 xQueueReceive()。 第 6 章描述了中断安全的 xQueueReceiveFromISR() API 函数。  
Note: Never call xQueueReceive() from an interrupt service routine. The interrupt-safe xQueueReceiveFromISR() API function is described in Chapter 6.

```
BaseType_t xQueueReceive( QueueHandle_t xQueue,
                          void * const pvBuffer,
                          TickType_t xTicksToWait );
```

**Listing 43. The xQueueReceive() API function prototype**

**Table 20. xQueueReceive() function parameters and return values**

Parameter Name/ Returned value	Description
xQueue	<p>从中接收（读取）数据的队列句柄。</p> <p>The handle of the queue from which the data is being received (read). 队列句柄将从用于创建队列的 xQueueCreate() 调用中返回。 The queue handle will have been returned from the call to xQueueCreate() 用于创建队列。 xQueueCreate() used to create the queue.</p>
pvBuffer	<p>指向将接收到的数据复制到其中的内存的指针。</p> <p>A pointer to the memory into which the received data will be copied. 队列保存的每个数据项的大小是在创建队列时设置的。 The size of each data item that the queue holds is set when the queue pvBuffer 指向的内存必须至少大到足以容纳那么多字节。 is created. The memory pointed to by pvBuffer must be at least large enough to hold that many bytes.</p>
xTicksToWait	<p>如果队列已经为空，任务应保持在 Blocked 状态以等待队列上可用的数据的最长时间。</p> <p>The maximum amount of time the task should remain in the Blocked state to wait for data to become available on the queue, should the queue already be empty.</p> <p>如果 xTicksToWait 为零，则如果队列已经为空，则 xQueueReceive() 将立即返回。 If xTicksToWait is zero, then xQueueReceive() will return immediately if the queue is already empty.</p> <p>块时间以滴答周期指定，因此它所代表的绝对时间取决于滴答频率。</p> <p>The block time is specified in tick periods, so the absolute time it 宏 pdMS_TO_TICKS() 可用于将以毫秒为单位的时间转换为以滴答为单位的时间。 represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>将 xTicksToWait 设置为 portMAX_DELAY 将导致任务无限期等待（没有超时）， 前提是 FreeRTOSConfig.h 中的 INCLUDE_vTaskSuspend 设置为 1。 Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out) provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.</p>

**Table 20. xQueueReceive() function parameters and return values**

Parameter Name/ Returned value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>pdPASS will be returned only if data was successfully read from the queue.</p> <p>If a block time was specified (xTicksToWait was not zero), then it is possible the calling task was placed into the Blocked state, to wait for data to become available on the queue, but data was successfully read from the queue before the block time expired.</p> <ol style="list-style-type: none"><li>2. errQUEUE_EMPTY</li></ol> <p>如果由于队列已经为空而无法从队列中读取数据，则将返回 errQUEUE_EMPTY。 errQUEUE_EMPTY will be returned if data cannot be read from the queue because the queue is already empty. 如果指定了阻塞时间（xTicksToWait 不为零），则调用任务将被置于阻塞状态以等待另一个任务或中断向队列发送数据，但阻塞时间在此之前已过期。 If a block time was specified (xTicksToWait was not zero,) then the calling task will have been placed into the Blocked state to wait for another task or interrupt to send data to the queue, but the block time expired before that happened.</p>

### The uxQueueMessagesWaiting() API Function

[uxQueueMessagesWaiting\(\)](#) 用于查询当前队列中的项目数。

uxQueueMessagesWaiting() is used to query the number of items that are currently in a queue.

注意：切勿从中断服务例程中调用 [uxQueueMessagesWaiting\(\)](#)。应该使用中断安全的 [uxQueueMessagesWaitingFromISR\(\)](#) 代替它。

*Note: Never call uxQueueMessagesWaiting() from an interrupt service routine. The interrupt-safe uxQueueMessagesWaitingFromISR() should be used in its place.*

---

```
UBaseType_t uxQueueMessagesWaiting( QueueHandle_t xQueue );
```

---

**Listing 44. The uxQueueMessagesWaiting() API function prototype**

**Table 21. uxQueueMessagesWaiting() function parameters and return value**

Parameter Name/ Returned Value	Description
xQueue	被查询队列的句柄。队列句柄将从用于创建队列的 xQueueCreate() 调用中返回。 The handle of the queue being queried. The queue handle will have been returned from the call to xQueueCreate() used to create the queue.
Returned value	正在查询的队列当前持有的项目数。如果返回零，则队列为空。 The number of items that the queue being queried is currently holding. If zero is returned, then the queue is empty.

#### 示例 10. 从队列接收时阻塞

#### **Example 10. Blocking when receiving from a queue**

此示例演示了正在创建的队列、从多个任务发送到队列的数据以及从队列接收的数据。

This example demonstrates a queue being created, data being sent to the queue from multiple tasks, and data being received from the queue. The queue is created to hold data items of type int32\_t. The tasks that send to the queue do not specify a block time, whereas the task that receives from the queue does.

发送到队列的任务的优先级低于从队列接收的任务的优先级。

The priority of the tasks that send to the queue are lower than the priority of the task that receives from the queue. This means the queue should never contain more than one item because once data is sent to the queue, the receiving task will unblock, pre-empt the sending task, and remove the data—leaving the queue empty again.

清单 45 显示了写入队列的任务的实现。

Listing 45 shows the implementation of the task that writes to the queue. Two instances of this task are created, one that writes continuously the value 100 to the queue, and another that writes continuously the value 200 to the same queue. The task parameter is used to pass these values into each task instance.

```
static void vSenderTask( void *pvParameters )
{
int32_t lValueToSend;
 BaseType_t xStatus;
    该任务的两个实例被创建，因此发送到队列的值通过任务参数传入 - 这样每个实例都可以使用不同的值。
/* Two instances of this task are created so the value that is sent to the
queue is passed in via the task parameter - this way each instance can use
a different value. The queue was created to hold values of type int32_t,
so cast the parameter to the required type. */
lValueToSend = ( int32_t ) pvParameters;
    创建队列以保存 int32_t 类型的值，因此将参数转换为所需的类型。
/* As per most tasks, this task is implemented within an infinite loop. */
for( ; ) 根据大多数任务，此任务是在无限循环中实现的。
{
    /* Send the value to the queue.
    第一个参数是数据发送到的队列。队列是在调度程序启动之前创建的，所以在这个任务开始执行之前。
    The first parameter is the queue to which data is being sent. The
queue was created before the scheduler was started, so before this task
started to execute.
    第二个参数是要发送的数据的地址，在本例中是 lValueToSend 的地址。
    The second parameter is the address of the data to be sent, in this case
the address of lValueToSend.
    第三个参数是阻塞时间——如果队列已经满了，任务应该保持在阻塞状态以等待队列中可用空间的时间。
    The third parameter is the Block time - the time the task should be kept
in the Blocked state to wait for space to become available on the queue
should the queue already be full. In this case a block time is not
specified because the queue should never contain more than one item, and
therefore never be full. */
xStatus = xQueueSendToBack( xQueue, &lValueToSend, 0 );
    在这种情况下，没有指定阻塞时间，因为队列不应该包含超过一个项目，
    因此永远不会被填满。
if( xStatus != pdPASS )
{
    /* The send operation could not complete because the queue was full -
    this must be an error as the queue should never contain more than
    one item! */ 发送操作无法完成，因为队列已满，这一定是一个错误，因为队列不应包含超过一项！
    vPrintString( "Could not send to the queue.\r\n" );
}
}
}
```

---

**Listing 45. Implementation of the sending task used in Example 10.**

Listing 46 shows the implementation of the task that receives data from the queue. The receiving task specifies a block time of 100 milliseconds, so will enter the Blocked state to wait for data to become available. It will leave the Blocked state when either data is available on the queue, or 100 milliseconds passes without data becoming available. In this example, the 100 milliseconds timeout should never expire, as there are two tasks continuously writing to the queue.

---

```

static void vReceiverTask( void *pvParameters )
{
    /* Declare the variable that will hold the values received from the queue. */
    int32_t lReceivedValue;
    BaseType_t xStatus;
    const TickType_t xTicksToWait = pdMS_TO_TICKS( 100 );

    /* This task is also defined within an infinite loop. */
    for( ;; )
    {
        /* This call should always find the queue empty because this task will
        immediately remove any data that is written to the queue. */
        if( uxQueueMessagesWaiting( xQueue ) != 0 )
        {
            vPrintString( "Queue should have been empty!\r\n" );
        }

        /* Receive data from the queue.

        The first parameter is the queue from which data is to be received. The
        queue is created before the scheduler is started, and therefore before this
        task runs for the first time.

        The second parameter is the buffer into which the received data will be
        placed. In this case the buffer is simply the address of a variable that
        has the required size to hold the received data.

        The last parameter is the block time - the maximum amount of time that the
        task will remain in the Blocked state to wait for data to be available
        should the queue already be empty. */
        xStatus = xQueueReceive( xQueue, &lReceivedValue, xTicksToWait );

        if( xStatus == pdPASS )
        {
            /* Data was successfully received from the queue, print out the received
            value. */
            vPrintStringAndNumber( "Received = ", lReceivedValue );
        }
        else
        {
            /* Data was not received from the queue even after waiting for 100ms.
            This must be an error as the sending tasks are free running and will be
            continuously writing to the queue. */
            vPrintString( "Could not receive from the queue.\r\n" );
        }
    }
}

```

---

**Listing 46. Implementation of the receiver task for Example 10**

Listing 47 contains the definition of the main() function. This simply creates the queue and the three tasks before starting the scheduler. The queue is created to hold a maximum of five int32\_t values, even though the priorities of the tasks are set such that the queue will never contain more than one item at a time.

```
/* Declare a variable of type QueueHandle_t. This is used to store the handle
to the queue that is accessed by all three tasks. */
QueueHandle_t xQueue;

int main( void )
{
    /* The queue is created to hold a maximum of 5 values, each of which is
large enough to hold a variable of type int32_t. */
    xQueue = xQueueCreate( 5, sizeof( int32_t ) );

    if( xQueue != NULL )
    {
        /* Create two instances of the task that will send to the queue. The task
parameter is used to pass the value that the task will write to the queue,
so one task will continuously write 100 to the queue while the other task
will continuously write 200 to the queue. Both tasks are created at
priority 1. */
        xTaskCreate( vSenderTask, "Sender1", 1000, ( void * ) 100, 1, NULL );
        xTaskCreate( vSenderTask, "Sender2", 1000, ( void * ) 200, 1, NULL );

        /* Create the task that will read from the queue. The task is created with
priority 2, so above the priority of the sender tasks. */
        xTaskCreate( vReceiverTask, "Receiver", 1000, NULL, 2, NULL );

        /* Start the scheduler so the created tasks start executing. */
        vTaskStartScheduler();
    }
    else
    {
        /* The queue could not be created. */
    }

    /* If all is well then main() will never reach here as the scheduler will
now be running the tasks. If main() does reach here then it is likely that
there was insufficient FreeRTOS heap memory available for the idle task to be
created. Chapter 2 provides more information on heap memory management. */
    for( ; );
```


---

**Listing 47. The implementation of main() in Example 10**

Both tasks that send to the queue have an identical priority. This causes the two sending tasks to send data to the queue in turn. The output produced by Example 10 is shown in Figure 32.

**Figure 32.** The output produced when Example 10 is executed

Figure 33 demonstrate the sequence of execution.

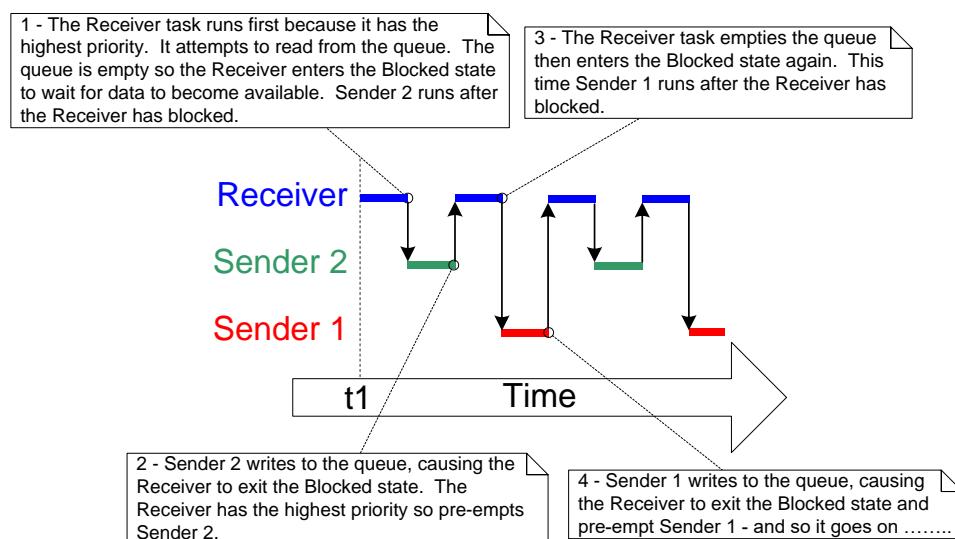

**Figure 33.** The sequence of execution produced by Example 10

## 4.4 Receiving Data From Multiple Sources

It is common in FreeRTOS designs for a task to receive data from more than one source. The receiving task needs to know where the data came from to determine how the data should be processed. An easy design solution is to use a single queue to transfer structures with both the value of the data and the source of the data contained in the structure's fields. This scheme is demonstrated in Figure 34.

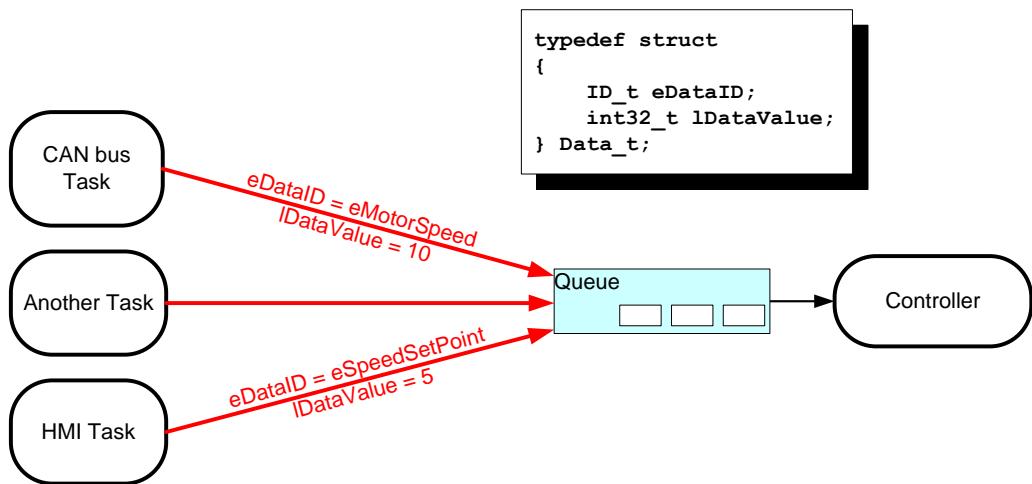


Figure 34. An example scenario where structures are sent on a queue

Referring to Figure 34:

- A queue is created that holds structures of type `Data_t`. The structure members allow both a data value and an enumerated type indicating what the data means to be sent to the queue in one message.
- A central Controller task is used to perform the primary system function. This has to react to inputs and changes to the system state communicated to it on the queue.
- A CAN bus task is used to encapsulate the CAN bus interfacing functionality. When the CAN bus task has received and decoded a message, it sends the already decoded message to the Controller task in a `Data_t` structure. The `eDataID` member of the transferred structure is used to let the Controller task know what the data is—in the depicted case it is a motor speed value. The `lDataValue` member of the transferred structure is used to let the Controller task know the actual motor speed value.
- A Human Machine Interface (HMI) task is used to encapsulate all the HMI functionality. The machine operator can probably input commands and query values in a number of

ways that have to be detected and interpreted within the HMI task. When a new command is input, the HMI task sends the command to the Controller task in a Data\_t structure. The eDataID member of the transferred structure is used to let the Controller task know what the data is—in the depicted case it is a new set point value. The IDataValue member of the transferred structure is used to let the Controller task know the actual set point value.

### Example 11. Blocking when sending to a queue, and sending structures on a queue

Example 11 is similar to Example 10, but the task priorities are reversed, so the receiving task has a lower priority than the sending tasks. Also, the queue is used to pass structures, rather than integers.

Listing 48 shows the definition of the structure used by Example 11.

---

```
/* Define an enumerated type used to identify the source of the data. */
typedef enum
{
    eSender1,
    eSender2
} DataSource_t;

/* Define the structure type that will be passed on the queue. */
typedef struct
{
    uint8_t ucValue;
    DataSource_t eDataSource;
} Data_t;

/* Declare two variables of type Data_t that will be passed on the queue. */
static const Data_t xStructsToSend[ 2 ] =
{
    { 100, eSender1 }, /* Used by Sender1. */
    { 200, eSender2 } /* Used by Sender2. */
};
```

---

**Listing 48. The definition of the structure that is to be passed on a queue, plus the declaration of two variables for use by the example**

In Example 10, the receiving task has the highest priority, so the queue never contains more than one item. This results from the receiving task pre-empting the sending tasks as soon as data is placed into the queue. In Example 11, the sending tasks have the higher priority, so the queue will normally be full. This is because, as soon as the receiving task removes an item from the queue, it is pre-empted by one of the sending tasks which then immediately re-fills the queue. The sending task then re-enters the Blocked state to wait for space to become available on the queue again.

Listing 49 shows the implementation of the sending task. The sending task specifies a block time of 100 milliseconds, so it enters the Blocked state to wait for space to become available each time the queue becomes full. It leaves the Blocked state when either space is available on the queue, or 100 milliseconds passes without space becoming available. In this example, the 100 milliseconds timeout should never expire, as the receiving task is continuously making space by removing items from the queue.

---

```
static void vSenderTask( void *pvParameters )
{
BaseType_t xStatus;
const TickType_t xTicksToWait = pdMS_TO_TICKS( 100 );

/* As per most tasks, this task is implemented within an infinite loop. */
for( ; ; )
{
    /* Send to the queue.

    The second parameter is the address of the structure being sent. The
    address is passed in as the task parameter so pvParameters is used
    directly.

    The third parameter is the Block time - the time the task should be kept
    in the Blocked state to wait for space to become available on the queue
    if the queue is already full. A block time is specified because the
    sending tasks have a higher priority than the receiving task so the queue
    is expected to become full. The receiving task will remove items from
    the queue when both sending tasks are in the Blocked state. */
    xStatus = xQueueSendToBack( xQueue, pvParameters, xTicksToWait );

    if( xStatus != pdPASS )
    {
        /* The send operation could not complete, even after waiting for 100ms.
        This must be an error as the receiving task should make space in the
        queue as soon as both sending tasks are in the Blocked state. */
        vPrintString( "Could not send to the queue.\r\n" );
    }
}
}
```

---

**Listing 49. The implementation of the sending task for Example 11**

The receiving task has the lowest priority, so it will run only when both sending tasks are in the Blocked state. The sending tasks will enter the Blocked state only when the queue is full, so the receiving task will execute only when the queue is already full. Therefore, it always expects to receive data even when it does not specify a block time.

The implementation of the receiving task is shown in Listing 50.

---

```

static void vReceiverTask( void *pvParameters )
{
/* Declare the structure that will hold the values received from the queue. */
Data_t xReceivedStructure;
BaseType_t xStatus;

/* This task is also defined within an infinite loop. */
for( ;; )
{
    /* Because it has the lowest priority this task will only run when the
       sending tasks are in the Blocked state. The sending tasks will only enter
       the Blocked state when the queue is full so this task always expects the
       number of items in the queue to be equal to the queue length, which is 3 in
       this case. */
    if( uxQueueMessagesWaiting( xQueue ) != 3 )
    {
        vPrintString( "Queue should have been full!\r\n" );
    }

    /* Receive from the queue.

The second parameter is the buffer into which the received data will be
placed. In this case the buffer is simply the address of a variable that
has the required size to hold the received structure.

The last parameter is the block time - the maximum amount of time that the
task will remain in the Blocked state to wait for data to be available
if the queue is already empty. In this case a block time is not necessary
because this task will only run when the queue is full. */
    xStatus = xQueueReceive( xQueue, &xReceivedStructure, 0 );

    if( xStatus == pdPASS )
    {
        /* Data was successfully received from the queue, print out the received
           value and the source of the value. */
        if( xReceivedStructure.eDataSource == eSender1 )
        {
            vPrintStringAndNumber( "From Sender 1 = ", xReceivedStructure.ucValue );
        }
        else
        {
            vPrintStringAndNumber( "From Sender 2 = ", xReceivedStructure.ucValue );
        }
    }
    else
    {
        /* Nothing was received from the queue. This must be an error as this
           task should only run when the queue is full. */
        vPrintString( "Could not receive from the queue.\r\n" );
    }
}
}

```

---

**Listing 50.** The definition of the receiving task for Example 11

main() changes only slightly from the previous example. The queue is created to hold three Data\_t structures, and the priorities of the sending and receiving tasks are reversed. The implementation of main() is shown in Listing 51.

```

int main( void )
{
    /* The queue is created to hold a maximum of 3 structures of type Data_t. */
    xQueue = xQueueCreate( 3, sizeof( Data_t ) );

    if( xQueue != NULL )
    {
        /* Create two instances of the task that will write to the queue.  The
        parameter is used to pass the structure that the task will write to the
        queue, so one task will continuously send xStructsToSend[ 0 ] to the queue
        while the other task will continuously send xStructsToSend[ 1 ].  Both
        tasks are created at priority 2, which is above the priority of the receiver. */
        xTaskCreate( vSenderTask, "Sender1", 1000, &( xStructsToSend[ 0 ] ), 2, NULL );
        xTaskCreate( vSenderTask, "Sender2", 1000, &( xStructsToSend[ 1 ] ), 2, NULL );

        /* Create the task that will read from the queue.  The task is created with
        priority 1, so below the priority of the sender tasks. */
        xTaskCreate( vReceiverTask, "Receiver", 1000, NULL, 1, NULL );


        /* Start the scheduler so the created tasks start executing. */
        vTaskStartScheduler();
    }
    else
    {
        /* The queue could not be created. */
    }

    /* If all is well then main() will never reach here as the scheduler will
    now be running the tasks.  If main() does reach here then it is likely that
    there was insufficient heap memory available for the idle task to be created.
    Chapter 2 provides more information on heap memory management. */
    for( ;; );
}

```


**Listing 51.** The implementation of main() for Example 11

The output produced by Example 11 is shown in Figure 35.

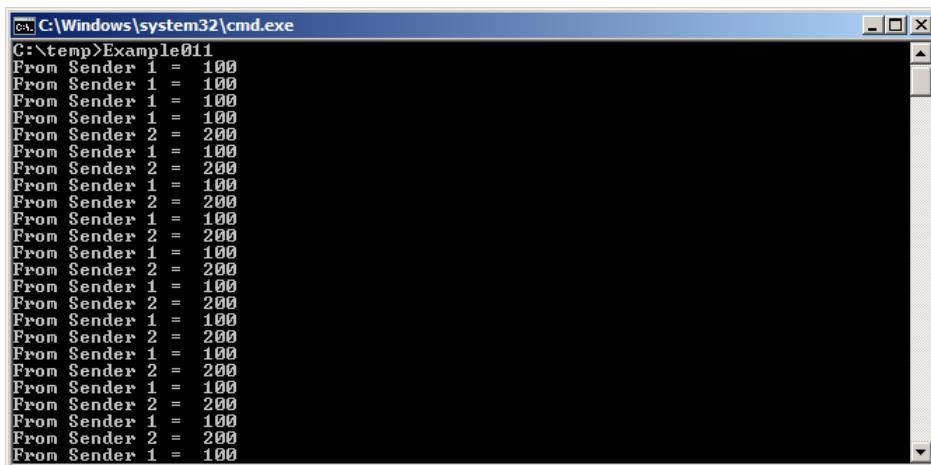

**Figure 35** The output produced by Example 11

Figure 36 demonstrates the sequence of execution that results from having the priority of the sending tasks above the priority of the receiving task. Table 22 provides further explanation of Figure 36, and describes why the first four message originate from the same task.

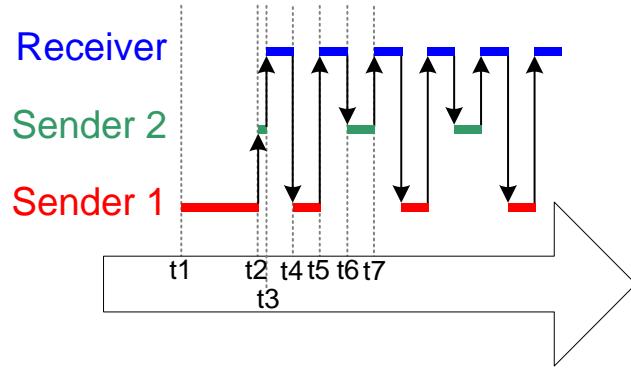

**Figure 36. The sequence of execution produced by Example 11**

**Table 22. Key to Figure 36**

Time	Description
t1	Task Sender 1 executes and sends 3 data items to the queue.
t2	The queue is full so Sender 1 enters the Blocked state to wait for its next send to complete. Task Sender 2 is now the highest priority task that is able to run, so enters the Running state.
t3	Task Sender 2 finds the queue is already full, so enters the Blocked state to wait for its first send to complete. Task Receiver is now the highest priority task that is able to run, so enters the Running state.
t4	Two tasks that have a priority higher than the receiving task's priority are waiting for space to become available on the queue, resulting in task Receiver being pre-empted as soon as it has removed one item from the queue. Tasks Sender 1 and Sender 2 have the same priority, so the scheduler selects the task that has been waiting the longest as the task that will enter the Running state—in this case that is task Sender 1.

**Table 22. Key to Figure 36**

Time	Description
t5	Task Sender 1 sends another data item to the queue. There was only one space in the queue, so task Sender 1 enters the Blocked state to wait for its next send to complete. Task Receiver is again the highest priority task that is able to run so enters the Running state.  Task Sender 1 has now sent four items to the queue, and task Sender 2 is still waiting to send its first item to the queue.
t6	Two tasks that have a priority higher than the receiving task's priority are waiting for space to become available on the queue, so task Receiver is pre-empted as soon as it has removed one item from the queue. This time Sender 2 has been waiting longer than Sender 1, so Sender 2 enters the Running state.
t7	Task Sender 2 sends a data item to the queue. There was only one space in the queue so Sender 2 enters the Blocked state to wait for its next send to complete. Both tasks Sender 1 and Sender 2 are waiting for space to become available on the queue, so task Receiver is the only task that can enter the Running state.

## 4.5 Working with Large or Variable Sized Data

---

### Queuing Pointers

If the size of the data being stored in the queue is large, then it is preferable to use the queue to transfer pointers to the data, rather than copy the data itself into and out of the queue byte by byte. Transferring pointers is more efficient in both processing time and the amount of RAM required to create the queue. However, when queuing pointers, extreme care must be taken to ensure that:

1. The owner of the RAM being pointed to is clearly defined.

When sharing memory between tasks via a pointer, it is essential to ensure that both tasks do not modify the memory contents simultaneously, or take any other action that could cause the memory contents to be invalid or inconsistent. Ideally, only the sending task should be permitted to access the memory until a pointer to the memory has been queued, and only the receiving task should be permitted to access the memory after the pointer has been received from the queue.

2. The RAM being pointed to remains valid.

If the memory being pointed to was allocated dynamically, or obtained from a pool of pre-allocated buffers, then exactly one task should be responsible for freeing the memory. No tasks should attempt to access the memory after it has been freed.

A pointer should never be used to access data that has been allocated on a task stack. The data will not be valid after the stack frame has changed.

By way of example, Listing 52, Listing 53 and Listing 54 demonstrate how to use a queue to send a pointer to a buffer from one task to another:

- Listing 52 creates a queue that can hold up to 5 pointers.
- Listing 53 allocates a buffer, writes a string to the buffer, then sends a pointer to the buffer to the queue.
- Listing 54 receives a pointer to a buffer from the queue, then prints the string contained in the buffer.

```
/* Declare a variable of type QueueHandle_t to hold the handle of the queue being created. */
QueueHandle_t xPointerQueue;

/* Create a queue that can hold a maximum of 5 pointers, in this case character pointers. */
xPointerQueue = xQueueCreate( 5, sizeof( char * ) );
```

---

**Listing 52. Creating a queue that holds pointers**

---

```
/* A task that obtains a buffer, writes a string to the buffer, then sends the address of the
buffer to the queue created in Listing 52. */
void vStringSendingTask( void *pvParameters )
{
char *pcStringToSend;
const size_t xMaxStringLength = 50;
BaseType_t xStringNumber = 0;

for( ;; )
{
    /* Obtain a buffer that is at least xMaxStringLength characters big. The implementation
    of prvGetBuffer() is not shown - it might obtain the buffer from a pool of pre-allocated
    buffers, or just allocate the buffer dynamically. */
    pcStringToSend = ( char * ) prvGetBuffer( xMaxStringLength );

    /* Write a string into the buffer. */
    snprintf( pcStringToSend, xMaxStringLength, "String number %d\r\n", xStringNumber );

    /* Increment the counter so the string is different on each iteration of this task. */
    xStringNumber++;

    /* Send the address of the buffer to the queue that was created in Listing 52. The
    address of the buffer is stored in the pcStringToSend variable.*/
    xQueueSend( xPointerQueue, /* The handle of the queue. */
                &pcStringToSend, /* The address of the pointer that points to the buffer. */
                portMAX_DELAY );
}
}
```

---

**Listing 53. Using a queue to send a pointer to a buffer**

---

```
/* A task that receives the address of a buffer from the queue created in Listing 52, and
written to in Listing 53. The buffer contains a string, which is printed out. */
void vStringReceivingTask( void *pvParameters )
{
char *pcReceivedString;

for( ;; )
{
    /* Receive the address of a buffer. */
    xQueueReceive( xPointerQueue, /* The handle of the queue. */
                  &pcReceivedString, /* Store the buffer's address in pcReceivedString. */
                  portMAX_DELAY );

    /* The buffer holds a string, print it out. */
    vPrintString( pcReceivedString );

    /* The buffer is not required any more - release it so it can be freed, or re-used. */
    prvReleaseBuffer( pcReceivedString );
}
}
```

---

**Listing 54. Using a queue to receive a pointer to a buffer**

---

## Using a Queue to Send Different Types and Lengths of Data

Previous sections have demonstrated two powerful design patterns; sending structures to a queue, and sending pointers to a queue. Combining those techniques allows a task to use a single queue to receive any data type from any data source. The implementation of the FreeRTOS+TCP TCP/IP stack provides a practical example of how this is achieved.

The TCP/IP stack, which runs in its own task, must process events from many different sources. Different event types are associated with different types and lengths of data. All events that occur outside of the TCP/IP task are described by a structure of type IPStackEvent\_t, and sent to the TCP/IP task on a queue. The IPStackEvent\_t structure is shown in Listing 55. The pvData member of the IPStackEvent\_t structure is a pointer that can be used to hold a value directly, or point to a buffer.

---

```
/* A subset of the enumerated types used in the TCP/IP stack to identify events. */
typedef enum
{
    eNetworkDownEvent = 0, /* The network interface has been lost, or needs (re)connecting. */
    eNetworkRxEvent,      /* A packet has been received from the network. */
    eTCPAcceptEvent,      /* FreeRTOS_accept() called to accept or wait for a new client. */

    /* Other event types appear here but are not shown in this listing. */

} eIPEvent_t;

/* The structure that describes events, and is sent on a queue to the TCP/IP task. */
typedef struct IP_TASK_COMMANDS
{
    /* An enumerated type that identifies the event. See the eIPEvent_t definition above. */
    eIPEvent_t eEventType;

    /* A generic pointer that can hold a value, or point to a buffer. */
    void *pvData;
} IPStackEvent_t;
```

---

**Listing 55.** The structure used to send events to the TCP/IP stack task in FreeRTOS+TCP

Example TCP/IP events, and their associated data, include:

- eNetworkRxEvent: A packet of data has been received from the network.

Data received from the network is sent to the TCP/IP task using a structure of type IPStackEvent\_t. The structure's eEventType member is set to eNetworkRxEvent, and the structure's pvData member is used to point to the buffer that contains the received data. A pseudo code example is shown in Listing 56.

```
void vSendRxDataToTheTCPTask( NetworkBufferDescriptor_t *pxRxedData )
{
IPStackEvent_t xEventStruct;

/* Complete the IPStackEvent_t structure. The received data is stored in
pxRxedData. */
xEventStruct.eEventType = eNetworkRxEvent;
xEventStruct.pvData = ( void * ) pxRxedData;

/* Send the IPStackEvent_t structure to the TCP/IP task. */
xSendEventStructToIPTask( &xEventStruct );
}
```

---

**Listing 56. Pseudo code showing how an IPStackEvent\_t structure is used to send data received from the network to the TCP/IP task**

- eTCPAcceptEvent: A socket is to accept, or wait for, a connection from a client.

Accept events are sent from the task that called FreeRTOS\_accept() to the TCP/IP task using a structure of type IPStackEvent\_t. The structure's eEventType member is set to eTCPAcceptEvent, and the structure's pvData member is set to the handle of the socket that is accepting a connection. A pseudo code example is shown in Listing 57.

---

```
void vSendAcceptRequestToTheTCPTask( Socket_t xSocket )
{
IPStackEvent_t xEventStruct;

/* Complete the IPStackEvent_t structure. */
xEventStruct.eEventType = eTCPAcceptEvent;
xEventStruct.pvData = ( void * ) xSocket;

/* Send the IPStackEvent_t structure to the TCP/IP task. */
xSendEventStructToIPTask( &xEventStruct );
}
```

---

**Listing 57. Pseudo code showing how an IPStackEvent\_t structure is used to send the handle of a socket that is accepting a connection to the TCP/IP task**

- eNetworkDownEvent: The network needs connecting, or re-connecting.

Network down events are sent from the network interface to the TCP/IP task using a structure of type IPStackEvent\_t. The structure's eEventType member is set to eNetworkDownEvent. Network down events are not associated with any data, so the structure's pvData member is not used. A pseudo code example is shown in Listing 58.

---

```

void vSendNetworkDownEventToTheTCPTask( Socket_t xSocket )
{
    IPStackEvent_t xEventStruct;

    /* Complete the IPStackEvent_t structure. */
    xEventStruct.eEventType = eNetworkDownEvent;
    xEventStruct.pvData = NULL; /* Not used, but set to NULL for completeness. */

    /* Send the IPStackEvent_t structure to the TCP/IP task. */
    xSendEventStructToIPTask( &xEventStruct );
}

```

---

**Listing 58. Pseudo code showing how an IPStackEvent\_t structure is used to send a network down event to the TCP/IP task**

The code that receives and processes these events within the TCP/IP task is shown in Listing 59. It can be seen that the eEventType member of the IPStackEvent\_t structures received from the queue is used to determine how the pvData member is to be interpreted.

---

```

IPStackEvent_t xReceivedEvent;

/* Block on the network event queue until either an event is received, or xNextIPSleep ticks pass without an event being received. eEventType is set to eNoEvent in case the call to xQueueReceive() returns because it timed out, rather than because an event was received. */
xReceivedEvent.eEventType = eNoEvent;
xQueueReceive( xNetworkEventQueue, &xReceivedEvent, xNextIPSleep );

/* Which event was received, if any? */
switch( xReceivedEvent.eEventType )
{
    case eNetworkDownEvent :
        /* Attempt to (re)establish a connection. This event is not associated with any data. */
        prvProcessNetworkDownEvent();
        break;

    case eNetworkRxEvent :
        /* The network interface has received a new packet. A pointer to the received data is stored in the pvData member of the received IPStackEvent_t structure. Process the received data. */
        prvHandleEthernetPacket( ( NetworkBufferDescriptor_t * )( xReceivedEvent.pvData ) );
        break;

    case eTCPAcceptEvent :
        /* The FreeRTOS_accept() API function was called. The handle of the socket that is accepting a connection is stored in the pvData member of the received IPStackEvent_t structure. */
        xSocket = ( FreeRTOS_Socket_t * )( xReceivedEvent.pvData );
        xTCPCheckNewClient( pxSocket );
        break;

    /* Other event types are processed in the same way, but are not shown here. */
}

```

---

**Listing 59. Pseudo code showing how an IPStackEvent\_t structure is received and processed**

## 4.6 Receiving From Multiple Queues

---

### Queue Sets

Often application designs require a single task to receive data of different sizes, data of different meaning, and data from different sources. The previous section demonstrated how this can be achieved in a neat and efficient way using a single queue that receives structures. However, sometimes an application's designer is working with constraints that limit their design choices, necessitating the use of a separate queue for some data sources. For example, third party code being integrated into a design might assume the presence of a dedicated queue. In such cases a 'queue set' can be used.

Queue sets allow a task to receive data from more than one queue without the task polling each queue in turn to determine which, if any, contains data.

A design that uses a queue set to receive data from multiple sources is less neat, and less efficient, than a design that achieves the same functionality using a single queue that receives structures. For that reason, it is recommended that queue sets are only used if design constraints make their use absolutely necessary.

The following sections describe how to use a queue set by:

1. Creating a queue set.
2. Adding queues to the set.

Semaphores can also be added to a queue set. Semaphores are described later in this book.

3. Reading from the queue set to determine which queues within the set contain data.

When a queue that is a member of a set receives data, the handle of the receiving queue is sent to the queue set, and returned when a task calls a function that reads from the queue set. Therefore, if a queue handle is returned from a queue set then the queue referenced by the handle is known to contain data, and the task can then read from the queue directly.

*Note: If a queue is a member of a queue set then do not read data from the queue unless the queue's handle has first been read from the queue set.*

Queue set functionality is enabled by setting the configUSE\_QUEUE\_SETS compile time configuration constant to 1 in FreeRTOSConfig.h.

### The **xQueueCreateSet()** API Function

A queue set must be explicitly created before it can be used.

Queues sets are referenced by handles, which are variables of type QueueSetHandle\_t. The xQueueCreateSet() API function creates a queue set and returns a QueueSetHandle\_t that references the queue set it created.

---

```
QueueSetHandle_t xQueueCreateSet( const UBaseType_t uxEventQueueLength );
```

---

**Listing 60. The xQueueCreateSet() API function prototype**

**Table 23. xQueueCreateSet() parameters and return value**

Parameter Name	Description
uxEventQueueLength	<p>When a queue that is a member of a queue set receives data, the handle of the receiving queue is sent to the queue set. uxEventQueueLength defines the maximum number of queue handles the queue set being created can hold at any one time.</p> <p>Queue handles are only sent to a queue set when a queue within the set receives data. A queue cannot receive data if it is full, so no queue handles can be sent to the queue set if all the queues in the set are full. Therefore, the maximum number of items the queue set will ever have to hold at one time is the sum of the lengths of every queue in the set.</p> <p>As an example, if there are three empty queues in the set, and each queue has a length of five, then in total the queues in the set can receive fifteen items (three queues multiplied by five items each) before all the queues in the set are full. In that example uxEventQueueLength must be set to fifteen to guarantee the queue set can receive every item sent to it.</p> <p>Semaphores can also be added to a queue set. Binary and counting semaphores are covered later in this book. For the purposes of calculating the necessary uxEventQueueLength, the length of a binary semaphore is one, and the length of a counting semaphore is given by the semaphore's maximum count value.</p> <p>As another example, if a queue set will contain a queue that has a length of three, and a binary semaphore (which has a length of one), uxEventQueueLength must be set to four (three plus one).</p>

**Table 23. xQueueCreateSet() parameters and return value**

Parameter Name	Description
Return Value	If NULL is returned, then the queue set cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the queue set data structures and storage area.  A non-NUL value being returned indicates that the queue set has been created successfully. The returned value should be stored as the handle to the created queue set.

### The xQueueAddToSet() API Function

xQueueAddToSet() adds a queue or semaphore to a queue set. Semaphores are described later in this book.

---

```
BaseType_t xQueueAddToSet( QueueSetMemberHandle_t xQueueOrSemaphore,
                           QueueSetHandle_t xQueueSet );
```

---

**Listing 61. The xQueueAddToSet() API function prototype**

**Table 24. xQueueAddToSet() parameters and return value**

Parameter Name	Description
xQueueOrSemaphore	The handle of the queue or semaphore that is being added to the queue set.  Queue handles and semaphore handles can both be cast to the QueueSetMemberHandle_t type.
xQueueSet	The handle of the queue set to which the queue or semaphore is being added.

**Table 24. xQueueAddToSet() parameters and return value**

Parameter Name	Description
Return Value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>pdPASS will be returned only if the queue or semaphore was successfully added to the queue set.</p> <ol style="list-style-type: none"><li>2. pdFAIL</li></ol> <p>pdFAIL will be returned if the queue or semaphore could not be added to the queue set.</p> <p>Queues and binary semaphores can only be added to a set when they are empty. Counting semaphores can only be added to a set when their count is zero. Queues and semaphores can only be a member of one set at a time.</p>

### The xQueueSelectFromSet() API Function

xQueueSelectFromSet() reads a queue handle from the queue set.

When a queue or semaphore that is a member of a set receives data, the handle of the receiving queue or semaphore is sent to the queue set, and returned when a task calls xQueueSelectFromSet(). If a handle is returned from a call to xQueueSelectFromSet() then the queue or semaphore referenced by the handle is known to contain data and the calling task must then read from the queue or semaphore directly.

*Note: Do not read data from a queue or semaphore that is a member of a set unless the handle of the queue or semaphore has first been returned from a call to xQueueSelectFromSet(). Only read one item from a queue or semaphore each time the queue handle or semaphore handle is returned from a call to xQueueSelectFromSet().*

---

```
QueueSetMemberHandle_t xQueueSelectFromSet( QueueSetHandle_t xQueueSet,
                                            const TickType_t xTicksToWait );
```

---

**Listing 62. The xQueueSelectFromSet() API function prototype**

**Table 25. xQueueSelectFromSet() parameters and return value**

Parameter Name	Description
xQueueSet	The handle of the queue set from which a queue handle or semaphore handle is being received (read). The queue set handle will have been returned from the call to xQueueCreateSet() used to create the queue set.
xTicksToWait	<p>The maximum amount of time the calling task should remain in the Blocked state to wait to receive a queue or semaphore handle from the queue set, if all the queues and semaphores in the set are empty.</p> <p>If xTicksToWait is zero then xQueueSelectFromSet() will return immediately if all the queues and semaphores in the set are empty.</p> <p>The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds to a time specified in ticks.</p> <p>Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out) provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.</p>

**Table 25. xQueueSelectFromSet() parameters and return value**

Parameter Name	Description
Return Value	<p>A return value that is not NULL will be the handle of a queue or semaphore that is known to contain data. If a block time was specified (xTicksToWait was not zero), then it is possible that the calling task was placed into the Blocked state to wait for data to become available from a queue or semaphore in the set, but a handle was successfully read from the queue set before the block time expired. Handles are returned as a QueueSetMemberHandle_t type, which can be cast to either a QueueHandle_t type or SemaphoreHandle_t type.</p> <p>If the return value is NULL then a handle could not be read from the queue set. If a block time was specified (xTicksToWait was not zero) then the calling task will have been placed into the Blocked state to wait for another task or interrupt to send data to a queue or semaphore in the set, but the block time expired before that happened.</p>

### **Example 12. Using a Queue Set**

This example creates two sending tasks and one receiving task. The sending tasks send data to the receiving task on two separate queues, one queue for each task. The two queues are added to a queue set, and the receiving task reads from the queue set to determine which of the two queues contain data.

The tasks, queues, and the queue set, are all created in main()—see Listing 63 for its implementation.

---

```
/* Declare two variables of type QueueHandle_t. Both queues are added to the same
queue set. */
static QueueHandle_t xQueue1 = NULL, xQueue2 = NULL;

/* Declare a variable of type QueueSetHandle_t. This is the queue set to which the
two queues are added. */
static QueueSetHandle_t xQueueSet = NULL;

int main( void )
{
    /* Create the two queues, both of which send character pointers. The priority
    of the receiving task is above the priority of the sending tasks, so the queues
    will never have more than one item in them at any one time*/
    xQueue1 = xQueueCreate( 1, sizeof( char * ) );
    xQueue2 = xQueueCreate( 1, sizeof( char * ) );

    /* Create the queue set. Two queues will be added to the set, each of which can
    contain 1 item, so the maximum number of queue handles the queue set will ever
    have to hold at one time is 2 (2 queues multiplied by 1 item per queue). */
    xQueueSet = xQueueCreateSet( 1 * 2 );

    /* Add the two queues to the set.*/
    xQueueAddToSet( xQueue1, xQueueSet );
    xQueueAddToSet( xQueue2, xQueueSet );

    /* Create the tasks that send to the queues.*/
    xTaskCreate( vSenderTask1, "Sender1", 1000, NULL, 1, NULL );
    xTaskCreate( vSenderTask2, "Sender2", 1000, NULL, 1, NULL );

    /* Create the task that reads from the queue set to determine which of the two
    queues contain data.*/
    xTaskCreate( vReceiverTask, "Receiver", 1000, NULL, 2, NULL );

    /* Start the scheduler so the created tasks start executing.*/
    vTaskStartScheduler();

    /* As normal, vTaskStartScheduler() should not return, so the following lines
    will never execute.*/
    for( ; ; );
    return 0;
}
```

---

**Listing 63. Implementation of main() for Example 12**

The first sending task uses xQueue1 to send a character pointer to the receiving task every 100 milliseconds. The second sending task uses xQueue2 to send a character pointer to the receiving task every 200 milliseconds. The character pointers are set to point to a string that identifies the sending task. The implementation of both sending tasks is shown in Listing 64.

```
void vSenderTask1( void *pvParameters )
{
const TickType_t xBlockTime = pdMS_TO_TICKS( 100 );
const char * const pcMessage = "Message from vSenderTask1\r\n";

/* As per most tasks, this task is implemented within an infinite loop. */
for( ;; )
{
    /* Block for 100ms. */
    vTaskDelay( xBlockTime );

    /* Send this task's string to xQueue1. It is not necessary to use a block
     time, even though the queue can only hold one item. This is because the
     priority of the task that reads from the queue is higher than the priority of
     this task; as soon as this task writes to the queue it will be pre-empted by
     the task that reads from the queue, so the queue will already be empty again
     by the time the call to xQueueSend() returns. The block time is set to 0. */
    xQueueSend( xQueue1, &pcMessage, 0 );
}

/*
-----*/
void vSenderTask2( void *pvParameters )
{
const TickType_t xBlockTime = pdMS_TO_TICKS( 200 );
const char * const pcMessage = "Message from vSenderTask2\r\n";

/* As per most tasks, this task is implemented within an infinite loop. */
for( ;; )
{
    /* Block for 200ms. */
    vTaskDelay( xBlockTime );

    /* Send this task's string to xQueue2. It is not necessary to use a block
     time, even though the queue can only hold one item. This is because the
     priority of the task that reads from the queue is higher than the priority of
     this task; as soon as this task writes to the queue it will be pre-empted by
     the task that reads from the queue, so the queue will already be empty again
     by the time the call to xQueueSend() returns. The block time is set to 0. */
    xQueueSend( xQueue2, &pcMessage, 0 );
}
}
```

---

**Listing 64. The sending tasks used in Example 12**

The queues that are written to by the sending tasks are members of the same queue set. Each time a task sends to one of the queues, the handle of the queue is sent to the queue set. The receiving task calls xQueueSelectFromSet() to read the queue handles from the queue set. After the receiving task has received a queue handle from the set, it knows the queue referenced by the received handle contains data, so reads the data from the queue directly. The data it reads from the queue is a pointer to a string, which the receiving task prints out.

If a call to xQueueSelectFromSet() times out, then it will return NULL. In Example 12, xQueueSelectFromSet() is called with an indefinite block time, so will never time out, and can

only return a valid queue handle. Therefore, the receiving task does not need to check to see if xQueueSelectFromSet() returned NULL before the return value is used.

xQueueSelectFromSet() will only return a queue handle if the queue referenced by the handle contains data, so it is not necessary to use a block time when reading from the queue.

The implementation of the receive task is shown in Listing 65.

---

```
void vReceiverTask( void *pvParameters )
{
    QueueHandle_t xQueueThatContainsData;
    char *pcReceivedString;

    /* As per most tasks, this task is implemented within an infinite loop. */
    for( ; ; )
    {
        /* Block on the queue set to wait for one of the queues in the set to contain data.
        Cast the QueueSetMemberHandle_t value returned from xQueueSelectFromSet() to a
        QueueHandle_t, as it is known all the members of the set are queues (the queue set
        does not contain any semaphores). */
        xQueueThatContainsData = ( QueueHandle_t ) xQueueSelectFromSet( xQueueSet,
                                                                    portMAX_DELAY );


        /* An indefinite block time was used when reading from the queue set, so
        xQueueSelectFromSet() will not have returned unless one of the queues in the set
        contained data, and xQueueThatContainsData cannot be NULL. Read from the queue. It
        is not necessary to specify a block time because it is known the queue contains
        data. The block time is set to 0. */
        xQueueReceive( xQueueThatContainsData, &pcReceivedString, 0 );

        /* Print the string received from the queue. */
        vPrintString( pcReceivedString );
    }
}
```

---

**Listing 65. The receive task used in Example 12**

Figure 37 shows the output produced by Example 12. It can be seen that the receiving task receives strings from both sending tasks. The block time used by vSenderTask1() is half of the block time used by vSenderTask2(), causing the strings sent by vSenderTask1() to be printed out twice as often as those sent by vSenderTask2().

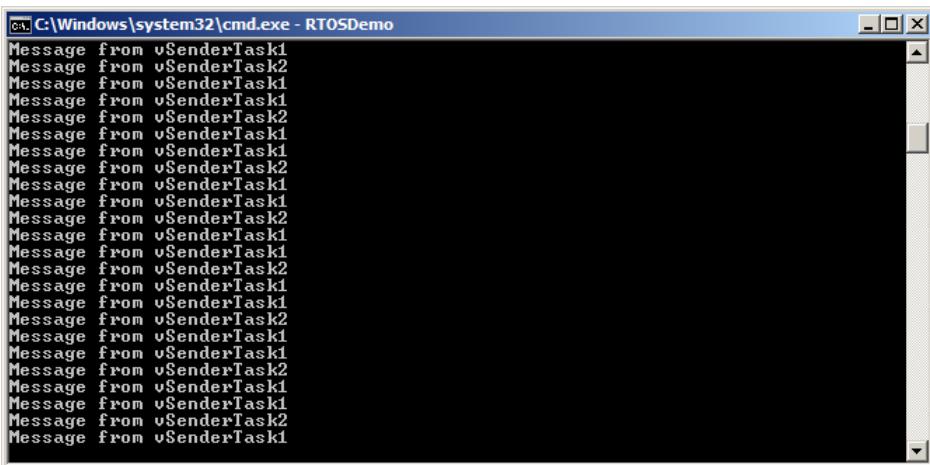

**Figure 37** The output produced when Example 12 is executed

## More Realistic Queue Set Use Cases

Example 12 demonstrated a very simplistic case; the queue set only contained queues, and the two queues it contained were both used to send a character pointer. In a real application, a queue set might contain both queues and semaphores, and the queues might not all hold the same data type. When this is the case, it is necessary to test the value returned by `xQueueSelectFromSet()`, before the returned value is used. Listing 66 demonstrates how to use the value returned from `xQueueSelectFromSet()` when the set has the following members:

1. A binary semaphore.
  2. A queue from which character pointers are read.
  3. A queue from which uint32\_t values are read.

Listing 66 assumes the queues and semaphore have already been created and added to the queue set.

---

```

/* The handle of the queue from which character pointers are received. */
QueueHandle_t xCharPointerQueue;

/* The handle of the queue from which uint32_t values are received. */
QueueHandle_t xUint32tQueue;

/* The handle of the binary semaphore. */
SemaphoreHandle_t xBinarySemaphore;

/* The queue set to which the two queues and the binary semaphore belong. */
QueueSetHandle_t xQueueSet;

void vAMoreRealisticReceiverTask( void *pvParameters )
{
    QueueSetMemberHandle_t xHandle;
    char *pcReceivedString;
    uint32_t ulRecievedValue;
    const TickType_t xDelay100ms = pdMS_TO_TICKS( 100 );

    for( ;; )
    {
        /* Block on the queue set for a maximum of 100ms to wait for one of the members of
        the set to contain data. */
        xHandle = xQueueSelectFromSet( xQueueSet, xDelay100ms );

        /* Test the value returned from xQueueSelectFromSet(). If the returned value is
        NULL then the call to xQueueSelectFromSet() timed out. If the returned value is not
        NULL then the returned value will be the handle of one of the set's members. The
        QueueSetMemberHandle_t value can be cast to either a QueueHandle_t or a
        SemaphoreHandle_t. Whether an explicit cast is required depends on the compiler. */

        if( xHandle == NULL )
        {
            /* The call to xQueueSelectFromSet() timed out. */
        }
        else if( xHandle == ( QueueSetMemberHandle_t ) xCharPointerQueue )
        {
            /* The call to xQueueSelectFromSet() returned the handle of the queue that
            receives character pointers. Read from the queue. The queue is known to contain
            data, so a block time of 0 is used. */
            xQueueReceive( xCharPointerQueue, &pcReceivedString, 0 );

            /* The received character pointer can be processed here... */
        }
        else if( xHandle == ( QueueSetMemberHandle_t ) xUint32tQueue )
        {
            /* The call to xQueueSelectFromSet() returned the handle of the queue that
            receives uint32_t types. Read from the queue. The queue is known to contain
            data, so a block time of 0 is used. */
            xQueueReceive( xUint32tQueue, &ulRecievedValue, 0 );

            /* The received value can be processed here... */
        }
        Else if( xHandle == ( QueueSetMemberHandle_t ) xBinarySemaphore )
        {
            /* The call to xQueueSelectFromSet() returned the handle of the binary semaphore.
            Take the semaphore now. The semaphore is known to be available so a block time
            of 0 is used. */
            xSemaphoreTake( xBinarySemaphore, 0 );

            /* Whatever processing is necessary when the semaphore is taken can be performed
            here... */
        }
    }
}

```

---

**Listing 66. Using a queue set that contains queues and semaphores**

## 4.7 Using a Queue to Create a Mailbox

---

嵌入式社区内的术语没有达成共识，“邮箱”在不同的 RTOS 中意味着不同的东西。

There is no consensus on terminology within the embedded community, and ‘mailbox’ will 在本书中，术语邮箱用于指代长度为 1 的队列。 mean different things in different RTOSes. In this book the term mailbox is used to refer to a 队列可能因其在应用程序中的使用方式而被描述为邮箱，而不是因为它与队列具有功能差异： queue that has a length of one. A queue may get described as a mailbox because of the way it is used in the application, rather than because it has a functional difference to a queue:

- A queue is used to send data from one task to another task, or from an interrupt service routine to a task. The sender places an item in the queue, and the receiver removes the item from the queue. The data passes through the queue from the sender to the receiver. 队列用于将数据从一个任务发送到另一个任务，或从中断服务程序发送到任务。  
发送者将一个项目放入队列，接收者从队列中移除该项目。 数据通过队列从发送方传递到接收方。
- A mailbox is used to hold data that can be read by any task, or any interrupt service routine. The data does not pass through the mailbox, but instead remains in the mailbox until it is overwritten. The sender overwrites the value in the mailbox. The receiver reads the value from the mailbox, but does not remove the value from the mailbox. 邮箱用于保存可由任何任务或任何中断服务程序读取的数据。  
数据不通过邮箱，而是保留在邮箱中，直到被覆盖。发件人覆盖邮箱中的值。  
接收者从邮箱中读取值，但不从邮箱中删除值。

This chapter describes two queue API functions that allow a queue to be used as a mailbox.  
本章介绍了两个允许将队列用作邮箱的队列 API 函数。

Listing 67 shows a queue being created for use as a mailbox.

```
邮箱可以容纳固定大小的数据项。 数据项的大小是在创建邮箱（队列）时设置的。在此示例中，创建邮箱以保存 Example_t 结构。
/* A mailbox can hold a fixed size data item. The size of the data item is set
when the mailbox (queue) is created. In this example the mailbox is created to
hold an Example_t structure. Example_t includes a time stamp to allow the data held
in the mailbox to note the time at which the mailbox was last updated. The time
stamp used in this example is for demonstration purposes only - a mailbox can hold
any data the application writer wants, and the data does not need to include a time
stamp. */
typedef struct xExampleStructure Example_t
{
    TickType_t xTimeStamp;
    uint32_t ulValue;
} Example_t;

邮箱是一个队列，因此它的句柄存储在 QueueHandle_t 类型的变量中。
/* A mailbox is a queue, so its handle is stored in a variable of type
QueueHandle_t. */
QueueHandle_t xMailbox;

void vAFunction( void )
{
    创建将用作邮箱的队列。队列的长度为 1 以允许它与 xQueueOverwrite() API 函数一起使用，如下所述。
    /* Create the queue that is going to be used as a mailbox. The queue has a
length of 1 to allow it to be used with the xQueueOverwrite() API function, which
is described below. */
    xMailbox = xQueueCreate( 1, sizeof( Example_t ) );
}
```

---

Listing 67. A queue being created for use as a mailbox

### The xQueueOverwrite() API Function

与 xQueueSendToBack() API 函数一样，xQueueOverwrite() API 函数将数据发送到队列。

Like the xQueueSendToBack() API function, the xQueueOverwrite() API function sends data to a queue. Unlike xQueueSendToBack(), if the queue is already full, then xQueueOverwrite() will overwrite data that is already in the queue.

xQueueOverwrite() 只能用于长度为 1 的队列。如果队列已满，该限制避免了函数的实现需要任意决定要覆盖队列中的哪个项目。xQueueOverwrite() should only be used with queues that have a length of one. That restriction avoids the need for the function's implementation to make an arbitrary decision as to which item in the queue to overwrite, if the queue is full.

注意：切勿从中断服务程序调用 xQueueOverwrite()。应使用中断安全版本 xQueueOverwriteFromISR() 代替它。

Note: Never call xQueueOverwrite() from an interrupt service routine. The interrupt-safe version xQueueOverwriteFromISR() should be used in its place.

---

```
BaseType_t xQueueOverwrite( QueueHandle_t xQueue, const void * pvItemToQueue );
```

---

Listing 68. The xQueueOverwrite() API function prototype

xQueueOverwrite() 参数和返回值

Table 26. xQueueOverwrite() parameters and return value

Parameter Name/ Returned Value	Description
xQueue	正在向其发送（写入）数据的队列句柄。队列句柄将从用于创建队列的 xQueueCreate() 调用中返回。 The handle of the queue to which the data is being sent (written). The queue handle will have been returned from the call to xQueueCreate() used to create the queue.
pvItemToQueue	指向要复制到队列中的数据的指针。 A pointer to the data to be copied into the queue. 队列可以容纳的每个项目的大小是在创建队列时设置的，因此会从 pvItemToQueue 将这么多字节复制到队列存储区中。 The size of each item that the queue can hold is set when the queue is created, so this many bytes will be copied from pvItemToQueue into the queue storage area. 即使队列已满，xQueueOverwrite() 也会写入队列，因此 pdPASS 是唯一可能的返回值。 xQueueOverwrite() will write to the queue even when the queue is full, so pdPASS is the only possible return value.
Returned value	xQueueOverwrite()

清单 69 显示了 xQueueOverwrite() 用于写入在清单 67 中创建的邮箱（队列）。

Listing 69 shows xQueueOverwrite() being used to write to the mailbox (queue) that was created in Listing 67.

---

```
void vUpdateMailbox( uint32_t ulnewValue )
{
/* Example_t was defined in Listing 67. */
Example_t xData;

/* Write the new data into the Example_t structure.*/
xData.ulValue = ulnewValue;

/* Use the RTOS tick count as the time stamp stored in the Example_t structure. */
xData.xTimeStamp = xTaskGetTickCount();

/* Send the structure to the mailbox - overwriting any data that is already in the
mailbox. */
xQueueOverwrite( xMailbox, &xData );
}
```

---

Listing 69. Using the xQueueOverwrite() API function

### The xQueuePeek() API Function

xQueuePeek() 用于从队列中接收（读取）项目，而不会从队列中删除该项目。

xQueuePeek() is used to receive (read) an item from a queue *without* the item being removed from the queue. xQueuePeek() 从队列头部接收数据，不修改队列中存储的数据，也不修改队列中数据的存储顺序。xQueuePeek() receives data from the head of the queue, without modifying the data stored in the queue, or the order in which data is stored in the queue.

注意：切勿从中断服务程序调用 xQueuePeek()。应使用中断安全版本 xQueuePeekFromISR() 代替它。

Note: Never call xQueuePeek() from an interrupt service routine. The interrupt-safe version xQueuePeekFromISR() should be used in its place.

xQueuePeek() has the same function parameters and return value as xQueueReceive().

---

```
BaseType_t xQueuePeek( QueueHandle_t xQueue,
                      void * const pvBuffer,
                      TickType_t xTicksToWait );
```

---

**Listing 70.** The xQueuePeek() API function prototype

Listing 71 shows xQueuePeek() being used to receive the item posted to the mailbox (queue) in Listing 69.

---

```
BaseType_t vReadMailbox( Example_t *pxData )
{
    TickType_t xPreviousTimeStamp;
    BaseType_t xDataUpdated;

    /* This function updates an Example_t structure with the latest value received
       from the mailbox. Record the time stamp already contained in *pxData before it
       gets overwritten by the new data. */
    xPreviousTimeStamp = pxData->xTimeStamp;

    /* Update the Example_t structure pointed to by pxData with the data contained in
       the mailbox. If xQueueReceive() was used here then the mailbox would be left
       empty, and the data could not then be read by any other tasks. Using
       xQueuePeek() instead of xQueueReceive() ensures the data remains in the mailbox.
       A block time is specified, so the calling task will be placed in the Blocked
       state to wait for the mailbox to contain data should the mailbox be empty. An
       infinite block time is used, so it is not necessary to check the value returned
       from xQueuePeek(), as xQueuePeek() will only return when data is available. */
    xQueuePeek( xMailbox, pxData, portMAX_DELAY );

    /* Return pdTRUE if the value read from the mailbox has been updated since this
       function was last called. Otherwise return pdFALSE. */
    if( pxData->xTimeStamp > xPreviousTimeStamp )
    {
        xDataUpdated = pdTRUE;
    }
    else
    {
        xDataUpdated = pdFALSE;
    }

    return xDataUpdated;
}
```

---

**Listing 71.** Using the xQueuePeek() API function

# Chapter 5

## Software Timer Management

---

## 5.1 Chapter Introduction and Scope

---

软件定时器用于在未来的设定时间安排功能的执行，或以固定的频率定期执行。

Software timers are used to schedule the execution of a function at a set time in the future, or 软件定时器执行的函数称为软件定时器的回调函数。

periodically with a fixed frequency. The function executed by the software timer is called the software timer's callback function.

软件定时器由 FreeRTOS 内核实现并受其控制。

Software timers are implemented by, and are under the control of, the FreeRTOS kernel. 它们不需要硬件支持，并且与硬件定时器或硬件计数器无关。

They do not require hardware support, and are not related to hardware timers or hardware counters.

请注意，根据 FreeRTOS 使用创新设计来确保最大效率的理念，软件定时器不使用任何处理时间，除非软件定时器回调函数正在实际执行

Note that, in line with the FreeRTOS philosophy of using innovative design to ensure maximum efficiency, software timers do not use any processing time unless a software timer callback function is actually executing.

软件定时器功能是可选的。要包括软件定时器功能：

Software timer functionality is optional. To include software timer functionality:

构建 FreeRTOS 源文件 FreeRTOS/Source/timers.c 作为项目的一部分。

1. Build the FreeRTOS source file FreeRTOS/Source/timers.c as part of your project.

在 FreeRTOSConfig.h 中将 configUSE\_TIMERS 设置为 1。

2. Set configUSE\_TIMERS to 1 in FreeRTOSConfig.h.

### Scope Scope

本章旨在让读者更好地理解：

This chapter aims to give readers a good understanding of:

软件定时器的特性与任务特性的比较。

- The characteristics of a software timer compared to the characteristics of a task.

RTOS 守护程序任务。

- The RTOS daemon task.

定时器命令队列。

- The timer command queue.

一次性软件定时器和周期性软件定时器之间的区别。

- The difference between a one shot software timer and a periodic software timer.

如何创建、启动、重置和更改软件定时器的周期。

- How to create, start, reset and change the period of a software timer.

## 5.2 Software Timer Callback Functions

软件定时器回调函数作为 C 函数实现。

Software timer callback functions are implemented as C functions. The only thing special about them is their prototype, which must return void, and take a handle to a software timer as its only parameter. The callback function prototype is demonstrated by Listing 72.

---

```
void ATimerCallback( TimerHandle_t xTimer );
```

---

**Listing 72. The software timer callback function prototype**

软件定时器回调函数从头到尾执行，并以正常方式退出。它们应该保持简短，并且不得进入 Blocked 状态。Software timer callback functions execute from start to finish, and exit in the normal way. They should be kept short, and must not enter the Blocked state.

注意：正如将要看到的，软件定时器回调函数在 FreeRTOS 调度程序启动时自动创建的任务的上下文中执行。

*Note: As will be seen, software timer callback functions execute in the context of a task that is created automatically when the FreeRTOS scheduler is started. Therefore, it is essential that software timer callback functions never call FreeRTOS API functions that will result in the calling task entering the Blocked state. It is ok to call functions such as xQueueReceive(), but only if the function's xTicksToWait parameter (which specifies the function's block time) is set to 0. It is not ok to call functions such as vTaskDelay(), as calling vTaskDelay() will always place the calling task into the Blocked state.*

## 5.3 Attributes and States of a Software Timer

### 软件定时器的周期

#### Period of a Software Timer

软件定时器的“周期”是软件定时器启动和软件定时器回调函数执行之间的时间。

A software timer's 'period' is the time between the software timer being started, and the software timer's callback function executing.

### 一次性和自动重新加载计时器

#### One-shot and Auto-reload Timers

有两种类型的软件定时器：

There are two types of software timer:

1. One-shot timers

一旦启动，一次性计时器将只执行一次其回调函数。一次性计时器可以手动重新启动，但不会自行重新启动。  
Once started, a one-shot timer will execute its callback function once only. A one-shot timer can be restarted manually, but will not restart itself.

2. Auto-reload timers

一旦启动，自动重载计时器将在每次到期时重新启动，从而定期执行其回调函数。  
Once started, an auto-reload timer will re-start itself each time it expires, resulting in periodic execution of its callback function.

图 38 显示了一次性定时器和自动重载定时器之间的行为差异。垂直虚线标记发生滴答中断的时间。

Figure 38 shows the difference in behavior between a one-shot timer and an auto-reload timer.  
The dashed vertical lines mark the times at which a tick interrupt occurs.

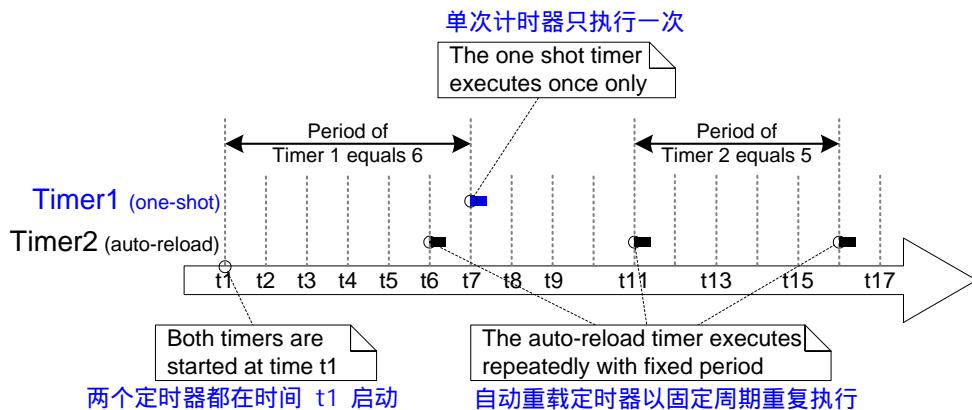


Figure 38 The difference in behavior between one-shot and auto-reload software timers

图 38 one-shot 和 auto-reload 软件定时器之间的行为差异

Referring to Figure 38:

- Timer 1

计时器 1 是一个单次计时器，周期为 6 个滴答。

Timer 1 is a one-shot timer that has a period of 6 ticks. It is started at time t1, so its 它在时间 t1 开始，因此它的回调函数在 6 个滴答之后执行，在时间 t7。callback function executes 6 ticks later, at time t7. As timer 1 is a one-shot timer, its 由于定时器 1 是一次性定时器，所以它的回调函数不会再次执行。callback function does not execute again.

- Timer 2

定时器 2 是一个自动重载定时器，周期为 5 个滴答。

Timer 2 is an auto-reload timer that has a period of 5 ticks. It is started at time t1, so its 它在时间 t1 开始，因此它的回调函数在时间 t1 之后每 5 个滴答执行一次。callback function executes every 5 ticks after time t1. In Figure 38 this is at times t6, t11 and t16.

## Software Timer States

软件定时器可以处于以下两种状态之一：

A software timer can be in one of the following two states:

- Dormant

休眠软件定时器存在，可以被它的句柄引用，但没有运行，所以它的回调函数不会执行。

A Dormant software timer exists, and can be referenced by its handle, but is not running, so its callback functions will not execute.

- Running

运行中的软件定时器将在软件定时器进入运行状态或软件定时器上次复位后经过等于其周期的时间后执行其回调函数。

A Running software timer will execute its callback function after a time equal to its period has elapsed since the software timer entered the Running state, or since the software timer was last reset.

图 39 和图 40 分别显示了自动重载定时器和一次性定时器在休眠和运行状态之间可能的转换。

Figure 39 and Figure 40 show the possible transitions between the Dormant and Running 两个图的关键区别在于定时器超时后进入的状态；

states for an auto-reload timer and a one-shot timer respectively. The key difference between 自动重载定时器执行其回调函数然后重新进入运行状态，一次性定时器执行其回调函数然后进入休眠状态。the two diagrams is the state entered after the timer has expired; the auto-reload timer executes its callback function then re-enters the Running state, the one-shot timer executes its callback function then enters the Dormant state.

xTimerDelete() API 函数删除计时器。 可以随时删除计时器。

The xTimerDelete() API function deletes a timer. A timer can be deleted at any time.

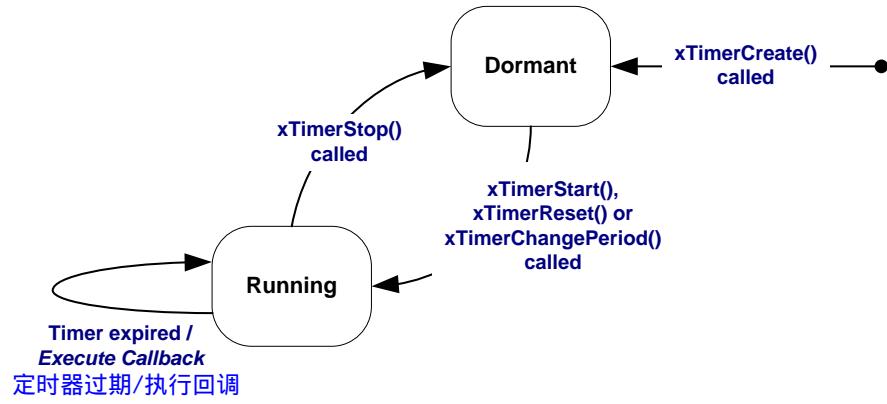


Figure 39 Auto-reload software timer states and transitions

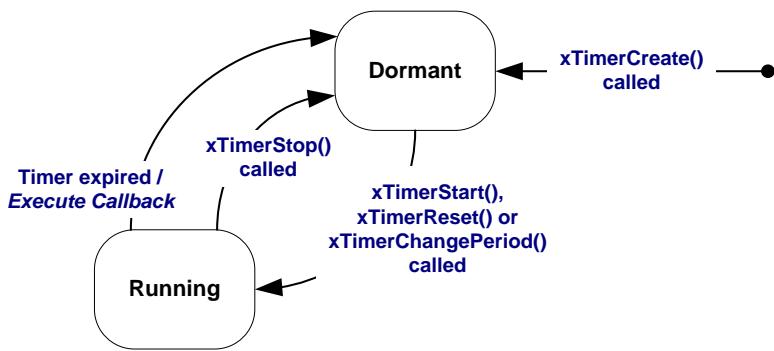


Figure 40 One-shot software timer states and transitions

## 5.4 The Context of a Software Timer 软件定时器的上下文

RTOS 守护程序（定时器服务）任务

### The RTOS Daemon (Timer Service) Task

所有软件定时器回调函数都在同一个 RTOS 守护进程（或“定时器服务”）task 的上下文中执行。

All software timer callback functions execute in the context of the same RTOS daemon (or ‘timer service’) task<sup>1</sup>.

守护程序任务是在调度程序启动时自动创建的标准 FreeRTOS 任务。

The daemon task is a standard FreeRTOS task that is created automatically when the scheduler is started. Its priority and stack size are set by the configTIMER\_TASK\_PRIORITY

and configTIMER\_TASK\_STACK\_DEPTH compile time configuration constants respectively. 这两个常量都在 FreeRTOSConfig.h 中定义。

Both constants are defined within FreeRTOSConfig.h.

软件定时器回调函数不得调用会导致调用任务进入阻塞状态的 FreeRTOS API 函数，否则会导致守护任务进入阻塞状态。 Software timer callback functions must not call FreeRTOS API functions that will result in the calling task entering the Blocked state, as to do so will result in the daemon task entering the Blocked state.

### The Timer Command Queue 定时器命令队列

软件计时器 API 函数将命令从调用任务发送到称为“定时器命令队列”的队列上的守护程序任务。

Software timer API functions send commands from the calling task to the daemon task on a queue called the ‘timer command queue’. This is shown in Figure 41. Examples of commands include ‘start a timer’, ‘stop a timer’ and ‘reset a timer’.

定时器命令队列是一个标准的 FreeRTOS 队列，它在调度程序启动时自动创建。

The timer command queue is a standard FreeRTOS queue that is created automatically when the scheduler is started. The length of the timer command queue is set by the configTIMER\_QUEUE\_LENGTH compile time configuration constant in FreeRTOSConfig.h. 定时器命令队列的长度由 FreeRTOSConfig.h 中的 configTIMER\_QUEUE\_LENGTH 编译时间配置常量设置。

---

该任务曾经被称为“定时器服务任务”，因为它最初只是用来执行软件定时器回调函数。

<sup>1</sup> The task used to be called the ‘timer service task’, because originally it was only used to execute software timer callback functions. Now the same task is used for other purposes too, so it is known by the more generic name of the ‘RTOS daemon task’.

现在，同样的任务也用于其他目的，因此它被称为“RTOS 守护程序任务”的更通用名称。

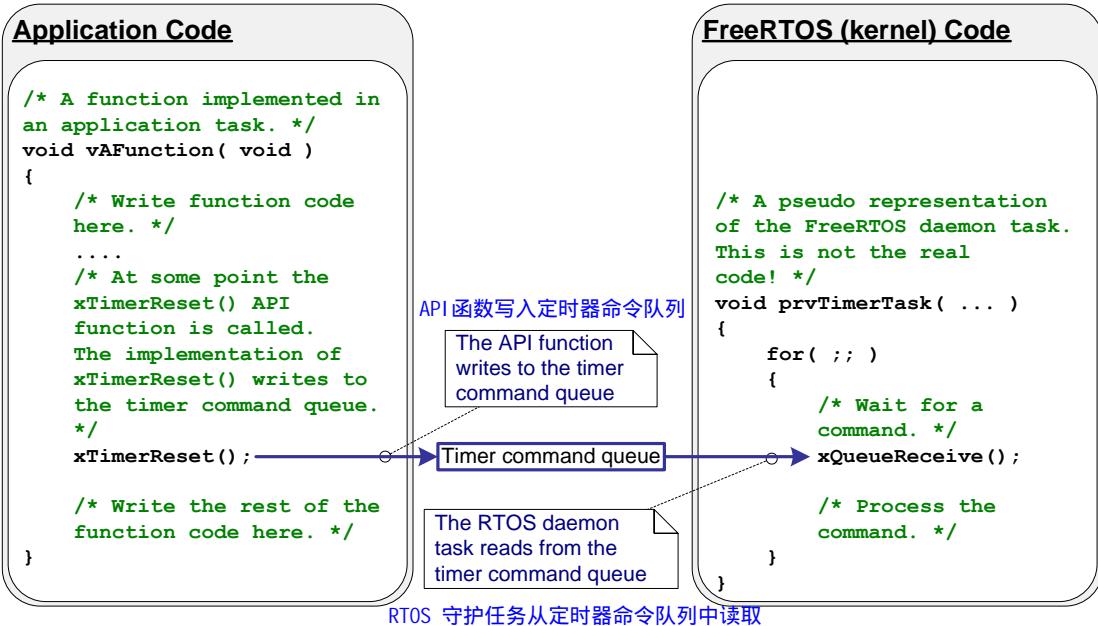


Figure 41 The timer command queue being used by a software timer API function to communicate with the RTOS daemon task

## Daemon Task Scheduling

守护程序任务与任何其他 FreeRTOS 任务一样安排；当它是能够运行的最高优先级任务时，它只会处理命令或执行计时器回调函数。The daemon task is scheduled like any other FreeRTOS task; it will only process commands, or execute timer callback functions, when it is the highest priority task that is able to run. 图 42 和图 43 演示了 configTIMER\_TASK\_PRIORITY 设置如何影响执行模式。Figure 42 and Figure 43 demonstrate how the configTIMER\_TASK\_PRIORITY setting affects the execution pattern.

图 42 显示了当守护程序任务的优先级低于调用 xTimerStart() API 函数的任务的优先级时的执行模式

Figure 42 shows the execution pattern when the priority of the daemon task is below the priority of a task that calls the xTimerStart() API function.

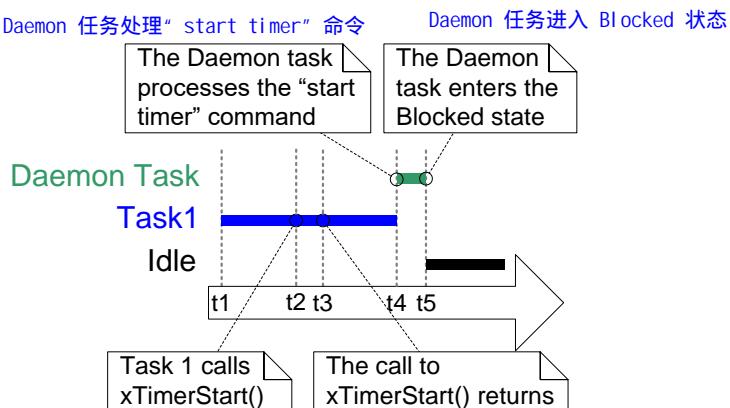


Figure 42 The execution pattern when the priority of a task calling xTimerStart() is above the priority of the daemon task

参考图42，其中Task 1的优先级高于daemon task的优先级，daemon task的优先级高于Idle task的优先级：

Referring to Figure 42, in which the priority of Task 1 is higher than the priority of the daemon task, and the priority of the daemon task is higher than the priority of the Idle task:

#### 1. At time t1

Task 1 处于 Running 状态，daemon 任务处于 Blocked 状态。

Task 1 is in the Running state, and the daemon task is in the Blocked state.

如果命令被发送到定时器命令队列，守护任务将离开阻塞状态，在这种情况下它将处理该命令，或者如果软件定时器到期，在这种情况下它将执行软件定时器的回调函数。

The daemon task will leave the Blocked state if a command is sent to the timer command queue, in which case it will process the command, or if a software timer expires, in which case it will execute the software timer's callback function.

#### 2. At time t2

Task 1 calls xTimerStart().

xTimerStart() 向定时器命令队列发送命令，导致守护任务离开阻塞状态。

xTimerStart() sends a command to the timer command queue, causing the daemon Task 1 的优先级高于 daemon 任务的优先级，所以 daemon 任务不会抢占 Task 1。task to leave the Blocked state. The priority of Task 1 is higher than the priority of the daemon task, so the daemon task does not pre-empt Task 1.

Task 1 仍然处于 Running 状态，daemon 任务已经离开 Blocked 状态，进入 Ready 状态。

Task 1 is still in the Running state, and the daemon task has left the Blocked state and entered the Ready state.

#### 3. At time t3

任务 1 完成执行 xTimerStart() API 函数。任务 1 从函数开始到函数结束执行 xTimerStart()，没有离开 Running 状态。Task 1 completes executing the xTimerStart() API function. Task 1 executed xTimerStart() from the start of the function to the end of the function, without leaving the Running state.

#### 4. At time t4

任务 1 调用导致其进入阻塞状态的 API 函数。

Task 1 calls an API function that results in it entering the Blocked state. The daemon daemon 任务现在是 Ready 状态下优先级最高的任务，所以调度器选择 daemon 任务作为进入 Running 状态的任务。task is now the highest priority task in the Ready state, so the scheduler selects the 然后，守护程序任务开始处理任务 1 发送到计时器命令队列的命令。daemon task as the task to enter the Running state. The daemon task then starts to

process the command sent to the timer command queue by Task 1.

注意：正在启动的软件定时器到期的时间是从“启动定时器”命令发送到定时器命令队列的时间计算的——它不是从守护程序任务从定时器命令队列接收到“启动定时器”命令的时间计算的。

Note: The time at which the software timer being started will expire is calculated from the time the 'start a timer' command was sent to the timer command queue—it is not calculated from the time the daemon task received the 'start a timer' command from the timer command queue.

#### 5. At time t5

守护程序任务已完成对任务 1 发送给它的命令的处理，并尝试从计时器命令队列中接收更多数据。

The daemon task has completed processing the command sent to it by Task 1, and attempts to receive more data from the timer command queue. The timer command queue is empty, so the daemon task re-enters the Blocked state. The daemon task will leave the Blocked state again if a command is sent to the timer command queue, or if a software timer expires.

Idle任务现在是Ready状态下优先级最高的任务，所以调度器选择Idle任务作为进入Running状态的任务。

The Idle task is now the highest priority task in the Ready state, so the scheduler selects the Idle task as the task to enter the Running state.

图 43 显示了与图 42 类似的场景，但这次守护程序任务的优先级高于调用 xTimerStart() 的任务的优先级。

Figure 43 shows a similar scenario to that shown by Figure 42, but this time the priority of the daemon task is above the priority of the task that calls xTimerStart().

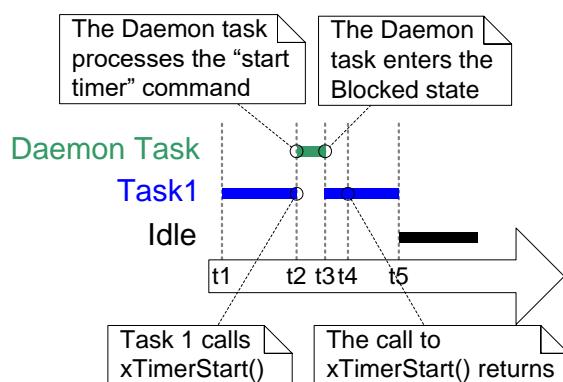


Figure 43 The execution pattern when the priority of a task calling xTimerStart() is below the priority of the daemon task

Referring to Figure 43, in which the priority of the daemon task is higher than the priority of Task 1, and the priority of the Task 1 is higher than the priority of the Idle task:

1. At time t1

和之前一样，Task 1 处于 Running 状态，而 daemon 任务处于 Blocked 状态。

As before, Task 1 is in the Running state, and the daemon task is in the Blocked state.

2. At time t2

Task 1 calls `xTimerStart()`.

`xTimerStart()` 向定时器命令队列发送命令，导致守护任务离开阻塞状态。

`xTimerStart()` sends a command to the timer command queue, causing the daemon task to leave the Blocked state. The priority of the daemon task is higher than the priority of Task 1, so the scheduler selects the daemon task as the task to enter the Running state.

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

任务 1 在完成执行 xTimerStart() 函数之前被守护程序任务抢占，现在处于就绪状态。

Task 1 was pre-empted by the daemon task before it had completed executing the xTimerStart() function, and is now in the Ready state.

守护任务开始处理任务1发送到定时器命令队列的命令。

The daemon task starts to process the command sent to the timer command queue by Task 1.

### 3. At time t3

守护程序任务已完成对任务 1 发送给它的命令的处理，并尝试从计时器命令队列中接收更多数据。

The daemon task has completed processing the command sent to it by Task 1, and attempts to receive more data from the timer command queue. The timer command queue is empty, so the daemon task re-enters the Blocked state.

Task 1 现在是 Ready 状态下优先级最高的任务，所以调度器选择 Task 1 作为进入 Running 状态的任务。

Task 1 is now the highest priority task in the Ready state, so the scheduler selects Task 1 as the task to enter the Running state.

### 4. At time t4

任务 1 在完成执行 xTimerStart() 函数之前被守护程序任务抢占，并且仅在重新进入运行状态后退出（返回）xTimerStart()。Task 1 was pre-empted by the daemon task before it had completed executing the xTimerStart() function, and only exits (returns from) xTimerStart() after it has re-entered the Running state.

### 5. At time t5

任务 1 调用导致其进入阻塞状态的 API 函数。

Task 1 calls an API function that results in it entering the Blocked state. The Idle task is now the highest priority task in the Ready state, so the scheduler selects the Idle task as the task to enter the Running state.

在图 42 所示的场景中，从任务 1 向定时器命令队列发送命令到守护程序任务接收并处理命令之间经过了一段时间。

In the scenario shown by Figure 42, time passed between Task 1 sending a command to the timer command queue, and the daemon task receiving and processing the command. In the scenario shown by Figure 43, the daemon task had received and processed the command sent to it by Task 1 before Task 1 returned from the function that sent the command.

发送到定时器命令队列的命令包含一个时间戳。

Commands sent to the timer command queue contain a time stamp. The time stamp is used to account for any time that passes between a command being sent by an application task, and the same command being processed by the daemon task. For example, if a ‘start a timer’ command is sent to start a timer that has a period of 10 ticks, the time stamp is used to ensure the timer being started expires 10 ticks after the command was sent, not 10 ticks after the command was processed by the daemon task.

例如，如果发送“start a timer”命令来启动一个周期为 10 个滴答的计时器，则时间戳用于确保正在启动的计时器在命令发送后 10 个滴答后过期，而不是在发送命令后的 10 个滴答后过期。命令由守护程序任务处理。

## 5.5 Creating and Starting a Software Timer

### The xTimerCreate() API Function

FreeRTOS V9.0.0 还包括 xTimerCreateStatic() 函数，该函数在编译时分配静态创建定时器所需的内存：软件定时器必须在使用前显式创建。  
FreeRTOS V9.0.0 also includes the xTimerCreateStatic() function, which allocates the memory required to create a

timer statically at compile time: A software timer must be explicitly created before it can be used.

软件定时器由 TimerHandle\_t 类型的变量引用。

Software timers are referenced by variables of type TimerHandle\_t. xTimerCreate() is used to xTimerCreate() 用于创建软件定时器并返回 TimerHandle\_t 以引用它创建的软件定时器。软件计时器在休眠状态下创建。create a software timer and returns a TimerHandle\_t to reference the software timer it creates.

Software timers are created in the Dormant state.

软件计时器可以在调度程序运行之前创建，也可以在调度程序启动后从任务中创建。

Software timers can be created before the scheduler is running, or from a task after the scheduler has been started.

第 0 节描述了使用的数据类型和命名约定。

Section 0 describes the data types and naming conventions used.

---

```
TimerHandle_t xTimerCreate( const char * const pcTimerName,
                           TickType_t xTimerPeriodInTicks,
                           UBaseType_t uxAutoReload,
                           void * pvTimerID,
                           TimerCallbackFunction_t pxCallbackFunction );
```

Listing 73. The xTimerCreate() API function prototype xTimerCreate() API 函数原型

Table 27. xTimerCreate() parameters and return value

Parameter Name/ Returned Value	Description
pcTimerName	计时器的描述性名称。 FreeRTOS 不以任何方式使用它。 它纯粹是作为调试帮助而包含在内的。 通过人类可读的名称来识别计时器比尝试通过其句柄来识别它要简单得多。 A descriptive name for the timer. This is not used by FreeRTOS in any way. It is included purely as a debugging aid. Identifying a timer by a human readable name is much simpler than attempting to identify it by its handle.
xTimerPeriodInTicks	计时器的周期以刻度指定。 pdMS_TO_TICKS() 宏可用于将以毫秒为单位的时间转换为以滴答为单位的时间。 The timer's period specified in ticks. The pdMS_TO_TICKS() macro can be used to convert a time specified in milliseconds into a time specified in ticks.
uxAutoReload	将 uxAutoReload 设置为 pdTRUE 以创建自动重新加载计时器。 将 uxAutoReload 设置为 pdFALSE 以创建一次性计时器。 Set uxAutoReload to pdTRUE to create an auto-reload timer. Set uxAutoReload to pdFALSE to create a one-shot timer.

Table 27. xTimerCreate() parameters and return value

Parameter Name/ Returned Value	Description
pvTimerID	<p>每个软件定时器都有一个 ID 值。 ID 是一个空指针，应用程序编写者可以将其用于任何目的。 Each software timer has an ID value. The ID is a void pointer, and can be used by the application writer for any purpose. The ID is 当多个软件定时器使用相同的回调函数时，ID 特别有用，因为它可用于提供定时器特定的存储。 particularly useful when the same callback function is used by more than one software timer, as it can be used to provide timer specific storage. Use of a timer's ID is demonstrated in an example within this 本章中的示例演示了计时器 ID 的使用。 chapter.</p> <p>pvTimerID 为正在创建的任务的 ID 设置初始值。 pvTimerID sets an initial value for the ID of the task being created.</p>
pxCallbackFunction	<p>软件计时器回调函数只是符合清单 72 中所示原型的 C 函数。 Software timer callback functions are simply C functions that conform pxCallbackFunction 参数是指向函数的指针（实际上，只是函数名称）， to the prototype shown in Listing 72. The pxCallbackFunction 以用作正在创建的软件计时器的回调函数。 parameter is a pointer to the function (in effect, just the function name) to use as the callback function for the software timer being created.</p>
Returned value	<p>如果返回 NULL，则无法创建软件计时器，因为 FreeRTOS 没有足够的堆内存来分配必要的数据结构。 If NULL is returned, then the software timer cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the necessary data structure.</p> <p>返回非 NULL 值表示软件定时器已成功创建。 返回值是创建的定时器的句柄。 A non-NULL value being returned indicates that the software timer has been created successfully. The returned value is the handle of the created timer.</p> <p>第 2 章提供了有关堆内存管理的更多信息。 Chapter 2 provides more information on heap memory management.</p>

### The xTimerStart() API Function

xTimerStart() 用于启动处于休眠状态的软件定时器，或复位（重新启动）处于运行状态的软件定时器。  
xTimerStart() is used to start a software timer that is in the Dormant state, or reset (re-start) a  
xTimerStop() 用于停止处于运行状态的软件定时器。 停止软件定时器与将定时器转换为休眠状态相同。  
software timer that is in the Running state. xTimerStop() is used to stop a software timer that  
is in the Running state. Stopping a software timer is the same as transitioning the timer into  
the Dormant state.

xTimerStart() 可以在调度程序启动之前调用，但是当它完成后，软件计时器将在调度程序启动之前真正启动。  
xTimerStart() can be called before the scheduler is started, but when this is done, the software  
timer will not actually start until the time at which the scheduler starts.

注意：切勿从中断服务程序调用 `xTimerStart()`。应使用中断安全版本 `xTimerStartFromISR()` 代替它。  
Note: Never call `xTimerStart()` from an interrupt service routine. The interrupt-safe version `xTimerStartFromISR()` should be used in its place.

---

```
BaseType_t xTimerStart( TimerHandle_t xTimer, TickType_t xTicksToWait );
```

---

**Listing 74. The `xTimerStart()` API function prototype**

**Table 28. `xTimerStart()` parameters and return value**

Parameter Name/ Returned Value	Description
<code>xTimer</code>	正在启动或重置的软件定时器的句柄。句柄将从调用 <code>xTimerCreate()</code> 中返回，该函数用于创建软件计时器。 The handle of the software timer being started or reset. The handle will have been returned from the call to <code>xTimerCreate()</code> used to create the software timer.

Table 28. xTimerStart() parameters and return value

Parameter Name/ Returned Value	Description
xTicksToWait	<p>xTimerStart() 使用计时器命令队列将“启动计时器”命令发送到守护程序任务。xTimerStart() uses the timer command queue to send the ‘start a timer’ command to the daemon task. xTicksToWait specifies the maximum amount of time the calling task should remain in the Blocked state to wait for space to become available on the timer command queue, should the queue already be full.</p> <p>如果 xTicksToWait 为零并且计时器命令队列已满，xTimerStart() 将立即返回。xTimerStart() will return immediately if xTicksToWait is zero and the timer command queue is already full.</p> <p>块时间以滴答周期指定，因此它所代表的绝对时间取决于滴答频率。The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() 可用于将以毫秒为单位的时间转换为以滴答为单位的时间。pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>如果在 FreeRTOSConfig.h 中将 INCLUDE_vTaskSuspend 设置为 1，则将 xTicksToWait 设置为 portMAX_DELAY 将导致调用任务无限期地保持在阻塞状态（没有超时）以等待计时器命令队列中的空间可用。If INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h then setting xTicksToWait to portMAX_DELAY will result in the calling task remaining in the Blocked state indefinitely (without a timeout) to wait for space to become available in the timer command queue.</p> <p>If xTimerStart() is called before the scheduler has been started then the value of xTicksToWait is ignored, and xTimerStart() behaves as if xTicksToWait had been set to zero.</p> <p>如果在调度程序启动之前调用 xTimerStart()，则忽略 xTicksToWait 的值，并且 xTimerStart() 的行为就像 xTicksToWait 已设置为零一样。</p>

**Table 28. xTimerStart() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"> <li>1. pdPASS            仅当“启动计时器”命令成功发送到计时器命令队列时，才会返回 pdPASS。            pdPASS will be returned only if the ‘start a timer’ command was successfully sent to the timer command queue.            如果守护程序任务的优先级高于调用 xTimerStart() 的任务的优先级，那么调度程序将确保在 xTimerStart() 返回之前处理启动命令。            If the priority of the daemon task is above the priority of the task that called xTimerStart(), then the scheduler will ensure the start command is processed before xTimerStart() returns. This is because the daemon task will pre-empt the task that called xTimerStart() as soon as there is data in the timer command queue.</li> </ol> <p>如果指定了阻塞时间 (xTicksToWait 不为零) , 则调用任务有可能被置于阻塞状态以等待定时器命令队列中的空间在函数返回之前变为可用，但数据已成功写入 在块时间到期之前的计时器命令队列。</p> <p>If a block time was specified (xTicksToWait was not zero), then it is possible the calling task was placed into the Blocked state to wait for space to become available in the timer command queue before the function returned, but data was successfully written to the timer command queue before the block time expired.</p> <ol style="list-style-type: none"> <li>1. pdFALSE            如果由于队列已满而无法将“启动计时器”命令写入计时器命令队列，则将返回 pdFALSE。            pdFALSE will be returned if the ‘start a timer’ command could not be written to the timer command queue because the queue was already full.</li> </ol> <p>如果指定了阻塞时间 (xTicksToWait 不为零) , 则调用任务将被置于阻塞状态以等待守护程序任务在计时器命令队列中腾出空间，但指定的阻塞时间在此之前已过期。</p> <p>If a block time was specified (xTicksToWait was not zero) then the calling task will have been placed into the Blocked state to wait for the daemon task to make room in the timer command queue, but the specified block time expired before that happened.</p>

### Example 13. Creating one-shot and auto-reload timers

This example creates and starts a one-shot timer and an auto-reload timer—as shown in Listing 75.

---

分配给一次性计时器的周期分别为 3.333 秒和半秒。

```
/* The periods assigned to the one-shot and auto-reload timers are 3.333 second and half a
second respectively. */
#define mainONE_SHOT_TIMER_PERIOD      pdMS_TO_TICKS( 3333 )
#define mainAUTO_RELOAD_TIMER_PERIOD   pdMS_TO_TICKS( 500 )

int main( void )
{
    TimerHandle_t xAutoReloadTimer, xOneShotTimer;
    BaseType_t xTimer1Started, xTimer2Started;

    /* Create the one shot timer, storing the handle to the created timer in xOneShotTimer. */
    xOneShotTimer = xTimerCreate(
        /* Text name for the software timer - not used by FreeRTOS. */
        "OneShot", 软件计时器的文本名称 - FreeRTOS 不使用。
        /* The software timer's period in ticks. */
        mainONE_SHOT_TIMER_PERIOD, 软件计时器的周期 (以滴答为单位)。
        /* Setting uxAutoReLoad to pdFALSE creates a one-shot software timer. */
        pdFALSE, 将 uxAutoReLoad 设置为 pdFALSE 会创建一个一次性软件计时器。
        /* This example does not use the timer id. */
        0, 此示例不使用计时器 ID。
        /* The callback function to be used by the software timer being created. */
        prvOneShotTimerCallback ); 正在创建的软件计时器要使用的回调函数。

    /* Create the auto-reload timer, storing the handle to the created timer in xAutoReloadTimer. */
    xAutoReloadTimer = xTimerCreate(
        /* Text name for the software timer - not used by FreeRTOS. */
        "AutoReload",
        /* The software timer's period in ticks. */
        mainAUTO_RELOAD_TIMER_PERIOD,
        /* Setting uxAutoReLoad to pdTRUE creates an auto-reload timer. */
        pdTRUE,
        /* This example does not use the timer id. */
        0,
        /* The callback function to be used by the software timer being created. */
        prvAutoReloadTimerCallback );

    /* Check the software timers were created. */
    if( ( xOneShotTimer != NULL ) && ( xAutoReloadTimer != NULL ) )
    {
        /* 使用 0 块时间 (无块时间) 启动软件计时器。调度程序尚未启动，因此此处指定的任何阻塞时间都将被忽略。
        * Start the software timers, using a block time of 0 (no block time). The scheduler has
        not been started yet so any block time specified here would be ignored anyway. */
        xTimer1Started = xTimerStart( xOneShotTimer, 0 );
        xTimer2Started = xTimerStart( xAutoReloadTimer, 0 );

        /* xTimerStart() 的实现使用定时器命令队列，如果定时器命令队列已满，xTimerStart() 将失败。
        * The implementation of xTimerStart() uses the timer command queue, and xTimerStart()
        will fail if the timer command queue gets full. The timer service task does not get
        created until the scheduler is started, so all commands sent to the command queue will
        stay in the queue until after the scheduler has been started. Check both calls to
        xTimerStart() passed. */
        if( ( xTimer1Started == pdPASS ) && ( xTimer2Started == pdPASS ) )
        {
            /* Start the scheduler. */
            vTaskStartScheduler(); 在调度程序启动之前不会创建计时器服务任务，因此发送到命令队列的所有命令都将保留在队列中，直到调度程序启动之后。检查对 xTimerStart() 的两个调用均已通过。
        }
    }

    /* As always, this line should not be reached. */
    for( ; ; );
}
```

---

Listing 75. Creating and starting the timers used in Example 13

定时器的回调函数每次被调用时只打印一条消息。

The timers' callback functions just print a message each time they are called. The implementation of the one-shot timer callback function is shown in Listing 76. The implementation of the auto-reload timer callback function is shown in Listing 77.

一次性定时器回调函数的实现如清单 76 所示。自动重载定时器回调函数的实现如清单 77 所示。

---

```
static void prvOneShotTimerCallback( TimerHandle_t xTimer )
{
    TickType_t xTimeNow;
    /* 获取当前滴答计数。
     * Obtain the current tick count. */
    xTimeNow = xTaskGetTickCount();
    /* 输出一个字符串以显示执行回调的时间。
     * Output a string to show the time at which the callback was executed. */
    vPrintStringAndNumber( "One-shot timer callback executing", xTimeNow );
    /* 文件范围变量
     * File scope variable. */
    ulCallCount++;
}
```

**Listing 76. The callback function used by the one-shot timer in Example 13**

---

```
static void prvAutoReloadTimerCallback( TimerHandle_t xTimer )
{
    TickType_t xTimeNow;
    /* Obtain the current tick count. */
    xTimeNow = uxTaskGetTickCount();

    /* Output a string to show the time at which the callback was executed. */
    vPrintStringAndNumber( "Auto-reload timer callback executing", xTimeNow );


    ulCallCount++;
}
```

**Listing 77. The callback function used by the auto-reload timer in Example 13**

---

Executing this example produces the output shown in Figure 44. Figure 44 shows the auto-reload timer's callback function executing with a fixed period of 500 ticks (mainAUTO\_RELOAD\_TIMER\_PERIOD is set to 500 in Listing 75), and the one-shot timer's callback function executing only once, when the tick count is 3333 (mainONE\_SHOT\_TIMER\_PERIOD is set to 3333 in Listing 75).

执行此示例会产生图 44 中所示的输出。图 44 显示了自动重载计时器的回调函数以 500 个滴答的固定周期执行（在清单 75 中 mainAUTO\_RELOAD\_TIMER\_PERIOD 设置为 500），并且一次性计时器的回调函数只执行一次，当滴答计数为 3333 时（清单 75 中的 mainONE\_SHOT\_TIMER\_PERIOD 设置为 3333）。

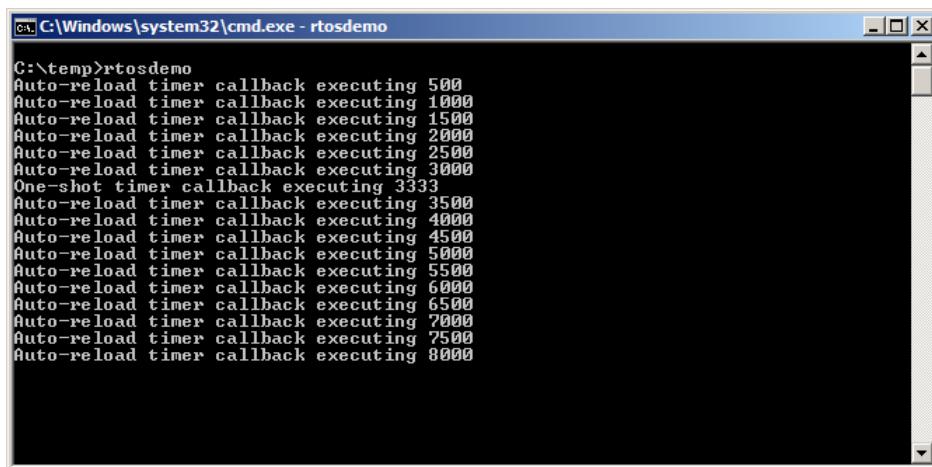

```
C:\temp>rtosdemo
Auto-reload timer callback executing 500
Auto-reload timer callback executing 1000
Auto-reload timer callback executing 1500
Auto-reload timer callback executing 2000
Auto-reload timer callback executing 2500
Auto-reload timer callback executing 3000
One-shot timer callback executing 3333
Auto-reload timer callback executing 3500
Auto-reload timer callback executing 4000
Auto-reload timer callback executing 4500
Auto-reload timer callback executing 5000
Auto-reload timer callback executing 5500
Auto-reload timer callback executing 6000
Auto-reload timer callback executing 6500
Auto-reload timer callback executing 7000
Auto-reload timer callback executing 7500
Auto-reload timer callback executing 8000
```

Figure 44 The output produced when Example 13 is executed

## 5.6 The Timer ID

---

每个软件定时器都有一个 ID，它是一个标签值，应用程序编写者可以将其用于任何目的。

Each software timer has an ID, which is a tag value that can be used by the application writer. ID 存储在 void 指针 (void \*) 中，因此可以直接存储整数值，指向任何其他对象，或用作函数指针。for any purpose. The ID is stored in a void pointer (void \*), so can store an integer value

directly, point to any other object, or be used as a function pointer.

创建软件定时器时，会为 ID 分配一个初始值，之后可以使用 vTimerSetTimerID() API 函数更新 ID，并使用 pvTimerGetTimerID() API 函数进行查询。

An initial value is assigned to the ID when the software timer is created—after which the ID can be updated using the vTimerSetTimerID() API function, and queried using the pvTimerGetTimerID() API function.

与其他软件定时器 API 函数不同，vTimerSetTimerID() 和 pvTimerGetTimerID() 直接访问软件定时器——它们不向定时器命令队列发送命令。

Unlike other software timer API functions, vTimerSetTimerID() and pvTimerGetTimerID() access the software timer directly—they do not send a command to the timer command queue.

### The vTimerSetTimerID() API Function

---

```
void vTimerSetTimerID( const TimerHandle_t xTimer, void *pvNewID );
```

**Listing 78.** The vTimerSetTimerID() API function prototype

**Table 29.** vTimerSetTimerID() parameters

Parameter Name/ Returned Value	Description
xTimer	使用新 ID 值更新软件计时器的句柄。句柄将从调用 xTimerCreate() 中返回，该函数用于创建软件计时器。 The handle of the software timer being updated with a new ID value. The handle will have been returned from the call to xTimerCreate() used to create the software timer.
pvNewID	将设置软件定时器 ID 的值。 The value to which the software timer's ID will be set.

### The pvTimerGetTimerID() API Function

---

```
void *pvTimerGetTimerID( TimerHandle_t xTimer );
```

**Listing 79.** The pvTimerGetTimerID() API function prototype

Table 30. pvTimerGetTimerID() parameters and return value

Parameter Name/ Returned Value	Description
xTimer	The handle of the software timer being queried. The handle will have been returned from the call to xTimerCreate() used to create the software timer.
Returned value	The ID of the software timer being queried.

#### 示例 14. 使用回调函数参数和软件定时器 ID

#### Example 14. Using the callback function parameter and the software timer ID

同一个回调函数可以分配给多个软件定时器。完成后，回调函数参数用于确定哪个软件计时器到期。

The same callback function can be assigned to more than one software timer. When that is done, the callback function parameter is used to determine which software timer expired.

示例 13 使用了两个单独的回调函数； oneshot 计时器使用了一个回调函数，而自动重载计时器使用了另一个回调函数。

Example 13 used two separate callback functions; one callback function was used by the one-shot timer, and the other callback function was used by the auto-reload timer. Example 14 creates similar functionality to that created by Example 13, but assigns a single callback function to both software timers.

示例 14 使用的 main() 函数与示例 13 中使用的 main() 函数几乎相同。

The main() function used by Example 14 is almost identical to the main() function used in Example 13. The only difference is where the software timers are created. This difference is shown in Listing 80, where prvTimerCallback() is used as the callback function for both timers.

```
/* Create the one shot timer software timer, storing the handle in xOneShotTimer. */
xOneShotTimer = xTimerCreate( "OneShot",
                             mainONE_SHOT_TIMER_PERIOD,
                             pdFALSE,
                             /* The timer's ID is initialized to 0. */
                             0,
                             /* prvTimerCallback() is used by both timers. */
                             prvTimerCallback );

/* Create the auto-reload software timer, storing the handle in xAutoReloadTimer */
xAutoReloadTimer = xTimerCreate( "AutoReload",
                                mainAUTO_RELOAD_TIMER_PERIOD,
                                pdTRUE,
                                /* The timer's ID is initialized to 0. */
                                0,
                                /* prvTimerCallback() is used by both timers. */
                                prvTimerCallback );
```

Listing 80. Creating the timers used in Example 14

`prvTimerCallback()` 将在任一计时器到期时执行。

`prvTimerCallback()` will execute when either timer expires. The implementation of `prvTimerCallback()` 的实现使用函数的参数来确定调用它是因为一次性计时器到期，还是因为自动重载计时器到期。  
`prvTimerCallback()` uses the function's parameter to determine if it was called because the one-shot timer expired, or because the auto-reload timer expired.

`prvTimerCallback()` 还演示了如何使用软件定时器 ID 作为定时器特定的存储；

`prvTimerCallback()` also demonstrates how to use the software timer ID as timer specific storage; each software timer keeps a count of the number of times it has expired in its own ID, and the auto-reload timer uses the count to stop itself the fifth time it executes.

`prvTimerCallback()` 的实现如清单 79 所示。

The implementation of `prvTimerCallback()` is shown in Listing 79.

---

```
static void prvTimerCallback( TimerHandle_t xTimer )
{
    TickType_t xTimeNow;
    uint32_t ulExecutionCount;
    /* A count of the number of times this software timer has expired is stored in the timer's
     * ID. Obtain the ID, increment it, then save it as the new ID value. The ID is a void
     * pointer, so is cast to a uint32_t. */ ID 是一个 void 指针，因此被强制转换为 uint32_t.
    ulExecutionCount = ( uint32_t ) pvTimerGetTimerID( xTimer );
    ulExecutionCount++;
    vTimerSetTimerID( xTimer, ( void * ) ulExecutionCount );


    /* Obtain the current tick count. */
    xTimeNow = xTaskGetTickCount();
    创建计时器时，一次性计时器的句柄存储在 xOneShotTimer 中。
    /* The handle of the one-shot timer was stored in xOneShotTimer when the timer was created.
     * Compare the handle passed into this function with xOneShotTimer to determine if it was the
     * one-shot or auto-reload timer that expired, then output a string to show the time at which
     * the callback was executed. */ 将传入此函数的句柄与 xOneShotTimer 进行比较，以确定是否是一次性
    if( xTimer == xOneShotTimer ) 或自动重新加载计时器过期，然后输出一个字符串以显示执行回调的时间。
    {
        vPrintStringAndNumber( "One-shot timer callback executing", xTimeNow );
    }
    else
    {
        /* xTimer did not equal xOneShotTimer, so it must have been the auto-reload timer that
         * expired. */
        vPrintStringAndNumber( "Auto-reload timer callback executing", xTimeNow );

        if( ulExecutionCount == 5 )
        {
            /* Stop the auto-reload timer after it has executed 5 times. This callback function
             * executes in the context of the RTOS daemon task so must not call any functions that
             * might place the daemon task into the Blocked state. Therefore a block time of 0 is
             * used. */
            xTimerStop( xTimer, 0 );
        }
    }
}
```

---

**Listing 81. The timer callback function used in Example 14**

The output produced by Example 14 is shown in Figure 45. It can be seen that the auto-reload timer only executes five times.

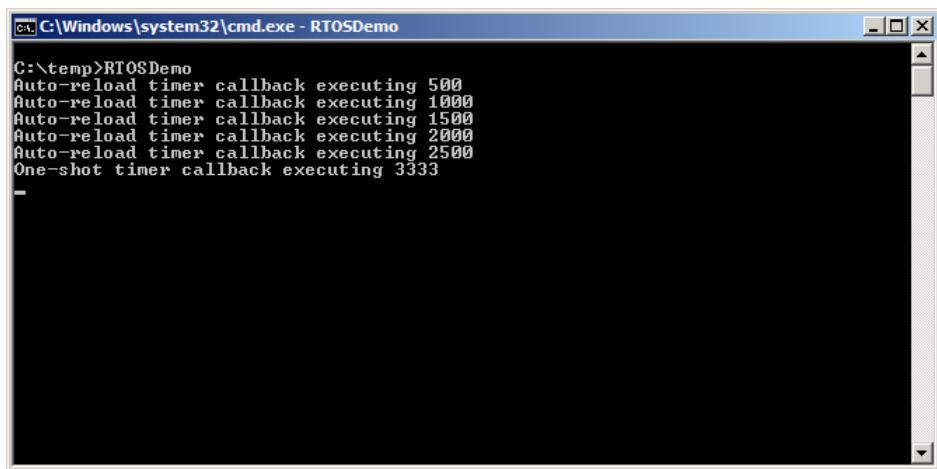

```
C:\temp>RTOSDemo
Auto-reload timer callback executing 500
Auto-reload timer callback executing 1000
Auto-reload timer callback executing 1500
Auto-reload timer callback executing 2000
Auto-reload timer callback executing 2500
One-shot timer callback executing 3333
-
```

Figure 45 The output produced when Example 14 is executed

## 5.7 Changing the Period of a Timer

---

每个官方 FreeRTOS 端口都提供了一个或多个示例项目。

Every official FreeRTOS port is provided with one or more example projects. Most example 大多数示例项目都是自检的，并使用 LED 来提供项目状态的视觉反馈； projects are self-checking, and an LED is used to give visual feedback of the project's status; if 如果自检始终通过，则 LED 缓慢切换，如果自检失败，则 LED 快速切换。 the self-checks have always passed then the LED is toggled slowly, if a self-check has ever failed then the LED is toggled quickly.

一些示例项目在任务中执行自检，并使用 vTaskDelay() 函数来控制 LED 切换的速率。

Some example projects perform the self-checks in a task, and use the vTaskDelay() function 其他示例项目在软件定时器回调函数中执行自检，并使用定时器的周期来控制 LED 切换的速率。 to control the rate at which the LED toggles. Other example projects perform the self-checks in a software timer callback function, and use the timer's period to control the rate at which the LED toggles.

### The xTimerChangePeriod() API Function

使用 xTimerChangePeriod() 函数更改软件定时器的周期。

The period of a software timer is changed using the xTimerChangePeriod() function.

如果 xTimerChangePeriod() 用于更改已经运行的计时器的周期，则计时器将使用新的周期值重新计算其到期时间。 If xTimerChangePeriod() is used to change the period of a timer that is already running, then 重新计算的到期时间与调用 xTimerChangePeriod() 的时间有关，与最初启动计时器的时间无关。 the timer will use the new period value to recalculate its expiry time. The recalculated expiry time is relative to when xTimerChangePeriod() was called, not relative to when the timer was originally started.

如果使用 xTimerChangePeriod() 来改变一个处于 Dormant 状态的定时器（一个没有运行的定时器）的周期，那么这个定时器会计算一个过期时间，并转换到 Running 状态（定时器会开始运行）。

If xTimerChangePeriod() is used to change the period of a timer that is in the Dormant state (a timer that is not running), then the timer will calculate an expiry time, and transition to the Running state (the timer will start running).

注意：切勿从中断服务程序调用 xTimerChangePeriod()。应使用中断安全版本 xTimerChangePeriodFromISR() 代替它。

Note: Never call xTimerChangePeriod() from an interrupt service routine. The interrupt-safe version xTimerChangePeriodFromISR() should be used in its place.

---

```
BaseType_t xTimerChangePeriod( TimerHandle_t xTimer,
                               TickType_t xNewTimerPeriodInTicks,
                               TickType_t xTicksToWait );
```

---

**Listing 82. The xTimerChangePeriod() API function prototype**

**Table 31. xTimerChangePeriod() parameters and return value**

Parameter Name/ Returned Value	Description
xTimer	The handle of the software timer being updated with a new period value. The handle will have been returned from the call to xTimerCreate() used to create the software timer.
xTimerPeriodInTicks	The new period for the software timer, specified in ticks. The pdMS_TO_TICKS() macro can be used to convert a time specified in milliseconds into a time specified in ticks.
xTicksToWait	<p>xTimerChangePeriod() uses the timer command queue to send the 'change period' command to the daemon task. xTicksToWait specifies the maximum amount of time the calling task should remain in the Blocked state to wait for space to become available on the timer command queue, should the queue already be full.</p> <p>xTimerChangePeriod() will return immediately if xTicksToWait is zero and the timer command queue is already full.</p> <p>The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>If INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h, then setting xTicksToWait to portMAX_DELAY will result in the calling task remaining in the Blocked state indefinitely (without a timeout) to wait for space to become available in the timer command queue.</p> <p>If xTimerChangePeriod() is called before the scheduler has been started, then the value of xTicksToWait is ignored, and xTimerChangePeriod() behaves as if xTicksToWait had been set to zero.</p>

**Table 31. xTimerChangePeriod() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>pdPASS will be returned only if data was successfully sent to the timer command queue.</p> <p>If a block time was specified (xTicksToWait was not zero), then it is possible the calling task was placed into the Blocked state to wait for space to become available in the timer command queue before the function returned, but data was successfully written to the timer command queue before the block time expired.</p> <ol style="list-style-type: none"><li>2. pdFALSE</li></ol> <p>pdFALSE will be returned if the ‘change period’ command could not be written to the timer command queue because the queue was already full.</p> <p>If a block time was specified (xTicksToWait was not zero) then the calling task will have been placed into the Blocked state to wait for the daemon task to make room in the queue, but the specified block time expired before that happened.</p>

Listing 83 shows how the FreeRTOS examples that include self-checking functionality in a software timer callback function use xTimerChangePeriod() to increase the rate at which an LED toggles if a self-check fails. The software timer that performs the self-checks is referred to as the ‘check timer’.

```
/* The check timer is created with a period of 3000 milliseconds, resulting in the LED toggling
   every 3 seconds. If the self-checking functionality detects an unexpected state, then the check
   timer's period is changed to just 200 milliseconds, resulting in a much faster toggle rate. */
const TickType_t xHealthyTimerPeriod = pdMS_TO_TICKS( 3000 );
const TickType_t xErrorTimerPeriod = pdMS_TO_TICKS( 200 );

/* The callback function used by the check timer. */
static void prvCheckTimerCallbackFunction( TimerHandle_t xTimer )
{
    static BaseType_t xErrorDetected = pdFALSE;

    if( xErrorDetected == pdFALSE )          // 该函数要求示例创建的每个任务报告自己的状态，并检查所有任务是否实际上仍在
    {                                       // 尚未检测到错误。再次运行自检功能。运行（因此能够正确报告它们的状态）。
        /* No errors have yet been detected. Run the self-checking function again. The
           function asks each task created by the example to report its own status, and also checks
           that all the tasks are actually still running (and so able to report their status
           correctly). */
        if( CheckTasksAreRunningWithoutError() == pdFAIL ) // 减少检查计时器的周期以增加此回调函数的执行速率，这样做也会
        {                                       // 一项或多项任务报告了意外状态。可能发生了错误。增加 LED 切换的速率。
            /* One or more tasks reported an unexpected status. An error might have occurred.
               Reduce the check timer's period to increase the rate at which this callback function
               executes, and in so doing also increase the rate at which the LED is toggled. This
               callback function is executing in the context of the RTOS daemon task, so a block
               time of 0 is used to ensure the Daemon task never enters the Blocked state. */
            xTimerChangePeriod( xTimer,           /* The timer being updated. */
                               xErrorTimerPeriod, /* The new period for the timer. */
                               0 );                /* Do not block when sending this command. */
        }
        // 锁存已检测到错误。
        /* Latch that an error has already been detected. */
        xErrorDetected = pdTRUE;
    }

    /* Toggle the LED. The rate at which the LED toggles will depend on how often this function
       is called, which is determined by the period of the check timer. The timer's period will
       have been reduced from 3000ms to just 200ms if CheckTasksAreRunningWithoutError() has ever
       returned pdFAIL. */
    ToggleLED();
}
```

---

Listing 83. Using xTimerChangePeriod()

## 5.8 Resetting a Software Timer

复位软件定时器意味着重新启动定时器；计时器的到期时间被重新计算为相对于计时器重置的时间，而不是计时器最初启动的时间。Resetting a software timer means to re-start the timer; the timer's expiry time is recalculated to be relative to when the timer was reset, rather than when the timer was originally started. This is demonstrated by Figure 46, which shows a timer that has a period of 6 being started, then reset twice, before eventually expiring and executing its callback function.

图 46 演示了这一点，该图显示了一个周期为 6 的计时器正在启动，然后重置两次，最终到期并执行其回调函数。

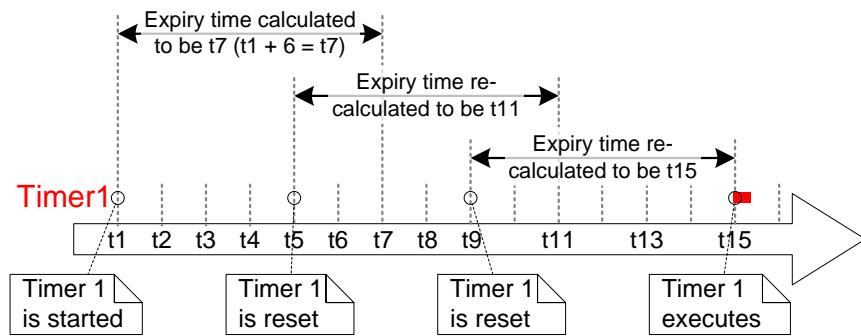


Figure 46 Starting and resetting a software timer that has a period of 6 ticks

Referring to Figure 46:

定时器 1 在时间 t1 启动。它的周期为 6，因此它执行其回调函数的时间最初计算为 t7，即启动后的 6 个滴答声。

- Timer 1 is started at time t1. It has a period of 6, so the time at which it will execute its callback function is originally calculated to be t7, which is 6 ticks after it was started.

计时器 1 在时间 t7 到达之前重置，因此在它到期并执行其回调函数之前。

- Timer 1 is reset before time t7 is reached, so before it had expired and executed its callback function. Timer 1 is reset at time t5, so the time at which it will execute its callback function is re-calculated to be t11, which is 6 ticks after it was reset.

计时器 1 在时间 t11 之前再次重置，因此在它到期并执行其回调函数之前再次重置。

- Timer 1 is reset again before time t11, so again before it had expired and executed its callback function. Timer 1 is reset at time t9, so the time at which it will execute its callback function is re-calculated to be t15, which is 6 ticks after it was last reset.

定时器 1 没有再次复位，所以它在时间 t15 到期，并相应地执行它的回调函数。

- Timer 1 is not reset again, so it expires at time t15, and its callback function is executed accordingly.

### The xTimerReset() API Function

A timer is reset using the xTimerReset() API function.

xTimerReset() 也可用于启动处于休眠状态的计时器。

xTimerReset() can also be used to start a timer that is in the Dormant state.

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

注意：切勿从中断服务程序调用 xTimerReset()。应使用中断安全版本 xTimerResetFromISR() 代替它。

Note: Never call xTimerReset() from an interrupt service routine. The interrupt-safe version xTimerResetFromISR() should be used in its place.

---

```
BaseType_t xTimerReset( TimerHandle_t xTimer, TickType_t xTicksToWait );
```

---

**Listing 84. The xTimerReset() API function prototype**

**Table 32. xTimerReset() parameters and return value**

Parameter Name/ Returned Value	Description
xTimer	The handle of the software timer being reset or started. The handle will have been returned from the call to xTimerCreate() used to create the software timer.
xTicksToWait	<p>xTimerChangePeriod() 使用计时器命令队列将“重置”命令发送到守护程序任务。 xTimerChangePeriod() uses the timer command queue to send the 'reset' command to the daemon task. xTicksToWait specifies the maximum amount of time the calling task should remain in the Blocked state to wait for space to become available on the timer command queue, should the queue already be full.</p> <p>如果 xTicksToWait 为零并且计时器命令队列已满，xTimerReset() 将立即返回。 xTimerReset() will return immediately if xTicksToWait is zero and the timer command queue is already full.</p> <p>If INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h then setting xTicksToWait to portMAX_DELAY will result in the calling task remaining in the Blocked state indefinitely (without a timeout) to wait for space to become available in the timer command queue.</p> <p>如果在 FreeRTOSConfig.h 中将 INCLUDE_vTaskSuspend 设置为 1，则将 xTicksToWait 设置为 portMAX_DELAY 将导致调用任务无限期地保持在阻塞状态（没有超时）以等待计时器命令队列中的空间可用。</p>

**Table 32. xTimerReset() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>pdPASS will be returned only if data was successfully sent to the timer command queue.</p> <p>If a block time was specified (xTicksToWait was not zero), then it is possible the calling task was placed into the Blocked state to wait for space to become available in the timer command queue before the function returned, but data was successfully written to the timer command queue before the block time expired.</p> <ol style="list-style-type: none"><li>2. pdFALSE</li></ol> <p>pdFALSE will be returned if the ‘reset’ command could not be written to the timer command queue because the queue was already full.</p> <p>If a block time was specified (xTicksToWait was not zero) then the calling task will have been placed into the Blocked state to wait for the daemon task to make room in the queue, but the specified block time expired before that happened.</p>

### **Example 15. Resetting a software timer**

This example simulates the behavior of the backlight on a cell phone. The backlight:

- Turns on when a key is pressed.
- Remains on provided further keys are pressed within a certain time period.
- Automatically turns off if no key presses are made within a certain time period.

A one-shot software timer is used to implement this behavior:

- The [simulated] backlight is turned on when a key is pressed, and turned off in the software timer's callback function.
- The software timer is reset each time a key is pressed.
- The time period during which a key must be pressed to prevent the backlight being turned off is therefore equal to the period of the software timer; if the software timer is not reset by a key press before the timer expires, then the timer's callback function executes, and the backlight is turned off.

The xSimulatedBacklightOn variable holds the backlight state. xSimulatedBacklightOn is set to pdTRUE to indicate the backlight is on, and pdFALSE to indicate the backlight is off.

The software timer callback function is shown in Listing 85.

---

```
static void prvBacklightTimerCallback( TimerHandle_t xTimer )
{
    TickType_t xTimeNow = xTaskGetTickCount();

    /* The backlight timer expired, turn the backlight off. */
    xSimulatedBacklightOn = pdFALSE;

    /* Print the time at which the backlight was turned off. */
    vPrintStringAndNumber(
        "Timer expired, turning backlight OFF at time\t\t", xTimeNow );
}
```

---

**Listing 85. The callback function for the one-shot timer used in Example 15**

Example 15 creates a task to poll the keyboard<sup>1</sup>. The task is shown in Listing 86, but for the reasons described in the next paragraph, Listing 86 is not intended to be representative of an optimal design.

Using FreeRTOS allows your application to be event driven. Event driven designs use processing time very efficiently, because processing time is only used if an event has occurred, and processing time is not wasted polling for events that have not occurred. Example 15 could not be made event driven because it is not practical to process keyboard interrupts when using the FreeRTOS Windows port, so the much less efficient polling

---

<sup>1</sup> Printing to the Windows console, and reading keys from the Windows console, both result in the execution of Windows system calls. Windows system calls, including use of the Windows console, disks, or TCP/IP stack, can adversely affect the behavior of the FreeRTOS Windows port, and should normally be avoided.

technique had to be used instead. If Listing 86 was an interrupt service routine, then xTimerResetFromISR() would be used in place of xTimerReset().

---

```
static void vKeyHitTask( void *pvParameters )
{
const TickType_t xShortDelay = pdMS_TO_TICKS( 50 );
TickType_t xTimeNow;

vPrintString( "Press a key to turn the backlight on.\r\n" );

/* Ideally an application would be event driven, and use an interrupt to process key
presses. It is not practical to use keyboard interrupts when using the FreeRTOS Windows
port, so this task is used to poll for a key press. */
for( ;; )
{
    /* Has a key been pressed? */
    if( _kbhit() != 0 )
    {
        /* A key has been pressed. Record the time. */
        xTimeNow = xTaskGetTickCount();

        if( xSimulatedBacklightOn == pdFALSE )
        {
            /* The backlight was off, so turn it on and print the time at which it was
            turned on. */
            xSimulatedBacklightOn = pdTRUE;
            vPrintStringAndNumber(
                "Key pressed, turning backlight ON at time\t\t", xTimeNow );
        }
        else
        {
            /* The backlight was already on, so print a message to say the timer is about to
            be reset and the time at which it was reset. */
            vPrintStringAndNumber(
                "Key pressed, resetting software timer at time\t\t", xTimeNow );
        }

        /* Reset the software timer. If the backlight was previously off, then this call
        will start the timer. If the backlight was previously on, then this call will
        restart the timer. A real application may read key presses in an interrupt. If
        this function was an interrupt service routine then xTimerResetFromISR() must be
        used instead of xTimerReset(). */
        xTimerReset( xBacklightTimer, xShortDelay );

        /* Read and discard the key that was pressed - it is not required by this simple
        example. */
        ( void ) _getch();
    }
}
}
```


---

**Listing 86. The task used to reset the software timer in Example 15**

The output produced when Example 15 is executed is shown in Figure 47. With reference to Figure 47:

- The first key press occurred when the tick count was 812. At that time the backlight was turned on, and the one-shot timer was started.
- Further key presses occurred when the tick count was 1813, 3114, 4015 and 5016. All of these key presses resulted in the timer being reset before the timer had expired.

- The timer expired when the tick count was 10016. At that time the backlight was turned off.

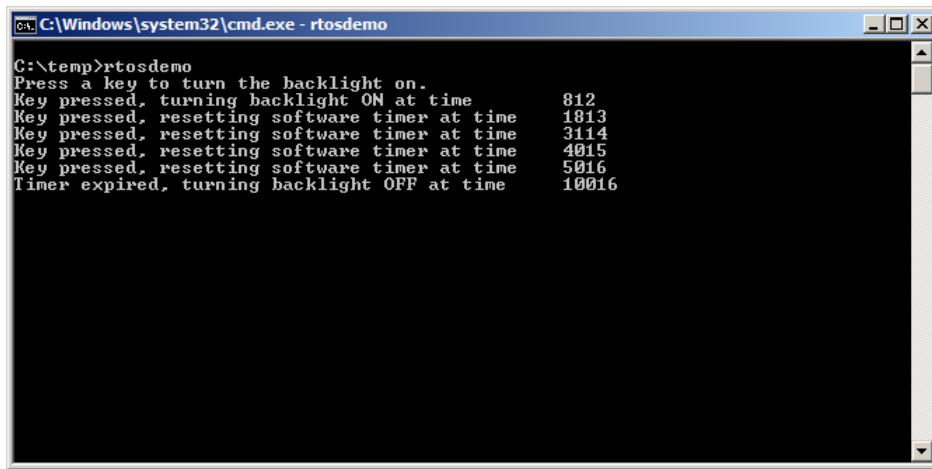

```
C:\temp>rtosdemo
Press a key to turn the backlight on.
Key pressed, turning backlight ON at time      812
Key pressed, resetting software timer at time  1813
Key pressed, resetting software timer at time  3114
Key pressed, resetting software timer at time  4015
Key pressed, resetting software timer at time  5016
Timer expired, turning backlight OFF at time   10016
```

**Figure 47 The output produced when Example 15 is executed**

It can be seen in Figure 47 that the timer had a period of 5000 ticks; the backlight was turned off exactly 5000 ticks after a key was last pressed, so 5000 ticks after the timer was last reset.



# Chapter 6

## Interrupt Management

---

## 6.1 Chapter Introduction and Scope

---

### Events

嵌入式实时系统必须采取行动来响应源自环境的事件。

Embedded real-time systems have to take actions in response to events that originate from the environment. For example, a packet arriving on an Ethernet peripheral (the event) might require passing to a TCP/IP stack for processing (the action). Non-trivial systems will have to service events that originate from multiple sources, all of which will have different processing overhead and response time requirements. In each case, a judgment has to be made as to the best event processing implementation strategy:

在每种情况下，都必须对最佳事件处理实施策略做出判断：

1. How should the event be detected? Interrupts are normally used, but inputs can also be polled.  
使用中断时，中断服务程序（ISR）内部应该执行多少处理，外部执行多少？
2. When interrupts are used, how much processing should be performed inside the interrupt service routine (ISR), and how much outside? It is normally desirable to keep each ISR as short as possible.  
事件如何传达给主（非 ISR）代码，以及如何构建此代码以最好地适应潜在异步事件的处理？
3. How events are communicated to the main (non-ISR) code, and how can this code be structured to best accommodate processing of potentially asynchronous occurrences?

FreeRTOS 不会对应用程序设计者强加任何特定的事件处理策略，但确实提供了允许以简单且可维护的方式实现所选策略的功能。

FreeRTOS does not impose any specific event processing strategy on the application designer, but does provide features that allow the chosen strategy to be implemented in a simple and maintainable way.

It is important to draw a distinction between the priority of a task, and the priority of an interrupt: 区分任务的优先级和中断的优先级很重要：

- 任务是与运行 FreeRTOS 的硬件无关的软件功能。
- A task is a software feature that is unrelated to the hardware on which FreeRTOS is running. The priority of a task is assigned in software by the application writer, and a software algorithm (the scheduler) decides which task will be in the Running state.  
虽然是用软件编写的，但中断服务程序是一种硬件功能，因为硬件控制着哪个中断服务程序将运行以及何时运行。
  - Although written in software, an interrupt service routine is a hardware feature because the hardware controls which interrupt service routine will run, and when it will run.  
任务只有在没有 ISR 运行时才会运行，因此最低优先级的中断会中断最高优先级的任务，任务无法抢占 ISR。Tasks will only run when there are no ISRs running, so the lowest priority interrupt will interrupt the highest priority task, and there is no way for a task to pre-empt an ISR.

All architectures on which FreeRTOS will run are capable of processing interrupts, but details relating to interrupt entry, and interrupt priority assignment, vary between architectures. FreeRTOS 将在其上运行的所有架构都能够处理中断，但与中断进入和中断优先级分配相关的细节因架构而异。

## Scope

This chapter aims to give readers a good understanding of:

- 可以在中断服务例程中使用哪些 FreeRTOS API 函数。
  - Which FreeRTOS API functions can be used from within an interrupt service routine.  
将中断处理推迟到任务的方法。
  - Methods of deferring interrupt processing to a task.  
如何创建和使用二进制信号量和计数信号量。
  - How to create and use binary semaphores and counting semaphores.  
二进制信号量和计数信号量之间的区别。
  - The differences between binary and counting semaphores.  
如何使用队列将数据传入和传出中断服务程序。
  - How to use a queue to pass data into and out of an interrupt service routine.  
某些 FreeRTOS 端口提供的中断嵌套模型。
  - The interrupt nesting model available with some FreeRTOS ports.

## 6.2 Using the FreeRTOS API from an ISR

---

中断安全 API

### The Interrupt Safe API

通常需要使用中断服务例程 (ISR) 中的 FreeRTOS API 函数提供的功能，

Often it is necessary to use the functionality provided by a FreeRTOS API function from an  
但是许多 FreeRTOS API 函数执行在 ISR 中无效的操作——其中最值得注意的是将调用 API 函数的任务置于阻塞状态；  
interrupt service routine (ISR), but many FreeRTOS API functions perform actions that are not

valid inside an ISR—the most notable of which is placing the task that called the API function  
如果从 ISR 调用 API 函数，则它不是从任务调用的，因此没有调用任务可以置于阻塞状态。

into the Blocked state; if an API function is called from an ISR, then it is not being called from a

FreeRTOS通过提供两个版本的一些API函数解决了这个问题；

task, so there is no calling task that can be placed into the Blocked state. FreeRTOS solves  
一个版本用于任务，一个版本用于 ISR。

this problem by providing two versions of some API functions; one version for use from tasks,  
用于 ISR 的函数在其名称后附加了“FromISR”

and one version for use from ISRs. Functions intended for use from ISRs have “FromISR”

appended to their name.

注意：切勿从 ISR 调用名称中没有“FromISR”的 FreeRTOS API 函数。

Note: Never call a FreeRTOS API function that does not have “FromISR” in its name from an  
ISR.

使用单独的中断安全 API 的好处

### The Benefits of Using a Separate Interrupt Safe API

在中断中使用单独的 API 可以让任务代码更高效，ISR 代码更高效，中断入口更简单。

Having a separate API for use in interrupts allows task code to be more efficient, ISR code to  
要了解原因，请考虑替代解决方案，该解决方案将提供每个 API 函数的单一版本，可以从任务和 ISR 调用。

be more efficient, and interrupt entry to be simpler. To see why, consider the alternative

solution, which would have been to provide a single version of each API function that could be

called from both a task and an ISR. If the same version of an API function could be called

from both a task and an ISR then: 如果可以从任务和 ISR 调用相同版本的 API 函数，则：

API 函数需要额外的逻辑来确定它们是从任务还是 ISR 调用的。

- The API functions would need additional logic to determine if they had been called from  
额外的逻辑将通过函数引入新的路径，使函数更长、更复杂、更难测试。  
a task or an ISR. The additional logic would introduce new paths through the function,  
making the functions longer, more complex, and harder to test.

某些 API 函数参数在从任务调用函数时会过时，而其他 API 函数参数在从 ISR 调用函数时会过时。

- Some API function parameters would be obsolete when the function was called from a  
task, while others would be obsolete when the function was called from an ISR.

每个 FreeRTOS 端口都需要提供一种机制来确定执行上下文（任务或 ISR）。

- Each FreeRTOS port would need to provide a mechanism for determining the  
execution context (task or ISR).

不容易确定执行上下文（任务或 ISR）的架构将需要额外的、浪费的、使用更复杂的和非标准的中断入口代码，  
这些代码允许由软件提供执行上下文。

- Architectures on which it is not easy to determine the execution context (task or ISR)  
would require additional, wasteful, more complex to use, and non-standard interrupt  
entry code that allowed the execution context to be provided by software.

使用单独的中断安全 API 的缺点

## The Disadvantages of Using a Separate Interrupt Safe API

拥有两个版本的某些 API 函数可以让任务和 ISR 都更高效，但会引入一个新问题；

Having two versions of some API functions allows both tasks and ISRs to be more efficient, 有时有必要从任务和 ISR 调用不属于 FreeRTOS API 但使用 FreeRTOS API 的函数。 but introduces a new problem; sometimes it is necessary to call a function that is not part of the FreeRTOS API, but makes use of the FreeRTOS API, from both a task and an ISR.

这通常只有在集成第三方代码时才会出现问题，因为这是唯一一次软件的设计不受应用程序编写者的控制。

This is normally only a problem when integrating third party code, as that is the only time when the software's design is out of the control of the application writer. If this does become an 如果这确实成为一个问题，那么可以使用以下技术之一来解决该问题： issue then the problem can be overcome using one of the following techniques:

将中断处理推迟到 task1，因此 API 函数只能从任务的上下文中调用。

1. Defer interrupt processing to a task<sup>1</sup>, so the API function is only ever called from the context of a task.

如果您使用的是支持中断嵌套的 FreeRTOS 端口，则使用以“FromISR”结尾的 API 函数版本， 因为该版本可以从任务和 ISR 中调用（反之则不然，API 函数不结束 在“FromISR”中不能从 ISR 中调用）。

2. If you are using a FreeRTOS port that supports interrupt nesting, then use the version of the API function that ends in “FromISR”, as that version can be called from tasks and ISRs (the reverse is not true, API functions that do not end in “FromISR” must not be called from an ISR).

第三方代码通常包括一个 RTOS 抽象层，可以实现该抽象层来测试调用函数的上下文（任务或中断）， 然后调用适合该上下文的 API 函数。

3. Third party code normally includes an RTOS abstraction layer that can be implemented to test the context from which the function is being called (task or interrupt), and then call the API function that is appropriate for the context.

xHigherPriorityTaskWoken 参数

## The xHigherPriorityTaskWoken Parameter

本节介绍 xHigherPriorityTaskWoken 参数的概念。

This section introduces the concept of the xHigherPriorityTaskWoken parameter. Do not be 如果您还没有完全理解本节，请不要担心，因为以下部分提供了实际示例。 concerned if you do not fully understand this section yet, as practical examples are provided in

following sections.

如果上下文切换由中断执行，则中断退出时运行的任务可能与进入中断时正在运行的任务不同——中断将中断一个任务，但返回到不同的任务。

If a context switch is performed by an interrupt, then the task running when the interrupt exits might be different to the task that was running when the interrupt was entered—the interrupt will have interrupted one task, but returned to a different task.

一些 FreeRTOS API 函数可以将任务从阻塞状态移动到就绪状态。

Some FreeRTOS API functions can move a task from the Blocked state to the Ready state.

这已经在诸如 xQueueSendToBack() 之类的函数中看到过，如果有一个任务在阻塞状态等待数据在主题队列中可用，它将解除阻塞任务。 This has already been seen with functions such as xQueueSendToBack(), which will unblock a task if there was a task waiting in the Blocked state for data to become available on the subject queue.

---

<sup>1</sup> Deferred interrupt processing is covered in the next section of this book.

如果被 FreeRTOS API 函数解除阻塞的任务的优先级高于处于运行状态的任务的优先级，  
则根据 FreeRTOS 调度策略，应该切换到更高优先级的任务。

If the priority of a task that is unblocked by a FreeRTOS API function is higher than the priority of the task in the Running state then, in accordance with the FreeRTOS scheduling policy, a switch to the higher priority task should occur. When the switch to the higher priority task actually occurs is dependent on the context from which the API function is called:

切换到更高优先级任务的实际发生时间取决于调用 API 函数的上下文：

- If the API function was called from a task

如果在 FreeRTOSConfig.h 中将 configUSE\_PREEMPTION 设置为 1，  
那么在 API 函数中会自动切换到更高优先级的任务——所以在 API 函数退出之前。

If configUSE\_PREEMPTION is set to 1 in FreeRTOSConfig.h then the switch to the higher

priority task occurs automatically within the API function—so before the API function has  
这已经在图 43 中看到，其中写入定时器命令队列导致在写入命令队列的函数退出之前切换到 RTOS 守护程序任务。  
exited. This has already been seen in Figure 43, where writing to the timer command

queue resulted in a switch to the RTOS daemon task before the function that wrote to the  
command queue had exited.

如果从中断调用 API 函数

- If the API function was called from an interrupt

在中断内不会自动切换到更高优先级的任务。

A switch to a higher priority task will not occur automatically inside an interrupt. Instead, a  
相反，设置了一个变量来通知应用程序编写者应该执行上下文切换。中断安全 API 函数（以“FromISR”结尾的函数）  
variable is set to inform the application writer that a context switch should be performed.  
有一个称为 pxHigherPriorityTaskWoken 的指针参数，用于此目的。

Interrupt safe API functions (those that end in “FromISR”) have a pointer parameter called

pxHigherPriorityTaskWoken that is used for this purpose.

如果应该执行上下文切换，那么中断安全 API 函数会将 \*pxHigherPriorityTaskWoken 设置为 pdTRUE。

If a context switch should be performed, then the interrupt safe API function will set  
为了能够检测到这种情况已经发生，pxHigherPriorityTaskWoken 指向的变量必须在第一次使用之前初始化为 pdFALSE。  
\*pxHigherPriorityTaskWoken to pdTRUE. To be able to detect this has happened, the  
variable pointed to by pxHigherPriorityTaskWoken must be initialized to pdFALSE before it  
is used for the first time.

如果应用程序编写者选择不从 ISR 请求上下文切换，则更高优先级的任务将保持就绪状态，  
直到调度程序下一次运行——在最坏的情况下，将在下一次滴答中断期间。

If the application writer opts not to request a context switch from the ISR, then the higher  
priority task will remain in the Ready state until the next time the scheduler runs—which in  
the worst case will be during the next tick interrupt.

FreeRTOS API 函数只能将 \*pxHigherPriorityTaskWoken 设置为 pdTRUE。

FreeRTOS API functions can only set \*pxHigherPriorityTaskWoken to pdTRUE. If an ISR  
如果一个 ISR 调用了多个 FreeRTOS API 函数，那么可以在每个 API 函数调用中将同一个  
calls more than one FreeRTOS API function, then the same variable can be passed as the  
变量作为 pxHigherPriorityTaskWoken 参数传递，并且该变量只需要在第一次使用之前初始化为 pdFALSE。  
pxHigherPriorityTaskWoken parameter in each API function call, and the variable only  
needs to be initialized to pdFALSE before it is used for the first time.

上下文切换不会在 API 函数的中断安全版本中自动发生的原因有几个：

There are several reasons why context switches do not occur automatically inside the interrupt  
safe version of an API function:

避免不必要的上下文切换

1. Avoiding unnecessary context switches

在任务需要执行任何处理之前，中断可能会执行多次。

An interrupt may execute more than once before it is necessary for a task to perform any processing. For example, consider a scenario where a task processes a string that was received by an interrupt driven UART; it would be wasteful for the UART ISR to switch to the task each time a character was received because the task would only have processing to perform after the complete string had been received.

#### 控制执行顺序

#### 2. Control over the execution sequence

中断可能偶尔发生，而且发生在不可预测的时间。

Interrupts can occur sporadically, and at unpredictable times. Expert FreeRTOS users may want to temporarily avoid an unpredictable switch to a different task at specific points in their application—although this can also be achieved using the FreeRTOS scheduler locking mechanism.

#### 3. Portability 可移植性

这是可用于所有 FreeRTOS 端口的最简单的机制。

It is the simplest mechanism that can be used across all FreeRTOS ports.

#### 4. Efficiency 效率

针对较小处理器架构的端口只允许在 ISR 的最后请求上下文切换，而消除该限制将需要额外且更复杂的代码。Ports that target smaller processor architectures only allow a context switch to be requested at the very end of an ISR, and removing that restriction would require additional code. It also allows more than one call to a FreeRTOS API function within the same ISR without generating more than one request for a context switch within the same ISR.

#### 5. Execution in the RTOS tick interrupt 在 RTOS 滴答中断中执行

正如本书后面将看到的，可以将应用程序代码添加到 RTOS 滴答中断中。

As will be seen later in this book, it is possible to add application code into the RTOS tick interrupt. The result of attempting a context switch inside the tick interrupt is dependent on the FreeRTOS port in use. At best, it will result in an unnecessary call to the scheduler.

`pxHigherPriorityTaskWoken` 参数的使用是可选的。如果不需要，则将 `pxHigherPriorityTaskWoken` 设置为 `NULL`。Use of the `pxHigherPriorityTaskWoken` parameter is optional. If it is not required, then set `pxHigherPriorityTaskWoken` to `NULL`.

### The `portYIELD_FROM_ISR()` and `portEND_SWITCHING_ISR()` Macros

本节介绍用于从 ISR 请求上下文切换的宏。

This section introduces the macros that are used to request a context switch from an ISR. Do not be concerned if you do not fully understand this section yet, as practical examples are provided in following sections.

`taskYIELD()` 是一个宏，可以在任务中调用以请求上下文切换。

`taskYIELD()` is a macro that can be called in a task to request a context switch. `portYIELD_FROM_ISR()` 和 `portEND_SWITCHING_ISR()` 都是 `taskYIELD()` 的中断安全版本。

`portYIELD_FROM_ISR()` 和 `portEND_SWITCHING_ISR()` 都是 interrupt safe versions of

`portYIELD_FROM_ISR()` 和 `portEND_SWITCHING_ISR()` 的使用方式相同，做同样的事情。 `taskYIELD()`, `portYIELD_FROM_ISR()` 和 `portEND_SWITCHING_ISR()` 都是在某些 FreeRTOS 端口仅提供这两个宏之一。

same way, and do the same thing<sup>1</sup>. Some FreeRTOS ports only provide one of the two  
较新的 FreeRTOS 端口提供了这两个宏。本书中的示例使用 `portYIELD_FROM_ISR()`。

macros. Newer FreeRTOS ports provide both macros. The examples in this book use

`portYIELD_FROM_ISR()`.

---

```
portEND_SWITCHING_ISR( xHigherPriorityTaskWoken );
```

---

**Listing 87. The `portEND_SWITCHING_ISR()` macros**

---

```
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
```

---

**Listing 88. The `portYIELD_FROM_ISR()` macros**

从中断安全 API 函数传出的 `xHigherPriorityTaskWoken` 参数可以直接用作对 `portYIELD_FROM_ISR()` 的调用中的参数。

The `xHigherPriorityTaskWoken` parameter passed out of an interrupt safe API function can be

used directly as the parameter in a call to `portYIELD_FROM_ISR()`.

如果 `portYIELD_FROM_ISR()` `xHigherPriorityTaskWoken` 参数为 `pdFALSE` (零)，则不请求上下文切换，并且宏不起作用。

If the `portYIELD_FROM_ISR()` `xHigherPriorityTaskWoken` parameter is `pdFALSE` (zero), then

如果 `portYIELD_FROM_ISR()` `xHigherPriorityTaskWoken` 参数不是 `pdFALSE`，则请求上下文切换，

a context switch is not requested, and the macro has no effect. If the `portYIELD_FROM_ISR()` 并且处于运行状态的任务可能会更改。

`xHigherPriorityTaskWoken` parameter is not `pdFALSE`, then a context switch is requested, and 中断将始终返回到处于运行状态的任务，即使处于运行状态的任务在中断执行时发生了变化。

the task in the Running state might change. The interrupt will always return to the task in the

Running state, even if the task in the Running state changed while the interrupt was executing.

大多数 FreeRTOS 端口允许在 ISR 中的任何位置调用 `portYIELD_FROM_ISR()`。

Most FreeRTOS ports allow `portYIELD_FROM_ISR()` to be called anywhere within an ISR. A 一些 FreeRTOS 端口 (主要是用于较小架构的端口) 仅允许在 ISR 的最后调用 `portYIELD_FROM_ISR()`。

few FreeRTOS ports (predominantly those for smaller architectures), only allow `portYIELD_FROM_ISR()` to be called at the very end of an ISR.

---

<sup>1</sup> Historically, `portEND_SWITCHING_ISR()` was the name used in FreeRTOS ports that required interrupt handlers to use an assembly code wrapper, and `portYIELD_FROM_ISR()` was the name used in FreeRTOS ports that allowed the entire interrupt handler to be written in C.

## 6.3 Deferred Interrupt Processing 延迟中断处理

通常认为最好的做法是使 ISR 尽可能短。原因包括：

It is normally considered best practice to keep ISRs as short as possible. Reasons for this include:

即使任务被分配了非常高的优先级，它们也只会在硬件没有处理中断的情况下运行。

- Even if tasks have been assigned a very high priority, they will only run if no interrupts are being serviced by the hardware.

ISR 可以扰乱（添加“抖动”）任务的开始时间和执行时间。

- ISRs can disrupt (add ‘jitter’ to) both the start time, and the execution time, of a task.

根据运行 FreeRTOS 的架构，在执行 ISR 时，可能无法接受任何新中断，或者至少是新中断的子集。

- Depending on the architecture on which FreeRTOS is running, it might not be possible to accept any new interrupts, or at least a subset of new interrupts, while an ISR is executing.

应用程序编写者需要考虑任务和 ISR 同时访问的资源（例如变量、外围设备和内存缓冲区）的后果并加以防范。

- The application writer needs to consider the consequences of, and guard against, resources such as variables, peripherals, and memory buffers being accessed by a task and an ISR at the same time.

一些 FreeRTOS 端口允许嵌套中断，但中断嵌套会增加复杂性并降低可预测性。中断越短，嵌套的可能性就越小。

- Some FreeRTOS ports allow interrupts to nest, but interrupt nesting can increase complexity and reduce predictability. The shorter an interrupt is, the less likely it is to nest.

中断服务程序必须记录中断的原因，并清除中断。

An interrupt service routine must record the cause of the interrupt, and clear the interrupt. 中断所需的任何其他处理通常可以在任务中执行，从而允许中断服务程序尽可能快地退出。

Any other processing necessitated by the interrupt can often be performed in a task, allowing this to be ‘deferred’ from the ISR to the task.


the interrupt service routine to exit as quickly as is practical. This is called ‘deferred interrupt processing’, because the processing necessitated by the interrupt is ‘deferred’ from the ISR to a task.

将中断处理推迟到任务还允许应用程序编写者相对于应用程序中的其他任务优先处理处理，并使用所有 FreeRTOS API 函数。Deferring interrupt processing to a task also allows the application writer to prioritize the processing relative to other tasks in the application, and use all the FreeRTOS API functions.

如果中断处理被推迟到的任务的优先级高于任何其他任务的优先级，则处理将立即执行，就像在 ISR 本身中执行的处理一样。

If the priority of the task to which interrupt processing is deferred is above the priority of any other task, then the processing will be performed immediately, just as if the processing had been performed in the ISR itself. This scenario is shown in Figure 48, in which Task 1 is a normal application task, and Task 2 is the task to which interrupt processing is deferred.

这种情况如图 48 所示，其中任务 1 是正常的应用程序任务，任务 2 是中断处理被推迟到的任务。

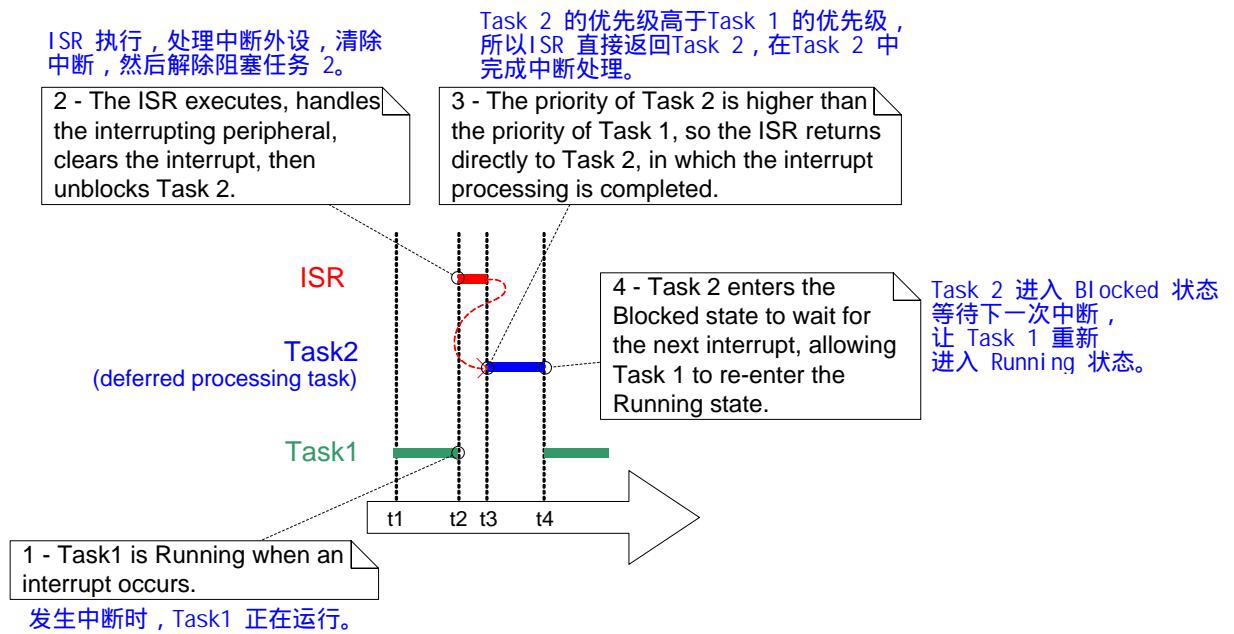

**Figure 48 Completing interrupt processing in a high priority task**

在图 48 中，中断处理在时间 t2 开始，实际上在时间 t4 结束，但只有时间 t2 和 t3 之间的时间段用于 ISR。

In Figure 48, interrupt processing starts at time t2, and effectively ends at time t4, but only the period between times t2 and t3 is spent in the ISR. If deferred interrupt processing had not been used then the entire period between times t2 and t4 would have been spent in the ISR.

关于何时最好执行 ISR 中的中断所需的所有处理，以及何时最好将部分处理推迟到任务，没有绝对的规则。There is no absolute rule as to when it is best to perform all processing necessitated by an interrupt in the ISR, and when it is best to defer part of the processing to a task. Deferring processing to a task is most useful when: 在以下情况下，将处理推迟到任务最有用：

中断所需的处理不是微不足道的。

- The processing necessitated by the interrupt is not trivial. For example, if the interrupt is just storing the result of an analog to digital conversion, then it is almost certain this is best performed inside the ISR, but if result of the conversion must also be passed through a software filter, then it may be best to execute the filter in a task.

中断处理可以方便地执行 ISR 内部无法执行的操作，例如写入控制台或分配内存。

- It is convenient for the interrupt processing to perform an action that cannot be performed inside an ISR, such as write to a console, or allocate memory.

中断处理不是确定性的——这意味着事先不知道处理需要多长时间。

- The interrupt processing is not deterministic—meaning it is not known in advance how long the processing will take.

以下部分描述和演示了本章迄今为止介绍的概念，包括可用于实现延迟中断处理的 FreeRTOS 功能。

The following sections describe and demonstrate the concepts introduced in this chapter so far, including FreeRTOS features that can be used to implement deferred interrupt processing.

用于同步的二进制信号量

## 6.4 Binary Semaphores Used for Synchronization

Binary Semaphore API 的中断安全版本可用于在每次发生特定中断时解除阻塞任务，从而有效地使任务与中断同步。The interrupt safe version of the Binary Semaphore API can be used to unblock a task each time a particular interrupt occurs, effectively synchronizing the task with the interrupt. This 允许在同步任务中实现大部分中断事件处理，只有非常快速和短的部分直接保留在 ISR 中。allows the majority of the interrupt event processing to be implemented within the synchronized task, with only a very fast and short portion remaining directly in the ISR. As 如上一节所述，二进制信号量用于将中断处理“推迟”到任务 described in the previous section, the binary semaphore is used to ‘defer’ interrupt processing to a task<sup>1</sup>.

如前图 48 所示，如果中断处理对时间要求特别严格，则可以设置延迟处理任务的优先级，以确保该任务始终抢占系统中的其他任务。As previously demonstrated in Figure 48, if the interrupt processing is particularly time critical, then the priority of the deferred processing task can be set to ensure the task always pre- 然后可以实现 ISR 以包含对 portYIELD\_FROM\_ISR() 的调用，确保 ISR 在接返回到中断处理被推迟的任务 2 的阻塞。empts the other tasks in the system. The ISR can then be implemented to include a call to portYIELD\_FROM\_ISR(), ensuring the ISR returns directly to the task to which interrupt 这具有确保整个事件处理在时间上连续（无中断）执行的效果，就像它已经在 ISR 本身内实现一样。processing is being deferred. This has the effect of ensuring the entire event processing executes contiguously (without a break) in time, just as if it had all been implemented within 图 49 重复了图 48 中所示的场景，但更新了文本以描述如何使用信号量控制延迟处理任务的执行。the ISR itself. Figure 49 repeats the scenario shown in Figure 48, but with the text updated to describe how the execution of the deferred processing task can be controlled using a semaphore.

ISR 执行，处理中断外设，清除中断，然后“提供”一个信号量来解除对任务 2 的阻塞。

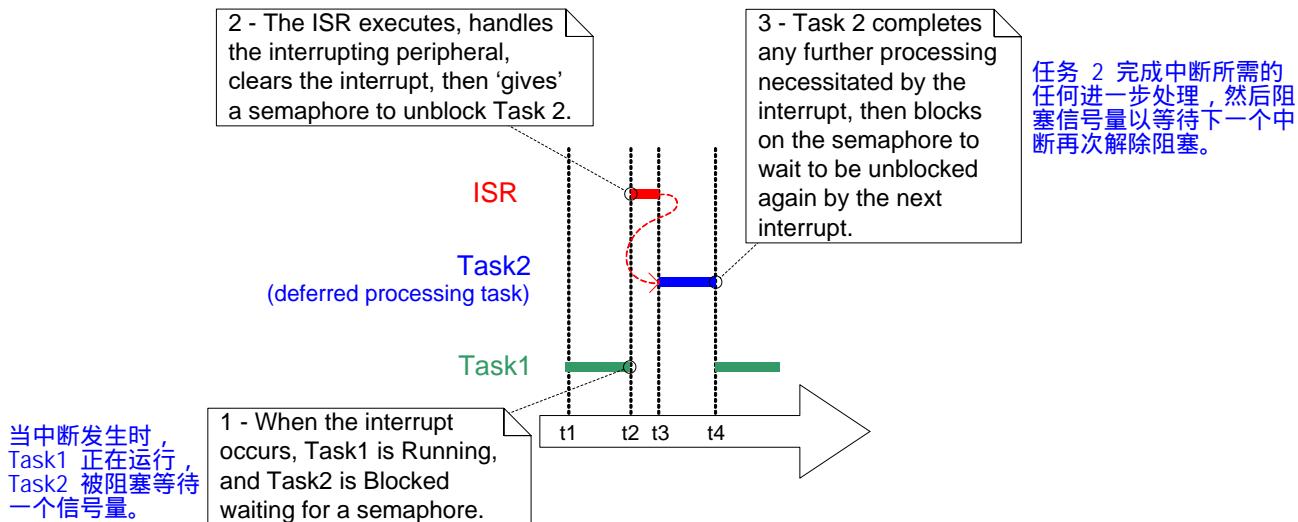


Figure 49. Using a binary semaphore to implement deferred interrupt processing

延迟处理任务使用对信号量的阻塞“接受”调用作为进入阻塞状态以等待事件发生的手段。

The deferred processing task uses a blocking ‘take’ call to a semaphore as a means of entering the Blocked state to wait for the event to occur. When the event occurs, the ISR uses

<sup>1</sup> It is more efficient to unblock a task from an interrupt using a direct to task notification than it is using a binary semaphore. Direct to task notifications are not covered until Chapter 9, Task Notifications.

当事件发生时，ISR 对同一信号量使用“给予”操作来解除阻塞任务，以便可以继续进行所需的事件处理  
a ‘give’ operation on the same semaphore to unblock the task so that the required event processing can proceed.

“获取信号量”和“提供信号量”是根据使用场景而具有不同含义的概念。

‘Taking a semaphore’ and ‘giving a semaphore’ are concepts that have different meanings  
在这种中断同步场景中，二进制信号量在概念上可以被认为是一个长度为 1 的队列。

depending on their usage scenario. In this interrupt synchronization scenario, the binary semaphore can be considered conceptually as a queue with a length of one. The queue can  
队列在任何时候最多可以包含一个项目，所以总是空的或满的（因此是二进制的）。

contain a maximum of one item at any time, so is always either empty or full (hence, binary).  
通过调用 xSemaphoreTake()，中断处理被延迟到的任务有效地尝试以阻塞时间从队列中读取，如果队列为空，则导致任务进入阻塞状态。  
By calling xSemaphoreTake(), the task to which interrupt processing is deferred effectively

attempts to read from the queue with a block time, causing the task to enter the Blocked state  
当事件发生时，ISR 使用 xSemaphoreGiveFromISR() 函数将令牌（信号量）放入队列，使队列满。

if the queue is empty. When the event occurs, the ISR uses the xSemaphoreGiveFromISR()  
function to place a token (the semaphore) into the queue, making the queue full. This causes  
这会导致任务退出阻塞状态并移除令牌，使队列再次为空。

the task to exit the Blocked state and remove the token, leaving the queue empty once more.  
当任务完成处理后，它再次尝试从队列中读取数据，发现队列为空，重新进入阻塞状态等待下一个事件。

When the task has completed its processing, it once more attempts to read from the queue  
and, finding the queue empty, re-enters the Blocked state to wait for the next event. This  
该序列如图 50 所示。

sequence is demonstrated in Figure 50.

图 50 显示了中断“给予”信号量，即使它没有首先“获取”信号量，而任务“获取”信号量，但从未将其归还。  
Figure 50 shows the interrupt ‘giving’ the semaphore, even though it has not first ‘taken’ it, and  
这就是为什么该场景在概念上被描述为类似于写入和读取队列的原因。

the task ‘taking’ the semaphore, but never giving it back. This is why the scenario is described  
它经常引起混淆，因为它不遵循与其他信号量使用场景相同的规则。

as being conceptually similar to writing to and reading from a queue. It often causes confusion  
接收信号量的任务必须始终将其返回——例如第 7 章“资源管理”中描述的场景。

as it does not follow the same rules as other semaphore usage scenarios, where a task that  
takes a semaphore must always give it back—such as the scenarios described in Chapter 7,  
Resource Management.

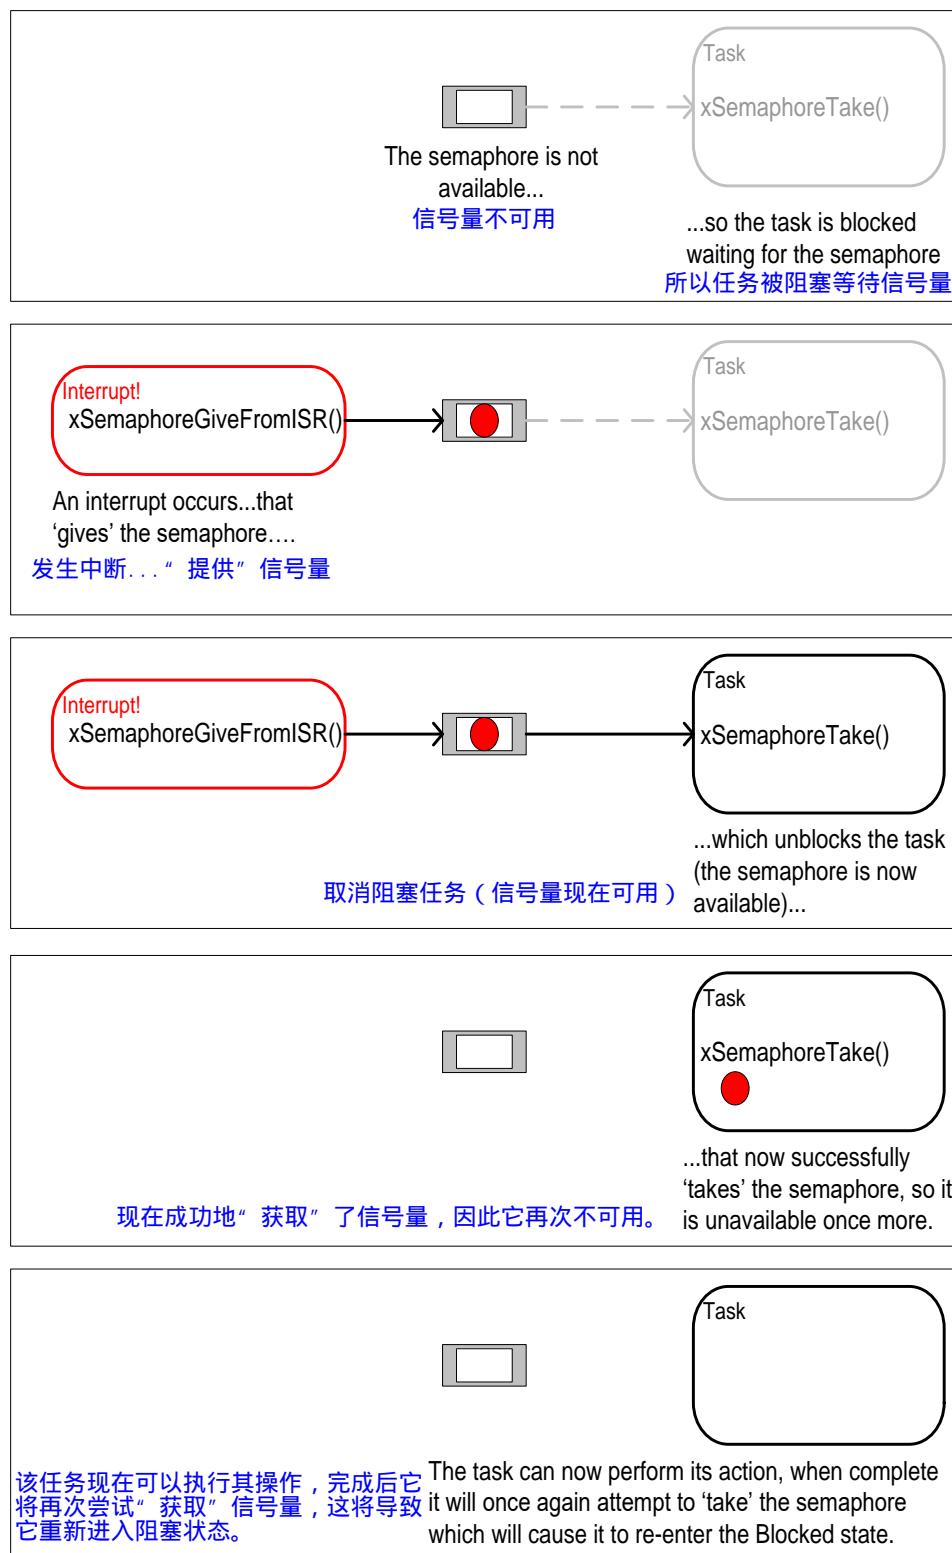


Figure 50. Using a binary semaphore to synchronize a task with an interrupt

## The xSemaphoreCreateBinary() API Function

FreeRTOS V9.0.0 also includes the `xSemaphoreCreateBinaryStatic()` function, which allocates the memory required to create a binary semaphore statically at compile time: Handles to all the various types of FreeRTOS semaphore are stored in a variable of type `SemaphoreHandle_t`.

在可以使用信号量之前，必须先创建它。要创建二进制信号量，请使用 `xSemaphoreCreateBinary()` API 函数  
Before a semaphore can be used, it must be created. To create a binary semaphore, use the `xSemaphoreCreateBinary()` API function<sup>1</sup>.

---

```
SemaphoreHandle_t xSemaphoreCreateBinary( void );
```

---

**Listing 89. The xSemaphoreCreateBinary() API function prototype**

**Table 33. xSemaphoreCreateBinary() Return Value**

Parameter Name	Description
Returned value	<p>如果返回 <code>NULL</code>，则无法创建信号量，因为 FreeRTOS 没有足够的堆内存来分配信号量数据结构。 If <code>NULL</code> is returned, then the semaphore cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the semaphore data structures.</p> <p>返回的非 <code>NULL</code> 值表示信号量已成功创建。返回值应存储为创建的信号量的句柄。 A non-NULL value being returned indicates that the semaphore has been created successfully. The returned value should be stored as the handle to the created semaphore.</p>

## The xSemaphoreTake() API Function

“获取”信号量意味着“获得”或“接收”信号量。信号量只有在可用时才能被使用。  
'Taking' a semaphore means to 'obtain' or 'receive' the semaphore. The semaphore can be taken only if it is available.

所有各种类型的 FreeRTOS 信号量（递归互斥锁除外）都可以使用 `xSemaphoreTake()` 函数“获取”。  
All the various types of FreeRTOS semaphore, except recursive mutexes, can be 'taken' using the `xSemaphoreTake()` function.

`xSemaphoreTake()` 不得在中断服务例程中使用。  
`xSemaphoreTake()` must not be used from an interrupt service routine.

---

<sup>1</sup> Some Semaphore API functions are actually macros, not functions. For simplicity, they are all referred to as functions throughout this book.

---

```
BaseType_t xSemaphoreTake( SemaphoreHandle_t xSemaphore, TickType_t xTicksToWait );
```

---

**Listing 90. The xSemaphoreTake() API function prototype**

**Table 34. xSemaphoreTake() parameters and return value**

Parameter Name/ Returned Value	Description
xSemaphore	<p>The semaphore being ‘taken’. 信号量被“占用”。</p> <p>信号量由 <code>SemaphoreHandle_t</code> 类型的变量引用。 它必须在使用前显式创建。 A semaphore is referenced by a variable of type <code>SemaphoreHandle_t</code>. It must be explicitly created before it can be used.</p>
xTicksToWait	<p>如果信号量不可用，任务应保持在阻塞状态以等待信号量的最长时间 The maximum amount of time the task should remain in the Blocked state to wait for the semaphore if it is not already available.</p> <p>如果 <code>xTicksToWait</code> 为零，则如果信号量不可用，<code>xSemaphoreTake()</code> 将立即返回。 If <code>xTicksToWait</code> is zero, then <code>xSemaphoreTake()</code> will return immediately if the semaphore is not available.</p> <p>The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro <code>pdMS_TO_TICKS()</code> can be used to convert a time specified in milliseconds to a time specified in ticks.</p> <p>Setting <code>xTicksToWait</code> to <code>portMAX_DELAY</code> will cause the task to wait indefinitely (without a timeout) if <code>INCLUDE_vTaskSuspend</code> is set to 1 in <code>FreeRTOSConfig.h</code>.</p>

**Table 34. xSemaphoreTake() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS 仅当对 xSemaphoreTake() 的调用成功获得信号量时，才会返回 pdPASS。 pdPASS is returned only if the call to xSemaphoreTake() was successful in obtaining the semaphore. 如果指定了阻塞时间 (xTicksToWait 不为零)，那么调用任务可能被置于阻塞状态以等待信号量，如果它不是立即可用的，但信号量在阻塞时间到期之前变得可用。 If a block time was specified (xTicksToWait was not zero), then it is possible that the calling task was placed into the Blocked state to wait for the semaphore if it was not immediately available, but the semaphore became available before the block time expired.</li><li>2. pdFALSE The semaphore is not available. If a block time was specified (xTicksToWait was not zero), then the calling task will have been placed into the Blocked state to wait for the semaphore to become available, but the block time expired before this happened.</li></ol>

### The xSemaphoreGiveFromISR() API Function

可以使用 xSemaphoreGiveFromISR() 函数“给定”二进制和计数信号量。

Binary and counting semaphores<sup>1</sup> can be ‘given’ using the xSemaphoreGiveFromISR() function.

xSemaphoreGiveFromISR() 是 xSemaphoreGive() 的中断安全版本，本章开头描述的 pxHigherPriorityTaskWoken 参数也是如此。  
xSemaphoreGiveFromISR() is the interrupt safe version of xSemaphoreGive(), so has the pxHigherPriorityTaskWoken parameter that was described at the start of this chapter.

---

```
BaseType_t xSemaphoreGiveFromISR( SemaphoreHandle_t xSemaphore,
                                BaseType_t *pxHigherPriorityTaskWoken );
```

---

**Listing 91. The xSemaphoreGiveFromISR() API function prototype**

---

<sup>1</sup> Counting semaphores are described in a later section of this book.

**Table 35. xSemaphoreGiveFromISR() parameters and return value**

Parameter Name/ Returned Value	Description
xSemaphore pxHigherPriorityTaskWoken	<p>The semaphore being ‘given’.          信号量由 <code>SemaphoreHandle_t</code> 类型的变量引用，并且必须在使用之前显式创建。          A semaphore is referenced by a variable of type <code>SemaphoreHandle_t</code>, and must be explicitly created before being used.</p> <p>单个信号量可能会阻止一个或多个任务在其上等待信号量可用。          It is possible that a single semaphore will have one or more tasks blocked on it waiting for the semaphore to become available. Calling <code>xSemaphoreGiveFromISR()</code> 可以使信号量可用，从而导致等待信号量的任务离开阻塞状态。</p> <p>调用 <code>xSemaphoreGiveFromISR()</code> 可以使信号量可用，从而导致等待信号量的任务离开阻塞状态。 Calling <code>xSemaphoreGiveFromISR()</code> can make the semaphore available, and so cause a task that was waiting for the semaphore to leave the Blocked state. If calling <code>xSemaphoreGiveFromISR()</code> 导致任务离开阻塞状态，  <code>xSemaphoreGiveFromISR()</code> causes a task to leave the Blocked state, and the unblocked task has a priority higher than the currently executing task (the task that was interrupted), then, internally, <code>xSemaphoreGiveFromISR()</code> will set <code>*pxHigherPriorityTaskWoken</code> to <code>pdTRUE</code>.</p> <p>如果 <code>xSemaphoreGiveFromISR()</code> 将此值设置为 <code>pdTRUE</code>，则通常应在退出中断之前执行上下文切换。          If <code>xSemaphoreGiveFromISR()</code> sets this value to <code>pdTRUE</code>, then normally a context switch should be performed before the interrupt is exited. This will ensure that the interrupt returns directly to the highest priority Ready state task.</p>
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"> <li data-bbox="645 1362 816 1405">1. pdPASS</li> </ol> <p>仅当调用 <code>xSemaphoreGiveFromISR()</code> 成功时才会返回 <code>pdPASS</code>。  <code>pdPASS</code> will be returned only if the call to <code>xSemaphoreGiveFromISR()</code> is successful.</p> <ol style="list-style-type: none"> <li data-bbox="645 1447 816 1489">2. pdFAIL</li> </ol> <p>如果信号量已经可用，则不能给出，<code>xSemaphoreGiveFromISR()</code> 将返回 <code>pdFAIL</code>。          If a semaphore is already available, it cannot be given, and <code>xSemaphoreGiveFromISR()</code> will return <code>pdFAIL</code>.</p>

## 示例 16. 使用二进制信号量将任务与中断同步

### Example 16. Using a binary semaphore to synchronize a task with an interrupt

此示例使用二进制信号量从中断服务例程中解除阻塞任务——有效地将任务与中断同步。

This example uses a binary semaphore to unblock a task from an interrupt service routine—effectively synchronizing the task with the interrupt.

一个简单的周期性任务用于每 500 毫秒生成一个软件中断。

A simple periodic task is used to generate a software interrupt every 500 milliseconds. A 使用软件中断是为了方便，因为在某些目标环境中挂接到真实中断很复杂。

software interrupt is used for convenience because of the complexity of hooking into a real 清单 92 显示了周期性任务的实现。

interrupt in some target environments. Listing 92 shows the implementation of the periodic 请注意，该任务在生成中断之前和之后都打印出一个字符串。

task. Note that the task prints out a string both before and after the interrupt is generated. 这允许在执行示例时产生的输出中观察执行顺序。

This allows the sequence of execution to be observed in the output produced when the example is executed.

---

显示的代码来自 Windows 项目，其中数字 0 到 2 由 FreeRTOS Windows 端口本身使用，本例中使用的软件中断号。因此 3 是应用程序可用的第一个数字。

```
/* The number of the software interrupt used in this example. The code shown is from
the Windows project, where numbers 0 to 2 are used by the FreeRTOS Windows port
itself, so 3 is the first number available to the application. */
#define mainINTERRUPT_NUMBER      3

static void vPeriodicTask( void *pvParameters )
{
    const TickType_t xDelay500ms = pdMS_TO_TICKS( 500UL );
    根据大多数任务，此任务是在无限循环中实现的。
    /* As per most tasks, this task is implemented within an infinite loop. */
    for( ;; )
    {
        阻塞直到再次产生软件中断。
        /* Block until it is time to generate the software interrupt again. */
        vTaskDelay( xDelay500ms );
        生成中断，在生成中断之前和之后打印一条消息，因此从输出中可以看出执行顺序。
        /* Generate the interrupt, printing a message both before and after
        the interrupt has been generated, so the sequence of execution is evident
        from the output. 下面使用的语法只能用于 FreeRTOS Windows 端口，其中仅模拟
        用于生成软件中断的语法取决于所使用的 FreeRTOS 端口。此类中断。
        The syntax used to generate a software interrupt is dependent on the
        FreeRTOS port being used. The syntax used below can only be used with
        the FreeRTOS Windows port, in which such interrupts are only simulated. */
        vPrintString( "Periodic task - About to generate an interrupt.\r\n" );
        vPortGenerateSimulatedInterrupt( mainINTERRUPT_NUMBER );
        vPrintString( "Periodic task - Interrupt generated.\r\n\r\n\r\n\r\n" );
    }
}
```

---

**Listing 92. Implementation of the task that periodically generates a software interrupt in Example 16**

清单 93 显示了中断处理被推迟到的任务的实现——通过使用二进制信号量与软件中断同步的任务。

Listing 93 shows the implementation of the task to which the interrupt processing is deferred—the task that is synchronized with the software interrupt through the use of a binary semaphore. Again, a string is printed out on each iteration of the task, so the sequence in which the task and the interrupt execute is evident from the output produced when the example is executed.

同样，在任务的每次迭代中都会打印出一个字符串，因此从执行示例时产生的输出中可以明显看出任务和中断执行的顺序。

应该注意的是，虽然清单 93 中所示的代码对于由软件生成中断的示例 16 来说是足够的，但对于由硬件外围设备生成中断的场景来说是不够的。It should be noted that, while the code shown in Listing 93 is adequate for Example 16, where interrupts are generated by software, it is not adequate for scenarios where interrupts are generated by hardware peripherals. A following sub-section describes how the structure of the 以下小节描述了如何更改代码结构以使其适合与硬件生成的中断一起使用。code needs to be changed to make it suitable for use with hardware generated interrupts.

---

```
static void vHandlerTask( void *pvParameters )
{
    /* As per most tasks, this task is implemented within an infinite loop. */
    for( ; ; )
    {
        /* Use the semaphore to wait for the event. The semaphore was created
        before the scheduler was started, so before this task ran for the first
        time. The task blocks indefinitely, meaning this function call will only
        return once the semaphore has been successfully obtained - so there is
        no need to check the value returned by xSemaphoreTake(). */
        xSemaphoreTake( xBinarySemaphore, portMAX_DELAY );

        /* To get here the event must have occurred. Process the event (in this
        Case, just print out a message). */
        vPrintString( "Handler task - Processing event.\r\n" );
    }
}
```

---

**Listing 93. The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 16**

清单 94 显示了 ISR。除了“给予”信号量来解除中断处理被推迟到的任务之外，这几乎没有什么作用。Listing 94 shows the ISR. This does very little other than 'give' the semaphore to unblock the task to which interrupt processing is deferred.

请注意如何使用 `xHigherPriorityTaskWoken` 变量。

Note how the `xHigherPriorityTaskWoken` variable is used. It is set to pdFALSE before calling 在调用 `xSemaphoreGiveFromISR()` 之前设置为 pdFALSE，然后在调用 `portYIELD_FROM_ISR()` 时用作参数。`xSemaphoreGiveFromISR()`, then used as the parameter when `portYIELD_FROM_ISR()` is 如果 `xHigherPriorityTaskWoken` 等于 pdTRUE，则将在 `portYIELD_FROM_ISR()` 宏内请求上下文切换。called. A context switch will be requested inside the `portYIELD_FROM_ISR()` macro if `xHigherPriorityTaskWoken` equals pdTRUE.

ISR 的原型和调用以强制进行上下文切换的宏对于 FreeRTOS Windows 端口都是正确的，但对于其他 FreeRTOS 端口可能不同。The prototype of the ISR, and the macro called to force a context switch, are both correct for the FreeRTOS Windows port, and may be different for other FreeRTOS ports. Refer to the 请参阅 FreeRTOS.org 网站上的端口特定文档页面以及 FreeRTOS 下载中提供的示例，以查找您正在使用的端口所需的语法。port specific documentation pages on the FreeRTOS.org website, and the examples provided in the FreeRTOS download, to find the syntax required for the port you are using.

与运行 FreeRTOS 的大多数架构不同，FreeRTOS Windows 端口需要 ISR 才能返回值。Unlike most architectures on which FreeRTOS runs, the FreeRTOS Windows port requires an ISR to return a value. The implementation of the `portYIELD_FROM_ISR()` macro provided 随 Windows 端口提供的 `portYIELD_FROM_ISR()` 宏的实现包括 return 语句，因此清单 94 没有显示显式返回的值。with the Windows port includes the return statement, so Listing 94 does not show a value being returned explicitly.

---

```
static uint32_t ulExampleInterruptHandler( void )
{
BaseType_t xHigherPriorityTaskWoken;

/* The xHigherPriorityTaskWoken parameter must be initialized to pdFALSE as
it will get set to pdTRUE inside the interrupt safe API function if a
context switch is required. */
xHigherPriorityTaskWoken = pdFALSE;

/* 'Give' the semaphore to unblock the task, passing in the address of
xHigherPriorityTaskWoken as the interrupt safe API function's
pxHigherPriorityTaskWoken parameter. */
xSemaphoreGiveFromISR( xBinarySemaphore, &xHigherPriorityTaskWoken );

/* Pass the xHigherPriorityTaskWoken value into portYIELD_FROM_ISR(). If
xHigherPriorityTaskWoken was set to pdTRUE inside xSemaphoreGiveFromISR()
then calling portYIELD_FROM_ISR() will request a context switch. If
xHigherPriorityTaskWoken is still pdFALSE then calling
portYIELD_FROM_ISR() will have no effect. Unlike most FreeRTOS ports, the
Windows port requires the ISR to return a value - the return statement
is inside the Windows version of portYIELD_FROM_ISR(). */
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

#### Listing 94. The ISR for the software interrupt used in Example 16

[main\(\)](#) 函数创建二进制信号量、创建任务、安装中断处理程序并启动调度程序。该实现如清单 95 所示。  
The main() function creates the binary semaphore, creates the tasks, installs the interrupt handler, and starts the scheduler. The implementation is shown in Listing 95.

为安装中断处理程序而调用的函数的语法特定于 FreeRTOS Windows 端口，并且对于其他 FreeRTOS 端口可能有所不同。  
The syntax of the function called to install an interrupt handler is specific to the FreeRTOS Windows port, and may be different for other FreeRTOS ports. Refer to the port specific documentation pages on the FreeRTOS.org website, and the examples provided in the FreeRTOS download, to find the syntax required for the port you are using.  
请参阅 FreeRTOS.org 网站上的端口特定文档页面以及 FreeRTOS 下载中提供的示例，以查找您正在使用的端口所需的语法。

```
int main( void )
{
    在使用信号量之前，必须显式创建它。在此示例中，创建了一个二进制信号量。
    /* Before a semaphore is used it must be explicitly created. In this example
    a binary semaphore is created. */
    xBinarySemaphore = xSemaphoreCreateBinary();

    /* Check the semaphore was created successfully. */
    if( xBinarySemaphore != NULL )
    {
        创建“处理器”任务，这是中断处理被推迟到的任务。这是将与中断同步的任务。
        /* Create the 'handler' task, which is the task to which interrupt
        processing is deferred. This is the task that will be synchronized with
        the interrupt. The handler task is created with a high priority to ensure
        it runs immediately after the interrupt exits. In this case a priority of
        3 is chosen. */ 处理任务以高优先级创建，以确保它在中断退出后立即运行。在这种情况下，选择优先级 3。
        xTaskCreate( vHandlerTask, "Handler", 1000, NULL, 3, NULL );

        创建将定期生成软件中断的任务。这是以低于处理器任务的优先级创建的，以确保每次处理器任务退出阻塞状态时它都会被抢占。
        /* Create the task that will periodically generate a software interrupt.
        This is created with a priority below the handler task to ensure it will
        get preempted each time the handler task exits the Blocked state. */
        xTaskCreate( vPeriodicTask, "Periodic", 1000, NULL, 1, NULL );


        安装软件中断处理器。执行此操作所需的语法取决于所使用的 FreeRTOS 端口。
        /* Install the handler for the software interrupt. The syntax necessary
        to do this is dependent on the FreeRTOS port being used. The syntax
        shown here can only be used with the FreeRTOS windows port, where such
        interrupts are only simulated. */ 此处显示的语法只能与 FreeRTOS windows 端口一起使用，其中仅模拟此类中断。
        vPortSetInterruptHandler( mainINTERRUPT_NUMBER, ulExampleInterruptHandler );

        启动调度程序，以便创建的任务开始执行。
        /* Start the scheduler so the created tasks start executing. */
        vTaskStartScheduler();
    }


    /* As normal, the following line should never be reached. */
    for( ; ; );
}
```

**Listing 95. The implementation of main() for Example 16**

Example 16 produces the output shown in Figure 51. As expected, vHandlerTask() enters the Running state as soon as the interrupt is generated, so the output from the task splits the output produced by the periodic task. Further explanation is provided in Figure 52.

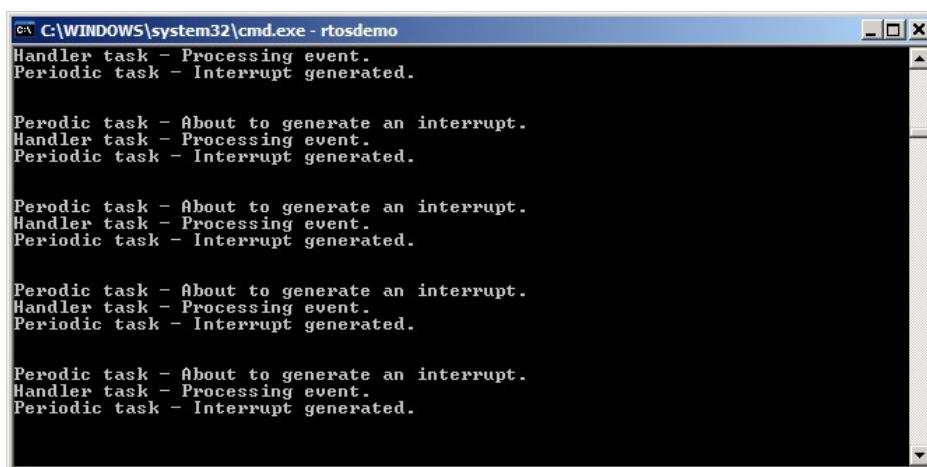

**Figure 51. The output produced when Example 16 is executed**

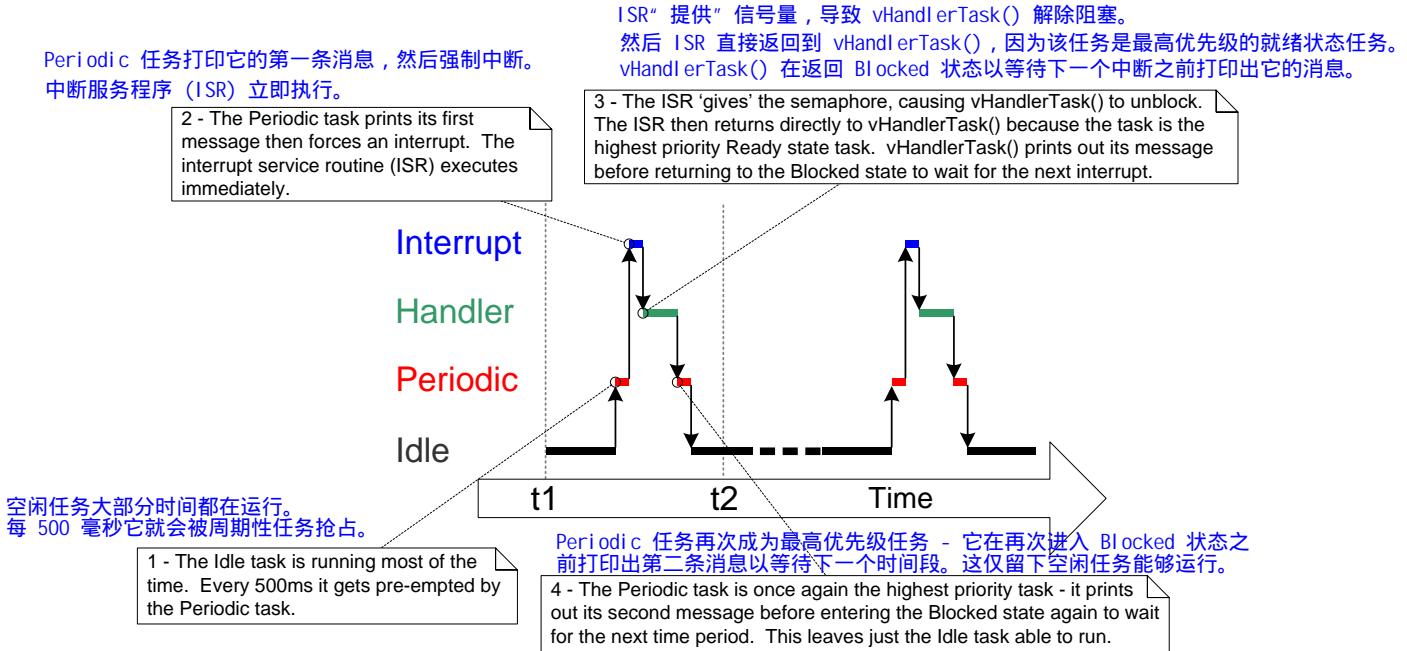

**Figure 52. The sequence of execution when Example 16 is executed**

改进示例 16 中使用的任务的实现

### Improving the Implementation of the Task Used in Example 16

示例 16 使用二进制信号量将任务与中断同步。执行顺序如下：

Example 16 used a binary semaphore to synchronize a task with an interrupt. The execution sequence was as follows:

1. The interrupt occurred. **发生中断**  
ISR 执行并“给予”信号量以解除对任务的阻塞。
2. The ISR executed and ‘gave’ the semaphore to unblock the task.  
该任务在 ISR 之后立即执行，并“占用”了信号量。
3. The task executed immediately after the ISR, and ‘took’ the semaphore.  
该任务处理了该事件，然后尝试再次“获取”信号量——进入阻塞状态，因为信号量尚不可用（另一个中断尚未发生）。
4. The task processed the event, then attempted to ‘take’ the semaphore again—entering the Blocked state because the semaphore was not yet available (another interrupt had not yet occurred).

仅当中断以相对较低的频率发生时，示例 16 中使用的任务结构才足够。


The structure of the task used in Example 16 is adequate only if interrupts occur at a relatively low frequency. To understand why, consider what would happen if a second, and then a third, interrupt had occurred before the task had completed its processing of the first interrupt:

- When the second ISR executed the semaphore would be empty, so the ISR would give the semaphore, and the task would process the second event immediately after it had completed processing the first event. That scenario is shown in Figure 53.


当第二个 ISR 执行时，信号量将为空，因此 ISR 将给出信号量，并且任务将在处理完第一个事件后立即处理第二个事件。这种情况如图 53 所示。

- When the third ISR executed, the semaphore would already be available, preventing the ISR giving the semaphore again, so the task would not know the third event had occurred. That scenario is shown in Figure 54.

当第三个 ISR 执行时，信号量已经可用，防止 ISR 再次提供信号量，因此任务不会知道第三个事件已经发生。  
这种情况如图 54 所示。

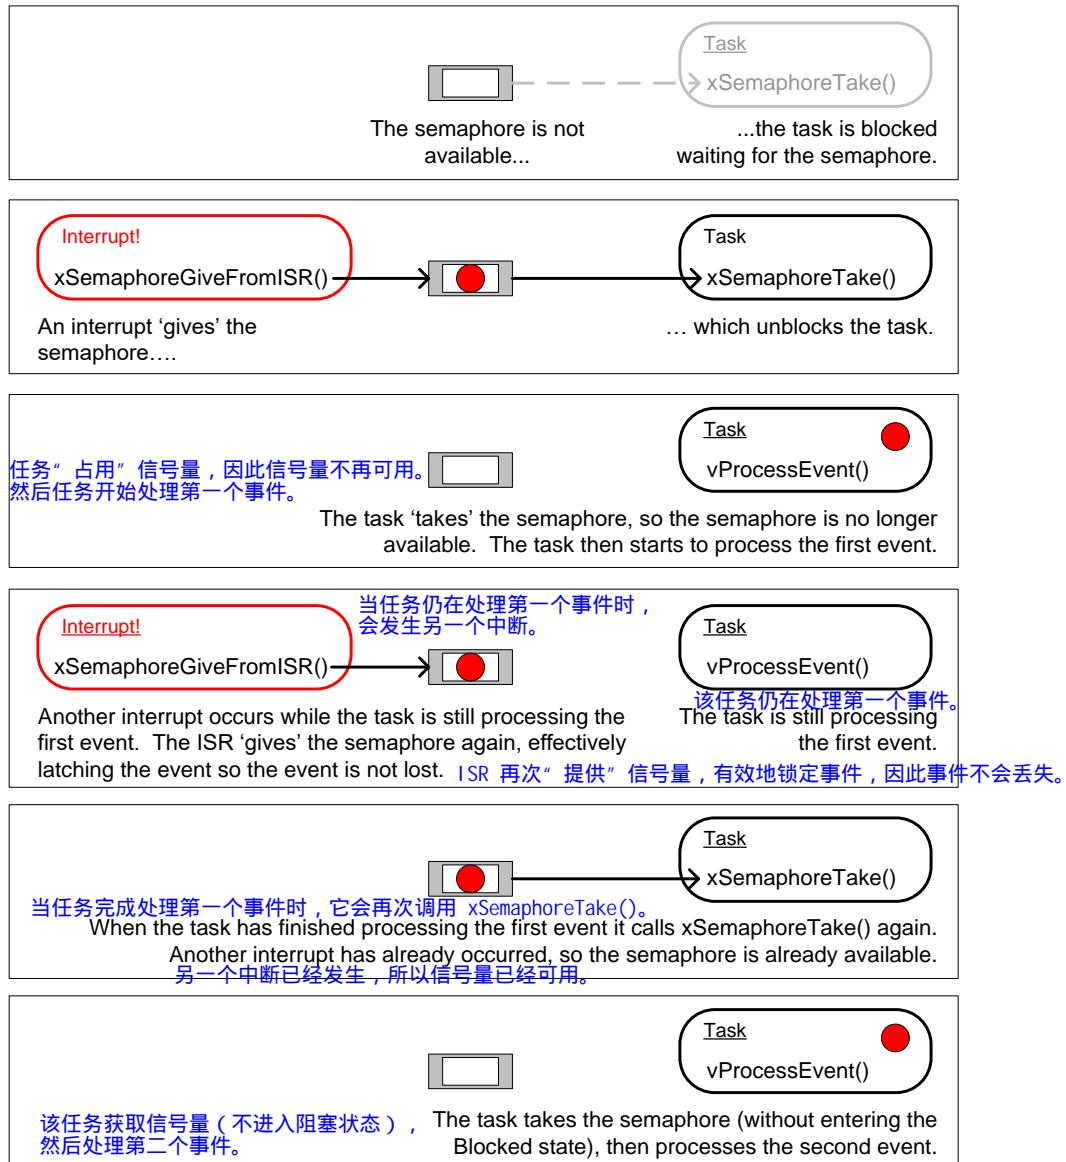

**Figure 53. The scenario when one interrupt occurs before the task has finished processing the first event**

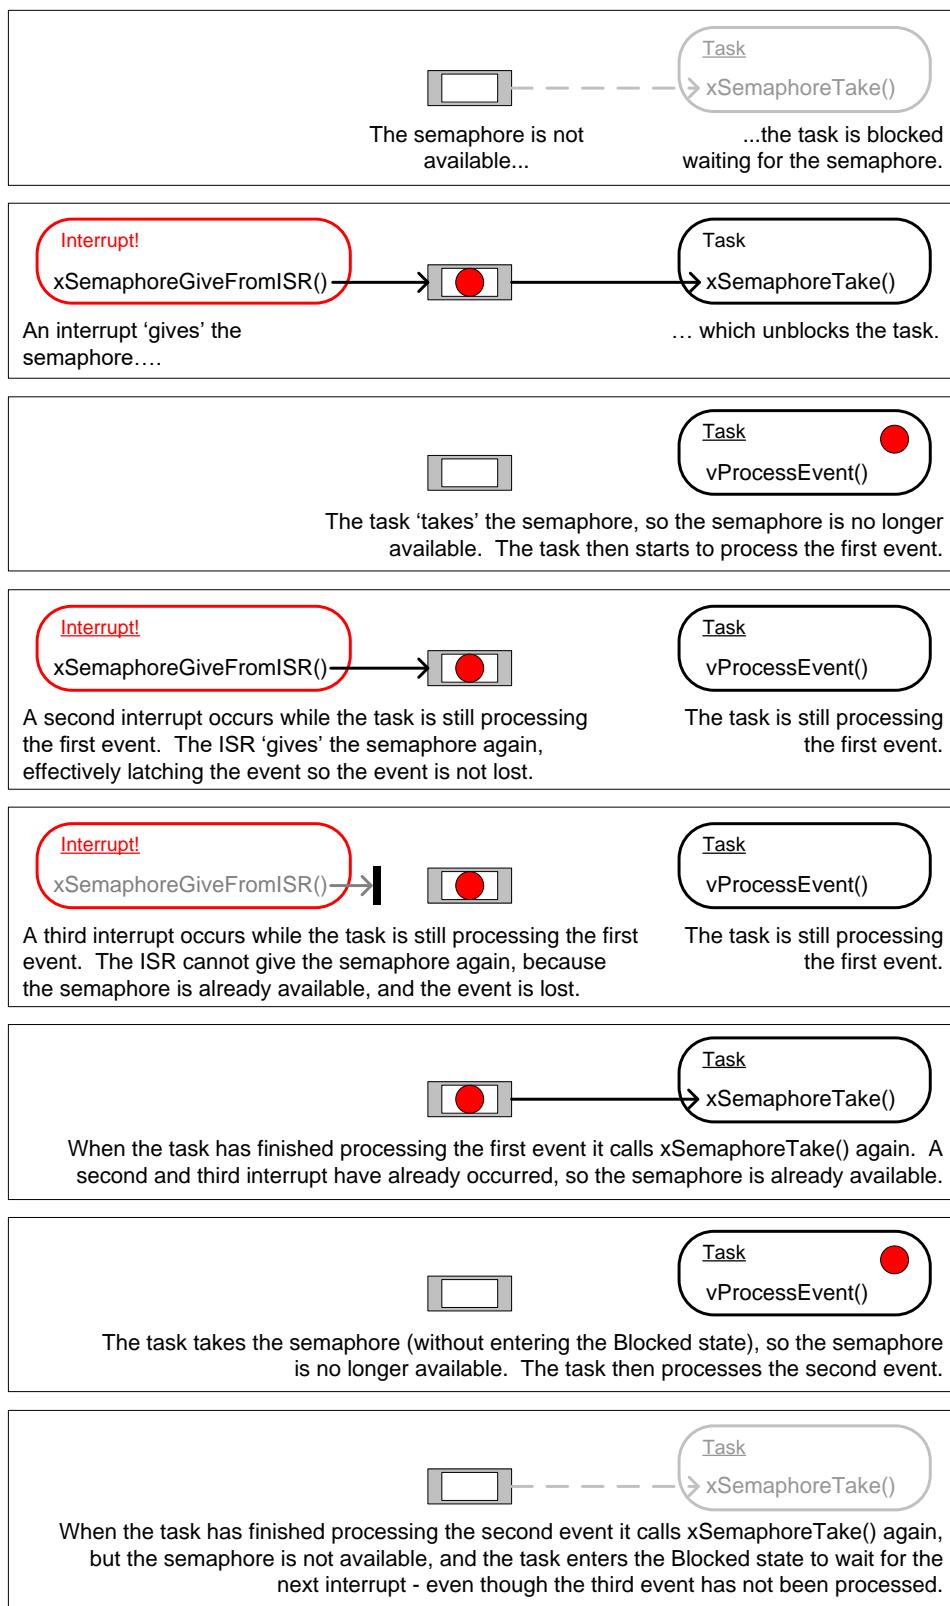

**Figure 54 The scenario when two interrupts occur before the task has finished processing the first event**

示例 16 中使用的延迟中断处理任务（如清单 93 所示）的结构使其在每次调用 xSemaphoreTake() 之间只处理一个事件。

The deferred interrupt handling task used in Example 16, and shown in Listing 93, is structured so that it only processes one event between each call to xSemaphoreTake(). That was adequate for Example 16, because the interrupts that generated the events were triggered by software, and occurred at a predictable time. In real applications, interrupts are

generated by hardware, and occur at unpredictable times. Therefore, to minimize the chance  
因此，为了最大限度地减少错过中断的机会，延迟中断处理任务必须被结构化。

of an interrupt being missed, the deferred interrupt handling task must be structured so that it  
以便它处理在每次调用 xSemaphoreTake() 之间已经可用的所有事件

processes all the events that are already available between each call to xSemaphoreTake()<sup>1</sup>.

清单 96 演示了这一点，它显示了如何构建 UART 的延迟中断处理程序。

This is demonstrated by Listing 96, which shows how a deferred interrupt handler for a UART could be structured. In Listing 96, it is assumed the UART generates a receive interrupt each time a character is received, and that the UART places received characters into a hardware FIFO (a hardware buffer).

例 16 中使用的延迟中断处理任务还有另一个弱点。它在调用 xSemaphoreTake() 时没有使用超时。

The deferred interrupt handling task used in Example 16 had one other weakness; it did not

use a time out when it called xSemaphoreTake(). Instead, the task passed portMAX\_DELAY  
相反，任务将 portMAX\_DELAY 作为 xSemaphoreTake() xTicksToWait 参数传递，这导致任务无限期地等待（没有超时）信号量可用，as the xSemaphoreTake() xTicksToWait parameter, which results in the task waiting

indefinitely (without a time out) for the semaphore to be available. Indefinite timeouts are often  
示例代码中经常使用无限超时，因为它们的使用简化了示例的结构，因此使示例更易于理解。

used in example code because their use simplifies the structure of the example, and therefore

makes the example easier to understand. However, indefinite timeouts are normally bad  
但是，在实际应用程序中，无限期超时通常是不好的做法，因为它们很难从错误中恢复。

practice in real applications, because they make it difficult to recover from an error. As an example, consider the scenario where a task is waiting for an interrupt to give a semaphore,  
例如，考虑一个任务正在等待中断提供信号量的场景，但硬件中的错误状态正在阻止生成中断：

but an error state in the hardware is preventing the interrupt from being generated:

如果任务在没有超时的情况下等待，它将不知道错误状态，并且将永远等待。

- If the task is waiting without a time out, it will not know about the error state, and will wait forever.
- If the task is waiting with a time out, then xSemaphoreTake() will return pdFAIL when the time out expires, and the task can then detect and clear the error the next time it executes. This scenario is also demonstrated in Listing 96.

如果任务正在等待超时，则 xSemaphoreTake() 将在超时到期时返回 pdFAIL，然后任务可以在下次执行时检测并清除错误。  
清单 96 也演示了这个场景。

---

<sup>1</sup> Alternatively, a counting semaphore, or a direct to task notification, can be used to count events. Counting semaphores are described in the next section. Direct to task notifications are described in Chapter 9, Task Notifications. Direct to task notifications are the preferred method as they are the most efficient in both run time and RAM usage.

```
static void vUARTReceiveHandlerTask( void *pvParameters )
{
/* xMaxExpectedBlockTime holds the maximum time expected between two interrupts. */
const TickType_t xMaxExpectedBlockTime = pdMS_TO_TICKS( 500 );

/* As per most tasks, this task is implemented within an infinite loop. */
for( ;; )
{
    /* 信号量由 UART 的接收 (Rx) 中断“给定”。 等待下一个中断的最大 xMaxExpectedBlockTime 滴答声。
     * The semaphore is 'given' by the UART's receive (Rx) interrupt. Wait a
     * maximum of xMaxExpectedBlockTime ticks for the next interrupt. */
    if( xSemaphoreTake( xBinarySemaphore, xMaxExpectedBlockTime ) == pdPASS )
    {
        /* 获得了信号量。 在再次调用 xSemaphoreTake() 之前处理所有未决的 Rx 事件。
         * The semaphore was obtained. Process ALL pending Rx events before
         * calling xSemaphoreTake() again. Each Rx event will have placed a
         * character in the UART's receive FIFO, and UART_RxCount() is assumed to
         * return the number of characters in the FIFO. */
        while( UART_RxCount() > 0 ) 每个 Rx 事件都会在 UART 的接收 FIFO 中放置一个字符，并且假设 UART_RxCount() 返回
        {
            /* UART_ProcessNextRxEvent() is assumed to process one Rx character,
             * reducing the number of characters in the FIFO by 1. */
            UART_ProcessNextRxEvent(); 假设 UART_ProcessNextRxEvent() 处理一个 Rx 字符，将 FIFO 中的字符数减少 1.
        }

        /* 没有更多的 Rx 事件处于挂起状态 (FIFO 中没有更多字符)，因此循环返回并调用 xSemaphoreTake() 以等待下一个中断。
         * No more Rx events are pending (there are no more characters in the
         * FIFO), so loop back and call xSemaphoreTake() to wait for the next
         * interrupt. Any interrupts occurring between this point in the code and
         * the call to xSemaphoreTake() will be latched in the semaphore, so will
         * not be lost. */
        在代码中的这一点和对 xSemaphoreTake() 的调用之间发生的任何中断都将被锁定在信号量中，因此不会丢失。
    }
    else
    {
        /* 未在预期时间内收到事件。 检查并在必要时清除 UART 中可能阻止 UART 产生更多中断的任何错误情况。
         * An event was not received within the expected time. Check for, and if
         * necessary clear, any error conditions in the UART that might be
         * preventing the UART from generating any more interrupts. */
        UART_ClearErrors();
    }
}
}
```

---

**Listing 96. The recommended structure of a deferred interrupt processing task,  
using a UART receive handler as an example**

## 6.5 Counting Semaphores

---

正如二进制信号量可以被认为是长度为 1 的队列一样，计数信号量也可以被认为是长度大于 1 的队列。

Just as binary semaphores can be thought of as queues that have a length of one, counting semaphores can be thought of as queues that have a length of more than one. Tasks are not interested in the data that is stored in the queue—just the number of items in the queue. configUSE\_COUNTING\_SEMAPHORES 必须在 FreeRTOSConfig.h 中设置为 1，以便计数信号量可用。configUSE\_COUNTING\_SEMAPHORES must be set to 1 in FreeRTOSConfig.h for counting semaphores to be available.

每次“给定”计数信号量时，都会使用其队列中的另一个空间。队列中的项目数是信号量的“计数”值。

Each time a counting semaphore is ‘given’，another space in its queue is used. The number of items in the queue is the semaphore’s ‘count’ value.

计数信号量通常用于两件事：

Counting semaphores are typically used for two things:

### 1. Counting events<sup>1</sup>

在这种情况下，事件处理程序将在每次事件发生时“给予”一个信号量——导致信号量的计数值在每次“给予”时递增。

In this scenario, an event handler will ‘give’ a semaphore each time an event occurs—causing the semaphore’s count value to be incremented on each ‘give’. A task will ‘take’ a semaphore each time it processes an event—causing the semaphore’s count value to be decremented on each ‘take’. The count value is the difference between the number of events that have occurred and the number that have been processed. This mechanism is shown in Figure 55.

创建用于计数事件的计数信号量，其初始计数值为零。

Counting semaphores that are used to count events are created with an initial count value of zero.

### 2. Resource management. 资源管理

在这种情况下，计数值表示可用资源的数量。为了获得对资源的控制，任务必须首先获得一个信号量——递减信号量的计数值。

In this scenario, the count value indicates the number of resources available. To obtain control of a resource, a task must first obtain a semaphore—decrementing the semaphore’s count value. When the count value reaches zero, there are no free resources. When a task finishes with the resource, it ‘gives’ the semaphore back—incrementing the semaphore’s count value.

---

<sup>1</sup> It is more efficient to count events using a direct to task notification than it is using a counting semaphore. Direct to task notifications are not covered until Chapter 9.

创建用于管理资源的计数信号量，使其初始计数值等于可用资源的数量。

Counting semaphores that are used to manage resources are created so that their initial count value equals the number of resources that are available. Chapter 7 covers using semaphores to manage resources.

第 7 章介绍了使用信号量来管理资源。

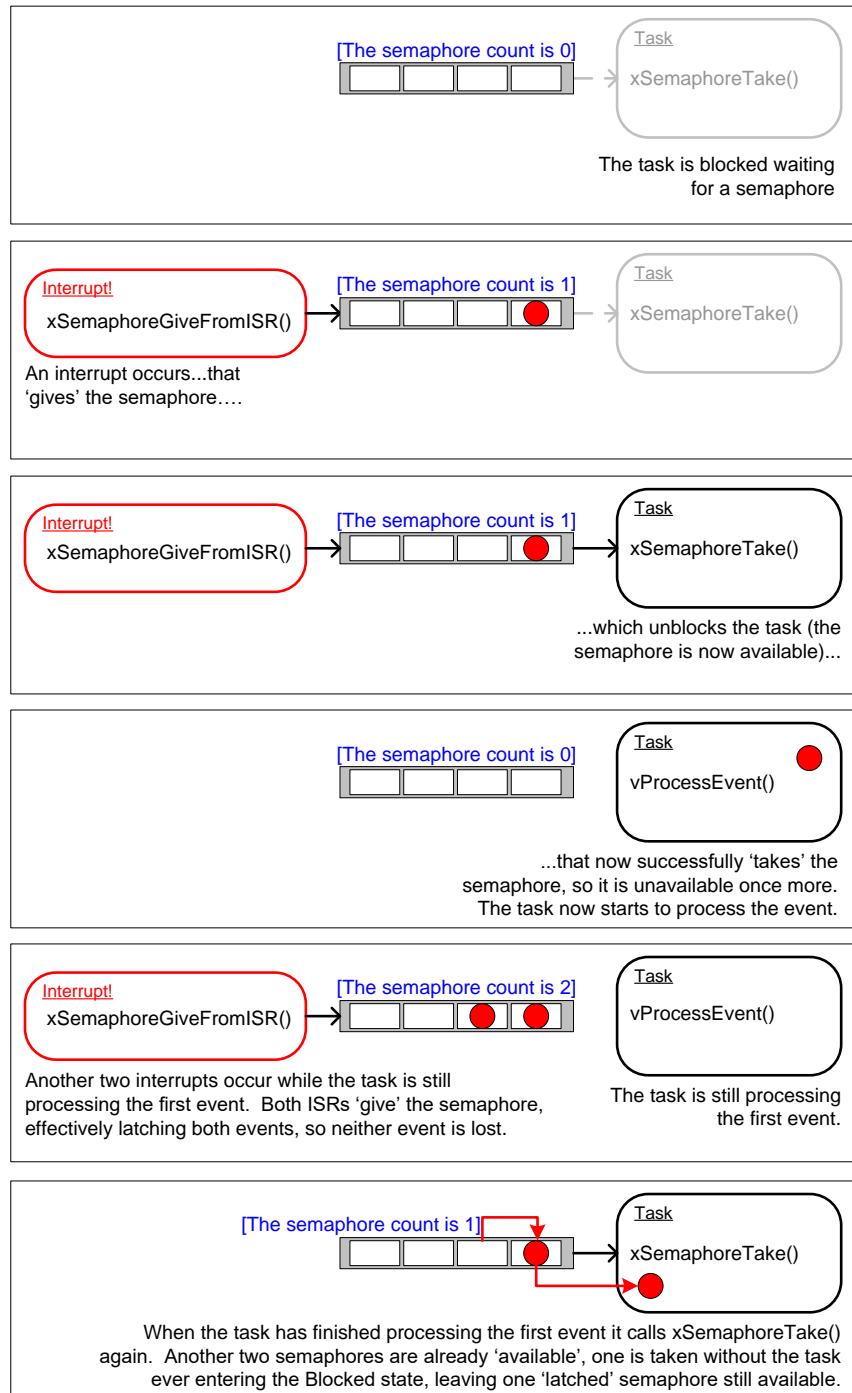


Figure 55. Using a counting semaphore to 'count' events

## The xSemaphoreCreateCounting() API Function

FreeRTOS V9.0.0 also includes the `xSemaphoreCreateCounting()` function, which allocates the memory required to create a counting semaphore statically at compile time: Handles to all the various types of 所有各种类型的 FreeRTOS 信号量的句柄都存储在 `SemaphoreHandle_t` 类型的变量中。FreeRTOS semaphore are stored in a variable of type `SemaphoreHandle_t`.

在可以使用信号量之前，必须先创建它。要创建计数信号量，请使用 `xSemaphoreCreateCounting()` API 函数。Before a semaphore can be used, it must be created. To create a counting semaphore, use the `xSemaphoreCreateCounting()` API function.

---

```
SemaphoreHandle_t xSemaphoreCreateCounting( UBaseType_t uxMaxCount,
                                         UBaseType_t uxInitialCount );
```

---

**Listing 97. The xSemaphoreCreateCounting() API function prototype**

**Table 36. xSemaphoreCreateCounting() parameters and return value**

Parameter Name/ Returned Value	Description
uxMaxCount	<p>信号量将计入的最大值。继续队列类比，<code>uxMaxCount</code> 值实际上是队列的长度。</p> <p>The maximum value to which the semaphore will count. To continue the queue analogy, the <code>uxMaxCount</code> value is effectively the length of the queue.</p> <p>当信号量用于计数或锁存事件时，<code>uxMaxCount</code> 是可以锁存的最大事件数。</p> <p>When the semaphore is to be used to count or latch events, <code>uxMaxCount</code> is the maximum number of events that can be latched.</p> <p>当信号量用于管理对资源集合的访问时，应将 <code>uxMaxCount</code> 设置为可用资源的总数。</p> <p>When the semaphore is to be used to manage access to a collection of resources, <code>uxMaxCount</code> should be set to the total number of resources that are available.</p>
uxInitialCount	<p>信号量创建后的初始计数值。</p> <p>The initial count value of the semaphore after it has been created.</p> <p>当信号量用于计数或锁存事件时，<code>uxInitialCount</code> 应该设置为零——因为可能在创建信号量时还没有发生任何事件。</p> <p>When the semaphore is to be used to count or latch events, <code>uxInitialCount</code> should be set to zero—as, presumably, when the semaphore is created, no events have yet occurred.</p> <p>当信号量用于管理对资源集合的访问时，应将 <code>uxInitialCount</code> 设置为等于 <code>uxMaxCount</code>——因为据推测，当信号量被创建时，所有资源都可用。</p> <p>When the semaphore is to be used to manage access to a collection of resources, <code>uxInitialCount</code> should be set to equal <code>uxMaxCount</code>—as, presumably, when the semaphore is created, all the resources are available.</p>

**Table 36. xSemaphoreCreateCounting() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>如果返回 NULL，则无法创建信号量，因为 FreeRTOS 没有足够的堆内存来分配信号量数据结构。 If NULL is returned, the semaphore cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the semaphore data structures. Chapter 2 provides more information on 第 2 章提供了有关堆内存管理的更多信息。 heap memory management.</p> <p>返回的非 NULL 值表示信号量已成功创建。 返回值应存储为创建的信号量的句柄。 A non-NULL value being returned indicates that the semaphore has been created successfully. The returned value should be stored as the handle to the created semaphore.</p>

### **Example 17. Using a counting semaphore to synchronize a task with an interrupt**

示例 17 通过使用计数信号量代替二进制信号量对示例 16 的实现进行了改进

Example 17 improves on the Example 16 implementation by using a counting semaphore in place of the binary semaphore. main() is changed to include a call to xSemaphoreCreateCounting() in place of the call to xSemaphoreCreateBinary(). The new API main() 已更改为包括对 xSemaphoreCreateCounting() 的调用，而不是对 xSemaphoreCreateBinary() 的调用。 清单 98 显示了新的 API 调用。 call is shown in Listing 98.

---

```
/* Before a semaphore is used it must be explicitly created. In this example a
counting semaphore is created. The semaphore is created to have a maximum count
value of 10, and an initial count value of 0. */
xCountingSemaphore = xSemaphoreCreateCounting( 10, 0 );
```

---

**Listing 98. The call to xSemaphoreCreateCounting() used to create the counting semaphore in Example 17**

为了模拟高频发生的多个事件，中断服务程序被更改为每个中断多次“给予”信号量。

To simulate multiple events occurring at high frequency, the interrupt service routine is changed to ‘give’ the semaphore more than once per interrupt. Each event is latched in the semaphore’s count value. The modified interrupt service routine is shown in Listing 99.

每个事件都被锁存在信号量的计数值中。 修改后的中断服务例程如清单 99 所示。

---

```

static uint32_t ulExampleInterruptHandler( void )
{
BaseType_t xHigherPriorityTaskWoken;

/* The xHigherPriorityTaskWoken parameter must be initialized to pdFALSE as it
will get set to pdTRUE inside the interrupt safe API function if a context switch
is required. */
xHigherPriorityTaskWoken = pdFALSE;

/* 'Give' the semaphore multiple times. The first will unblock the deferred
interrupt handling task, the following 'gives' are to demonstrate that the
semaphore latches the events to allow the task to which interrupts are deferred
to process them in turn, without events getting lost. This simulates multiple
interrupts being received by the processor, even though in this case the events
are simulated within a single interrupt occurrence. */
xSemaphoreGiveFromISR( xCountingSemaphore, &xHigherPriorityTaskWoken );
xSemaphoreGiveFromISR( xCountingSemaphore, &xHigherPriorityTaskWoken );
xSemaphoreGiveFromISR( xCountingSemaphore, &xHigherPriorityTaskWoken );

/* Pass the xHigherPriorityTaskWoken value into portYIELD_FROM_ISR(). If
xHigherPriorityTaskWoken was set to pdTRUE inside xSemaphoreGiveFromISR() then
calling portYIELD_FROM_ISR() will request a context switch. If
xHigherPriorityTaskWoken is still pdFALSE then calling portYIELD_FROM_ISR() will
have no effect. Unlike most FreeRTOS ports, the Windows port requires the ISR to
return a value - the return statement is inside the Windows version of
portYIELD_FROM_ISR(). */
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}

```

---


**Listing 99.** The implementation of the interrupt service routine used by Example 17

所有其他函数均未对示例 16 中使用的函数进行修改。

All the other functions remain unmodified from those used in Example 16.

执行示例 17 时产生的输出如图 56 所示。

The output produced when Example 17 is executed is shown in Figure 56. As can be seen, 可以看出，每次产生中断时，延迟处理中断的任务都会处理所有三个[模拟]事件。the task to which interrupt handling is deferred processes all three [simulated] events each 事件被锁存到信号量的计数值中，允许任务依次处理它们。time an interrupt is generated. The events are latched into the count value of the semaphore, allowing the task to process them in turn.

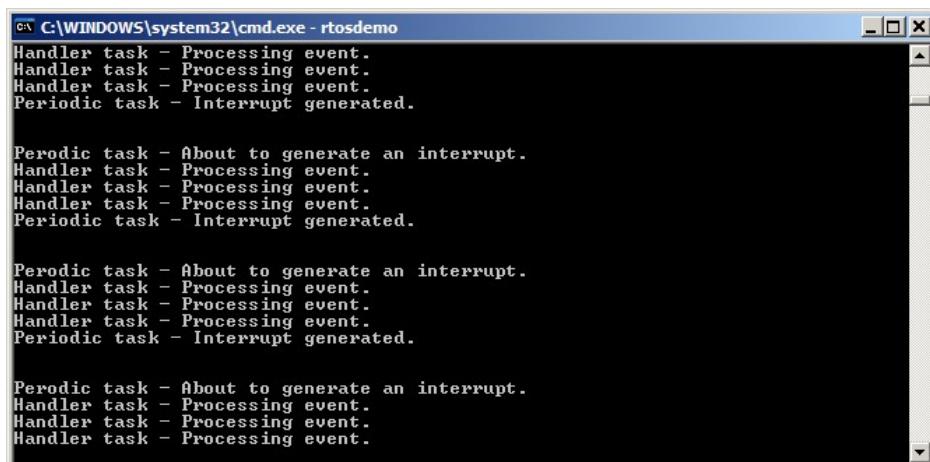

**Figure 56.** The output produced when Example 17 is executed

将工作推迟到 RTOS 守护程序任务

## 6.6 Deferring Work to the RTOS Daemon Task

到目前为止所介绍的延迟中断处理示例要求应用程序编写者为每个使用延迟处理技术的中断创建一个任务。

The deferred interrupt handling examples presented so far have required the application writer

to create a task for each interrupt that uses the deferred processing technique. It is also  
也可以使用 `xTimerPendFunctionCallFromISR()` API 函数将中断处理推迟到 RTOS 守护程序任务——无需为每个中断创建单独的任务。  
possible to use the `xTimerPendFunctionCallFromISR()`<sup>1</sup> API function to defer interrupt  
processing to the RTOS daemon task—removing the need to create a separate task for each  
interrupt. Deferring interrupt processing to the daemon task is called ‘centralized deferred  
将中断处理推迟到守护程序任务称为“集中延迟中断处理”  
interrupt processing’.

第 5 章描述了与软件定时器相关的 FreeRTOS API 函数如何将命令发送到定时器命令队列中的守护程序任务。

Chapter 5 described how software timer related FreeRTOS API functions send commands to

the daemon task on the timer command queue. The `xTimerPendFunctionCall()` and  
`xTimerPendFunctionCall()` 和 `xTimerPendFunctionCallFromISR()` API 函数使用相同的计时器命令队列向守护程序任务发送“执行函数”命令。  
`xTimerPendFunctionCallFromISR()` API functions use the same timer command queue to send  
an ‘execute function’ command to the daemon task. The function sent to the daemon task is  
发送到守护任务的函数然后在守护任务的上下文中执行。  
then executed in the context of the daemon task.

集中延迟中断处理的优点包括：

Advantages of centralized deferred interrupt processing include:

- Lower resource usage 降低资源使用率

它消除了为每个延迟中断创建单独任务的需要。

It removes the need to create a separate task for each deferred interrupt.

- Simplified user model 简化的用户模型

延迟中断处理函数是标准的 C 函数。

The deferred interrupt handling function is a standard C function.

集中式延迟中断处理的缺点包括：

Disadvantages of centralized deferred interrupt processing include:

- Less flexibility 灵活性较低

不能单独设置每个延迟中断处理任务的优先级。

It is not possible to set the priority of each deferred interrupt handling task separately.  
每个延迟中断处理函数都以守护程序任务的优先级执行。

Each deferred interrupt handling function executes at the priority of the daemon task. As  
如第 5 章所述，守护程序任务的优先级由 FreeRTOSConfig.h 中的 configTIMER\_TASK\_PRIORITY 编译时间配置常量设置。  
described in Chapter 5, the priority of the daemon task is set by the  
configTIMER\_TASK\_PRIORITY compile time configuration constant within  
FreeRTOSConfig.h.

- Less determinism 较少的确定性

<sup>1</sup> It was noted in Chapter 5 that the daemon task was originally called the timer service task because it was originally only used to execute software timer callback functions. Hence, `xTimerPendFunctionCall()` is implemented in timers.c, and, in accordance with the convention of prefixing a function’s name with the name of the file in which the function is implemented, the function’s name is prefixed with ‘Timer’.

`xTimerPendFunctionCallFromISR()` 将命令发送到计时器命令队列的后面。

`xTimerPendFunctionCallFromISR()` sends a command to the back of the timer command queue. Commands that were already in the timer command queue will be processed by the daemon task before the ‘execute function’ command sent to the queue by `xTimerPendFunctionCallFromISR()`.

不同的中断有不同的时序约束，因此在同一个应用程序中使用两种延迟中断处理的方法是很常见的。

Different interrupts have different timing constraints, so it is common to use both methods of deferring interrupt processing within the same application.

### The `xTimerPendFunctionCallFromISR()` API Function

`xTimerPendFunctionCallFromISR()` 是 `xTimerPendFunctionCall()` 的中断安全版本。

`xTimerPendFunctionCallFromISR()` is the interrupt safe version of `xTimerPendFunctionCall()`. 这两个 API 函数都允许应用程序编写者提供的函数由 RTOS 守护程序任务执行，因此也可以在 RTOS 守护程序任务的上下文中执行。 Both API functions allow a function provided by the application writer to be executed by, and

therefore in the context of, the RTOS daemon task. Both the function to be executed, and the 要执行的函数和函数的输入参数的值都被发送到计时器命令队列上的守护任务。

value of the function’s input parameters, are sent to the daemon task on the timer command 因此，函数实际执行的时间取决于守护程序任务相对于应用程序中其他任务的优先级。

queue. When the function actually executes is therefore dependent on the priority of the daemon task relative to other tasks in the application.

---

```
BaseType_t xTimerPendFunctionCallFromISR( PendedFunction_t xFunctionToPend,
                                         void *pvParameter1,
                                         uint32_t ulParameter2,
                                         BaseType_t *pxHigherPriorityTaskWoken );
```

---

**Listing 100. The `xTimerPendFunctionCallFromISR()` API function prototype**

---

```
void vPendableFunction( void *pvParameter1, uint32_t ulParameter2 );
```

---

**Listing 101. The prototype to which a function passed in the `xFunctionToPend` parameter of `xTimerPendFunctionCallFromISR()` must conform**

**Table 37. `xTimerPendFunctionCallFromISR()` parameters and return value**

Parameter Name/ Returned Value	Description
<code>xFunctionToPend</code>	A pointer to the function that will be executed in the daemon task (in effect, just the function name). The prototype of the function must be the same as that shown in Listing 101.

**Table 37. xTimerPendFunctionCallFromISR() parameters and return value**

Parameter Name/ Returned Value	Description
pvParameter1	<p>将作为函数的 pvParameter1 参数传递给守护程序任务执行的函数的值。</p> <p>The value that will be passed into the function that is executed by the daemon task as the function's pvParameter1 parameter. 该参数具有 void * 类型以允许它用于传递任何数据类型。The parameter has a void * type to allow it to be used to pass 例如，整数类型可以直接转换为 void *，或者 void * 可用于指向结构。any data type. For example, integer types can be directly cast to a void *, alternatively the void * can be used to point to a structure.</p>
ulParameter2	<p>将作为函数的 ul Parameter2 参数传递给守护程序任务执行的函数的值。</p> <p>The value that will be passed into the function that is executed by the daemon task as the function's ulParameter2 parameter.</p>
pxHigherPriorityTaskWoken	<p>xTimerPendFunctionCallFromISR() 写入定时器命令队列。</p> <p>xTimerPendFunctionCallFromISR() writes to the timer command queue. If the RTOS daemon task was in the 如果 RTOS 守护任务处于阻塞状态以等待定时器命令队列上的数据可用， Blocked state to wait for data to become available on the timer 那么写入定时器命令队列将导致守护任务离开阻塞状态。 command queue, then writing to the timer command queue will cause the daemon task to leave the Blocked state. If the priority of the daemon task is higher than the priority of the currently executing task (the task that was interrupted), then, internally, xTimerPendFunctionCallFromISR() will set *pxHigherPriorityTaskWoken to pdTRUE.</p> <p>如果 xTimerPendFunctionCallFromISR() 将此值设置为 pdTRUE，则必须在中断退出之前执行上下文切换。 If xTimerPendFunctionCallFromISR() sets this value to pdTRUE, then a context switch must be performed before the 这将确保中断直接返回到守护任务，因为守护任务将是最高优先级的就绪状态任务。 interrupt is exited. This will ensure that the interrupt returns directly to the daemon task, as the daemon task will be the highest priority Ready state task.</p>

**Table 37. xTimerPendFunctionCallFromISR() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"> <li>1. pdPASS 如果“执行函数”命令被写入定时器命令队列，则将返回 pdPASS。 pdPASS will be returned if the ‘execute function’ command was written to the timer command queue.</li> <li>2. pdFAIL 如果由于计时器命令队列已满而无法将“执行功能”命令写入计时器命令队列，则将返回 pdFAIL。 pdFAIL will be returned if the ‘execute function’ command could not be written to the timer command queue because the timer command queue was already full. Chapter 5 第 5 章介绍了如何设置定时器命令队列的长度。describes how to set the length of the timer command queue.</li> </ol>

#### 集中延迟中断处理

### Example 18. Centralized deferred interrupt processing

示例 18 提供了与示例 16 类似功能，但没有使用信号量，也没有创建专门用于执行中断所需处理的任务。

Example 18 provides similar functionality to Example 16, but without using a semaphore, and without creating a task specifically to perform the processing necessitated by the interrupt. 相反，处理由 RTOS 守护程序任务执行。  
Instead, the processing is performed by the RTOS daemon task.

示例 18 使用的中断服务例程如清单 102 所示。

The interrupt service routine used by Example 18 is shown in Listing 102. It calls xTimerPendFunctionCallFromISR() 以将指向名为 vDeferredHandlingFunction() 的函数的指针传递给守护程序任务。xTimerPendFunctionCallFromISR() to pass a pointer to a function called vDeferredHandlingFunction() to the daemon task. The deferred interrupt processing is 延迟中断处理由 vDeferredHandlingFunction() 函数执行。performed by the vDeferredHandlingFunction() function.

中断服务例程每次执行时都会增加一个名为 ulParameterValue 的变量。

The interrupt service routine increments a variable called ulParameterValue each time it executes. ulParameterValue is used as the value of ulParameter2 in the call to xTimerPendFunctionCallFromISR(), so will also be used as the value of ulParameter2 in the call to vDeferredHandlingFunction() when vDeferredHandlingFunction() is executed by the daemon task. The function’s other parameter, pvParameter1, is not used in this example.

ulParameterValue 在调用 xTimerPendFunctionCallFromISR() 时用作 ulParameter2 的值，因此在守护程序任务执行 vDeferredHandlingFunction() 时也会用作对 vDeferredHandlingFunction() 的调用中的 ulParameter2 的值。该函数的另一个参数 pvParameter1 在此示例中未使用。

```
static uint32_t ulExampleInterruptHandler( void )
{
    static uint32_t ulParameterValue = 0;
    BaseType_t xHigherPriorityTaskWoken;

    /* The xHigherPriorityTaskWoken parameter must be initialized to pdFALSE as it will
     * get set to pdTRUE inside the interrupt safe API function if a context switch is
     * required. */
    xHigherPriorityTaskWoken = pdFALSE;

    /* Send a pointer to the interrupt's deferred handling function to the daemon task.
     * The deferred handling function's pvParameter1 parameter is not used so just set to
     * NULL. The deferred handling function's ulParameter2 parameter is used to pass a
     * number that is incremented by one each time this interrupt handler executes. */
    xTimerPendFunctionCallFromISR( vDeferredHandlingFunction, /* Function to execute. */
                                    NULL,                      /* Not used. */
                                    ulParameterValue,          /* Incrementing value. */
                                    &xHigherPriorityTaskWoken );

    ulParameterValue++;

    将 xHigherPriorityTaskWoken 值传递给 portYIELD_FROM_ISR()。
    /* Pass the xHigherPriorityTaskWoken value into portYIELD_FROM_ISR(). If
     * xHigherPriorityTaskWoken was set to pdTRUE inside xTimerPendFunctionCallFromISR() then
     * calling portYIELD_FROM_ISR() will request a context switch. If
     * xHigherPriorityTaskWoken is still pdFALSE then calling portYIELD_FROM_ISR() will have
     * no effect. Unlike most FreeRTOS ports, the Windows port requires the ISR to return a
     * value - the return statement is inside the Windows version of portYIELD_FROM_ISR(). */
    portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

**Listing 102. The software interrupt handler used in Example 18**

vDeferredHandlingFunction() 的实现如清单 103 所示。它打印出一个固定的字符串，以及它的 ulParameter2 参数的值。The implementation of vDeferredHandlingFunction() is shown in Listing 103. It prints out a fixed string, and the value of its ulParameter2 parameter.

vDeferredHandlingFunction() 必须具有清单 101 中所示的原型，尽管在此示例中，实际上只使用了它的一个参数。vDeferredHandlingFunction() must have the prototype shown in Listing 101, even though, in this example, only one of its parameters is actually used.

---

```
static void vDeferredHandlingFunction( void *pvParameter1, uint32_t ulParameter2 )
{
    /* Process the event - in this case just print out a message and the value of
     * ulParameter2. pvParameter1 is not used in this example. */
    vPrintStringAndNumber( "Handler function - Processing event ", ulParameter2 );
}
```

---

**Listing 103. The function that performs the processing necessitated by the interrupt in Example 18.**

示例 18 使用的 main() 函数如清单 104 所示。

The main() function used by Example 18 is shown in Listing 104. It is simpler than the main() function used by Example 16 because it does not create either a semaphore or a task to perform the deferred interrupt processing.

它比示例 16 使用的 main() 函数更简单，因为它不创建信号量或任务来执行延迟中断处理。

vPeriodicTask() 是周期性产生软件中断的任务。

vPeriodicTask() is the task that periodically generates software interrupts. It is created with a  
它的优先级低于守护程序任务的优先级，以确保一旦守护程序任务离开阻塞状态，它就被守护程序任务抢占。  
priority below the priority of the daemon task to ensure it is pre-empted by the daemon task as  
soon as the daemon task leaves the Blocked state.

---

```
int main( void )
{
    /* The task that generates the software interrupt is created at a priority below the
       priority of the daemon task. The priority of the daemon task is set by the
       configTIMER_TASK_PRIORITY compile time configuration constant in FreeRTOSConfig.h. */
    const UBaseType_t ulPeriodicTaskPriority = configTIMER_TASK_PRIORITY - 1;

    /* Create the task that will periodically generate a software interrupt. */
    xTaskCreate( vPeriodicTask, "Periodic", 1000, NULL, ulPeriodicTaskPriority, NULL );

    /* Install the handler for the software interrupt. The syntax necessary to do
       this is dependent on the FreeRTOS port being used. The syntax shown here can
       only be used with the FreeRTOS windows port, where such interrupts are only
       simulated. */
    vPortSetInterruptHandler( mainINTERRUPT_NUMBER, ulExampleInterruptHandler );

    /* Start the scheduler so the created task starts executing. */
    vTaskStartScheduler();


    /* As normal, the following line should never be reached. */
    for( ; ; );
}
```

---

Listing 104. The implementation of main() for Example 18

示例 18 产生如图 57 所示的输出。

Example 18 produces the output shown in Figure 57. The priority of the daemon task is higher  
守护任务的优先级高于产生软件中断的任务的优先级，所以 vDeferredHandlingFunction() 会在中断产生后立即由守护任务执行。  
than the priority of the task that generates the software interrupt, so  
vDeferredHandlingFunction() is executed by the daemon task as soon as the interrupt is  
generated. That results in the message output by vDeferredHandlingFunction() appearing in  
这导致 vDeferredHandlingFunction() 输出的消息出现在周期性任务输出的两条消息之间，  
between the two messages output by the periodic task, just as it did when a semaphore was  
就像使用信号量来解除对专用延迟中断处理任务的阻塞一样。  
used to unblock a dedicated deferred interrupt processing task. Further explanation is  
图 58 提供了进一步的解释。  
provided in Figure 58.

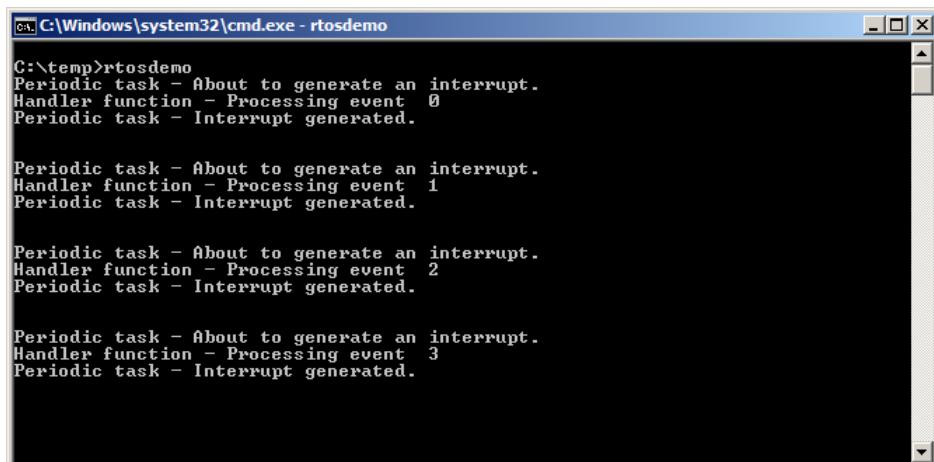

```
C:\temp>rtosdemo
Periodic task - About to generate an interrupt.
Handler function - Processing event  0
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler function - Processing event  1
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler function - Processing event  2
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler function - Processing event  3
Periodic task - Interrupt generated.
```

Figure 57. The output produced when Example 18 is executed

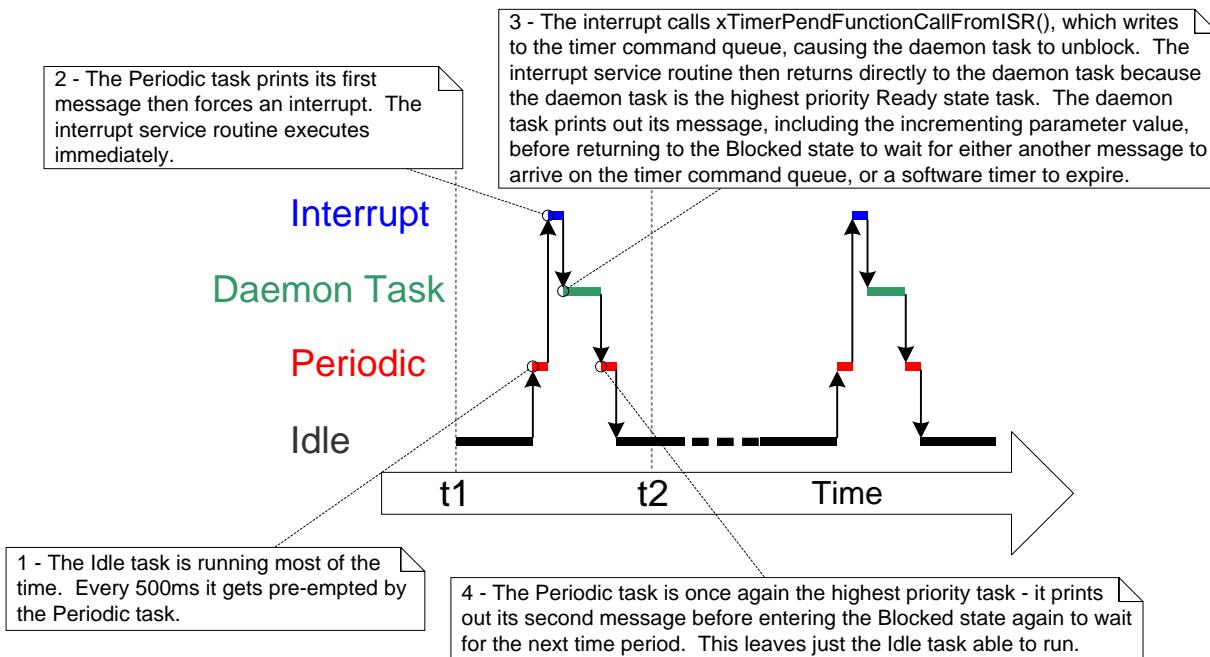


Figure 58 The sequence of execution when Example 18 is executed

## 6.7 Using Queues within an Interrupt Service Routine

[二进制和计数信号量用于传达事件。队列用于传递事件和传输数据。](#)

Binary and counting semaphores are used to communicate events. Queues are used to communicate events, and to transfer data.

[xQueueSendToFrontFromISR\(\) 是 xQueueSendToFront\(\) 的版本，可在中断服务例程中安全使用，](#)  
[xQueueSendToFrontFromISR\(\) is the version of xQueueSendToFront\(\) that is safe to use in](#)  
[an interrupt service routine, xQueueSendToBackFromISR\(\) is the version of](#)  
[xQueueSendToBackFromISR\(\) 是 xQueueSendToBack\(\) 的版本，可在中断服务例程中安全使用，](#)  
[xQueueSendToBack\(\) that is safe to use in an interrupt service routine, and](#)  
[xQueueReceiveFromISR\(\) 是 xQueueReceive\(\) 的版本，可以在中断服务例程中安全使用。](#)  
[xQueueReceiveFromISR\(\) is the version of xQueueReceive\(\) that is safe to use in an interrupt](#)  
[service routine.](#)

### The xQueueSendToFrontFromISR() and xQueueSendToBackFromISR() API Functions

---

```
BaseType_t xQueueSendToFrontFromISR( QueueHandle_t xQueue,
                                      void *pvItemToQueue
                                      BaseType_t *pxHigherPriorityTaskWoken
                                    );
```

---

**Listing 105. The xQueueSendToFrontFromISR() API function prototype**

---

```
BaseType_t xQueueSendToBackFromISR( QueueHandle_t xQueue,
                                     void *pvItemToQueue
                                     BaseType_t *pxHigherPriorityTaskWoken
                                   );
```

---

**Listing 106. The xQueueSendToBackFromISR() API function prototype**

xQueueSendFromISR() and xQueueSendToBackFromISR() are functionally equivalent.

**Table 38. xQueueSendToFrontFromISR() and xQueueSendToBackFromISR() parameters and return values**

Parameter Name/ Returned Value	Description
xQueue	The handle of the queue to which the data is being sent (written). The queue handle will have been returned from the call to xQueueCreate() used to create the queue.

**Table 38. xQueueSendToFrontFromISR() and xQueueSendToBackFromISR()  
parameters and return values**

Parameter Name/ Returned Value	Description
pvlItemToQueue	A pointer to the data that will be copied into the queue.
pxHigherPriorityTaskWoken	<p>The size of each item the queue can hold is set when the queue is created, so this many bytes will be copied from pvlItemToQueue into the queue storage area.</p> <p>It is possible that a single queue will have one or more tasks blocked on it, waiting for data to become available. Calling xQueueSendToFrontFromISR() or xQueueSendToBackFromISR() can make data available, and so cause such a task to leave the Blocked state. If calling the API function causes a task to leave the Blocked state, and the unblocked task has a priority higher than the currently executing task (the task that was interrupted), then, internally, the API function will set *pxHigherPriorityTaskWoken to pdTRUE.</p> <p>If xQueueSendToFrontFromISR() or xQueueSendToBackFromISR() sets this value to pdTRUE, then a context switch should be performed before the interrupt is exited. This will ensure that the interrupt returns directly to the highest priority Ready state task.</p>
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdPASS</li></ol> <p>pdPASS is returned only if data has been sent successfully to the queue.</p> <ol style="list-style-type: none"><li>2. errQUEUE_FULL</li></ol> <p>errQUEUE_FULL is returned if data cannot be sent to the queue because the queue is already full.</p>

## 使用 ISR 中的队列时的注意事项

### Considerations When Using a Queue From an ISR

队列提供了一种将数据从中断传递到任务的简单方便的方法，但是如果数据到达的频率很高，则使用队列效率不高。

Queues provide an easy and convenient way of passing data from an interrupt to a task, but it is not efficient to use a queue if data is arriving at a high frequency.

FreeRTOS 下载中的许多演示应用程序都包含一个简单的 UART 驱动程序，该驱动程序使用队列将字符传递出 UART 的接收 ISR。

Many of the demo applications in the FreeRTOS download include a simple UART driver that uses a queue to pass characters out of the UART's receive ISR. In those demos a queue is used for two reasons: to demonstrate queues being used from an ISR, and to deliberately load

the system in order to test the FreeRTOS port. The ISRs that use a queue in this manner are以这种方式使用队列的 ISR 绝对不是为了代表一种高效的设计，除非数据到达速度变慢，definitely not intended to represent an efficient design, and unless the data is arriving slowing,建议生产代码不要复制该技术。

it is recommended that production code does not copy the technique. More efficient techniques, that are suitable for production code, include:

适用于生产代码的更有效的技术包括：

使用直接内存访问 (DMA) 硬件来接收和缓冲字符。

- Using Direct Memory Access (DMA) hardware to receive and buffer characters. This这种方法实际上没有软件开销。  
method has practically no software overhead. A direct to task notification<sup>1</sup> can then be然后可以使用直接到任务通知来解除阻塞任务，该任务仅在检测到传输中断后才会处理缓冲区。  
used to unblock the task that will process the buffer only after a break in transmission has been detected.

将每个接收到的字符复制到线程安全的 RAM 缓冲区中

- Copying each received character into a thread safe RAM buffer<sup>2</sup>. Again, a direct to同样，直接到任务通知可用于在接收到完整消息或检测到传输中断后解除阻塞将处理缓冲区的任务  
task notification can be used to unblock the task that will process the buffer after a complete message has been received, or after a break in transmission has been detected.

直接在 ISR 中处理接收到的字符，然后使用队列将处理数据（而不是原始数据）的结果发送给任务。

- Processing the received characters directly within the ISR, then using a queue to send just the result of processing the data (rather than the raw data) to a task. This was这在之前的图 34 中得到了证明。  
previously demonstrated by Figure 34.

#### 示例 19. 从中断中发送和接收队列

#### Example 19. Sending and receiving on a queue from within an interrupt

此示例演示在同一中断中使用 `xQueueSendToBackFromISR()` 和 `xQueueReceiveFromISR()`。

This example demonstrates `xQueueSendToBackFromISR()` and `xQueueReceiveFromISR()` being used within the same interrupt. As before, for convenience the interrupt is generated by和以前一样，为方便起见，中断由软件生成。  
software.

<sup>1</sup> Direct to task notifications provide the most efficient method of unblocking a task from an ISR. Direct to task notifications are covered in Chapter 9, Task Notifications.

<sup>2</sup> The 'Stream Buffer', provided as part of FreeRTOS+TCP (<http://www.FreeRTOS.org/tcp>), can be used for this purpose.

创建一个周期性任务，每 200 毫秒将五个数字发送到队列。

A periodic task is created that sends five numbers to a queue every 200 milliseconds. It 只有在发送完所有五个值后，它才会生成软件中断。generates a software interrupt only after all five values have been sent. The task implementation is shown in Listing 107.

任务实现如清单 107 所示。

---

```
static void vIntegerGenerator( void *pvParameters )
{
    TickType_t xLastExecutionTime;
    uint32_t ulValueToSend = 0;
    int i;

    /* Initialize the variable used by the call to vTaskDelayUntil(). */
    xLastExecutionTime = xTaskGetTickCount();

    for( ; ; )
    {
        /* 这是一个周期性的任务。 阻塞直到再次运行。 该任务将每 200 毫秒执行一次。
         * This is a periodic task. Block until it is time to run again. The task
         * will execute every 200ms. */
        vTaskDelayUntil( &xLastExecutionTime, pdMS_TO_TICKS( 200 ) );

        /* Send five numbers to the queue, each value one higher than the previous
         * value. The numbers are read from the queue by the interrupt service routine.
         * The interrupt service routine always empties the queue, so this task is
         * guaranteed to be able to write all five values without needing to specify a
         * block time. */
        for( i = 0; i < 5; i++ )
        {
            xQueueSendToBack( xIntegerQueue, &ulValueToSend, 0 );
            ulValueToSend++;
        }

        /* Generate the interrupt so the interrupt service routine can read the
         * values from the queue. The syntax used to generate a software interrupt is
         * dependent on the FreeRTOS port being used. The syntax used below can only be
         * used with the FreeRTOS Windows port, in which such interrupts are only
         * simulated.*/
        vPrintString( "Generator task - About to generate an interrupt.\r\n" );
        vPortGenerateSimulatedInterrupt( mainINTERRUPT_NUMBER );
        vPrintString( "Generator task - Interrupt generated.\r\n\r\n\r\n\r\n" );
    }
}
```

---

#### Listing 107. The implementation of the task that writes to the queue in Example 19

中断服务程序反复调用xQueueReceiveFromISR()，直到周期性任务写入队列的所有值都被读出，队列为空。

The interrupt service routine calls xQueueReceiveFromISR() repeatedly until all the values written to the queue by the periodic task have been read out, and the queue is left empty. The 每个接收到的值的最后两位用作字符串数组的索引。last two bits of each received value are used as an index into an array of strings. A pointer to 然后使用对 xQueueSendFromISR() 的调用将指向相应索引位置处的字符串的指针发送到不同的队列。the string at the corresponding index position is then sent to a different queue using a call to xQueueSendFromISR(). The implementation of the interrupt service routine is shown in Listing 108. 中断服务例程的实现如清单 108 所示。

---

```

static uint32_t ulExampleInterruptHandler( void )
{
BaseType_t xHigherPriorityTaskWoken;
uint32_t ulReceivedNumber;
这些字符串被声明为 static const 以确保它们没有分配到中断服务程序的堆栈上，因此即使在中断服务程序没有执行时也存在。
/* The strings are declared static const to ensure they are not allocated on the
interrupt service routine's stack, and so exist even when the interrupt service
routine is not executing. */
static const char *pcStrings[] =
{
    "String 0\r\n",
    "String 1\r\n",
    "String 2\r\n",
    "String 3\r\n"
}; 与往常一样，xHigherPriorityTaskWoken 被初始化为 pdFALSE，以便能够检测到它在中断安全 API 函数中被设置为 pdTRUE。
请注意，作为中断安全的 API 函数，只能将 xHigherPriorityTaskWoken 设置为 pdTRUE，
/* As always, xHigherPriorityTaskWoken is initialized to pdFALSE to be able to
detect it getting set to pdTRUE inside an interrupt safe API function. Note that
as an interrupt safe API function can only set xHigherPriorityTaskWoken to
pdTRUE, it is safe to use the same xHigherPriorityTaskWoken variable in both
the call to xQueueReceiveFromISR() and the call to xQueueSendToBackFromISR(). */
xHigherPriorityTaskWoken = pdFALSE;
在对 xQueueReceiveFromISR() 的调用和对 xQueueSendToBackFromISR() 的调用中使用相同的 xHigherPriorityTaskWoken 变量是安全的。
/* Read from the queue until the queue is empty. */ 从队列中读取，直到队列为空。
while( xQueueReceiveFromISR( xIntegerQueue,
                            &ulReceivedNumber,
                            &xHigherPriorityTaskWoken ) != errQUEUE_EMPTY )
{ 将接收到的值截断为最后两位（包括值 0 到 3），然后使用截断的值作为 pcStrings[] 数组的索引来选择要在另一个队列上发送的字符串
(char *)Truncate the received value to the last two bits (values 0 to 3
inclusive), then use the truncated value as an index into the pcStrings[]
array to select a string (char *) to send on the other queue. */
    ulReceivedNumber &= 0x03;
    xQueueSendToBackFromISR( xStringQueue,
                            &pcStrings[ ulReceivedNumber ],
                            &xHigherPriorityTaskWoken );
}
/*
If receiving from xIntegerQueue caused a task to leave the Blocked state, and
if the priority of the task that left the Blocked state is higher than the
priority of the task in the Running state, then xHigherPriorityTaskWoken will
have been set to pdTRUE inside xQueueReceiveFromISR().

If sending to xStringQueue caused a task to leave the Blocked state, and if the
priority of the task that left the Blocked state is higher than the priority of
the task in the Running state, then xHigherPriorityTaskWoken will have been set
to pdTRUE inside xQueueSendToBackFromISR().

xHigherPriorityTaskWoken is used as the parameter to portYIELD_FROM_ISR(). If
xHigherPriorityTaskWoken equals pdTRUE then calling portYIELD_FROM_ISR() will
request a context switch. If xHigherPriorityTaskWoken is still pdFALSE then
calling portYIELD_FROM_ISR() will have no effect.

The implementation of portYIELD_FROM_ISR() used by the Windows port includes a
return statement, which is why this function does not explicitly return a
value. */
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}

```

---

**Listing 108. The implementation of the interrupt service routine used by Example 19**

从中断服务例程接收字符指针的任务在队列中阻塞，直到消息到达，并在收到每个字符串时打印出来。

The task that receives the character pointers from the interrupt service routine blocks on the queue until a message arrives, printing out each string as it is received. Its implementation is shown in Listing 109. 其实现如清单 109 所示。

---

```
static void vStringPrinter( void *pvParameters )
{
    char *pcString;

    for( ;; )
    {
        /* Block on the queue to wait for data to arrive. */
        xQueueReceive( xStringQueue, &pcString, portMAX_DELAY );

        /* Print out the string received. */
        vPrintString( pcString );
    }
}
```

---

**Listing 109. The task that prints out the strings received from the interrupt service routine in Example 19**

通常，`main()` 在启动调度程序之前创建所需的队列和任务。 其实现如清单 110 所示。

As normal, `main()` creates the required queues and tasks before starting the scheduler. Its implementation is shown in Listing 110.

---

```

int main( void )
{
    /* Before a queue can be used it must first be created. Create both queues used
       by this example. One queue can hold variables of type uint32_t, the other queue
       can hold variables of type char*. Both queues can hold a maximum of 10 items. A
       real application should check the return values to ensure the queues have been
       successfully created. */
    xIntegerQueue = xQueueCreate( 10, sizeof( uint32_t ) );
    xStringQueue = xQueueCreate( 10, sizeof( char * ) );

    /* Create the task that uses a queue to pass integers to the interrupt service
       routine. The task is created at priority 1. */
    xTaskCreate( vIntegerGenerator, "IntGen", 1000, NULL, 1, NULL );

    /* Create the task that prints out the strings sent to it from the interrupt
       service routine. This task is created at the higher priority of 2. */
    xTaskCreate( vStringPrinter, "String", 1000, NULL, 2, NULL );

    /* Install the handler for the software interrupt. The syntax necessary to do
       this is dependent on the FreeRTOS port being used. The syntax shown here can
       only be used with the FreeRTOS Windows port, where such interrupts are only
       simulated. */
    vPortSetInterruptHandler( mainINTERRUPT_NUMBER, ulExampleInterruptHandler );

    /* Start the scheduler so the created tasks start executing. */
    vTaskStartScheduler();


    /* If all is well then main() will never reach here as the scheduler will now be
       running the tasks. If main() does reach here then it is likely that there was
       insufficient heap memory available for the idle task to be created. Chapter 2
       provides more information on heap memory management. */
    for( ; ; );
}

```

---

**Listing 110. The main() function for Example 19**

The output produced when Example 19 is executed is shown in Figure 59. As can be seen, the interrupt receives all five integers, and produces five strings in response. More explanation is given in Figure 60.

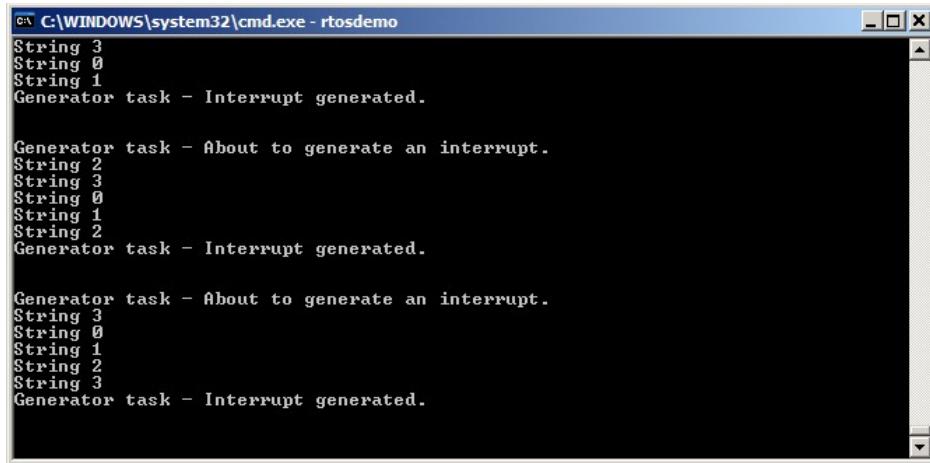

**Figure 59. The output produced when Example 19 is executed**

中断服务程序既从队列读取数据又向队列写入数据，对于从另一个队列接收到的每个整数，都将字符串写入一个队列。将字符串写入队列会解除对 StringPrinter 任务的阻塞。

3 - The interrupt service routine both reads from a queue and writes to a queue, writing a string to one queue for every integer received from another. Writing strings to a queue unblocks the StringPrinter task.

2 - The IntegerGenerator writes 5 values to a queue, then forces an interrupt.

IntegerGenerator 将 5 个值写入队列，然后强制中断

4 - The StringPrinter task is the highest priority task so runs immediately after the interrupt service routine. It prints out each string it receives on a queue - when the queue is empty it enters the Blocked state, allowing the lower priority IntegerGenerator task to run again.

StringPrinter 任务是最高优先级的任务，因此在中断服务程序之后立即运行。它打印出它在队列中接收到的每个字符串——当队列为空时，它进入阻塞状态，允许较低优先级的 IntegerGenerator 任务再次运行。

Interrupt

StringPrinter

IntegerGenerator

Idle

1 - The Idle task runs most of the time. Every 200ms it gets preempted by the IntegerGenerator task.

5 - The IntegerGenerator task is a periodic task so blocks to wait for the next time period - once again the idle task is the only task able to run. 200ms after it last started to execute the whole sequence repeats.

Time

空闲任务大部分时间都在运行。每 200 毫秒它就会被 IntegerGenerator 任务抢占。

Figure 60. The sequence of execution produced by Example 19

## 6.8 Interrupt Nesting 中断嵌套

在任务优先级和中断优先级之间出现混淆是很常见的。

It is common for confusion to arise between task priorities and interrupt priorities. This section 本节讨论中断优先级，即中断服务例程（ISR）相对于彼此执行的优先级。

discusses interrupt priorities, which are the priorities at which interrupt service routines (ISRs) 分配给任务的优先级与分配给中断的优先级没有任何关系。

execute relative to each other. The priority assigned to a task is in no way related to the 硬件决定何时执行 ISR，而软件决定何时执行任务。

priority assigned to an interrupt. Hardware decides when an ISR will execute, whereas 响应硬件中断而执行的 ISR 将中断任务，但任务不能抢占 ISR。

software decides when a task will execute. An ISR executed in response to a hardware interrupt will interrupt a task, but a task cannot pre-empt an ISR.

支持中断嵌套的端口需要在 FreeRTOSConfig.h 中定义表 39 中详述的一个或两个常量。

Ports that support interrupt nesting require one or both of the constants detailed in Table 39 to configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 和 configMAX\_API\_CALL\_INTERRUPT\_PRIORITY 都定义了相同的属性。 be defined in FreeRTOSConfig.h. configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 和

configMAX\_API\_CALL\_INTERRUPT\_PRIORITY both define the same property. Older 较旧的 FreeRTOS 端口使用 configMAX\_SYSCALL\_INTERRUPT\_PRIORITY，而较新的 FreeRTOS 端口使用 configMAX\_API\_CALL\_INTERRUPT\_PRIORITY。FreeRTOS ports use configMAX\_SYSCALL\_INTERRUPT\_PRIORITY, and newer FreeRTOS port use configMAX\_API\_CALL\_INTERRUPT\_PRIORITY.

Table 39. Constants that control interrupt nesting

Constant	Description
configMAX_SYSCALL_INTERRUPT_PRIORITY or configMAX_API_CALL_INTERRUPT_PRIORITY	设置可以调用中断安全 FreeRTOS API 函数的最高中断优先级。 Sets the highest interrupt priority from which interrupt-safe FreeRTOS API functions can be called.
configKERNEL_INTERRUPT_PRIORITY	设置滴答中断使用的中断优先级，并且必须始终设置为可能的最低中断优先级。 Sets the interrupt priority used by the tick interrupt, and must always be set to the lowest possible interrupt priority.  如果正在使用的 FreeRTOS 端口不使用 configMAX_SYSCALL_INTERRUPT_PRIORITY 常量，那么任何使用中断安全 FreeRTOS API 函数的中断也必须以 configKERNEL_INTERRUPT_PRIORITY 定义的优先级执行。 If the FreeRTOS port in use does not also use the configMAX_SYSCALL_INTERRUPT_PRIORITY constant, then any interrupt that uses interrupt-safe FreeRTOS API functions must also execute at the priority defined by configKERNEL_INTERRUPT_PRIORITY.

每个中断源都有一个数字优先级和一个逻辑优先级：

Each interrupt source has a numeric priority, and a logical priority:

- Numeric priority 数字优先级

数字优先级只是分配给中断优先级的数字。例如，如果一个中断被分配一个优先级 7，那么它的数字优先级就是 7。

The numeric priority is simply the number assigned to the interrupt priority. For example, if

同样，如果为中断分配了 200 的优先级，则其数字优先级为 200。

an interrupt is assigned a priority of 7, then its numeric priority is 7. Likewise, if an interrupt is assigned a priority of 200, then its numeric priority is 200.

- Logical priority 逻辑优先级

中断的逻辑优先级描述了该中断相对于其他中断的优先级。

An interrupt's logical priority describes that interrupt's precedence over other interrupts.

如果两个不同优先级的中断同时发生，那么处理器将先执行两个中断中逻辑优先级较高的中断，然后再执行两个中断中逻辑优先级较低的中断。

If two interrupts of differing priority occur at the same time, then the processor will execute the ISR for whichever of the two interrupts has the higher logical priority before it executes the ISR for whichever of the two interrupts has the lower logical priority.

中断可以中断（嵌套）任何具有较低逻辑优先级的中断，但中断不能中断（嵌套）任何具有相同或更高逻辑优先级的中断。

An interrupt can interrupt (nest with) any interrupt that has a lower logical priority, but an interrupt cannot interrupt (nest with) any interrupt that has an equal or higher logical priority.

中断的数字优先级和逻辑优先级之间的关系取决于处理器架构；

The relationship between an interrupt's numeric priority and logical priority is dependent on the processor architecture; on some processors, the higher the numeric priority assigned to an interrupt the *higher* that interrupt's logical priority will be, while on other processor architectures the higher the numeric priority assigned to an interrupt the *lower* that interrupt's logical priority will be.

通过将 configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 设置为比 configKERNEL\_INTERRUPT\_PRIORITY 更高的逻辑中断优先级来创建完整的中断嵌套模型。

A full interrupt nesting model is created by setting configMAX\_SYSCALL\_INTERRUPT\_PRIORITY to a higher logical interrupt priority than configKERNEL\_INTERRUPT\_PRIORITY. This is demonstrated in Figure 61, which shows a scenario where: 图 61 对此进行了演示，该图显示了以下场景：

处理器有七个独特的中断优先级。

- The processor has seven unique interrupt priorities.

分配了数字优先级 7 的中断比分配了数字优先级 1 的中断具有更高的逻辑优先级。

- Interrupts assigned a numeric priority of 7 have a higher logical priority than interrupts assigned a numeric priority of 1.

configKERNEL\_INTERRUPT\_PRIORITY 设置为一。

- configKERNEL\_INTERRUPT\_PRIORITY is set to one.

configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 设置为三。

- configMAX\_SYSCALL\_INTERRUPT\_PRIORITY is set to three.

```
configMAX_SYSCALL_INTERRUPT_PRIORITY = 3
configKERNEL_INTERRUPT_PRIORITY = 1
```

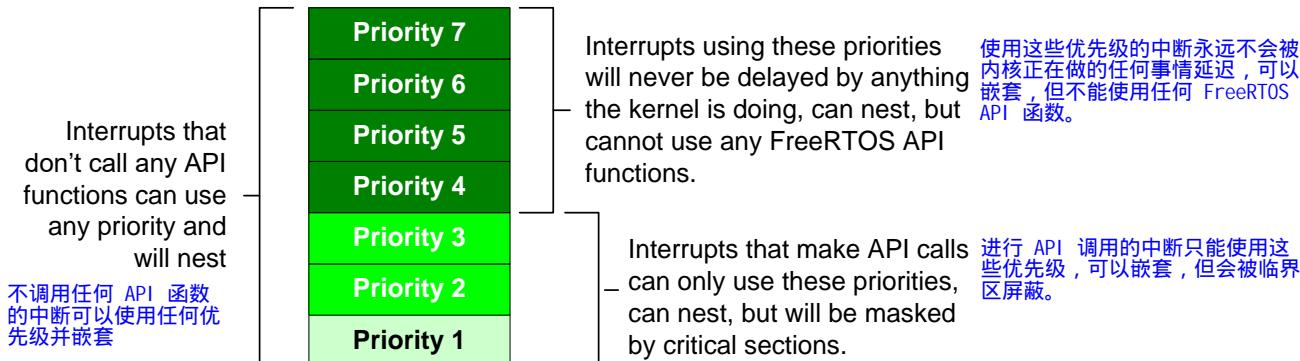


Figure 61. Constants affecting interrupt nesting behavior

Referring to Figure 61:

- 当内核或应用程序位于临界区中时，会阻止使用优先级 1 到 3（包括优先级）的中断执行。
  - Interrupts that use priorities 1 to 3, inclusive, are prevented from executing while the kernel or the application is inside a critical section. ISRs running at these priorities can use interrupt-safe FreeRTOS API functions. Critical sections are described in Chapter 7. 关键部分在第 7 章中描述。

- 使用优先级 4 或更高优先级的中断不受临界区的影响，因此调度程序不会阻止这些中断立即执行——在硬件本身的限制范围内。
- Interrupts that use priority 4, or above, are not affected by critical sections, so nothing the scheduler does will prevent these interrupts from executing immediately—within the limitations of the hardware itself. ISRs executing at these priorities cannot use any FreeRTOS API functions. 以这些优先级执行的 ISR 不能使用任何 FreeRTOS API 函数。
    - 通常，需要非常严格的时序精度的功能（例如电机控制）会使用高于 configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 的优先级来确保调度程序不会将抖动引入中断响应时间。
  - Typically, functionality that requires very strict timing accuracy (motor control, for example) would use a priority above configMAX\_SYSCALL\_INTERRUPT\_PRIORITY to ensure the scheduler does not introduce jitter into the interrupt response time.

### A Note to ARM Cortex-M<sup>1</sup> and ARM GIC Users ARM Cortex-M1 和 ARM GIC 用户须知

Cortex-M 处理器上的中断配置令人困惑，并且容易出错。

Interrupt configuration on Cortex-M processors is confusing, and prone to error. To assist your development, the FreeRTOS Cortex-M ports automatically check the interrupt configuration, but only if configASSERT() is defined. configASSERT() is described in section 11.2. configASSERT() 在第 11.2 节中描述。

<sup>1</sup> This section only partially applies to Cortex-M0 and Cortex-M0+ cores.

ARM Cortex 内核和 ARM 通用中断控制器 (GIC) 使用数字低优先级数字来表示逻辑高优先级中断。

The ARM Cortex cores, and ARM Generic Interrupt Controllers (GICs), use numerically *low* priority numbers to represent logically *high* priority interrupts. This can seem counter-intuitive, and is easy to forget. If you wish to assign an interrupt a logically low priority, then it must be assigned a numerically high value. If you wish to assign an interrupt a logically high priority, then it must be assigned a numerically low value.

Cortex-M 中断控制器允许使用最多 8 位来指定每个中断优先级，使 255 成为可能的最低优先级。

The Cortex-M interrupt controller allows a maximum of eight bits to be used to specify each interrupt priority, making 255 the lowest possible priority. Zero is the highest priority. 然而，Cortex-M 微控制器通常只实现八个可能位的子集。实际实现的位数取决于微控制器系列。

However, Cortex-M microcontrollers normally only implement a subset of the eight possible bits. The number of bits actually implemented is dependent on the microcontroller family.

如果仅实现了 8 个可能位中的一个子集，则只有字节的最高有效位可以使用 - 最低有效位未实现。

When only a subset of the eight possible bits has been implemented, it is only the most significant bits of the byte that can be used—leaving the least significant bits unimplemented. 未实现的位可以取任何值，但将它们设置为 1 是正常的。

Unimplemented bits can take any value, but it is normal to set them to 1. This is demonstrated by Figure 62, which shows how a priority of binary 101 is stored in a Cortex-M microcontroller that implements four priority bits.

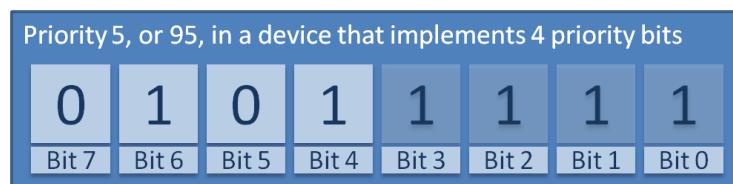


Figure 62 How a priority of binary 101 is stored by a Cortex-M microcontroller that implements four priority bits

在图 62 中，二进制值 101 已移入最高有效四位，因为未实现最低有效四位。未实现的位已设置为 1。

In Figure 62 the binary value 101 has been shifted into the most significant four bits because the least significant four bits are not implemented. The unimplemented bits have been set to 1.

一些库函数期望在它们被上移到实现的（最高有效）位之后指定优先级值。

Some library functions expect priority values to be specified after they have been shifted up 使用此类功能时，可以将图 62 中所示的优先级指定为十进制 95。

into the implemented (most significant) bits. When using such a function the priority shown in 十进制 95 是二进制 101 向上移动 4 以形成二进制 101nnnn (其中“n”是未实现的位)，并且未实现的位设置为 1 以形成二进制 1011111。Figure 62 can be specified as decimal 95. Decimal 95 is binary 101 shifted up by four to make binary 101nnnn (where ‘n’ is an unimplemented bit), and with the unimplemented bits set to 1 to make binary 1011111.

一些库函数期望在它们被上移到实现的（最高有效）位之前指定优先级值。

Some library functions expect priority values to be specified before they have been shifted up 使用此类函数时，必须将图 62 中所示的优先级指定为十进制 5。十进制 5 是二进制 101，没有任何移位。

into the implemented (most significant) bits. When using such a function the priority shown in Figure 62 must be specified as decimal 5. Decimal 5 is binary 101 without any shift.

`configMAX_SYSCALL_INTERRUPT_PRIORITY` 和 `configKERNEL_INTERRUPT_PRIORITY` 必须以允许它们直接写入 Cortex-M 寄存器的方式指定，因此在优先级值被上移到实现的位之后。

`configMAX_SYSCALL_INTERRUPT_PRIORITY` and `configKERNEL_INTERRUPT_PRIORITY` must be specified in a way that allows them to be written directly to the Cortex-M registers, so after the priority values have been shifted up into the implemented bits.

`configKERNEL_INTERRUPT_PRIORITY` 必须始终设置为可能的最低中断优先级。

`configKERNEL_INTERRUPT_PRIORITY` must always be set to the lowest possible interrupt 未实现的优先级位可以设置为 1，因此无论实际实现了多少优先级位，该常数始终可以设置为 255。priority. Unimplemented priority bits can be set to 1, so the constant can always be set to 255, no matter how many priority bits are actually implemented.

Cortex-M 中断将默认为零优先级——可能的最高优先级。

Cortex-M interrupts will default to a priority of zero—the highest possible priority. The Cortex-M 硬件的实现不允许将 `configMAX_SYSCALL_INTERRUPT_PRIORITY` 设置为 0，因此，使用 FreeRTOS API 的中断的优先级绝不能保留为默认值。implementation of the Cortex-M hardware does not permit `configMAX_SYSCALL_INTERRUPT_PRIORITY` to be set to 0, so the priority of an interrupt that uses the FreeRTOS API must never be left at its default value.

# Chapter 7

## Resource Management 资源管理

---

## 7.1 Chapter Introduction and Scope

---

在多任务系统中，如果一个任务开始访问资源，但在退出运行状态之前未完成其访问，则可能会出错。

In a multitasking system there is potential for error if one task starts to access a resource, but does not complete its access before being transitioned out of the Running state. If the task leaves the resource in an inconsistent state, then access to the same resource by any other task or interrupt could result in data corruption, or other similar issue.

Following are some examples: 以下是一些示例：

### 1. Accessing Peripherals 访问外设

考虑以下场景，其中两个任务尝试写入液晶显示器 (LCD)。

Consider the following scenario where two tasks attempt to write to an Liquid Crystal Display (LCD).

任务 A 执行并开始将字符串“Hello world”写入 LCD。

1. Task A executes and starts to write the string “Hello world” to the LCD.

在输出字符串的开头“Hello w”之后，任务 A 被任务 B 抢占。

2. Task A is pre-empted by Task B after outputting just the beginning of the string—“Hello w”.

任务 B 写入“中止、重试、失败？”在进入阻塞状态之前到 LCD。

3. Task B writes “Abort, Retry, Fail?” to the LCD before entering the Blocked state.

任务 A 从它被抢占的点继续，并完成输出其字符串的剩余字符——“orld”。

4. Task A continues from the point at which it was pre-empted, and completes outputting the remaining characters of its string—“orld”.

LCD 现在显示损坏的字符串“Hello wAbort, Retry, Fail?orld”。

The LCD now displays the corrupted string “Hello wAbort, Retry, Fail?orld”.

### 2. Read, Modify, Write Operations 读取、修改、写入操作

清单 111 显示了一行 C 代码，以及 C 代码通常如何翻译成汇编代码的示例。

Listing 111 shows a line of C code, and an example of how the C code would typically be translated into assembly code. It can be seen that the value of PORTA is first read from memory into a register, modified within the register, and then written back to memory. This

称为读、修改、写操作。  
is called a read, modify, write operation.

---

```
/* The C code being compiled. */
PORTA |= 0x01;

/* The assembly code produced when the C code is compiled. */
LOAD  R1,[#PORTA] ; Read a value from PORTA into R1
MOVE  R2,#0x01      ; Move the absolute constant 1 into R2
OR    R1,R2          ; Bitwise OR R1 (PORTA) with R2 (constant 1)
STORE R1,[#PORTA]   ; Store the new value back to PORTA
```

---

Listing 111. An example read, modify, write sequence

这是一个“非原子”操作，因为它需要多条指令才能完成，并且可以被中断。

This is a ‘non-atomic’ operation because it takes more than one instruction to complete, and  
考慮以下场景，其中两个任务尝试更新名为 PORTA 的内存映射寄存器。  
can be interrupted. Consider the following scenario where two tasks attempt to update a  
memory mapped register called PORTA.

任务 A 将 PORTA 的值加载到寄存器中——操作的读取部分。

1. Task A loads the value of PORTA into a register—the read portion of the operation.

任务 A 在完成同一操作的修改和写入部分之前被任务 B 抢占。

2. Task A is pre-empted by Task B before it completes the modify and write portions of  
the same operation.

任务 B 更新 PORTA 的值，然后进入 Blocked 状态。

3. Task B updates the value of PORTA, then enters the Blocked state.

任务 A 从它被抢占的点继续。在将更新后的值写回 PORTA 之前，它会修改已保存在寄存器中的 PORTA 值的副本。

4. Task A continues from the point at which it was pre-empted. It modifies the copy of  
the PORTA value that it already holds in a register, before writing the updated value  
back to PORTA.

在这种情况下，任务 A 更新并写回 PORTA 的过期值。

In this scenario, Task A updates and writes back an out of date value for PORTA. Task B  
任务 B 在任务 A 获得 PORTA 值的副本之后，在任务 A 将其修改后的值写回 PORTA 寄存器之前修改 PORTA。  
modifies PORTA after Task A takes a copy of the PORTA value, and before Task A writes  
当任务 A 写入 PORTA 时，它会覆盖任务 B 已经执行的修改，从而有效地破坏了 PORTA 寄存器的值。  
its modified value back to the PORTA register. When Task A writes to PORTA, it  
overwrites the modification that has already been performed by Task B, effectively  
corrupting the PORTA register value.

此示例使用外设寄存器，但在对变量执行读取、修改、写入操作时也适用相同的原则。

This example uses a peripheral register, but the same principle applies when performing  
read, modify, write operations on variables.

### 3. Non-atomic Access to Variables 对变量的非原子访问

更新结构的多个成员，或更新大于体系结构自然字长的变量（例如，更新 16 位机器上的 32 位变量）都是非原子操作的示例。  
Updating multiple members of a structure, or updating a variable that is larger than the  
natural word size of the architecture (for example, updating a 32-bit variable on a 16-bit  
如果它们被中断，它们可能会导致数据丢失或损坏。  
machine), are examples of non-atomic operations. If they are interrupted, they can result in  
data loss or corruption.

### 4. Function Reentrancy 函数重入

如果从多个任务或从任务和中断都调用函数是安全的，则函数是“可重入的”。

A function is ‘reentrant’ if it is safe to call the function from more than one task, or from both  
可重入函数被认为是“线程安全的”，因为它们可以从多个执行线程访问，而不会有数据或逻辑操作被破坏的风险。  
tasks and interrupts. Reentrant functions are said to be ‘thread safe’ because they can be  
accessed from more than one thread of execution without the risk of data or logical  
operations becoming corrupted.

每个任务都维护自己的堆栈和自己的一组处理器（硬件）寄存器值。

Each task maintains its own stack and its own set of processor (hardware) register values.

If a function does not access any data other than data stored on the stack or held in a  
如果函数不访问存储在堆栈中或保存在 a237 寄存器中的数据以外的任何数据，则该函数是可重入的，并且是线程安全的。

register, then the function is reentrant, and thread safe. Listing 112 is an example of a reentrant function. Listing 113 is an example of a function that is not reentrant.

清单 112 是一个可重入函数的示例。 清单 113 是一个不可重入函数的示例。

---

```
/* A parameter is passed into the function. This will either be passed on the stack,
or in a processor register. Either way is safe as each task or interrupt that calls
the function maintains its own stack and its own set of register values, so each task
or interrupt that calls the function will have its own copy of lVar1. */
long lAddOneHundred( long lVar1 )
{
    /* This function scope variable will also be allocated to the stack or a register,
    depending on the compiler and optimization level. Each task or interrupt that calls
    this function will have its own copy of lVar2. */
    long lVar2;

    lVar2 = lVar1 + 100;
    return lVar2;
}
```

---

Listing 112. An example of a reentrant function

```
/* In this case lVar1 is a global variable, so every task that calls
lNonsenseFunction will access the same single copy of the variable. */
long lVar1;

long lNonsenseFunction( void )
{
    /* lState is static, so is not allocated on the stack. Each task that calls this
    function will access the same single copy of the variable. */
    static long lState = 0;
    long lReturn;

    switch( lState )
    {
        case 0 : lReturn = lVar1 + 10;
                   lState = 1;
                   break;

        case 1 : lReturn = lVar1 + 20;
                   lState = 0;
                   break;
    }
}
```

---

Listing 113. An example of a function that is not reentrant

### Mutual Exclusion 互斥锁

为了确保始终保持数据一致性，对任务之间或任务和中断之间共享的资源的访问必须使用“互斥”技术进行管理。

To ensure data consistency is maintained at all times access to a resource that is shared between tasks, or between tasks and interrupts, must be managed using a ‘mutual exclusion’  
目标是确保一旦任务开始访问不可重入且非线程安全的共享资源，同一任务对资源具有独占访问权，直到资源返回到一致状态。  
technique. The goal is to ensure that, once a task starts to access a shared resource that is not re-entrant and not thread-safe, the same task has exclusive access to the resource until the resource has been returned to a consistent state.

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

FreeRTOS 提供了几个可用于实现互斥的功能，

FreeRTOS provides several features that can be used to implement mutual exclusion, but the best mutual exclusion method is to (whenever possible, as it is often not practical) design the application in such a way that resources are not shared, and each resource is accessed only from a single task.

## Scope

本章旨在让读者更好地理解：

This chapter aims to give readers a good understanding of:

何时以及为何需要资源管理和控制。

- When and why resource management and control is necessary.

什么是临界区。

- What a critical section is.

互斥是什么意思。

- What mutual exclusion means.

暂停调度程序意味着什么。

- What it means to suspend the scheduler.

如何使用互斥锁。

- How to use a mutex.

如何创建和使用网守任务。

- How to create and use a gatekeeper task.

什么是优先级反转，以及优先级继承如何减少（但不能消除）其影响。

- What priority inversion is, and how priority inheritance can reduce (but not remove) its impact.

## 7.2 Critical Sections and Suspending the Scheduler

---

### Basic Critical Sections 基本临界区

基本临界区是分别被宏 `taskENTER_CRITICAL()` 和 `taskEXIT_CRITICAL()` 调用包围的代码区域。

Basic critical sections are regions of code that are surrounded by calls to the macros `taskENTER_CRITICAL()` and `taskEXIT_CRITICAL()`, respectively. Critical sections are also 临界区也称为临界区。 known as critical regions.

`taskENTER_CRITICAL()` 和 `taskEXIT_CRITICAL()` 不带任何参数，或返回 value。 清单 114 演示了它们的使用。

`taskENTER_CRITICAL()` and `taskEXIT_CRITICAL()` do not take any parameters, or return a value<sup>1</sup>. Their use is demonstrated in Listing 114.

---

```
/* Ensure access to the PORTA register cannot be interrupted by placing it within a
critical section. Enter the critical section. */
taskENTER_CRITICAL();

/* A switch to another task cannot occur between the call to taskENTER_CRITICAL() and
the call to taskEXIT_CRITICAL(). Interrupts may still execute on FreeRTOS ports that
allow interrupt nesting, but only interrupts whose logical priority is above the
value assigned to the configMAX_SYSCALL_INTERRUPT_PRIORITY constant - and those
interrupts are not permitted to call FreeRTOS API functions. */
PORTA |= 0x01;

/* Access to PORTA has finished, so it is safe to exit the critical section. */
taskEXIT_CRITICAL();
```

---

**Listing 114. Using a critical section to guard access to a register**

本书附带的示例项目使用名为 `vPrintString()` 的函数将字符串写入标准输出，即使用 FreeRTOS Windows 端口时的终端窗口。

The example projects that accompany this book use a function called `vPrintString()` to write strings to standard out—which is the terminal window when the FreeRTOS Windows port is used. `vPrintString()` is called from many different tasks; so, in theory, its implementation could `vPrintString()` 从许多不同的任务中调用；因此，理论上，它的实现可以使用临界区保护对标准输出的访问，如清单 115 所示。 protect access to standard out using a critical section, as shown in Listing 115.

---

<sup>1</sup> A function like macro does not really ‘return a value’ in the same way that a real function does. This book applies the term ‘return a value’ to macros when it is simplest to think of the macro as if it were a function.

```
void vPrintString( const char *pcString )
{
    /* Write the string to stdout, using a critical section as a crude method of
    mutual exclusion. */
    taskENTER_CRITICAL();
    {
        printf( "%s", pcString );
        fflush( stdout );
    }
    taskEXIT_CRITICAL();
}
```

**Listing 115. A possible implementation of vPrintString()**

以这种方式实现的关键部分是提供互斥的一种非常粗略的方法。

Critical sections implemented in this way are a very crude method of providing mutual

它们的工作方式是完全禁用中断，或者禁用中断优先级（由 configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 设置），具体取决于所使用的 FreeRTOS 端口。  
exclusion. They work by disabling interrupts, either completely, or up to the interrupt priority

set by configMAX\_SYSCALL\_INTERRUPT\_PRIORITY—depending on the FreeRTOS port

抢先式上下文切换只能在中断中发生，因此，只要中断保持禁用状态，调用 taskENTER\_CRITICAL() 的任务就可以保证保持在运行状态，直到退出临界区。  
being used. Pre-emptive context switches can occur only from within an interrupt, so, as long

as interrupts remain disabled, the task that called taskENTER\_CRITICAL() is guaranteed to  
remain in the Running state until the critical section is exited.

基本临界区必须保持非常短，否则它们会对中断响应时间产生不利影响。

Basic critical sections must be kept very short, otherwise they will adversely affect interrupt  
对 taskENTER\_CRITICAL() 的每次调用都必须与对 taskEXIT\_CRITICAL() 的调用紧密配对。

response times. Every call to taskENTER\_CRITICAL() must be closely paired with a call to  
taskEXIT\_CRITICAL(). For this reason, standard out (stdout, or the stream where a computer  
出于这个原因，标准输出 (stdout，或计算机写入其输出数据的流) 不应使用临界区（如清单 115 所示）进行保护，  
writes its output data) should not be protected using a critical section (as shown in Listing  
因为写入终端可能是一个相对较长的操作。本章中的示例探讨了替代解决方案。

115), because writing to the terminal can be a relatively long operation. The examples in this  
chapter explore alternative solutions.

关键部分嵌套是安全的，因为内核会计算嵌套深度。

It is safe for critical sections to become nested, because the kernel keeps a count of the  
只有当嵌套深度归零时，临界区才会退出——即对于之前对 taskENTER\_CRITICAL() 的每个调用都执行了一次 taskEXIT\_CRITICAL() 调用。  
nesting depth. The critical section will be exited only when the nesting depth returns to zero—  
which is when one call to taskEXIT\_CRITICAL() has been executed for every preceding call to  
taskENTER\_CRITICAL().

调用 taskENTER\_CRITICAL() 和 taskEXIT\_CRITICAL() 是任务更改运行 FreeRTOS 的处理器的中断启用状态的唯一合法方法。

Calling taskENTER\_CRITICAL() and taskEXIT\_CRITICAL() is the only legitimate way for a  
task to alter the interrupt enable state of the processor on which FreeRTOS is running.  
通过任何其他方式更改中断使能状态将使宏的嵌套计数无效。  
Altering the interrupt enable state by any other means will invalidate the macro's nesting  
count.

taskENTER\_CRITICAL() 和 taskEXIT\_CRITICAL() 不会以“FromISR”结尾，因此不得从中断服务例程中调用。

taskENTER\_CRITICAL() and taskEXIT\_CRITICAL() do not end in 'FromISR', so must not be  
called from an interrupt service routine. taskENTER\_CRITICAL\_FROM\_ISR() is an interrupt  
taskENTER\_CRITICAL\_FROM\_ISR() 是 taskENTER\_CRITICAL() 的中断安全版本，taskEXIT\_CRITICAL\_FROM\_ISR() 是 taskEXIT\_CRITICAL() 的中断安全版本。  
safe version of taskENTER\_CRITICAL(), and taskEXIT\_CRITICAL\_FROM\_ISR() is an  
interrupt safe version of taskEXIT\_CRITICAL(). The interrupt safe versions are only provided

中断安全版本仅针对允许中断嵌套的 FreeRTOS 端口提供——它们在不允许中断嵌套的端口中已过时。  
for FreeRTOS ports that allow interrupts to nest—they would be obsolete in ports that do not  
allow interrupts to nest.

taskENTER\_CRITICAL\_FROM\_ISR() 返回一个值，该值必须传递到对 taskEXIT\_CRITICAL\_FROM\_ISR() 的匹配调用中。  
taskENTER\_CRITICAL\_FROM\_ISR() returns a value that must be passed into the matching  
call to taskEXIT\_CRITICAL\_FROM\_ISR(). This is demonstrated in Listing 116.

---

```
void vAnInterruptServiceRoutine( void )
{
    /* Declare a variable in which the return value from taskENTER_CRITICAL_FROM_ISR()
     * will be saved. */
    UBaseType_t uxSavedInterruptStatus;

    /* This part of the ISR can be interrupted by any higher priority interrupt. */

    /* Use taskENTER_CRITICAL_FROM_ISR() to protect a region of this ISR. Save the
     * value returned from taskENTER_CRITICAL_FROM_ISR() so it can be passed into the
     * matching call to taskEXIT_CRITICAL_FROM_ISR(). */
    uxSavedInterruptStatus = taskENTER_CRITICAL_FROM_ISR();

    /* This part of the ISR is between the call to taskENTER_CRITICAL_FROM_ISR() and
     * taskEXIT_CRITICAL_FROM_ISR(), so can only be interrupted by interrupts that have
     * a priority above that set by the configMAX_SYSCALL_INTERRUPT_PRIORITY constant. */

    /* Exit the critical section again by calling taskEXIT_CRITICAL_FROM_ISR(),
     * passing in the value returned by the matching call to
     * taskENTER_CRITICAL_FROM_ISR(). */
    taskEXIT_CRITICAL_FROM_ISR( uxSavedInterruptStatus );

    /* This part of the ISR can be interrupted by any higher priority interrupt. */
}
```

---

**Listing 116. Using a critical section in an interrupt service routine**

使用更多的处理时间来执行进入并随后退出临界区的代码，而不是执行实际受临界区保护的代码。  
It is wasteful to use more processing time executing the code that enters and then  
subsequently exits a critical section, than executing the code actually being protected by the  
基本临界区的进入速度非常快，退出速度非常快，并且始终具有确定性，因此当受保护的代码区域非常短时，它们非常适合使用。  
critical section. Basic critical sections are very fast to enter, very fast to exit, and always  
deterministic, making their use ideal when the region of code being protected is very short.

#### 挂起（或锁定）调度程序

#### Suspending (or Locking) the Scheduler

也可以通过暂停调度程序来创建关键部分。暂停调度程序有时也称为“锁定”调度程序。  
Critical sections can also be created by suspending the scheduler. Suspending the scheduler  
is sometimes also known as ‘locking’ the scheduler.

基本临界区保护代码区域不被其他任务和中断访问。

Basic critical sections protect a region of code from access by other tasks and by interrupts. A  
通过挂起调度程序实现的临界区仅保护代码区域不被其他任务访问，因为中断仍然启用。  
critical section implemented by suspending the scheduler only protects a region of code from  
access by other tasks, because interrupts remain enabled.

临界区太长而无法通过简单地禁用中断来实现，相反，可以通过暂停调度程序来实现。

A critical section that is too long to be implemented by simply disabling interrupts can, instead, be implemented by suspending the scheduler. However, interrupt activity while the scheduler is suspended can make resuming (or ‘un-suspending’) the scheduler a relatively long operation, so consideration must be given to which is the best method to use in each case.

## The vTaskSuspendAll() API Function

---

```
void vTaskSuspendAll( void );
```

---

**Listing 117. The vTaskSuspendAll() API function prototype**

调度程序通过调用 vTaskSuspendAll() 被挂起。暂停调度程序可防止发生上下文切换，但会启用中断。

The scheduler is suspended by calling vTaskSuspendAll(). Suspending the scheduler prevents a context switch from occurring, but leaves interrupts enabled. If an interrupt requests a context switch while the scheduler is suspended, then the request is held pending, and is performed only when the scheduler is resumed (un-suspended).

调度程序挂起时不得调用 FreeRTOS API 函数

FreeRTOS API functions must not be called while the scheduler is suspended.

## The xTaskResumeAll() API Function

---

```
BaseType_t xTaskResumeAll( void );
```

---

**Listing 118. The xTaskResumeAll() API function prototype**

通过调用 xTaskResumeAll() 来恢复（取消暂停）调度程序。

The scheduler is resumed (un-suspended) by calling xTaskResumeAll().

**Table 40. xTaskResumeAll() return value**

Returned Value	Description
Returned value	调度程序挂起时请求的上下文切换保持挂起状态，仅在调度程序恢复时执行。 Context switches that are requested while the scheduler is suspended are held pending and performed only as the scheduler is being resumed. 如果在 xTaskResumeAll() 返回之前执行了挂起的上下文切换，则返回 pdTRUE。否则返回 pdFALSE。 If a pending context switch is performed before xTaskResumeAll() returns then pdTRUE is returned. Otherwise pdFALSE is returned.

对 vTaskSuspendAll() 和 xTaskResumeAll() 的调用嵌套是安全的，因为内核会计算嵌套深度。

It is safe for calls to vTaskSuspendAll() and xTaskResumeAll() to become nested, because the kernel keeps a count of the nesting depth. The scheduler will be resumed only when the nesting depth returns to zero—which is when one call to xTaskResumeAll() has been executed for every preceding call to vTaskSuspendAll().

清单 119 显示了 vPrintString() 的实际实现，它暂停调度程序以保护对终端输出的访问

Listing 119 shows the actual implementation of vPrintString(), which suspends the scheduler to protect access to the terminal output.

---

```
void vPrintString( const char *pcString )
{
    /* Write the string to stdout, suspending the scheduler as a method of mutual
     * exclusion. */
    vTaskSuspendScheduler();
    {
        printf( "%s", pcString );
        fflush( stdout );
    }
    xTaskResumeScheduler();
}
```

---

Listing 119. The implementation of vPrintString()

## 7.3 Mutexes (and Binary Semaphores)

---

Mutex 是一种特殊类型的二进制信号量，用于控制对两个或多个任务之间共享的资源的访问。

A Mutex is a special type of binary semaphore that is used to control access to a resource that MUTEX 一词源于“互斥”。configUSE\_MUTEXES 必须在 FreeRTOSConfig.h 中设置为 1 才能使用互斥锁。is shared between two or more tasks. The word MUTEX originates from ‘MUTual EXclusion’.

configUSE\_MUTEXES 必须被设置为 1 在 FreeRTOSConfig.h 中以使 mutexes 可用。

在互斥场景中使用互斥锁时，可以将互斥锁视为与共享资源相关的令牌。

When used in a mutual exclusion scenario, the mutex can be thought of as a token that is associated with the resource being shared. For a task to access the resource legitimately, it must first successfully ‘take’ the token (be the token holder). When the token holder has finished with the resource, it must ‘give’ the token back. Only when the token has been returned can another task successfully take the token, and then safely access the same shared resource. A task is not permitted to access the shared resource unless it holds the token. This mechanism is shown in Figure 63.

尽管互斥锁和二进制信号量共享许多特性，但图 63 所示的场景（其中互斥锁用于互斥）与图 53 所示的场景（其中二进制信号量用于同步）完全不同。

Even though mutexes and binary semaphores share many characteristics, the scenario shown in Figure 63 (where a mutex is used for mutual exclusion) is completely different to that shown in Figure 53 (where a binary semaphore is used for synchronization). The primary difference is what happens to the semaphore after it has been obtained:

主要区别在于信号量在获得后会发生什么：

必须始终返回用于互斥的信号量。

- A semaphore that is used for mutual exclusion must always be returned.  
用于同步的信号量通常被丢弃并且不返回。
- A semaphore that is used for synchronization is normally discarded and not returned.

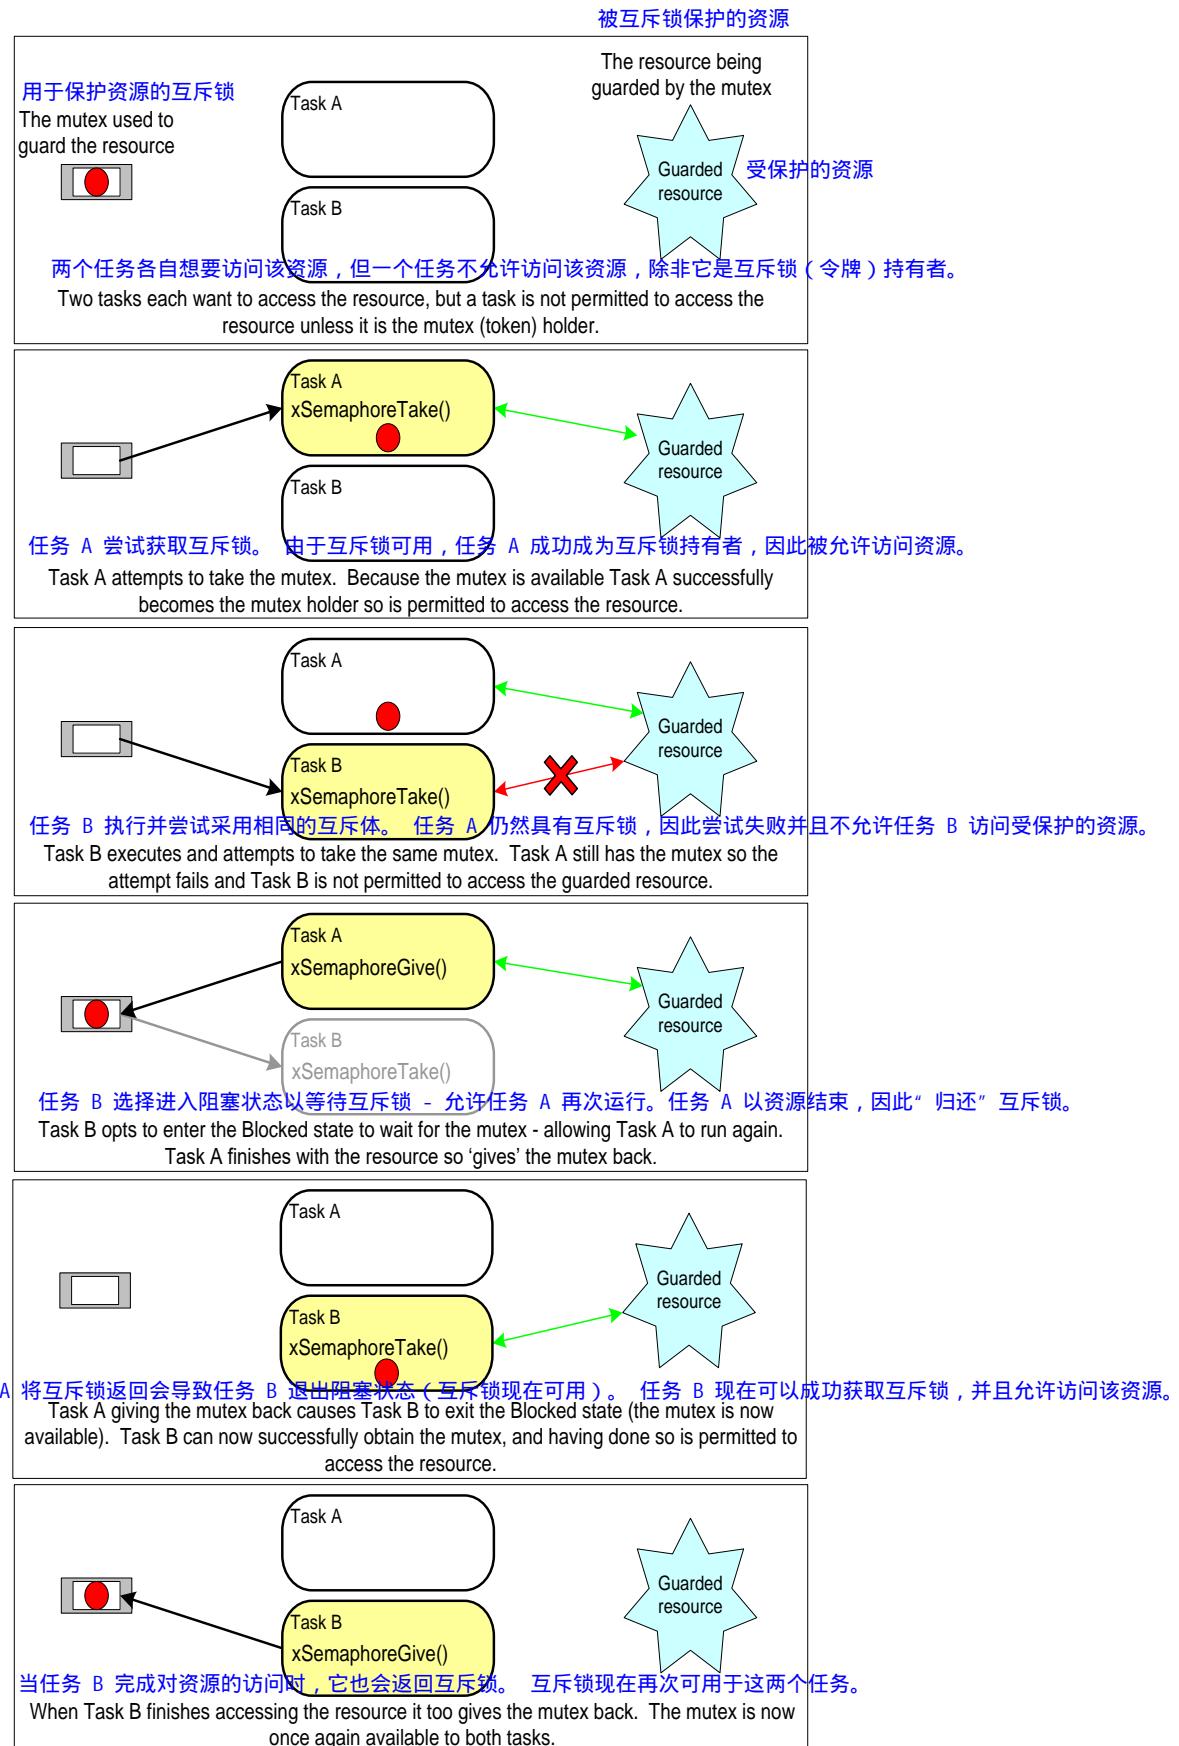


Figure 63. Mutual exclusion implemented using a mutex

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

该机制纯粹通过应用程序编写者的纪律来工作。

The mechanism works purely through the discipline of the application writer. There is no reason why a task cannot access the resource at any time, but each task ‘agrees’ not to do so, unless it is able to become the mutex holder.

## The xSemaphoreCreateMutex() API Function

FreeRTOS V9.0.0 also includes the xSemaphoreCreateMutexStatic() function, which allocates the memory required to create a mutex statically at compile time: A mutex is a type of semaphore. Handles to all the互斥锁是一种信号量。所有各种类型的FreeRTOS信号量的句柄都存储在SemaphoreHandle\_t类型的变量中。various types of FreeRTOS semaphore are stored in a variable of type SemaphoreHandle\_t.

在使用互斥体之前，必须先创建它。要创建互斥量类型的信号量，请使用xSemaphoreCreateMutex() API函数。Before a mutex can be used, it must be created. To create a mutex type semaphore, use the xSemaphoreCreateMutex() API function.

---

```
SemaphoreHandle_t xSemaphoreCreateMutex( void );
```

---

**Listing 120. The xSemaphoreCreateMutex() API function prototype**

**Table 41. xSemaphoreCreateMutex() return value**

Parameter Name/ Returned Value	Description
Returned value	<p>如果返回 NULL，则无法创建互斥锁，因为 FreeRTOS 没有足够的堆内存来分配互斥锁数据结构。 If NULL is returned then the mutex could not be created because there is insufficient heap memory available for FreeRTOS to allocate the mutex data structures. Chapter 2 provides more information on heap memory management.</p> <p>非 NULL 返回值表示已成功创建互斥锁。返回的值应存储为创建的互斥锁的句柄。 A non-NUL return value indicates that the mutex has been created successfully. The returned value should be stored as the handle to the created mutex.</p>

示例 20. 重写 vPrintString() 以使用信号量

### Example 20. Rewriting vPrintString() to use a semaphore

此示例创建名为 prvNewPrintString() 的新版本 vPrintString()，然后从多个任务中调用新函数。

This example creates a new version of vPrintString() called prvNewPrintString(), then calls the prvNewPrintString() 在功能上与 vPrintString() 相同，但使用互斥体控制对标准输出的访问，而不是通过锁定调度程序。new function from multiple tasks. prvNewPrintString() is functionally identical to vPrintString(), but controls access to standard out using a mutex, rather than by locking the scheduler. The implementation of prvNewPrintString() is shown in Listing 121.  
prvNewPrintString() 的实现如清单 121 所示。

---

```
static void prvNewPrintString( const char *pcString )
{
    /* The mutex is created before the scheduler is started, so already exists by the
     * time this task executes.

    Attempt to take the mutex, blocking indefinitely to wait for the mutex if it is
    not available straight away. The call to xSemaphoreTake() will only return when
    the mutex has been successfully obtained, so there is no need to check the
    function return value. If any other delay period was used then the code must
    check that xSemaphoreTake() returns pdTRUE before accessing the shared resource
    (which in this case is standard out). As noted earlier in this book, indefinite
    time outs are not recommended for production code. */
    xSemaphoreTake( xMutex, portMAX_DELAY );
{
    /* The following line will only execute once the mutex has been successfully
     * obtained. Standard out can be accessed freely now as only one task can have
     * the mutex at any one time. */
    printf( "%s", pcString );
    fflush( stdout );

    /* The mutex MUST be given back! */
}
xSemaphoreGive( xMutex );
}
```

---

**Listing 121.** The implementation of `prvNewPrintString()`

`prvNewPrintString()` 被`prvPrintTask()` 实现的任务的两个实例重复调用。每次调用之间使用随机延迟时间。  
`prvNewPrintString()` is called repeatedly by two instances of a task implemented by `prvPrintTask()`. A random delay time is used between each call. The task parameter is used to pass a unique string into each instance of the task. The implementation of `prvPrintTask()` is shown in Listing 122.

`task` 参数用于将唯一的字符串传递给任务的每个实例。`prvPrintTask()` 的实现如清单 122 所示。

```
static void prvPrintTask( void *pvParameters )
{
char *pcStringToPrint;
const TickType_t xMaxBlockTimeTicks = 0x20;

/* Two instances of this task are created. The string printed by the task is
passed into the task using the task's parameter. The parameter is cast to the
required type. */
pcStringToPrint = ( char * ) pvParameters;

for( ;; )
{
    /* Print out the string using the newly defined function. */
    prvNewPrintString( pcStringToPrint );

    /* Wait a pseudo random time. Note that rand() is not necessarily reentrant,
but in this case it does not really matter as the code does not care what
value is returned. In a more secure application a version of rand() that is
known to be reentrant should be used - or calls to rand() should be protected
using a critical section. */
    vTaskDelay( ( rand() % xMaxBlockTimeTicks ) );
}
}
```

---

#### Listing 122. The implementation of prvPrintTask() for Example 20

像往常一样， main() 只是创建互斥体，创建任务，然后启动调度程序。 该实现如清单 123 所示。

As normal, main() simply creates the mutex, creates the tasks, then starts the scheduler. The implementation is shown in Listing 123.

prvPrintTask() 的两个实例以不同的优先级创建，因此较低优先级的任务有时会被较高优先级的任务抢占。

The two instances of prvPrintTask() are created at different priorities, so the lower priority task 由于使用互斥锁来确保每个任务都可以互斥地访问终端，因此即使发生抢占，显示的字符串也将是正确的，并且不会损坏。 will sometimes be pre-empted by the higher priority task. As a mutex is used to ensure each task gets mutually exclusive access to the terminal, even when pre-emption occurs, the strings that are displayed will be correct and in no way corrupted. The frequency of pre-emption can 可以通过减少任务在阻塞状态中花费的最长时间来增加抢占的频率，该时间由 xMaxBlockTimeTicks 常量设置。 be increased by reducing the maximum time the tasks spend in the Blocked state, which is set by the xMaxBlockTimeTicks constant.

将示例 20 与 FreeRTOS Windows 端口一起使用的特定注意事项：

Notes specific to using Example 20 with the FreeRTOS Windows port:

调用 printf() 会生成一个 Windows 系统调用。 Windows 系统调用不受 FreeRTOS 控制，可能会导致不稳定。

- Calling printf() generates a Windows system call. Windows system calls are outside the control of FreeRTOS, and can introduce instability.  
Windows 系统调用的执行方式意味着很少看到损坏的字符串，即使不使用互斥锁也是如此。
- The way in which Windows system calls execute mean it is rare to see a corrupted string, even when the mutex is not used.

---

```

int main( void )
{
    /* Before a semaphore is used it must be explicitly created. In this example a
    mutex type semaphore is created. */
    xMutex = xSemaphoreCreateMutex();

    /* Check the semaphore was created successfully before creating the tasks. */
    if( xMutex != NULL )
    {
        /* Create two instances of the tasks that write to stdout. The string they
        write is passed in to the task as the task's parameter. The tasks are
        created at different priorities so some pre-emption will occur. */
        xTaskCreate( prvPrintTask, "Print1", 1000,
                    "Task 1 *****\r\n", 1, NULL );

        xTaskCreate( prvPrintTask, "Print2", 1000,
                    "Task 2 ----- \r\n", 2, NULL );


        /* Start the scheduler so the created tasks start executing. */
        vTaskStartScheduler();
    }

    /* If all is well then main() will never reach here as the scheduler will now be
    running the tasks. If main() does reach here then it is likely that there was
    insufficient heap memory available for the idle task to be created. Chapter 2
    provides more information on heap memory management. */
    for( ; );
```

---

**Listing 123. The implementation of main() for Example 20**

The output produced when Example 20 is executed is shown in Figure 64. A possible execution sequence is described in Figure 65.

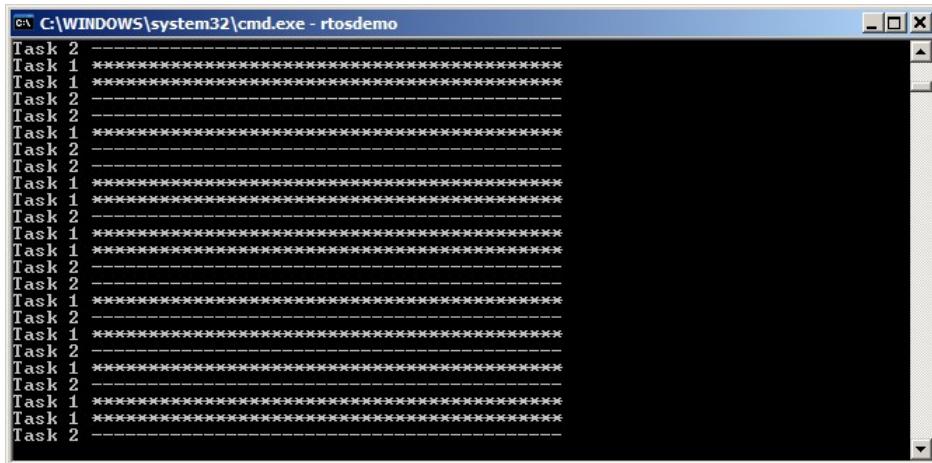

**Figure 64. The output produced when Example 20 is executed**

Figure 64 shows that, as expected, there is no corruption in the strings that are displayed on the terminal. The random ordering is a result of the random delay periods used by the tasks.

任务 2 尝试获取互斥锁，但互斥锁仍由任务 1 持有，因此任务 2 进入阻塞状态，允许任务 1 再次执行。

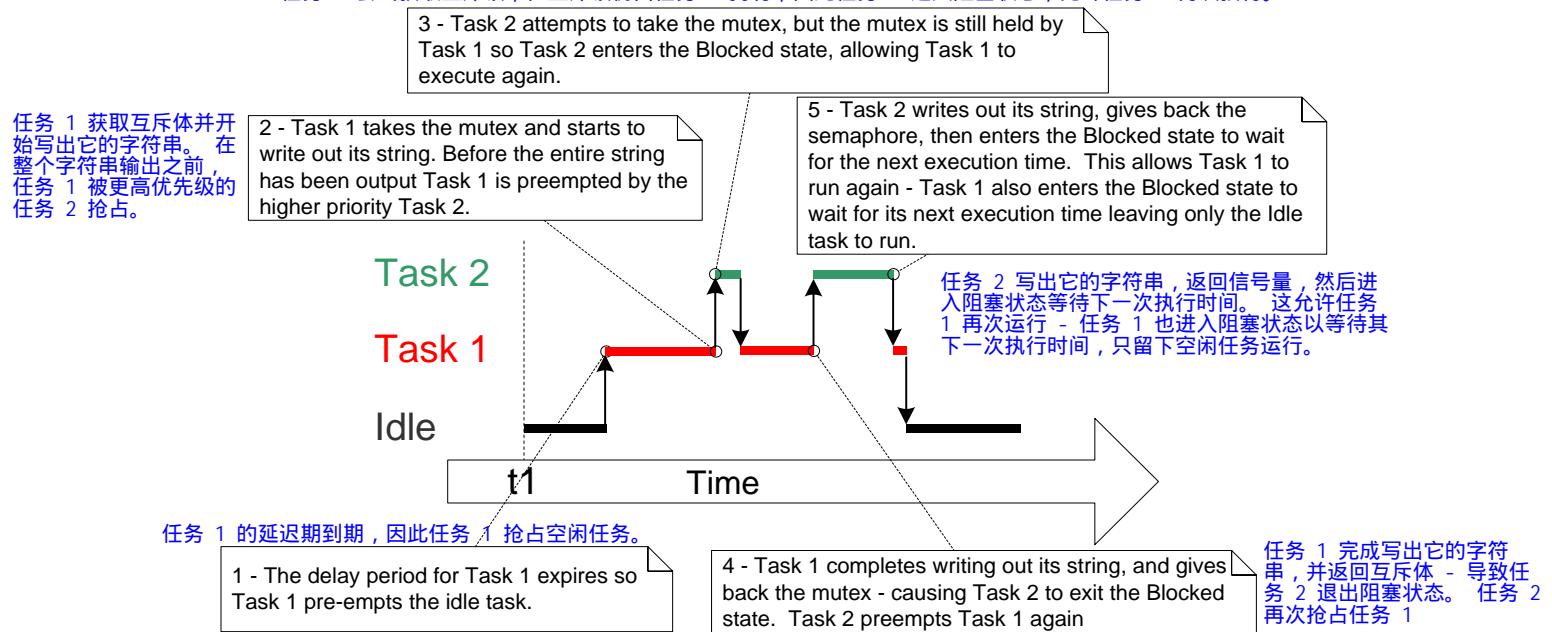


Figure 65. A possible sequence of execution for Example 20

### 优先级反转

#### Priority Inversion

图 65 展示了使用互斥体提供互斥的潜在缺陷之一。

Figure 65 demonstrates one of the potential pitfalls of using a mutex to provide mutual exclusion. The sequence of execution depicted shows the higher priority Task 2 having to wait for the lower priority Task 1 to give up control of the mutex. A higher priority task being delayed by a lower priority task in this manner is called ‘priority inversion’. This undesirable behavior would be exaggerated further if a medium priority task started to execute while the high priority task was waiting for the semaphore—the result would be a high priority task waiting for a low priority task—without the low priority task even being able to execute. This worst case scenario is shown in Figure 66.

如果中等优先级任务开始执行而高优先级任务正在等待信号量（结果将是高优先级任务等待低优先级任务），则这种不良行为将被进一步夸大，而低优先级任务甚至无法执行。执行。

这种最坏的情况如图 66 所示。

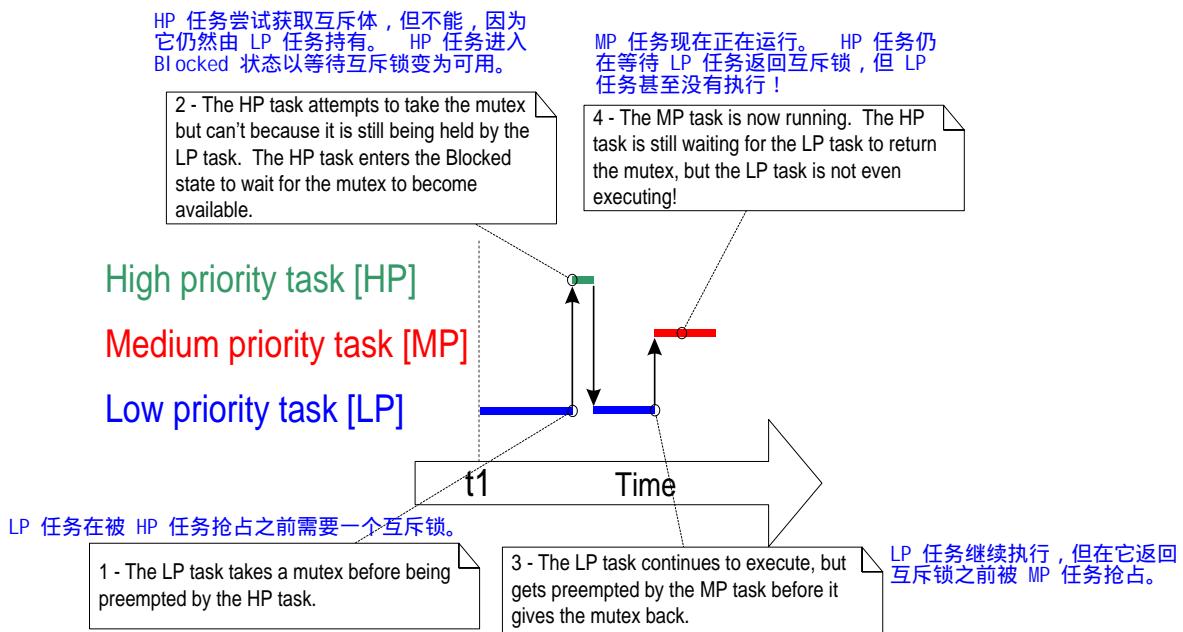


Figure 66. A worst case priority inversion scenario

优先级反转可能是一个重大问题，但在小型嵌入式系统中，通常可以在系统设计时通过考虑如何访问资源来避免它。

Priority inversion can be a significant problem, but in small embedded systems it can often be avoided at system design time, by considering how resources are accessed.

### Priority Inheritance 优先继承

FreeRTOS 互斥体和二进制信号量非常相似——不同之处在于互斥体包含基本的“优先级继承”机制，而二进制信号量则没有。FreeRTOS mutexes and binary semaphores are very similar—the difference being that mutexes include a basic ‘priority inheritance’ mechanism, whereas binary semaphores do not. 优先级继承是一种将优先级倒置的负面影响降至最低的方案。

Priority inheritance is a scheme that minimizes the negative effects of priority inversion. It does not ‘fix’ priority inversion, but merely lessens its impact by ensuring that the inversion is always time bounded. However, priority inheritance complicates system timing analysis, and it is not good practice to rely on it for correct system operation.

优先级继承的工作原理是将互斥锁持有者的优先级临时提高到试图获得相同互斥锁的最高优先级任务的优先级。

Priority inheritance works by temporarily raising the priority of the mutex holder to the priority of the highest priority task that is attempting to obtain the same mutex. The low priority task that holds the mutex ‘inherits’ the priority of the task waiting for the mutex. This is demonstrated by Figure 67 演示了这一点。互斥锁持有者的优先级在归还互斥锁时自动重置为其原始值。

Figure 67. The priority of the mutex holder is reset automatically to its original value when it gives the mutex back.

HP 任务尝试获取互斥体，但不能，因为它仍然由 LP 任务持有。HP 任务进入 Blocked 状态以等待互斥锁变为可用。

2 - The HP task attempts to take the mutex but can't because it is still being held by the LP task. The HP task enters the Blocked state to wait for the mutex to become available.

4 - The LP task returning the mutex causes the HP task to exit the Blocked state as the mutex holder. When the HP task has finished with the mutex it gives it back. The MP task only executes when the HP task returns to the Blocked state so the MP task never holds up the HP task.

返回互斥锁的 LP 任务导致 HP 任务作为互斥锁持有者退出阻塞状态。当 HP 任务使用互斥体完成时，它会将其返回。MP 任务仅在 HP 任务返回 Blocked 状态时执行，因此 MP 任务永远不会阻塞 HP 任务。

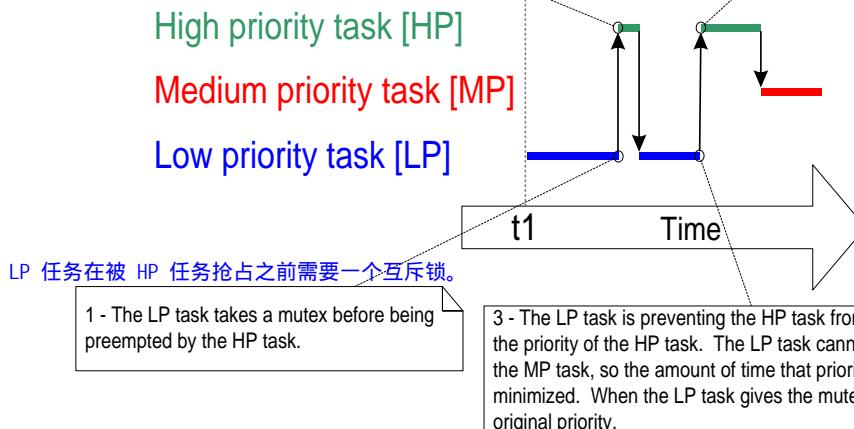


Figure 67. Priority inheritance minimizing the effect of priority inversion

如前所述，优先级继承功能会影响使用互斥锁的任务的优先级。因此，不能在中断服务例程中使用互斥锁。

As just seen, priority inheritance functionality effects the priority of tasks that are using the mutex. For that reason, mutexes must not be used from an interrupt service routines.

### Deadlock (or Deadly Embrace) 死锁（或致命拥抱）

“死锁”是使用互斥锁进行互斥的另一个潜在陷阱。死锁有时也以更具戏剧性的名称“致命拥抱”而闻名。

‘Deadlock’ is another potential pitfall of using mutexes for mutual exclusion. Deadlock is sometimes also known by the more dramatic name ‘deadly embrace’.

当两个任务因为都在等待对方持有的资源而无法继续时，就会发生死锁。

Deadlock occurs when two tasks cannot proceed because they are both waiting for a resource that is held by the other. Consider the following scenario where Task A and Task B both need to acquire mutex X and mutex Y in order to perform an action:  
考虑以下场景，其中任务 A 和任务 B 都需要获取互斥锁 X 和互斥锁 Y 才能执行操作：

1. Task A executes and successfully takes mutex X. 任务 A 执行并成功获取互斥锁 X。

2. Task A is pre-empted by Task B. 任务 A 被任务 B 抢占。

任务 B 在尝试获取互斥锁 X 之前成功地获取了互斥锁 Y，但互斥锁 X 由任务 A 持有，因此对任务 B 不可用。

3. Task B successfully takes mutex Y before attempting to also take mutex X—but mutex

X is held by Task A so is not available to Task B. Task B opts to enter the Blocked state to wait for mutex X to be released.  
任务 B 选择进入阻塞状态以等待互斥锁 X 被释放。

任务 A 继续执行。它尝试获取互斥体 Y，但互斥体 Y 由任务 B 持有，因此对任务 A 不可用。

任务 A 选择进入阻塞状态以等待互斥体 Y 被释放。

4. Task A continues executing. It attempts to take mutex Y—but mutex Y is held by Task B, so is not available to Task A. Task A opts to enter the Blocked state to wait for mutex Y to be released.

在这个场景结束时，任务 A 正在等待任务 B 持有的互斥锁，而任务 B 正在等待任务 A 持有的互斥锁。由于两个任务都无法继续，因此发生了死锁。

At the end of this scenario, Task A is waiting for a mutex held by Task B, and Task B is waiting for a mutex held by Task A. Deadlock has occurred because neither task can proceed.

与优先级倒置一样，避免死锁的最佳方法是在设计时考虑其潜力，并设计系统以确保不会发生死锁。

As with priority inversion, the best method of avoiding deadlock is to consider its potential at design time, and design the system to ensure that deadlock cannot occur. In particular, and especially, as previously stated in this book, it is normally bad practice for a task to wait indefinitely (without a time out) to obtain a mutex. Instead, use a time out that is a little longer than the maximum time it is expected to have to wait for the mutex—then failure to obtain the mutex within that time will be a symptom of a design error, which might be a deadlock.

在实践中，死锁在小型嵌入式系统中并不是什么大问题，因为系统设计人员可以很好地了解整个应用程序，从而可以识别和消除可能发生死锁的区域。

In practice, deadlock is not a big problem in small embedded systems, because the system designers can have a good understanding of the entire application, and so can identify and remove the areas where it could occur.

## Recursive Mutexes 递归互斥锁

任务也可能与自身发生死锁。如果一个任务尝试多次使用同一个互斥锁，而不首先返回互斥锁，就会发生这种情况。

It is also possible for a task to deadlock with itself. This will happen if a task attempts to take the same mutex more than once, without first returning the mutex. Consider the following scenario: 考虑以下场景：

1. A task successfully obtains a mutex. 任务成功获得互斥体。
2. While holding the mutex, the task calls a library function. 在持有互斥锁的同时，任务调用库函数。  
库函数的实现尝试取同一个互斥体，并进入阻塞状态等待互斥体变为可用。
3. The implementation of the library function attempts to take the same mutex, and enters the Blocked state to wait for the mutex to become available.

在这个场景结束时，任务处于阻塞状态等待互斥锁返回，但任务已经是互斥锁持有者。发生死锁是因为任务处于阻塞状态等待自己。At the end of this scenario the task is in the Blocked state to wait for the mutex to be returned, but the task is already the mutex holder. A deadlock has occurred because the task is in the Blocked state to wait for itself.

可以通过使用递归互斥锁代替标准互斥锁来避免这种类型的死锁。

This type of deadlock can be avoided by using a recursive mutex in place of a standard mutex. A recursive mutex can be ‘taken’ more than once by the same task, and will be returned only after one call to ‘give’ the recursive mutex has been executed for every preceding call to ‘take’ the recursive mutex. 递归互斥锁可以被同一个任务多次“获取”，并且只有在对“获取”递归互斥锁的每个先前调用都执行了一次“给予”递归互斥锁的调用后才会返回。

标准互斥锁和递归互斥锁的创建和使用方式类似：

Standard mutexes and recursive mutexes are created and used in a similar way:

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

使用 `xSemaphoreCreateMutex()` 创建标准互斥锁。

- Standard mutexes are created using `xSemaphoreCreateMutex()`. Recursive mutexes 递归互斥锁是使用 `xSemaphoreCreateRecursiveMutex()` 创建的。这两个 API 函数具有相同的原型。are created using `xSemaphoreCreateRecursiveMutex()`. The two API functions have the same prototype.

使用 `xSemaphoreTake()` “获取” 标准互斥锁。递归互斥锁是使用 `xSemaphoreTakeRecursive()` 来“获取”的。

- Standard mutexes are ‘taken’ using `xSemaphoreTake()`. Recursive mutexes are 这两个 API 函数具有相同的原型。‘taken’ using `xSemaphoreTakeRecursive()`. The two API functions have the same prototype.

使用 `xSemaphoreGive()` “给定” 标准互斥锁。递归互斥锁是使用 `xSemaphoreGiveRecursive()` “给定”的。这两个 API 函数具有相同的原型。

- Standard mutexes are ‘given’ using `xSemaphoreGive()`. Recursive mutexes are ‘given’ using `xSemaphoreGiveRecursive()`. The two API functions have the same prototype.

Listing 124 demonstrates how to create and use a recursive mutex.

清单 124 演示了如何创建和使用递归互斥锁

---

递归互斥锁是 `SemaphoreHandle_t` 类型的变量。

```

/* Recursive mutexes are variables of type SemaphoreHandle_t. */
SemaphoreHandle_t xRecursiveMutex;
创建和使用递归互斥锁的任务的实现。
/* The implementation of a task that creates and uses a recursive mutex. */
void vTaskFunction( void *pvParameters )
{
const TickType_t xMaxBlock20ms = pdMS_TO_TICKS( 20 );
在使用递归互斥体之前，必须显式创建它。
/* Before a recursive mutex is used it must be explicitly created. */
xRecursiveMutex = xSemaphoreCreateRecursiveMutex();
检查信号量是否已成功创建。 configASSERT() 在第 11.2 节中描述。
/* Check the semaphore was created successfully. configASSERT() is described in
section 11.2. */
configASSERT( xRecursiveMutex );
根据大多数任务，此任务被实现为无限循环。
/* As per most tasks, this task is implemented as an infinite loop. */
for( ;; )
{
    /* ... */
    采用递归互斥锁。
    /* Take the recursive mutex. */
    if( xSemaphoreTakeRecursive( xRecursiveMutex, xMaxBlock20ms ) == pdPASS )
    {
递归互斥锁已成功获取。该任务现在可以访问互斥锁正在保护的资源。此时递归调用计数（即对 xSemaphoreTakeRecursive() 的嵌套调用次数）为 1，因为递归互斥体仅被使用一次。
        /* While it already holds the recursive mutex, the task takes the mutex
again. In a real application, this is only likely to occur inside a sub-
function called by this task, as there is no practical reason to knowingly
take the same mutex more than once. The calling task is already the mutex
holder, so the second call to xSemaphoreTakeRecursive() does nothing more
than increment the recursive call count to 2. */
        xSemaphoreTakeRecursive( xRecursiveMutex, xMaxBlock20ms );
    }
    /* ... */

    /* The task returns the mutex after it has finished accessing the resource
the mutex is protecting. At this point the recursive call count is 2, so
the first call to xSemaphoreGiveRecursive() does not return the mutex.
Instead, it simply decrements the recursive call count back to 1. */
    xSemaphoreGiveRecursive( xRecursiveMutex );
    对 xSemaphoreGiveRecursive() 的下一次调用将递归调用计数减为 0，因此这次返回递归互斥体。
    /* The next call to xSemaphoreGiveRecursive() decrements the recursive call
count to 0, so this time the recursive mutex is returned.*/
    xSemaphoreGiveRecursive( xRecursiveMutex );
现在，每次对 xSemaphoreTakeRecursive() 的调用都执行了一次对 xSemaphoreGiveRecursive() 的调用，因此该任务不再是互斥锁持有者。
    /* Now one call to xSemaphoreGiveRecursive() has been executed for every
proceeding call to xSemaphoreTakeRecursive(), so the task is no longer the
mutex holder.
}
}
}

```

---

**Listing 124. Creating and using a recursive mutex**

## Mutexes and Task Scheduling 互斥锁和任务调度

如果两个不同优先级的任务使用同一个互斥锁，那么 FreeRTOS 调度策略会明确任务执行的顺序；

If two tasks of different priority use the same mutex, then the FreeRTOS scheduling policy makes the order in which the tasks will execute clear; the highest priority task that is able to

run will be selected as the task that enters the Running state. For example, if a high priority 例如，如果一个高优先级任务处于阻塞状态以等待一个低优先级任务持有的互斥锁，

task is in the Blocked state to wait for a mutex that is held by a low priority task, then the high 那么一旦低优先级任务返回互斥锁，高优先级任务就会抢占低优先级任务。

priority task will pre-empt the low priority task as soon as the low priority task returns the 然后，高优先级任务将成为互斥锁持有者。这种情况已经在图 67 中看到。

mutex. The high priority task will then become the mutex holder. This scenario has already

been seen in Figure 67.

然而，当任务具有相同优先级时，通常会错误地假设任务将执行的顺序。

It is however common to make an incorrect assumption as to the order in which the tasks will 如果 Task 1 和 Task 2 具有相同的优先级，并且 Task 1 处于 Blocked 状态以等待 Task 2 持有的互斥锁，

execute when the tasks have the same priority. If Task 1 and Task 2 have the same priority, 那么当任务 2“提供”互斥锁时，任务 1 不会抢占任务 2。

and Task 1 is in the Blocked state to wait for a mutex that is held by Task 2, then Task 1 will 相反，任务 2 将保持在运行状态，而任务 1 将简单地从阻塞状态移动到就绪状态。

not pre-empt Task 2 when Task 2 ‘gives’ the mutex. Instead, Task 2 will remain in the Running state, and Task 1 will simply move from the Blocked state to the Ready state. This 这种情况如图 68 所示，其中垂直线标记发生滴答中断的时间。

scenario is shown in Figure 68, in which the vertical lines mark the times at which a tick interrupt occurs.

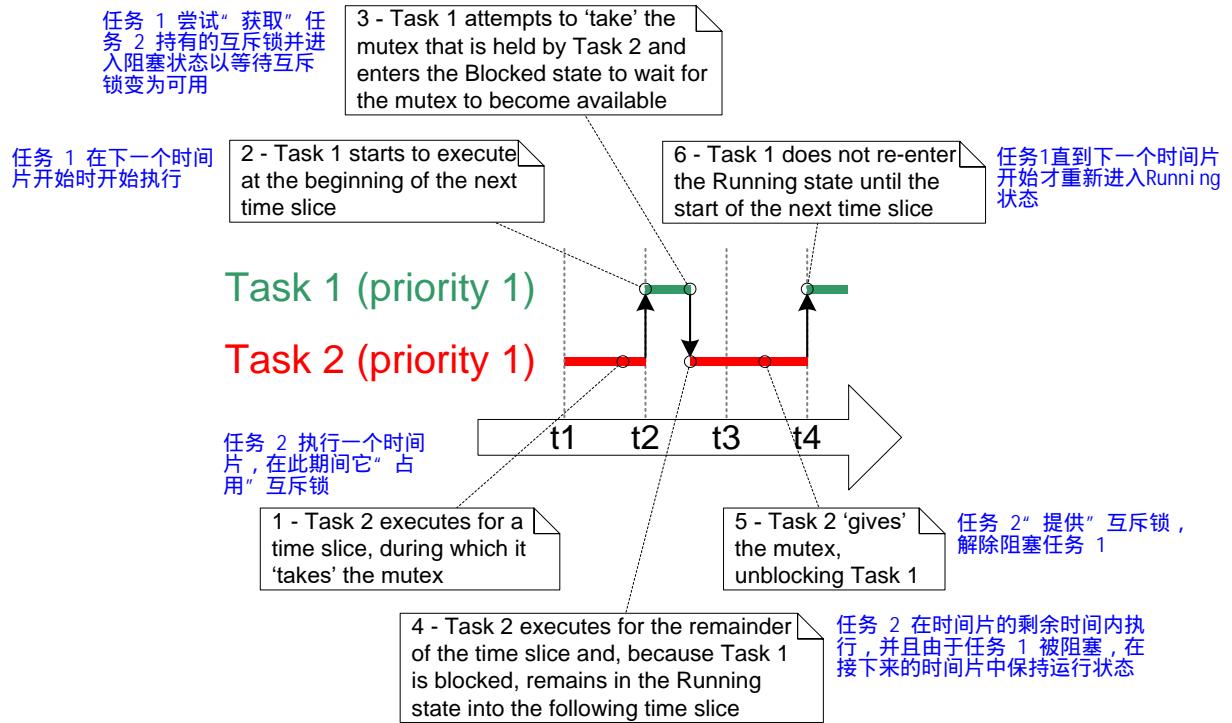


Figure 68 A possible sequence of execution when tasks that have the same priority use the same mutex

在图 68 所示的场景中，一旦互斥锁可用，FreeRTOS 调度程序就不会使任务 1 成为运行状态任务，因为：

In the scenario shown in Figure 68, the FreeRTOS scheduler does *not* make Task 1 the Running state task as soon as the mutex is available because:

任务 1 和任务 2 具有相同的优先级，因此除非任务 2 进入阻塞状态，否则在下一个滴答中断之前不应切换到任务 1  
(假设 FreeRTOSConfig.h 中的 configUSE\_TIME\_SLICING 设置为 1)。

1. Task 1 and Task 2 have the same priority, so unless Task 2 enters the Blocked state, a switch to Task 1 should not occur until the next tick interrupt (assuming configUSE\_TIME\_SLICING is set to 1 in FreeRTOSConfig.h).

如果任务在紧密循环中使用互斥锁，并且每次任务“给予”互斥锁时都会发生上下文切换，那么该任务只会在很短的时间内保持在运行状态。

2. If a task uses a mutex in a tight loop, and a context switch occurred each time the task ‘gave’ the mutex, then the task would only ever remain in the Running state for a short time. If two or more tasks used the same mutex in a tight loop, then processing time would be wasted by rapidly switching between the tasks.

如果多个任务在紧密循环中使用互斥锁，并且使用互斥锁的任务具有相同的优先级，则必须注意确保任务接收大致相等的处理时间。If a mutex is used in a tight loop by more than one task, and the tasks that use the mutex have the same priority, then care must be taken to ensure the tasks receive an approximately equal amount of processing time. The reason the tasks might not receive an equal amount of processing time is demonstrated by Figure 69, which shows a sequence of execution that could occur if two instances of the task shown by Listing 125 are created at the same priority.

图 69 展示了任务可能无法获得等量处理时间的原因，该图显示了如果以相同优先级创建清单 125 所示任务的两个实例时可能发生的执行序列。

在紧密循环中使用互斥锁的任务的实现。该任务在本地缓冲区中创建一个文本字符串，然后将该字符串写入显示器。对显示器的访问受到互斥锁的保护。

```
/* The implementation of a task that uses a mutex in a tight loop. The task creates
a text string in a local buffer, then writes the string to a display. Access to the
display is protected by a mutex. */
void vATask( void *pvParameter )
{
    extern SemaphoreHandle_t xMutex;
    char cTextBuffer[ 128 ];

    for( ;; )
    {
        /* 生成文本字符串——这是一个快速的操作。
        /* Generate the text string - this is a fast operation. */
        vGenerateTextInALocalBuffer( cTextBuffer );
        /* 获得保护对显示器的访问的互斥锁。
        /* Obtain the mutex that is protecting access to the display. */
        xSemaphoreTake( xMutex, portMAX_DELAY );
        /* 将生成的文本写入显示器——这是一个缓慢的操作。
        /* Write the generated text to the display - this is a slow operation. */
        vCopyTextToFrameBuffer( cTextBuffer );
        /* 文本已写入显示器，因此返回互斥锁。
        /* The text has been written to the display, so return the mutex. */
        xSemaphoreGive( xMutex );
    }
}
```

---

#### Listing 125. A task that uses a mutex in a tight loop

清单 125 中的注释指出，创建字符串是一项快速操作，而更新显示是一项缓慢的操作。

The comments in Listing 125 note that creating the string is a fast operation, and updating the display is a slow operation. Therefore, as the mutex is held while the display is being updated, the task will hold the mutex for the majority of its run time.

在图 69 中，垂直线标记发生滴答中断的时间。

In Figure 69, the vertical lines mark the times at which a tick interrupt occurs.

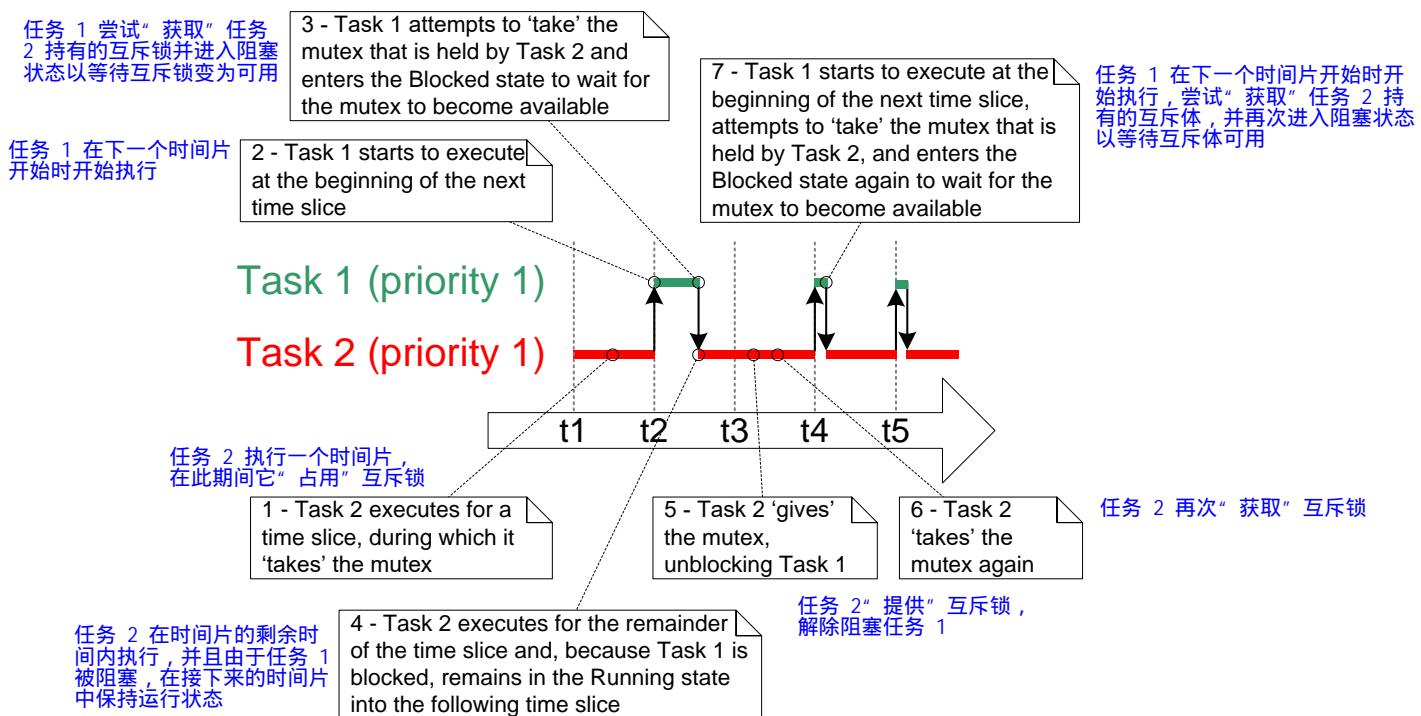


Figure 69 A sequence of execution that could occur if two instances of the task shown by Listing 125 are created at the same priority

图 69 中的第 7 步显示任务 1 重新进入阻塞状态 — 这发生在 xSemaphoreTake() API 函数内部。

Step 7 in Figure 69 shows Task 1 re-entering the Blocked state—that happens inside the xSemaphoreTake() API function.

图 69 展示了任务 1 将被阻止获取互斥锁，直到时间片的开始与任务 2 不是互斥锁持有者的短周期之一重合。

Figure 69 demonstrates that Task 1 will be prevented from obtaining the mutex until the start of a time slice coincides with one of the short periods during which Task 2 is not the mutex holder.

通过在调用 xSemaphoreGive() 之后添加对 taskYIELD() 的调用，可以避免图 69 中所示的情况。

The scenario shown in Figure 69 can be avoided by adding a call to taskYIELD() after the call to xSemaphoreGive(). This is demonstrated in Listing 126, where taskYIELD() is called if the tick count changed while the task held the mutex.

---

```

void vFunction( void *pvParameter )
{
    extern SemaphoreHandle_t xMutex;
    char cTextBuffer[ 128 ];
    TickType_t xTimeAtWhichMutexWasTaken;

    for( ;; )
    {
        /* Generate the text string - this is a fast operation. */
        vGenerateTextInALocalBuffer( cTextBuffer );

        /* Obtain the mutex that is protecting access to the display. */
        xSemaphoreTake( xMutex, portMAX_DELAY );
        记录使用互斥锁的时间。
        /* Record the time at which the mutex was taken. */
        xTimeAtWhichMutexWasTaken = xTaskGetTickCount();

        /* Write the generated text to the display - this is a slow operation. */
        vCopyTextToFrameBuffer( cTextBuffer );

        /* The text has been written to the display, so return the mutex. */
        xSemaphoreGive( xMutex );
    }
}

```

如果在每次迭代中调用 taskYIELD()，那么这个任务只会在很短的时间内保持运行状态，并且在任务之间快速切换会浪费处理时间。因此，只有在持有互斥锁时滴答计数发生变化时才调用 taskYIELD()。

```

/* If taskYIELD() was called on each iteration then this task would only ever
remain in the Running state for a short period of time, and processing time
would be wasted by rapidly switching between tasks. Therefore, only call
taskYIELD() if the tick count changed while the mutex was held. */
if( xTaskGetTickCount() != xTimeAtWhichMutexWasTaken )
{
    taskYIELD();
}
}

```

---

**Listing 126.** Ensuring tasks that use a mutex in a loop receive a more equal amount of processing time, while also ensuring processing time is not wasted by switching between tasks too rapidly

## 7.4 Gatekeeper Tasks

---

Gatekeeper tasks provide a clean method of implementing mutual exclusion without the risk of priority inversion or deadlock.

A gatekeeper task is a task that has sole ownership of a resource. Only the gatekeeper task is allowed to access the resource directly—any other task needing to access the resource can do so only indirectly by using the services of the gatekeeper.

### Example 21. Re-writing vPrintString() to use a gatekeeper task

Example 21 provides another alternative implementation for vPrintString(). This time, a gatekeeper task is used to manage access to standard out. When a task wants to write a message to standard out, it does not call a print function directly but, instead, sends the message to the gatekeeper.

The gatekeeper task uses a FreeRTOS queue to serialize access to standard out. The internal implementation of the task does not have to consider mutual exclusion because it is the only task permitted to access standard out directly.

The gatekeeper task spends most of its time in the Blocked state, waiting for messages to arrive on the queue. When a message arrives, the gatekeeper simply writes the message to standard out, before returning to the Blocked state to wait for the next message. The implementation of the gatekeeper task is shown by Listing 128.

Interrupts can send to queues, so interrupt service routines can also safely use the services of the gatekeeper to write messages to the terminal. In this example, a tick hook function is used to write out a message every 200 ticks.

A tick hook (or tick callback) is a function that is called by the kernel during each tick interrupt. To use a tick hook function:

1. Set configUSE\_TICK\_HOOK to 1 in FreeRTOSConfig.h.
2. Provide the implementation of the hook function, using the exact function name and prototype shown in Listing 127.

---

```
void vApplicationTickHook( void );
```

---

**Listing 127. The name and prototype for a tick hook function**

Tick hook functions execute within the context of the tick interrupt, and so must be kept very short, must use only a moderate amount of stack space, and must not call any FreeRTOS API functions that do not end with 'FromISR()'.

The scheduler will always execute immediately after the tick hook function, so interrupt safe FreeRTOS API functions called from the tick hook do not need to use their pxHigherPriorityTaskWoken parameter, and the parameter can be set to NULL.

---

```
static void prvStdioGatekeeperTask( void *pvParameters )
{
    char *pcMessageToPrint;

    /* This is the only task that is allowed to write to standard out. Any other
     * task wanting to write a string to the output does not access standard out
     * directly, but instead sends the string to this task. As only this task accesses
     * standard out there are no mutual exclusion or serialization issues to consider
     * within the implementation of the task itself. */
    for( ; ; )
    {
        /* Wait for a message to arrive. An indefinite block time is specified so
         * there is no need to check the return value - the function will only return
         * when a message has been successfully received. */
        xQueueReceive( xPrintQueue, &pcMessageToPrint, portMAX_DELAY );

        /* Output the received string. */
        printf( "%s", pcMessageToPrint );
        fflush( stdout );

        /* Loop back to wait for the next message. */
    }
}
```

---

**Listing 128. The gatekeeper task**

The task that writes to the queue is shown in Listing 129. As before, two separate instances of the task are created, and the string the task writes to the queue is passed into the task using the task parameter.

```
static void prvPrintTask( void *pvParameters )
{
int iIndexToString;
const TickType_t xMaxBlockTimeTicks = 0x20;

/* Two instances of this task are created. The task parameter is used to pass
an index into an array of strings into the task. Cast this to the required
type. */
iIndexToString = ( int ) pvParameters;

for( ; )
{
    /* Print out the string, not directly, but instead by passing a pointer to
    the string to the gatekeeper task via a queue. The queue is created before
    the scheduler is started so will already exist by the time this task executes
    for the first time. A block time is not specified because there should
    always be space in the queue. */
    xQueueSendToBack( xPrintQueue, &( pcStringsToPrint[ iIndexToString ] ), 0 );

    /* Wait a pseudo random time. Note that rand() is not necessarily reentrant,
    but in this case it does not really matter as the code does not care what
    value is returned. In a more secure application a version of rand() that is
    known to be reentrant should be used - or calls to rand() should be protected
    using a critical section. */
    vTaskDelay( ( rand() % xMaxBlockTimeTicks ) );
}
}
```

---

**Listing 129. The print task implementation for Example 21**

The tick hook function counts the number of times it is called, sending its message to the gatekeeper task each time the count reaches 200. For demonstration purposes only, the tick hook writes to the front of the queue, and the tasks write to the back of the queue. The tick hook implementation is shown in Listing 130.

---

```
void vApplicationTickHook( void )
{
static int iCount = 0;

/* Print out a message every 200 ticks. The message is not written out directly,
but sent to the gatekeeper task. */
iCount++;
if( iCount >= 200 )
{
    /* As xQueueSendToFrontFromISR() is being called from the tick hook, it is
not necessary to use the xHigherPriorityTaskWoken parameter (the third
parameter), and the parameter is set to NULL. */
xQueueSendToFrontFromISR( xPrintQueue,
                           &( pcStringsToPrint[ 2 ] ),
                           NULL );

    /* Reset the count ready to print out the string again in 200 ticks time. */
iCount = 0;
}
}
```

---

#### Listing 130. The tick hook implementation

As normal, main() creates the queues and tasks necessary to run the example, then starts the scheduler. The implementation of main() is shown in Listing 131.

```
/* Define the strings that the tasks and interrupt will print out via the
gatekeeper. */
static char *pcStringsToPrint[] =
{
    "Task 1 *****\r\n",
    "Task 2 ----- \r\n",
    "Message printed from the tick hook interrupt #####\r\n"
};

/*-----*/
/* Declare a variable of type QueueHandle_t. The queue is used to send messages
from the print tasks and the tick interrupt to the gatekeeper task. */
QueueHandle_t xPrintQueue;

/*-----*/
int main( void )
{
    /* Before a queue is used it must be explicitly created. The queue is created
    to hold a maximum of 5 character pointers. */
    xPrintQueue = xQueueCreate( 5, sizeof( char * ) );

    /* Check the queue was created successfully. */
    if( xPrintQueue != NULL )
    {
        /* Create two instances of the tasks that send messages to the gatekeeper.
        The index to the string the task uses is passed to the task via the task
        parameter (the 4th parameter to xTaskCreate()). The tasks are created at
        different priorities so the higher priority task will occasionally preempt
        the lower priority task. */
        xTaskCreate( prvPrintTask, "Print1", 1000, ( void * ) 0, 1, NULL );
        xTaskCreate( prvPrintTask, "Print2", 1000, ( void * ) 1, 2, NULL );

        /* Create the gatekeeper task. This is the only task that is permitted
        to directly access standard out. */
        xTaskCreate( prvStdioGatekeeperTask, "Gatekeeper", 1000, NULL, 0, NULL );

        /* Start the scheduler so the created tasks start executing. */
        vTaskStartScheduler();
    }

    /* If all is well then main() will never reach here as the scheduler will now be
    running the tasks. If main() does reach here then it is likely that there was
    insufficient heap memory available for the idle task to be created. Chapter 2
    provides more information on heap memory management. */
    for( ;; );
}
```

---

**Listing 131. The implementation of main() for Example 21**

The output produced when Example 21 is executed is shown in Figure 70. As can be seen, the strings originating from the tasks, and the strings originating from the interrupt, all print out correctly with no corruption.

```
C:\WINDOWS\system32\cmd.exe - rtosdemo
Message printed from the tick hook interrupt #####
Message printed from the tick hook interrupt #####
Task 2 -----
Task 1 *****
Message printed from the tick hook interrupt #####
Task 1 *****
Message printed from the tick hook interrupt #####
Task 2 -----
Task 2 -----
Task 1 *****
Message printed from the tick hook interrupt #####
Task 2 -----
Task 2 -----
Task 2 -----
Task 1 *****
Message printed from the tick hook interrupt #####
Task 1 *****
```

Figure 70. The output produced when Example 21 is executed

The gatekeeper task is assigned a lower priority than the print tasks—so messages sent to the gatekeeper remain in the queue until both print tasks are in the Blocked state. In some situations, it would be appropriate to assign the gatekeeper a higher priority, so messages get processed immediately—but doing so would be at the cost of the gatekeeper delaying lower priority tasks until it has completed accessing the protected resource.

# Chapter 8

## Event Groups

---

## 8.1 Chapter Introduction and Scope

---

已经注意到实时嵌入式系统必须采取行动来响应事件。 前几章描述了 FreeRTOS 允许将事件传递给任务的功能。此类功能的示例包括信号量和队列，它们都具有以下属性：

It has already been noted that real-time embedded systems have to take actions in response to events. Previous chapters have described features of FreeRTOS that allow events to be communicated to tasks. Examples of such features include semaphores and queues, both of which have the following properties:

它们允许任务在 Blocked 状态下等待单个事件的发生。

- They allow a task to wait in the Blocked state for a single event to occur.

他们在事件发生时解除对单个任务的阻塞——被解除阻塞的任务是等待事件的最高优先级任务。

- They unblock a single task when the event occurs—the task that is unblocked is the highest priority task that was waiting for the event.

事件组是 FreeRTOS 的另一个功能，它允许将事件传达给任务。 与队列和信号量不同：

Event groups are another feature of FreeRTOS that allow events to be communicated to tasks. Unlike queues and semaphores:

事件组允许任务在阻塞状态下等待多个事件之一的组合发生。

- Event groups allow a task to wait in the Blocked state for a combination of one or more events to occur.

当事件发生时，事件组会解除阻塞等待同一事件或事件组合的所有任务。

- Event groups unblock all the tasks that were waiting for the same event, or combination of events, when the event occurs.

事件组的这些独特属性使其可用于同步多个任务、将事件广播到多个任务、允许任务在阻塞状态等待一组事件中的任何一个发生，以及允许任务在完成多个操作的阻塞状态。

These unique properties of event groups make them useful for synchronizing multiple tasks, broadcasting events to more than one task, allowing a task to wait in the Blocked state for any one of a set of events to occur, and allowing a task to wait in the Blocked state for multiple actions to complete.

事件组还提供了减少应用程序使用的 RAM 的机会，因为通常可以用单个事件组替换许多二进制信号量。

Event groups also provide the opportunity to reduce the RAM used by an application, as often it is possible to replace many binary semaphores with a single event group.

事件组功能是可选的。 要包含事件组功能，请将 FreeRTOS 源文件 event\_groups.c 构建为项目的一部分。

Event group functionality is optional. To include event group functionality, build the FreeRTOS source file event\_groups.c as part of your project.

### Scope

本章旨在让读者更好地理解：

This chapter aims to give readers a good understanding of:

事件组的实际用途。

- Practical uses for event groups.

事件组相对于其他 FreeRTOS 功能的优缺点。

- The advantages and disadvantages of event groups relative to other FreeRTOS features.  
如何在事件组中设置位。
  - How to set bits in an event group.  
如何在阻塞状态下等待事件组中的位被设置。
    - How to wait in the Blocked state for bits to become set in an event group.  
如何使用事件组来同步一组任务。
      - How to use an event group to synchronize a set of tasks.

## 8.2 Characteristics of an Event Group

### Event Groups, Event Flags and Event Bits

事件“标志”是一个布尔值（1或0），用于指示事件是否发生。事件“组”是一组事件标志。

An event ‘flag’ is a Boolean (1 or 0) value used to indicate if an event has occurred or not. An event ‘group’ is a set of event flags.

一个事件标志只能为1或0，允许将一个事件标志的状态存储在一个位中，并将一个事件组中所有事件标志的状态存储在一个变量中；An event flag can only be 1 or 0, allowing the state of an event flag to be stored in a single bit,

and the state of all the event flags in an event group to be stored in a single variable; the state of each event flag in an event group is represented by a single bit in a variable of type

因此，事件标志也称为事件“位”。

EventBits\_t. For that reason, event flags are also known as event ‘bits’. If a bit is set to 1 in

如果 EventBits\_t 变量中的某个位设置为1，则该位表示的事件已经发生。

the EventBits\_t variable, then the event represented by that bit has occurred. If a bit is set to 0

如果 EventBits\_t 变量中的某个位设置为0，则该位表示的事件尚未发生。

in the EventBits\_t variable, then the event represented by that bit has not occurred.

图 71 显示了如何将各个事件标志映射到 EventBits\_t 类型的变量中的各个位。

Figure 71 shows how individual event flags are mapped to individual bits in a variable of type

EventBits\_t.

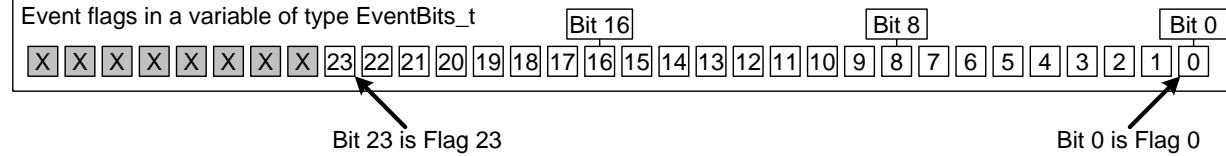


Figure 71 Event flag to bit number mapping in a variable of type EventBits\_t

例如，如果事件组的值为 0x92（二进制 1001 0010），则仅设置事件位 1、4 和 7，因此仅发生了位 1、4 和 7 表示的事件。

As an example, if the value of an event group is 0x92 (binary 1001 0010) then only event bits 1, 4 and 7 are set, so only the events represented by bits 1, 4 and 7 have occurred. Figure 72 shows a variable of type EventBits\_t that has event bits 1, 4 and 7 set, and all the other event bits clear, giving the event group a value of 0x92.

图 72 显示了一个 EventBits\_t 类型的变量，它设置了事件位 1、4 和 7，并且所有其他事件位都清零，给事件组一个值 0x92。

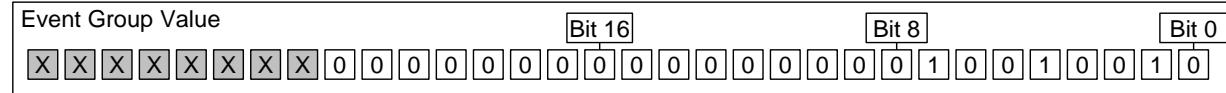


Figure 72 An event group in which only bits 1, 4 and 7 are set, and all the other event flags are clear, making the event group's value 0x92

由应用程序编写者为事件组中的各个位分配含义。例如，应用程序编写者可能会创建一个事件组，然后：

It is up to the application writer to assign a meaning to individual bits within an event group.

For example, the application writer might create an event group, then:

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

将事件组中的位 0 定义为“已从网络接收到消息”。

- Define bit 0 within the event group to mean “a message has been received from the network”.  
将事件组中的第 1 位定义为“一条消息已准备好发送到网络上”。
- Define bit 1 within the event group to mean “a message is ready to be sent onto the network”.  
将事件组中的第 2 位定义为“中止当前网络连接”。
- Define bit 2 within the event group to mean “abort the current network connection”.

有关 `EventBits_t` 数据类型的更多信息

### More About the `EventBits_t` Data Type

事件组中的事件位数取决于 `FreeRTOSConfig.h` 中的 `configUSE_16_BIT_TICKS` 编译时间配置常量

The number of event bits in an event group is dependent on the `configUSE_16_BIT_TICKS` compile time configuration constant within `FreeRTOSConfig.h`<sup>1</sup>:

如果 `configUSE_16_BIT_TICKS` 为 1，则每个事件组包含 8 个可用事件位。

- If `configUSE_16_BIT_TICKS` is 1, then each event group contains 8 usable event bits.  
如果 `configUSE_16_BIT_TICKS` 为 0，则每个事件组包含 24 个可用事件位。
- If `configUSE_16_BIT_TICKS` is 0, then each event group contains 24 usable event bits.

多任务访问

### Access by Multiple Tasks

事件组本身就是对象，任何知道它们存在的任务或 ISR 都可以访问这些对象。

Event groups are objects in their own right that can be accessed by any task or ISR that knows of their existence. Any number of tasks can set bits in the same event group, and any number of tasks can read bits from the same event group.

使用事件组的实际示例

### A Practical Example of Using an Event Group

FreeRTOS+TCP TCP/IP 堆栈的实现提供了一个实际示例，说明如何使用事件组来同时简化设计并最大限度地减少资源使用。

The implementation of the FreeRTOS+TCP TCP/IP stack provides a practical example of how an event group can be used to simultaneously simplify a design, and minimize resource usage.

TCP 套接字必须响应许多不同的事件。事件的示例包括接受事件、绑定事件、读取事件和关闭事件。

A TCP socket must respond to many different events. Examples of events include accept  
套接字在任何给定时间可以预期的事件取决于套接字的状态。

events, bind events, read events and close events. The events a socket can expect at any given time is dependent on the state of the socket. For example, if a socket has been created, but not yet bound to an address, then it can expect to receive a bind event, but would not expect to receive a read event (it cannot read data if it does not have an address).

例如，如果一个套接字已经创建，但还没有绑定到一个地址，那么它可以期望接收一个绑定事件，但不会期望接收一个读取事件（如果它没有地址，它就无法读取数据）。

<sup>1</sup> `configUSE_16_BIT_TICKS` configures the type used to hold the RTOS tick count, so would seem unrelated to the event groups feature. Its effect on the `EventBits_t` type is a consequence of FreeRTOS's internal implementation, and desirable as `configUSE_16_BIT_TICKS` should only be set to 1 when FreeRTOS is executing on an architecture that can handle 16-bit types more efficiently than 32-bit types.

FreeRTOS+TCP 套接字的状态保存在名为 FreeRTOS\_Socket\_t 的结构中。

The state of a FreeRTOS+TCP socket is held in a structure called FreeRTOS\_Socket\_t. The  
该结构包含一个事件组，该组具有为套接字必须处理的每个事件定义的事件位。  
structure contains an event group that has an event bit defined for each event the socket must  
FreeRTOS+TCP API 调用阻塞以等待一个事件或一组事件，只需阻塞事件组。  
process. FreeRTOS+TCP API calls that block to wait for an event, or group of events, simply  
block on the event group.

事件组还包含一个“中止”位，允许中止 TCP 连接，无论套接字当时正在等待哪个事件。

The event group also contains an ‘abort’ bit, allowing a TCP connection to be aborted, no  
matter which event the socket is waiting for at the time.

## 8.3 Event Management Using Event Groups

### The xEventGroupCreate() API Function

FreeRTOS V9.0.0 also includes the xEventGroupCreateStatic() function, which allocates the memory required to create an event group statically at compile time: An event group must be explicitly created before it can be used.  
必须先显式创建事件组，然后才能使用它。

使用 EventGroupHandle\_t 类型的变量引用事件组。

Event groups are referenced using variables of type EventGroupHandle\_t. The xEventGroupCreate() API 函数用于创建事件组，并返回一个 EventGroupHandle\_t 以引用它创建的事件组。xEventGroupCreate() API function is used to create an event group, and returns an EventGroupHandle\_t to reference the event group it creates.

---

```
EventGroupHandle_t xEventGroupCreate( void );
```

---

**Listing 132. The xEventGroupCreate() API function prototype**

**Table 42, xEventGroupCreate() return value**

Parameter Name	Description
Return Value	<p>如果返回 NULL，则无法创建事件组，因为 FreeRTOS 没有足够的堆内存来分配事件组数据结构。 If NULL is returned, then the event group cannot be created because there is insufficient heap memory available for FreeRTOS to allocate the event group data structures. Chapter 2 provides more information on heap memory management.</p> <p>返回非 NULL 值表示事件组已成功创建。 返回值应存储为已创建事件组的句柄。 A non-NULL value being returned indicates that the event group has been created successfully. The returned value should be stored as the handle to the created event group.</p>

### The xEventGroupSetBits() API Function

xEventGroupSetBits() API 函数设置事件组中的一个或多个位，通常用于通知任务已发生由正在设置的一个或多个位表示的事件。The xEventGroupSetBits() API function sets one or more bits in an event group, and is typically used to notify a task that the events represented by the bit, or bits, being set has occurred.

注意：切勿从中断服务例程中调用 xEventGroupSetBits()。 应使用中断安全版本 xEventGroupSetBitsFromISR() 代替它。

Note: Never call xEventGroupSetBits() from an interrupt service routine. The interrupt-safe version xEventGroupSetBitsFromISR() should be used in its place.

---

```
EventBits_t xEventGroupSetBits( EventGroupHandle_t xEventGroup,
                                const EventBits_t uxBitsToSet );
```

---

**Listing 133. The xEventGroupSetBits() API function prototype**

**Table 43, xEventGroupSetBits() parameters and return value**

Parameter Name	Description
xEventGroup	正在设置位的事件组的句柄。事件组句柄将从对用于创建事件组的 xEventGroupCreate() 的调用中返回。 The handle of the event group in which bits are being set. The event group handle will have been returned from the call to xEventGroupCreate() used to create the event group.
uxBitsToSet	一个位掩码，指定要在事件组中设置为 1 的事件位或事件位。 A bit mask that specifies the event bit, or event bits, to set to 1 in the event group. The value of the event group is updated by bitwise ORing the event group's existing value with the value passed in uxBitsToSet. 例如，将 uxBitsToSet 设置为 0x04 (二进制 0100) 将导致事件组中的事件位 3 被设置（如果尚未设置），而事件组中的所有其他事件位保持不变。 As an example, setting uxBitsToSet to 0x04 (binary 0100) will result in event bit 3 in the event group becoming set (if it was not already set), while leaving all the other event bits in the event group unchanged.
Returned Value	调用 xEventGroupSetBits() 返回时事件组的值。 The value of the event group at the time the call to xEventGroupSetBits() 请注意，返回的值不一定会设置 uxBitsToSet 指定的位，因为这些位可能已被不同的任务再次清除。 returned. Note that the value returned will not necessarily have the bits specified by uxBitsToSet set, because the bits may have been cleared again by a different task.

### The xEventGroupSetBitsFromISR() API Function

xEventGroupSetBitsFromISR() 是 xEventGroupSetBits() 的中断安全版本。

xEventGroupSetBitsFromISR() is the interrupt safe version of xEventGroupSetBits().

给予信号量是一种确定性操作，因为事先知道给予信号量最多可以导致一个任务离开阻塞状态。

Giving a semaphore is a deterministic operation because it is known in advance that giving a semaphore can result in at most one task leaving the Blocked state. When bits are set in an event group it is not known in advance how many tasks will leave the Blocked state, so setting bits in an event group is not a deterministic operation.

FreeRTOS 设计和实施标准不允许在中断服务例程内或在禁用中断时执行非确定性操作。

The FreeRTOS design and implementation standard does not permit non-deterministic operations to be performed inside an interrupt service routine, or when interrupts are disabled. For that reason, xEventGroupSetBitsFromISR() does not set event bits directly inside the interrupt service routine, but instead defers the action to the RTOS daemon task.

因此，xEventGroupSetBitsFromISR() 不会直接在中断服务例程中设置事件位，而是将操作推迟到 RTOS 守护程序任务。

```
 BaseType_t xEventGroupSetBitsFromISR( EventGroupHandle_t xEventGroup,
                                         const EventBits_t uxBitsToSet,
                                         BaseType_t *pxHigherPriorityTaskWoken );
```

**Listing 134. The xEventGroupSetBitsFromISR() API function prototype**

**Table 44, xEventGroupSetBitsFromISR() parameters and return value**

Parameter Name	Description
xEventGroup	<p>正在设置位的事件组的句柄。 事件组句柄将从对用于创建事件组的 xEventGroupCreate() 的调用中返回。</p> <p>The handle of the event group in which bits are being set. The event group handle will have been returned from the call to xEventGroupCreate() used to create the event group.</p>
uxBitsToSet	<p>一个位掩码，指定要在事件组中设置为 1 的事件位或事件位。事件组的值通过将事件组的现有值与 uxBitsToSet 中传递的值进行按位或运算来更新。</p> <p>A bit mask that specifies the event bit, or event bits, to set to 1 in the event group. The value of the event group is updated by bitwise ORing the event group's existing value with the value passed in uxBitsToSet.</p> <p>例如，将 uxBitsToSet 设置为 0x05 (二进制 0101) 将导致事件组中的事件位 3 和事件位 0 被设置（如果它们尚未设置），而事件组中的所有其他事件位保持不变。</p> <p>As an example, setting uxBitsToSet to 0x05 (binary 0101) will result in event bit 3 and event bit 0 in the event group becoming set (if they were not already set), while leaving all the other event bits in the event group unchanged.</p>

**Table 44, xEventGroupSetBitsFromISR() parameters and return value**

Parameter Name	Description
pxHigherPriorityTaskWoken	<p>xEventGroupSetBitsFromISR() 不会直接在中断服务例程中设置事件位，而是通过在定时器命令队列上发送命令将操作推迟到 RTOS 守护程序任务。</p> <p>xEventGroupSetBitsFromISR() does not set the event bits directly inside the interrupt service routine, but instead defers the action to the RTOS daemon task by sending a command if the daemon task was in the Blocked state to wait for data to become available on the timer command queue, then writing to the timer command queue will cause the daemon task to leave the Blocked state. If the priority of the daemon task is higher than the priority of the currently executing task (the task that was interrupted), then, internally, xEventGroupSetBitsFromISR() will set *pxHigherPriorityTaskWoken to pdTRUE.</p>
	<p>如果 xEventGroupSetBitsFromISR() 将此值设置为 pdTRUE，则应在退出中断之前执行上下文切换。这将确保中断直接返回到守护任务，因为守护任务将是最高优先级的就绪状态任务。</p> <p>If xEventGroupSetBitsFromISR() sets this value to pdTRUE, then a context switch should be performed before the interrupt is exited. This will ensure that the interrupt returns directly to the daemon task, as the daemon task will be the highest priority Ready state task.</p>
Returned Value	<p>There are two possible return values:</p> <ol style="list-style-type: none"> <li>1. pdPASS 仅当数据成功发送到计时器命令队列时，才会返回 pdPASS。 pdPASS will be returned only if data was successfully sent to the timer command queue.</li> <li>2. pdFALSE 如果由于队列已满而无法将“set bits”命令写入定时器命令队列，则将返回 pdFALSE。 pdFALSE will be returned if the ‘set bits’ command could not be written to the timer command queue because the queue was already full.</li> </ol>

## The xEventGroupWaitBits() API Function

xEventGroupWaitBits() API 函数允许任务读取事件组的值，如果尚未设置事件位，则可选择在阻塞状态等待事件组中的一个或多个事件位被设置。The xEventGroupWaitBits() API function allows a task to read the value of an event group, and optionally wait in the Blocked state for one or more event bits in the event group to become set, if the event bits are not already set.

```
EventBits_t xEventGroupWaitBits( const EventGroupHandle_t xEventGroup,
                                const EventBits_t uxBitsToWaitFor,
                                const BaseType_t xClearOnExit,
                                const BaseType_t xWaitForAllBits,
                                TickType_t xTicksToWait );
```

Listing 135. The xEventGroupWaitBits() API function prototype

调度器用来确定任务是否进入阻塞状态以及任务何时离开阻塞状态的条件称为“解除阻塞条件”。

The condition used by the scheduler to determine if a task will enter the Blocked state, and when a task will leave the Blocked state, is called the ‘unblock condition’. The unblock condition is specified by a combination of the uxBitsToWaitFor and the xWaitForAllBits parameter values:

- uxBitsToWaitFor 指定要测试事件组中的哪些事件位
  - xWaitForAllBits 指定是使用按位 OR 测试还是按位 AND 测试
- xWaitForAllBits 指定是否使用按位 OR 测试，或按位 AND 测试

如果在调用 xEventGroupWaitBits() 时满足解除阻塞条件，则任务不会进入阻塞状态。

A task will not enter the Blocked state if its unblock condition is met at the time xEventGroupWaitBits() is called.

将导致任务进入阻塞状态或退出阻塞状态的条件示例在表 45 中提供。

Examples of conditions that will result in a task either entering the Blocked state, or exiting the Blocked state, are provided in Table 45. Table 45 only shows the least significant four binary bits of the event group and uxBitsToWaitFor values—the other bits of those two values are assumed to be zero. 表 45 仅显示了事件组的最低有效四个二进制位和 uxBitsToWaitFor 值——这两个值的其他位假定为零。

Table 45, The Effect of the uxBitsToWaitFor and xWaitForAllBits Parameters

Existing Event Group Value	uxBitsToWaitFor value	xWaitForAllBits value	Resultant Behavior
0000	0101	pdFALSE	调用任务将进入阻塞状态，因为事件组中的位 0 或位 2 均未设置。 The calling task will enter the Blocked state because neither of bit 0 or bit 2 are set in the event group, and will leave the Blocked state when either bit 0 OR bit 2 are set in the event group.

Table 45, The Effect of the uxBitsToWaitFor and xWaitForAllBits Parameters

Existing Event Group Value	uxBitsToWaitFor value	xWaitForAllBits value	Resultant Behavior
0100	0101	pdTRUE	调用任务将进入阻塞状态，因为位 0 和位 2 未在事件组中设置。 The calling task will enter the Blocked state because bit 0 and bit 2 are not both set in the event group, and will leave the Blocked state when both bit 0 AND bit 2 are set in the event group.
0100	0110	pdFALSE	调用任务不会进入阻塞状态，因为 xWaitForAllBits 是 pdFALSE， 并且 uxBitsToWaitFor 指定的两个位之一已在事件组中设置。 The calling task will not enter the Blocked state because xWaitForAllBits is pdFALSE, and one of the two bits specified by uxBitsToWaitFor is already set in the event group.
0100	0110	pdTRUE	调用任务将进入阻塞状态，因为 xWaitForAllBits 为 pdTRUE， 并且 uxBitsToWaitFor 指定的两个位中只有一个已在事件组中设置。 state because xWaitForAllBits is pdTRUE, and only one of the two bits specified by uxBitsToWaitFor is already set in the event group. The task will leave the Blocked state when both bit 2 and bit 3 are set in the event group.

调用任务使用 uxBitsToWaitFor 参数指定要测试的位，并且调用任务可能需要在满足其解除阻塞条件后将这些位清零。

The calling task specifies bits to test using the uxBitsToWaitFor parameter, and it is likely the calling task will need to clear these bits back to zero after its unblock condition has been met.

Event bits can be cleared using the xEventGroupClearBits() API function, but using that

function to manually clear event bits will lead to race conditions in the application code if:

可以使用 xEventGroupClearBits() API 函数清除事件位，但在以下情况下，使用该函数手动清除事件位将导致应用程序代码出现竞争条件：

• 有多个任务使用同一个事件组。

- There is more than one task using the same event group.

由不同的任务或中断服务程序在事件组中设置位。

- Bits are set in the event group by a different task, or by an interrupt service routine.

提供 xClearOnExit 参数是为了避免这些潜在的竞争条件。

The xClearOnExit parameter is provided to avoid these potential race conditions. If

xClearOnExit is set to pdTRUE, then the testing and clearing of event bits appears to the

calling task to be an atomic operation (uninterruptable by other tasks or interrupts).

如果 xClearOnExit 设置为 pdTRUE，那么事件位的测试和清除对调用任务来说是一个原子操作（不会被其他任务或中断中断）。

Table 46, xEventGroupWaitBits() parameters and return value

Parameter Name	Description
xEventGroup	<p>包含正在读取的事件位的事件组的句柄。</p> <p>The handle of the event group that contains the event bits being read.</p> <p>事件组句柄将从对用于创建事件组的 xEventGroupCreate() 的调用中返回。</p> <p>The event group handle will have been returned from the call to xEventGroupCreate() used to create the event group.</p>
uxBitsToWaitFor	<p>一个位掩码，指定要在事件组中测试的一个或多个事件位。</p> <p>A bit mask that specifies the event bit, or event bits, to test in the event group.</p> <p>例如，如果调用任务想要等待事件组中的事件位 0 和/或事件位 2 被设置，则将 uxBitsToWaitFor 设置为 0x05 (二进制 0101)。更多示例请参见表 45。</p> <p>For example, if the calling task wants to wait for event bit 0 and/or event bit 2 to become set in the event group, then set uxBitsToWaitFor to 0x05 (binary 0101). Refer to Table 45 for further examples.</p>
xClearOnExit	<p>如果调用任务的解锁条件已经满足，并且 xClearOnExit 设置为 pdTRUE，那么在调用任务退出 xEventGroupWaitBits() API 函数之前，由 uxBitsToWaitFor 指定的事件位将在事件组中清零为 0。</p> <p>If the calling task's unlock condition has been met, and xClearOnExit is set to pdTRUE, then the event bits specified by uxBitsToWaitFor will be cleared back to 0 in the event group before the calling task exits the xEventGroupWaitBits() API function.</p> <p>如果 xClearOnExit 设置为 pdFALSE，则事件组中事件位的状态不会被 xEventGroupWaitBits() API 函数修改。</p> <p>If xClearOnExit is set to pdFALSE, then the state of the event bits in the event group are not modified by the xEventGroupWaitBits() API function.</p>

**Table 46, xEventGroupWaitBits() parameters and return value**

Parameter Name	Description
xWaitForAllBits	<p><code>uxBitsToWaitFor</code> 参数指定要在事件组中测试的事件位。</p> <p>The <code>uxBitsToWaitFor</code> parameter specifies the event bits to test in the <code>xWaitForAllBits</code> 指定当设置了 <code>uxBitsToWaitFor</code> 参数指定的一个或多个事件位时，调用任务是否应从阻塞状态中移除，event group. <code>xWaitForAllBits</code> specifies if the calling task should be removed from the Blocked state when one or more of the events bits specified by the <code>uxBitsToWaitFor</code> parameter are set, or only when all of 或仅当设置了 <code>uxBitsToWaitFor</code> 参数指定的所有事件位时。the event bits specified by the <code>uxBitsToWaitFor</code> parameter are set.</p> <p>如果 <code>xWaitForAllBits</code> 设置为 <code>pdFALSE</code>，则进入阻塞状态以等待其解除阻塞条件满足的任务将在 <code>uxBitsToWaitFor</code> 指定的任何位被设置（或 <code>xTicksToWait</code> 参数指定的超时到期）时离开阻塞状态（过期）。</p> <p>If <code>xWaitForAllBits</code> is set to <code>pdFALSE</code>, then a task that entered the Blocked state to wait for its unblock condition to be met will leave the Blocked state when any of the bits specified by <code>uxBitsToWaitFor</code> become set (or the time out specified by the <code>xTicksToWait</code> parameter expires).</p> <p>如果 <code>xWaitForAllBits</code> 设置为 <code>pdTRUE</code>，则进入 Blocked 状态以等待其解锁条件满足的任务将仅在 <code>uxBitsToWaitFor</code> 指定的所有位都设置（或 <code>xTicksToWait</code> 参数指定的超时）时才离开 Blocked 状态（过期）。</p> <p>If <code>xWaitForAllBits</code> is set to <code>pdTRUE</code>, then a task that entered the Blocked state to wait for its unblock condition to be met will only leave the Blocked state when all of the bits specified by <code>uxBitsToWaitFor</code> are set (or the time out specified by the <code>xTicksToWait</code> parameter expires).</p>
xTicksToWait	<p>Refer to Table 45 for examples.</p> <p>任务应保持在阻塞状态以等待满足其解除阻塞条件的最长时间。</p> <p>The maximum amount of time the task should remain in the Blocked state to wait for its unblock condition to be met.</p> <p>如果 <code>xTicksToWait</code> 为零，或者在调用 <code>xEventGroupWaitBits()</code> 时满足解锁条件，<code>xEventGroupWaitBits()</code> 将立即返回。<code>xEventGroupWaitBits()</code> will return immediately if <code>xTicksToWait</code> is zero, or the unblock condition is met at the time <code>xEventGroupWaitBits()</code> is called.</p> <p>块时间以滴答周期指定，因此它所代表的绝对时间取决于滴答频率。</p> <p>The block time is specified in tick periods, so the absolute time it 宏 <code>pdMS_TO_TICKS()</code> 可用于将以毫秒为单位的时间转换为以滴答为单位的时间。represents is dependent on the tick frequency. The macro <code>pdMS_TO_TICKS()</code> can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>将 <code>xTicksToWait</code> 设置为 <code>portMAX_DELAY</code> 将导致任务无限期等待（不会超时），前提是 在 <code>FreeRTOSConfig.h</code> 中将 <code>INCLUDE_vTaskSuspend</code> 设置为 1。</p> <p>Setting <code>xTicksToWait</code> to <code>portMAX_DELAY</code> will cause the task to wait indefinitely (without timing out), provided <code>INCLUDE_vTaskSuspend</code> is set to 1 in <code>FreeRTOSConfig.h</code>.</p>

**Table 46, xEventGroupWaitBits() parameters and return value**

Parameter Name	Description
Returned Value	<p>如果 <code>xEventGroupWaitBits()</code> 因为调用任务的解锁条件被满足而返回，          If <code>xEventGroupWaitBits()</code> returned because the calling task's unblock          那么返回值是调用任务的解锁条件满足时事件组的值（如果 <code>xClearOnExit</code> 为 <code>pdTRUE</code>，则在任何位自动清除之前）。          condition was met, then the returned value is the value of the event group          at the time the calling task's unblock condition was met (before any bits          were automatically cleared if <code>xClearOnExit</code> was <code>pdTRUE</code>). In this case the          在这种情况下，返回的值也将满足解锁条件。          returned value will also meet the unblock condition.</p> <p>如果 <code>xEventGroupWaitBits()</code> 是因为 <code>xTicksToWait</code> 参数指定的出块时间到期而返回的，那么返回值就是出块时间到期时事件组的值。          If <code>xEventGroupWaitBits()</code> returned because the block time specified by the  <code>xTicksToWait</code> parameter expired, then the returned value is the value of          the event group at the time the block time expired. In this case the          在这种情况下，返回值将不满足解锁条件。          returned value will not meet the unblock condition.</p>

## Example 22. Experimenting with event groups 试验事件组

This example demonstrates how to: 此示例演示如何：

- Create an event group. 创建一个事件组。  
通过中断服务程序设置事件组中的位。
- Set bits in an event group from an interrupt service routine.  
设置来自任务的事件组中的位。
- Set bits in an event group from a task.  
阻止事件组。
- Block on an event group.

`xEventGroupWaitBits()` `xWaitForAllBits` 参数的效果通过首先执行 `xWaitForAllBits` 设置为 `pdFALSE` 的示例来演示，  
 The effect of the `xEventGroupWaitBits()` `xWaitForAllBits` parameter is demonstrated by first  
 executing the example with `xWaitForAllBits` set to `pdFALSE`, and then executing the example  
 然后在 `xWaitForAllBits` 设置为 `pdTRUE` 的情况下执行示例。  
 with `xWaitForAllBits` set to `pdTRUE`.

事件位 0 和事件位 1 从任务中设置。事件位 2 通过中断服务程序设置。

Event bit 0 and event bit 1 are set from a task. Event bit 2 is set from an interrupt service routine. These three bits are given descriptive names using the `#define` statements shown in Listing 136. 使用清单 136 中所示的 `#define` 语句为这三位指定描述性名称。

---

```
/* Definitions for the event bits in the event group. */
#define mainFIRST_TASK_BIT  ( 1UL << 0UL ) /* Event bit 0, which is set by a task. */
#define mainSECOND_TASK_BIT ( 1UL << 1UL ) /* Event bit 1, which is set by a task. */
#define mainISR_BIT         ( 1UL << 2UL ) /* Event bit 2, which is set by an ISR. */
```

---

**Listing 136. Event bit definitions used in Example 22**

清单 137 显示了设置事件位 0 和事件位 1 的任务的实现。

Listing 137 shows the implementation of the task that sets event bit 0 and event bit 1. It sits in a loop, repeatedly setting one bit, then the other, with a delay of 200 milliseconds between each call to xEventGroupSetBits(). A string is printed out before each bit is set to allow the sequence of execution to be seen in the console.

```
static void vEventBitSettingTask( void *pvParameters )
{
const TickType_t xDelay200ms = pdMS_TO_TICKS( 200UL ), xDontBlock = 0;

for( ;; )
{
    /* Delay for a short while before starting the next loop. */
    vTaskDelay( xDelay200ms );

    /* Print out a message to say event bit 0 is about to be set by the task,
     * then set event bit 0. */
    vPrintString( "Bit setting task -\t about to set bit 0.\r\n" );
    xEventGroupSetBits( xEventGroup, mainFIRST_TASK_BIT );

    /* Delay for a short while before setting the other bit. */
    vTaskDelay( xDelay200ms );

    /* Print out a message to say event bit 1 is about to be set by the task,
     * then set event bit 1. */
    vPrintString( "Bit setting task -\t about to set bit 1.\r\n" );
    xEventGroupSetBits( xEventGroup, mainSECOND_TASK_BIT );
}
}
```

Listing 137. The task that sets two bits in the event group in Example 22

清单 138 显示了在事件组中设置位 2 的中断服务例程的实现。同样，在设置位之前打印出一个字符串，以允许在控制台中看到执行顺序。

Listing 138 shows the implementation of the interrupt service routine that sets bit 2 in the event group. Again, a string is printed out before the bit is set to allow the sequence of execution to be seen in the console. In this case however, because console output should not be performed directly in an interrupt service routine, xTimerPendFunctionCallFromISR() is used to perform the output in the context of the RTOS daemon task.

与前面的示例一样，中断服务程序由一个强制软件中断的简单周期性任务触发。

As in previous examples, the interrupt service routine is triggered by a simple periodic task that forces a software interrupt. In this example, the interrupt is generated every 500 milliseconds. 在此示例中，每 500 毫秒生成一次中断。

```
static uint32_t ulEventBitSettingISR( void )
{
/* The string is not printed within the interrupt service routine, but is instead
sent to the RTOS daemon task for printing. It is therefore declared static to ensure
the compiler does not allocate the string on the stack of the ISR, as the ISR's stack
frame will not exist when the string is printed from the daemon task. */
static const char *pcString = "Bit setting ISR -\t about to set bit 2.\r\n";
 BaseType_t xHigherPriorityTaskWoken = pdFALSE;

/* Print out a message to say bit 2 is about to be set. Messages cannot be
printed from an ISR, so defer the actual output to the RTOS daemon task by
pending a function call to run in the context of the RTOS daemon task. */
xTimerPendFunctionCallFromISR( vPrintStringFromDaemonTask,
                               ( void * ) pcString,
                               0,
                               &xHigherPriorityTaskWoken );

/* Set bit 2 in the event group. */
xEventGroupSetBitsFromISR( xEventGroup, mainISR_BIT, &xHigherPriorityTaskWoken );

/* xTimerPendFunctionCallFromISR() and xEventGroupSetBitsFromISR() both write to
the timer command queue, and both used the same xHigherPriorityTaskWoken
variable. If writing to the timer command queue resulted in the RTOS daemon task
leaving the Blocked state, and if the priority of the RTOS daemon task is higher
than the priority of the currently executing task (the task this interrupt
interrupted) then xHigherPriorityTaskWoken will have been set to pdTRUE.
.

xHigherPriorityTaskWoken is used as the parameter to portYIELD_FROM_ISR(). If
xHigherPriorityTaskWoken equals pdTRUE, then calling portYIELD_FROM_ISR() will
request a context switch. If xHigherPriorityTaskWoken is still pdFALSE, then
calling portYIELD_FROM_ISR() will have no effect.

The implementation of portYIELD_FROM_ISR() used by the Windows port includes a
return statement, which is why this function does not explicitly return a
value. */
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

#### Listing 138. The ISR that sets bit 2 in the event group in Example 22

清单 139 显示了调用 `xEventGroupWaitBits()` 以阻塞事件组的任务的实现。该任务为事件组中设置的每个位打印一个字符串  
Listing 139 show the implementation of the task that calls `xEventGroupWaitBits()` to block on the event group. The task prints out a string for each bit that is set in the event group.

The `xEventGroupWaitBits()` `xClearOnExit` parameter is set to `pdTRUE`, so the event bit, or bits, that caused the call to `xEventGroupWaitBits()` to return will be cleared automatically before `xEventGroupWaitBits()` returns.

`xEventGroupWaitBits()` `xClearOnExit` 参数设置为 `pdTRUE`，因此导致调用 `xEventGroupWaitBits()` 返回的事件位将在 `xEventGroupWaitBits()` 返回之前自动清除。

---

```
static void vEventBitReadingTask( void *pvParameters )
{
    EventBits_t xEventGroupValue;
    const EventBits_t xBitsToWaitFor = ( mainFIRST_TASK_BIT |
                                         mainSECOND_TASK_BIT |
                                         mainISR_BIT );

    for( ;; )
    {
        /* 阻止以等待事件位在事件组中设置。
         * Block to wait for event bits to become set within the event group. */
        xEventGroupValue = xEventGroupWaitBits( /* The event group to read. */
                                              xEventGroup,
                                              /* Bits to test. */
                                              xBitsToWaitFor,
                                              /* Clear bits on exit if the
                                                 unblock condition is met. */
                                              pdTRUE,
                                              /* Don't wait for all bits. This
                                                 parameter is set to pdTRUE for the
                                                 second execution. */
                                              pdFALSE,
                                              /* Don't time out. */
                                              portMAX_DELAY );

        /* Print a message for each bit that was set. */
        if( ( xEventGroupValue & mainFIRST_TASK_BIT ) != 0 )
        {
            vPrintString( "Bit reading task -\t Event bit 0 was set\r\n" );
        }

        if( ( xEventGroupValue & mainSECOND_TASK_BIT ) != 0 )
        {
            vPrintString( "Bit reading task -\t Event bit 1 was set\r\n" );
        }

        if( ( xEventGroupValue & mainISR_BIT ) != 0 )
        {
            vPrintString( "Bit reading task -\t Event bit 2 was set\r\n" );
        }
    }
}
```

---

**Listing 139. The task that blocks to wait for event bits to become set in Example 22**

main() 函数在启动调度程序之前创建事件组和任务。有关其实现，请参见清单 140。

The main() function creates the event group, and the tasks, before starting the scheduler. See Listing 140 for its implementation. The priority of the task that reads from the event group is higher than the priority of the task that writes to the event group, ensuring the reading task will pre-empt the writing task each time the reading task's unblock condition is met.

从事件组中读取的任务的优先级高于写入事件组的任务的优先级，保证每次满足读取任务的解锁条件时，读取任务都会抢占写入任务。

```
int main( void )
{
    /* Before an event group can be used it must first be created. */
    xEventGroup = xEventGroupCreate();

    /* Create the task that sets event bits in the event group. */
    xTaskCreate( vEventBitSettingTask, "Bit Setter", 1000, NULL, 1, NULL );

    /* Create the task that waits for event bits to get set in the event group. */
    xTaskCreate( vEventBitReadingTask, "Bit Reader", 1000, NULL, 2, NULL );

    /* Create the task that is used to periodically generate a software interrupt. */
    xTaskCreate( vInterruptGenerator, "Int Gen", 1000, NULL, 3, NULL );

    /* Install the handler for the software interrupt. The syntax necessary to do
    this is dependent on the FreeRTOS port being used. The syntax shown here can
    only be used with the FreeRTOS Windows port, where such interrupts are only
    simulated. */
    vPortSetInterruptHandler( mainINTERRUPT_NUMBER, ulEventBitSettingISR );


    /* Start the scheduler so the created tasks start executing. */
    vTaskStartScheduler();

    /* The following line should never be reached. */
    for( ; );
    return 0;
}
```

Listing 140. Creating the event group and tasks in Example 22

图 73 显示了在 `xEventGroupWaitBits()` `xWaitForAllBits` 参数设置为 `pdFALSE` 的情况下执行示例 22 时产生的输出。The output produced when Example 22 is executed with the `xEventGroupWaitBits()` `xWaitForAllBits` parameter set to `pdFALSE` is shown in Figure 73. In Figure 73, it can be seen that, because the `xWaitForAllBits` parameter in the call to `xEventGroupWaitBits()` was set to `pdFALSE`, the task that reads from the event group leaves the Blocked state and executes immediately every time any of the event bits are set.

在图 73 中，可以看出，由于 `xEventGroupWaitBits()` 调用中的 `xWaitForAllBits` 参数设置为 `pdFALSE`，因此从事件组读取的任务离开阻塞状态并在每次设置任何事件位时立即执行。

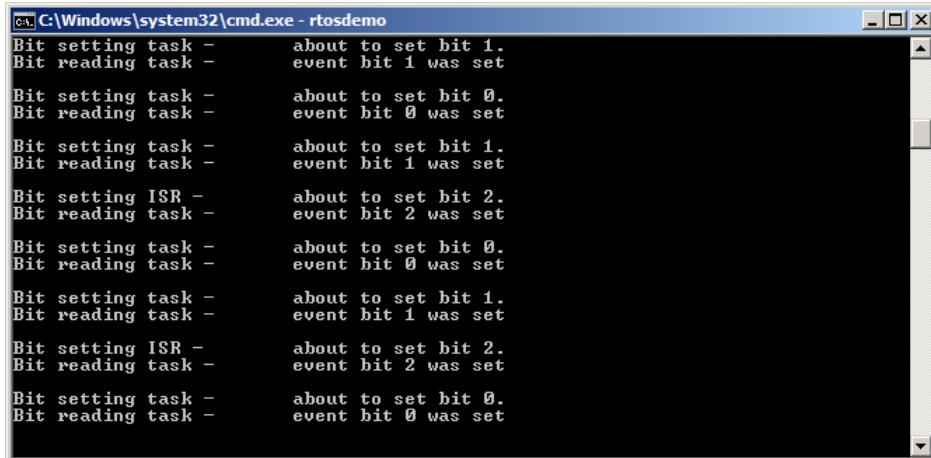

```
C:\Windows\system32\cmd.exe - rtosdemo
Bit setting task -      about to set bit 1.
Bit reading task -      event bit 1 was set
Bit setting task -      about to set bit 0.
Bit reading task -      event bit 0 was set
Bit setting task -      about to set bit 1.
Bit reading task -      event bit 1 was set
Bit setting ISR -       about to set bit 2.
Bit reading task -      event bit 2 was set
Bit setting task -      about to set bit 0.
Bit reading task -      event bit 0 was set
Bit setting task -      about to set bit 1.
Bit reading task -      event bit 1 was set
Bit setting ISR -       about to set bit 2.
Bit reading task -      event bit 2 was set
Bit setting task -      about to set bit 0.
Bit reading task -      event bit 0 was set
```

Figure 73 The output produced when Example 22 is executed with `xWaitForAllBits` set to `pdFALSE`

图 74 显示了在 xEventGroupWaitBits() xWaitForAllBits 参数设置为 pdTRUE 的情况下执行示例 22 时产生的输出。  
The output produced when Example 22 is executed with the xEventGroupWaitBits()  
xWaitForAllBits parameter set to pdTRUE is shown in Figure 74. In Figure 74 it can be seen  
that, because the xWaitForAllBits parameter was set to pdTRUE, the task that reads from the  
event group only leaves the Blocked state after all three of the event bits are set.

在图 74 中可以看出，由于 xWaitForAllBits 参数设置为 pdTRUE，从事件组读取的任务仅在所有三个事件位都设置后才离开阻塞状态。

```
C:\Windows\system32\cmd.exe - rtosdemo
Bit setting task -      about to set bit 1.
Bit setting task -      about to set bit 0.
Bit setting ISR -      about to set bit 2.
Bit reading task -     event bit 0 was set
Bit reading task -     event bit 1 was set
Bit reading task -     event bit 2 was set

Bit setting task -      about to set bit 1.
Bit setting task -      about to set bit 0.
Bit setting ISR -      about to set bit 2.
Bit reading task -     event bit 0 was set
Bit reading task -     event bit 1 was set
Bit reading task -     event bit 2 was set

Bit setting task -      about to set bit 1.
Bit setting task -      about to set bit 0.
Bit setting ISR -      about to set bit 2.
Bit reading task -     event bit 0 was set
Bit reading task -     event bit 1 was set
Bit reading task -     event bit 2 was set

Bit setting task -      about to set bit 0.
Bit setting task -      about to set bit 1.
```

Figure 74 The output produced when Example 22 is executed with xWaitForAllBits  
set to pdTRUE

### 使用事件组的任务同步

## 8.4 Task Synchronization Using an Event Group

有时，应用程序的设计需要两个或多个任务相互同步。

Sometimes the design of an application requires two or more tasks to synchronize with each other. For example, consider a design where Task A receives an event, then delegates some

of the processing necessitated by the event to three other tasks: Task B, Task C and Task D. 如果直到任务 B、C 和 D 都完成处理前一个事件之前，任务 A 无法接收另一个事件，那么所有四个任务都需要相互同步。

If Task A cannot receive another event until tasks B, C and D have all completed processing the previous event, then all four tasks will need to synchronize with each other. Each task's 每个任务的同步点将在该任务完成其处理之后，并且在其他每个任务完成相同之前无法继续进行。 synchronization point will be after that task has completed its processing, and cannot proceed further until each of the other tasks have done the same. Task A can only receive another 任务 A 只能在所有四个任务都达到它们的同步点后才能接收另一个事件。 event after all four tasks have reached their synchronization point.

在 FreeRTOS+TCP 演示项目之一中可以找到需要此类任务同步的不太抽象的示例。

A less abstract example of the need for this type of task synchronization is found in one of the FreeRTOS+TCP demonstration projects. The demonstration shares a TCP socket between 该演示在两个任务之间共享一个 TCP 套接字；一个任务向套接字发送数据，另一个任务从同一个套接字接收数据 two tasks; one task sends data to the socket, and a different task receives data from the same 在确定另一个任务不会再次尝试访问该套接字之前，任一任务关闭 TCP 套接字是不安全的。 socket<sup>1</sup>. It is not safe for either task to close the TCP socket until it is sure the other task will not attempt to access the socket again. If either of the two tasks wishes to close the socket, 如果两个任务中的任何一个希望关闭套接字，那么它必须通知另一个任务它的意图，然后等待另一个任务停止使用套接字才能继续。 then it must inform the other task of its intent, and then wait for the other task to stop using the 清单 140 中所示的伪代码演示了向希望关闭套接字的套接字发送数据的任务的场景。 socket before proceeding. The scenario where it is the task that sends data to the socket that wishes to close the socket is demonstrated by the pseudo code shown in Listing 140.

清单 140 演示的场景很简单，因为只有两个任务需要相互同步，但很容易看出场景会变得更加复杂，The scenario demonstrated by Listing 140 is trivial, as there are only two tasks that need to synchronize with each other, but it is easy to see how the scenario would become more complex, and require more tasks to join the synchronization, if other tasks were performing processing that was dependent on the socket being open.

<sup>1</sup> At the time of writing, this is the only way a single FreeRTOS+TCP socket can be shared between tasks.

---

```

void SocketTxTask( void *pvParameters )
{
xSocket_t xSocket;
uint32_t ulTxCount = 0UL;

    for( ; ; )
    {
        /* Create a new socket. This task will send to this socket, and another task will receive
        from this socket. */
        xSocket = FreeRTOS_socket( ... );

        /* Connect the socket. */
        FreeRTOS_connect( xSocket, ... );

        /* Use a queue to send the socket to the task that receives data. */
        xQueueSend( xSocketPassingQueue, &xSocket, portMAX_DELAY );

        /* Send 1000 messages to the socket before closing the socket. */
        for( ulTxCount = 0; ulTxCount < 1000; ulTxCount++ )
        {
            if( FreeRTOS_send( xSocket, ... ) < 0 )
            {
                /* Unexpected error - exit the loop, after which the socket will be closed. */
                break;
            }
        }

        /* Let the Rx task know the Tx task wants to close the socket. */
        TxTaskWantsToCloseSocket();

        /* This is the Tx task's synchronization point. The Tx task waits here for the Rx task to
        reach its synchronization point. The Rx task will only reach its synchronization point
        when it is no longer using the socket, and the socket can be closed safely. */
        xEventGroupSync( ... );
    }

    /*-----*/
}

void SocketRxTask( void *pvParameters )
{
xSocket_t xSocket;

    for( ; ; )
    {
        /* Wait to receive a socket that was created and connected by the Tx task. */
        xQueueReceive( xSocketPassingQueue, &xSocket, portMAX_DELAY );

        /* Keep receiving from the socket until the Tx task wants to close the socket. */
        while( TxTaskWantsToCloseSocket() == pdFALSE )
        {
            /* Receive then process data. */
            FreeRTOS_recv( xSocket, ... );
            ProcessReceivedData();
        }

        /* This is the Rx task's synchronization point - it only reaches here when it is no longer
        using the socket, and it is therefore safe for the Tx task to close the socket. */
        xEventGroupSync( ... );
    }
}

```

---

**Listing 141.** Pseudo code for two tasks that synchronize with each other to ensure a shared TCP socket is no longer in use by either task before the socket is closed

An event group can be used to create a synchronization point:

- Each task that must participate in the synchronization is assigned a unique event bit within the event group.
- Each task sets its own event bit when it reaches the synchronization point.
- Having set its own event bit, each task blocks on the event group to wait for the event bits that represent all the other synchronizing tasks to also become set.

However, the `xEventGroupSetBits()` and `xEventGroupWaitBits()` API functions cannot be used in this scenario. If they were used, then the setting of a bit (to indicate a task had reached its synchronization point) and the testing of bits (to determine if the other synchronizing tasks had reached their synchronization point) would be performed as two separate operations. To see why that would be a problem, consider a scenario where Task A, Task B and Task C attempt to synchronize using an event group:

1. Task A and Task B have already reached the synchronization point, so their event bits are set in the event group, and they are in the Blocked state to wait for task C's event bit to also become set.
2. Task C reaches the synchronization point, and uses `xEventGroupSetBits()` to set its bit in the event group. As soon as Task C's bit is set, Task A and Task B leave the Blocked state, and clear all three event bits.
3. Task C then calls `xEventGroupWaitBits()` to wait for all three event bits to become set, but by that time, all three event bits have already been cleared, Task A and Task B have left their respective synchronization points, and so the synchronization has failed.

To successfully use an event group to create a synchronization point, the setting of an event bit, and the subsequent testing of event bits, must be performed as a single uninterruptable operation. The `xEventGroupSync()` API function is provided for that purpose.

### The `xEventGroupSync()` API Function

`xEventGroupSync()` is provided to allow two or more tasks to use an event group to synchronize with each other. The function allows a task to set one or more event bits in an

event group, then wait for a combination of event bits to become set in the same event group, as a single uninterruptable operation.

The `xEventGroupSync()` `uxBitsToWaitFor` parameter specifies the calling task's unblock condition. The event bits specified by `uxBitsToWaitFor` will be cleared back to zero before `xEventGroupSync()` returns, if `xEventGroupSync()` returned because the unblock condition had been met.

---

```
EventBits_t xEventGroupSync( EventGroupHandle_t xEventGroup,
                            const EventBits_t uxBitsToSet,
                            const EventBits_t uxBitsToWaitFor,
                            TickType_t xTicksToWait );
```

---

**Listing 142. The `xEventGroupSync()` API function prototype**

**Table 47, `xEventGroupSync()` parameters and return value**

Parameter Name	Description
<code>xEventGroup</code>	The handle of the event group in which event bits are to be set, and then tested. The event group handle will have been returned from the call to <code>xEventGroupCreate()</code> used to create the event group.
<code>uxBitsToSet</code>	A bit mask that specifies the event bit, or event bits, to set to 1 in the event group. The value of the event group is updated by bitwise ORing the event group's existing value with the value passed in <code>uxBitsToSet</code> .  As an example, setting <code>uxBitsToSet</code> to 0x04 (binary 0100) will result in event bit 3 becoming set (if it was not already set), while leaving all the other event bits in the event group unchanged.
<code>uxBitsToWaitFor</code>	A bit mask that specifies the event bit, or event bits, to test in the event group.  For example, if the calling task wants to wait for event bits 0, 1 and 2 to become set in the event group, then set <code>uxBitsToWaitFor</code> to 0x07 (binary 111).

**Table 47, xEventGroupSync() parameters and return value**

Parameter Name	Description
xTicksToWait	<p>The maximum amount of time the task should remain in the Blocked state to wait for its unblock condition to be met.</p> <p>xEventGroupSync() will return immediately if xTicksToWait is zero, or the unblock condition is met at the time xEventGroupSync() is called.</p> <p>The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds into a time specified in ticks.</p> <p>Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out), provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.</p>
Returned Value	<p>If xEventGroupSync() returned because the calling task's unblock condition was met, then the returned value is the value of the event group at the time the calling task's unblock condition was met (before any bits were automatically cleared back to zero). In this case the returned value will also meet the calling task's unblock condition.</p> <p>If xEventGroupSync() returned because the block time specified by the xTicksToWait parameter expired, then the returned value is the value of the event group at the time the block time expired. In this case the returned value will not meet the calling task's unblock condition.</p>

### **Example 23. Synchronizing tasks**

Example 23 uses xEventGroupSync() to synchronize three instances of a single task implementation. The task parameter is used to pass into each instance the event bit the task will set when it calls xEventGroupSync().

The task prints a message before calling xEventGroupSync(), and again after the call to xEventGroupSync() has returned. Each message includes a time stamp. This allows the

sequence of execution to be observed in the output produced. A pseudo random delay is used to prevent all the tasks reaching the synchronization point at the same time.

See Listing 143 for the task's implementation.

```
static void vSyncingTask( void *pvParameters )
{
    const TickType_t xMaxDelay = pdMS_TO_TICKS( 4000UL );
    const TickType_t xMinDelay = pdMS_TO_TICKS( 200UL );
    TickType_t xDelayTime;
    EventBits_t uxThisTasksSyncBit;
    const EventBits_t uxAllSyncBits = ( mainFIRST_TASK_BIT |
                                         mainSECOND_TASK_BIT |
                                         mainTHIRD_TASK_BIT );

    /* Three instances of this task are created - each task uses a different event
     * bit in the synchronization. The event bit to use is passed into each task
     * instance using the task parameter. Store it in the uxThisTasksSyncBit
     * variable. */
    uxThisTasksSyncBit = ( EventBits_t ) pvParameters;

    for( ; ; )
    {
        /* Simulate this task taking some time to perform an action by delaying for a
         * pseudo random time. This prevents all three instances of this task reaching
         * the synchronization point at the same time, and so allows the example's
         * behavior to be observed more easily. */
        xDelayTime = ( rand() % xMaxDelay ) + xMinDelay;
        vTaskDelay( xDelayTime );

        /* Print out a message to show this task has reached its synchronization
         * point. pcTaskGetTaskName() is an API function that returns the name assigned
         * to the task when the task was created. */
        vPrintTwoStrings( pcTaskGetTaskName( NULL ), "reached sync point" );

        /* Wait for all the tasks to have reached their respective synchronization
         * points. */
        xEventGroupSync( /* The event group used to synchronize. */
                         xEventGroup,
                         /* The bit set by this task to indicate it has reached the
                          * synchronization point. */
                         uxThisTasksSyncBit,
                         /* The bits to wait for, one bit for each task taking part
                          * in the synchronization. */
                         uxAllSyncBits,
                         /* Wait indefinitely for all three tasks to reach the
                          * synchronization point. */
                         portMAX_DELAY );

        /* Print out a message to show this task has passed its synchronization
         * point. As an indefinite delay was used the following line will only be
         * executed after all the tasks reached their respective synchronization
         * points. */
        vPrintTwoStrings( pcTaskGetTaskName( NULL ), "exited sync point" );
    }
}
```

---

Listing 143. The implementation of the task used in Example 23

The main() function creates the event group, creates all three tasks, and then starts the scheduler. See Listing 144 for its implementation.

---

```
/* Definitions for the event bits in the event group. */
#define mainFIRST_TASK_BIT ( 1UL << 0UL ) /* Event bit 0, set by the first task. */
#define mainSECOND_TASK_BIT( 1UL << 1UL ) /* Event bit 1, set by the second task. */
#define mainTHIRD_TASK_BIT ( 1UL << 2UL ) /* Event bit 2, set by the third task. */

/* Declare the event group used to synchronize the three tasks. */
EventGroupHandle_t xEventGroup;

int main( void )
{
    /* Before an event group can be used it must first be created. */
    xEventGroup = xEventGroupCreate();

    /* Create three instances of the task. Each task is given a different name,
    which is later printed out to give a visual indication of which task is
    executing. The event bit to use when the task reaches its synchronization point
    is passed into the task using the task parameter. */
    xTaskCreate( vSyncingTask, "Task 1", 1000, mainFIRST_TASK_BIT, 1, NULL );
    xTaskCreate( vSyncingTask, "Task 2", 1000, mainSECOND_TASK_BIT, 1, NULL );
    xTaskCreate( vSyncingTask, "Task 3", 1000, mainTHIRD_TASK_BIT, 1, NULL );

    /* Start the scheduler so the created tasks start executing. */
    vTaskStartScheduler();

    /* As always, the following line should never be reached. */
    for( ; );
    return 0;
}
```


---

Listing 144. The main() function used in Example 23

The output produced when Example 23 is executed is shown in Figure 75. It can be seen that, even though each task reaches the synchronization point at a different (pseudo random) time, each task exits the synchronization point at the same time<sup>1</sup> (which is the time at which the last task reached the synchronization point).

---

<sup>1</sup> Figure 75 shows the example running in the FreeRTOS Windows port, which does not provide true real time behavior (especially when using Windows system calls to print to the console), and will therefore show some timing variation.

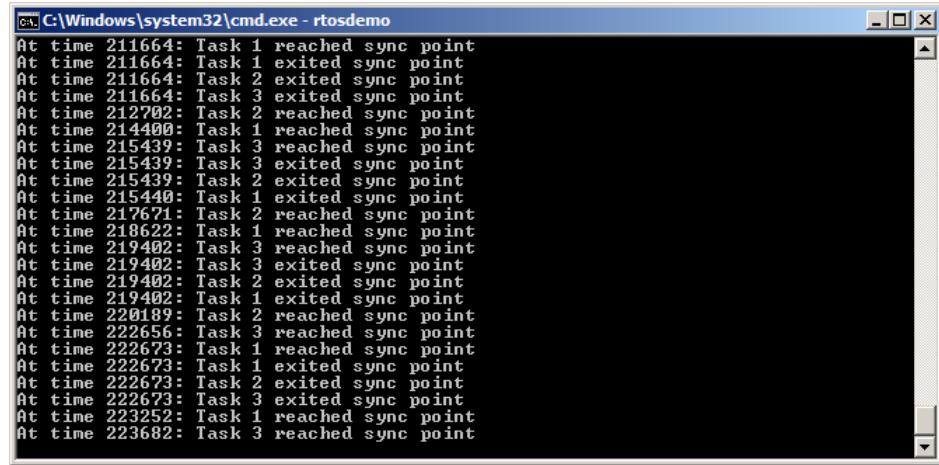

```
C:\Windows\system32\cmd.exe - rtosdemo
At time 211664: Task 1 reached sync point
At time 211664: Task 1 exited sync point
At time 211664: Task 2 exited sync point
At time 211664: Task 3 exited sync point
At time 212702: Task 2 reached sync point
At time 214400: Task 1 reached sync point
At time 215439: Task 3 reached sync point
At time 215439: Task 3 exited sync point
At time 215439: Task 2 exited sync point
At time 215440: Task 1 exited sync point
At time 217671: Task 2 reached sync point
At time 218622: Task 1 reached sync point
At time 219402: Task 3 reached sync point
At time 219402: Task 3 exited sync point
At time 219402: Task 2 exited sync point
At time 219402: Task 1 exited sync point
At time 220189: Task 2 reached sync point
At time 222656: Task 3 reached sync point
At time 222673: Task 1 reached sync point
At time 222673: Task 1 exited sync point
At time 222673: Task 2 exited sync point
At time 222673: Task 3 exited sync point
At time 223252: Task 1 reached sync point
At time 223682: Task 3 reached sync point
```

Figure 75 The output produced when Example 23 is executed

# Chapter 9

## Task Notifications

---

## 9.1 Chapter Introduction and Scope

It has been seen that applications that use FreeRTOS are structured as a set of independent tasks, and that it is likely that these autonomous tasks will have to communicate with each other so that, collectively, they can provide useful system functionality.

### Communicating Through Intermediary Objects

This book has already described various ways in which tasks can communicate with each other. The methods described so far have required the creation of a communication object. Examples of communication objects include queues, event groups, and various different types of semaphore.

When a communication object is used, events and data are not sent directly to a receiving task, or a receiving ISR, but are instead sent to the communication object. Likewise, tasks and ISRs receive events and data from the communication object, rather than directly from the task or ISR that sent the event or data. This is depicted in Figure 76.


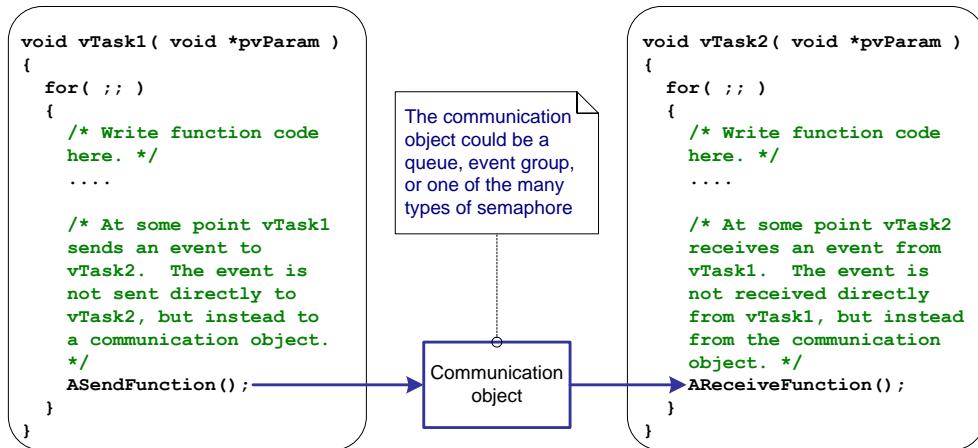


Figure 76 A communication object being used to send an event from one task to another

### Task Notifications—Direct to Task Communication

'Task Notifications' allow tasks to interact with other tasks, and to synchronize with ISRs, without the need for a separate communication object. By using a task notification, a task or ISR can send an event directly to the receiving task. This is depicted in Figure 77.

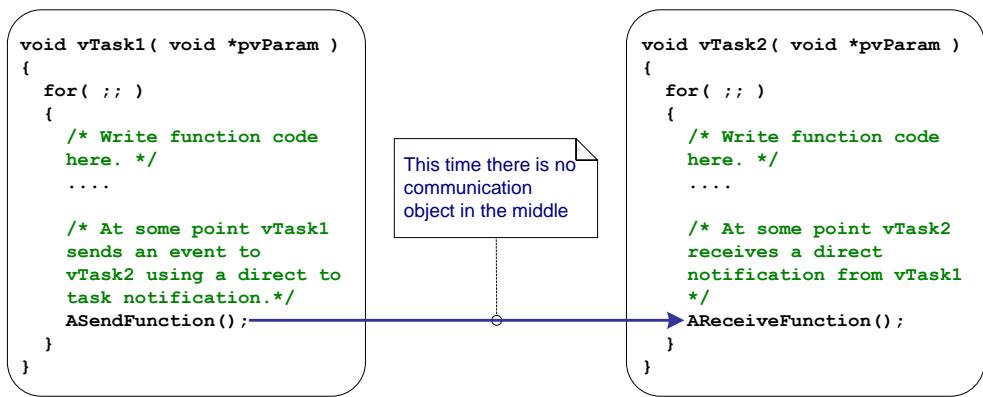

**Figure 77 A task notification used to send an event directly from one task to another**

Task notification functionality is optional. To include task notification functionality set configUSE\_TASK\_NOTIFICATIONS to 1 in FreeRTOSConfig.h.

When configUSE\_TASK\_NOTIFICATIONS is set to 1, each task has a ‘Notification State’, which can be either ‘Pending’ or ‘Not-Pending’, and a ‘Notification Value’, which is a 32-bit unsigned integer. When a task receives a notification, its notification state is set to pending. When a task reads its notification value, its notification state is set to not-pending.

A task can wait in the Blocked state, with an optional time out, for its notification state to become pending.

## Scope

This chapter aims to give readers a good understanding of:

- A task’s notification state and notification value.
- How and when a task notification can be used in place of a communication object, such as a semaphore.
- The advantages of using a task notification in place of a communication object.

## 9.2 Task Notifications; Benefits and Limitations

---

### Performance Benefits of Task Notifications

Using a task notification to send an event or data to a task is significantly faster than using a queue, semaphore or event group to perform an equivalent operation.

### RAM Footprint Benefits of Task Notifications

Likewise, using a task notification to send an event or data to a task requires significantly less RAM than using a queue, semaphore or event group to perform an equivalent operation. This is because each communication object (queue, semaphore or event group) must be created before it can be used, whereas enabling task notification functionality has a fixed overhead of just eight bytes of RAM per task.

### Limitations of Task Notifications

Task notifications are faster and use less RAM than communication objects, but task notifications cannot be used in all scenarios. This section documents the scenarios in which a task notification cannot be used:

- Sending an event or data to an ISR

Communication objects can be used to send events and data from an ISR to a task, and from a task to an ISR.

Task notifications can be used to send events and data from an ISR to a task, but they cannot be used to send events or data from a task to an ISR.

- Enabling more than one receiving task

A communication object can be accessed by any task or ISR that knows its handle (which might be a queue handle, semaphore handle, or event group handle). Any number of tasks and ISRs can process events or data sent to any given communication object.

Task notifications are sent directly to the receiving task, so can only be processed by the task to which the notification is sent. However, this is rarely a limitation in practical cases because, while it is common to have multiple tasks and ISRs sending to the same

communication object, it is rare to have multiple tasks and ISRs receiving from the same communication object.

- Buffering multiple data items

A queue is a communication object that can hold more than one data item at a time. Data that has been sent to the queue, but not yet received from the queue, is buffered inside the queue object.

Task notifications send data to a task by updating the receiving task's notification value. A task's notification value can only hold one value at a time.

- Broadcasting to more than one task

An event group is a communication object that can be used to send an event to more than one task at a time.

Task notifications are sent directly to the receiving task, so can only be processed by the receiving task.

- Waiting in the blocked state for a send to complete

If a communication object is temporarily in a state that means no more data or events can be written to it (for example, when a queue is full no more data can be sent to the queue), then tasks attempting to write to the object can optionally enter the Blocked state to wait for their write operation to complete.

If a task attempts to send a task notification to a task that already has a notification pending, then it is not possible for the sending task to wait in the Blocked state for the receiving task to reset its notification state. As will be seen, this is rarely a limitation in practical cases in which a task notification is used.

## 9.3 Using Task Notifications

---

### Task Notification API Options

Task notifications are a very powerful feature that can often be used in place of a binary semaphore, a counting semaphore, an event group, and sometimes even a queue. This wide range of usage scenarios can be achieved by using the `xTaskNotify()` API function to send a task notification, and the `xTaskNotifyWait()` API function to receive a task notification.

However, in the majority of cases, the full flexibility provided by the `xTaskNotify()` and `xTaskNotifyWait()` API functions is not required, and simpler functions would suffice. Therefore, the `xTaskNotifyGive()` API function is provided as a simpler but less flexible alternative to `xTaskNotify()`, and the `ulTaskNotifyTake()` API function is provided as a simpler but less flexible alternative to `xTaskNotifyWait()`.

### The `xTaskNotifyGive()` API Function

`xTaskNotifyGive()` sends a notification directly to a task, and increments (adds one to) the receiving task's notification value. Calling `xTaskNotifyGive()` will set the receiving task's notification state to pending, if it was not already pending.

The `xTaskNotifyGive()`<sup>1</sup> API function is provided to allow a task notification to be used as a lighter weight and faster alternative to a binary or counting semaphore.

---

```
BaseType_t xTaskNotifyGive( TaskHandle_t xTaskToNotify );
```

---

**Listing 145. The `xTaskNotifyGive()` API function prototype**

---

<sup>1</sup> `xTaskNotifyGive()` is actually implemented as macro, not a function. For simplicity it is referred to as a function throughout this book.

**Table 48. xTaskNotifyGive() parameters and return value**

Parameter Name/ Returned Value	Description
xTaskToNotify	The handle of the task to which the notification is being sent—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.
Returned value	xTaskNotifyGive() is a macro that calls xTaskNotify(). The parameters passed into xTaskNotify() by the macro are set such that pdPASS is the only possible return value. xTaskNotify() is described later in this book.

### The vTaskNotifyGiveFromISR() API Function

vTaskNotifyGiveFromISR() is a version of xTaskNotifyGive() that can be used in an interrupt service routine.

---

```
void vTaskNotifyGiveFromISR( TaskHandle_t xTaskToNotify,
                            BaseType_t *pxHigherPriorityTaskWoken );
```

---

**Listing 146. The vTaskNotifyGiveFromISR() API function prototype**

**Table 49. vTaskNotifyGiveFromISR() parameters and return value**

Parameter Name/ Returned Value	Description
xTaskToNotify	The handle of the task to which the notification is being sent—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.

**Table 49. vTaskNotifyGiveFromISR() parameters and return value**

Parameter Name/ Returned Value	Description
pxHigherPriorityTaskWoken	<p>If the task to which the notification is being sent is waiting in the Blocked state to receive a notification, then sending the notification will cause the task to leave the Blocked state.</p> <p>If calling vTaskNotifyGiveFromISR() causes a task to leave the Blocked state, and the unblocked task has a priority higher than the priority of the currently executing task (the task that was interrupted), then, internally, vTaskNotifyGiveFromISR() will set *pxHigherPriorityTaskWoken to pdTRUE.</p> <p>If vTaskNotifyGiveFromISR() sets this value to pdTRUE, then a context switch should be performed before the interrupt is exited. This will ensure that the interrupt returns directly to the highest priority Ready state task.</p> <p>As with all interrupt safe API functions, the pxHigherPriorityTaskWoken parameter must be set to pdFALSE before it is used.</p>

### The ulTaskNotifyTake() API Function

ulTaskNotifyTake() allows a task to wait in the Blocked state for its notification value to be greater than zero, and either decrements (subtracts one from) or clears the task's notification value before it returns.

The ulTaskNotifyTake() API function is provided to allow a task notification to be used as a lighter weight and faster alternative to a binary or counting semaphore.

---

```
uint32_t ulTaskNotifyTake( BaseType_t xClearCountOnExit, TickType_t xTicksToWait );
```

---

**Listing 147. The ulTaskNotifyTake() API function prototype**

**Table 50. ulTaskNotifyTake() parameters and return value**

Parameter Name/ Returned Value	Description
xClearCountOnExit	If xClearCountOnExit is set to pdTRUE, then the calling task's notification value will be cleared to zero before the call to ulTaskNotifyTake() returns.  If xClearCountOnExit is set to pdFALSE, and the calling task's notification value is greater than zero, then the calling task's notification value will be decremented before the call to ulTaskNotifyTake() returns.
xTicksToWait	The maximum amount of time the calling task should remain in the Blocked state to wait for its notification value to be greater than zero.  The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds to a time specified in ticks.  Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out), provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.

**Table 50. ulTaskNotifyTake() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	The returned value is the calling task's notification value <i>before</i> it was either cleared to zero or decremented, as specified by the value of the xClearCountOnExit parameter.
	If a block time was specified (xTicksToWait was not zero), and the return value is not zero, then it is possible the calling task was placed into the Blocked state, to wait for its notification value to be greater than zero, and its notification value was updated before the block time expired.
	If a block time was specified (xTicksToWait was not zero), and the return value is zero, then the calling task was placed into the Blocked state, to wait for its notification value to be greater than zero, but the specified block time expired before that happened.

#### **Example 24. Using a task notification in place of a semaphore, method 1**

Example 16 used a binary semaphore to unblock a task from within an interrupt service routine—effectively synchronizing the task with the interrupt. This example replicates the functionality of Example 16, but uses a direct to task notification in place of the binary semaphore.

Listing 148 shows the implementation of the task that is synchronized with the interrupt. The call to xSemaphoreTake() that was used in Example 16 has been replaced by a call to ulTaskNotifyTake().

The ulTaskNotifyTake() xClearCountOnExit parameter is set to pdTRUE, which results in the receiving task's notification value being cleared to zero before ulTaskNotifyTake() returns. It is therefore necessary to process all the events that are already available between each call to ulTaskNotifyTake(). In Example 16, because a binary semaphore was used, the number of pending events had to be determined from the hardware, which is not always practical. In Example 24, the number of pending events is returned from ulTaskNotifyTake().

Interrupt events that occur between calls to ulTaskNotifyTake are latched in the task's notification value, and calls to ulTaskNotifyTake() will return immediately if the calling task already has notifications pending.

---

```
/* The rate at which the periodic task generates software interrupts. */
const TickType_t xInterruptFrequency = pdMS_TO_TICKS( 500UL );

static void vHandlerTask( void *pvParameters )
{
/* xMaxExpectedBlockTime is set to be a little longer than the maximum expected time
between events. */
const TickType_t xMaxExpectedBlockTime = xInterruptFrequency + pdMS_TO_TICKS( 10 );
uint32_t ulEventsToProcess;

/* As per most tasks, this task is implemented within an infinite loop. */
for( ; ; )
{
    /* Wait to receive a notification sent directly to this task from the
interrupt service routine. */
    ulEventsToProcess = ulTaskNotifyTake( pdTRUE, xMaxExpectedBlockTime );
    if( ulEventsToProcess != 0 )
    {
        /* To get here at least one event must have occurred. Loop here until
all the pending events have been processed (in this case, just print out
a message for each event). */
        while( ulEventsToProcess > 0 )
        {
            vPrintString( "Handler task - Processing event.\r\n" );
            ulEventsToProcess--;
        }
    }
    else
    {
        /* If this part of the function is reached then an interrupt did not
arrive within the expected time, and (in a real application) it may be
necessary to perform some error recovery operations. */
    }
}
}
```

---

**Listing 148. The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 24**

The periodic task used to generate software interrupts prints a message before the interrupt is generated, and again after the interrupt has been generated. This allows the sequence of execution to be observed in the output produced.

Listing 149 shows the interrupt handler. This does very little other than send a notification directly to the task to which interrupt handling is deferred.

---

```

static uint32_t ulExampleInterruptHandler( void )
{
BaseType_t xHigherPriorityTaskWoken;

/* The xHigherPriorityTaskWoken parameter must be initialized to pdFALSE as
it will get set to pdTRUE inside the interrupt safe API function if a
context switch is required. */
xHigherPriorityTaskWoken = pdFALSE;

/* Send a notification directly to the task to which interrupt processing is
being deferred. */
vTaskNotifyGiveFromISR( /* The handle of the task to which the notification
is being sent. The handle was saved when the task
was created. */
xHandlerTask,

/* xHigherPriorityTaskWoken is used in the usual
way. */
&xHigherPriorityTaskWoken );


/* Pass the xHigherPriorityTaskWoken value into portYIELD_FROM_ISR(). If
xHigherPriorityTaskWoken was set to pdTRUE inside vTaskNotifyGiveFromISR()
then calling portYIELD_FROM_ISR() will request a context switch. If
xHigherPriorityTaskWoken is still pdFALSE then calling
portYIELD_FROM_ISR() will have no effect. The implementation of
portYIELD_FROM_ISR() used by the Windows port includes a return statement,
which is why this function does not explicitly return a value. */
portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}

```


---

**Listing 149.** The implementation of the interrupt service routine used in Example 24

The output produced when Example 24 is executed is shown in Figure 78. As expected, it is identical to that produced when Example 16 is executed. vHandlerTask() enters the Running state as soon as the interrupt is generated, so the output from the task splits the output produced by the periodic task. Further explanation is provided in Figure 79.

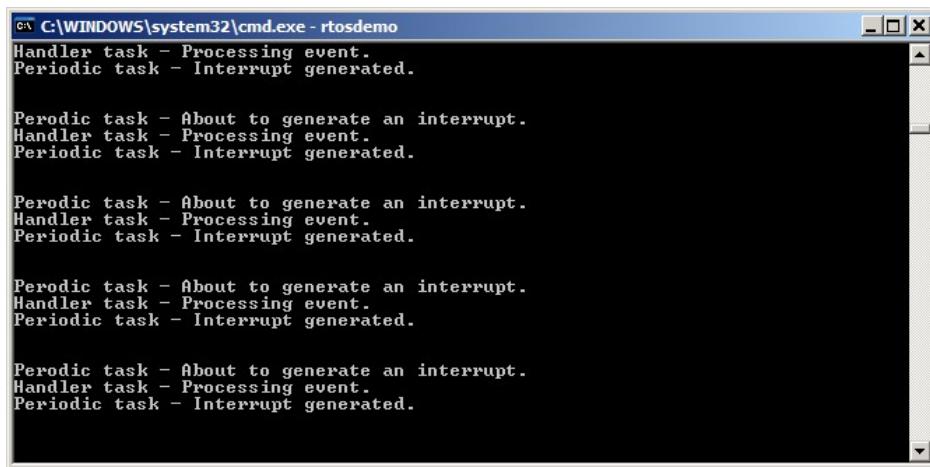

**Figure 78.** The output produced when Example 16 is executed

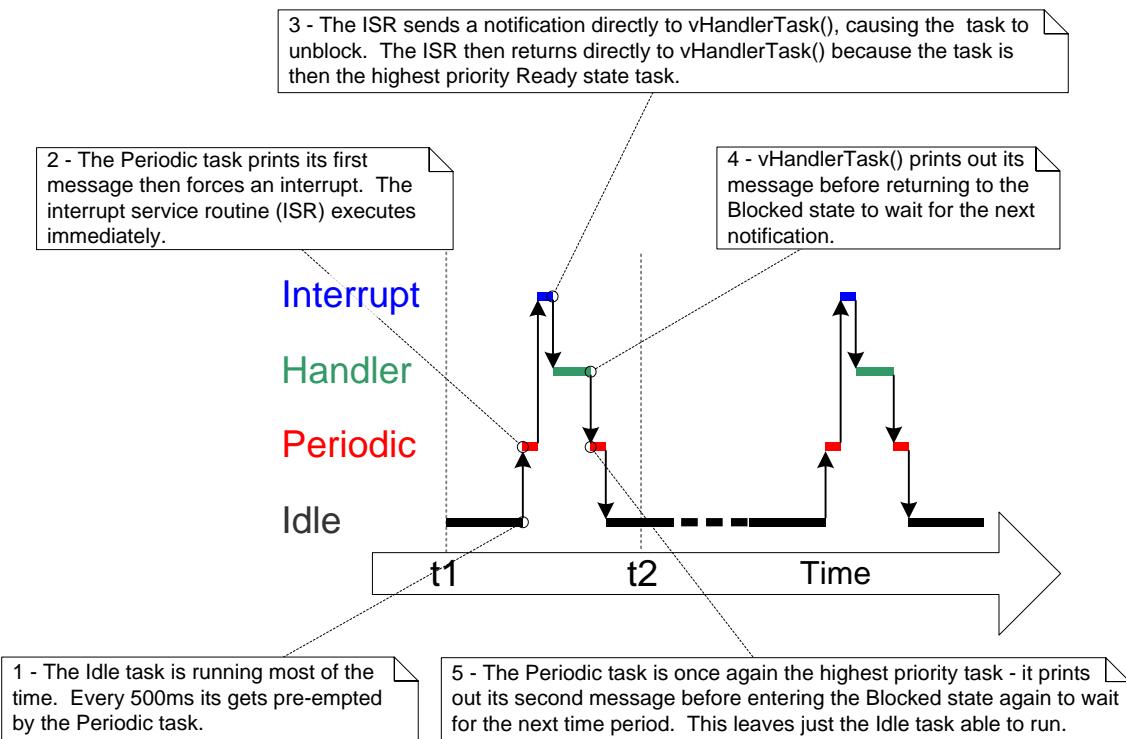

**Figure 79. The sequence of execution when Example 24 is executed**

### Example 25. Using a task notification in place of a semaphore, method 2

In Example 24, the ulTaskNotifyTake() xClearOnExit parameter was set to pdTRUE. Example 25 modifies Example 24 slightly to demonstrate the behavior when the ulTaskNotifyTake() xClearOnExit parameter is instead set to pdFALSE.

When xClearOnExit is pdFALSE, calling ulTaskNotifyTake() will only decrement (reduce by one) the calling task's notification value, instead of clearing it to zero. The notification count is therefore the difference between the number of events that have occurred, and the number of events that have been processed. That allows the structure of vHandlerTask() to be simplified in two ways:

1. The number of events waiting to be processed is held in the notification value, so it does not need to be held in a local variable.
2. It is only necessary to process one event between each call to ulTaskNotifyTake().

The implementation of vHandlerTask() used in Example 25 is shown in Listing 150.

---

```

static void vHandlerTask( void *pvParameters )
{
/* xMaxExpectedBlockTime is set to be a little longer than the maximum expected time
between events. */
const TickType_t xMaxExpectedBlockTime = xInterruptFrequency + pdMS_TO_TICKS( 10 );

/* As per most tasks, this task is implemented within an infinite loop. */
for( ;; )
{
    /* Wait to receive a notification sent directly to this task from the
interrupt service routine. The xClearCountOnExit parameter is now pdFALSE,
so the task's notification value will be decremented by ulTaskNotifyTake(),
and not cleared to zero. */
if( ulTaskNotifyTake( pdFALSE, xMaxExpectedBlockTime ) != 0 )
{
    /* To get here an event must have occurred. Process the event (in this
case just print out a message). */
    vPrintString( "Handler task - Processing event.\r\n" );
}
else
{
    /* If this part of the function is reached then an interrupt did not
arrive within the expected time, and (in a real application) it may be
necessary to perform some error recovery operations. */
}
}
}

```

---

**Listing 150.** The implementation of the task to which the interrupt processing is deferred (the task that synchronizes with the interrupt) in Example 25

For demonstration purposes, the interrupt service routine has also been modified to send more than one task notification per interrupt, and in so doing, simulate multiple interrupts occurring at high frequency. The implementation of the interrupt service routine used in Example 25 is shown in Listing 151.

---

```

static uint32_t ulExampleInterruptHandler( void )
{
BaseType_t xHigherPriorityTaskWoken;

xHigherPriorityTaskWoken = pdFALSE;

/* Send a notification to the handler task multiple times. The first 'give' will
unblock the task, the following 'gives' are to demonstrate that the receiving
task's notification value is being used to count (latch) events - allowing the
task to process each event in turn. */
vTaskNotifyGiveFromISR( xHandlerTask, &xHigherPriorityTaskWoken );
vTaskNotifyGiveFromISR( xHandlerTask, &xHigherPriorityTaskWoken );
vTaskNotifyGiveFromISR( xHandlerTask, &xHigherPriorityTaskWoken );

portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}

```

---

**Listing 151.** The implementation of the interrupt service routine used in Example 25

The output produced when Example 25 is executed is shown in Figure 80. As can be seen, vHandlerTask() processes all three events each time an interrupt is generated.

```
C:\WINDOWS\system32\cmd.exe - rtosdemo
Handler task - Processing event.
Handler task - Processing event.
Handler task - Processing event.
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler task - Processing event.
Handler task - Processing event.
Handler task - Processing event.
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler task - Processing event.
Handler task - Processing event.
Handler task - Processing event.
Periodic task - Interrupt generated.

Periodic task - About to generate an interrupt.
Handler task - Processing event.
Handler task - Processing event.
Handler task - Processing event.
```

Figure 80. The output produced when Example 25 is executed

### The xTaskNotify() and xTaskNotifyFromISR() API Functions

xTaskNotify() is a more capable version of xTaskNotifyGive() that can be used to update the receiving task's notification value in any of the following ways:

- Increment (add one to) the receiving task's notification value, in which case xTaskNotify() is equivalent to xTaskNotifyGive().
- Set one or more bits in the receiving task's notification value. This allows a task's notification value to be used as a lighter weight and faster alternative to an event group.
- Write a completely new number into the receiving task's notification value, but only if the receiving task has read its notification value since it was last updated. This allows a task's notification value to provide similar functionality to that provided by a queue that has a length of one.
- Write a completely new number into the receiving task's notification value, even if the receiving task has not read its notification value since it was last updated. This allows a task's notification value to provide similar functionality to that provided by the xQueueOverwrite() API function. The resultant behavior is sometimes referred to as a 'mailbox'.

`xTaskNotify()` is more flexible and powerful than `xTaskNotifyGive()`, and because of that extra flexibility and power, it is also a little more complex to use.

`xTaskNotifyFromISR()` is a version of `xTaskNotify()` that can be used in an interrupt service routine, and therefore has an additional `pxHigherPriorityTaskWoken` parameter.

Calling `xTaskNotify()` will always set the receiving task's notification state to pending, if it was not already pending.

---

```
BaseType_t xTaskNotify( TaskHandle_t xTaskToNotify,
                        uint32_t ulValue,
                        eNotifyAction eAction );

BaseType_t xTaskNotifyFromISR( TaskHandle_t xTaskToNotify,
                               uint32_t ulValue,
                               eNotifyAction eAction,
                               BaseType_t *pxHigherPriorityTaskWoken );
```

---

**Listing 152. Prototypes for the `xTaskNotify()` and `xTaskNotifyFromISR()` API functions**

**Table 51. `xTaskNotify()` parameters and return value**

Parameter Name/ Returned Value	Description
<code>xTaskToNotify</code>	The handle of the task to which the notification is being sent—see the <code>pxCreatedTask</code> parameter of the <code>xTaskCreate()</code> API function for information on obtaining handles to tasks.
<code>ulValue</code>	How <code>ulValue</code> is used is dependent on the <code>eNotifyAction</code> value. See Table 52.
<code>eNotifyAction</code>	An enumerated type that specifies how to update the receiving task's notification value. See Table 52.
Returned value	<code>xTaskNotify()</code> will return <code>pdPASS</code> except in the one case noted in Table 52.

**Table 52. Valid xTaskNotify() eNotifyAction Parameter Values, and Their Resultant Effect on the Receiving Task's Notification Value**

eNotifyAction Value	Resultant Effect on Receiving Task
eNoAction	<p>The receiving task's notification state is set to pending without its notification value being updated. The xTaskNotify() ulValue parameter is not used.</p> <p>The eNoAction action allows a task notification to be used as a faster and lighter weight alternative to a binary semaphore.</p>
eSetBits	<p>The receiving task's notification value is bitwise OR'ed with the value passed in the xTaskNotify() ulValue parameter. For example, if ulValue is set to 0x01, then bit 0 will be set in the receiving task's notification value. As another example, if ulValue is 0x06 (binary 0110) then bit 1 and bit 2 will be set in the receiving task's notification value.</p> <p>The eSetBits action allows a task notification to be used as a faster and lighter weight alternative to an event group.</p>
eIncrement	<p>The receiving task's notification value is incremented. The xTaskNotify() ulValue parameter is not used.</p> <p>The eIncrement action allows a task notification to be used as a faster and lighter weight alternative to a binary or counting semaphore, and is equivalent to the simpler xTaskNotifyGive() API function.</p>
eSetValueWithoutOverwrite	<p>If the receiving task had a notification pending before xTaskNotify() was called, then no action is taken and xTaskNotify() will return pdFAIL.</p> <p>If the receiving task did not have a notification pending before xTaskNotify() was called, then the receiving task's notification value is set to the value passed in the xTaskNotify() ulValue parameter.</p>

**Table 51. xTaskNotify() parameters and return value**

Parameter Name/ Returned Value	Description
eSetValueWithOverwrite	The receiving task's notification value is set to the value passed in the xTaskNotify() ulValue parameter, regardless of whether the receiving task had a notification pending before xTaskNotify() was called or not.

### **The xTaskNotifyWait() API Function**

xTaskNotifyWait() is a more capable version of ulTaskNotifyTake(). It allows a task to wait, with an optional timeout, for the calling task's notification state to become pending, should it not already be pending. xTaskNotifyWait() provides options for bits to be cleared in the calling task's notification value both on entry to the function, and on exit from the function.

---

```
BaseType_t xTaskNotifyWait( uint32_t ulBitsToClearOnEntry,
                           uint32_t ulBitsToClearOnExit,
                           uint32_t *pulNotificationValue,
                           TickType_t xTicksToWait );
```

---

**Listing 153. The xTaskNotifyWait() API function prototype**

**Table 53. xTaskNotifyWait() parameters and return value**

Parameter Name/ Returned Value	Description
ulBitsToClearOnEntry	If the calling task did not have a notification pending before it called xTaskNotifyWait(), then any bits set in ulBitsToClearOnEntry will be cleared in the task's notification value on entry to the function.  For example, if ulBitsToClearOnEntry is 0x01, then bit 0 of the task's notification value will be cleared. As another example, setting ulBitsToClearOnEntry to 0xffffffff (ULONG_MAX) will clear all the bits in the task's notification value, effectively clearing the value to 0.

**Table 53. xTaskNotifyWait() parameters and return value**

Parameter Name/ Returned Value	Description
ulBitsToClearOnExit	<p>If the calling task exits xTaskNotifyWait() because it received a notification, or because it already had a notification pending when xTaskNotifyWait() was called, then any bits set in ulBitsToClearOnExit will be cleared in the task's notification value before the task exits the xTaskNotifyWait() function.</p> <p>The bits are cleared after the task's notification value has been saved in *pulNotificationValue (see the description of pulNotificationValue below).</p> <p>For example, if ulBitsToClearOnExit is 0x03, then bit 0 and bit 1 of the task's notification value will be cleared before the function exits.</p> <p>Setting ulBitsToClearOnExit to 0xffffffff (ULONG_MAX) will clear all the bits in the task's notification value, effectively clearing the value to 0.</p>
pulNotificationValue	<p>Used to pass out the task's notification value. The value copied to *pulNotificationValue is the task's notification value as it was before any bits were cleared due to the ulBitsToClearOnExit setting.</p> <p>pulNotificationValue is an optional parameter and can be set to NULL if it is not required.</p>

**Table 53. xTaskNotifyWait() parameters and return value**

Parameter Name/ Returned Value	Description
xTicksToWait	<p>The maximum amount of time the calling task should remain in the Blocked state to wait for its notification state to become pending.</p> <p>The block time is specified in tick periods, so the absolute time it represents is dependent on the tick frequency. The macro pdMS_TO_TICKS() can be used to convert a time specified in milliseconds to a time specified in ticks.</p> <p>Setting xTicksToWait to portMAX_DELAY will cause the task to wait indefinitely (without timing out), provided INCLUDE_vTaskSuspend is set to 1 in FreeRTOSConfig.h.</p>

**Table 53. xTaskNotifyWait() parameters and return value**

Parameter Name/ Returned Value	Description
Returned value	<p>There are two possible return values:</p> <ol style="list-style-type: none"><li>1. pdTRUE <p>This indicates xTaskNotifyWait() returned because a notification was received, or because the calling task already had a notification pending when xTaskNotifyWait() was called.</p><p>If a block time was specified (xTicksToWait was not zero), then it is possible that the calling task was placed into the Blocked state, to wait for its notification state to become pending, but its notification state was set to pending before the block time expired.</p></li><li>2. pdFALSE <p>This indicates that xTaskNotifyWait() returned without the calling task receiving a task notification.</p><p>If xTicksToWait was not zero then the calling task will have been held in the Blocked state to wait for its notification state to become pending, but the specified block time expired before that happened.</p></li></ol>

### **Task Notifications Used in Peripheral Device Drivers: UART Example**

Peripheral driver libraries provide functions that perform common operations on hardware interfaces. Examples of peripherals for which such libraries are often provided include Universal Asynchronous Receivers and Transmitters (UARTs), Serial Peripheral Interface (SPI) ports, analog to digital converters (ADCs), and Ethernet ports. Examples of functions typically provided by such libraries include functions to initialize a peripheral, send data to a peripheral, and receive data from a peripheral.

Some operations on peripherals take a relatively long time to complete. Examples of such operations include a high precision ADC conversion, and the transmission of a large data packet on a UART. In these cases the driver library function could be implemented to poll (repeatedly read) the peripheral's status registers to determine when the operation has completed. However, polling in this manner is nearly always wasteful as it utilizes 100% of the processor's time while no productive processing is being performed. The waste is particularly expensive in a multi-tasking system, where a task that is polling a peripheral might be preventing the execution of a lower priority task that does have productive processing to perform.

To avoid the potential for wasted processing time, an efficient RTOS aware device driver should be interrupt driven, and give a task that initiates a lengthy operation the option of waiting in the Blocked state for the operation to complete. That way, lower priority tasks can execute while the task performing the lengthy operation is in the Blocked state, and no tasks use processing time unless they can use it productively.

It is common practice for RTOS aware driver libraries to use a binary semaphore to place tasks into the Blocked state. The technique is demonstrated by the pseudo code shown in Listing 154, which provides the outline of an RTOS aware library function that transmits data on a UART port. In Listing 154:

- xUART is a structure that describes the UART peripheral, and holds state information. The xTxSemaphore member of the structure is a variable of type SemaphoreHandle\_t. It is assumed the semaphore has already been created.
- The xUART\_Send() function does not include any mutual exclusion logic. If more than one task is going to use the xUART\_Send() function, then the application writer will have to manage mutual exclusion within the application itself. For example, a task may be required to obtain a mutex before calling xUART\_Send().
- The xSemaphoreTake() API function is used to place the calling task into the Blocked state after the UART transmission has been initiated.
- The xSemaphoreGiveFromISR() API function is used to remove the task from the Blocked state after the transmission has completed, which is when the UART peripheral's transmit end interrupt service routine executes.

```
/* Driver library function to send data to a UART. */
 BaseType_t xUART_Send( xUART *pxUARTInstance, uint8_t *pucDataSource, size_t uxLength )
{
 BaseType_t xReturn;

 /* Ensure the UART's transmit semaphore is not already available by attempting to take
 the semaphore without a timeout. */
 xSemaphoreTake( pxUARTInstance->xTxSemaphore, 0 );

 /* Start the transmission. */
 UART_low_level_send( pxUARTInstance, pucDataSource, uxLength );

 /* Block on the semaphore to wait for the transmission to complete. If the semaphore
 is obtained then xReturn will get set to pdPASS. If the semaphore take operation times
 out then xReturn will get set to pdFAIL. Note that, if the interrupt occurs between
 UART_low_level_send() being called, and xSemaphoreTake() being called, then the event
 will be latched in the binary semaphore, and the call to xSemaphoreTake() will return
 immediately. */
 xReturn = xSemaphoreTake( pxUARTInstance->xTxSemaphore, pxUARTInstance->xTxTimeout );

 return xReturn;
}
/*-----*/
/* The service routine for the UART's transmit end interrupt, which executes after the
last byte has been sent to the UART. */
void xUART_TransmitEndISR( xUART *pxUARTInstance )
{
 BaseType_t xHigherPriorityTaskWoken = pdFALSE;

 /* Clear the interrupt. */
 UART_low_level_interrupt_clear( pxUARTInstance );

 /* Give the Tx semaphore to signal the end of the transmission. If a task is Blocked
 waiting for the semaphore then the task will be removed from the Blocked state. */
 xSemaphoreGiveFromISR( pxUARTInstance->xTxSemaphore, &xHigherPriorityTaskWoken );
 portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

**Listing 154. Pseudo code demonstrating how a binary semaphore can be used in a driver library transmit function**

The technique demonstrated in Listing 154 is perfectly workable, and indeed common practice, but it has some drawbacks:

- The library uses multiple semaphores, which increases its RAM footprint.
- Semaphores cannot be used until they have been created, so a library that uses semaphores cannot be used until it has been explicitly initialized.
- Semaphores are generic objects that are applicable to a wide range of use cases; they include logic to allow any number of tasks to wait in the Blocked state for the semaphore to become available, and to select (in a deterministic manner) which task to remove from the Blocked state when the semaphore does become available. Executing that logic takes a finite time, and that processing overhead is unnecessary in

the scenario shown is Listing 154, in which there cannot be more than one task waiting for the semaphore at any given time.

Listing 155 demonstrates how to avoid these drawbacks by using a task notification in place of a binary semaphore.

*Note: If a library uses task notifications, then the library's documentation must clearly state that calling a library function can change the calling task's notification state and notification value.*

In Listing 155:

- The `xTxSemaphore` member of the `xUART` structure has been replaced by the `xTaskToNotify` member. `xTaskToNotify` is a variable of type `TaskHandle_t`, and is used to hold the handle of the task that is waiting for the UART operation to complete.
- The `xTaskGetCurrentTaskHandle()` FreeRTOS API function is used to obtain the handle of the task that is in the Running state.
- The library does not create any FreeRTOS objects, so does not incur a RAM overhead, and does not need to be explicitly initialized.
- The task notification is sent directly to the task that is waiting for the UART operation to complete, so no unnecessary logic is executed.

The `xTaskToNotify` member of the `xUART` structure is accessed from both a task and an interrupt service routine, requiring that consideration be given as to how the processor will update its value:

- If `xTaskToNotify` is updated by a single memory write operation, then it can be updated outside of a critical section, exactly as shown in Listing 155. This would be the case if `xTaskToNotify` is a 32-bit variable (`TaskHandle_t` was a 32-bit type), and the processor on which FreeRTOS is running is a 32-bit processor.
- If more than one memory write operation is required to update `xTaskToNotify`, then `xTaskToNotify` must only be updated from within a critical section—otherwise the interrupt service routine might access `xTaskToNotify` while it is in an inconsistent state. This would be the case if `xTaskToNotify` is a 32-bit variable, and the processor on

which FreeRTOS is running is a 16-bit processor, as it would require two 16-bit memory write operations to update all 32-bits.

Internally, within the FreeRTOS implementation, TaskHandle\_t is a pointer, so sizeof( TaskHandle\_t ) always equals sizeof( void \* ).

```
/* Driver library function to send data to a UART. */
BaseType_t xUART_Send( xUART *pxUARTInstance, uint8_t *pucDataSource, size_t uxLength )
{
    BaseType_t xReturn;

    /* Save the handle of the task that called this function. The book text contains notes as to whether the following line needs to be protected by a critical section or not. */
    pxUARTInstance->xTaskToNotify = xTaskGetCurrentTaskHandle();

    /* Ensure the calling task does not already have a notification pending by calling ulTaskNotifyTake() with the xClearCountOnExit parameter set to pdTRUE, and a block time of 0 (don't block). */
    ulTaskNotifyTake( pdTRUE, 0 );

    /* Start the transmission. */
    UART_low_level_send( pxUARTInstance, pucDataSource, uxLength );

    /* Block until notified that the transmission is complete. If the notification is received then xReturn will be set to 1 because the ISR will have incremented this task's notification value to 1 (pdTRUE). If the operation times out then xReturn will be 0 (pdFALSE) because this task's notification value will not have been changed since it was cleared to 0 above. Note that, if the ISR executes between the calls to UART_low_level_send() and the call to ulTaskNotifyTake(), then the event will be latched in the task's notification value, and the call to ulTaskNotifyTake() will return immediately.*/
    xReturn = ( BaseType_t ) ulTaskNotifyTake( pdTRUE, pxUARTInstance->xTxTimeout );

    return xReturn;
}
/*-----*/
/* The ISR that executes after the last byte has been sent to the UART. */
void xUART_TransmitEndISR( xUART *pxUARTInstance )
{
    BaseType_t xHigherPriorityTaskWoken = pdFALSE;

    /* This function should not execute unless there is a task waiting to be notified. Test this condition with an assert. This step is not strictly necessary, but will aid debugging. configASSERT() is described in section 11.2.*/
    configASSERT( pxUARTInstance->xTaskToNotify != NULL );

    /* Clear the interrupt. */
    UART_low_level_interrupt_clear( pxUARTInstance );

    /* Send a notification directly to the task that called xUART_Send(). If the task is Blocked waiting for the notification then the task will be removed from the Blocked state. */
    vTaskNotifyGiveFromISR( pxUARTInstance->xTaskToNotify, &xHigherPriorityTaskWoken );

    /* Now there are no tasks waiting to be notified. Set the xTaskToNotify member of the xUART structure back to NULL. This step is not strictly necessary but will aid debugging. */
    pxUARTInstance->xTaskToNotify = NULL;
    portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

**Listing 155. Pseudo code demonstrating how a task notification can be used in a driver library transmit function**

Task notifications can also replace semaphores in receive functions, as demonstrated in pseudo code Listing 156, which provides the outline of an RTOS aware library function that receives data on a UART port. Referring to Listing 156:

- The xUART\_Receive() function does not include any mutual exclusion logic. If more than one task is going to use the xUART\_Receive() function, then the application writer will have to manage mutual exclusion within the application itself. For example, a task may be required to obtain a mutex before calling xUART\_Receive().
- The UART's receive interrupt service routine places the characters that are received by the UART into a RAM buffer. The xUART\_Receive() function returns characters from the RAM buffer.
- The xUART\_Receive() uxWantedBytes parameter is used to specify the number of characters to receive. If the RAM buffer does not already contain the requested number characters, then the calling task is placed into the Blocked state to wait to be notified that the number of characters in the buffer has increased. The while() loop is used to repeat this sequence until either the receive buffer contains the requested number of characters, or a timeout occurs.
- The calling task may enter the Blocked state more than once. The block time is therefore adjusted to take into account the amount of time that has already passed since xUART\_Receive() was called. The adjustments ensure the total time spent inside xUART\_Receive() does not exceed the block time specified by the xRxTimeout member of the xUART structure. The block time is adjusted using the FreeRTOS vTaskSetTimeOutState() and xTaskCheckForTimeOut() helper functions.

```
/* Driver library function to receive data from a UART. */
size_t xUART_Receive( xUART *pxUARTInstance, uint8_t *pucBuffer, size_t uxWantedBytes )
{
    size_t uxReceived = 0;
    TickType_t xTicksToWait;
    TimeOut_t xTimeOut;

    /* Record the time at which this function was entered. */
    vTaskSetTimeOutState( &xTimeOut );

    /* xTicksToWait is the timeout value - it is initially set to the maximum receive
     * timeout for this UART instance. */
    xTicksToWait = pxUARTInstance->xRxTimeout;

    /* Save the handle of the task that called this function. The book text contains notes
     * as to whether the following line needs to be protected by a critical section or not. */
    pxUARTInstance->xTaskToNotify = xTaskGetCurrentTaskHandle();

    /* Loop until the buffer contains the wanted number of bytes, or a timeout occurs. */
    while( UART_bytes_in_rx_buffer( pxUARTInstance ) < uxWantedBytes )
    {
        /* Look for a timeout, adjusting xTicksToWait to account for the time spent in this
         * function so far. */
        if( xTaskCheckForTimeOut( &xTimeOut, &xTicksToWait ) != pdFALSE )
        {
            /* Timed out before the wanted number of bytes were available, exit the loop. */
            break;
        }

        /* The receive buffer does not yet contain the required amount of bytes. Wait for a
         * maximum of xTicksToWait ticks to be notified that the receive interrupt service
         * routine has placed more data into the buffer. It does not matter if the calling
         * task already had a notification pending when it called this function, if it did, it
         * would just iteration around this while loop one extra time. */
        ulTaskNotifyTake( pdTRUE, xTicksToWait );
    }

    /* No tasks are waiting for receive notifications, so set xTaskToNotify back to NULL.
     * The book text contains notes as to whether the following line needs to be protected by
     * a critical section or not. */
    pxUARTInstance->xTaskToNotify = NULL;

    /* Attempt to read uxWantedBytes from the receive buffer into pucBuffer. The actual
     * number of bytes read (which might be less than uxWantedBytes) is returned. */
    uxReceived = UART_read_from_receive_buffer( pxUARTInstance, pucBuffer, uxWantedBytes );

    return uxReceived;
}
/*-----*/
/* The interrupt service routine for the UART's receive interrupt */
void xUART_ReceiveISR( xUART *pxUARTInstance )
{
    BaseType_t xHigherPriorityTaskWoken = pdFALSE;

    /* Copy received data into this UART's receive buffer and clear the interrupt. */
    UART_low_level_receive( pxUARTInstance );

    /* If a task is waiting to be notified of the new data then notify it now. */
    if( pxUARTInstance->xTaskToNotify != NULL )
    {
        vTaskNotifyGiveFromISR( pxUARTInstance->xTaskToNotify, &xHigherPriorityTaskWoken );
        portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
    }
}
```

---

**Listing 156. Pseudo code demonstrating how a task notification can be used in a driver library receive function**

## Task Notifications Used in Peripheral Device Drivers: ADC Example

The previous section demonstrated how to use `vTaskNotifyGiveFromISR()` to send a task notification from an interrupt to a task. `vTaskNotifyGiveFromISR()` is a simple function to use, but its capabilities are limited; it can only send a task notification as a valueless event, it cannot send data. This section demonstrates how to use `xTaskNotifyFromISR()` to send data with a task notification event. The technique is demonstrated by the pseudo code shown in Listing 157, which provides the outline of an RTOS aware interrupt service routine for an Analog to Digital Converter (ADC). In Listing 157:

- It is assumed an ADC conversion is started at least every 50 milliseconds.
- `ADC_ConversionEndISR()` is the interrupt service routine for the ADC's conversion end interrupt, which is the interrupt that executes each time a new ADC value is available.
- The task implemented by `vADCTask()` processes each value generated by the ADC. It is assumed the task's handle was stored in `xADCTaskToNotify` when the task was created.
- `ADC_ConversionEndISR()` uses `xTaskNotifyFromISR()` with the `eAction` parameter set to `eSetValueWithoutOverwrite` to send a task notification to the `vADCTask()` task, and write the result of the ADC conversion into the task's notification value.
- The `vADCTask()` task uses `xTaskNotifyWait()` to wait to be notified that a new ADC value is available, and to retrieve the result of the ADC conversion from its notification value.

```
/* A task that uses an ADC. */
void vADCTask( void *pvParameters )
{
    uint32_t ulADCValue;
    BaseType_t xResult;

    /* The rate at which ADC conversions are triggered. */
    const TickType_t xADCConversionFrequency = pdMS_TO_TICKS( 50 );

    for( ; ; )
    {
        /* Wait for the next ADC conversion result. */
        xResult = xTaskNotifyWait(
            /* The new ADC value will overwrite the old value, so there is no need
            to clear any bits before waiting for the new notification value. */
            0,
            /* Future ADC values will overwrite the existing value, so there is no
            need to clear any bits before exiting xTaskNotifyWait(). */
            0,
            /* The address of the variable into which the task's notification value
            (which holds the latest ADC conversion result) will be copied. */
            &ulADCValue,
            /* A new ADC value should be received every xADCConversionFrequency
            ticks. */
            xADCConversionFrequency * 2 );

        if( xResult == pdPASS )
        {
            /* A new ADC value was received. Process it now. */
            ProcessADCResult( ulADCValue );
        }
        else
        {
            /* The call to xTaskNotifyWait() did not return within the expected time,
            something must be wrong with the input that triggers the ADC conversion, or with
            the ADC itself. Handle the error here. */
        }
    }
}

/*-----*/
/* The interrupt service routine that executes each time an ADC conversion completes. */
void ADC_ConversionEndISR( xADC *pxADCInstance )
{
    uint32_t ulConversionResult;
    BaseType_t xHigherPriorityTaskWoken = pdFALSE, xResult;

    /* Read the new ADC value and clear the interrupt. */
    ulConversionResult = ADC_low_level_read( pxADCInstance );

    /* Send a notification, and the ADC conversion result, directly to vADCTask(). */
    xResult = xTaskNotifyFromISR( xADCTaskToNotify,           /* xTaskToNotify parameter. */
                                ulConversionResult,        /* ulValue parameter. */
                                eSetValueWithoutOverwrite, /* eAction parameter. */
                                &xHigherPriorityTaskWoken );

    /* If the call to xTaskNotifyFromISR() returns pdFAIL then the task is not keeping up
    with the rate at which ADC values are being generated. configASSERT() is described
    in section 11.2.*/
    configASSERT( xResult == pdPASS );
    portYIELD_FROM_ISR( xHigherPriorityTaskWoken );
}
```

---

**Listing 157. Pseudo code demonstrating how a task notification can be used to pass a value to a task**

## Task Notifications Used Directly Within an Application


This section reinforces the power of task notifications by demonstrating their use in a hypothetical application that includes the following functionality:

1. The application communicates across a slow internet connection to send data to, and request data from, a remote data server. From here on, the remote data server is referred to as the *cloud server*.
2. After requesting data from the cloud server, the requesting task must wait in the Blocked state for the requested data to be received.
3. After sending data to the cloud server, the sending task must wait in the Blocked state for an acknowledgement that the cloud server received the data correctly.

A schematic of the software design is shown in Figure 81. In Figure 81:

- The complexity of handling multiple internet connections to the cloud server is encapsulated within a single FreeRTOS task. The task acts as a proxy server within the FreeRTOS application, and is referred to as the *server task*.
- Application tasks read data from the cloud server by calling CloudRead(). CloudRead() does not communicate with the cloud server directly, but instead sends the read request to the server task on a queue, and receives the requested data from the server task as a task notification.
- Application tasks write date to the cloud server by calling CloudWrite(). CloudWrite() does not communicate with the cloud server directly, but instead sends the write request to the server task on a queue, and receives the result of the write operation from the server task as a task notification.

The structure sent to the server task by the CloudRead() and CloudWrite() functions is shown in Listing 158.

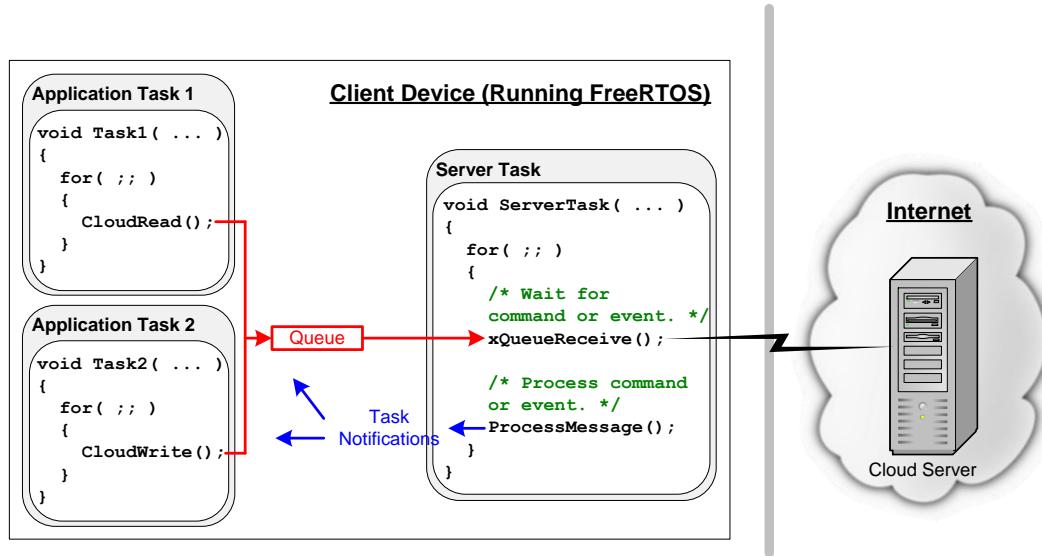

**Figure 81** The communication paths from the application tasks to the cloud server, and back again

---

```

typedef enum CloudOperations
{
    eRead,                      /* Send data to the cloud server. */
    eWrite,                     /* Receive data from the cloud server. */
} Operation_t;

typedef struct CloudCommand
{
    Operation_t eOperation;     /* The operation to perform (read or write). */
    uint32_t ulDataID;          /* Identifies the data being read or written. */
    uint32_t ulDataValue;        /* Only used when writing data to the cloud server. */
    TaskHandle_t xTaskToNotify; /* The handle of the task performing the operation. */
} CloudCommand_t;

```

---

**Listing 158.** The structure and data type sent on a queue to the server task

Pseudo code for `CloudRead()` is shown in Listing 159. The function sends its request to the server task, then calls `xTaskNotifyWait()` to wait in the Blocked state until it is notified that the requested data is available.

Pseudo code showing how the server task manages a read request is shown in Listing 160. When the data has been received from the cloud server, the server task unblocks the application task, and sends the received data to the application task, by calling `xTaskNotify()` with the `eAction` parameter set to `eSetValueWithOverwrite`.

Listing 160 shows a simplified scenario, as it assumes `GetCloudData()` does not have to wait to obtain a value from the cloud server.

---

```

/* ulDataID identifies the data to read.  pulValue holds the address of the variable into
which the data received from the cloud server is to be written. */
BaseType_t CloudRead( uint32_t ulDataID, uint32_t *pulValue )
{
CloudCommand_t xRequest;
BaseType_t xReturn;

/* Set the CloudCommand_t structure members to be correct for this read request. */
xRequest.eOperation = eRead;      /* This is a request to read data. */
xRequest.ulDataID = ulDataID;    /* A code that identifies the data to read. */
xRequest.xTaskToNotify = xTaskGetCurrentTaskHandle(); /* Handle of the calling task. */

/* Ensure there are no notifications already pending by reading the notification value
with a block time of 0, then send the structure to the server task. */
xTaskNotifyWait( 0, 0, NULL, 0 );
xQueueSend( xServerTaskQueue, &xRequest, portMAX_DELAY );

/* Wait for a notification from the server task. The server task writes the value
received from the cloud server directly into this task's notification value, so there is
no need to clear any bits in the notification value on entry to or exit from the
xTaskNotifyWait() function. The received value is written to *pulValue, so pulValue is
passed as the address to which the notification value is written. */
xReturn = xTaskNotifyWait( 0,                                /* No bits cleared on entry. */
                          0,                                /* No bits to clear on exit. */
                          pulValue,                         /* Notification value into *pulValue. */
                          pdMS_TO_TICKS( 250 ) ); /* Wait a maximum of 250ms. */

/* If xReturn is pdPASS, then the value was obtained.  If xReturn is pdFAIL, then the
request timed out. */
return xReturn;
}

```

---

**Listing 159. The Implementation of the Cloud Read API Function**

---

```

void ServerTask( void *pvParameters )
{
CloudCommand_t xCommand;
uint32_t ulReceivedValue;

for( ; )
{
/* Wait for the next CloudCommand_t structure to be received from a task. */
xQueueReceive( xServerTaskQueue, &xCommand, portMAX_DELAY );

switch( xCommand.eOperation ) /* Was it a read or write request? */
{
case eRead:

/* Obtain the requested data item from the remote cloud server. */
ulReceivedValue = GetCloudData( xCommand.ulDataID );

/* Call xTaskNotify() to send both a notification and the value received from the
cloud server to the task that made the request. The handle of the task is
obtained from the CloudCommand_t structure. */
xTaskNotify( xCommand.xTaskToNotify, /* The task's handle is in the structure. */
            ulReceivedValue,           /* Cloud data sent as notification value. */
            eSetValueWithOverwrite );
break;

/* Other switch cases go here. */
}
}

```

---

**Listing 160. The Server Task Processing a Read Request**

Pseudo code for CloudWrite() is shown in Listing 161. For the purpose of demonstration, CloudWrite() returns a bitwise status code, where each bit in the status code is assigned a unique meaning. Four example status bits are shown by the #define statements at the top of Listing 161.

The task clears the four status bits, sends its request to the server task, then calls xTaskNotifyWait() to wait in the Blocked state for the status notification.

---

```
/* Status bits used by the cloud write operation. */
#define SEND_SUCCESSFUL_BIT          ( 0x01 << 0 )
#define OPERATION_TIMED_OUT_BIT      ( 0x01 << 1 )
#define NO_INTERNET_CONNECTION_BIT   ( 0x01 << 2 )
#define CANNOT_LOCATE_CLOUD_SERVER_BIT ( 0x01 << 3 )

/* A mask that has the four status bits set. */
#define CLOUD_WRITE_STATUS_BIT_MASK    ( SEND_SUCCESSFUL_BIT |
                                         OPERATION_TIMED_OUT_BIT |
                                         NO_INTERNET_CONNECTION_BIT |
                                         CANNOT_LOCATE_CLOUD_SERVER_BIT )

uint32_t CloudWrite( uint32_t ulDataID, uint32_t ulDataValue )
{
CloudCommand_t xRequest;
uint32_t ulNotificationValue;

/* Set the CloudCommand_t structure members to be correct for this write request. */
xRequest.eOperation = eWrite;           /* This is a request to write data. */
xRequest.ulDataID = ulDataID;          /* A code that identifies the data being written. */
xRequest.ulDataValue = ulDataValue;     /* Value of the data written to the cloud server. */
xRequest.xTaskToNotify = xTaskGetCurrentTaskHandle(); /* Handle of the calling task. */

/* Clear the three status bits relevant to the write operation by calling
xTaskNotifyWait() with the ulBitsToClearOnExit parameter set to
CLOUD_WRITE_STATUS_BIT_MASK, and a block time of 0. The current notification value is
not required, so the pulNotificationValue parameter is set to NULL. */
xTaskNotifyWait( 0, CLOUD_WRITE_STATUS_BIT_MASK, NULL, 0 );

/* Send the request to the server task. */
xQueueSend( xServerTaskQueue, &xRequest, portMAX_DELAY );

/* Wait for a notification from the server task. The server task writes a bitwise status
code into this task's notification value, which is written to ulNotificationValue. */
xTaskNotifyWait( 0,                               /* No bits cleared on entry.          */
                CLOUD_WRITE_STATUS_BIT_MASK, /* Clear relevant bits to 0 on exit. */
                &ulNotificationValue,      /* Notified value.                  */
                pdMS_TO_TICKS( 250 ) );   /* Wait a maximum of 250ms.          */

/* Return the status code to the calling task. */
return ( ulNotificationValue & CLOUD_WRITE_STATUS_BIT_MASK );
}
```

---

**Listing 161. The Implementation of the Cloud Write API Function**

Pseudo code demonstrating how the server task manages a write request is shown in Listing 162. When the data has been sent to the cloud server, the server task unblocks the application task, and sends the bitwise status code to the application task, by calling xTaskNotify() with the eAction parameter set to eSetBits. Only the bits defined by the

CLOUD\_WRITE\_STATUS\_BIT\_MASK constant can get altered in the receiving task's notification value, so the receiving task can use other bits in its notification value for other purposes.

Listing 162 shows a simplified scenario, as it assumes SetCloudData() does not have to wait to obtain an acknowledgement from the remote cloud server.

---

```
void ServerTask( void *pvParameters )
{
    CloudCommand_t xCommand;
    uint32_t ulBitwiseStatusCode;

    for( ; ; )
    {
        /* Wait for the next message. */
        xQueueReceive( xServerTaskQueue, &xCommand, portMAX_DELAY );

        /* Was it a read or write request? */
        switch( xCommand.eOperation )
        {
            case eWrite:

                /* Send the data to the remote cloud server. SetCloudData() returns a bitwise
                   status code that only uses the bits defined by the CLOUD_WRITE_STATUS_BIT_MASK
                   definition (shown in Listing 161). */
                ulBitwiseStatusCode = SetCloudData( xCommand.ulDataID, xCommand.ulDataValue );

                /* Send a notification to the task that made the write request. The eSetBits
                   action is used so any status bits set in ulBitwiseStatusCode will be set in the
                   notification value of the task being notified. All the other bits remain
                   unchanged. The handle of the task is obtained from the CloudCommand_t
                   structure. */
                xTaskNotify( xCommand.xTaskToNotify, /* The task's handle is in the structure. */
                            ulBitwiseStatusCode, /* Cloud data sent as notification value. */
                            eSetBits );
                break;

                /* Other switch cases go here. */
            }
        }
}
```

---

Listing 162. The Server Task Processing a Send Request

# Chapter 10

## Low Power Support

---

TBD. This chapter will be written prior to final publication.

# **Chapter 11**

## **Developer Support**

---

## 11.1 Chapter Introduction and Scope

---

This chapter highlights a set of features that are included to maximize productivity by:

- Providing insight into how an application is behaving.
- Highlighting opportunities for optimization.
- Trapping errors at the point at which they occur.

## 11.2 configASSERT()

---

In C, the macro assert() is used to verify an *assertion* (an assumption) made by the program. The assertion is written as a C expression, and if the expression evaluates to false (0), then the assertion has deemed to have failed. For example, Listing 163 tests the assertion that the pointer pxMyPointer is not NULL.

---

```
/* Test the assertion that pxMyPointer is not NULL */
assert( pxMyPointer != NULL );
```

---

**Listing 163 Using the standard C assert() macro to check pxMyPointer is not NULL**

The application writer specifies the action to take if an assertion fails by providing an implementation of the assert() macro.

The FreeRTOS source code does not call assert(), because assert() is not available with all the compilers with which FreeRTOS is compiled. Instead, the FreeRTOS source code contains lots of calls to a macro called configASSERT(), which can be defined by the application writer in FreeRTOSConfig.h, and behaves exactly like the standard C assert().

A failed assertion must be treated as a fatal error. Do not attempt to execute past a line that has failed an assertion.

*Using configASSERT() improves productivity by immediately trapping and identifying many of the most common sources of error. It is strongly advised to have configASSERT() defined while developing or debugging a FreeRTOS application.*

Defining configASSERT() will greatly assist in run-time debugging, but will also increase the application code size, and therefore slow down its execution. If a definition of configASSERT() is not provided, then the default empty definition will be used, and all the calls to configASSERT() will be completely removed by the C pre-processor.

### Example configASSERT() definitions

The definition of configASSERT() shown in Listing 164 is useful when an application is being executed under the control of a debugger. It will halt execution on any line that fails an assertion, so the line that failed the assertion will be the line displayed by the debugger when the debug session is paused.

```
/* Disable interrupts so the tick interrupt stops executing, then sit in a loop so
execution does not move past the line that failed the assertion. If the hardware
supports a debug break instruction, then the debug break instruction can be used in
place of the for() loop. */
#define configASSERT( x ) if( ( x ) == 0 ) { taskDISABLE_INTERRUPTS(); for(;;); }
```

---

**Listing 164 A simple configASSERT() definition useful when executing under the
control of a debugger**

The definition of configASSERT() shown in Listing 165 is useful when an application is not being executed under the control of a debugger. It prints out, or otherwise records, the source code line that failed an assertion. The line that failed the assertion is identified using the standard C \_\_FILE\_\_ macro to obtain the name of the source file, and the standard C \_\_LINE\_\_ macro to obtain the line number within the source file.

---

```
/* This function must be defined in a C source file, not the FreeRTOSConfig.h header
file. */
void vAssertCalled( const char *pcFile, uint32_t ulLine )
{
    /* Inside this function, pcFile holds the name of the source file that contains
    the line that detected the error, and ulLine holds the line number in the source
    file. The pcFile and ulLine values can be printed out, or otherwise recorded,
    before the following infinite loop is entered. */
    RecordErrorInformationHere( pcFile, ulLine );

    /* Disable interrupts so the tick interrupt stops executing, then sit in a loop
    so execution does not move past the line that failed the assertion. */
    taskDISABLE_INTERRUPTS();
    for( ;; );
}
/*-----*/
/* These following two lines must be placed in FreeRTOSConfig.h. */
extern void vAssertCalled( const char *pcFile, uint32_t ulLine );
#define configASSERT( x ) if( ( x ) == 0 ) vAssertCalled( __FILE__, __LINE__ )
```

---

**Listing 165 A configASSERT() definition that records the source code line that failed
an assertion**

## 11.3 FreeRTOS+Trace

FreeRTOS+Trace is a run-time diagnostic and optimization tool provided by our partner company, Percepio.

FreeRTOS+Trace captures valuable dynamic behavior information, then presents the captured information in interconnected graphical views. The tool is also capable of displaying multiple synchronized views.

The captured information is invaluable when analyzing, troubleshooting, or simply optimizing a FreeRTOS application.

FreeRTOS+Trace can be used side-by-side with a traditional debugger, and complements the debugger's view with a higher level time based perspective.



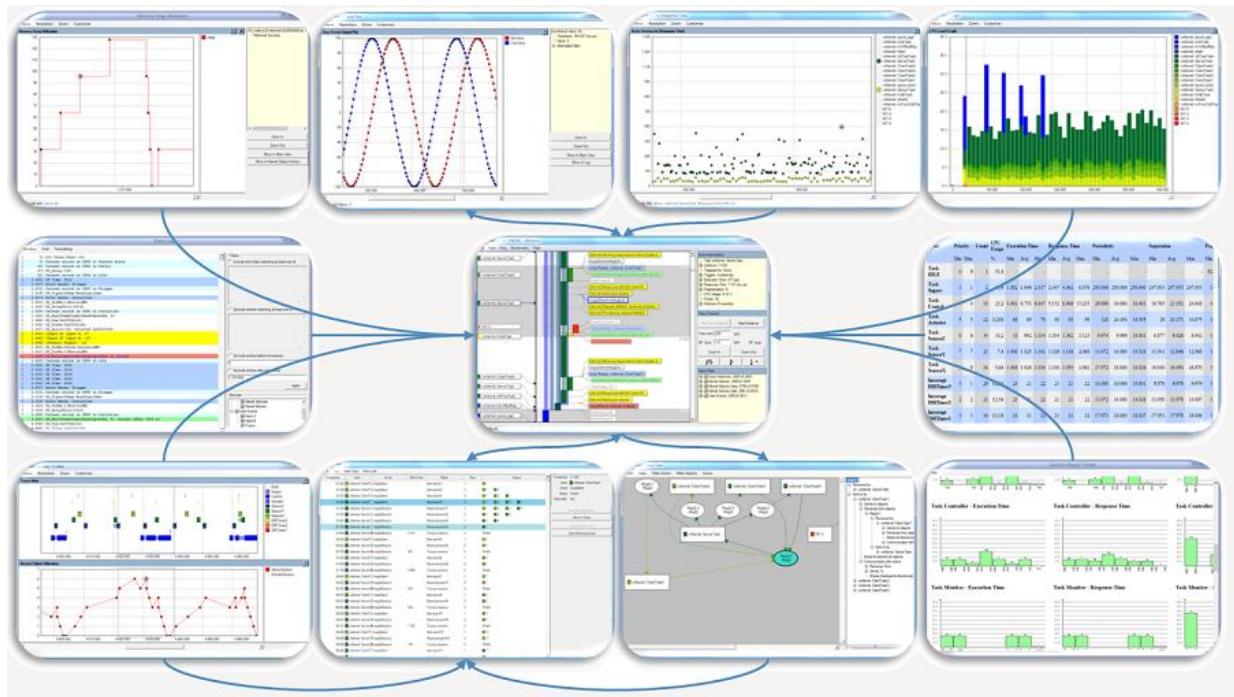



Figure 82 FreeRTOS+Trace includes more than 20 interconnected views

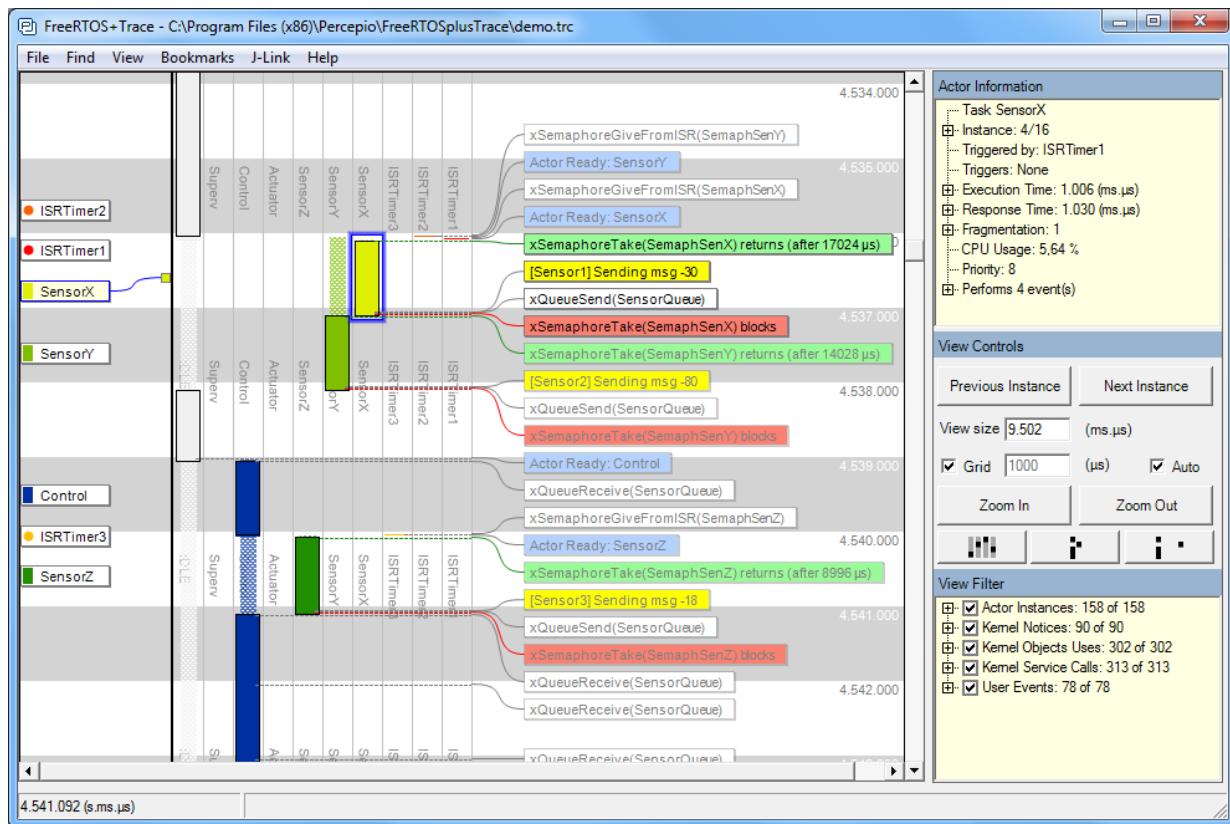


**Figure 83 FreeRTOS+Trace main trace view - one of more than 20 interconnected trace views**

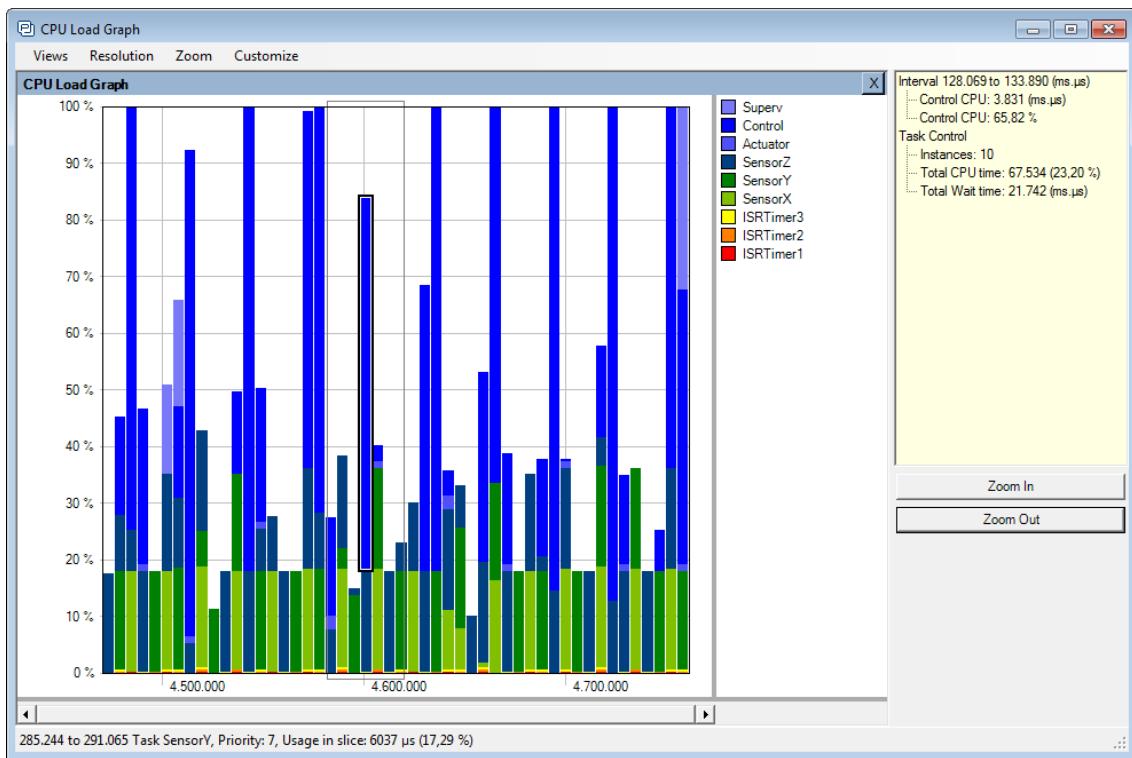


**Figure 84 FreeRTOS+Trace CPU load view - one of more than 20 interconnected trace views**

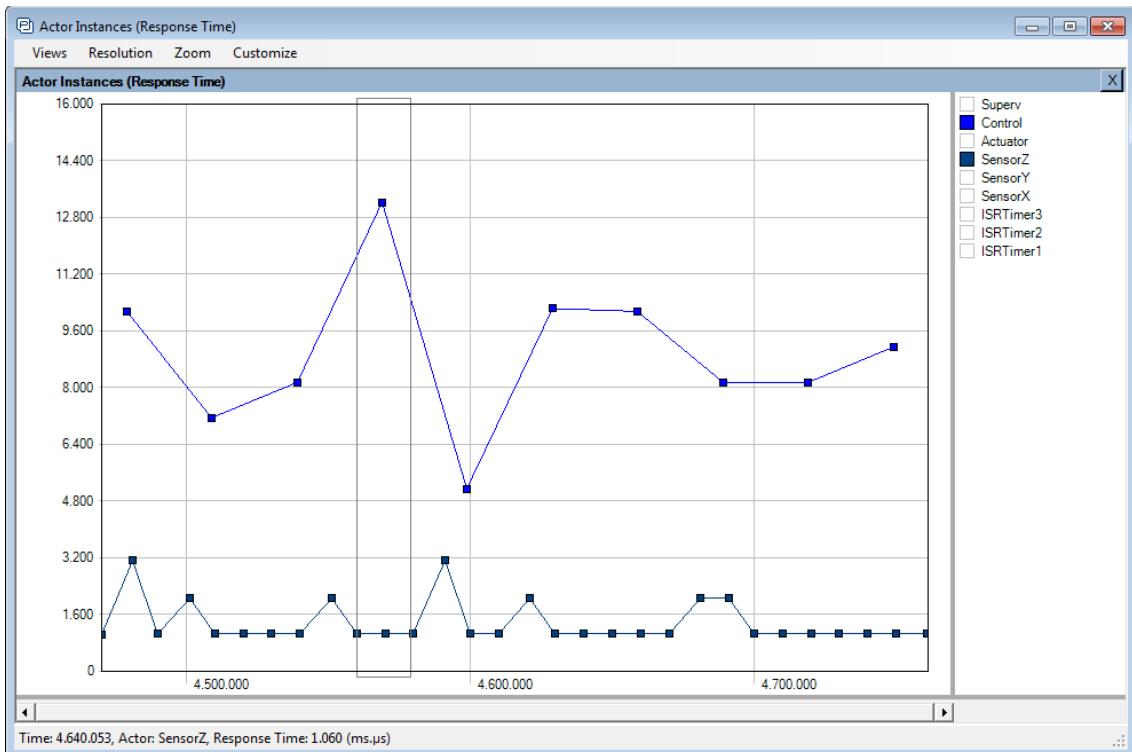

**Figure 85 FreeRTOS+Trace response time view - one of more than 20 interconnected trace views**

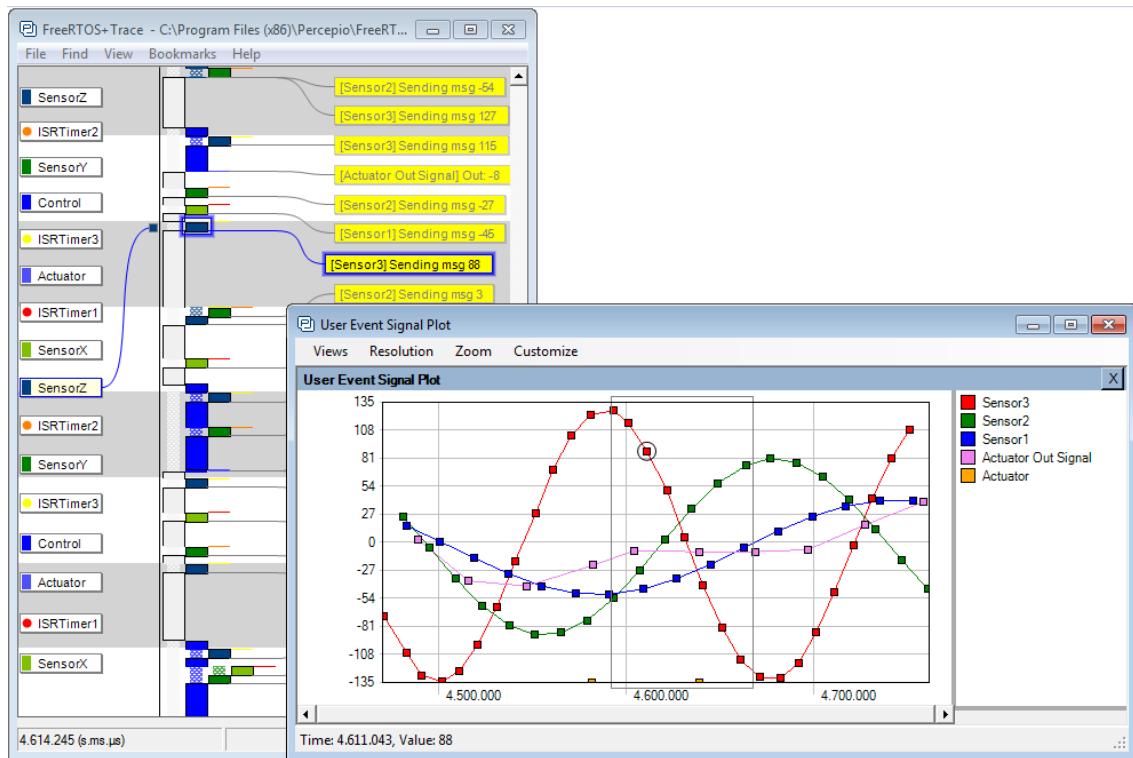

**Figure 86 FreeRTOS+Trace user event plot view - one of more than 20 interconnected trace views**

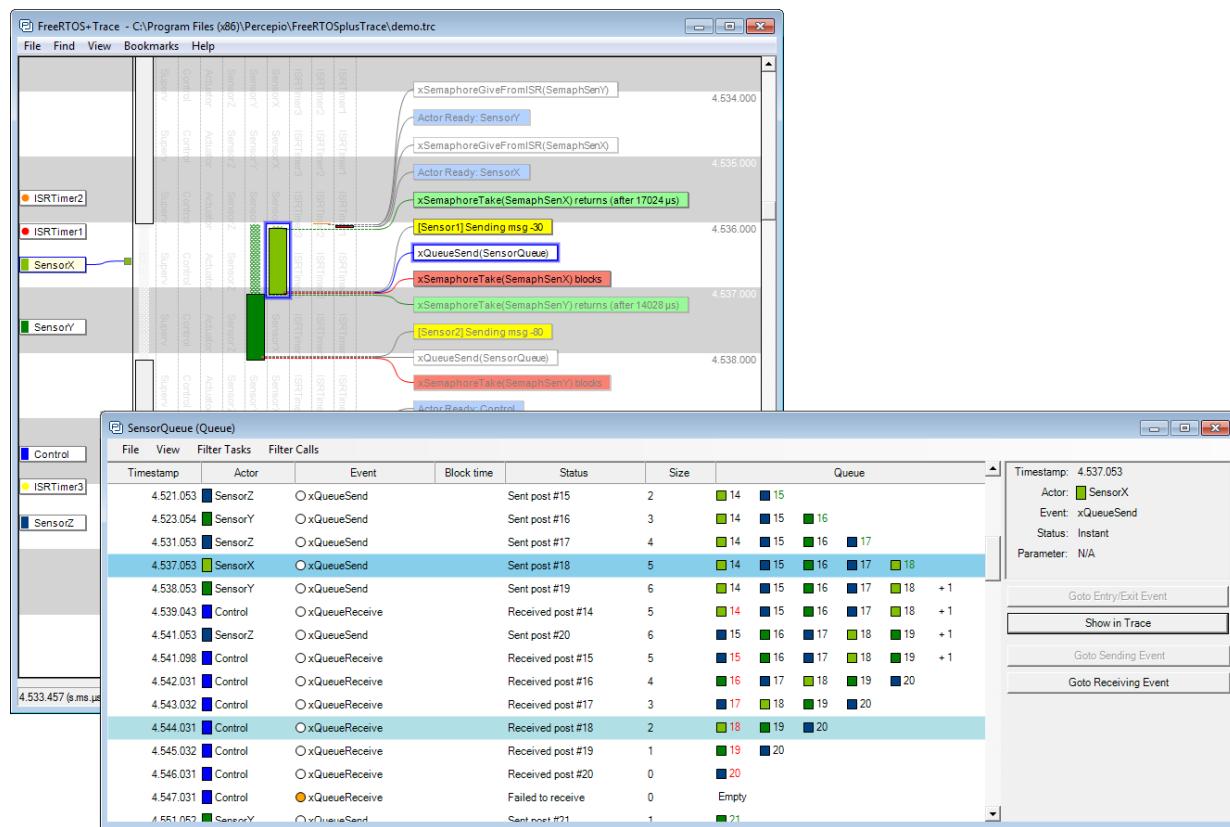

**Figure 87 FreeRTOS+Trace kernel object history view - one of more than 20 interconnected trace views**

## 11.4 Debug Related Hook (Callback) Functions

---

### **Malloc failed hook**

The malloc failed hook (or callback) was described in Chapter 2, Heap Memory Management.

Defining a malloc failed hook ensures the application developer is notified immediately if an attempt to create a task, queue, semaphore or event group fails.

### **Stack overflow hook**

Details of the stack overflow hook are provided in section 12.3, Stack Overflow.

Defining a stack overflow hook ensures the application developer is notified if the amount of stack used by a task exceeds the stack space allocated to the task.

## 11.5 Viewing Run-time and Task State Information

---

### Task Run-Time Statistics

Task run-time statistics provide information on the amount of processing time each task has received. A task's *run time* is the total time the task has been in the Running state since the application booted.

Run-time statistics are intended to be used as a profiling and debugging aid during the development phase of a project. The information they provide is only valid until the counter used as the run-time statistics clock overflows. Collecting run-time statistics will increase the task context switch time.

To obtain binary run-time statistics information, call the `uxTaskGetSystemState()` API function. To obtain run-time statistics information as a human readable ASCII table, call the `vTaskGetRunTimeStats()` helper function.

### The Run-Time Statistics Clock

Run-time statistics need to measure fractions of a tick period. Therefore, the RTOS tick count is not used as the run-time statistics clock, and the clock is instead provided by the application code. It is recommended to make the frequency of the run-time statistics clock between 10 and 100 times faster than the frequency of the tick interrupt. The faster the run-time statistics clock, the more accurate the statistics will be, but also the sooner the time value will overflow.

Ideally, the time value will be generated by a free-running 32-bit peripheral timer/counter, the value of which can be read with no other processing overhead. If the available peripherals and clock speeds do not make that technique possible, then alternative but less efficient techniques include:

1. Configuring a peripheral to generate a periodic interrupt at the desired run-time statistics clock frequency, and then using a count of the number of interrupts generated as the run-time statistics clock.

This method is very inefficient if the periodic interrupt is only used for the purpose of providing a run-time statistics clock. However, if the application already uses a periodic interrupt with a suitable frequency, then it is simple and efficient to add a count of the number of interrupts generated into the existing interrupt service routine.

- Generate a 32-bit value by using the current value of a free running 16-bit peripheral timer as the 32-bit value's least significant 16-bits, and the number of times the timer has overflowed as the 32-bit value's most significant 16-bits.

It is possible, with appropriate and somewhat complex manipulation, to generate a run-time statistics clock by combining the RTOS tick count with the current value of an ARM Cortex-M SysTick timer. Some of the demo projects in the FreeRTOS download demonstrate how this is achieved.

### **Configuring an Application to Collect Run-Time Statistics**

Table 54 details the macros necessary to collect task run-time statistics. It was originally intended for the macros to be included in the RTOS port layer, which is why the macros are prefixed 'port', but it has proven more practical to define them in FreeRTOSConfig.h.

**Table 54. Macros used in the collection of run-time statistics**

Macro	Description
configGENERATE_RUN_TIME_STATS	This macro must be set to 1 in FreeRTOSConfig.h. When this macro is set to 1 the scheduler will call the other macros detailed in this table at the appropriate times.
portCONFIGURE_TIMER_FOR_RUN_TIME_STATS()	This macro must be provided to initialize whichever peripheral is used to provide the run-time statistics clock.

**Table 54. Macros used in the collection of run-time statistics**

Macro	Description
portGET_RUN_TIME_COUNTER_VALUE(), or portALT_GET_RUN_TIME_COUNTER_VALUE(Time)	<p>One of these two macros must be provided to return the current run-time statistics clock value. This is the total time the application has been running, in run-time statistics clock units, since the application first booted.</p> <p>If the first macro is used it must be defined to evaluate to the current clock value. If the second macro is used it must be defined to set its ‘Time’ parameter to the current clock value.</p>

### The uxTaskGetSystemState() API Function

uxTaskGetSystemState() provides a snapshot of status information for each task under the control of the FreeRTOS scheduler. The information is provided as an array of TaskStatus\_t structures, with one index in the array for each task. TaskStatus\_t is described by Listing 167 and Table 56.

---

```
UBaseType_t uxTaskGetSystemState( TaskStatus_t * const pxTaskStatusArray,
                                  const UBaseType_t uxArraySize,
                                  uint32_t * const pulTotalRunTime );
```

---

**Listing 166. The uxTaskGetSystemState() API function prototype**

**Table 55, uxTaskGetSystemState() parameters and return value**

Parameter Name	Description
pxTaskStatusArray	A pointer to an array of TaskStatus_t structures.  The array must contain at least one TaskStatus_t structure for each task. The number of tasks can be determined using the uxTaskGetNumberOfTasks() API function.  The TaskStatus_t structure is shown in Listing 167, and the TaskStatus_t structure members are described in Table 56.
uxArraySize	The size of the array pointed to by the pxTaskStatusArray parameter.  The size is specified as the number of indexes in the array (the number of TaskStatus_t structures contained in the array), not by the number of bytes in the array.
pulTotalRunTime	If configGENERATE_RUN_TIME_STATS is set to 1 in FreeRTOSConfig.h, then *pulTotalRunTime is set by uxTaskGetSystemState() to the total run time (as defined by the run-time statistics clock provided by the application) since the target booted.  pulTotalRunTime is optional, and can be set to NULL if the total run time is not required.
Returned value	The number of TaskStatus_t structures that were populated by uxTaskGetSystemState() is returned.  The returned value should equal the number returned by the uxTaskGetNumberOfTasks() API function, but will be zero if the value passed in the uxArraySize parameter was too small.

```
typedef struct xTASK_STATUS
{
    TaskHandle_t xHandle;
    const char *pcTaskName;
    UBaseType_t xTaskNumber;
    eTaskState eCurrentState;
    UBaseType_t uxCurrentPriority;
    UBaseType_t uxBasePriority;
    uint32_t ulRunTimeCounter;
    uint16_t usStackHighWaterMark;
} TaskStatus_t;
```

**Listing 167. The TaskStatus\_t structure**

**Table 56. TaskStatus\_t structure members**

Parameter Name/ Returned Value	Description
xHandle	The handle of the task to which the information in the structure relates.
pcTaskName	The human readable text name of the task.
xTaskNumber	Each task has a unique xTaskNumber value.  If an application creates and deletes tasks at run time then it is possible that a task will have the same handle as a task that was previously deleted. xTaskNumber is provided to allow application code, and kernel aware debuggers, to distinguish between a task that is still valid, and a deleted task that had the same handle as the valid task.
ecurrentState	An enumerated type that holds the state of the task.  ecurrentState can be one of the following values: eRunning, eReady, eBlocked, eSuspended, eDeleted.  A task will only be reported as being in the eDeleted state for the short period between the time the task was deleted by a call to vTaskDelete(), and the time the Idle task frees the memory that was allocated to the deleted task's internal data structures and stack. After that time, the task will no longer exist in any way, and it is invalid to attempt to use its handle.

**Table 56. TaskStatus\_t structure members**

Parameter Name/ Returned Value	Description
uxCurrentPriority	The priority at which the task was running at the time uxTaskGetSystemState() was called. uxCurrentPriority will only be higher than the priority assigned to the task by the application writer if the task has temporarily been assigned a higher priority in accordance with the priority inheritance mechanism described in section 7.3, Mutexes (and Binary Semaphores).
uxBasePriority	The priority assigned to the task by the application writer. uxBasePriority is only valid if configUSE_MUTEXES is set to 1 in FreeRTOSConfig.h.
ulRunTimeCounter	The total run time used by the task since the task was created. The total run time is provided as an absolute time that uses the clock provided by the application writer for the collection of run-time statistics. ulRunTimeCounter is only valid if configGENERATE_RUN_TIME_STATS is set to 1 in FreeRTOSConfig.h.
usStackHighWaterMark	The task's stack high water mark. This is the minimum amount of stack space that has remained for the task since the task was created. It is an indication of how close the task has come to overflowing its stack; the closer this value is to zero, the closer the task has come to overflowing its stack. usStackHighWaterMark is specified in bytes.

### **The vTaskList() Helper Function**

vTaskList() provides similar task status information to that provided by uxTaskGetSystemState(), but it presents the information as a human readable ASCII table, rather than an array of binary values.

vTaskList() is a very processor intensive function, and leaves the scheduler suspended for an extended period. Therefore, it is recommended the function is used for debug purposes only, and not in a production real-time system.

vTaskList() is available if configUSE\_TRACE\_FACILITY and configUSE\_STATS\_FORMATTING\_FUNCTIONS are both set to 1 in FreeRTOSConfig.h.

---

```
void vTaskList( signed char *pcWriteBuffer );
```

---

**Listing 168. The vTaskList() API function prototype**

**Table 57. vTaskList() parameters**

Parameter Name	Description
----------------	-------------

pcWriteBuffer A pointer to a character buffer into which the formatted and human readable table is written. The buffer must be large enough to hold the entire table, as no boundary checking is performed.

An example of the output generated by vTaskList() is shown in Figure 88. In the output:

- Each row provides information on a single task.
- The first column is the task's name.
- The second column is the task's state, where 'R' means Ready, 'B' means Blocked, 'S' means Suspended, and 'D' means the task has been deleted. A task will only be reported as being in the deleted state for the short period between the time the task was deleted by a call to vTaskDelete(), and the time the Idle task frees the memory that was allocated to the deleted task's internal data structures and stack. After that time, the task will no longer exist in any way, and it is invalid to attempt to use its handle.
- The third column is the task's priority.
- The fourth column is the task's stack high water mark. See the description of usStackHighWaterMark in Table 56.
- The fifth column is the unique number allocated to the task. See the description of xTaskNumber in Table 56

tcpip	R	3	393	0
Tmr_Svc	R	3	111	48
QConsB1	R	1	143	3
QProdB5	R	0	144	7
QConsB6	R	0	143	8
Po1SEM1	R	0	145	11
Po1SEM2	R	0	145	12
GenQ	R	0	155	17
MuLow	R	0	147	18
Rec3	R	0	141	30
SUSP_RX	R	0	148	36
Math1	R	0	167	38
Math2	R	0	167	39

**Figure 88 Example output generated by vTaskList()**

### The vTaskGetRunTimeStats() Helper Function

vTaskGetRunTimeStats() formats collected run-time statistics into a human readable ASCII table.

vTaskGetRunTimeStats() is a very processor intensive function and leaves the scheduler suspended for an extended period. Therefore, it is recommended the function is used for debug purposes only, and not in a production real-time system.

vTaskGetRunTimeStats() is available when configGENERATE\_RUN\_TIME\_STATS and configUSE\_STATS\_FORMATTING\_FUNCTIONS are both set to 1 in FreeRTOSConfig.h.

---

```
void vTaskGetRunTimeStats( signed char *pcWriteBuffer );
```

---

**Listing 169. The vTaskGetRunTimeStats() API function prototype**

**Table 58. vTaskGetRunTimeStats() parameters**

Parameter Name	Description
----------------	-------------

pcWriteBuffer A pointer to a character buffer into which the formatted and human readable table is written. The buffer must be large enough to hold the entire table, as no boundary checking is performed.

An example of the output generated by vTaskGetRunTimeStats() is shown in Figure 89. In the output:

- Each row provides information on a single task.

- The first column is the task name.
- The second column is the amount of time the task has spent in the Running state as an absolute value. See the description of ulRunTimeCounter in Table 56.
- The third column is the amount of time the task has spent in the Running state as a percentage of the total time since the target was booted. The total of the displayed percentage times will normally be less than the expected 100% because statistics are collected and calculated using integer calculations that round down to the nearest integer value.

PolSEM1	994	<1%
PolSEM2	23248	1%
GenQ	194479	16%
MuLow	3690	<1%
Rec3	229450	18%
CNT1	242720	19%
PeekL	94	<1%
CNT_INC	165	<1%
CNT2	243166	20%
SUSP_RX	243192	20%
IDLE	55	<1%

Figure 89 Example output generated by vTaskGetRunTimeStats()

### Generating and Displaying Run-Time Statistics, a Worked Example

This example uses a hypothetical 16-bit timer to generate a 32-bit run-time statistics clock. The counter is configured to generate an interrupt each time the 16-bit value reaches its maximum value—effectively creating an overflow interrupt. The interrupt service routine counts the number of overflow occurrences.

The 32-bit value is created by using the count of overflow occurrences as the two most significant bytes of the 32-bit value, and the current 16-bit counter value as the least significant two bytes of the 32-bit value. Pseudo code for the interrupt service routine is shown in Listing 170.

---

```

void TimerOverflowInterruptHandler( void )
{
    /* Just count the number of interrupts. */
    ulOverflowCount++;

    /* Clear the interrupt. */
    ClearTimerInterrupt();
}

```

---

**Listing 170. 16-bit timer overflow interrupt handler used to count timer overflows**

Listing 171 shows the lines added to FreeRTOSConfig.h to enable the collection of run-time statistics.

---

```

/* Set configGENERATE_RUN_TIME_STATS to 1 to enable collection of run-time
statistics. When this is done, both portCONFIGURE_TIMER_FOR_RUN_TIME_STATS() and
portGET_RUN_TIME_COUNTER_VALUE() or portALT_GET_RUN_TIME_COUNTER_VALUE(x) must also
be defined. */
#define configGENERATE_RUN_TIME_STATS    1

/* portCONFIGURE_TIMER_FOR_RUN_TIME_STATS() is defined to call the function that sets
up the hypothetical 16-bit timer (the function's implementation is not shown). */
void vSetupTimerForRunTimeStats( void );
#define portCONFIGURE_TIMER_FOR_RUN_TIME_STATS() vSetupTimerForRunTimeStats()

/* portALT_GET_RUN_TIME_COUNTER_VALUE() is defined to set its parameter to the
current run-time counter/time value. The returned time value is 32-bits long, and is
formed by shifting the count of 16-bit timer overflows into the top two bytes of a
32-bit number, then bitwise ORing the result with the current 16-bit counter
value. */
#define portALT_GET_RUN_TIME_COUNTER_VALUE( ulCountValue ) \
{ \
    extern volatile unsigned long ulOverflowCount; \
    \
    /* Disconnect the clock from the counter so it does not change \
     * while its value is being used. */ \
    PauseTimer(); \
    \
    /* The number of overflows is shifted into the most significant \
     * two bytes of the returned 32-bit value. */ \
    ulCountValue = ( ulOverflowCount << 16UL ); \
    \
    /* The current counter value is used as the least significant \
     * two bytes of the returned 32-bit value. */ \
    ulCountValue |= ( unsigned long ) ReadTimerCount(); \
    \
    /* Reconnect the clock to the counter. */ \
    ResumeTimer(); \
}

```

---

**Listing 171. Macros added to FreeRTOSConfig.h to enable the collection of run-time statistics**

The task shown in Listing 172 prints out the collected run-time statistics every 5 seconds.

```
/* For clarity, calls to fflush() have been omitted from this code listing. */
static void prvStatsTask( void *pvParameters )
{
    TickType_t xLastExecutionTime;

    /* The buffer used to hold the formatted run-time statistics text needs to be quite
     * large. It is therefore declared static to ensure it is not allocated on the task
     * stack. This makes this function non re-entrant. */
    static signed char cStringBuffer[ 512 ];

    /* The task will run every 5 seconds. */
    const TickType_t xBlockPeriod = pdMS_TO_TICKS( 5000 );

    /* Initialize xLastExecutionTime to the current time. This is the only time this
     * variable needs to be written to explicitly. Afterwards it is updated internally
     * within the vTaskDelayUntil() API function. */
    xLastExecutionTime = xTaskGetTickCount();

    /* As per most tasks, this task is implemented in an infinite loop. */
    for( ; ; )
    {
        /* Wait until it is time to run this task again. */
        vTaskDelayUntil( &xLastExecutionTime, xBlockPeriod );

        /* Generate a text table from the run-time stats. This must fit into the
         * cStringBuffer array. */
        vTaskGetRunTimeStats( cStringBuffer );

        /* Print out column headings for the run-time stats table. */
        printf( "\nTask\t\tAbs\t\t\t%%\n" );
        printf( "-----\n" );

        /* Print out the run-time stats themselves. The table of data contains
         * multiple lines, so the vPrintMultipleLines() function is called instead of
         * calling printf() directly. vPrintMultipleLines() simply calls printf() on
         * each line individually, to ensure the line buffering works as expected. */
        vPrintMultipleLines( cStringBuffer );
    }
}
```

---

**Listing 172. The task that prints out the collected run-time statistics**

## 11.6 Trace Hook Macros

---

Trace macros are macros that have been placed at key points within the FreeRTOS source code. By default, the macros are empty, and so do not generate any code, and have no run time overhead. By overriding the default empty implementations, an application writer can:

- Insert code into FreeRTOS without modifying the FreeRTOS source files.
- Output detailed execution sequencing information by any means available on the target hardware. Trace macros appear in enough places in the FreeRTOS source code to allow them to be used to create a full and detailed scheduler activity trace and profiling log.

### Available Trace Hook Macros

It would take too much space to detail every macro here. Table 59 details the subset of macros deemed to be most useful to an application writer.

Many of the descriptions in Table 59 refer to a variable called pxCurrentTCB. pxCurrentTCB is a FreeRTOS private variable that holds the handle of the task in the Running state, and is available to any macro that is called from the FreeRTOS/Source/tasks.c source file.

**Table 59. A selection of the most commonly used trace hook macros**

Macro	Description
traceTASK_INCREMENT_TICK(xTickCount)	Called during the tick interrupt, after the tick count is incremented. The xTickCount parameter passes the new tick count value into the macro.
traceTASK_SWITCHED_OUT()	Called before a new task is selected to run. At this point, pxCurrentTCB contains the handle of the task about to leave the Running state.

**Table 59. A selection of the most commonly used trace hook macros**

Macro	Description
traceTASK_SWITCHED_IN()	Called after a task is selected to run. At this point, pxCurrentTCB contains the handle of the task about to enter the Running state.
traceBLOCKING_ON_QUEUE_RECEIVE(pxQueue)	Called immediately before the currently executing task enters the Blocked state following an attempt to read from an empty queue, or an attempt to 'take' an empty semaphore or mutex. The pxQueue parameter passes the handle of the target queue or semaphore into the macro.
traceBLOCKING_ON_QUEUE_SEND(pxQueue)	Called immediately before the currently executing task enters the Blocked state following an attempt to write to a queue that is full. The pxQueue parameter passes the handle of the target queue into the macro.
traceQUEUE_SEND(pxQueue)	Called from within xQueueSend(), xQueueSendToFront(), xQueueSendToBack(), or any of the semaphore 'give' functions, when the queue send or semaphore 'give' is successful. The pxQueue parameter passes the handle of the target queue or semaphore into the macro.

**Table 59. A selection of the most commonly used trace hook macros**

Macro	Description
traceQUEUE_SEND_FAILED(pxQueue)	Called from within xQueueSend(), xQueueSendToFront(), xQueueSendToBack(), or any of the semaphore ‘give’ functions, when the queue send or semaphore ‘give’ operation fails. A queue send or semaphore ‘give’ will fail if the queue is full and remains full for the duration of any block time specified. The pxQueue parameter passes the handle of the target queue or semaphore into the macro.
traceQUEUE_RECEIVE(pxQueue)	Called from within xQueueReceive() or any of the semaphore ‘take’ functions, when the queue receive or semaphore ‘take’ is successful. The pxQueue parameter passes the handle of the target queue or semaphore into the macro.

**Table 59. A selection of the most commonly used trace hook macros**

Macro	Description
traceQUEUE_RECEIVE_FAILED(pxQueue)	Called from within xQueueReceive() or any of the semaphore ‘take’ functions, when the queue or semaphore receive operation fails. A queue receive or semaphore ‘take’ operation will fail if the queue or semaphore is empty and remains empty for the duration of any block time specified. The pxQueue parameter passes the handle of the target queue or semaphore into the macro.
traceQUEUE_SEND_FROM_ISR(pxQueue)	Called from within xQueueSendFromISR() when the send operation is successful. The pxQueue parameter passes the handle of the target queue into the macro.
traceQUEUE_SEND_FROM_ISR_FAILED(pxQueue)	Called from within xQueueSendFromISR() when the send operation fails. A send operation will fail if the queue is already full. The pxQueue parameter passes the handle of the target queue into the macro.

**Table 59. A selection of the most commonly used trace hook macros**

Macro	Description
traceQUEUE_RECEIVE_FROM_ISR(pxQueue)	Called from within xQueueReceiveFromISR() when the receive operation is successful. The pxQueue parameter passes the handle of the target queue into the macro.
traceQUEUE_RECEIVE_FROM_ISR_FAILED(pxQueue)	Called from within xQueueReceiveFromISR() when the receive operation fails due to the queue already being empty. The pxQueue parameter passes the handle of the target queue into the macro.
traceTASK_DELAY_UNTIL()	Called from within vTaskDelayUntil() immediately before the calling task enters the Blocked state.
traceTASK_DELAY()	Called from within vTaskDelay() immediately before the calling task enters the Blocked state.

### Defining Trace Hook Macros

Each trace macro has a default empty definition. The default definition can be overridden by providing a new macro definition in FreeRTOSConfig.h. If trace macro definitions become long or complex, then they can be implemented in a new header file that is then itself included from FreeRTOSConfig.h.

In accordance with software engineering best practice, FreeRTOS maintains a strict data hiding policy. Trace macros allow user code to be added to the FreeRTOS source files, so the data types visible to the trace macros will be different to those visible to application code:

- Inside the FreeRTOS/Source/tasks.c source file, a task handle is a pointer to the data structure that describes a task (the task's *Task Control Block*, or *TCB*). Outside of the FreeRTOS/Source/tasks.c source file a task handle is a pointer to void.
- Inside the FreeRTOS/Source/queue.c source file, a queue handle is a pointer to the data structure that describes a queue. Outside of the FreeRTOS/Source/queue.c source file a queue handle is a pointer to void.

*Extreme caution is required if a normally private FreeRTOS data structure is accessed directly by a trace macro, as private data structures might change between FreeRTOS versions.*

## FreeRTOS Aware Debugger Plug-ins

Plug-ins that provide some FreeRTOS awareness are available for the following IDEs. This list may not be an exhaustive:

- Eclipse (StateViewer)
- Eclipse (ThreadSpy)
- IAR
- ARM DS-5
- Atollic TrueStudio
- Microchip MPLAB
- iSYSTEM WinIDEA

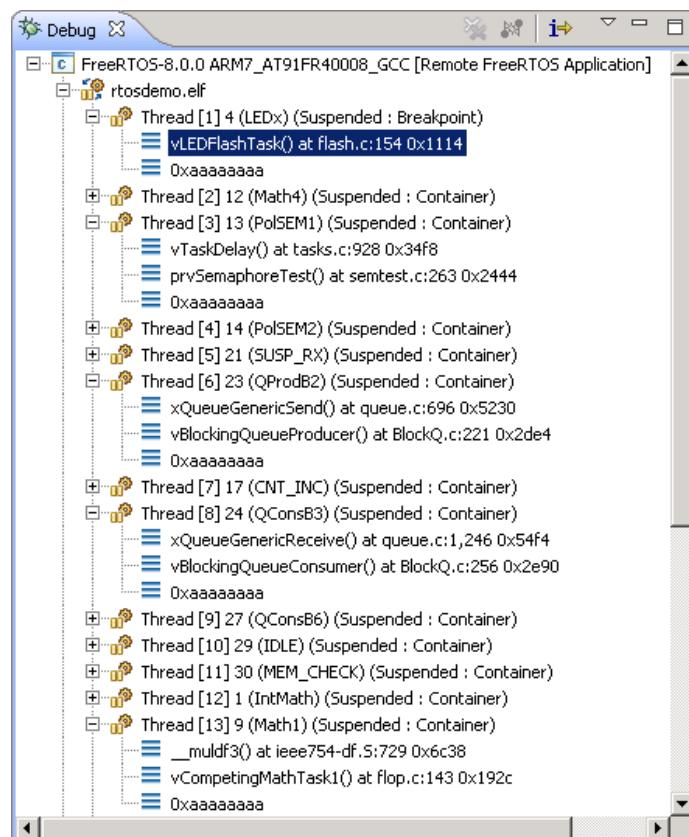


Figure 90 FreeRTOS ThreadSpy Eclipse plug-in from Code Confidence Ltd.



# Chapter 12

## Trouble Shooting

---

## 12.1 Chapter Introduction and Scope

---

This chapter highlights the most common issues encountered by users who are new to FreeRTOS. First it focuses on three issues that have proven to be the most frequent source of support requests over the years; incorrect interrupt priority assignment, stack overflow, and inappropriate use of printf(). It then briefly, and in an FAQ style, touches on other common errors, their possible cause, and their solutions.

*Using configASSERT() improves productivity by immediately trapping and identifying many of the most common sources of error. It is strongly advised to have configASSERT() defined while developing or debugging a FreeRTOS application. configASSERT() is described in section 11.2.*

## 12.2 Interrupt Priorities

---

*Note: This is the number one cause of support requests, and in most ports defining configASSERT() will trap the error immediately!*

If the FreeRTOS port in use supports interrupt nesting, and the service routine for an interrupt makes use of the FreeRTOS API, then it is *essential* the interrupt's priority is set at or below configMAX\_SYSCALL\_INTERRUPT\_PRIORITY, as described in section 6.8, Interrupt Nesting. Failure to do this will result in ineffective critical sections, which in turn will result in intermittent failures.

Take particular care if running FreeRTOS on a processor where:

- Interrupt priorities default to having the highest possible priority, which is the case on some ARM Cortex processors, and possibly others. On such processors, the priority of an interrupt that uses the FreeRTOS API cannot be left uninitialized.
- Numerically high priority numbers represent logically low interrupt priorities, which may seem counterintuitive, and therefore cause confusion. Again this is the case on ARM Cortex processors, and possibly others.
- For example, on such a processor an interrupt that is executing at priority 5 can itself be interrupted by an interrupt that has a priority of 4. Therefore, if configMAX\_SYSCALL\_INTERRUPT\_PRIORITY is set to 5, any interrupt that uses the FreeRTOS API can only be assigned a priority numerically higher than or equal to 5. In that case, interrupt priorities of 5 or 6 would be valid, but an interrupt priority of 3 is definitely invalid.
- Different library implementations expect the priority of an interrupt to be specified in a different way. Again, particularly relevant to libraries that target ARM Cortex processors, where interrupt priorities are bit shifted before being written to the hardware registers. Some libraries will perform the bit shift themselves, whereas others expect the bit shift to be performed before the priority is passed into the library function.
- Different implementations of the same architecture implement a different number of interrupt priority bits. For example, a Cortex-M processor from one manufacturer may

implement 3 priority bits, while a Cortex-M processor from another manufacturers may implement 4 priority bits.

- The bits that define the priority of an interrupt can be split between bits that define a pre-emption priority, and bits that define a sub-priority. Ensure all the bits are assigned to specifying a pre-emption priority, so sub-priorities are not used.

In some FreeRTOS ports, configMAX\_SYSCALL\_INTERRUPT\_PRIORITY has the alternative name configMAX\_API\_CALL\_INTERRUPT\_PRIORITY.

## 12.3 Stack Overflow

---

Stack overflow is the second most common source of support requests. FreeRTOS provides several features to assist trapping and debugging stack related issues<sup>1</sup>.

### The uxTaskGetStackHighWaterMark() API Function

Each task maintains its own stack, the total size of which is specified when the task is created. uxTaskGetStackHighWaterMark() is used to query how close a task has come to overflowing the stack space allocated to it. This value is called the stack ‘high water mark’.

---

```
UBaseType_t uxTaskGetStackHighWaterMark( TaskHandle_t xTask );
```

---

**Listing 173. The uxTaskGetStackHighWaterMark() API function prototype**

**Table 60. uxTaskGetStackHighWaterMark() parameters and return value**

Parameter Name/ Returned Value	Description
xTask	<p>The handle of the task whose stack high water mark is being queried (the subject task)—see the pxCreatedTask parameter of the xTaskCreate() API function for information on obtaining handles to tasks.</p> <p>A task can query its own stack high water mark by passing NULL in place of a valid task handle.</p>
Returned value	<p>The amount of stack used by the task grows and shrinks as the task executes and interrupts are processed.</p> <p>uxTaskGetStackHighWaterMark() returns the minimum amount of remaining stack space that has been available since the task started executing. This is the amount of stack that remains unused when stack usage is at its greatest (or deepest) value. The closer the high water mark is to zero, the closer the task has come to overflowing its stack.</p>

---

<sup>1</sup> These features are not available in the FreeRTOS Windows port.

## Run Time Stack Checking—Overview

FreeRTOS includes two optional run time stack checking mechanisms. These are controlled by the configCHECK\_FOR\_STACK\_OVERFLOW compile time configuration constant within FreeRTOSConfig.h. Both methods increase the time it takes to perform a context switch.

The stack overflow hook (or stack overflow callback) is a function that is called by the kernel when it detects a stack overflow. To use a stack overflow hook function:

1. Set configCHECK\_FOR\_STACK\_OVERFLOW to either 1 or 2 in FreeRTOSConfig.h, as described in the following sub-sections.
2. Provide the implementation of the hook function, using the exact function name and prototype shown in Listing 174.

---

```
void vApplicationStackOverflowHook( TaskHandle_t *pxTask, signed char *pcTaskName );
```

---

**Listing 174. The stack overflow hook function prototype**

The stack overflow hook is provided to make trapping and debugging stack errors easier, but there is no real way to recover from a stack overflow when it occurs. The function's parameters pass the handle and name of the task that has overflowed its stack into the hook function.

The stack overflow hook gets called from the context of an interrupt.

Some microcontrollers generate a fault exception when they detect an incorrect memory access, and it is possible for a fault to be triggered before the kernel has a chance to call the stack overflow hook function.

## Run Time Stack Checking—Method 1

Method 1 is selected when configCHECK\_FOR\_STACK\_OVERFLOW is set to 1.

A task's entire execution context is saved onto its stack each time it gets swapped out. It is likely that this will be the time at which stack usage reaches its peak. When configCHECK\_FOR\_STACK\_OVERFLOW is set to 1, the kernel checks that the stack pointer remains within the valid stack space after the context has been saved. The stack overflow hook is called if the stack pointer is found to be outside its valid range.

Method 1 is quick to execute, but can miss stack overflows that occur between context switches.

### **Run Time Stack Checking—Method 2**

Method 2 performs additional checks to those already described for method 1. It is selected when configCHECK\_FOR\_STACK\_OVERFLOW is set to 2.

When a task is created, its stack is filled with a known pattern. Method 2 tests the last valid 20 bytes of the task stack space to verify that this pattern has not been overwritten. The stack overflow hook function is called if any of the 20 bytes have changed from their expected values.

Method 2 is not as quick to execute as method 1, but is still relatively fast, as only 20 bytes are tested. Most likely, it will catch all stack overflows; however, it is possible (but highly improbable) that some overflows will be missed.

## **12.4 Inappropriate Use of printf() and sprintf()**

---

Inappropriate use of printf() is a common source of error, and, unaware of this, it is common for application developers to then add further calls to printf() to aid debugging, and in-so-doing, exasperate the problem.

Many cross compiler vendors will provide a printf() implementation that is suitable for use in small embedded systems. Even when that is the case, the implementation may not be thread safe, probably won't be suitable for use inside an interrupt service routine, and depending on where the output is directed, take a relatively long time to execute.

Particular care must be taken if a printf() implementation that is specifically designed for small embedded systems is not available, and a generic printf() implementation is used instead, as:

- Just including a call to printf() or sprintf() can massively increase the size of the application's executable.
- printf() and sprintf() may call malloc(), which might be invalid if a memory allocation scheme other than heap\_3 is in use. See section 2.2, Example Memory Allocation Schemes, for more information.
- printf() and sprintf() may require a stack that is many times bigger than would otherwise be required.

### **Printf-stdarg.c**

Many of the FreeRTOS demonstration projects use a file called printf-stdarg.c, which provides a minimal and stack-efficient implementation of sprintf() that can be used in place of the standard library version. In most cases, this will permit a much smaller stack to be allocated to each task that calls sprintf() and related functions.

printf-stdarg.c also provides a mechanism for directing the printf() output to a port character by character, which while slow, allows stack usage to be decreased even further.

Note that not all copies of printf-stdarg.c included in the FreeRTOS download implement snprintf(). Copies that do not implement snprintf() simply ignore the buffer size parameter, as they map directly to sprintf().

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

Printf-stdarg.c is open source, but is owned by a third party, and therefore licensed separately from FreeRTOS. The license terms are contained at the top of the source file.

## 12.5 Other Common Sources of Error

---

### **Symptom: Adding a simple task to a demo causes the demo to crash**

Creating a task requires memory to be obtained from the heap. Many of the demo application projects dimension the heap to be exactly big enough to create the demo tasks—so, after the tasks are created, there will be insufficient heap remaining for any further tasks, queues, event groups, or semaphores to be added.

The idle task, and possible also the RTOS daemon task, are created automatically when vTaskStartScheduler() is called. vTaskStartScheduler() will return only if there is not enough heap memory remaining for these tasks to be created. Including a null loop [ for(;;) ] after the call to vTaskStartScheduler() can make this error easier to debug.

To be able to add more tasks, either increase the heap size, or remove some of the existing demo tasks. See section 2.2, Example Memory Allocation Schemes, for more information.

### **Symptom: Using an API function within an interrupt causes the application to crash**

Do not use API functions within interrupt service routines, unless the name of the API function ends with ‘...FromISR()’. In particular, do not create a critical section within an interrupt unless using the interrupt safe macros. See section 6.2, Using the FreeRTOS API from an ISR, for more information.

In FreeRTOS ports that support interrupt nesting, do not use any API functions in an interrupt that has been assigned an interrupt priority above configMAX\_SYSCALL\_INTERRUPT\_PRIORITY. See section 6.8, Interrupt Nesting, for more information.

### **Symptom: Sometimes the application crashes within an interrupt service routine**

The first thing to check is that the interrupt is not causing a stack overflow. Some ports only check for stack overflow within tasks, and not within interrupts.

The way interrupts are defined and used differs between ports and between compilers. Therefore, the second thing to check is that the syntax, macros, and calling conventions used in the interrupt service routine are exactly as described on the documentation page provided

for the port being used, and exactly as demonstrated in the demo application provided with the port.

If the application is running on a processor that uses numerically low priority numbers to represent logically high priorities, then ensure the priority assigned to each interrupt takes that into account, as it can seem counter-intuitive. If the application is running on a processor that defaults the priority of each interrupt to the maximum possible priority, then ensure the priority of each interrupt is not left at its default value. See section 6.8, Interrupt Nesting, and section 12.2, Interrupt Priorities, for more information.

#### **Symptom: The scheduler crashes when attempting to start the first task**

Ensure the FreeRTOS interrupt handlers have been installed. Refer to the documentation page for the FreeRTOS port in use for information, and the demo application provided for the port for an example.

Some processors must be in a privileged mode before the scheduler can be started. The easiest way to achieve this is to place the processor into a privileged mode within the C startup code, before main() is called.

#### **Symptom: Interrupts are unexpectedly left disabled, or critical sections do not nest correctly**

If a FreeRTOS API function is called before the scheduler has been started then interrupts will deliberately be left disabled, and not re-enable again until the first task starts to execute. This is done to protect the system from crashes caused by interrupts attempting to use FreeRTOS API functions during system initialization, before the scheduler has been started, and while the scheduler may be in an inconsistent state.

Do not alter the microcontroller interrupt enable bits or priority flags using any method other than calls to taskENTER\_CRITICAL() and taskEXIT\_CRITICAL(). These macros keep a count of their call nesting depth to ensure interrupts become enabled again only when the call nesting has unwound completely to zero. Be aware that some library functions may themselves enable and disable interrupts.

#### **Symptom: The application crashes even before the scheduler is started**

An interrupt service routine that could potentially cause a context switch must not be permitted to execute before the scheduler has been started. The same applies to any interrupt service

routine that attempts to send to or receive from a FreeRTOS object, such as a queue or semaphore. A context switch cannot occur until after the scheduler has started.

Many API functions cannot be called until after the scheduler has been started. It is best to restrict API usage to the creation of objects such as tasks, queues, and semaphores, rather than the use of these objects, until after vTaskStartScheduler() has been called.

**Symptom: Calling API functions while the scheduler is suspended, or from inside a critical section, causes the application to crash**

The scheduler is suspended by calling vTaskSuspendAll() and resumed (unsuspended) by calling xTaskResumeAll(). A critical section is entered by calling taskENTER\_CRITICAL(), and exited by calling taskEXIT\_CRITICAL().

Do not call API functions while the scheduler is suspended, or from inside a critical section.

161204 Pre-release for FreeRTOS V8.x.x. See <http://www.FreeRTOS.org/FreeRTOS-V9.html> for information about FreeRTOS V9.x.x. See <https://www.freertos.org/FreeRTOS-V10.html> for information about FreeRTOS V10.x.x.

# INDEX

## A

atomic, 235

## B

background  
    background processing, 76  
BaseType\_t, 22  
best fit, 30, 32  
Binary Semaphore, 191  
Blocked State, 64  
Blocking on Queue Reads, 106  
Blocking on Queue Writes, 106  
Building FreeRTOS, 11

## C

configAPPLICATION\_ALLOCATED\_HEAP, 35  
configCHECK\_FOR\_STACK\_OVERFLOW, 360  
configGENERATE\_RUN\_TIME\_STATS, 338  
configIDLE\_SHOULD\_YIELD, 75, 95  
configKERNEL\_INTERRUPT\_PRIORITY, 228  
configMAX\_PRIORITIES, 58  
configMAX\_SYSCALL\_INTERRUPT\_PRIORITY, 228  
configMINIMAL\_STACK\_DEPTH, 50  
configTICK\_RATE\_HZ, 60  
configTOTAL\_HEAP\_SIZE, 29  
configUSE\_IDLE\_HOOK, 77  
configUSE\_PORT\_OPTIMISED\_TASK\_SELECTION,  
    58  
configUSE\_PREEMPTION, 90  
configUSE\_TASK\_NOTIFICATIONS, 295  
configUSE\_TICKLESS\_IDLE, 90  
configUSE\_TIME\_SLICING, 90  
continuous processing, 72  
    continuous processing task, 64  
co-operative scheduling, 97  
Counting Semaphores, 208  
Creating a FreeRTOS Project, 18  
Creating Tasks, 48  
critical regions, 238  
critical section, 230  
Critical sections, 238

## D

Data Types, 21  
Deadlock, 251  
Deadly Embrace, 251  
deferred interrupts, 191  
Deleting a Task, 85  
Demo Applications, 16

## E

eNoAction, 309  
eNotifyAction, 308

errQUEUE\_FULL, 111  
eSetBits, 309  
eSetValueWithoutOverwrite, 309  
eSetValueWithOverwrite, 310  
Event Bits, 268  
event driven, 64  
Event Flags, 268  
Event Groups, 265  
EventBits\_t, 269  
EventGroupHandle\_t, 271  
Events, 182

## F

fixed execution period, 70  
Fixed Priority, 92  
Formatting, 23  
free(), 26  
FreeRTOSConfig.h, 11  
Function Names, 22  
Function Reentrancy, 235

## G

Gatekeeper tasks, 259

## H

Header Files, 15  
Heap\_1, 29  
Heap\_2, 30  
Heap\_3, 32  
Heap\_4, 32  
heap\_5, 35  
HeapRegion\_t, 36  
high water mark, 359  
highest priority, 51

## I

Idle Task, 68, 75  
Idle Task Hook, 75  
**Include Paths**, 14  
Interrupt Nesting, 228

## L

locking the scheduler, 240  
low power mode, 76  
lowest priority, 51, 58

## M

Macro Names, 23  
Malloc Failed Hook, 42  
malloc(), 26  
Measuring the amount of spare processing capacity, 76  
Mutex, 243  
mutual exclusion, 236

## N

non-atomic, 235  
Not Running state, 47

## O

OpenRTOS, 6

## P

pdMS\_TO\_TICKS, 61  
periodic  
    periodic tasks, 66  
    periodic interrupt, 60  
Port, 11  
portCONFIGURE\_TIMER\_FOR\_RUN\_TIME\_STATS,  
    338  
portGET\_RUN\_TIME\_COUNTER\_VALUE, 339  
portMAX\_DELAY, 110, 112, 161, 171, 175, 278, 289,  
    301  
pre-empted  
    pre-emption, 75  
Pre-emptive, 92  
Priorities, 58  
Prioritized Pre-emptive Scheduling, 95  
priority, 51, 58  
priority inheritance, 250  
priority inversion, 249  
pvParameters, 50, 159, 215, 341  
pvPortMalloc(), 27

## Q

queue access by Multiple Tasks, 106  
queue block time, 106  
queue item size, 103  
queue length, 103  
QueueHandle\_t, 108  
Queues, 101  
QueueSetHandle\_t, 132

## R

RAM allocation, 27  
Read, Modify, Write Operations, 234  
Ready state, 65  
reentrant, 235  
Round Robin, 91  
Run Time Stack Checking, 360  
Run Time Statistics, 337  
Running state, 47, 64

## S

SafeRTOS, 6  
Scheduling Algorithms, 90  
SemaphoreHandle\_t, 194, 210, 245  
Software Timers, 147  
Source Files, 12  
spare processing capacity  
    measuring spare processing capacity, 69  
Stack Overflow, 359  
stack overflow hook, 360

starvation, 62  
starving  
    starvation, 64  
state diagram, 65  
Suspended State, 65  
suspending the scheduler, 240  
swapped in, 47  
swapped out, 47  
switched in, 47  
switched out, 47  
Synchronization, 191  
Synchronization events, 64

## T

tabs, 23  
Task Functions, 46  
task handle, 51, 82  
Task Notifications, 293  
Task Parameter, 55  
Task Synchronization, 285  
taskYIELD(), 98  
Temporal  
    temporal events, 64  
the xSemaphoreCreateMutex(), 245  
tick count, 61  
tick hook function, 259  
tick interrupt, 60  
Tick Interrupt, 60  
ticks, 61  
TickType\_t, 21  
Time Measurement, 60  
time slice, 60  
Time Slicing, 92  
Trace Hook Macros, 348  
Trace macros, 348  
traceBLOCKING\_ON\_QUEUE\_RECEIVE, 349  
traceBLOCKING\_ON\_QUEUE\_SEND, 349  
traceQUEUE\_RECEIVE, 350  
traceQUEUE\_RECEIVE\_FAILED, 351  
traceQUEUE\_RECEIVE\_FROM\_ISR, 352  
traceQUEUE\_RECEIVE\_FROM\_ISR\_FAILED, 352  
traceQUEUE\_SEND, 349  
traceQUEUE\_SEND\_FAILED, 350  
traceQUEUE\_SEND\_FROM\_ISR, 351  
traceQUEUE\_SEND\_FROM\_ISR\_FAILED, 351  
tracetASK\_DELAY, 352  
tracetASK\_DELAY\_UNTIL, 352  
tracetTASK\_INCREMENT\_TICK, 348  
tracetTASK\_SWITCHED\_IN, 349  
tracetTASK\_SWITCHED\_OUT, 348  
Type Casting, 24

## U

ulBitsToClearOnEntry, 310  
ulBitsToClearOnExit, 311  
ulTaskNotifyTake(), 300  
uxQueueMessagesWaiting(), 113  
uxTaskGetStackHighWaterMark(), 359  
uxTaskPriorityGet(), 79

## V

vApplicationStackOverflowHook, 360

Variable Names, 22  
vPortDefineHeapRegions(), 36  
vPortFree(), 27  
vSemaphoreCreateBinary(), 194, 210  
vTaskDelay(), 66  
vTaskDelayUntil(), 70  
vTaskDelete(), 85  
vTaskGetRunTimeStats(), 344  
vTaskNotifyGiveFromISR(), 299  
vTaskPrioritySet(), 79  
vTaskResume(), 65  
vTaskSuspend(), 65  
vTaskSuspendAll(), 241

## X

xClearCountOnExit, 301  
xEventGroupCreate(), 271  
xEventGroupSetBits(), 271  
xEventGroupSetBitsFromISR(), 272  
xEventGroupSync(), 287  
xEventGroupWaitBits(), 275

xPortGetFreeHeapSize(), 41  
xPortGetMinimumEverFreeHeapSize(), 41  
xQueueCreate(), 108, 132, 271  
xQueuePeek(), 145  
xQueueReceive(), 111  
xQueueSend(), 109  
xQueueSendFromISR(), 220  
xQueueSendToBack(), 109, 144  
xQueueSendToFront(), 109, 144  
xSemaphoreCreateCounting(), 210  
xSemaphoreCreateRecursiveMutex(), 253  
xSemaphoreGiveFromISR(), 196  
xSemaphoreGiveRecursive(), 253  
xSemaphoreTakeRecursive(), 253  
xTaskCreate(), 48  
xTaskGetTickCount(), 72  
xTaskNotify(), 307  
xTaskNotifyFromISR(), 308  
xTaskNotifyGive(), 298  
xTaskNotifyWait(), 310  
xTaskResumeAll(), 241  
xTaskResumeFromISR(), 65



