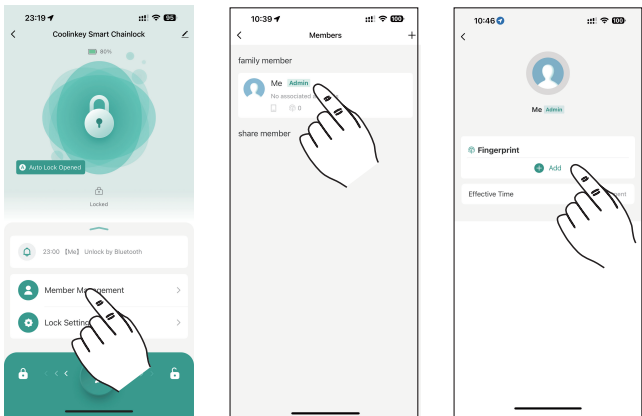
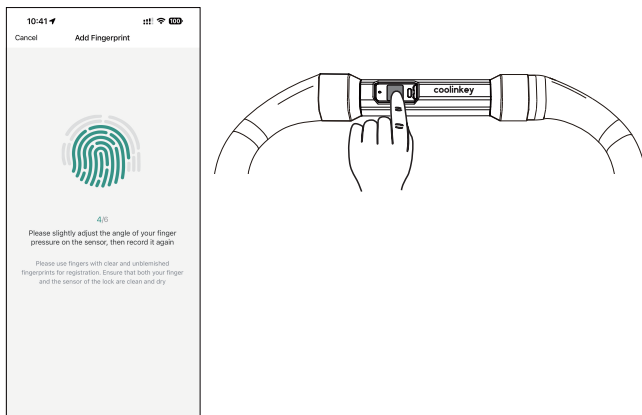
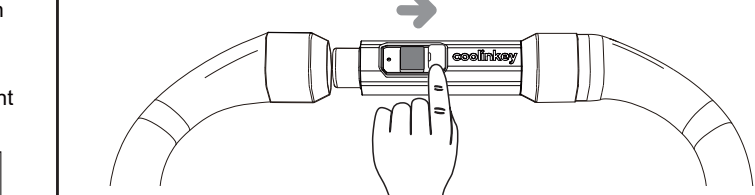
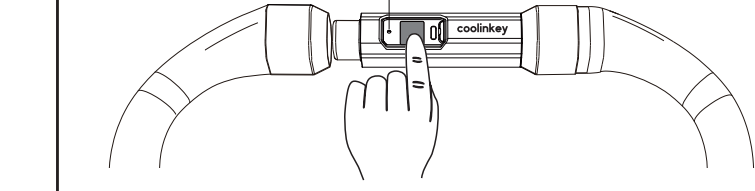
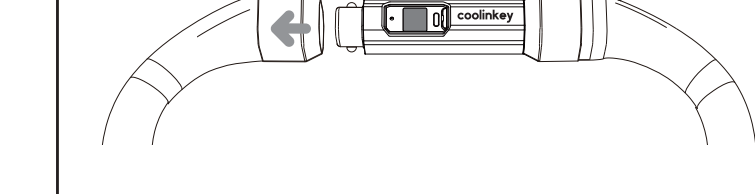
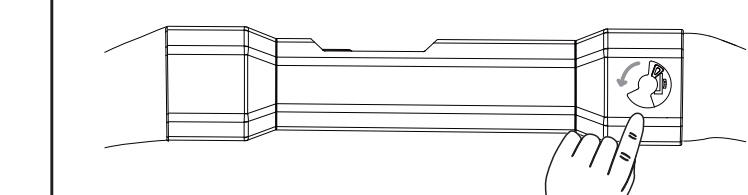
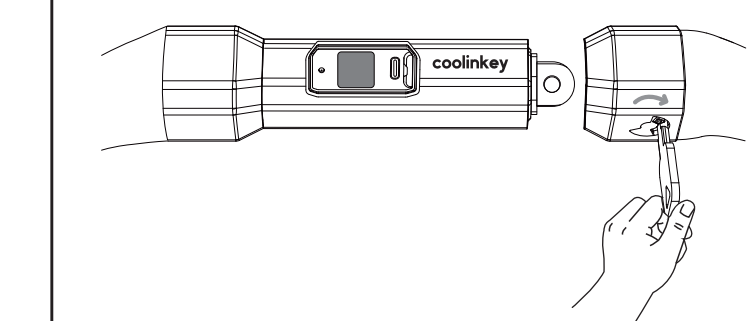
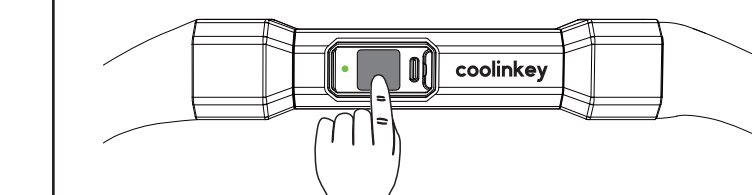
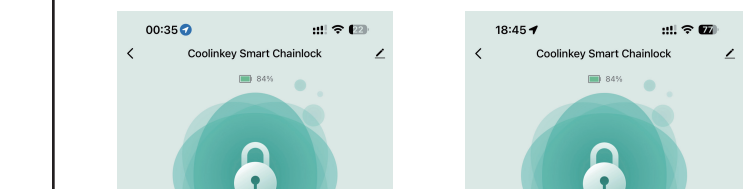
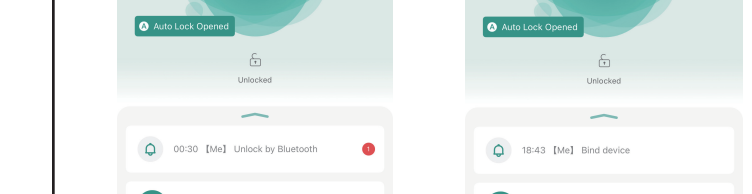
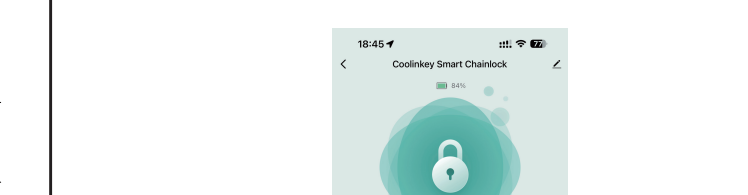
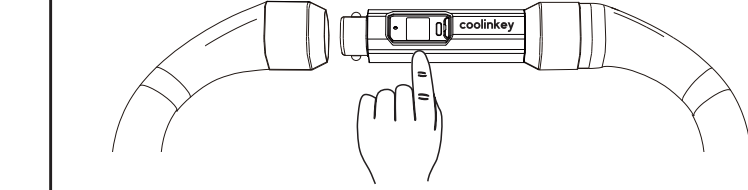
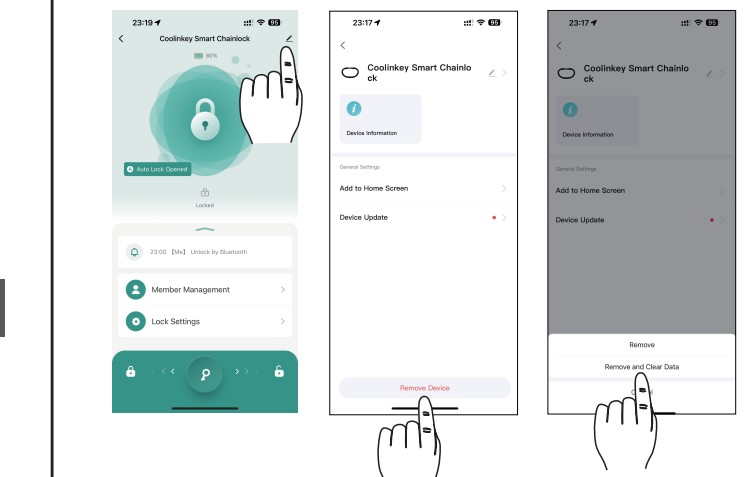


Adding Fingerprints - On the app main interface, tap [Member Management] to enter the member management interface. - Select the target member from the member list. - Locate the [Fingerprint] section and tap [Add], then follow the on-screen instructions to navigate to the fingerprint enrollment interface.  - Follow the prompts to steadily press your finger 6 times to complete fingerprint registration. During the process, there will be light and sound indications. 	Fingerprint Unlocking - Slide the fingerprint cover back one notch to fully expose the fingerprint sensor area.  - Place your finger on the fingerprint sensor area. The lock will immediately activate and start recognizing your fingerprint. Recognition Success: Green light flashes twice, buzzer plays a low-medium-high tone. Recognition Failure: Red light flashes twice, buzzer plays deep-beep-beep. Recognition successful: the green indicator flashes twice. Recognition failed: the red indicator flashes twice.  - Once recognized, pull the shackle out to open the lock. 	Key Unlocking - Rotate the round slider on the side of the lock cylinder counterclockwise to fully expose the keyhole.  - Insert the key and rotate it clockwise to unlock, then remove the shackle.  Note CLX1 Supports: Fingerprint unlock + key unlock CLX2 Supports: Fingerprint unlock	Bluetooth Unlocking - Touch the fingerprint sensor area with any finger to wake up the device. The device will emit a sound prompt, and the blue indicator will show a breathing effect, entering Bluetooth waiting-for-connection status.  - If the app shows Bluetooth not connected, tap the corresponding area to trigger the APP to establish a Bluetooth connection with the device.  - After the app successfully connects to the device, swipe the key icon at the bottom of the APP interface to the right to complete the unlocking operation. 	Bluetooth Locking Similar to Bluetooth unlocking, swipe the key icon at the bottom of the app to the left to complete the locking operation.  Auto Lock After enabling the Auto-lock function in the app, the lock will automatically lock a few seconds after the lock bolt is closed. 	Factory Reset This product provides two unpairing methods: Unbind: Only disconnect the device, and all data stored in the lock will be retained. Unbind & Clear Data: Disconnect the device and restore factory settings, which will completely erase all data. (*Unbind & Clear Data is recommended.) - Tap the Edit icon in the upper right corner of the device main interface in the app to enter the device editing page. - Tap the [Remove Device] button. - Select the Unbind & Clear Data option to remove the device from the app and restore the lock to factory settings. 	Frequently Asked Questions (FAQ) <table> <thead> <tr> <th>Problem</th><th>Solution</th></tr> </thead> <tbody> <tr> <td>The app indicates connection failure or timeout.</td><td> - Touch the fingerprint identification area and check if the device responds. - If the device responds abnormally or not at all, the battery may be too low or exhausted. Please charge and try again. - If the device responds normally, please ensure that the account logged in the app is consistent with the account used during pairing. - If none of the above issues exist, ensure that the phone and the device are as close as possible, and complete the connection between the mobile phone app and the device within 30 seconds after the device's blue light starts breathing. </td></tr> <tr> <td>Failed to Add Fingerprint</td><td> - Ensure your fingers are dry and clean, and try using another finger if needed. - It is recommended to add fingerprints when the device has sufficient power. Charge the device and try again if necessary. </td></tr> <tr> <td>Cannot Find Device When Tapping the app [••] During Device Binding, Unable to Complete Binding</td><td> - Touch the fingerprint identification area to ensure the device is in wake-up state, then perform the binding operation. - Check if the device has already been bound to another account. Note: One device can only be bound to one account. - Try the following steps: First turn off the phone's Bluetooth, exit the app, then re-enable Bluetooth, restart the app, and try again. </td></tr> <tr> <td>Auto-Lock Fails After Closing the Lock</td><td> - Confirm that the Auto-Lock switch is enabled in More Settings of the app. - You can manually trigger locking via the app or by using an incorrect fingerprint to check if the locking function works normally. </td></tr> </tbody> </table>	Problem	Solution	The app indicates connection failure or timeout.	- Touch the fingerprint identification area and check if the device responds. - If the device responds abnormally or not at all, the battery may be too low or exhausted. Please charge and try again. - If the device responds normally, please ensure that the account logged in the app is consistent with the account used during pairing. - If none of the above issues exist, ensure that the phone and the device are as close as possible, and complete the connection between the mobile phone app and the device within 30 seconds after the device's blue light starts breathing.	Failed to Add Fingerprint	- Ensure your fingers are dry and clean, and try using another finger if needed. - It is recommended to add fingerprints when the device has sufficient power. Charge the device and try again if necessary.	Cannot Find Device When Tapping the app [••] During Device Binding, Unable to Complete Binding	- Touch the fingerprint identification area to ensure the device is in wake-up state, then perform the binding operation. - Check if the device has already been bound to another account. Note: One device can only be bound to one account. - Try the following steps: First turn off the phone's Bluetooth, exit the app, then re-enable Bluetooth, restart the app, and try again.	Auto-Lock Fails After Closing the Lock	- Confirm that the Auto-Lock switch is enabled in More Settings of the app. - You can manually trigger locking via the app or by using an incorrect fingerprint to check if the locking function works normally.	 Shenzhen coolinkey Technology Co., Ltd.
Problem	Solution																
The app indicates connection failure or timeout.	- Touch the fingerprint identification area and check if the device responds. - If the device responds abnormally or not at all, the battery may be too low or exhausted. Please charge and try again. - If the device responds normally, please ensure that the account logged in the app is consistent with the account used during pairing. - If none of the above issues exist, ensure that the phone and the device are as close as possible, and complete the connection between the mobile phone app and the device within 30 seconds after the device's blue light starts breathing.																
Failed to Add Fingerprint	- Ensure your fingers are dry and clean, and try using another finger if needed. - It is recommended to add fingerprints when the device has sufficient power. Charge the device and try again if necessary.																
Cannot Find Device When Tapping the app [••] During Device Binding, Unable to Complete Binding	- Touch the fingerprint identification area to ensure the device is in wake-up state, then perform the binding operation. - Check if the device has already been bound to another account. Note: One device can only be bound to one account. - Try the following steps: First turn off the phone's Bluetooth, exit the app, then re-enable Bluetooth, restart the app, and try again.																
Auto-Lock Fails After Closing the Lock	- Confirm that the Auto-Lock switch is enabled in More Settings of the app. - You can manually trigger locking via the app or by using an incorrect fingerprint to check if the locking function works normally.																