Thermodynamics: An Engineering Approach 8th Edition

Yunus A. Çengel, Michael A. Boles McGraw-Hill, 2015

PROPERTIES OF PURE SUBSTANCES

Objectives

- Introduce the concept of a pure substance.
- Discuss the physics of phase-change processes.
- Illustrate the *P-v*, *T-v*, and *P-T* property diagrams and *P-v-T* surfaces of pure substances.
- Demonstrate the procedures for determining thermodynamic properties of pure substances from tables of property data.
- Describe the hypothetical substance "ideal gas" and the ideal-gas equation of state.
- Apply the ideal-gas equation of state in the solution of typical problems.
- Introduce the compressibility factor, which accounts for the deviation of real gases from ideal-gas behavior.
- Present some of the best-known equations of state.

PURE SUBSTANCE

- Pure substance: A substance that has a fixed chemical composition throughout.
- Air is a mixture of several gases, but it is considered to be a pure substance.

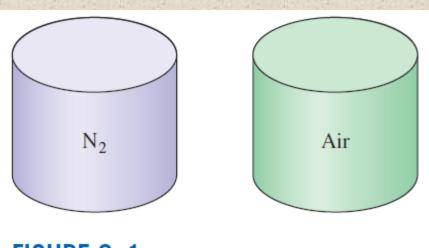


FIGURE 3-1

Nitrogen and gaseous air are pure substances.

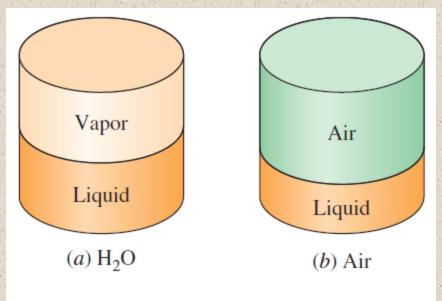
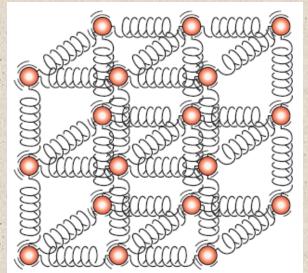



FIGURE 3-2


A mixture of liquid and gaseous water is a pure substance, but a mixture of liquid and gaseous air is not.

PHASES OF A PURE SUBSTANCE

The molecules in a solid are kept at their positions by the large springlike inter-molecular forces.



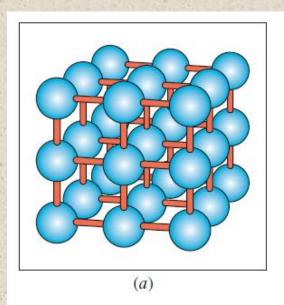

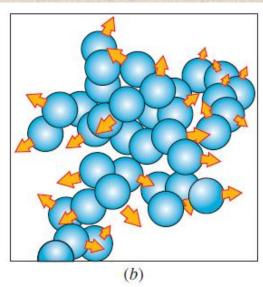

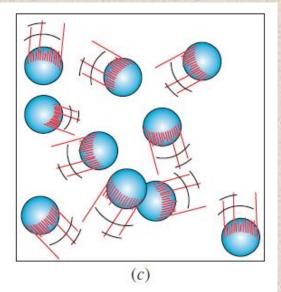


FIGURE 3-4

The arrangement of atoms in different phases: (a) molecules are at relatively fixed positions in a solid, (b) groups of molecules move about each other in the liquid phase, and (c) molecules move about at random in the gas phase.

PHASE-CHANGE PROCESSES OF PURE SUBSTANCES

Compressed liquid (subcooled liquid): A substance that it is not about to vaporize

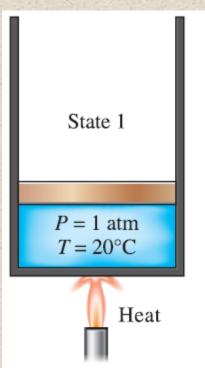


FIGURE 3-5

At 1 atm and 20°C, water exists in the liquid phase (*compressed liquid*).

Saturated liquid: A liquid that is about to vaporize


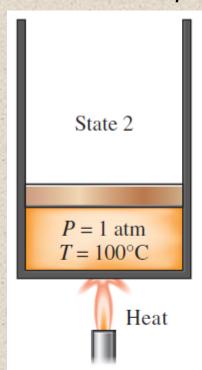


FIGURE 3-6


At 1 atm pressure and 100°C, water exists as a liquid that is ready to vaporize (*saturated liquid*).

- Saturated vapor: A vapor that is about to condense.
- Saturated liquid-vapor mixture: The state at which the liquid and vapor phases coexist in equilibrium.


Superheated vapor: A vapor that is not about to condense (i.e., not a saturated vapor).

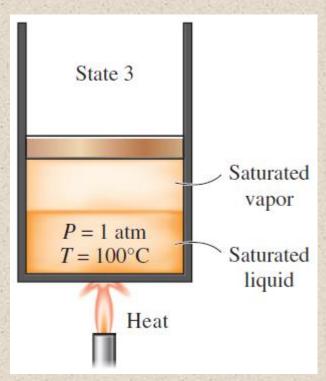

As more heat is transferred, part of the saturated liquid vaporizes (saturated liquid-vapor mixture).

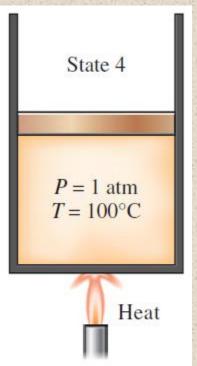


At 1 atm pressure, the temperature remains constant at 100°C until the last drop of liquid is vaporized (saturated vapor).

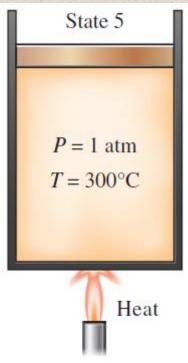

As more heat is transferred, the temperature of the vapor starts to rise (superheated vapor).

If the entire process between state 1 and 5 is reversed by cooling the water while maintaining the pressure at the same value, the water will go back to state 1, retracing the same path, and in so doing, the amount of heat released will exactly match the amount of heat added during the heating process.

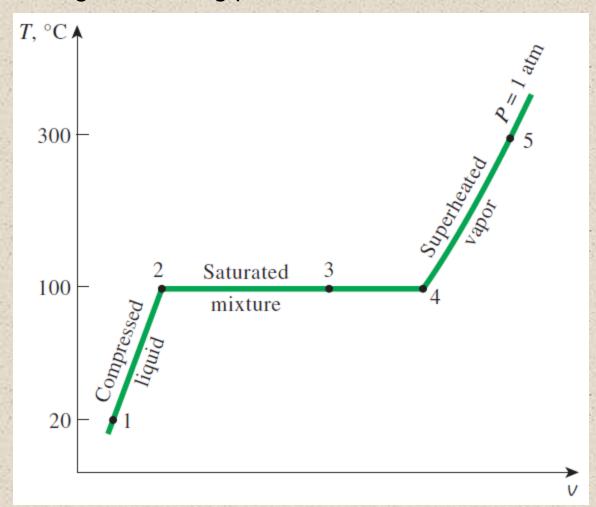

T-v diagram for the heating process of water at constant pressure.


Saturation Temperature and Saturation Pressure

The temperature at which water starts boiling depends on the pressure; therefore, if the pressure is fixed, so is the boiling temperature.

Water boils at 100°C at 1 atm pressure.

Saturation temperature T_{sat} : The temperature at which a pure substance changes phase at a given pressure.

Saturation pressure *P*_{sat}: The pressure at which a pure substance changes phase at a given temperature.

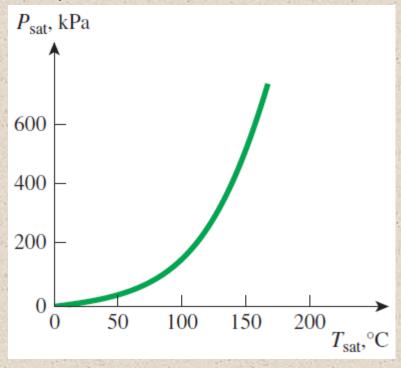

The liquid-vapor saturation curve of a pure substance (numerical values are for water).

TABLE 3-1

Saturation (or vapor) pressure of water at various temperatures

Temperature T, °C	Saturation Pressure P _{sat} , kPa
-10	0.260
-5	0.403
0	0.611
5	0.872
10	1.23
15	1.71
20	2.34
25	3.17
30	4.25
40	7.38
50	12.35
100	101.3 (1 atm)
150	475.8
200	1554
250	3973
300	8581


- Latent heat: The amount of energy absorbed or released during a phasechange process.
- Latent heat of fusion: The amount of energy absorbed during melting. It is equivalent to the amount of energy released during freezing.
- Latent heat of vaporization: The amount of energy absorbed during vaporization and it is equivalent to the energy released during condensation.
- The magnitudes of the latent heats depend on the temperature or pressure at which the phase change occurs.
- At 1 atm pressure, the latent heat of fusion of water is 333.7 kJ/kg and the latent heat of vaporization is 2256.5 kJ/kg.
- The atmospheric pressure, and thus the boiling temperature of water, decreases with elevation.

TABLE 3-2


Variation of the standard atmospheric pressure and the boiling (saturation) temperature of water with altitude

Elevation, m	Atmospheric pressure, kPa	Boiling tempera- ture, °C
0 1,000 2,000 5,000 10,000	101.33 89.55 79.50 54.05 26.50	100.0 96.5 93.3 83.3 66.3
20,000	5.53	34.7

Some Consequences of T_{sat} and P_{sat} Dependence

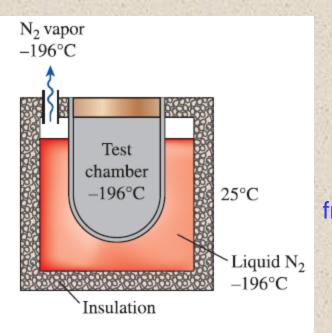


The variation of the temperature of fruits and vegetables with pressure during vacuum cooling from 25°C to 0°C.

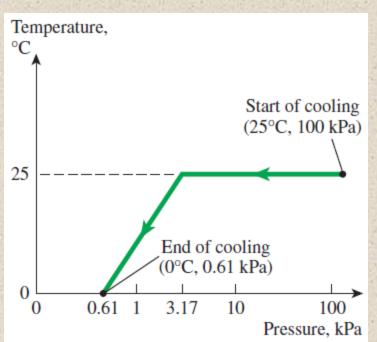




The temperature of liquid nitrogen exposed to the atmosphere remains constant at -196°C, and thus it maintains the test chamber at -196°C.

In 1775, ice was made by evacuating the air space in a water tank.

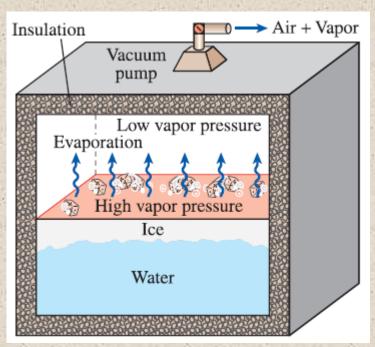


PROPERTY DIAGRAMS FOR PHASE-CHANGE PROCESSES


The variations of properties during phase-change processes are best studied and understood with the help of property diagrams such as the *T-v*, *P-v*, and *P-T* diagrams for pure substances.

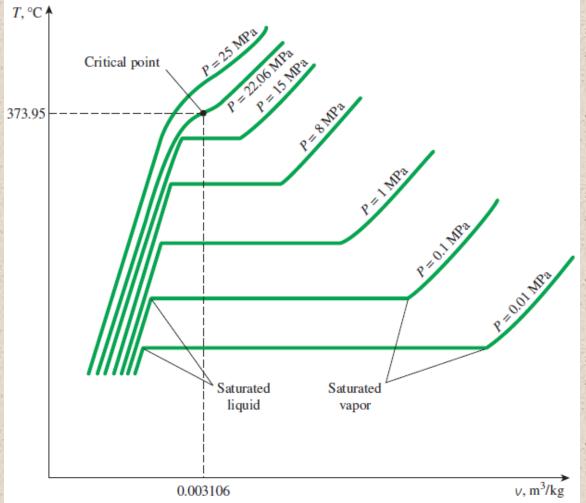

T-v diagram of constant-pressure phase-change processes of a pure substance at various pressures (numerical values are for water).

- saturated liquid line
- saturated vapor line
- compressed liquid region
- superheated vapor region
- saturated liquid-vapor mixture region (wet region)

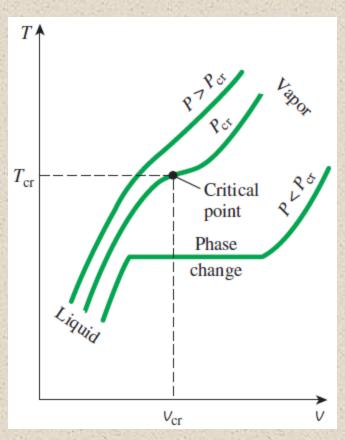

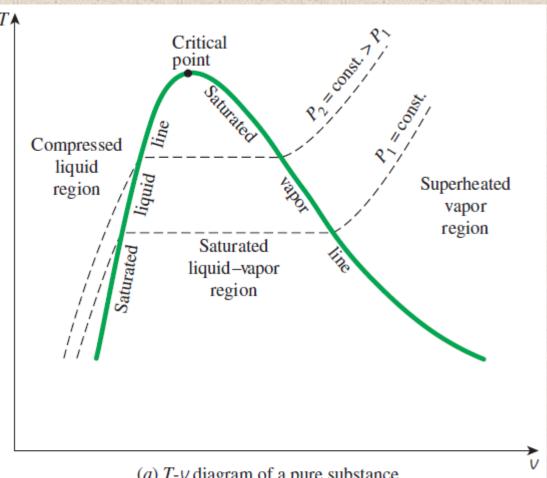


(a) T-V diagram of a pure substance

FIGURE 3-17

Property diagrams of a pure substance.

At supercritical pressures $(P > P_{cr})$, there is no distinct phase-change (boiling) process.

Critical point: The point at which the saturated liquid and saturated vapor states are identical.

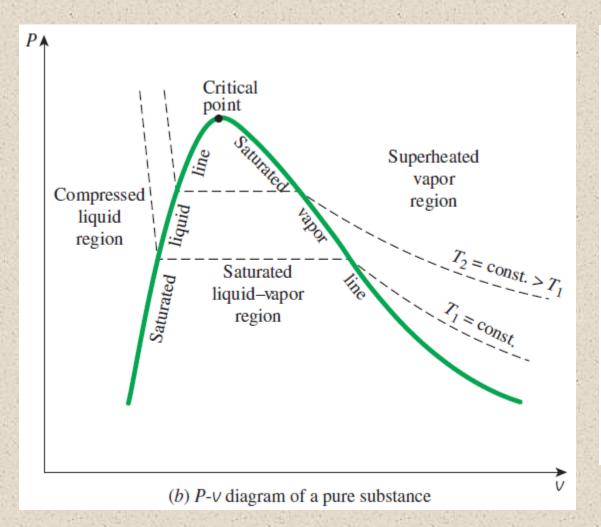


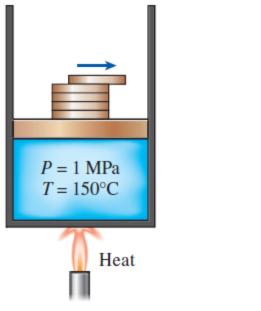


FIGURE 3-18


The pressure in a piston–cylinder device can be reduced by reducing the weight of the piston.


Extending the Diagrams to Include the Solid Phase

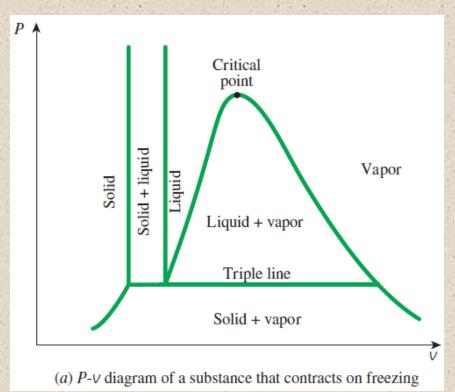

For water, $T_{tp} = 0.01$ °C $P_{tp} = 0.6117$ kPa

At triple-point pressure and temperature, a substance exists in three phases in equilibrium.

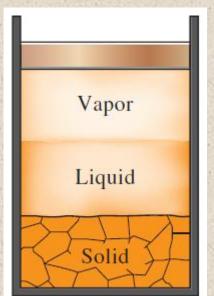

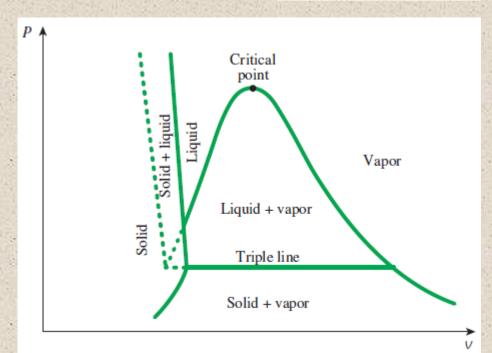

(b) P-v diagram of a substance that expands on freezing (such as water)


Phase Diagram

Sublimation:

Passing from the solid phase directly into the vapor phase.




At low pressures (below the triple-point value), solids evaporate without melting first (sublimation).

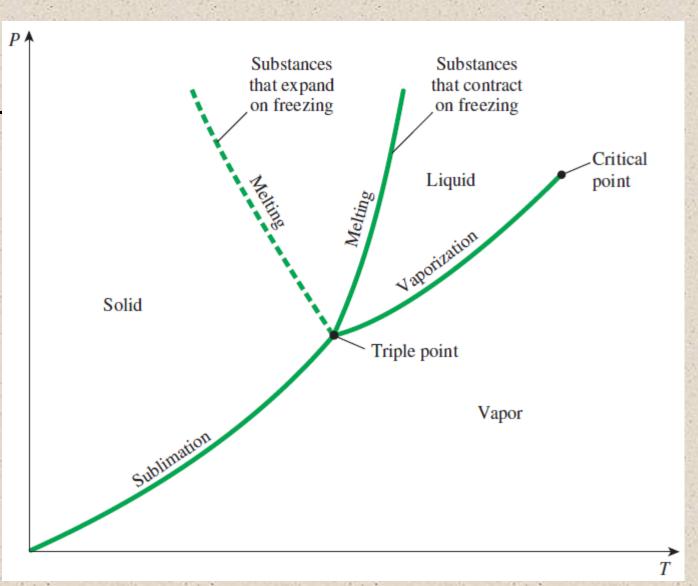

P-T diagram of pure substances.

The *P-v-T* surfaces present a great deal of information at once, but in a thermodynamic analysis it is more convenient to work with two-dimensional diagrams, such as the *P-v* and *T-v* diagrams.

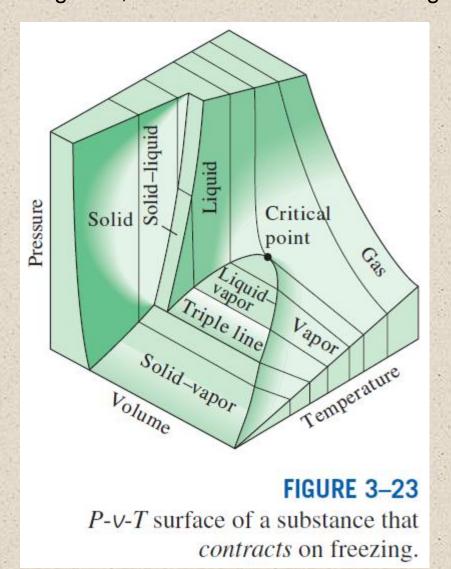

Liquid Critical point Pressure Liquid Solid Vapor Triple line Solid-vapor Temperature

FIGURE 3-24

P-v-T surface of a substance that *expands* on freezing (like water).

PROPERTY TABLES


- For most substances, the relationships among thermodynamic properties are too complex to be expressed by simple equations.
- Therefore, properties are frequently presented in the form of tables.
- Some thermodynamic properties can be measured easily, but others cannot and are calculated by using the relations between them and measurable properties.

The results of these measurements and calculations are presented in tables in a


convenient format.

Enthalpy—A Combination Property

$$h = u + PV$$
 (kJ/kg)
 $H = U + PV$ (kJ)

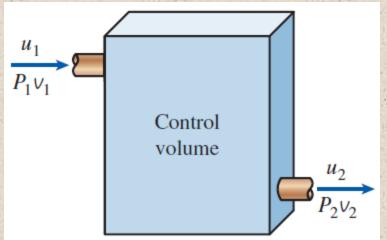

The combination u + Pv is frequently encountered in the analysis of control volumes.

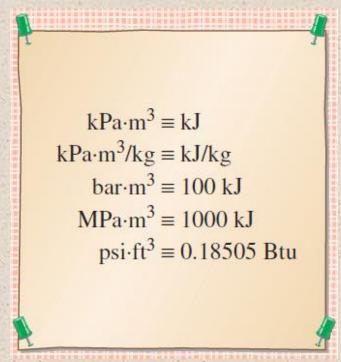

The product *pressure* × *volume* has energy units. ¹⁷


Saturated Liquid and Saturated Vapor States

 V_f = specific volume of saturated liquid

 v_g = specific volume of saturated vapor


 v_{fg} = difference between v_g and v_f (that is $v_{fg} = v_g - v_f$)

A partial list of Table A-4.

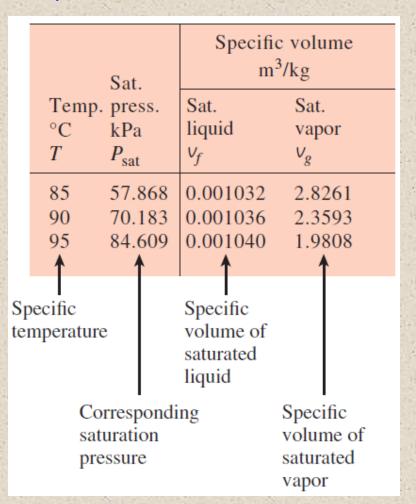


- Table A–4: Saturation properties of water under temperature.
- Table A–5: Saturation properties of water under pressure.


Enthalpy of vaporization, h_{fg} (Latent heat of vaporization): The amount of energy needed to vaporize a unit mass of saturated liquid at a given temperature or pressure.

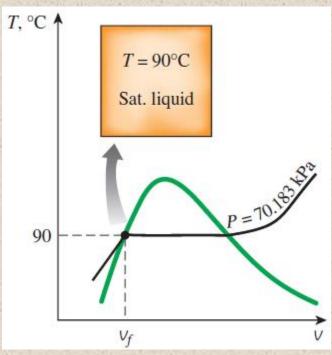

Examples:

Saturated liquid and saturated vapor states of water on *T-v* and *P-v* diagrams.

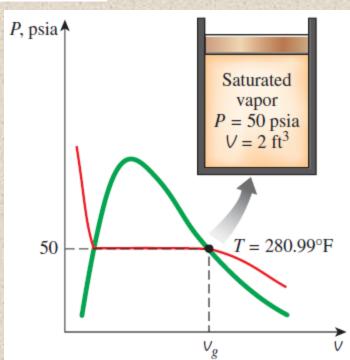

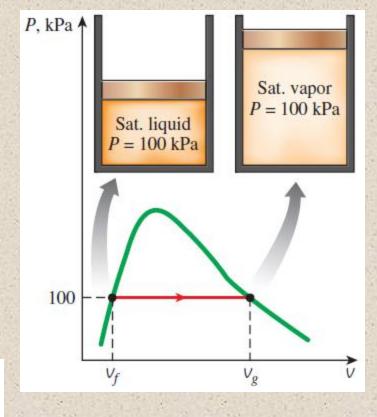


Saturated Liquid-Vapor Mixture

Quality, x: The ratio of the mass of vapor to the total mass of the mixture. Quality is between 0 and 1 \rightarrow 0: sat. liquid, 1: sat. vapor.


The properties of the saturated liquid are the same whether it exists alone or in a mixture with saturated vapor.

$$x = \frac{m_{\text{vapor}}}{m_{\text{total}}} \quad \frac{m_{\text{total}} = m_{\text{liquid}} + m_{\text{vapor}} = m_f + m_g}{m_{\text{total}}}$$

Temperature and pressure are dependent properties for a mixture.

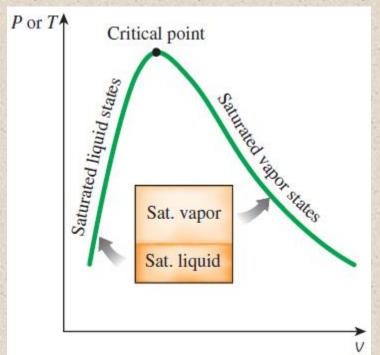

The relative amounts of liquid and vapor phases in a saturated mixture are specified by the *quality x*.

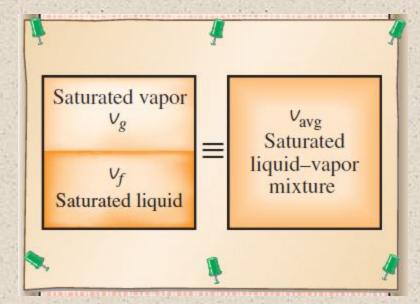

A two-phase system can be treated as a homogeneous mixture for convenience.

$$v_{\text{avg}} = v_f + x v_{fg} \qquad (\text{m}^3/\text{kg})$$

$$x = m_g/m_t$$

$$x = \frac{v_{\text{avg}} - v_f}{v_{fg}}$$

$$u_{\text{avg}} = u_f + x u_{fg} \qquad \text{(kJ/kg)}$$

$$h_{\text{avg}} = h_f + x h_{fg}$$
 (kJ/kg)

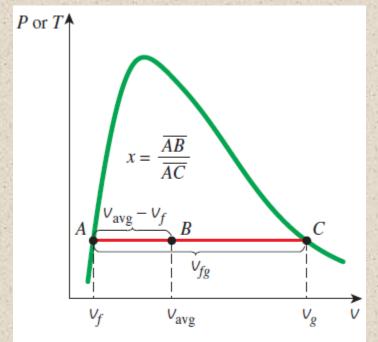
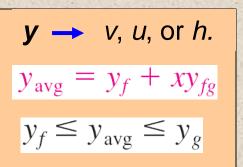


FIGURE 3-33

Quality is related to the horizontal distances on P- ν and T- ν diagrams.





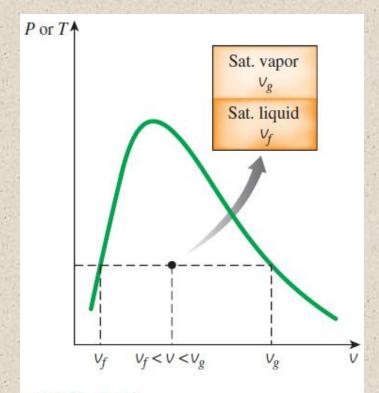


FIGURE 3-34

The V value of a saturated liquid–vapor mixture lies between the V_f and V_g values at the specified T or P.

Examples: Saturated liquid-vapor mixture states on *T-v* and *P-v* diagrams.

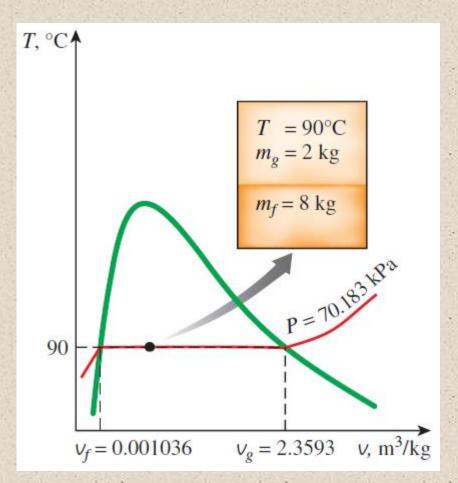

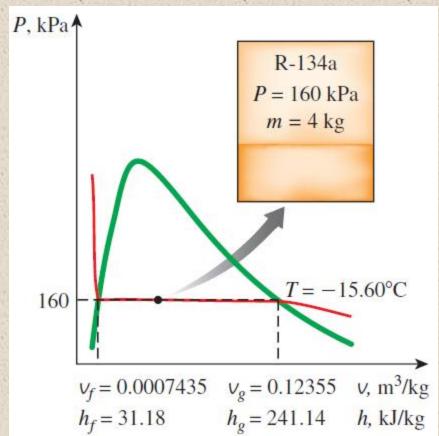

In the region to the right of the saturated vapor line and at temperatures above the critical point temperature, a substance exists as superheated vapor.

In this region, temperature and pressure are independent properties.

	V	и	h
T,°C	m³/kg	kJ/kg	kJ/kg
	P = 0.1	MPa (99.	.61°C)
Sat.	1.6941	2505.6	2675.0
100	1.6959	2506.2	2675.8
150	1.9367	2582.9	2776.6
:	:	:	:
1300	7.2605	4687.2	5413.3
	P = 0.5 1	MPa (151	.83°C)
Sat.	0.37483	2560.7	2748.1
200	0.42503	2643.3	2855.8
250	0.47443	2723.8	2961.0
: 1300 Sat. 200	$ \begin{array}{c} \vdots \\ 7.2605 \\ P = 0.51 \\ 0.37483 \\ 0.42503 \end{array} $: 4687.2 MPa (151 2560.7 2643.3	.83°C) 2748.1 2855.8

Superheated Vapor

Compared to saturated vapor, superheated vapor is characterized by

Lower pressures ($P < P_{\text{sat}}$ at a given T)

Higher tempreatures ($T > T_{\text{sat}}$ at a given P)


Higher specific volumes ($\lor > \lor_g$ at a given P or T)

Higher internal energies ($u > u_g$ at a given P or T)

Higher enthalpies ($h > h_g$ at a given P or T)

At a specified *P*, superheated vapor exists at a higher *h* than the saturated vapor.

A partial listing of Table A–6.

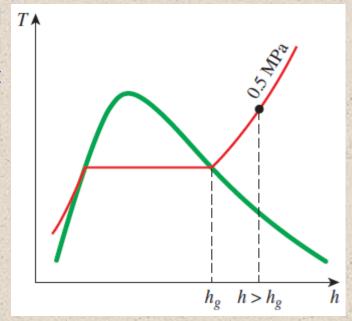

The compressed liquid properties depend on temperature much more strongly than they do on pressure.

$$y \cong y_{f@T}$$
 $y \rightarrow v$, u , or h

A more accurate relation for h

$$h \cong h_{f@T} + \nu_{f@T}(P - P_{sat@T})$$

Given: P and T


$$\begin{array}{l}
v \cong v_{f@T} \\
u \cong u_{f@T} \\
h \cong h_{f@T}
\end{array}$$

A compressed liquid may be approximated as a saturated liquid at the given temperature.

Compressed Liquid

Compressed liquid is characterized by

Higher pressures $(P > P_{\text{sat}})$ at a given T) Lower tempreatures $(T < T_{\text{sat}})$ at a given P) Lower specific volumes $(V < V_f)$ at a given P or T) Lower internal energies $(u < u_f)$ at a given P or T) Lower enthalpies $(h < h_f)$ at a given P or T)

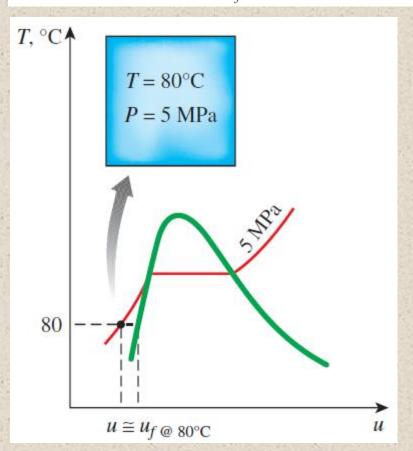

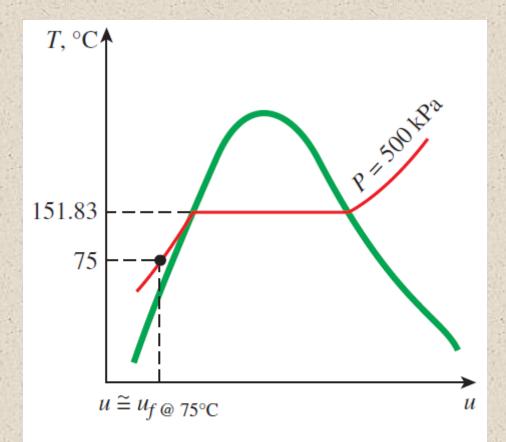


FIGURE 3-41

At a given P and T, a pure substance will exist as a compressed liquid if $T < T_{\text{sat @ }P}$.

Reference State and Reference Values

- The values of *u*, *h*, and *s* cannot be measured directly, and they are calculated from measurable properties using the relations between properties.
- However, those relations give the *changes* in properties, not the values of properties at specified states.
- Therefore, we need to choose a convenient *reference state* and assign a value of *zero* for a convenient property or properties at that state.
- The reference state for water is 0.01°C and for R-134a is -40°C in tables.
- Some properties may have negative values as a result of the reference state chosen.
- Sometimes different tables list different values for some properties at the same state as a result of using a different reference state.
- However, In thermodynamics we are concerned with the changes in properties, and the reference state chosen is of no consequence in calculations.

	Saturate	ed water—	Temperatu	re table									
	Specific volume,		<i>Internal energy,</i>			Enthalpy,			Entropy,				
	m ³ /kg		kJ/kg			kJ/kg			kJ/kg · K				
	Temp., <i>T</i> °C	Sat. press., P _{sat} kPa	Sat. liquid, v _f	Sat. vapor, v _g	Sat. Iiquid, <i>u_f</i>	Evap., u _{fg}	Sat. vapor, u_g	Sat. liquid, <i>h_f</i>	Evap., <i>h_{fg}</i>	Sat. vapor, h_g	Sat. liquid, s _f	Evap., s _{fg}	Sat. vapor, s _g
S S S S S S S S S S S S S S S S S S S	0.01	0.6117	0.001000	206.00	0.000	2374.9	2374.9	0.001	2500.9	2500.9	0.0000	9.1556	9.1556
	5	0.8725	0.001000	147.03	21.019	2360.8	2381.8	21.020	2489.1	2510.1	0.0763	8.9487	9.0249

Satura	ited refrig	erant-134a–	-Temperat	ure table								
		Specific i m³/k		Inte	ernal ene kJ/kg	rgy,		<i>Enthalpy</i> kJ/kg	;		Entropy, kJ/kg · K	
Temp.,	Sat. , press., <i>P</i> _{sat} kPa	Sat. liquid, v _f	Sat. vapor, v_g	Sat. Iiquid, <i>u_f</i>	Evap., u _{fg}	Sat. vapor, u_g	Sat. liquid, <i>h_f</i>	Evap., h _{fg}	Sat. vapor, <i>h_g</i>	Sat. liquid, s _f	Evap., s_{fg}	Sat. vapor, s_g
-40	51.25	0.0007054	0.36081	-0.036	207.40	207.37	0.000	225.86	225.86	0.00000	0.96866	0.96866

THE IDEAL-GAS EQUATION OF STATE

- Equation of state: Any equation that relates the pressure, temperature, and specific volume of a substance.
- The simplest and best-known equation of state for substances in the gas phase is the ideal-gas equation of state. This equation predicts the *P-v-T* behavior of a gas quite accurately within some properly selected region.

$$P = R\left(\frac{T}{V}\right)$$
 $PV = RT$ | Ideal gas equation of state

$$R = \frac{R_u}{M} \qquad (kJ/kg \cdot K \text{ or } kPa \cdot m^3/kg \cdot K)$$

R: gas constant

M: molar mass (kg/kmol)

 R_{ii} : universal gas constant

$$R_{u} = \begin{cases} 8.31447 \text{ kJ/kmol} \cdot \text{K} \\ 8.31447 \text{ kPa} \cdot \text{m}^{3}/\text{kmol} \cdot \text{K} \\ 0.0831447 \text{ bar} \cdot \text{m}^{3}/\text{kmol} \cdot \text{K} \\ 1.98588 \text{ Btu/lbmol} \cdot \text{R} \\ 10.7316 \text{ psia} \cdot \text{ft}^{3}/\text{lbmol} \cdot \text{R} \\ 1545.37 \text{ ft} \cdot \text{lbf/lbmol} \cdot \text{R} \end{cases}$$

Substance	R, kJ/kg·K	
Air	0.2870	
Helium	2.0769	
Argon	0.2081	
Nitrogen	0.2968	

Different substances have different gas constants.

 $Mass = Molar mass \times Mole number$

$$m = MN$$
 (kg)

$$\frac{P_1 V_1}{T_1} = \frac{P_2 V_2}{T_2}$$

Ideal gas $\frac{P_1 V_1}{T_1} = \frac{P_2 V_2}{T_2}$ equation at two states for a fixed states for a fixed mass

Various expressions of ideal gas equation

$$V = m \lor \longrightarrow P \lor = mRT$$

$$mR = (MN)R = NR_u \longrightarrow PV = NR_uT$$

$$V = N\overline{V} \longrightarrow P^{\overline{V}} = R_u T$$

Real gases behave as an ideal gas at low densities (i.e., low pressure, high temperature).


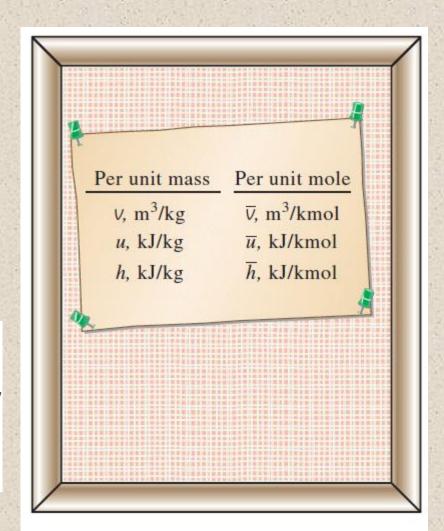


FIGURE 3-43

Properties per unit mole are denoted with a bar on the top.

Is Water Vapor an Ideal Gas?

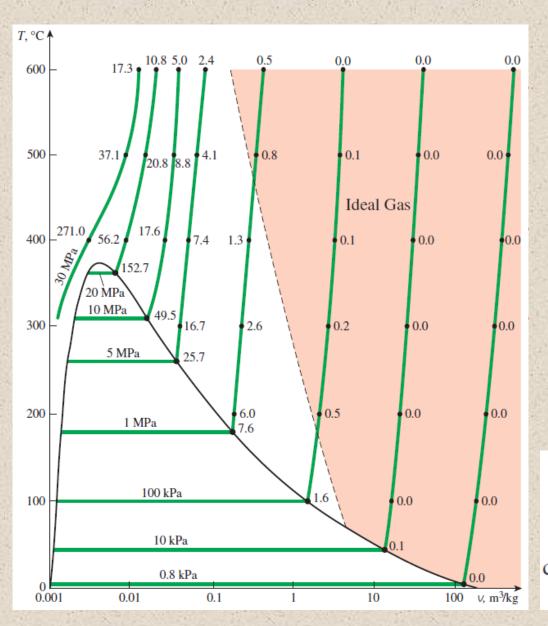

At pressures below 10 kPa, water vapor can be treated as an ideal gas, regardless of its temperature, with negligible error (less than 0.1 percent).

At higher pressures, however, the ideal gas assumption yields unacceptable errors, particularly in the vicinity of the critical point and the saturated vapor line.

In air-conditioning applications, the water vapor in the air can be treated as an ideal gas. Why?

In steam power plant applications, however, the pressures involved are usually very high; therefore, ideal-gas relations should not be used.

Percentage of error $([|v_{table} - v_{ideal}|/v_{table}] \times 100)$ involved in assuming steam to be an ideal gas, and the region where steam can be treated as an ideal gas with less than 1 percent error.

Summary

- Pure substance
- Phases of a pure substance
- Phase-change processes of pure substances
 - ✓ Compressed liquid, Saturated liquid, Saturated vapor, Superheated vapor
 - ✓ Saturation temperature and Saturation pressure
- Property diagrams for phase change processes
 - ✓ The *T-v* diagram, The *P-v* diagram, The *P-T* diagram, *The P-v-T* surface
- Property tables
 - ✓ Enthalpy
 - ✓ Saturated liquid, saturated vapor, Saturated liquid vapor mixture, Superheated vapor, compressed liquid
 - ✓ Reference state and reference values.
- The ideal gas equation of state
 - ✓ Is water vapor an ideal gas?