


REAR WINDOW DEFOGGER

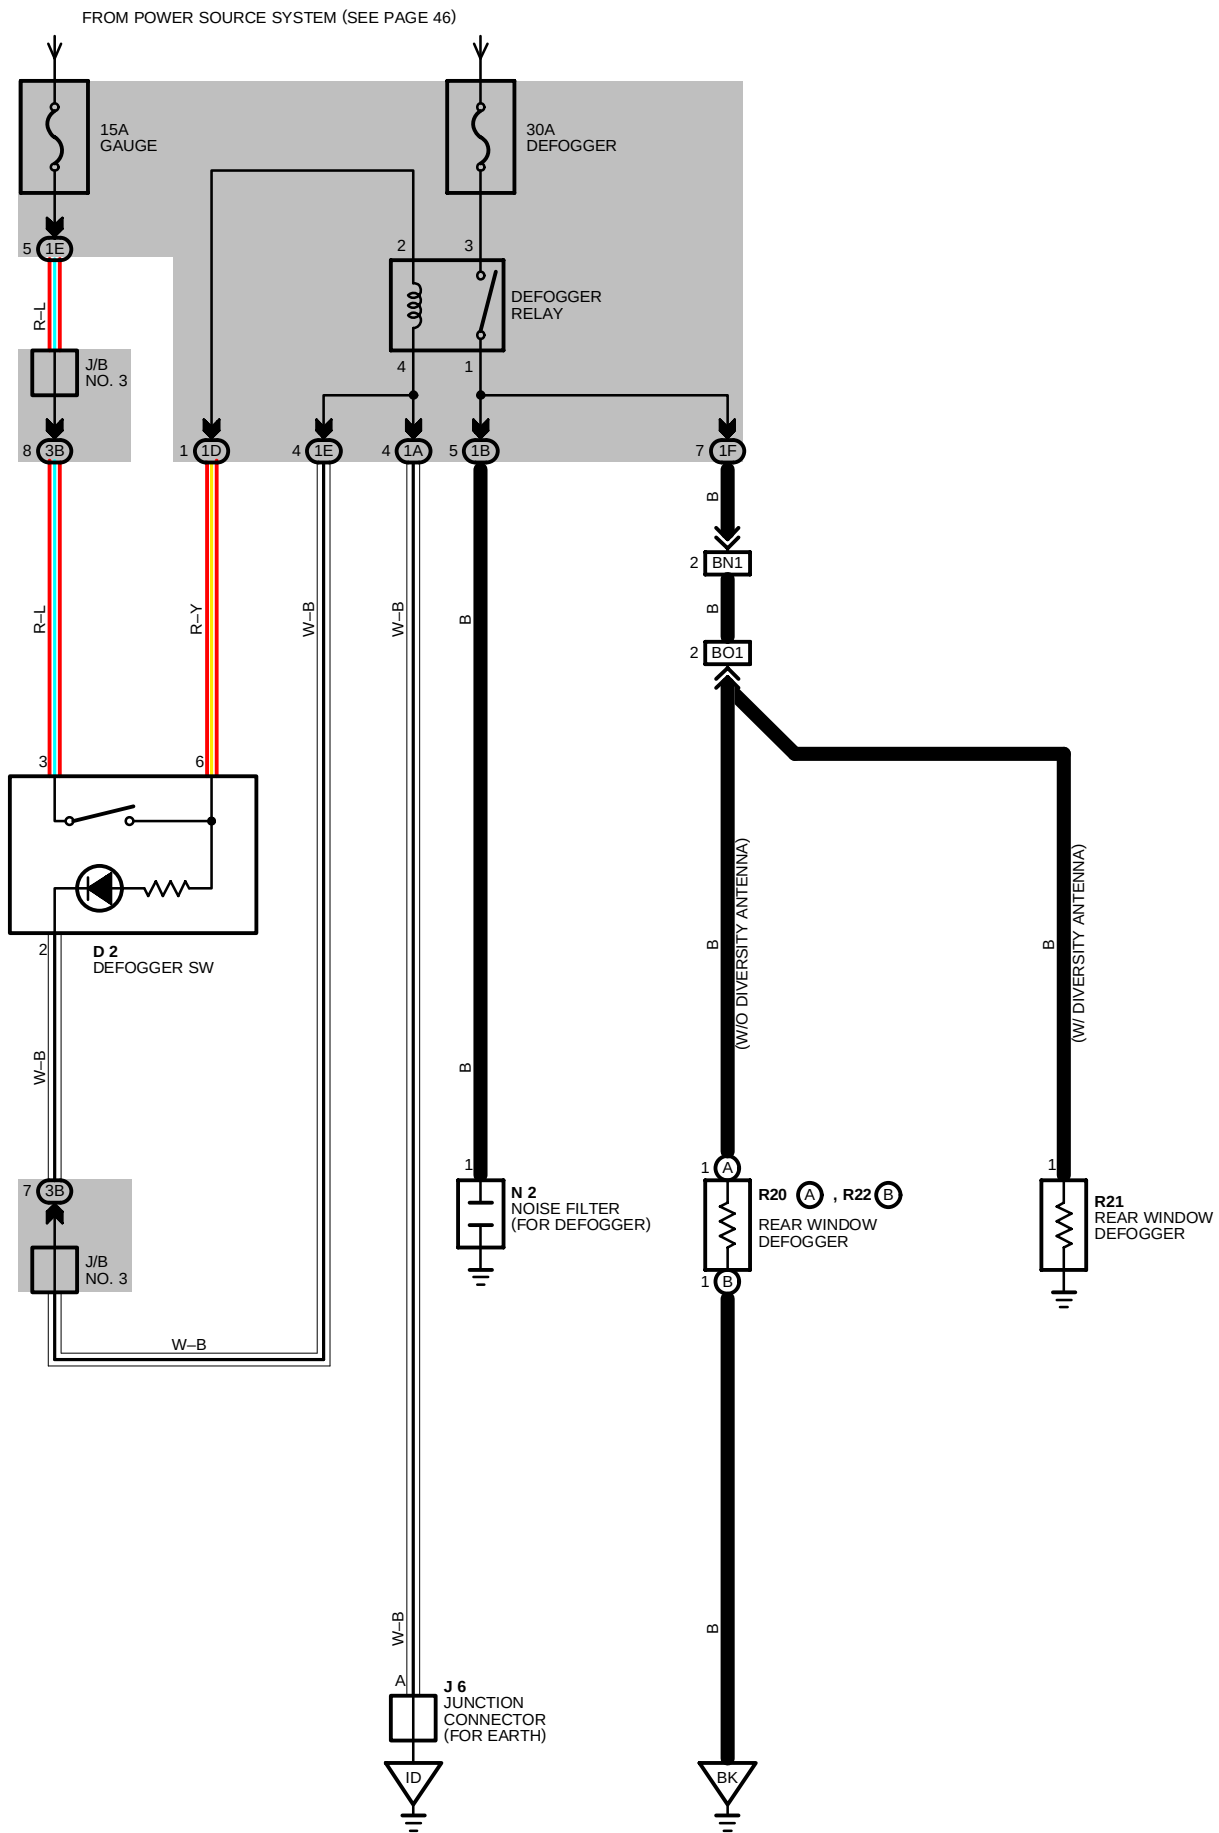

SERVICE HINTS

DEFOGGER RELAY

1-3 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D 2 DEFOGGER SW

3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 2	26	N 2	26	R21	27
J 6	26	R20	A 27	R22	B 27

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	34	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	34	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	30	LEFT KICK PANEL
BK	34	BACK DOOR RIGHT

D 2 BLACK



J 6

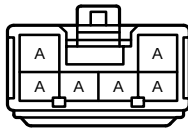

(HINT : SEE PAGE 7)

N 2



R20 (A), R22 (B) BLACK



R21

