

MIRRORS - POWER

1993 Toyota Celica

1993 ACCESSORIES/SAFETY EQUIPMENT
Toyota Power Mirrors

Camry, Celica, Corolla, Land Cruiser, MR2, Pickup,
Previa, Supra, T100, 4Runner

DESCRIPTION & OPERATION

Power mirrors are controlled by a dual control switch assembly, located on center console or instrument panel. Left/right control switch directs current to desired mirror. Horizontal/vertical control switch directs current to one of 2 motors located in mirror/motor assembly. Mirror and motors must be removed and serviced as an assembly.

TROUBLE SHOOTING

POWER MIRROR

Both Power Mirrors Inoperative

Check RADIO fuse, power mirror switch, power mirror motor(s), wiring and ground. See TESTING.

Left Or Right Power Mirror Inoperative

Check power mirror switch, power mirror motor(s), wiring and ground. See TESTING.

Up/Down Or Left/Right Function Inoperative


Check power mirror motor(s), wiring and ground. See POWER MIRROR MOTOR TEST under TESTING.

TESTING

POWER MIRROR SWITCH TEST

NOTE: Mirror motor connectors may vary in configuration from vehicle to vehicle of the same model.

Remove power mirror switch. See POWER MIRROR SWITCH under REMOVAL & INSTALLATION. Using ohmmeter, check continuity between appropriate mirror switch terminals. See Figs. 1-6. See appropriate POWER MIRROR SWITCH CONTINUITY TEST table. If switch fails any test, replace switch.

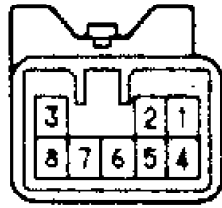

MIRROR CONTROL SWITCH




MIRROR MOTOR

Fig. 1: Power Mirror Switch & Motor Connector Terminal ID (Camry)
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST (CAMRY)

Application	Terminals
Switch In Left Position	
Up	2 & 8; 3 & 5
Down	2 & 5; 3 & 8
Left	2 & 8; 5 & 6
Right	2 & 5; 6 & 8
Switch In Right Position	
Up	2 & 8; 5 & 7
Down	2 & 5; 7 & 8
Left	1 & 5; 2 & 8
Right	1 & 8; 2 & 5

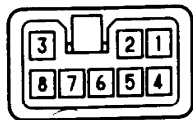

MIRROR CONTROL SWITCH



MIRROR MOTOR




93D02717
 Fig. 2: Pwr. Mir. Sw. & Motor Conn. Term. ID (Celica, Corolla, Previa)
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST TABLE (CELICA & PREVIA)

Application	Terminals
Switch In Off Position	
Up	2 & 3
Down	1 & 2
Left	2 & 3
Right	1 & 2
Switch In Left Position	
Up	1 & 7; 2 & 3
Down	1 & 2; 3 & 7
Left	1 & 8; 2 & 3
Right	1 & 2; 3 & 8
Switch In Right Position	
Up	1 & 5; 2 & 3
Down	1 & 2; 3 & 5
Left	1 & 6; 2 & 3
Right	1 & 2; 3 & 6

POWER MIRROR SWITCH CONTINUITY TEST TABLE (COROLLA)

Application	Terminals
Switch In Left Position	
Up	3 & 7; 4 & 8
Down	3 & 4; 7 & 8
Left	1 & 8; 3 & 7
Right	1 & 3; 7 & 8
Switch In Right Position	
Up	3 & 7; 6 & 8
Down	3 & 6; 7 & 8
Left	3 & 7; 5 & 8
Right	3 & 5; 7 & 8



MIRROR CONTROL SWITCH




MIRROR MOTOR

93F02718

Fig. 3: Pwr. Mirror Sw. & Motor Connector Terminal ID (Land Cruiser)
Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST TABLE (LAND CRUISER)

Application	Terminals
Switch In Off Position	
Up	3 & 4
Down	1 & 3
Left	3 & 4
Right	1 & 3
Switch In Left Position	
Up	1 & 10; 3 & 4
Down	1 & 3; 4 & 10
Left	1 & 9; 3 & 4
Right	1 & 3; 4 & 9
Switch In Right Position	
Up	1 & 6; 3 & 4
Down	1 & 3; 4 & 6
Left	1 & 2; 3 & 4
Right	1 & 3; 2 & 4

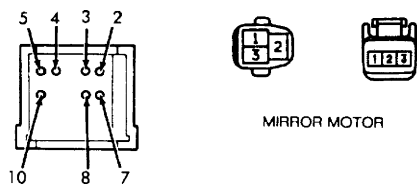

MIRROR CONTROL SWITCH
93H02719


Fig. 4: Pwr. Mirror Sw. & Mtr. Conn. Term. ID (MR2, Pickup & 4Runner)
Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST TABLE (MR2, PICKUP & 4RUNNER)

Application	Terminals
Switch In Off Position	
Up	7 & 8
Down	8 & 10
Left	7 & 8
Right	8 & 10
Switch In Left Position	
Up	2 & 10; 7 & 8
Down	2 & 7; 8 & 10
Left	3 & 10; 7 & 8
Right	3 & 7; 8 & 10
Switch In Right Position	
Up	5 & 10; 7 & 8
Down	5 & 7; 8 & 10
Left	4 & 10; 7 & 8
Right	4 & 7; 8 & 10



MIRROR CONTROL SWITCH




MIRROR MOTOR

93F84785

Fig. 5: Power Mirror Switch & Motor Connector Terminal ID (Supra)
Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST TABLE (SUPRA)

Application	Terminals
Switch In Left Position	
Up	2 & 5; 6 & 8
Down	2 & 6; 5 & 8
Left	1 & 8; 2 & 5
Right	1 & 2; 5 & 8
Switch In Right Position	
Up	2 & 5; 3 & 8
Down	2 & 3; 5 & 8
Left	2 & 5; 7 & 8
Right	2 & 7; 5 & 8

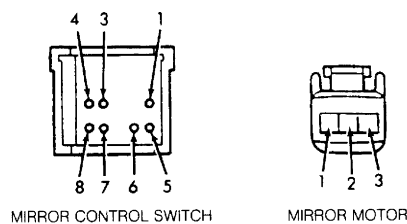

93G84786
 Fig. 6: Power Mirror Switch & Motor Connector Terminal ID (T100)
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

POWER MIRROR SWITCH CONTINUITY TEST TABLE (T100)

Application	Terminals
Switch In Left Position	
Up	1 & 8; 3 & 4
Down	1 & 3; 4 & 8
Left	1 & 7; 3 & 4
Right	1 & 3; 4 & 7
Switch In Right Position	
Up	1 & 5; 3 & 4
Down	1 & 3; 4 & 5
Left	1 & 6; 3 & 4
Right	1 & 3; 4 & 6

POWER MIRROR MOTOR TEST

NOTE: Mirror motor connectors may vary in configuration from vehicle to vehicle of the same model.

Disconnect power mirror motor harness connector. Using 12-volt power source, connect positive and negative leads to specified pins or terminals. See appropriate POWER MIRROR MOTOR TEST table. See Figs. 1-6. If power mirror motor fails any test, replace power mirror assembly.

POWER MIRROR MOTOR TEST TABLE (CAMRY, CELICA & MR2)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
3	2	Up
2	3	Down
1	2	Left
2	1	Right

POWER MIRROR MOTOR TEST TABLE (COROLLA)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
1	2	Up
2	1	Down
3	2	Left
2	3	Right

POWER MIRROR MOTOR TEST TABLE (LAND CRUISER)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
2	3	Up
3	2	Down
1	3	Left
3	1	Right

POWER MIRROR MOTOR TEST TABLE (PICKUP, PREVIA & 4RUNNER)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
2	1	Up
1	2	Down
3	1	Left
1	3	Right

POWER MIRROR MOTOR TEST TABLE (SUPRA)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
3	4	Up
4	3	Down
5	4	Left
4	5	Right

POWER MIRROR MOTOR TEST TABLE (T100)

Apply 12 Volts To Pin No.	Ground Pin No.	Mirror Operation
3	1	Up
1	3	Down
2	1	Left
1	2	Right

REMOVAL & INSTALLATION

POWER MIRROR SWITCH

Removal & Installation (Celica & Supra)

Remove console box retaining screws and raise console box enough to disconnect mirror switch harness connector. Push on switch's connector end to remove switch from console box. To install, reverse removal procedure.

Removal & Installation (Camry, Corolla, Cressida & Land Cruiser)

Remove instrument panel lower trim cover and inner knee pad (if equipped). Remove retaining screws from bottom of power mirror switch. Using flat-blade screwdriver, carefully pry switch out of instrument panel. Disconnect harness connector. To install, reverse removal procedure.

Removal & Installation (Pickup, Previa, T100 & 4Runner)

Remove arm rest retaining screw caps, retaining screws and arm rest. Disconnect all electrical connectors. Remove power window master switch retaining screws. Remove power window master switch from arm rest. Push on power mirror switch connector end to remove switch from power window master switch. To install, reverse removal procedure.


POWER MIRROR ASSEMBLY

Removal & Installation

Remove mirror inner trim panel on inside of the door. Disconnect power mirror motor harness connector. Support outside mirror assembly while removing 3 mirror retaining screws/bolts on inside of the door. To install, reverse removal procedure.

WIRING DIAGRAMS

See appropriate chassis wiring diagram in WIRING DIAGRAMS section.

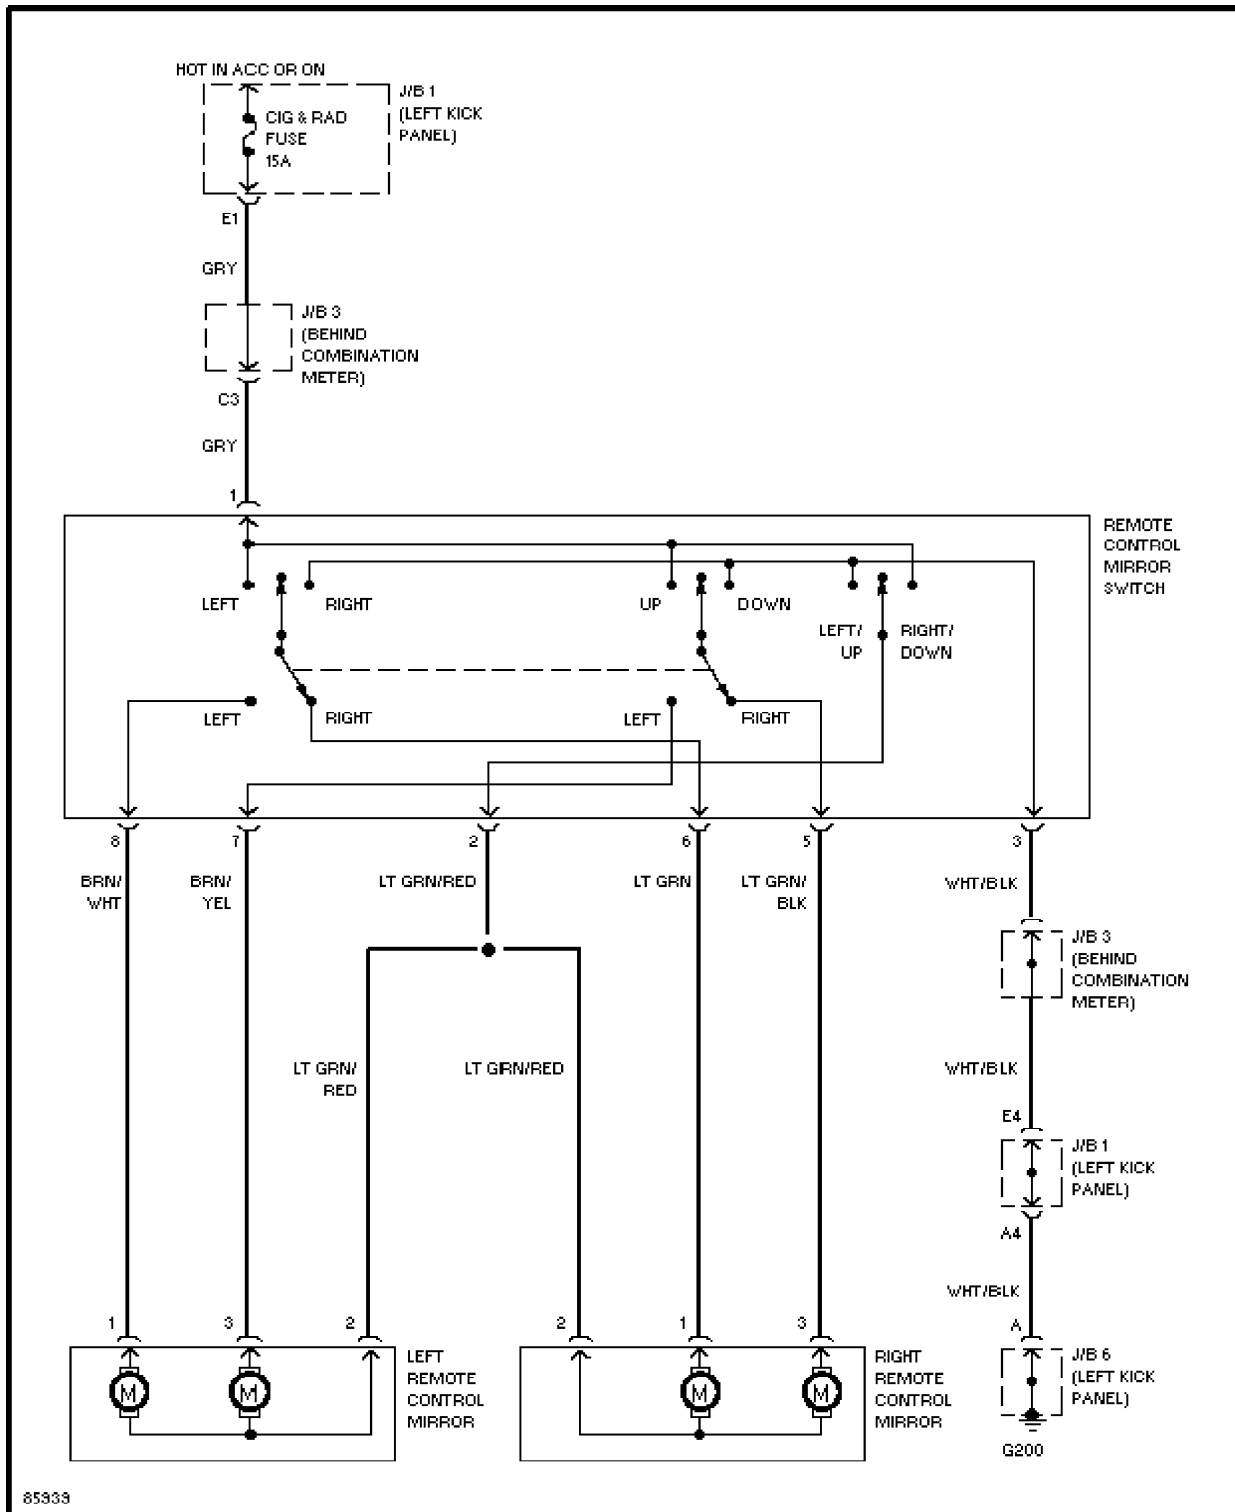

Power Mirror Circuit

POWER SEATS

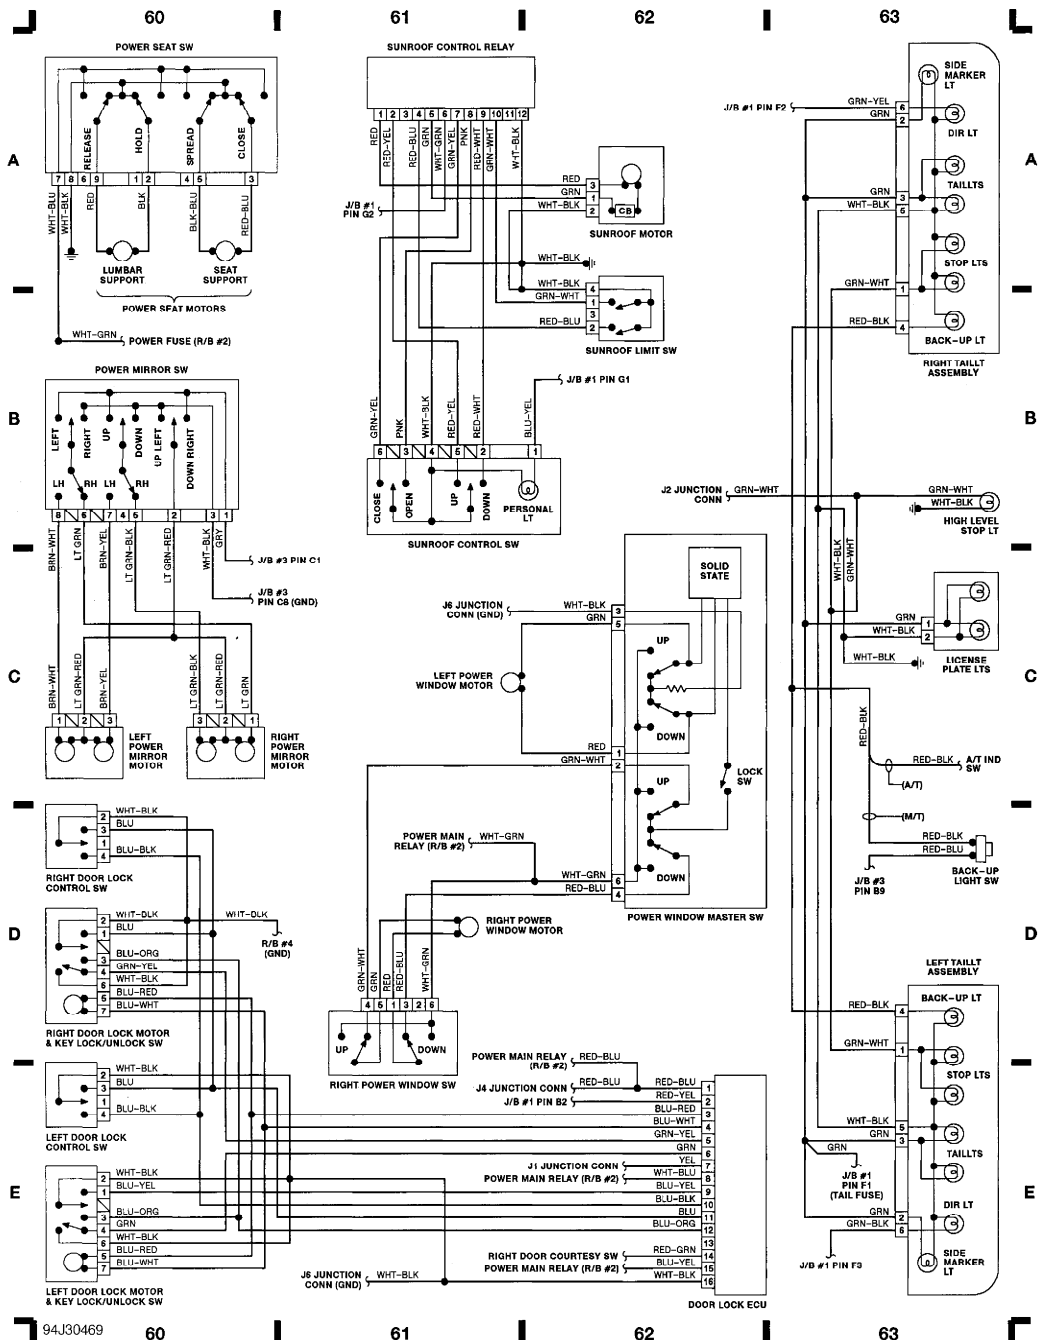


Fig. 16: Power Accessories, Taillights (Grid 60-63)