


CIGARETTE LIGHTER AND CLOCK

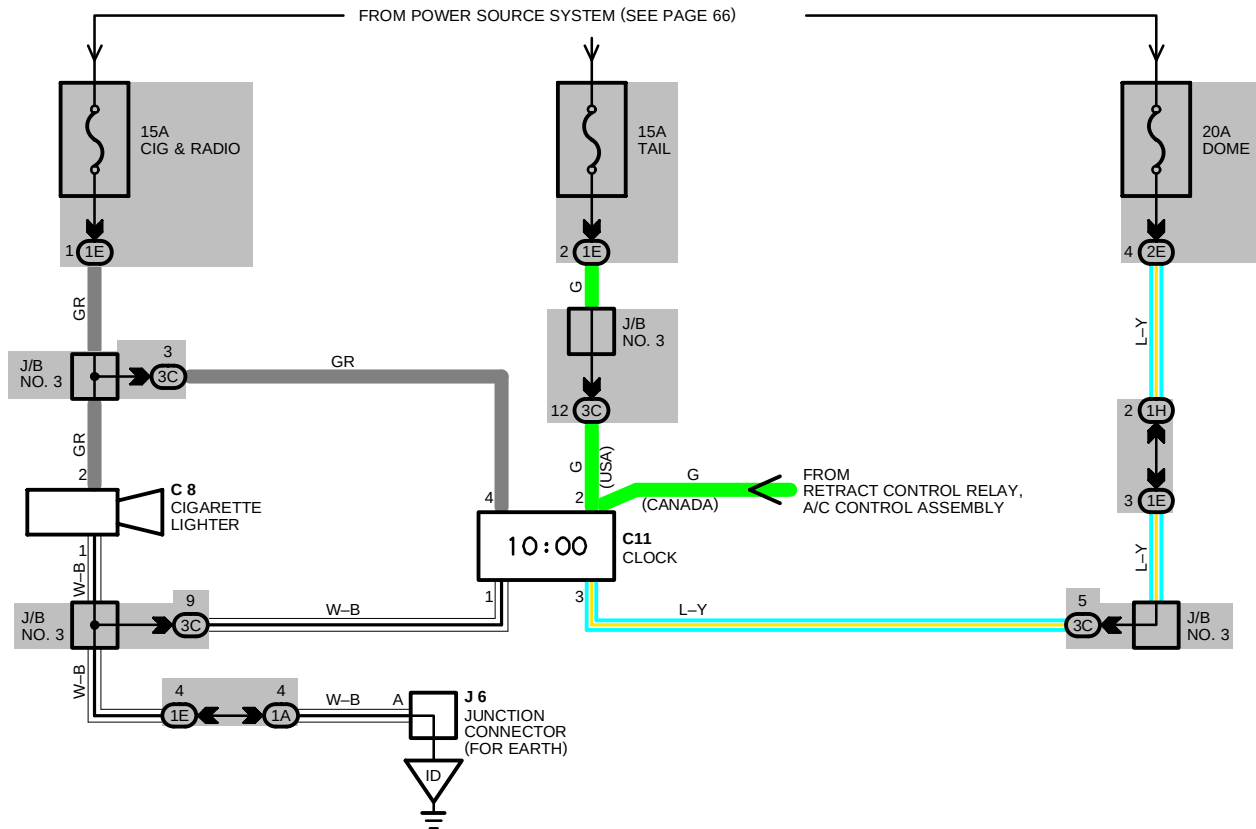

SERVICE HINTS

C 8 CIGARETTE LIGHTER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 1-GROUND : ALWAYS CONTINUITY

C11 CLOCK

- 3-GROUND : ALWAYS APPROX. 12 VOLTS (POWER FOR CLOCK)
- 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION (POWER FOR INDICATION)
- 2-GROUND : APPROX. 12 VOLTS WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
- APPROX. 12 VOLTS WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)
- 1-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION




CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 8	32	C11	32	J 6	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	22 (2WD) 23 (ALL-TRAC/4WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3C	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	44	LEFT KICK PANEL

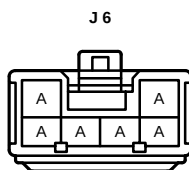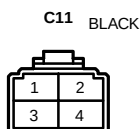

(HINT : SEE PAGE 7)