
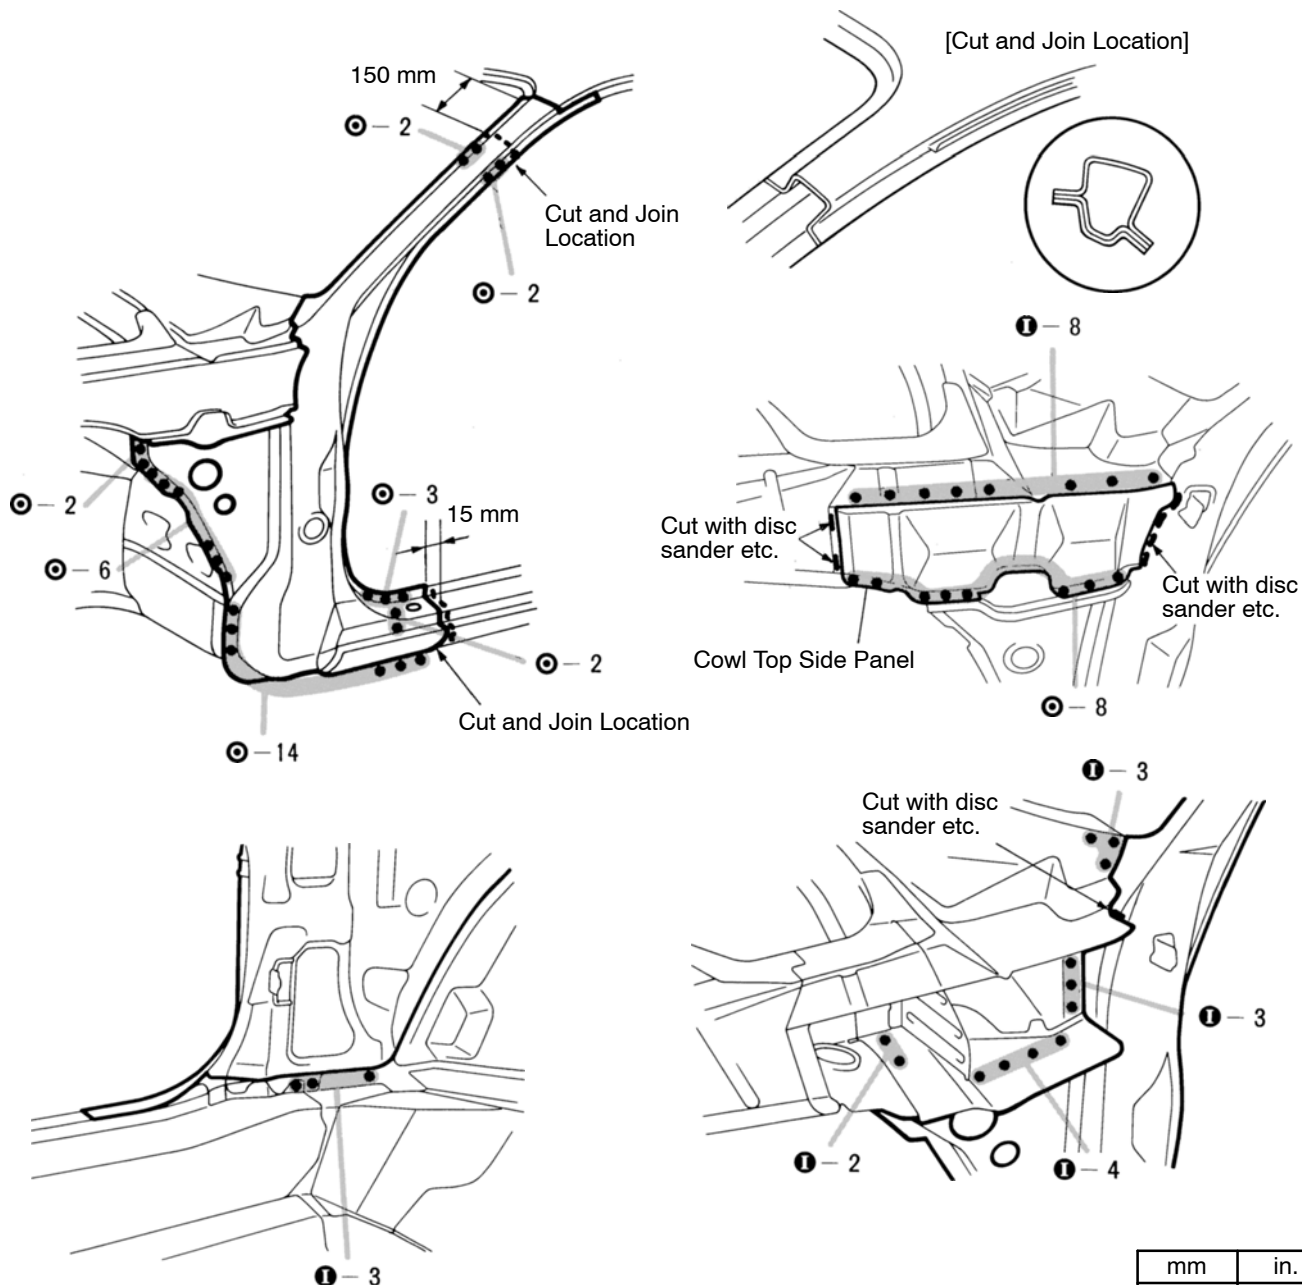


FRONT BODY PILLAR (CUT)

REMOVAL

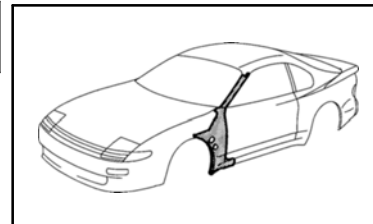

mm	in.
15	0.59
150	5.91


1. Cut and join the parts at the locations shown above.

2. After removing the cowl top side panel, remove the front body pillar.

HINT:

- 1) As shown above, cut and join the front body pillar outer and inner panels at a position shifted above 50 mm (1.97 in.).
- 2) Before cutting, remove the antenna cord and drain hose of the sun roof.

INSTALLATION

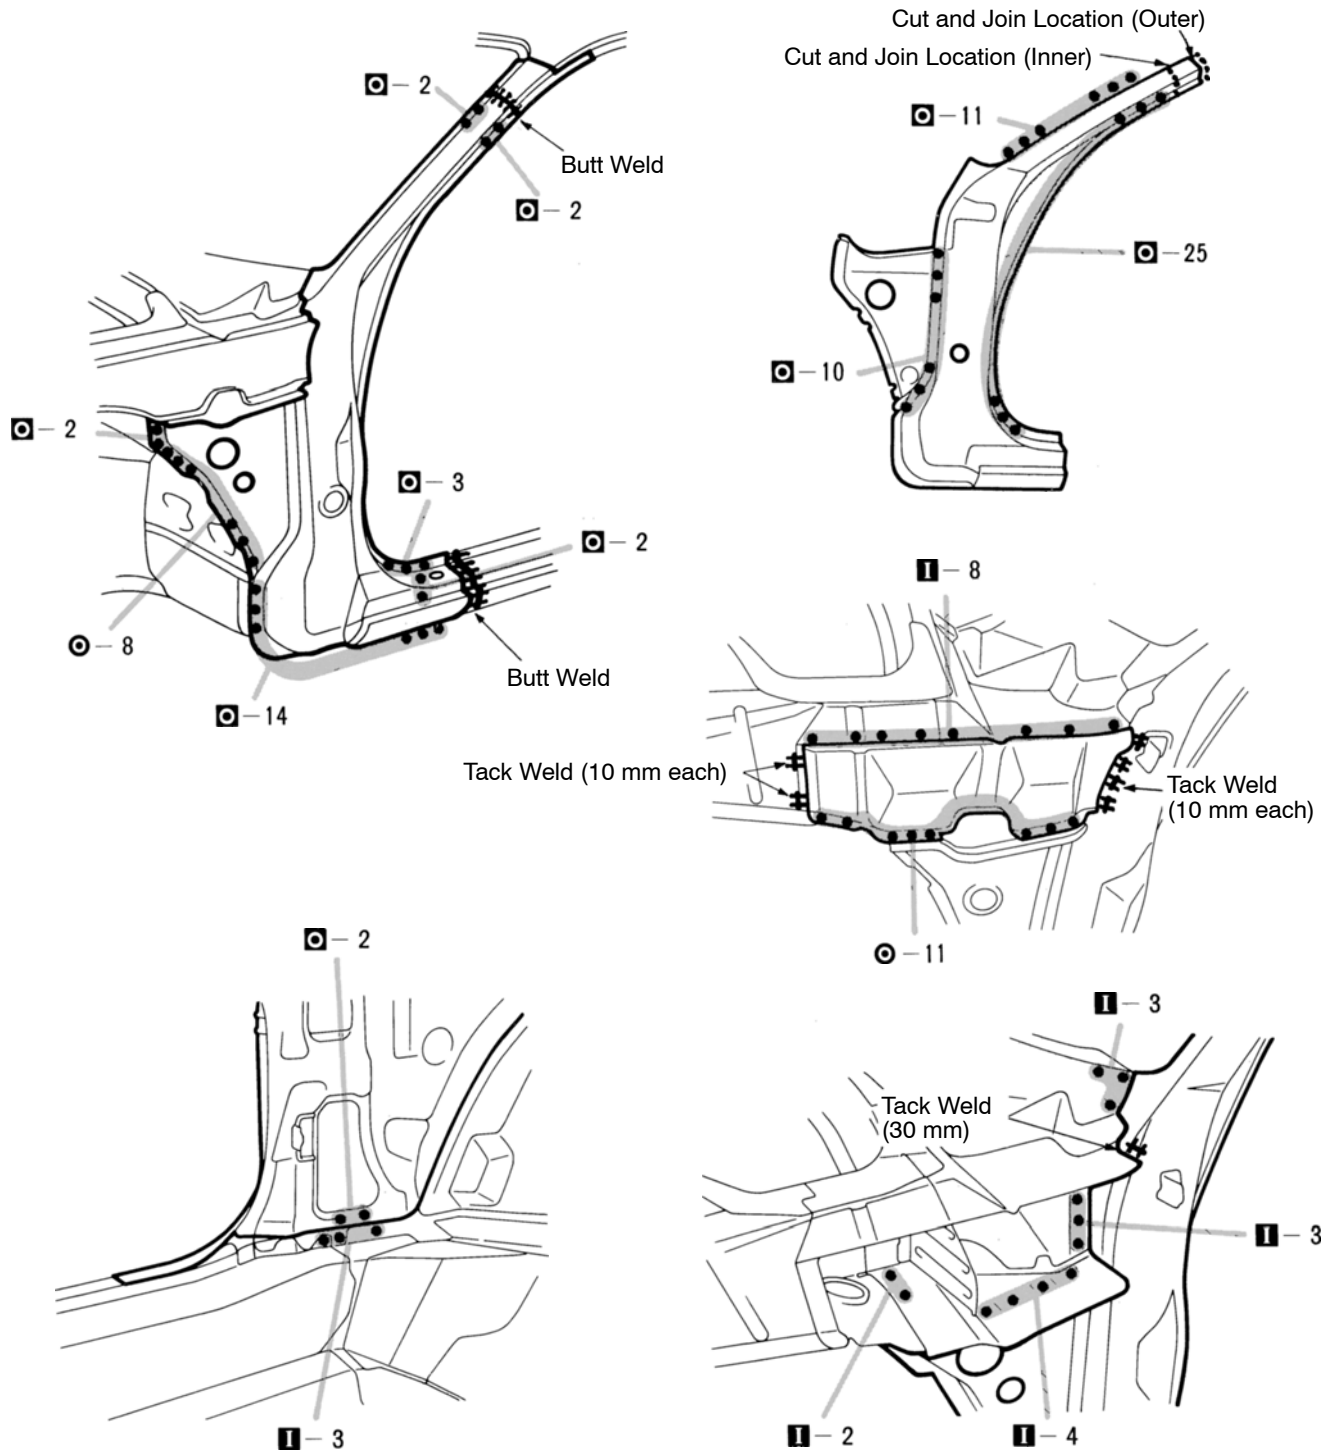

mm	in.
10	0.39
30	1.18

- Before temporarily installing the new parts, weld outer and inner together at the location shown upper right.
- Temporarily install the new parts and measure each part in accordance with the body dimensional diagram.
- Before welding the new parts, temporarily install the front door, front fender and hood, windshield glass and check the fit.