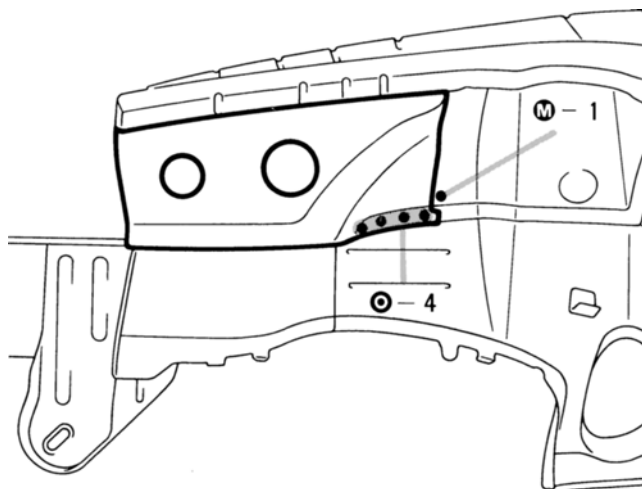
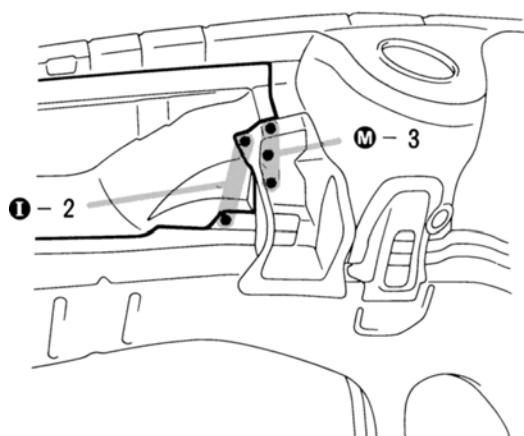
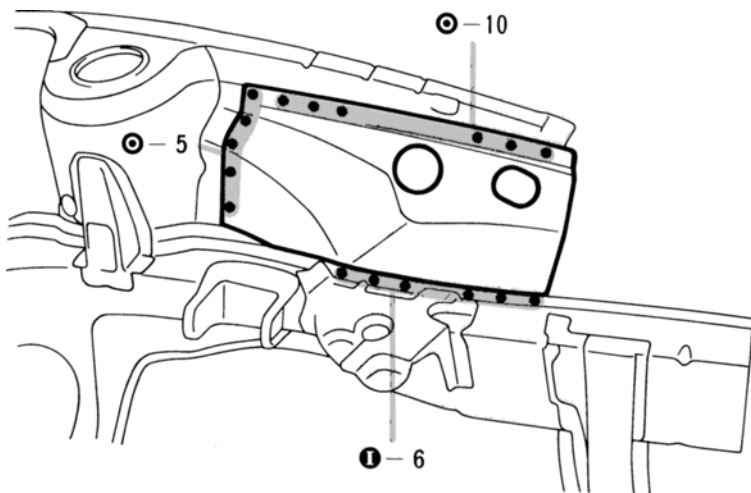
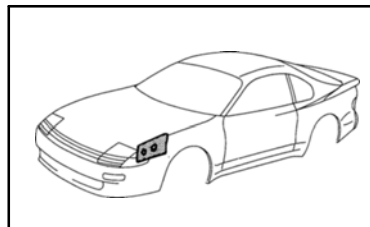
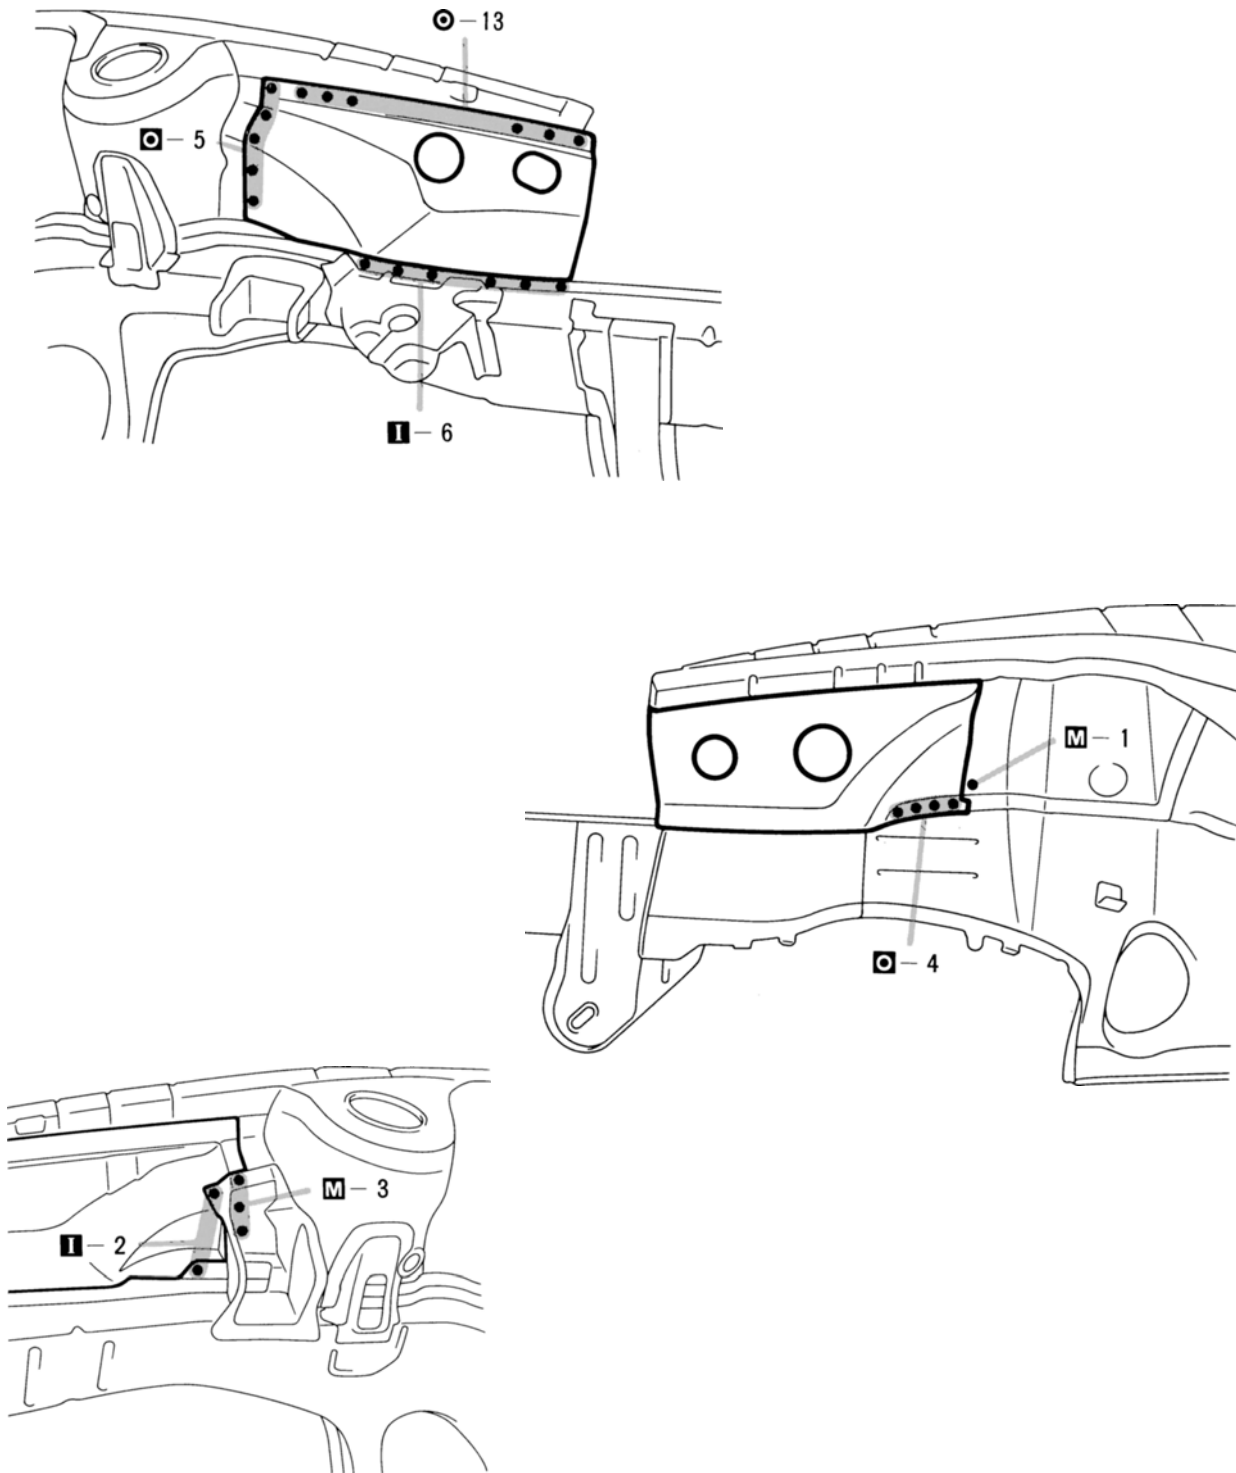


FRONT FENDER APRON FRONT (ASSY)**REMOVAL (With the radiator support removed.)**

INSTALLATION

1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.