

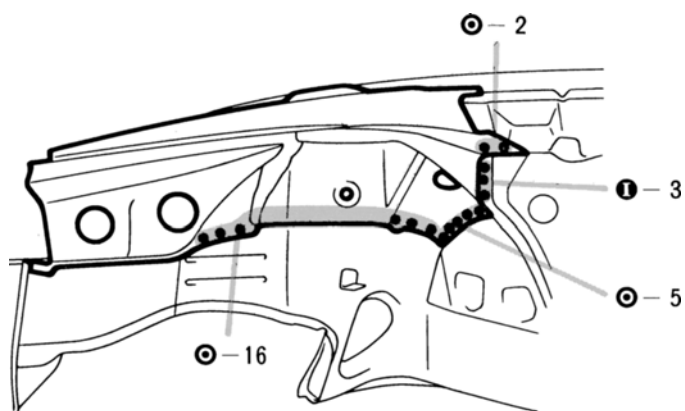
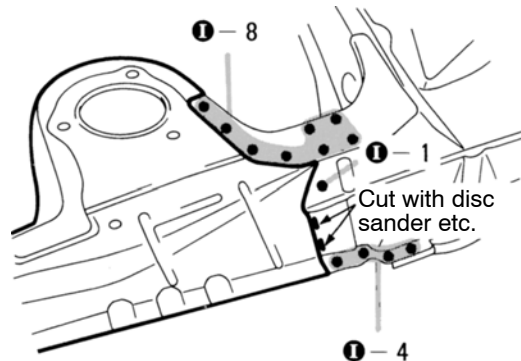
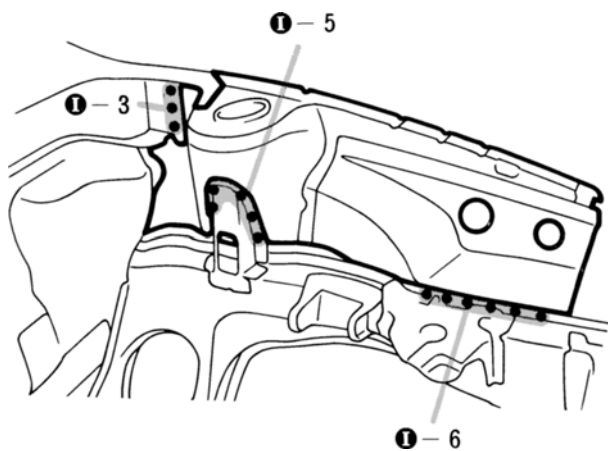
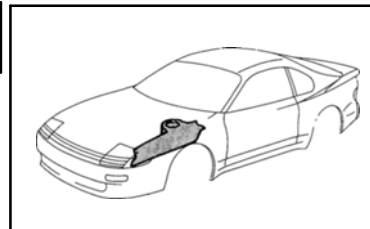
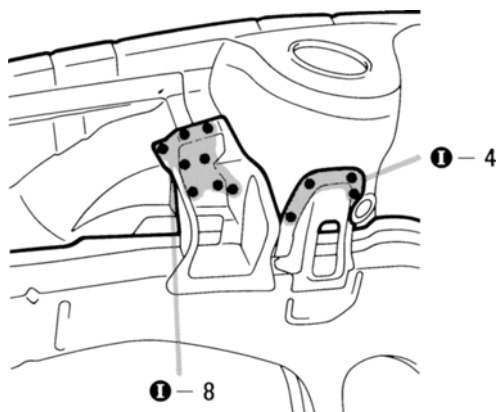
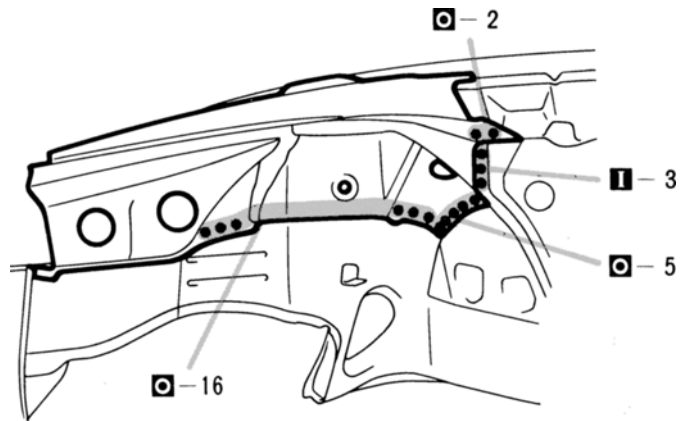


FRONT FENDER APRON (ASSY)**REMOVAL (With the radiator support removed.)**


[Right-Hand]

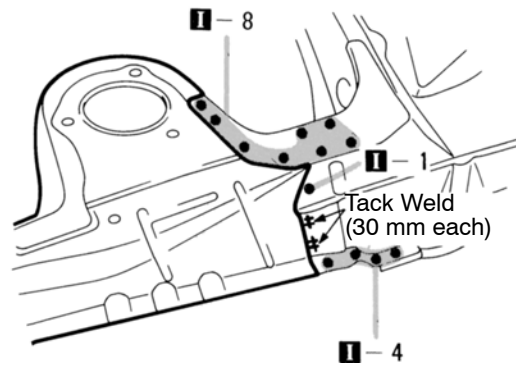

INSTALLATION

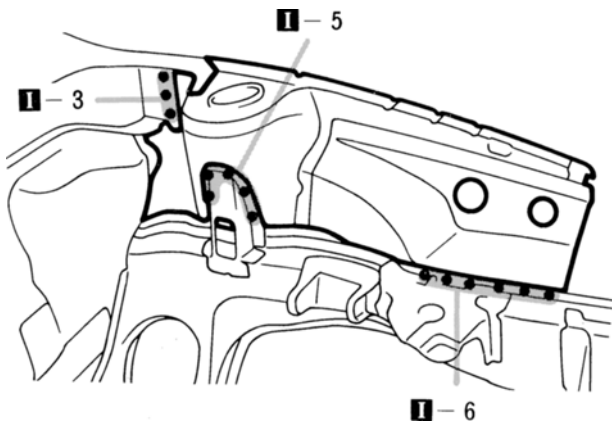

[Right-Hand]

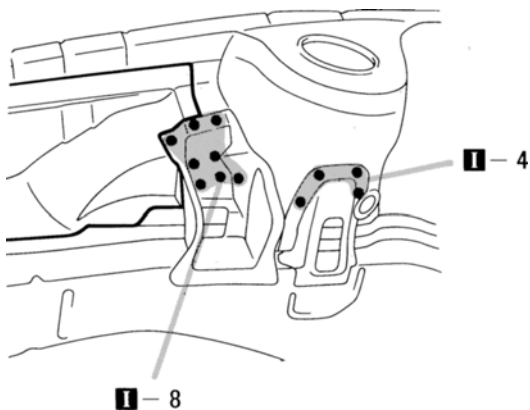

mm	in.
30	1.18

1. Measurements must be accurate with the body dimension diagram, as this affects the front wheel alignment.

HINT: The position of the front spring support hole is very important.

2. Temporarily install the front fender and the hood, and check the fit.