
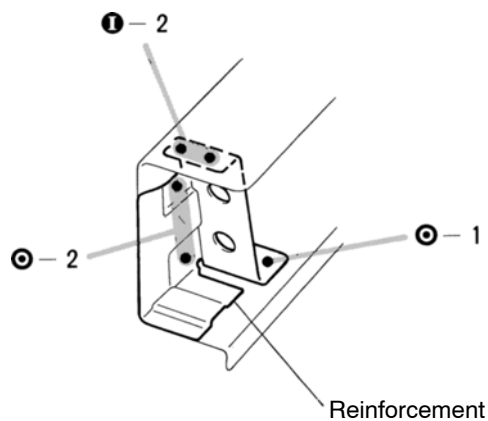
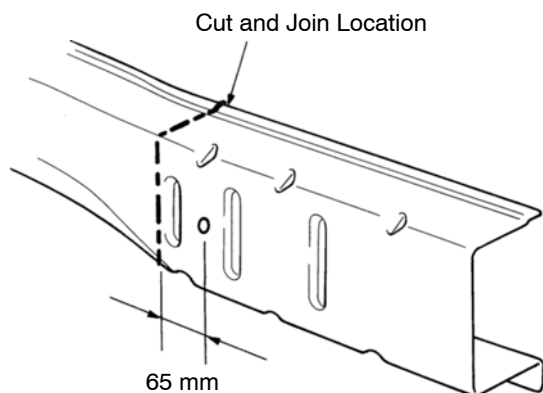
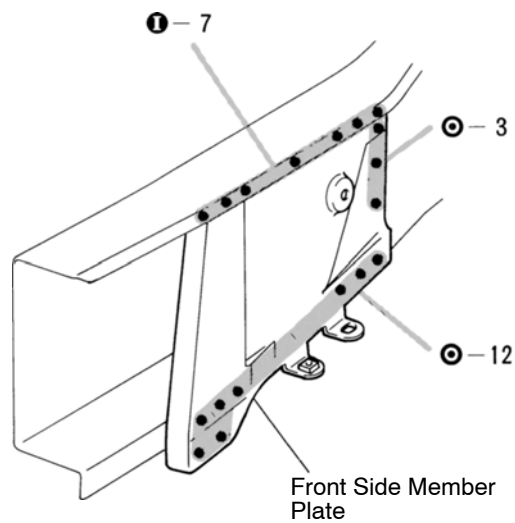
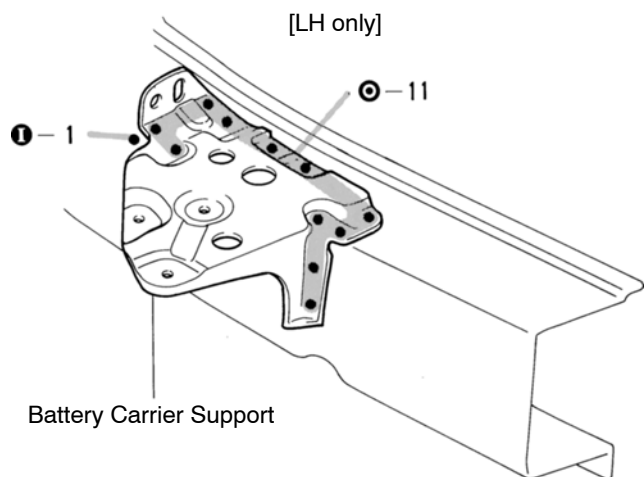


FRONT SIDE MEMBER (CUT-P)





REMOVAL (With the front fender apron front removed.)

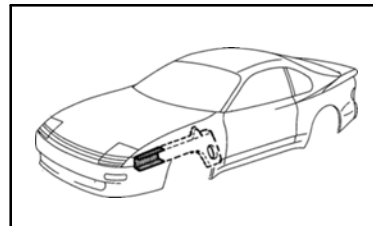

mm	in.
65	2.56

1. Before cutting the side member, remove the, battery carrier support. (LH only)
2. Remove the front side member plate as shown above.
3. Cut and Join the side member at the locations shown above.
4. Remove the reinforcement remaining in the side member.

INSTALLATION

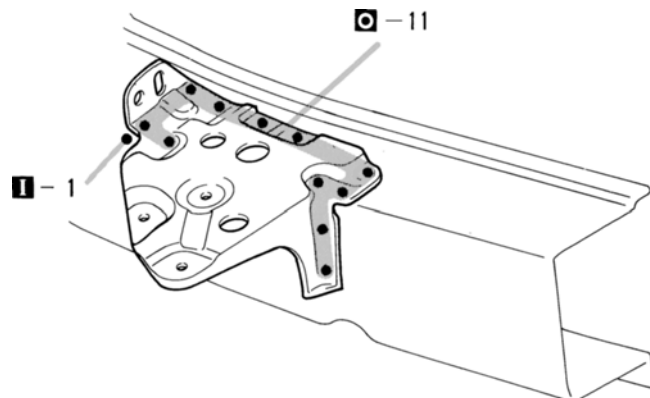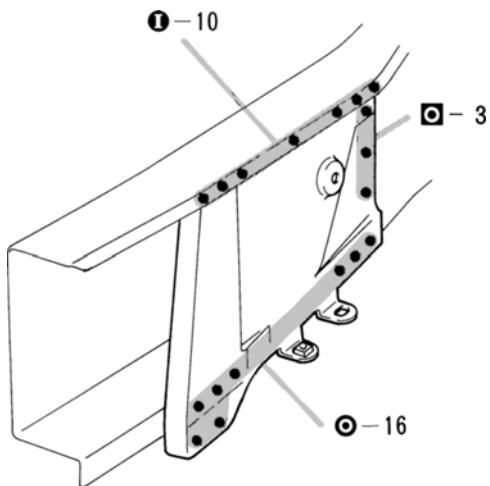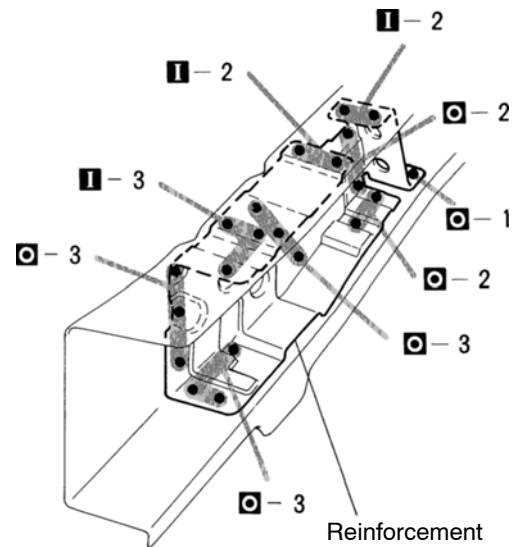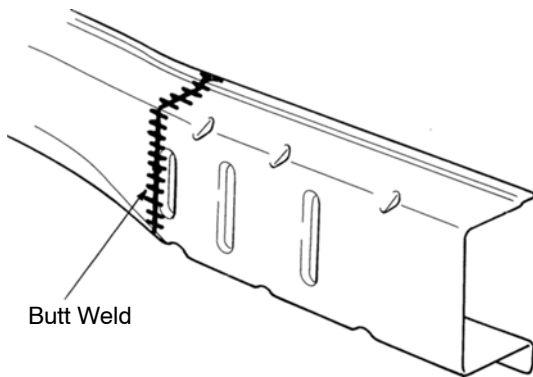

1. Cut the supply parts in the same way as removal.
2. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
3. After installing the new side member, install the battery carrier support. (LH only)