
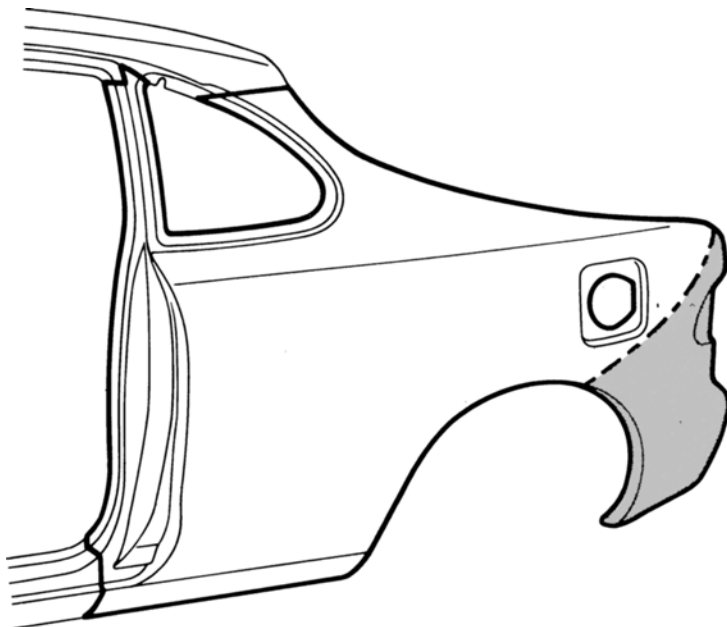
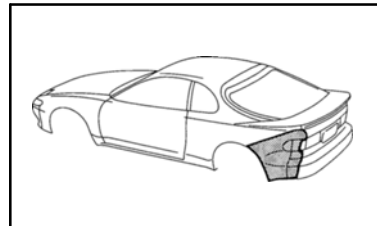


QUARTER PANEL (CUT-P): Lift back**REMOVAL**

Cut and join possible
within this area.

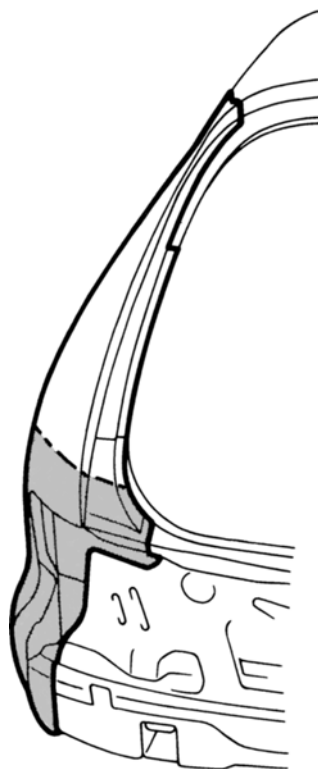


Cut and join possible
within this area.

* This section is a cut and join location only.
Refer to [RE-32](#) for weld points.

1. Cut and join the parts at the location shown above.

INSTALLATION

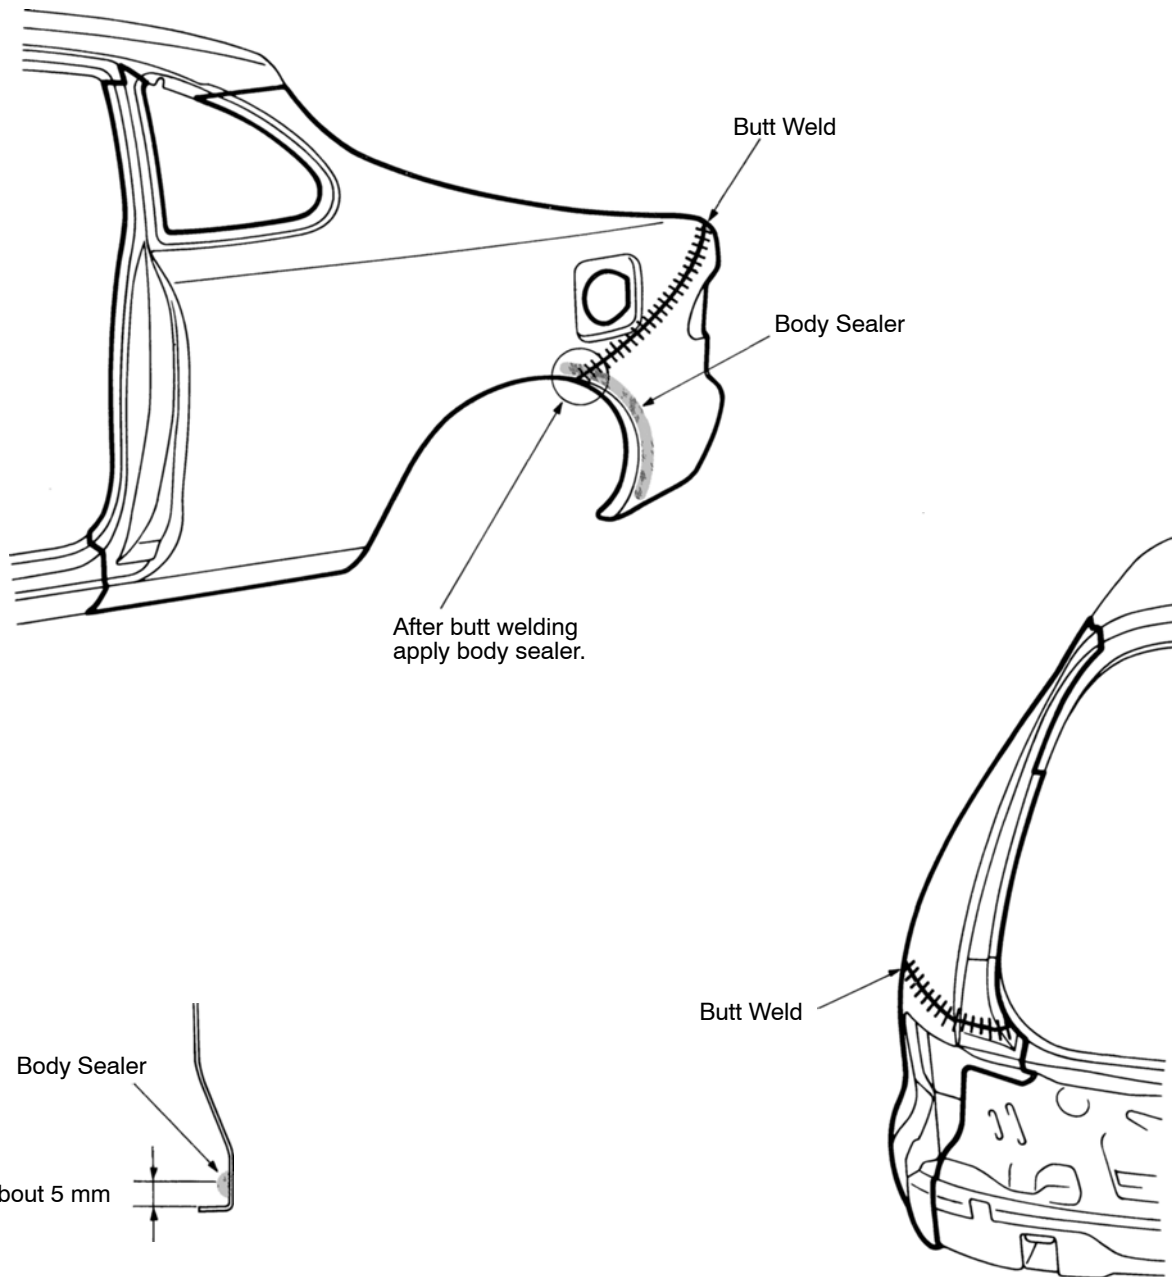

* This section is a cut and join location only.
Refer to [RE-33](#) for weld points.

mm	in.
5	0.20

1. Before cutting the overlap areas, check the fit of the back door and rear combination light.
2. Before welding, apply body sealer to the quarter panel as shown.

HINT:

- 1) Do not apply body sealer to the weld seams

before welding, as the sealer will melt, resulting in a bad seal and a bad weld.

- 2) For other sealing points, refer to section AR.
3. Surface finish the weld seam from the inside also.

HINT: Be careful not to grind off too much weld as it will result in loss of durability.