



ROOF PANEL (ASSY): Lift back (w/ Sun Roof)

REMOVAL

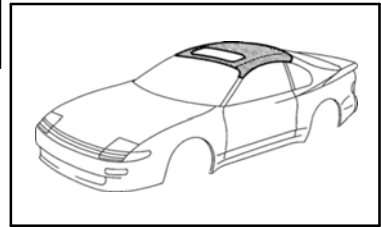

[When reusing roof panel reinforcement]

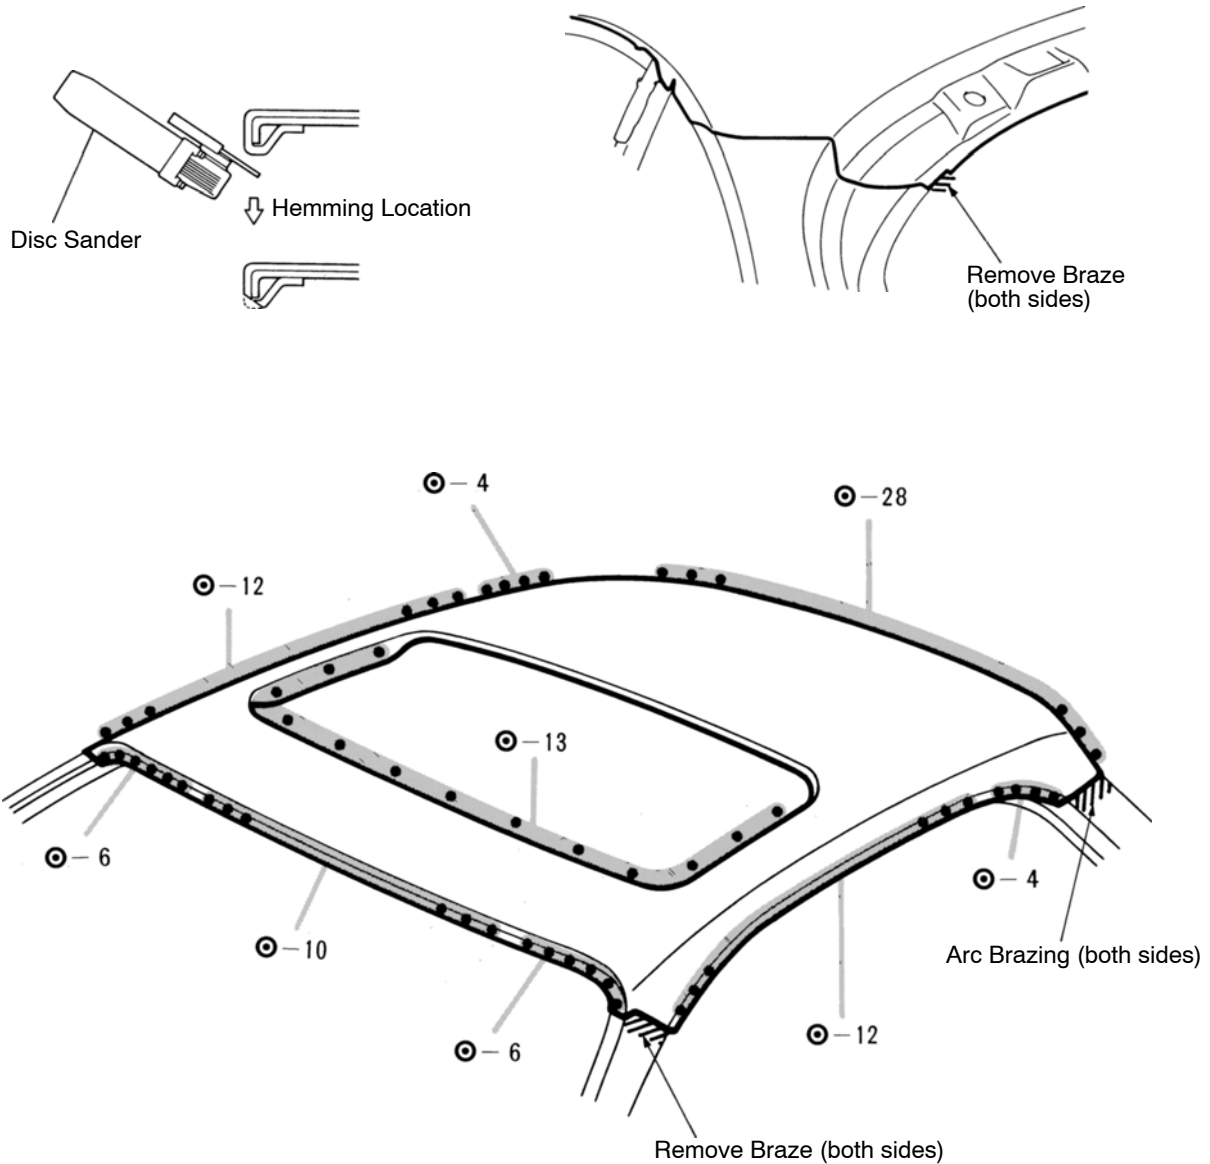


1. Heat the brazed area of the front body pillar and scrape off the brazing with a wire brush.

NOTICE: Be careful not to overheat the front body pillar.

2. Grind off the roof panel tip at the quarter panel arc brazing connection with a cut grinder.

INSTALLATION

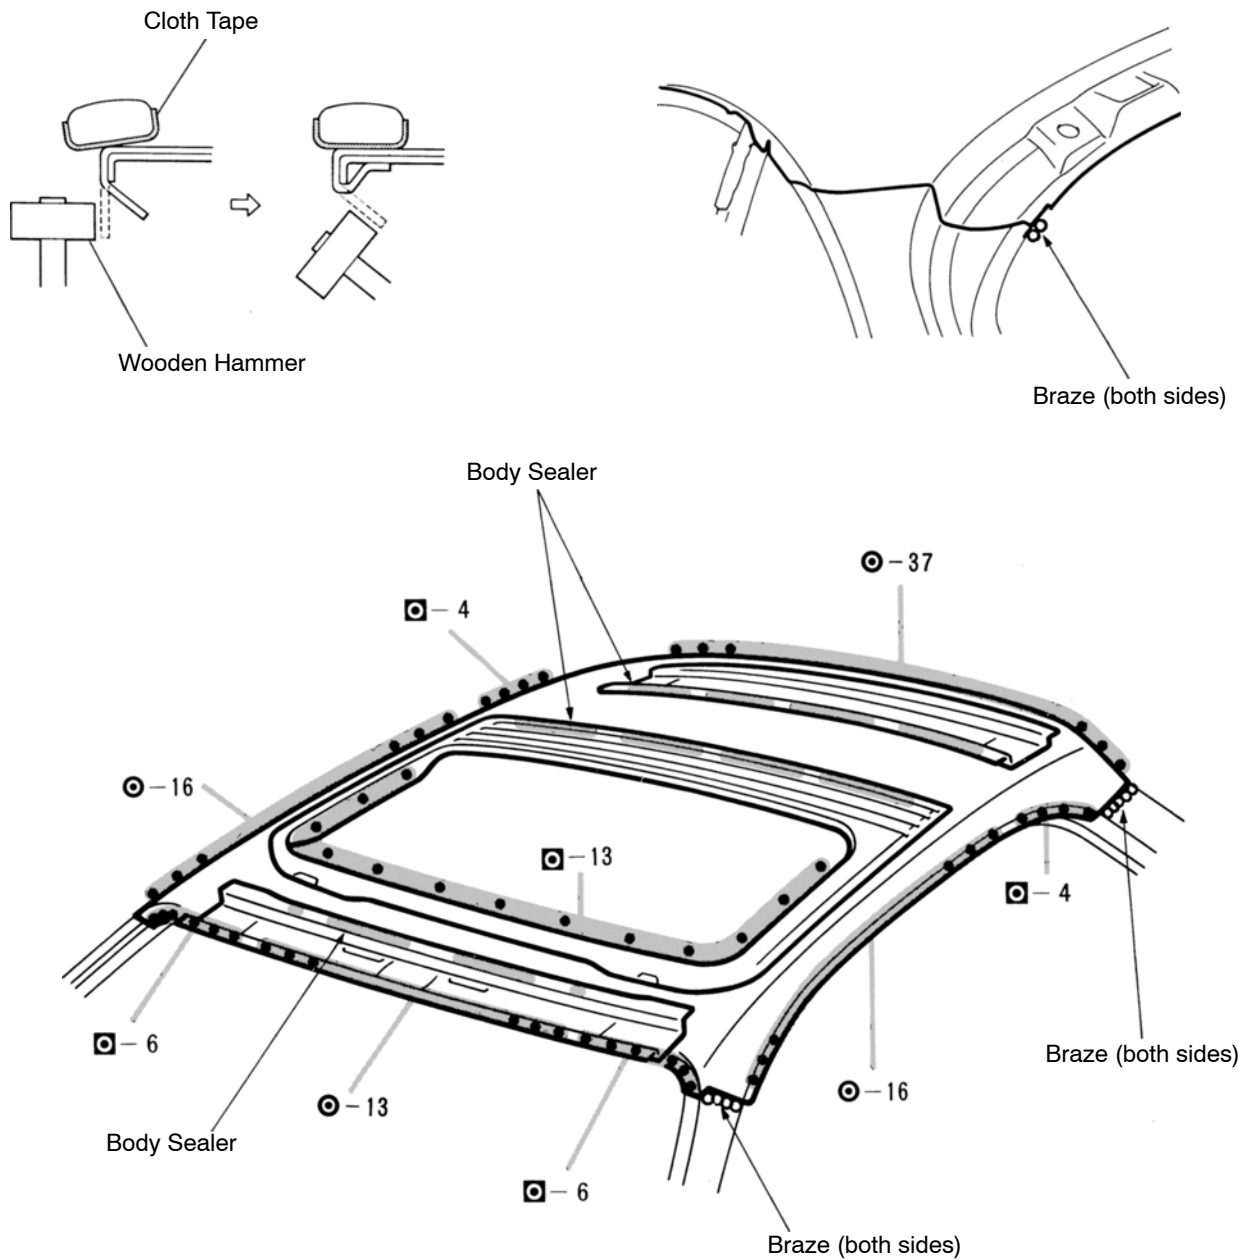

1. Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and the back door opening frame.

HINT:

- 1) Apply just enough sealer for the new parts to make contact.

- 2) For other sealing points, refer section AR.

2. Braze the front body pillar and quarter panel connection.

HINT: Before performing these operations, place a wet rag on the roof panel to protect it from damage.