


## COLLISION REPAIR INFORMATION BULLETIN



|                      |                                                         |                     |                  |
|----------------------|---------------------------------------------------------|---------------------|------------------|
| <b>SUBJECT:</b>      | <b>REPAIR PROCEDURES FOR RUST-RESISTANT SHEET METAL</b> |                     |                  |
| <b>BULLETIN NO.:</b> | <b>TS–TCI–CRIB–2029</b>                                 | <b>DATE ISSUED:</b> | <b>May, 2013</b> |
| <b>MODELS:</b>       | <b>All Toyota &amp; Scion Models</b>                    | <b>SECTION:</b>     | <b>Refinish</b>  |


Toyota/Scion continues using advanced technology to help prevent outer body panel corrosion. A new sheet metal coating process has been developed to increase protection from rust and corrosion. This coating is a two-stage process. The first stage is a galvanized layer with a high concentration of zinc. The second stage is a galvanized layer with a high concentration of iron. This type of rust-resistant sheet metal is called Excelite II (see Illustration A below). The second type of sheet metal used is called Galvaneal (see Illustration B below). It has a single zinc-rich coating on both sides.

### EXCELITE II

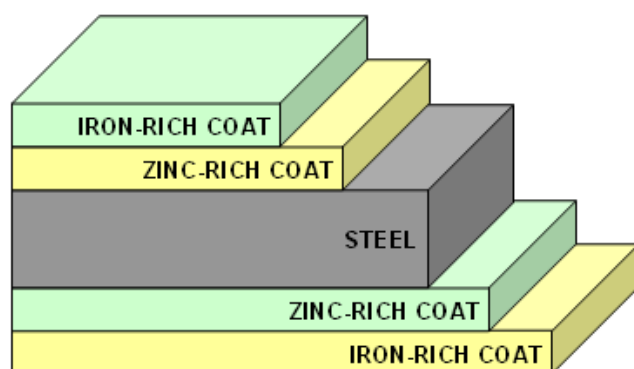

**Illustration A**

### GALVANEAL

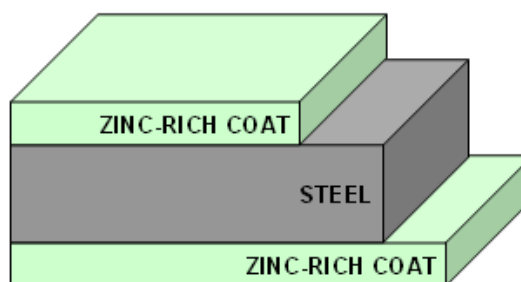

**Illustration B**

**HINT:** To find out which coating is used on a vehicle panel for a specific model, refer to the Repair Manual for Collision Damage for that model.

Advantages of Excelite II are:

- The inner layer (zinc-rich coat) provides excellent adhesion to the base steel and excellent rust and corrosion protection.
- The outer layer (iron-rich coat) provides excellent paint adhesion, plus the low zinc content help bond well with the first layer.

**NOTE:** Issue of this Collision Repair Information Bulletin by Toyota Canada Inc. is to ensure that proper repair information is available. It does not constitute an authorization for repair. PLEASE ROUTE THIS BULLETIN TO YOUR COLLISION REPAIR CENTER MANAGER AND COLLISION & REFINISH TECHNICIANS.




TS–TCI–CRIB–2029

May, 2013

## REPAIR PROCEDURES FOR RUST-RESISTANT SHEET METAL

**NOTICE:** Body fillers and two component polyputties applied over bare Excelite II or bare Galvaneal metal substrates will not adhere adequately and may result in blistering or peeling. An epoxy primer must first be applied to the bare metal before the application of body filler. See illustration C. When using a wash primer over Excelite II or Galvaneal, always use an epoxy primer before applying body filler. See Illustration D below.

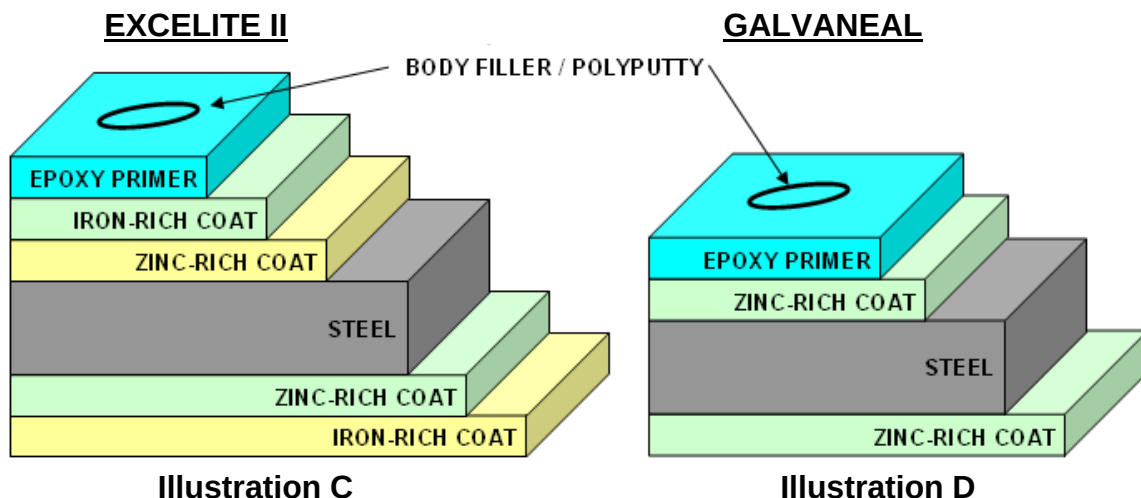

The following repair procedure is recommended:

- Degrease the panel using wax and grease remover (follow VOC rules for your area).
- Prepare the sheet metal.
- Straighten as necessary.
- Apply epoxy primer or wash primer over the bare metal. Do not apply body filler over bare metal.
- Apply body filler following the manufacturer or supplier instructions or recommendations.
- Sand the body filler using progressively finer grades of sandpaper. Begin with 40 grit open coat dry sandpaper, followed by 100 grit open coat dry sandpaper, then finish with 220 grit open coat dry sandpaper.
- Use two-component (catalyzed) putty over the body filler only if necessary as this product is intended for filling minor imperfections in the filler. Use sparingly during this procedure.
- Apply epoxy-based primer or urethane-based wash primer. These products promote adhesion and provide protection against rust and corrosion. Follow the paint manufacturer's recommendations for flash time, solvent selection, dry time, etc.
- Apply two-component primer-surfacer (follow VOC rules for your area).
- Apply high quality urethane top coats. Follow the paint manufacturer's recommendation for reducer selection. Use a paint gun setup appropriate for the material being applied. This includes the correct size needle, nozzle, air cap selection, and air pressure settings.

**NOTE:** It may be necessary to use heat to accelerate the dry time of plastic body filler. Avoid overheating. The maximum sheet metal temperature is 50° C (120° F). Excess heat can cause blistering, peeling, and loss of adhesion.



TS–TCI–CRIB–2029

May, 2013

**REPAIR PROCEDURES FOR RUST-RESISTANT SHEET METAL**


---

In partnership with Würth Canada, Toyota Canada Inc. (TCI) recommends and offers a complete line-up of body shop supplies, adhesives, fasteners, abrasives, connectors, safety supplies, tools, etc., that are available through the Würth Body Shop Products Program. Toyota and Scion Dealers can order all of Würth's products through this program. Dealers can access the program details in the Infostream website portal at <http://infostream.toyota.ca/>. For independently operated collision centres interested in these products, please contact your local Toyota and Scion Dealer.

Specifically, in regard to this bulletin, Toyota Canada Inc. recommends the following Würth products:

| Würth Product Name | Art No.   | Illustration                                                                          |
|--------------------|-----------|---------------------------------------------------------------------------------------|
| Gold Filler        | 892.68040 |    |
| Maxi Plast         | 892.60056 |   |
| Würth Final Touch  | 892.67900 |  |