


(Three-Dimensional Distance)




BO4465

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front side member bumper installation hole	RH 14 (0.55) LH18 (0.71)	I, i	Lower arm installation nut	12 (0.47) nut
			J, j	Front floor under reinforcement standard hole	15 (0.59)
B, b	Engine mounting member installation nut	10 (0.39) nut	K, k	Front floor under reinforcement standard hole	15 (0.59)
C, c	Front side member standard hole	15 (0.59)	L, l	Rear floor side member standard hale	18 (0.71)
D, d	Engine mounting bracket hole–rear	13 (0.51)	M, m	Strut bar installation hole–inner	12 (0.47)
E, e	Front spring support hole–front	11 (0.43)	N, n	Rear spring support hole–front = inner	9.5 (0.374)
F, f	Lower arm installation nut	14 (0.55) nut	O, o	Rear floor side member standard hole	10 (0.39)
G, g	Steering gear box installation bolt	12 (0.47) bolt	P, p	Rear floor side member standard hole	18 (0.71)
H, h	Engine mounting member installation nut	10 (0.39) nut	Q, q●R, r	Front airbag sensor installation nut (USA and CANADA only)	8 (0.31)
—	—	—			

UNDER BODY (All Trac/4WD)

(Two-Dimensional Distance)

Wheel base 2,525 (99.41)

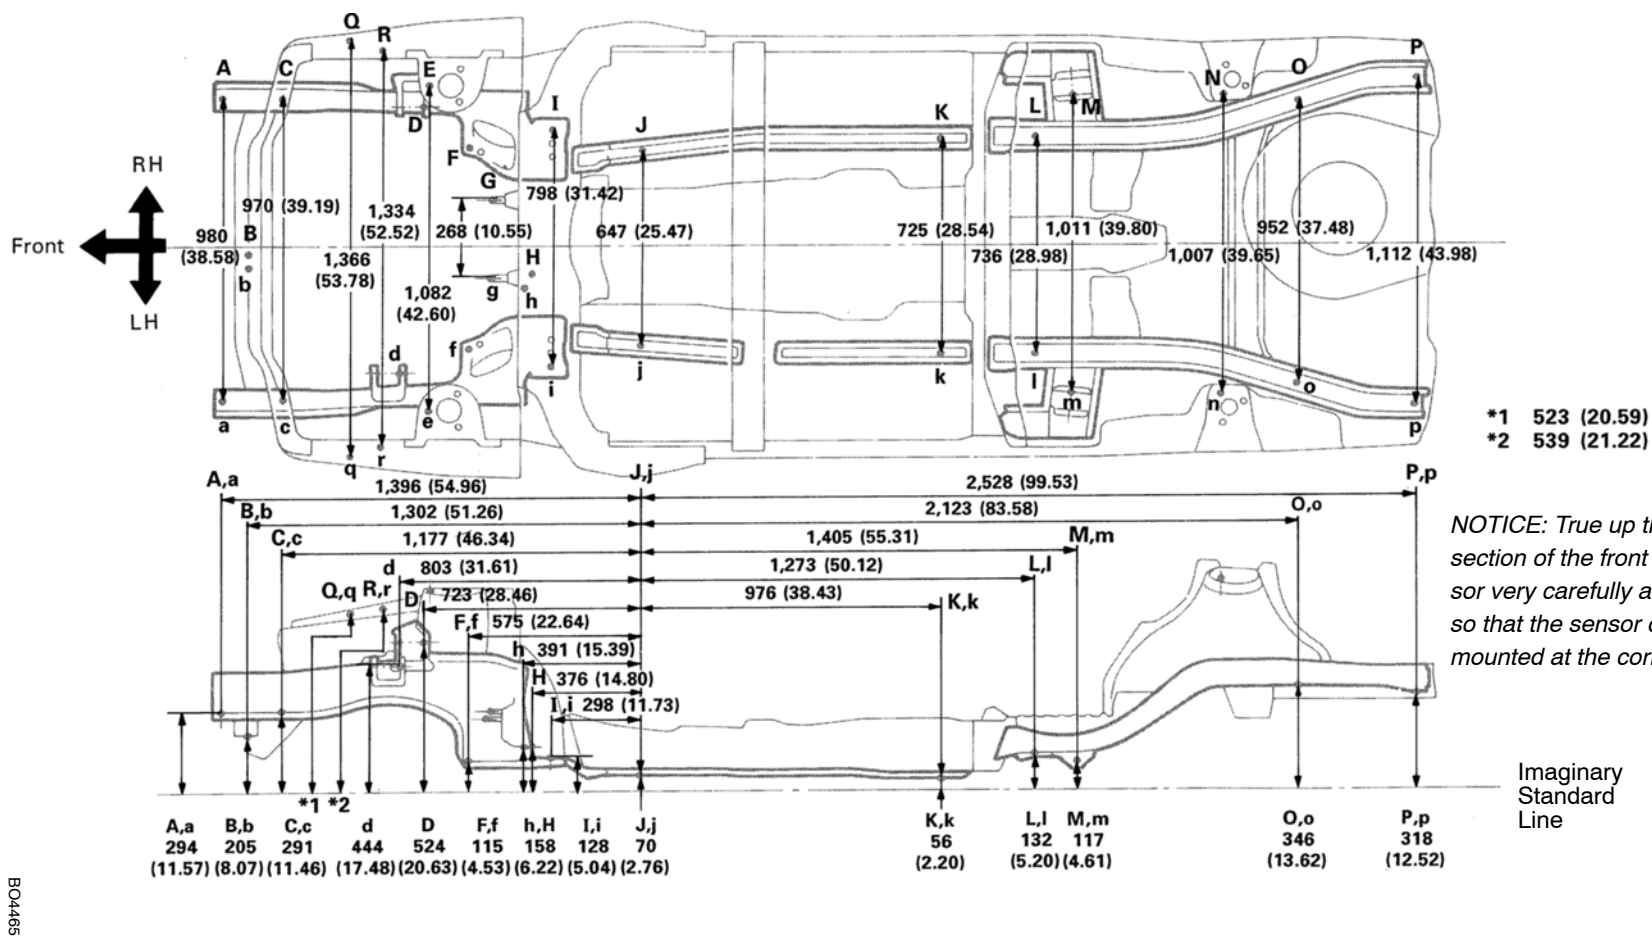

BO4465

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front side member bumper installation hole	RH14 (0.55) LH18 (0.71)	I, i	Lower arm installation nut	12 (0.47) nut
B, b	Engine mounting member installation nut	10 (0.39) nut	J, j	Front floor under reinforcement standard hole	15 (0.59)
C, c	Front side member standard hole	15 (0.59)	K, k	Front floor under reinforcement standard hole	15 (0.59)
D, d	Engine mounting bracket hole-rear	13 (0.51)	L, l	Rear floor side member standard hole	18 (0.71)
E, e	Front spring support hole-front	11 (0.43)	M, m	Strut bar installation hole-inner	12 (0.47)
F, f	Lower arm installation nut	14 (0.55) nut	N, n	Rear spring support hole-front = inner	9.5 (0.374)
G, g	Steering gear box installation bolt	12 (0.47) bolt	O, o	Rear floor side member standard hole	10 (0.39)
H, h	Engine mounting member installation nut	10 (0.39) nut	P, p	Rear floor side member standard hole	18 (0.71)
—	—	—	Q, q • R, r	Front airbag sensor installation nut (USA and CANADA only)	8 (0.31)