J/B NO.1 - LEFT KICK PANEL

OEM junction block, KEPT (DECISIONS R12 / R61). We splice into the factory leads of three plugs: 1I (always-hot), 1H, 1F. Cabin side of the lead, left kick panel (EWD 1993 p.18-19, p.46, p.62).

OEM box: only the plugs / cavities we splice are drawn

J/B No.1 plug 1F

pin 1 — **G** — EWD 1993 p.112-113

TAIL 15A out (TAIL relay, light switch TAIL/HEAD) -> rear tail lamps R11 / R12 pins 2-3, license L1 pin 1

factory lead G → **FL_OEM_JB1_1F_C1** — **w_rl_tail | 16 AWG | Red (Blue)** → -> Tail splice - J/B 1 TAIL feed to R11 / R12 pins 2 and 3 and L1

crimp butt splice into the factory 1F-1 lead at J/B1 (cabin side, left kick; the rear floor wire is missing, R55)

pin 2 — **G-Y** — EWD 1993 p.130-131

turn RH out (flasher T3 via H5 / C15) -> R12 pin 6

factory lead G-Y → **FL_OEM_JB1_1F_C2** — **w_rl_turn_r | 18 AWG | Red (Blue-White)** → -> RH rear lamp R12 pin 6, socket pigtail - turn RH (EWD 1993 p.130)

crimp butt splice into the factory 1F-2 lead at J/B1 (cabin side, left kick; the rear floor wire is missing, R55)

pin 3 — **G-B** — EWD 1993 p.130-131

turn LH out (flasher T3 via H5 / C15) -> R11 pin 6

factory lead G-B → **FL_OEM_JB1_1F_C3** — **w_rl_turn_l | 18 AWG | Red (Blue-Yellow)** → -> LH rear lamp R11 pin 6, socket pigtail - turn LH (EWD 1993 p.130)

crimp butt splice into the factory 1F-3 lead at J/B1 (cabin side, left kick; the rear floor wire is missing, R55)

J/B No.1 plug 1H

pin 2 — **L-Y** — EWD 1993 p.132

20A DOME feed into J/B1 (interior lights)

factory lead L-Y → **FL_OEM_JB1_1H_C2** — **w_pmu_dome | 14 AWG | Red (Yellow-Blue-White)** → -> LOGIC box Bus 1 pin 5 (glove box; CabinPower) - DOME 20 A fuse out

crimp butt splice into the factory 1H-2 lead at J/B1 (cabin side; engine-room main removed)

pin 4 — **G-B** — EWD 1993 p.130

turn LH out (flasher) -> F7 pin 3

factory lead G-B → **FL_OEM_JB1_1H_C4** — **w_turn_f7 | 18 AWG | Red (Blue-Yellow-Yellow)** → -> LH front turn / clearance lamp F7 pin 3 - turn + (EWD p.130)

crimp butt splice into the factory 1H-4 lead at J/B1 (cabin side; engine-room main removed)

pin 5 — **L** — EWD 1993 p.148

WIPER 20A out -> front wiper motor F9 pin 4 (+B to the park switch)

factory lead L → **FL_OEM_JB1_1H_C5** — **w_wip_b | 14 AWG | Red (Blue-Yellow)** → -> Front wiper motor F9 pin 4 (cowl, driver side) - +B (EWD p.148)

crimp butt splice into the factory 1H-5 lead at J/B1 (cabin side; engine-room main removed)

pin 6 — **G** — EWD 1993 p.112

TAIL 15A out (TAIL relay) -> front clearance F7 / F8 pin 1

factory lead G → **FL_OEM_JB1_1H_C6** — **w_clr | 16 AWG | Red (White)** → -> Clearance feed split - F7 LH + F8 RH

crimp butt splice into the factory 1H-6 lead at J/B1 (cabin side; engine-room main removed)

pin 7 — **B-O** — EWD 1993 p.62

IGN ON (IG2) -> ECU-B B28

factory lead B-O → **FL_IGN_SW_C1** — **w_ign | 20 AWG | Yellow (Blue-Yellow-White-Blue)** → -> ECU-B (Link G4X plug B, centre dash) pin B28

solder splice onto the factory lead

pin 7 — **B-O** — EWD 1993 p.62

IG2 -> supply diode -> ECU-A A5 (ECU wake feed, channels.csv b28 note, DECISIONS item 38)

factory lead B-O → **FL_IG2_WAKE_C1** — **w_ig2_in | 20 AWG | Yellow (Blue-Yellow-Yellow-White)** → -> pin Left

solder splice onto the factory lead

pin 8 — **G-Y** — EWD 1993 p.130

turn RH out (flasher) -> F8 pin 3

factory lead G-Y → **FL_OEM_JB1_1H_C8** — **w_turn_f8 | 18 AWG | Red (Blue-Yellow-Yellow)** → -> RH front turn / clearance lamp F8 pin 3 - turn + (EWD p.130)

crimp butt splice into the factory 1H-8 lead at J/B1 (cabin side; engine-room main removed)

J/B No.1 plug 1I

pin 1 — **B** — EWD p.18-19 / p.46

J/B1 primary B+ (always hot; was FL ALT)

factory lead B → **FL_OEM_JB1_1I_C1** — **w_pdb_jb1 | 6 AWG | Red** → -> POWER box AMI OUT pin 5 (glove box; CabinPower) - J/B1 60 A fuse out

heavy crimp butt splice into the factory 1I-1 lead

Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

IE1 COWL PLUG - LEFT KICK PANEL

Engine-room <-> cowl plug at the left kick panel. The engine-room main is REMOVED (R12); we splice into the factory cowl-side lead of each pin we use (EWD 1993 p.31, p.116-117, p.130, p.148, p.185).

OEM box: only the plugs / cavities we splice are drawn

IE1


pin 2	**R-Y**	EWD 1993 p.116	headlight relay coil- line: splice I2 -> light control SW C15-14 HEAD / C15-13 FLASH to ground (also R8-8) <- sp_head_coil <- k_hl / k_hr 85	factory lead R-Y	**FL_OEM_IE1_C2** — **w_head_coil_cp | 18 AWG | White (Blue-Yellow-Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Headlight coil splice - HEAD LH and RH relay coils to cowl plug IE1 pin 2
pin 3	**W**	EWD 1993 p.116	30A RTR -> retract control relay R8 pin 3 (OEM relay stays)	factory lead W	**FL_OEM_IE1_C3** — **w_pmu_rtr | 10 AWG | Red (Yellow-Yellow-Yellow)** — heavy crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> POWER box AMI OUT pin 2 (glove box; CabinPower) - RTR 30 A fuse out
pin 6	**L-W**	EWD 1993 p.148	wiper switch C16-4 (park S) <- F9 pin 3	factory lead L-W	**FL_OEM_IE1_C6** — **w_wip_park | 14 AWG | Yellow (Blue-Yellow)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Front wiper motor F9 pin 3 (cowl, driver side) - park switch S (EWD p.148)
pin 7	**G-Y**	EWD 1993 p.117	retract control relay R8-4 -> retract motor RH R3 pin 4	factory lead G-Y	**FL_OEM_IE1_C7** — **w_rtr_r3_4 | 12 AWG | Red (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> RH retract motor feed - 12 AWG to 16 AWG pigtail, at R3
pin 8	**G-B**	EWD 1993 p.117	retract control relay R8-5 -> retract motor RH R3 pin 2	factory lead G-B	**FL_OEM_IE1_C8** — **w_rtr_r3_2 | 16 AWG | Red (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> RH retract motor R3 pin 2 - motor feed from IE1 pin 8 (EWD p.117)
pin 9	**G-Y**	EWD 1993 p.117	retract control relay R8-11 (DOWN / close limit) <- R2 / R3 pin 3	factory lead G-Y	**FL_OEM_IE1_C9** — **w_rtr_close | 18 AWG | Yellow (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Retract close-limit join - R2 + R3 pin 3 to IE1 pin 9
pin 10	**W**	EWD p.31	AM1 to ignition switch I13-4	factory lead W	**FL_OEM_IE1_C10** — **w_pdb_am1 | 8 AWG | Red (Yellow-Yellow-White)** — heavy crimp butt splice into the factory lead -> POWER box AMI OUT pin 3 (glove box; CabinPower) - AM1 40 A fuse out
pin 11	**R-L**	EWD 1993 p.116	headlight high-beam return (C15-3 dimmer / flash, high-beam indicator) <- H1 / H2 pin 1	factory lead R-L	**FL_OEM_IE1_C11** — **w_hl_high | 14 AWG | Red (White-Yellow)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> High-beam return join - H1 + H2 pin 1 to IE1 pin 11
pin 12	**W**	EWD 1993 p.130	HAZ-HORN feed -> hazard switch / turn flasher	factory lead W	**FL_OEM_IE1_C12** — **w_haz | 14 AWG | Red (Blue-Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Hazard splice after LOGIC Bus 1 pin 4 (glove box; CabinPower) - HAZ-HORN 15 A
pin 13	**L-B**	EWD 1993 p.148	wiper switch C16-7 (LOW / INT / MIST) -> F9 pin 2	factory lead L-B	**FL_OEM_IE1_C13** — **w_wip_lo | 14 AWG | Red (Blue-Yellow)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Front wiper motor F9 pin 2 (cowl, driver side) - LOW (EWD p.148)
pin 14	**G**	EWD 1993 p.117	retract control relay R8-1 -> retract motor LH R2 pin 4	factory lead G	**FL_OEM_IE1_C14** — **w_rtr_r2_4 | 12 AWG | Red (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> LH retract motor feed - 12 AWG to 16 AWG pigtail, at R2
pin 15	**G-O**	EWD 1993 p.117	retract control relay R8-2 -> retract motor LH R2 pin 2	factory lead G-O	**FL_OEM_IE1_C15** — **w_rtr_r2_2 | 16 AWG | Red (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> LH retract motor R2 pin 2 - motor feed from IE1 pin 15 (EWD p.117)
pin 16	**G-W**	EWD 1993 p.117	retract control relay R8-7 (UP / open limit) <- R2 / R3 pin 1	factory lead G-W	**FL_OEM_IE1_C16** — **w_rtr_open | 18 AWG | Yellow (Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Retract open-limit join - R2 + R3 pin 1 to IE1 pin 16
pin 17	**B-R**	EWD p.31	AM2 to ignition switch I13-10	factory lead B-R	**FL_OEM_IE1_C17** — **w_pdb_am2 | 10 AWG | Red (Yellow-White-Blue)** — heavy crimp butt splice into the factory lead -> POWER box AMI OUT pin 4 (glove box; CabinPower) - AM2 30 A fuse out
pin 18	**R-W**	EWD 1993 p.116	headlight low-beam return (C15-12 dimmer side) <- H1 / H2 pin 2	factory lead R-W	**FL_OEM_IE1_C18** — **w_hl_low | 14 AWG | Red (White-White)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Low-beam return join - H1 + H2 pin 2 to IE1 pin 18
pin 19	**G**	EWD 1993 p.185	horn relay coil- line: horn SW C15-10 to ground <- k_horn 85	factory lead G	**FL_OEM_IE1_C19** — **w_horn_85_cp | 18 AWG | White (Blue-Blue)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Horn Relay (seated in the LOGIC box M3) pin 85
pin 20	**L-O**	EWD 1993 p.148	wiper switch C16-13 (HIGH) -> F9 pin 1	factory lead L-O	**FL_OEM_IE1_C20** — **w_wip_hi | 14 AWG | Red (Blue-Yellow)** — crimp butt splice into the factory cowl-side lead (cabin side; engine-room main removed) -> Front wiper motor F9 pin 1 (cowl, driver side) - HIGH (EWD p.148)

Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

OLD R/B NO.2 POSITION - LEFT KICK PANEL

Relay block REMOVED (R12, R58). Its factory leads stay in the loom; we splice into the cowl-side lead where the relay pin was (EWD 1993 p.137-138, p.170).

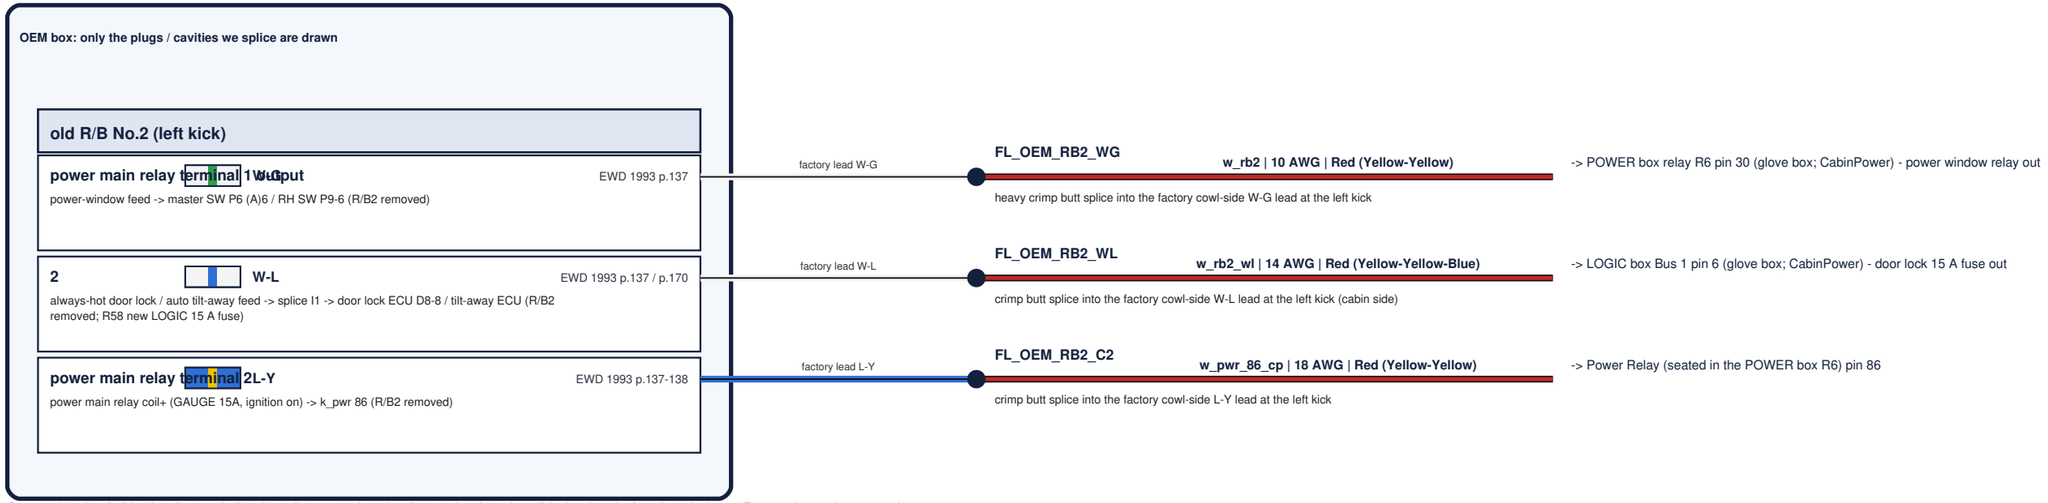


Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

OLD R/B NO.4 POSITION - RIGHT KICK PANEL

Relay block REMOVED (R12). Its factory leads stay in the loom; we splice into the lead where the relay pin was (EWD 1993 p.66, p.215).

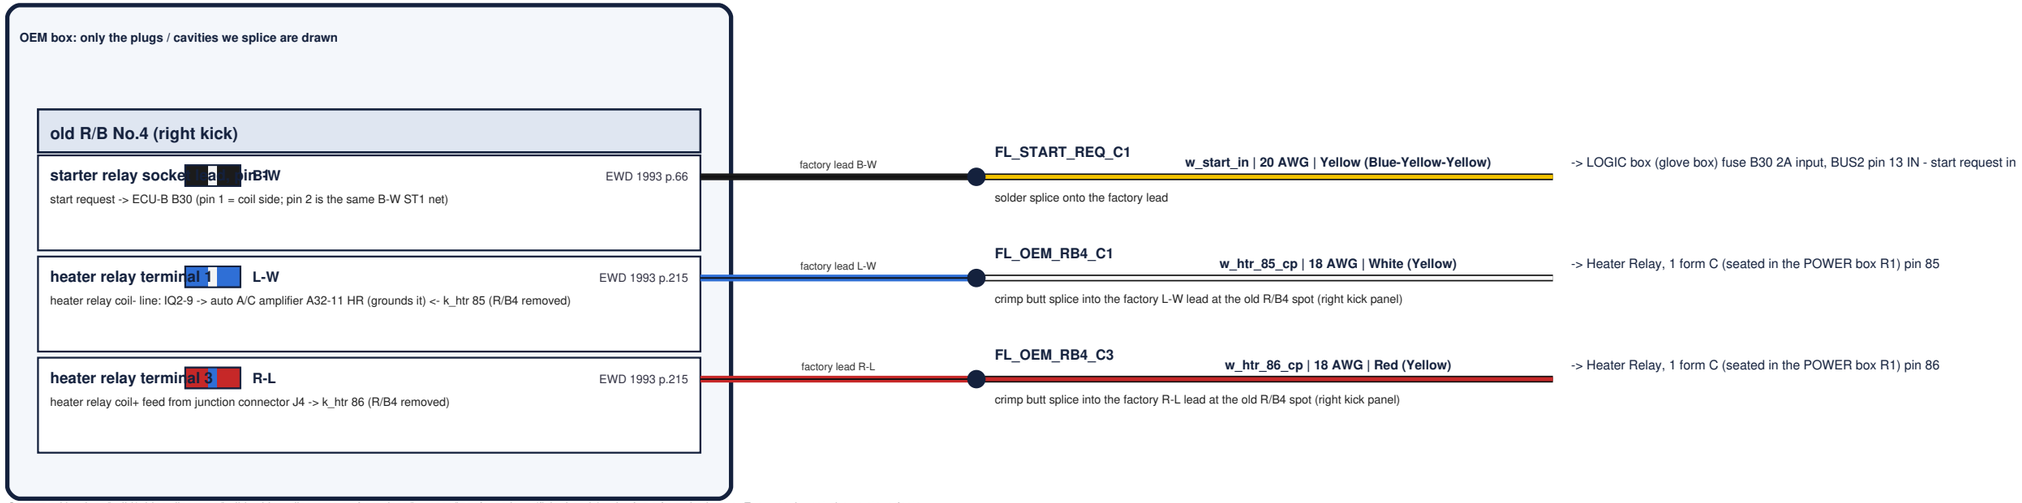


Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

J/B NO.3 - BEHIND THE COMBINATION METER

OEM cowl junction block, KEPT. One splice: the GAUGE 15 A ignition lead (Mitchell 1993 Fig. 16, grid 63; 1992 p.132).

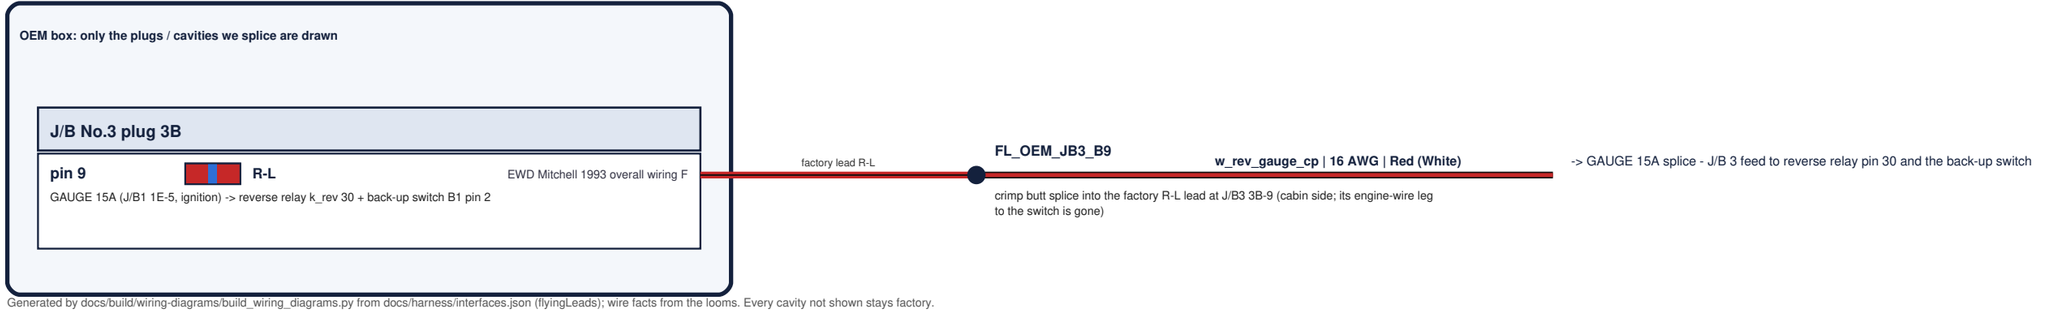


Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

IG2 PLUG - UNDER THE ECU, COWL SIDE

Cabin plug under the ECU; the engine-side wire is removed. We splice into the cowl-side leads (EWD 1993 p.74-75).

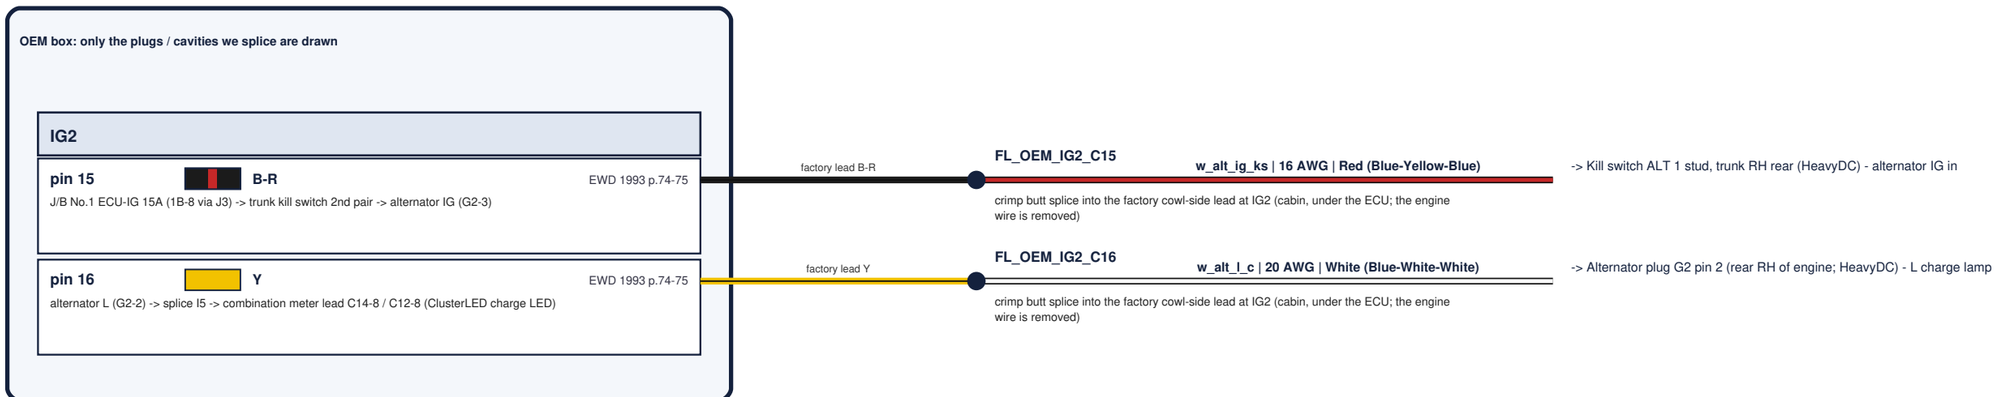


Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.

KICK-PANEL BODY GROUNDS ID AND IG

OEM body ground points kept (EWD ground index p.169 / p.171; docs/electrical/ENGINE-ROOM-POWER-REDISTRIBUTION.md 5.2 / 5.3). A ring terminal goes on each factory ground bolt.

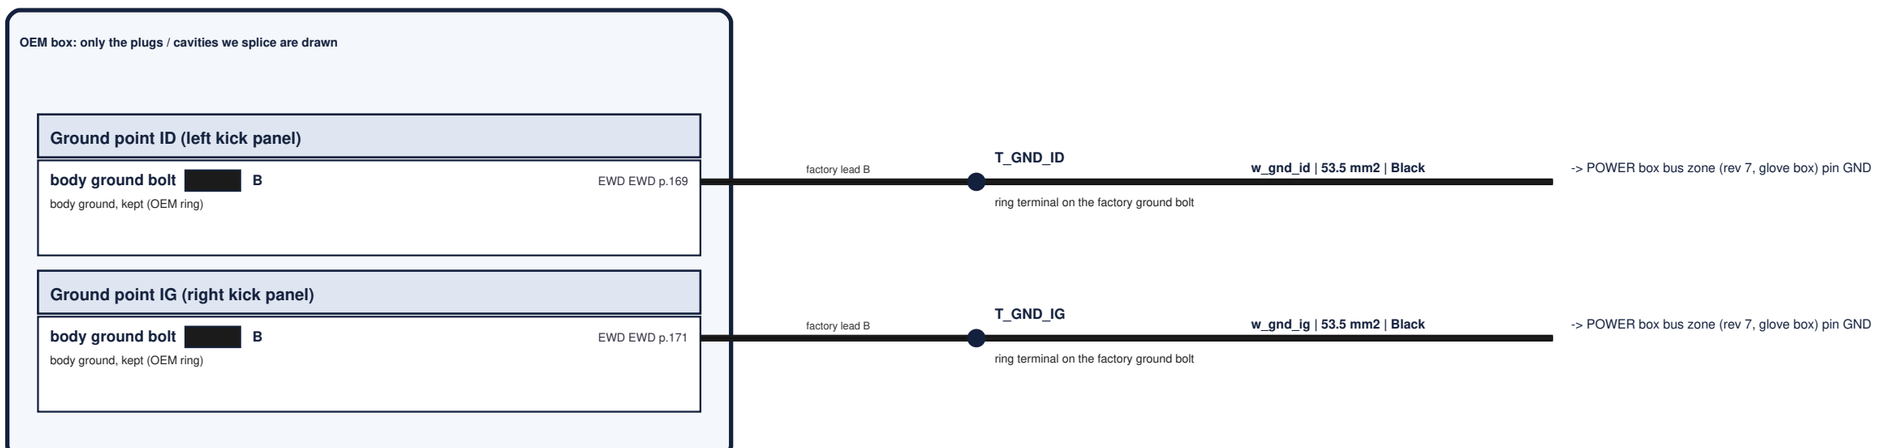

Generated by docs/build/wiring-diagrams/build_wiring_diagrams.py from docs/harness/interfaces.json (flyingLeads); wire facts from the looms. Every cavity not shown stays factory.

Splice dot = our wire butt-spliced into the factory lead. Wire label: wire id | gauge | insulation colour (ident bands). Far end: DECISIONS R156 form.