
LAYOUT - top view, front of the car to the RIGHT, driver side UP (R140 / R153). Not to scale; lengths in mm (estimates until measured at the car).

Each segment: length | wires in it | DR-25 heat-shrink size for its bundle (est. from the wire ODs). Lengths per wire (path + 100 mm at each end) are in the pinout table.

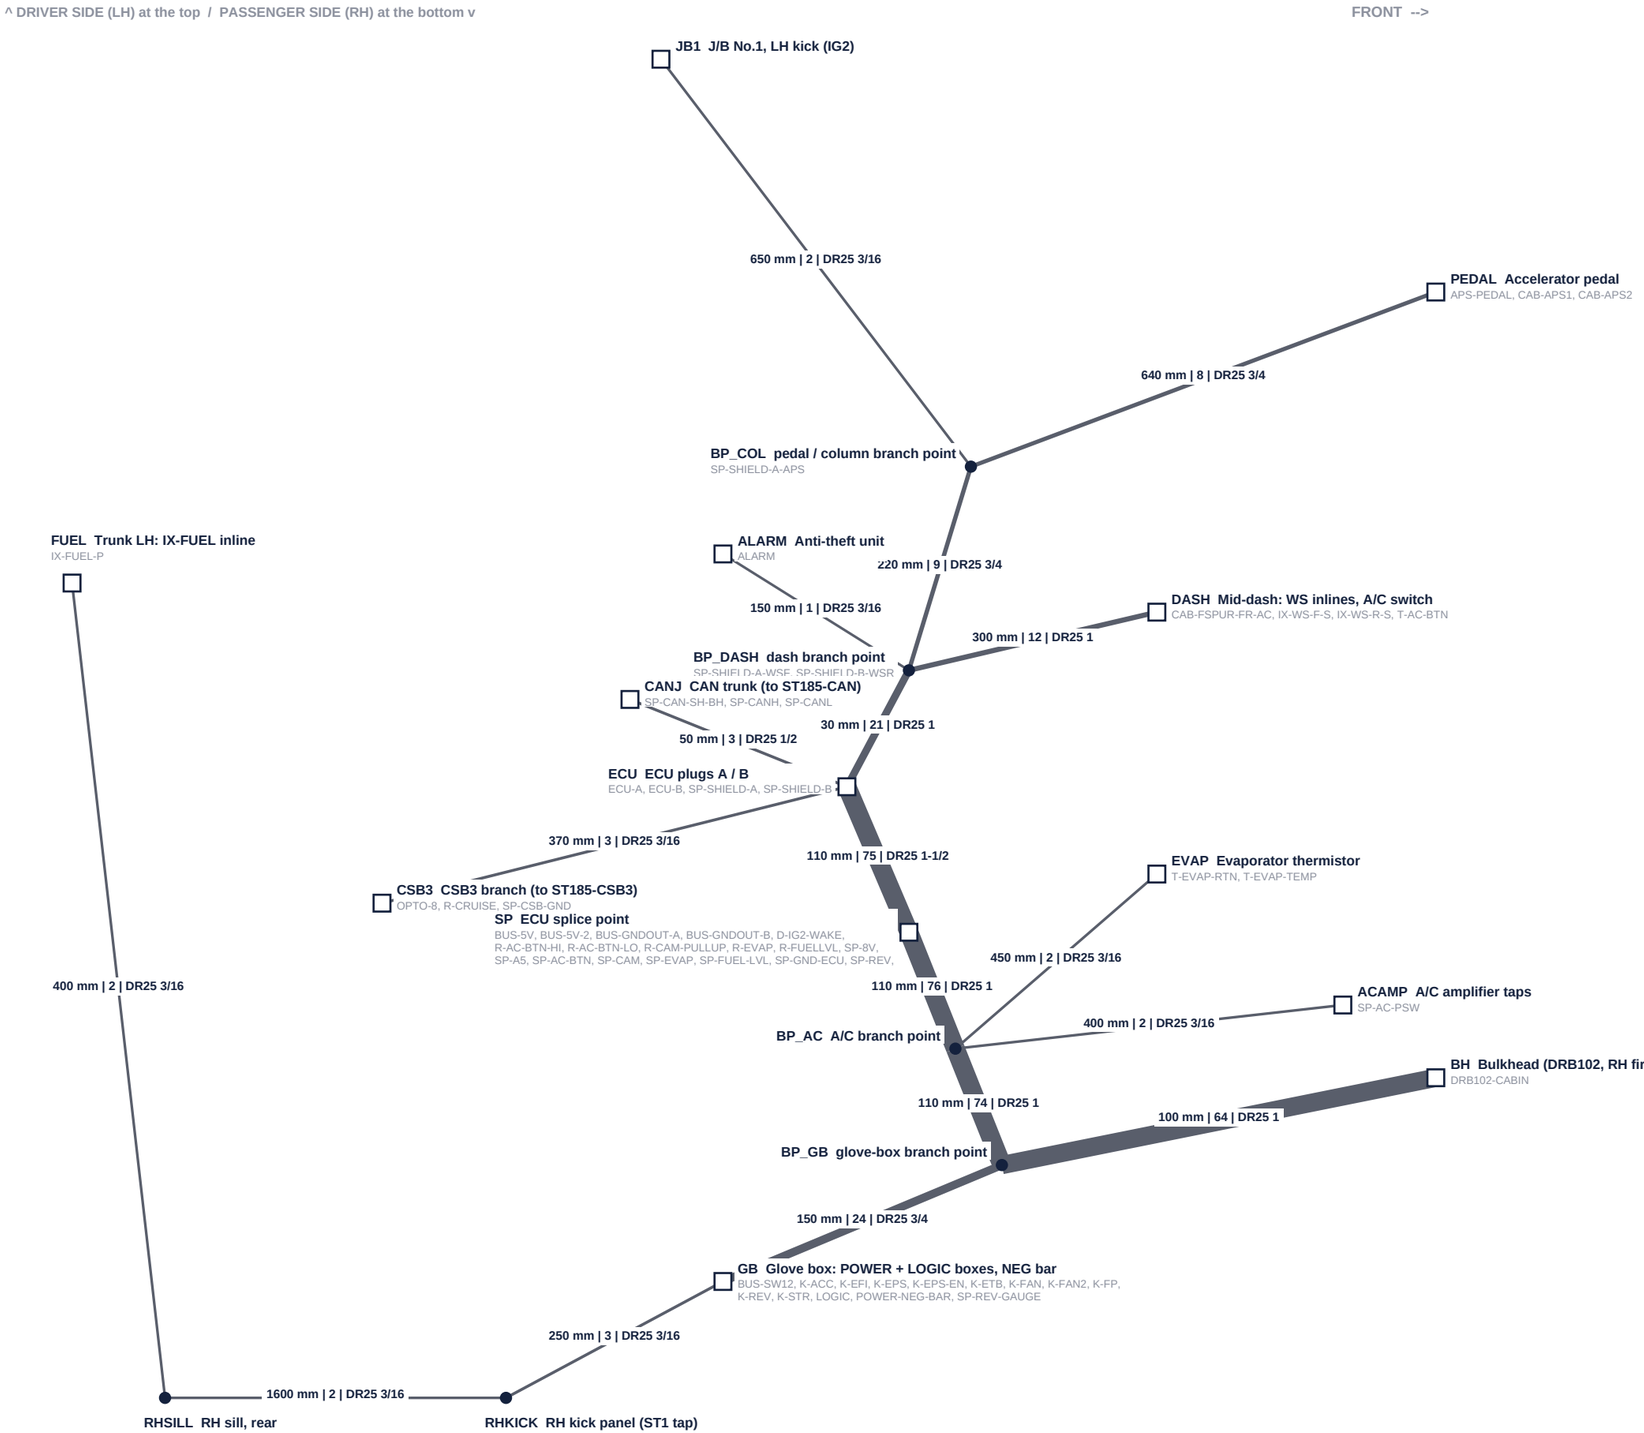

SEGMENTS

FROM	TO	MM	WIRES	BUNDLE	DR-25
ECU	SP	110	75	24.0	DR-25-1-1/2-0
SP	BP_AC	110	76	19.7	DR-25-1-0
BP_AC	BP_GB	110	74	19.5	DR-25-1-0
BP_GB	BH	100	64	18.3	DR-25-1-0
BP_GB	GB	150	24	11.9	DR-25-3/4-0
GB	RHKICK	250	3	3.3	DR-25-3/16-0
RHKICK	RHSILL	1600	2	2.7	DR-25-3/16-0
RHSILL	FUEL	400	2	2.7	DR-25-3/16-0
BP_AC	ACAMP	400	2	2.9	DR-25-3/16-0
BP_AC	EVAP	450	2	2.7	DR-25-3/16-0
ECU	BP_DASH	30	21	20.8	DR-25-1-0
BP_DASH	DASH	300	12	18.0	DR-25-1-0
BP_DASH	BP_COL	220	9	13.6	DR-25-3/4-0
BP_COL	PEDAL	640	8	15.3	DR-25-3/4-0
BP_COL	JB1	650	2	2.7	DR-25-3/16-0
BP_DASH	ALARM	150	1	1.9	DR-25-3/16-0
ECU	CSB3	370	3	3.7	DR-25-3/16-0
ECU	CANJ	50	3	9.4	DR-25-1/2-0

NODES

ECU ECU plugs A / B (centre dash, factory ECM spot)
SP ECU splice point (bussed DT plugs + soldered splices)
BP_AC A/C branch
BP_GB glove-box branch
BH DRB102 bulkhead, cabin half (RH firewall)
GB Glove box: POWER + LOGIC boxes, NEG bar, EHPS relay
RHKICK RH kick panel (old R/B No.4 spot, ST1 tap)
RHSILL RH sill, rear end (the run turns across the trunk)
FUEL Trunk LH: IX-FUEL inline to the fuel sender
ACAMP A/C amplifier (A18) taps
EVAP Evaporator case: thermistor A24 leads
BP_DASH dash branch
DASH Mid-dash above the ECU: front + rear WS inlines, A/C switch lead
BP_COL pedal / column branch
PEDAL Accelerator pedal (driver footwell)
JB1 J/B No.1, LH kick panel (IG2 taps)
ALARM Anti-theft unit (centre dash, left of the ECU)
CSB3 CSB3 branch (centre console) - continues on ST185-CSB3
CANJ CAN trunk at the ECU - continues on ST185-CAN

The ECU splice point (SP) is ONE place by the ECU plugs (Dan 2026-10-19): +5 V on BUS-5V + BUS-5V-2, Gnd Out A24 on BUS-GNDOUT-A, B22 on BUS-GNDOUT-B (bussed DEUTSCH DT, DECISIONS R169 parts), +8 V, switched 12 V, the A5 feed and the ECU power ground soldered there. The ECU ground runs alone to the POWER box NEG bar (R216).

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Layout

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	1 OF 12	B (11x17)	DG	2026-10-19

SCHEMATIC - THROUGH THE BULKHEAD - every wire that lands on the DRB102 (signals, sensor rails, feeds) (part 1 of 2)

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

ECU-A - Link G4X plug A (centre dash)

4-1437290-1

1	Injector 4 drive (-)	w111_c
2	Injector 3 drive (-)	w110_c
3	Injector 2 drive (-)	w109_c
4	Injector 1 drive (-)	w108_c
8	Crank sensor signal	w200_c
10	Coil 4 trigger (IGT)	w123_c
11	Coil 3 trigger (IGT)	w122_c
12	Coil 2 trigger (IGT)	w121_c
13	Coil 1 trigger (IGT)	w120_c
15	Coolant temp signal	w201_c
16	Intake temp signal	w202_c
17	MAP sensor signal	w26_c
21	Boost solenoid (-)	w103_c
22	Throttle pos 1 main	w128_c
27	EHPS pump speed	w_mrs_c
30	Turbo speed signal	w16_c
31	Flex fuel signal	w48_c
33	Throttle pos 2 sub	w129_c

ECU-B (Link G4X plug B, centre dash)

4-1437290-0

6	Oil temp signal	w203_c
7	Charge temp signal	w204_c
9	Knock sensor signal	w205_c
15	Oil pressure signal	w29_c
16	Fuel pressure signal	w32_c
18	ETB motor +	w124_c
23	Coolant press signal	w35_c
26	ETB motor -	w215_c
29	Gearbox speed signal	w_vss_sig_c

BUS-5V - DT06-12 plug (ECU splice point)

DT06-12SA

2	+5 V throttle sensor	w_rail_sp_5v_c
3	+5 V MAP sensor	w_5v_a_c39
4	+5 V turbo speed	w_5v_a_c40
5	+5 V oil pressure	w_5v_brail_c45
6	+5 V fuel pressure	w_5v_brail_c46
7	+5 V coolant press	w_5v_brail_c47

BUS-GNDOUT-A - DT06-12 plug (ECU splice point)

DT06-12SA

2	Gnd IAT/TPS/coolant	w_rail_sp_gndout_c
3	Gnd crank sensor	w_gnd_a_c41
4	Gnd cam sensor	w_gnd_a_c42
5	Gnd turbo speed	w_gnd_a_c43
6	Gnd flex + MAP	w_gnd_a_c44

BUS-GNDOUT-B - DT06-12 plug (ECU splice point)

DT06-12SA

6	Knock sensor (-)	w12_c
7	Gnd oil/clnt/temps	w_gnd_b_c19
8	Gnd fuel press + VSS	w_gnd_b_c21

SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply (E...

solder splice (node)

-	+8 V to cam sensor	w_rail_sp_8v_c

SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull...

solder splice (node)

-	Cam sensor signal	w_cam_sig_c

SP-CANH - CAN H join - ECU, CSB3, cluster, Pi, bulkhead (o...

solder splice (node)

-	CAN H to CAN-Lambda	wc_h_bh_bc

SP-CANL - CAN L join - ECU, CSB3, cluster, Pi, bulkhead (o...

solder splice (node)

-	CAN L to CAN-Lambda	wc_l_bh_bc

SP-REV - reverse switch out to CSB3 opto + reverse relay

solder splice (node)

-	Reverse sw +12 V out	w_rev_sw_c

DRB102-CABIN - DRB102 receptacle (RH firewall)

DRB12-102PAE-L018

9	Coil 1 trigger (IGT)	w120_c
10	Coil 2 trigger (IGT)	w121_c
11	Coil 3 trigger (IGT)	w122_c
12	Coil 4 trigger (IGT)	w123_c
13	+5 V fuel pressure	w_5v_brail_c46
14	Fuel pressure signal	w32_c
15	Gnd fuel press + VSS	w_gnd_b_c21
16	+5 V MAP sensor	w_5v_a_c39
17	MAP sensor signal	w26_c
18	Gnd flex + MAP	w_gnd_a_c44
21	Injector 1 drive (-)	w108_c
22	Injector 2 drive (-)	w109_c
23	Injector 3 drive (-)	w110_c
24	Injector 4 drive (-)	w111_c
25	+5 V coolant press	w_5v_brail_c47
26	Coolant press signal	w35_c
27	+5 V oil pressure	w_5v_brail_c45
28	Oil pressure signal	w29_c
29	Gnd oil/clnt/temps	w_gnd_b_c19
31	Flex fuel signal	w48_c
33	Intake temp signal	w202_c
34	Gnd IAT/TPS/coolant	w_rail_sp_gndout_c
41	+5 V throttle sensor	w_rail_sp_5v_c
42	Throttle pos 1 main	w128_c
44	Throttle pos 2 sub	w129_c
45	ETB motor +	w124_c
46	ETB motor -	w215_c
52	+5 V turbo speed	w_5v_a_c40
53	Turbo speed signal	w16_c
56	Gnd turbo speed	w_gnd_a_c43
58	Boost solenoid (-)	w103_c
59	Charge temp signal	w204_c
61	Oil temp signal	w203_c
63	+8 V to cam sensor	w_rail_sp_8v_c
64	Cam sensor signal	w_cam_sig_c
65	Gnd cam sensor	w_gnd_a_c42
68	Gearbox speed signal	w_vss_sig_c
70	Coolant temp signal	w201_c
71	Knock sensor signal	w205_c
72	Knock sensor (-)	w12_c
74	Crank sensor signal	w200_c
75	Gnd crank sensor	w_gnd_a_c41
78	Reverse sw +12 V out	w_rev_sw_c
79	CAN H to CAN-Lambda	wc_h_bh_bc
80	CAN L to CAN-Lambda	wc_l_bh_bc
84	EHPS pump speed	w_mrs_c

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White · built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Through The Bulkhead (1 of 2)

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	2 OF 12	B (11x17)	DG	2026-10-19

SCHEMATIC - THROUGH THE BULKHEAD - every wire that lands on the DRB102 (signals, sensor rails, feeds) (part 2 of 2)

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

DRB102-CABIN - DRB102 receptacle (RH firewall)
DRB12-102PAE-L018

1	EFI relay k_efi -> LOGIC COP 15 A fuse	w_cop_pwr_ac
2	EFI relay k_efi -> LOGIC INJ 15 A fuse	w_inj_pwr_ac
30	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_rail_sp_sw12_c
67	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_rail_sw12_b_c_ac
77	Back-up sw +12 V in	w_rev_feed_c
83	EFI relay k_efi -> LOGIC MRS 7.5 A fuse	w_fb_mrs_en
85	EHPS relay coil (-)	w_eps_rly
95	EFI relay k_efi -> LOGIC LAM 7.5 A fuse	w_lam12_cp
96	CAN-Lambda ground	w_lamg_ac

w_cop_pwr_ac 14 RED
w_inj_pwr_ac 14 RED
w_rail_sp_sw12_c 18 RED
w_rail_sw12_b_c_ac 20 RED
w_rev_feed_c 16 RED
w_fb_mrs_en 20 RED
w_eps_rly 18 WHT
w_lam12_cp 14 RED
w_lamg_ac 14 BLK

w_rail_sp_sw12_c 18 RED
w_rail_sw12_b_c_ac 20 RED
w_lam12_cp 14 RED
w_fb_mrs_en 20 RED
w_cop_pwr_ac 14 RED
w_inj_pwr_ac 14 RED
w_rev_feed_c 16 RED
w_eps_rly 18 WHT
w_lamg_ac 14 BLK

SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LOGIC S...
solder splice (node)

-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_rail_sp_sw12_c
-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_rail_sw12_b_c_ac

LOGIC box - custom fuse + relay box, glove box inboard (cad/fus...
ST185-FB-LOGIC rev 5

BUS2-1	EFI relay k_efi -> LOGIC LAM 7.5 A fuse	w_lam12_cp
BUS2-12	EFI relay k_efi -> LOGIC MRS 7.5 A fuse	w_fb_mrs_en
BUS2-3	EFI relay k_efi -> LOGIC COP 15 A fuse	w_cop_pwr_ac
BUS2-4	EFI relay k_efi -> LOGIC INJ 15 A fuse	w_inj_pwr_ac

SP-REV-GAUGE - GAUGE 15A splice - J/B 3 feed to reverse relay ...
solder splice (node)

-	Back-up sw +12 V in	w_rev_feed_c

K-EPS - MR-S EHPS pump relay (HCR150, glove box, beside the ...
V23132-A2001-B200

85	EHPS relay coil (-)	w_eps_rly

POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)
end

-	CAN-Lambda ground	w_lamg_ac

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White

– – – – built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Through The Bulkhead (2 of 2)

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	3 OF 12	B (11x17)	DG	2026-10-19

SCHEMATIC - ECU SPLICE POINT - power, grounds and sensor rails (bussed DT plugs, soldered splices, NEG bar)

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

w_a5_pin 18 RED

w_a5_pin 18 RED

ECU-A - Link G4X plug A (centre dash)
4-1437290-1

5	EFI relay k_efi -> LOGIC SW12 7.5 A fuse...	w_a5_pin
6	+8 V sensor supply	w19
24	Sensor ground	w68
25	ECU power ground	w70
32	+5 V sensor supply	w67
34	ECU power ground	w_a34

w19 20 ORN
w68 18 BLU
w70 18 BLK
w67 18 ORN
w_a34 18 BLK

ECU-B (Link G4X plug B, centre dash)
4-1437290-0

22	Sensor ground B	w69
25	ECU power ground	w_b25_ac
34	ECU power ground	w_b34_ac

w69 18 BLU
w_b25_ac 18 BLK
w_b34_ac 18 BLK

BUS-5V-2 - DT06-8 plug (ECU splice point)
DT06-08SA

1	+5 V from BUS-5V	w_5v_bus_link
2	+5 V cruise ladder	w_cru_5v_ac
3	+5 V evap pull-up	w_evap_5v
4	+5 V fuel lvl pullup	w44

w_5v_bus_link 20 ORN
w_cru_5v_ac 20 ORN
w_evap_5v 20 ORN
w44 20 ORN

BUS-SW12 - SW12 bus plug DT06-12 (glove box, by LOGIC b...
DT06-12SA

2	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_fb_sw12

w_fb_sw12 18 RED

SP-A5 - ECU splice point - SP-A5: ECU main feed (SW12 + IG...
solder splice (node)

-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse...	w78
-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse...	w_ig2_diode
-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse...	w_a5_pin

w78 18 RED
w_ig2_diode 20 RED

R-AC-BTN-LO - 3.9k A/C switch divider, bottom
inline part

2	A/C btn divider gnd	w_ac_btn_gnd

w_ac_btn_gnd 20 BLU

R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V
inline part

1	+8 V to cam pull-up	w_cam_pullup_8v

w_cam_pullup_8v 20 ORN

APS-PEDAL - accelerator pedal sensor

1	+5 V pedal sensor 2	w210
2	Pedal 2 ground	w_aps_gnd2
4	+5 V pedal sensor 1	w_aps_vc1
5	Pedal 1 ground	w40

w210 20 RED
w_aps_gnd2 20 YEL
w_aps_vc1 20 RED
w40 20 YEL

IX-FUEL-P - IX-FUEL inline to fuel sender lead (trunk end)
DT04-2P

2	Fuel level ground	w45

w45 20 BLU

IX-WS-F-S - to front VR conditioner
DT06-6S

1	VRC-F +5V	cab_fspur_5v
2	VRC-F GND	cab_fspur_gnd

cab_fspur_5v 20 RED
cab_fspur_gnd 20 YEL

IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
DT06-6S

1	VRC-R +5V	cab_rspur_5v
2	VRC-R GND	cab_rspur_gnd

cab_rspur_5v 20 RED
cab_rspur_gnd 20 YEL

POWER-NEG-BAR - POWER box NEG bar M8 stud (glove box)
end

-	CSB3 + opto ground	w_csbg_ac
-	ECU power ground	w66

w_csbg_ac 20 BLK
w66 10 BLK

T-EVAP-RTN - OEM evaporator thermistor A24 pin 2, at the e...
end

-	Evap thermistor gnd	w_evap_rtn

w_evap_rtn 20 BLU

OEM J/B No.1 (LH kick panel) 1H pin 7, B-O
factory lead tap

7	IG2 wake feed	w_ig2_in

w_ig2_in 20 YEL

w_cru_5v_ac 20 ORN

R-CRUISE - resistor r_cruise on CSB3
inline part

1	+5 V cruise ladder	w_cru_5v_ac

w_evap_5v 20 ORN

R-EVAP - 2.2k evap thermistor pull-up to +5V
inline part

2	+5 V evap pull-up	w_evap_5v

w44 20 ORN

R-FUELLVL - 470R fuel level pull-up to +5V
inline part

2	+5 V fuel lvl pullup	w44

w70 18 BLK
w_a34 18 BLK
w_b25_ac 18 BLK
w_b34_ac 18 BLK
w66 10 BLK

SP-GND-ECU - ECU splice point - SP-GND-ECU: ECU power grou...
solder splice (node)

-	ECU power ground	w70
-	ECU power ground	w_a34
-	ECU power ground	w_b25_ac
-	ECU power ground	w_b34_ac
-	ECU power ground	w66

w19 20 ORN
w_cam_pullup_8v 20 ORN

SP-8V - ECU splice point - SP-8V: +8 V cam sensor supply (ECU ...
solder splice (node)

-	+8 V sensor supply	w19
-	+8 V to cam pull-up	w_cam_pullup_8v

w_fb_sw12 18 RED
w78 18 RED

SP-SW12 - ECU splice point - SP-SW12: switched +12 V (LOGIC S...
solder splice (node)

-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse	w_fb_sw12
-	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ I...	w78

w68 18 BLU
w40 20 YEL
w_aps_gnd2 20 YEL
cab_fspur_gnd 20 YEL

BUS-GNDOUT-A - DT06-12 plug (ECU splice point)
DT06-12SA

1	Sensor gnd from A24	w68
7	Pedal 1 ground	w40
8	Pedal 2 ground	w_aps_gnd2
9	Front VRC ground	cab_fspur_gnd

w67 18 ORN
w_aps_vc1 20 RED
w210 20 RED
cab_fspur_5v 20 RED
cab_rspur_5v 20 RED
w_5v_bus_link 20 ORN

BUS-5V - DT06-12 plug (ECU splice point)
DT06-12SA

1	+5 V from ECU A32	w67
8	+5 V pedal sensor 1	w_aps_vc1
9	+5 V pedal sensor 2	w210
10	+5 V front VRC	cab_fspur_5v
11	+5 V rear VRC	cab_rspur_5v
12	+5 V to BUS-5V-2	w_5v_bus_link

w69 18 BLU
w45 20 BLU
cab_rspur_gnd 20 YEL
w_ac_btn_gnd 20 BLU
w_evap_rtn 20 BLU

BUS-GNDOUT-B - DT06-12 plug (ECU splice point)
DT06-12SA

1	Sensor gnd from B22	w69
2	Fuel level ground	w45
3	Rear VRC ground	cab_rspur_gnd
4	A/C btn divider gnd	w_ac_btn_gnd
5	Evap thermistor gnd	w_evap_rtn

w_ig2_in 20 YEL
w_ig2_diode 20 RED

D-IG2-WAKE - IG2 wake diode (1N5822)
inline part

1	IG2 wake feed	w_ig2_in
2	EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ I...	w_ig2_diode

w_csbg_ac 20 BLK

SP-CSB-GND - CSB3 ground splice - CSB3 pin 2, opto board CO...
solder splice (node)

-	CSB3 + opto ground	w_csbg_ac

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White

– – – – built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Ecu Splice Point

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	4 OF 12	B (11x17)	DG	2026-10-19

SCHEMATIC - CABIN BRANCHES - pedal, wheel-speed inlines, fuel level, A/C, IG2 / start taps, relay coils, other harnesses (part 1 of 2)

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

ECU-A - Link G4X plug A (centre dash)

4-1437290-1

9	Cam sensor signal	w_trig2_pin
14	Pedal 1 signal main	w38
18	A/C cancel (ACT)	w_ac_kill
19	Fuel pump relay (-)	w_fp85
20	ETB relay coil (-)	w81
23	FL conditioned out	cab_fspur_l
26	Start relay coil (-)	w_str85
28	EFI relay coil (-)	w76
29	Rad fan relay (-)	w_fan85

ECU-B (Link G4X plug B, centre dash)

4-1437290-0

5	ETB motor +12 V	w82_ac
10	A/C clutch relay (-)	w_acc_trig
12	EPS enable relay (-)	w_eps_trig
13	Cond fan relay (-)	w_fan285
19	Rear right wheel spd	cab_rspur_r
20	Rear left wheel spd	cab_rspur_l
21	FR conditioned out	cab_fspur_r_ac
24	Fuel level signal	w_fl_sig_pin
27	Anti-theft input	w_at_immob2

w_trig2_pin 20 WHT
w38 20 BLU
w_ac_kill 20 WHT
w_fp85 18 WHT
w81 20 WHT
cab_fspur_l 20 BLU
w_str85 18 WHT
w76 18 WHT
w_fan85 18 WHT
w82_ac 18 RED
w_acc_trig 18 WHT
w_eps_trig 18 WHT
w_fan285 18 WHT
cab_rspur_r 20 BLU
cab_rspur_l 20 GRN
cab_fspur_r_ac 20 WHT
w_fl_sig_pin 20 WHT
w_at_immob2 20 WHT

SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up t...

solder splice (node)

-	Cam sensor signal	w_trig2_pin

APS-PEDAL - accelerator pedal sensor

6	Pedal 1 signal main	w38

OEM A/C amplifier

factory lead tap

11	A/C cancel (ACT)	w_ac_kill

K-FP - Fuel Pump Relay, TE HCR150 (seated in the battery relay b...

V23132-A2001-B200

85	Fuel pump relay (-)	w_fp85

K-STR - Start Relay (seated in the POWER box R3) - ACTIVE-LOW...

1-1414147-0

85	Start relay coil (-)	w_str85

K-EFI - EFI Main Relay (seated in the POWER box R2) - ACTIVE-L...

1-1414147-0

85	EFI relay coil (-)	w76

K-FAN - Radiator Fan Relay (on/off) (seated in the POWER box R...

1-1414147-0

85	Rad fan relay (-)	w_fan85

K-ETB - ETB Power Relay (seated in the LOGIC box M4) - ACTIVE...

4-1904124-2

85	ETB relay coil (-)	w81
87	ETB motor +12 V	w82_ac

IX-WS-F-S - to front VR conditioner

DT06-6S

3	FL conditioned out	cab_fspur_l
4	FR conditioned out	cab_fspur_r_ac

K-ACC - A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ...

6-1419137-4

85	A/C clutch relay (-)	w_acc_trig

K-EPS-EN - EPS Enable Relay (seated in the LOGIC box M6) - AC...

6-1419137-4

85	EPS enable relay (-)	w_eps_trig

K-FAN2 - Condenser Fan Relay (on/off) (seated in the POWER bo...

1-1393304-0

85	Cond fan relay (-)	w_fan285

IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)

DT06-6S

3	Rear left wheel spd	cab_rspur_l
4	Rear right wheel spd	cab_rspur_r

SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24

solder splice (node)

-	Fuel level signal	w_fl_sig_pin

ALARM - Alarm module - main harness (DT06-12SA) (on ST185-A...

DT06-12SA

9	Anti-theft input	w_at_immob2

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White

– – – – built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Cabin Branches (1 of 2)

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	5 OF 12	B (11x17)	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/drawings/build_drawings.py from the master wire list; not to scale

SCHEMATIC - CABIN BRANCHES - pedal, wheel-speed inlines, fuel level, A/C, IG2 / start taps, relay coils, other harnesses (part 2 of 2)

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

ECU-B (Link G4X plug B, centre dash)
4-1437290-0

28	Ignition sw sense	w_ign
30	Start request	w_start
31	A/C request button	w_ac_btn
32	Evap temp signal	w_evap_temp
33	Pedal 2 signal sub	w_aps_vpa2

SP-AC-PSW - At A/C amp - SP-AC-PSW: A/C pressure switch...
solder splice (node)

-	A/C pressure sw out	w_ac_psw_in
-	A/C pressure sw out	w_ac_psw_sw
-	A/C clutch relay (+)	w_acc86

SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24
solder splice (node)

-	Fuel lvl pull-up	w43
-	Fuel level signal	w_fl_sig

SP-REV - reverse switch out to CSB3 opto + reverse relay
solder splice (node)

-	Reverse relay coil+	w_rev_coil_c
-	Reverse to opto in 2	w_sw7_c

R-AC-BTN-HI - 10k A/C switch divider, top
inline part

1	A/C switch V-G in	w_ac_btn_in
2	A/C btn divider mid	w_ac_btn_hi

R-AC-BTN-LO - 3.9k A/C switch divider, bottom
inline part

1	A/C btn divider mid	w_ac_btn_lo

R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V
inline part

2	Cam pull-up 1.8k	w_cam_pullup_sig

R-EVAP - 2.2k evap thermistor pull-up to +5V
inline part

1	Evap pull-up 2.2k	w_evap_pu

T-EVAP-TEMP - OEM evaporator thermistor A24 pin 1, at the ...
end

-	Evap thermistor sig	w_evap_sig

OEM ST1 lead B-W at old R/B No.4 pin 1, RH kick panel (on ...
factory lead tap

1	Start sw ST1 feed	w_start_in_cp

w_ign 20 YEL
w_start 20 YEL
w_ac_btn 20 YEL
w_evap_temp 20 WHT
w_aps_vpa2 20 BLU
w_ac_psw_in 20 YEL
w_ac_psw_sw 20 YEL
w_acc86 18 RED
w43 20 WHT
w_fl_sig 20 WHT
w_rev_coil_c 16 RED
w_sw7_c 16 YEL
w_ac_btn_in 20 YEL
w_ac_btn_hi 20 YEL
w_ac_btn_lo 20 YEL
w_cam_pullup_sig 20 WHT
w_evap_pu 20 WHT
w_evap_sig 20 WHT
w_start_in_cp 20 YEL

w_ign 20 YEL
w_aps_vpa2 20 BLU
w_ac_psw_in 20 YEL
w_ac_psw_sw 20 YEL
w_acc86 18 RED
w43 20 WHT
w_fl_sig 20 WHT
w_ac_btn 20 YEL
w_ac_btn_hi 20 YEL
w_ac_btn_lo 20 YEL
w_rev_coil_c 16 RED
w_sw7_c 16 YEL
w_start 20 YEL
w_start_in_cp 20 YEL
w_ac_btn_in 20 YEL
w_evap_temp 20 WHT
w_evap_pu 20 WHT
w_evap_sig 20 WHT
w_cam_pullup_sig 20 WHT

OEM J/B No.1 (LH kick panel) 1H pin 7, B-O
factory lead tap

7	Ignition sw sense	w_ign

APS-PEDAL - accelerator pedal sensor

3	Pedal 2 signal sub	w_aps_vpa2

OEM A5, factory Y-R lead
factory lead tap

4	A/C pressure sw out	w_ac_psw_in

OEM A/C amplifier
factory lead tap

13	A/C pressure sw out	w_ac_psw_sw

K-ACC - A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ...
6-1419137-4

86	A/C clutch relay (+)	w_acc86

R-FUELLVL - 470R fuel level pull-up to +5V
inline part

1	Fuel lvl pull-up	w43

IX-FUEL-P - IX-FUEL inline to fuel sender lead (trunk end)
DT04-2P

1	Fuel level signal	w_fl_sig

SP-AC-BTN - A/C switch divider mid-point to ECU-B B31
solder splice (node)

-	A/C request button	w_ac_btn
-	A/C btn divider mid	w_ac_btn_hi
-	A/C btn divider mid	w_ac_btn_lo

K-REV - Reverse Relay (seated in the LOGIC box M7) - coil+ (86) f...
6-1419137-4

86	Reverse relay coil+	w_rev_coil_c

OPTO-8 - Optocoupler board, 8 channel (Dan's, generic EL814) - i...

IN2	Reverse to opto in 2	w_sw7_c

LOGIC box - custom fuse + relay box, glove box inboard (cad/fus...
ST185-FB-LOGIC rev 5

BUS2-13	Start request	w_start
BUS2-...	Start sw ST1 feed	w_start_in_cp

T-AC-BTN - OEM dash A/C switch V-G lead (old A15 pin 3)
end

-	A/C switch V-G in	w_ac_btn_in

SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32
solder splice (node)

-	Evap temp signal	w_evap_temp
-	Evap pull-up 2.2k	w_evap_pu
-	Evap thermistor sig	w_evap_sig

SP-CAM - At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up t...
solder splice (node)

-	Cam pull-up 1.8k	w_cam_pullup_sig

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White

– – – – built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Cabin Branches (2 of 2)

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	6 OF 12	B (11x17)	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/drawings/build_drawings.py from the master wire list; not to scale

SCHEMATIC - SHIELD DRAINS - screens to A7 / B17 (R207), CAN screen to the CAN trunk

Neat, not to scale. Tables are pinouts (pin | signal) of the pins this sheet uses; the full table of every connector is the PINOUT section. Wire label: id AWG colour [ident bands]. Dashed = built with the harness named in its table; grey header = an end on another harness.

ECU-A - Link G4X plug A (centre dash)
4-1437290-1

7	Shield drain	w_drain_ecu_a

ECU-B (Link G4X plug B, centre dash)
4-1437290-0

17	Shield drain B	w_drain_ecu_b

DRB102-CABIN - DRB102 receptacle (RH firewall)
DRB12-102PAE-L018

32	Flex fuel shield	w_shc_flex
47	Throttle shield	w_shc_etbs
50	ETB motor shield	w_shc_etbm
57	Turbo speed shield	w_shc_turbo
66	Cam sensor shield	w_shc_cam
69	Gearbox speed shield	w_shc_vss
73	Knock sensor shield	w_shc_knock1
76	Crank sensor shield	w_shc_crank
81	CAN-Lambda shield	cab_canbh_bc_sh

IX-WS-F-S - to front VR conditioner
DT06-6S

5	WS-F screen drain	cab_fspur_sh

IX-WS-R-S - IX-WS-R inline to rear VRC (dash above ECU)
DT06-6S

5	WS-R screen drain	cab_rspur_sh

CAB-APS1 cable screen (floats at the device end)
cable screen

-	Pedal 1 cable shield	cab_aps1_sh

CAB-APS2 cable screen (floats at the device end)
cable screen

-	Pedal 2 cable shield	cab_aps_sh

CAB-FSPUR-FR-AC cable screen (floats at the device end)
cable screen

-	FR wheel spd shield	cab_fspur_fr_sh_ac

w_drain_ecu_a 20 BLK
w_drain_ecu_b 20 BLK
w_shc_flex 20 BLK
w_shc_etbs 20 BLK
w_shc_etbm 20 BLK
w_shc_turbo 20 BLK
w_shc_cam 20 BLK
w_shc_vss 20 BLK
w_shc_knock1 20 BLK
w_shc_crank 20 BLK
cab_canbh_bc_sh screen
cab_fspur_sh screen
cab_rspur_sh screen
cab_aps1_sh screen
cab_aps_sh screen
cab_fspur_fr_sh_ac screen

w_drain_ecu_a 20 BLK
w_shc_flex 20 BLK
w_shc_etbs 20 BLK
w_shc_turbo 20 BLK
w_shc_cam 20 BLK
w_shc_crank 20 BLK
w_drain_ecu_b 20 BLK
w_shc_etbm 20 BLK
w_shc_vss 20 BLK
w_shc_knock1 20 BLK
cab_canbh_bc_sh screen
cab_rspur_sh screen
cab_fspur_sh screen
cab_fspur_fr_sh_ac screen
cab_aps1_sh screen
cab_aps_sh screen

SP-SHIELD-A - 6 mm behind the ECU-A plug - SP-SHIELD-A: drai...
solder splice (node)

-	Shield drain	w_drain_ecu_a
-	Flex fuel shield	w_shc_flex
-	Throttle shield	w_shc_etbs
-	Turbo speed shield	w_shc_turbo
-	Cam sensor shield	w_shc_cam
-	Crank sensor shield	w_shc_crank
-	Shield drain	w_shd_a_aps
-	Shield drain	w_shd_a_wsf

SP-SHIELD-B - 6 mm behind the ECU-B plug - SP-SHIELD-B: drai...
solder splice (node)

-	Shield drain B	w_drain_ecu_b
-	ETB motor shield	w_shc_etbm
-	Gearbox speed shield	w_shc_vss
-	Knock sensor shield	w_shc_knock1
-	Shield drain B	w_shd_b_wsr

SP-CAN-SH-BH - CAN trunk, bulkhead B branch - SP-CAN-SH-BH...
solder splice (node)

-	CAN-Lambda shield	cab_canbh_bc_sh

SP-SHIELD-B-WSR - At the rear WS inline - SP-SHIELD-B-WSR: r...
solder splice (node)

-	WS-R screen drain	cab_rspur_sh
-	Shield drain B	w_shd_b_wsr

SP-SHIELD-A-WSF - At the front WS inline - SP-SHIELD-A-WSF: fr...
solder splice (node)

-	WS-F screen drain	cab_fspur_sh
-	FR wheel spd shield	cab_fspur_fr_sh_ac
-	Shield drain	w_shd_a_wsf

SP-SHIELD-A-APS - At the pedal branch - SP-SHIELD-A-APS: ped...
solder splice (node)

-	Pedal 1 cable shield	cab_aps1_sh
-	Pedal 2 cable shield	cab_aps_sh
-	Shield drain	w_shd_a_aps

w_shd_a_aps 20 BLK
w_shd_a_wsf 20 BLK
w_shd_b_wsr 20 BLK
w_shd_b_wsr 20 BLK
w_shd_a_wsf 20 BLK
w_shd_a_aps 20 BLK

WIRE COLOURS (R209): RED · BLK · ORN · BLU · WHT · GRN · YEL

IDENT BANDS (R87): Blue · Yellow · White · – – – – built with another harness

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Schematic: Shield Drains

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	7 OF 12	B (11x17)	DG	2026-10-19

PINOUT - one table for the whole harness: every pin of every connector, bus plug, splice and end (1 of 5)

Length = layout path + end allowance (estimate until measured). Built with = the harness file that builds that wire (a wire passing through this harness is built with its owner). Spare pins take a sealing plug.

END	PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
ECU-A - Link G4X plug A (centre dash)	**1**	w111_c	20	White		Injector 4 drive (-)	DRB102 receptacle (RH firewall) pin 24	630	ST185-AB-cabin	INJ4
	2	w110_c	20	White		Injector 3 drive (-)	DRB102 receptacle (RH firewall) pin 23	630	ST185-AB-cabin	INJ3
	3	w109_c	20	White		Injector 2 drive (-)	DRB102 receptacle (RH firewall) pin 22	630	ST185-AB-cabin	INJ2
	4	w108_c	20	White		Injector 1 drive (-)	DRB102 receptacle (RH firewall) pin 21	630	ST185-AB-cabin	INJ1
	5	w_a5_pin	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	310	ST185-AB-cabin	SW12
	6	w19	20	Orange		+8 V sensor supply	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	310	ST185-AB-cabin	8V
	7	w_drain_ecu_a	20	Black		Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	200	ST185-AB-cabin	SHLD
	8	w200_c	20	White		Crank sensor signal	DRB102 receptacle (RH firewall) pin 74	630	ST185-AB-cabin	CRANKC
	9	w_trig2_pin	20	White		Cam sensor signal	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	310	ST185-AB-cabin	CAM
	10	w123_c	20	White		Coil 4 trigger (IGT)	DRB102 receptacle (RH firewall) pin 12	630	ST185-AB-cabin	COP4
	11	w122_c	20	White		Coil 3 trigger (IGT)	DRB102 receptacle (RH firewall) pin 11	630	ST185-AB-cabin	COP3
	12	w121_c	20	White		Coil 2 trigger (IGT)	DRB102 receptacle (RH firewall) pin 10	630	ST185-AB-cabin	COP2
	13	w120_c	20	White		Coil 1 trigger (IGT)	DRB102 receptacle (RH firewall) pin 9	630	ST185-AB-cabin	COP1
	14	w38	20	Blue		Pedal 1 signal main	accelerator pedal sensor pin 6	1090	ST185-AB-cabin	APS
	15	w201_c	20	White		Coolant temp signal	DRB102 receptacle (RH firewall) pin 70	630	ST185-AB-cabin	ECT
	16	w202_c	20	White		Intake temp signal	DRB102 receptacle (RH firewall) pin 33	630	ST185-AB-cabin	IATC
	17	w26_c	20	White		MAP sensor signal	DRB102 receptacle (RH firewall) pin 17	630	ST185-AB-cabin	MAPC
	18	w_ac_kill	20	White		A/C cancel (ACT)	OEM A/C amplifier pin 11	820	ST185-AB-cabin	ACKILL
	19	w_fp85	18	White		Fuel pump relay (-)	Fuel Pump Relay, TE HCR150 (seated in the battery relay block K1) - ACTIVE-LOW - ECU si...	680	ST185-AB-cabin	FP
	20	w81	20	White		ETB relay coil (-)	ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ ...	680	ST185-CabinPower	ETB
	21	w103_c	20	White		Boost solenoid (-)	DRB102 receptacle (RH firewall) pin 58	630	ST185-AB-cabin	BOOST
	22	w128_c	20	White		Throttle pos 1 main	DRB102 receptacle (RH firewall) pin 42	630	ST185-AB-cabin	ETBS
	23	cab_fspur_l	20	Blue		FL conditioned out	to front VR conditioner pin 3	530	ST185-AB-cabin	WSSF
	24	w68	18	Blue		Sensor ground	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	SGND
	25	w70	18	Black		ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
	26	w_str85	18	White		Start relay coil (-)	Start Relay (seated in the POWER box R3) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (86) s...	680	ST185-AB-cabin	STR
	27	w_mrs_c	20	White		EHPS pump speed	DRB102 receptacle (RH firewall) pin 84	630	ST185-AB-cabin	MRSSPD
	28	w76	18	White		EFI relay coil (-)	EFI Main Relay (seated in the POWER box R2) - ACTIVE-LOW - ECU sinks coil- (85); coil+ (...	680	ST185-CabinPower	EFI
	29	w_fan85	18	White		Rad fan relay (-)	Radiator Fan Relay (on/off) (seated in the POWER box R4) - ACTIVE-LOW - ECU sinks coil- ...	680	ST185-AB-cabin	FAN
	30	w16_c	20	White		Turbo speed signal	DRB102 receptacle (RH firewall) pin 53	630	ST185-AB-cabin	TURBO
	31	w48_c	20	White		Flex fuel signal	DRB102 receptacle (RH firewall) pin 31	630	ST185-AB-cabin	FLEX
	32	w67	18	Orange		+5 V sensor supply	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	5V
	33	w129_c	20	White		Throttle pos 2 sub	DRB102 receptacle (RH firewall) pin 44	630	ST185-AB-cabin	ETBS
	34	w_a34	18	Black		ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
ECU-B (Link G4X plug B, centre dash)	**1**					spare, not used				
	2					spare, not used				
	3					spare, not used				
	4					spare, not used				
	5	w82_ac	18	Red		ETB motor +12 V	ETB Power Relay (seated in the LOGIC box M4) - ACTIVE-LOW - ECU sinks coil- (85); coil+ ...	680	ST185-CabinPower	ETB
	6	w203_c	20	White		Oil temp signal	DRB102 receptacle (RH firewall) pin 61	630	ST185-AB-cabin	OILT
	7	w204_c	20	White		Charge temp signal	DRB102 receptacle (RH firewall) pin 59	630	ST185-AB-cabin	CIAT
	8					spare, not used				
	9	w205_c	20	White		Knock sensor signal	DRB102 receptacle (RH firewall) pin 71	630	ST185-AB-cabin	KNOCK
	10	w_acc_trig	18	White		A/C clutch relay (-)	A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ACTIVE-LOW - ECU sinks coil- (85)...	680	ST185-AB-cabin	ACC
	11					spare, not used				
	12	w_eps_trig	18	White		EPS enable relay (-)	EPS Enable Relay (seated in the LOGIC box M6) - ACTIVE-LOW - ECU sinks coil- (85); coil+...	680	ST185-AB-cabin	EPSEN
	13	w_fan285	18	White		Cond fan relay (-)	Condenser Fan Relay (on/off) (seated in the POWER box R5) - ACTIVE-LOW - ECU sinks coi...	680	ST185-AB-cabin	FAN2
	14					spare, not used				
	15	w29_c	20	White		Oil pressure signal	DRB102 receptacle (RH firewall) pin 28	630	ST185-AB-cabin	OILPC
	16	w32_c	20	White		Fuel pressure signal	DRB102 receptacle (RH firewall) pin 14	630	ST185-AB-cabin	FUELP
	17	w_drain_ecu_b	20	Black		Shield drain B	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	200	ST185-AB-cabin	SHLD
	18	w124_c	18	White		ETB motor +	DRB102 receptacle (RH firewall) pin 45	630	ST185-AB-cabin	ETBM
	19	cab_rspur_r	20	Blue		Rear right wheel spd	IX-WS-R inline to rear VRC (dash above ECU) pin 4	530	ST185-AB-cabin	WSSR
	20	cab_rspur_l	20	Green		Rear left wheel spd	IX-WS-R inline to rear VRC (dash above ECU) pin 3	530	ST185-AB-cabin	WSSR
	21	cab_fspur_r_ac	20	White		FR conditioned out	to front VR conditioner pin 4	530	ST185-AB-cabin	WSSF
	22	w69	18	Blue		Sensor ground B	DT06-12 plug (ECU splice point) pin 1	310	ST185-AB-cabin	SGND
	23	w35_c	20	White		Coolant press signal	DRB102 receptacle (RH firewall) pin 26	630	ST185-AB-cabin	CLNTP
	24	w_fl_sig_pin	20	White		Fuel level signal	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	310	ST185-AB-cabin	FLVL
	25	w_b25_ac	18	Black		ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
	26	w215_c	18	White		ETB motor -	DRB102 receptacle (RH firewall) pin 46	630	ST185-AB-cabin	ETBM
	27	w_at_immob2	20	White		Anti-theft input	Alarm module - main harness (DT06-12SA) pin 9	380	ST185-AntiTheft	IMMOB
	28	w_ign	20	Yellow		Ignition sw sense	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O pin 7	1100	ST185-AB-cabin	IGNSW
	29	w_vss_sig_c	20	White		Gearbox speed signal	DRB102 receptacle (RH firewall) pin 68	630	ST185-AB-cabin	VSS
	30	w_start	20	Yellow		Start request	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	680	ST185-AB-cabin	B30
	31	w_ac_btn	20	Yellow		A/C request button	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	310	ST185-AB-cabin	ACBTN
	32	w_evap_temp	20	White		Evap temp signal	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	310	ST185-AB-cabin	EVAP

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout 1 of 5

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	8 OF 12	B (11x17)	DG	2026-10-19

PINOUT - one table for the whole harness: every pin of every connector, bus plug, splice and end (2 of 5)

Length = layout path + end allowance (estimate until measured). Built with = the harness file that builds that wire (a wire passing through this harness is built with its owner). Spare pins take a sealing plug.

END	PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
ECU-B (Link G4X plug B, centre dash)	**33**	w_aps_vpa2	20	Blue		Pedal 2 signal sub	accelerator pedal sensor pin 3	1090	ST185-AB-cabin	APS
	34	w_b34_ac	18	Black		ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	310	ST185-AB-cabin	GND
BUS-5V - DT06-12 plug (ECU splice point)	**1**	w67	18	Orange		+5 V from ECU A32	Link G4X plug A (centre dash) pin 32	310	ST185-AB-cabin	5V
	2	w_rail_sp_5v_c	20	Orange		+5 V throttle sensor	DRB102 receptacle (RH firewall) pin 41	520	ST185-AB-cabin	5V
	3	w_5v_a_c39	20	Orange		+5 V MAP sensor	DRB102 receptacle (RH firewall) pin 16	520	ST185-AB-cabin	5V
	4	w_5v_a_c40	20	Orange		+5 V turbo speed	DRB102 receptacle (RH firewall) pin 52	520	ST185-AB-cabin	5V
	5	w_5v_brail_c45	20	Orange		+5 V oil pressure	DRB102 receptacle (RH firewall) pin 27	520	ST185-AB-cabin	5V
	6	w_5v_brail_c46	20	Orange		+5 V fuel pressure	DRB102 receptacle (RH firewall) pin 13	520	ST185-AB-cabin	5V
	7	w_5v_brail_c47	20	Orange		+5 V coolant press	DRB102 receptacle (RH firewall) pin 25	520	ST185-AB-cabin	5V
	8	w_aps_vc1	20	Red		+5 V pedal sensor 1	accelerator pedal sensor pin 4	1200	ST185-AB-cabin	5V
	9	w210	20	Red		+5 V pedal sensor 2	accelerator pedal sensor pin 1	1200	ST185-AB-cabin	5V
	10	cab_fspur_5v	20	Red		+5 V front VRC	to front VR conditioner pin 1	640	ST185-AB-cabin	5V
	11	cab_rspur_5v	20	Red		+5 V rear VRC	IX-WS-R inline to rear VRC (dash above ECU) pin 1	640	ST185-AB-cabin	5V
	12	w_5v_bus_link	20	Orange		+5 V to BUS-5V-2	DT06-8 plug (ECU splice point) pin 1	200	ST185-AB-cabin	5V
BUS-5V-2 - DT06-8 plug (ECU splice point)	**1**	w_5v_bus_link	20	Orange		+5 V from BUS-5V	DT06-12 plug (ECU splice point) pin 12	200	ST185-AB-cabin	5V
	2	w_cru_5v_ac	20	Orange		+5 V cruise ladder	resistor r_cruise on CSB3 pin 1	680	ST185-AB-cabin	5V
	3	w_evap_5v	20	Orange		+5 V evap pull-up	2.2k evap thermistor pull-up to +5V pin 2	200	ST185-AB-cabin	EVAP
	4	w44	20	Orange		+5 V fuel lvl pullup	470R fuel level pull-up to +5V pin 2	200	ST185-AB-cabin	FLVL
	5					spare, sealing plug				
	6					spare, sealing plug				
	7					spare, sealing plug				
	8					spare, sealing plug				
BUS-GNDOUT-A - DT06-12 plug (ECU splice point)	**1**	w68	18	Blue		Sensor gnd from A24	Link G4X plug A (centre dash) pin 24	310	ST185-AB-cabin	SGND
	2	w_rail_sp_gndout_c	20	Blue		Gnd IAT/TPS/coolant	DRB102 receptacle (RH firewall) pin 34	520	ST185-AB-cabin	SGND
	3	w_gnd_a_c41	20	Blue		Gnd crank sensor	DRB102 receptacle (RH firewall) pin 75	520	ST185-AB-cabin	SGND
	4	w_gnd_a_c42	20	Blue		Gnd cam sensor	DRB102 receptacle (RH firewall) pin 65	520	ST185-AB-cabin	SGND
	5	w_gnd_a_c43	20	Blue		Gnd turbo speed	DRB102 receptacle (RH firewall) pin 56	520	ST185-AB-cabin	SGND
	6	w_gnd_a_c44	20	Blue		Gnd flex + MAP	DRB102 receptacle (RH firewall) pin 18	520	ST185-AB-cabin	SGND
	7	w40	20	Yellow		Pedal 1 ground	accelerator pedal sensor pin 5	1200	ST185-AB-cabin	SGND
	8	w_aps_gnd2	20	Yellow		Pedal 2 ground	accelerator pedal sensor pin 2	1200	ST185-AB-cabin	SGND
	9	cab_fspur_gnd	20	Yellow		Front VRC ground	to front VR conditioner pin 2	640	ST185-AB-cabin	SGND
	10					spare, sealing plug				
	11					spare, sealing plug				
	12					spare, sealing plug				
BUS-GNDOUT-B - DT06-12 plug (ECU splice point)	**1**	w69	18	Blue		Sensor gnd from B22	ECU-B (Link G4X plug B, centre dash) pin 22	310	ST185-AB-cabin	SGND
	2	w45	20	Blue		Fuel level ground	IX-FUEL inline to fuel sender lead (trunk end) pin 2	2820	ST185-AB-cabin	SGND
	3	cab_rspur_gnd	20	Yellow		Rear VRC ground	IX-WS-R inline to rear VRC (dash above ECU) pin 2	640	ST185-AB-cabin	SGND
	4	w_ac_btn_gnd	20	Blue		A/C btn divider gnd	3.9k A/C switch divider, bottom pin 2	200	ST185-AB-cabin	ACBTN
	5	w_evap_rtn	20	Blue		Evap thermistor gnd	OEM evaporator thermistor A24 pin 2, at the evap case	760	ST185-AB-cabin	SGND
	6	w12_c	20	Blue		Knock sensor (-)	DRB102 receptacle (RH firewall) pin 72	520	ST185-AB-cabin	KNOCK
	7	w_gnd_b_c19	20	Blue		Gnd oil/clnt/temps	DRB102 receptacle (RH firewall) pin 29	520	ST185-AB-cabin	SGND
	8	w_gnd_b_c21	20	Blue		Gnd fuel press + VSS	DRB102 receptacle (RH firewall) pin 15	520	ST185-AB-cabin	SGND
	9					spare, sealing plug				
	10					spare, sealing plug				
	11					spare, sealing plug				
	12					spare, sealing plug				
SP-8V - ECU splice point - SP-8V: +8 V cam sensor ...		w_cam_pullup_8v	20	Orange		+8 V to cam pull-up	Cam pull-up 1.8 k to +8 V pin 1	200	ST185-AB-cabin	CAM
		w19	20	Orange		+8 V sensor supply	Link G4X plug A (centre dash) pin 6	310	ST185-AB-cabin	8V
		w_rail_sp_8v_c	20	Orange		+8 V to cam sensor	DRB102 receptacle (RH firewall) pin 63	520	ST185-AB-cabin	8V
SP-A5 - ECU splice point - SP-A5: ECU main feed (...		w78	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	200	ST185-AB-cabin	SW12
		w_ig2_diode	20	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	IG2 wake diode (1N5822) pin 2	200	ST185-AB-cabin	SW12
		w_a5_pin	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	Link G4X plug A (centre dash) pin 5	310	ST185-AB-cabin	SW12
SP-AC-BTN - A/C switch divider mid-point to ECU-...		w_ac_btn	20	Yellow		A/C request button	ECU-B (Link G4X plug B, centre dash) pin 31	310	ST185-AB-cabin	ACBTN
		w_ac_btn_hi	20	Yellow		A/C btn divider mid	10k A/C switch divider, top pin 2	200	ST185-AB-cabin	ACBTN
		w_ac_btn_lo	20	Yellow		A/C btn divider mid	3.9k A/C switch divider, bottom pin 1	200	ST185-AB-cabin	ACBTN
SP-AC-PSW - At A/C amp - SP-AC-PSW: A/C press...		w_ac_psw_in	20	Yellow		A/C pressure sw out	OEM A5, factory Y-R lead pin 4	200	ST185-AB-cabin	ACC
		w_ac_psw_sw	20	Yellow		A/C pressure sw out	OEM A/C amplifier pin 13	200	ST185-AB-cabin	ACC
		w_acc86	18	Red		A/C clutch relay (+)	A/C Clutch Relay (on/off) (seated in the LOGIC box M5) - ACTIVE-LOW - ECU sinks coil- (85)...	860	ST185-AB-cabin	ACC
SP-CAM - At the ECU plugs - SP-CAM: cam signal ...		w_trig2_pin	20	White		Cam sensor signal	Link G4X plug A (centre dash) pin 9	310	ST185-AB-cabin	CAM
		w_cam_sig_c	20	White		Cam sensor signal	DRB102 receptacle (RH firewall) pin 64	520	ST185-AB-cabin	CAM
		w_cam_pullup_sig	20	White		Cam pull-up 1.8k	Cam pull-up 1.8 k to +8 V pin 2	200	ST185-AB-cabin	CAM
SP-CAN-SH-BH - CAN trunk, bulkhead B branch - S...		cab_canbh_bc_sh		Shield		CAN-Lambda shield	DRB102 receptacle (RH firewall) pin 81	680	ST185-AB-cabin	CAN
SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B...		w_evap_temp	20	White		Evap temp signal	ECU-B (Link G4X plug B, centre dash) pin 32	310	ST185-AB-cabin	EVAP
		w_evap_pu	20	White		Evap pull-up 2.2k	2.2k evap thermistor pull-up to +5V pin 1	200	ST185-AB-cabin	EVAP
		w_evap_sig	20	White		Evap thermistor sig	OEM evaporator thermistor A24 pin 1, at the evap case	760	ST185-AB-cabin	EVAP
SP-FUEL-LVL - fuel sender signal + 470R pull-up to...		w_fl_sig	20	White		Fuel level signal	IX-FUEL inline to fuel sender lead (trunk end) pin 1	2820	ST185-AB-cabin	FLVL

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout 2 of 5

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	9 OF 12	B (11x17)	DG	2026-10-19

PINOUT - one table for the whole harness: every pin of every connector, bus plug, splice and end (3 of 5)

Length = layout path + end allowance (estimate until measured). Built with = the harness file that builds that wire (a wire passing through this harness is built with its owner). Spare pins take a sealing plug.

END	PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
SP-FUEL-LVL - fuel sender signal + 470R pull-up to...		w_fl_sig_pin	20	White		Fuel level signal	ECU-B (Link G4X plug B, centre dash) pin 24	310	ST185-AB-cabin	FLVL
		w43	20	White		Fuel lvl pull-up	470R fuel level pull-up to +5V pin 1	200	ST185-AB-cabin	FLVL
SP-GND-ECU - ECU splice point - SP-GND-ECU: E...		w70	18	Black		ECU power ground	Link G4X plug A (centre dash) pin 25	310	ST185-AB-cabin	GND
		w_a34	18	Black		ECU power ground	Link G4X plug A (centre dash) pin 34	310	ST185-AB-cabin	GND
		w_b25_ac	18	Black		ECU power ground	ECU-B (Link G4X plug B, centre dash) pin 25	310	ST185-AB-cabin	GND
		w_b34_ac	18	Black		ECU power ground	ECU-B (Link G4X plug B, centre dash) pin 34	310	ST185-AB-cabin	GND
		w66	10	Black		ECU power ground	POWER box NEG bar M8 stud (glove box)	570	ST185-AB-cabin	GND
SP-REV - reverse switch out to CSB3 opto + revers...		w_rev_sw_c	16	Yellow		Reverse sw +12 V out	DRB102 receptacle (RH firewall) pin 78	520	ST185-AB-cabin	REV
		w_rev_coil_c	16	Red		Reverse relay coil+	Reverse Relay (seated in the LOGIC box M7) - coil+ (86) from the back-up switch B1 pin 1 (+...	570	ST185-AB-cabin	REV
		w_sw7_c	16	Yellow		Reverse to opto in 2	Optocoupler board, 8 channel (Dan's, generic EL814) - inline at the CSB3 pin IN2	680	ST185-AB-cabin	REV
SP-SHIELD-A - 6 mm behind the ECU-A plug - SP-S...		w_drain_ecu_a	20	Black		Shield drain	Link G4X plug A (centre dash) pin 7	200	ST185-AB-cabin	SHLD
		w_shd_a_aps	20	Black		Shield drain	At the pedal branch - SP-SHIELD-A-APS: pedal drains	450	ST185-AB-cabin	SHLD
		w_shd_a_wsf	20	Black		Shield drain	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	230	ST185-AB-cabin	SHLD
		w_shc_crank	20	Black		Crank sensor shield	DRB102 receptacle (RH firewall) pin 76	630	ST185-AB-cabin	CRANKC
		w_shc_cam	20	Black		Cam sensor shield	DRB102 receptacle (RH firewall) pin 66	630	ST185-AB-cabin	CAM
		w_shc_turbo	20	Black		Turbo speed shield	DRB102 receptacle (RH firewall) pin 57	630	ST185-AB-cabin	TURBO
		w_shc_flex	20	Black		Flex fuel shield	DRB102 receptacle (RH firewall) pin 32	630	ST185-AB-cabin	FLEX
		w_shc_etbs	20	Black		Throttle shield	DRB102 receptacle (RH firewall) pin 47	630	ST185-AB-cabin	ETBS
SP-SHIELD-A-APS - At the pedal branch - SP-SHIE...		w_shd_a_aps	20	Black		Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	450	ST185-AB-cabin	SHLD
		cab_aps1_sh		Shield		Pedal 1 cable shield	cab_aps1 screen (floats at the device end)	840	ST185-AB-cabin	APS
		cab_aps_sh		Shield		Pedal 2 cable shield	cab_aps2 screen (floats at the device end)	840	ST185-AB-cabin	APS
SP-SHIELD-A-WSF - At the front WS inline - SP-SHI...		w_shd_a_wsf	20	Black		Shield drain	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	230	ST185-AB-cabin	SHLD
		cab_fspur_sh		Shield		WS-F screen drain	to front VR conditioner pin 5	500	ST185-AB-cabin	WSSF
		cab_fspur_fr_sh_ac		Shield		FR wheel spd shield	cab_fspur_fr_ac screen (floats at the device end)	500	ST185-AB-cabin	WSSF
SP-SHIELD-B - 6 mm behind the ECU-B plug - SP-S...		w_shc_knock1	20	Black		Knock sensor shield	DRB102 receptacle (RH firewall) pin 73	630	ST185-AB-cabin	KNOCK
		w_shc_etbm	20	Black		ETB motor shield	DRB102 receptacle (RH firewall) pin 50	630	ST185-AB-cabin	ETBM
		w_shc_vss	20	Black		Gearbox speed shield	DRB102 receptacle (RH firewall) pin 69	630	ST185-AB-cabin	VSS
		w_drain_ecu_b	20	Black		Shield drain B	ECU-B (Link G4X plug B, centre dash) pin 17	200	ST185-AB-cabin	SHLD
		w_shd_b_wsr	20	Black		Shield drain B	At the rear WS inline - SP-SHIELD-B-WSR: rear wheel-speed drains	230	ST185-AB-cabin	SHLD
SP-SHIELD-B-WSR - At the rear WS inline - SP-SHI...		cab_rspur_sh		Shield		WS-R screen drain	IX-WS-R inline to rear VRC (dash above ECU) pin 5	500	ST185-AB-cabin	WSSR
		w_shd_b_wsr	20	Black		Shield drain B	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	230	ST185-AB-cabin	SHLD
SP-SW12 - ECU splice point - SP-SW12: switched +...		w_fb_sw12	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse	SW12 bus plug DT06-12 (glove box, by LOGIC box) pin 2	570	ST185-AB-cabin	SW12
		w78	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	200	ST185-AB-cabin	SW12
		w_rail_sp_sw12_c	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse	DRB102 receptacle (RH firewall) pin 30	520	ST185-AB-cabin	SW12
		w_rail_sw12_b_c_ac	20	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse	DRB102 receptacle (RH firewall) pin 67	520	ST185-AB-cabin	SW12
D-IG2-WAKE - IG2 wake diode (1N5822)	**1**	w_ig2_in	20	Yellow		IG2 wake feed	OEM J/B No.1 (LH kick panel) 1H pin 7, B-O pin 7	1210	ST185-AB-cabin	IG2WAKE
	2	w_ig2_diode	20	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse (+ IG2 wak...	ECU splice point - SP-A5: ECU main feed (SW12 + IG2 diode)	200	ST185-AB-cabin	SW12
R-AC-BTN-HI - 10k A/C switch divider, top	**1**	w_ac_btn_in	20	Yellow		A/C switch V-G in	OEM dash A/C switch V-G lead (old A15 pin 3)	640	ST185-AB-cabin	ACBTN
	2	w_ac_btn_hi	20	Yellow		A/C btn divider mid	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	200	ST185-AB-cabin	ACBTN
R-AC-BTN-LO - 3.9k A/C switch divider, bottom	**1**	w_ac_btn_lo	20	Yellow		A/C btn divider mid	SP-AC-BTN - A/C switch divider mid-point to ECU-B B31	200	ST185-AB-cabin	ACBTN
	2	w_ac_btn_gnd	20	Blue		A/C btn divider gnd	DT06-12 plug (ECU splice point) pin 4	200	ST185-AB-cabin	ACBTN
R-CAM-PULLUP - Cam pull-up 1.8 k to +8 V	**1**	w_cam_pullup_8v	20	Orange		+8 V to cam pull-up	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	200	ST185-AB-cabin	CAM
	2	w_cam_pullup_sig	20	White		Cam pull-up 1.8k	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	200	ST185-AB-cabin	CAM
R-CRUISE - resistor r_cruise on CSB3	**1**	w_cru_5v_ac	20	Orange		+5 V cruise ladder	DT06-8 plug (ECU splice point) pin 2	680	ST185-AB-cabin	5V
R-EVAP - 2.2k evap thermistor pull-up to +5V	**1**	w_evap_pu	20	White		Evap pull-up 2.2k	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	200	ST185-AB-cabin	EVAP
	2	w_evap_5v	20	Orange		+5 V evap pull-up	DT06-8 plug (ECU splice point) pin 3	200	ST185-AB-cabin	EVAP
R-FUELLVL - 470R fuel level pull-up to +5V	**1**	w43	20	White		Fuel lvl pull-up	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	200	ST185-AB-cabin	FLVL
	2	w44	20	Orange		+5 V fuel lvl pullup	DT06-8 plug (ECU splice point) pin 4	200	ST185-AB-cabin	FLVL
DRB102-CABIN - DRB102 receptacle (RH firewall)	**1**	w_cop_pwr_ac	14	Red		EFI relay k_efi -> LOGIC COP 15 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	COP
	2	w_inj_pwr_ac	14	Red		EFI relay k_efi -> LOGIC INJ 15 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	INJ
	3					spare, sealing plug				
	4					spare, sealing plug				
	5					spare, sealing plug				
	6					spare, sealing plug				
	7					spare, sealing plug				
	8					spare, sealing plug				
	9	w120_c	20	White		Coil 1 trigger (IGT)	Link G4X plug A (centre dash) pin 13	630	ST185-AB-cabin	COP1
	10	w121_c	20	White		Coil 2 trigger (IGT)	Link G4X plug A (centre dash) pin 12	630	ST185-AB-cabin	COP2
	11	w122_c	20	White		Coil 3 trigger (IGT)	Link G4X plug A (centre dash) pin 11	630	ST185-AB-cabin	COP3
	12	w123_c	20	White		Coil 4 trigger (IGT)	Link G4X plug A (centre dash) pin 10	630	ST185-AB-cabin	COP4
	13	w_5v_brail_c46	20	Orange		+5 V fuel pressure	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	5V
	14	w32_c	20	White		Fuel pressure signal	ECU-B (Link G4X plug B, centre dash) pin 16	630	ST185-AB-cabin	FUELP
	15	w_gnd_b_c21	20	Blue		Gnd fuel press + VSS	DT06-12 plug (ECU splice point) pin 8	520	ST185-AB-cabin	SGND
	16	w_5v_a_c39	20	Orange		+5 V MAP sensor	DT06-12 plug (ECU splice point) pin 3	520	ST185-AB-cabin	5V
	17	w26_c	20	White		MAP sensor signal	Link G4X plug A (centre dash) pin 17	630	ST185-AB-cabin	MAPC
	18	w_gnd_a_c44	20	Blue		Gnd flex + MAP	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	SGND

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout 3 of 5

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	10 OF 12	B (11x17)	DG	2026-10-19

ST185 Celica (living-relation) - generated by docs/harness/drawings/build_drawings.py from the master wire list; not to scale

PINOUT - one table for the whole harness: every pin of every connector, bus plug, splice and end (4 of 5)

Length = layout path + end allowance (estimate until measured). Built with = the harness file that builds that wire (a wire passing through this harness is built with its owner). Spare pins take a sealing plug.

END	PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
DRB102-CABIN - DRB102 receptacle (RH firewall)	**19**					spare, sealing plug				
	20					spare, sealing plug				
	21	w108_c	20	White		Injector 1 drive (-)	Link G4X plug A (centre dash) pin 4	630	ST185-AB-cabin	INJ1
	22	w109_c	20	White		Injector 2 drive (-)	Link G4X plug A (centre dash) pin 3	630	ST185-AB-cabin	INJ2
	23	w110_c	20	White		Injector 3 drive (-)	Link G4X plug A (centre dash) pin 2	630	ST185-AB-cabin	INJ3
	24	w111_c	20	White		Injector 4 drive (-)	Link G4X plug A (centre dash) pin 1	630	ST185-AB-cabin	INJ4
	25	w_5v_brail_c47	20	Orange		+5 V coolant press	DT06-12 plug (ECU splice point) pin 7	520	ST185-AB-cabin	5V
	26	w35_c	20	White		Coolant press signal	ECU-B (Link G4X plug B, centre dash) pin 23	630	ST185-AB-cabin	CLNTP
	27	w_5v_brail_c45	20	Orange		+5 V oil pressure	DT06-12 plug (ECU splice point) pin 5	520	ST185-AB-cabin	5V
	28	w29_c	20	White		Oil pressure signal	ECU-B (Link G4X plug B, centre dash) pin 15	630	ST185-AB-cabin	OILPC
	29	w_gnd_b_c19	20	Blue		Gnd oil/clnt/temps	DT06-12 plug (ECU splice point) pin 7	520	ST185-AB-cabin	SGND
	30	w_rail_sp_sw12_c	18	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	520	ST185-AB-cabin	SW12
	31	w48_c	20	White		Flex fuel signal	Link G4X plug A (centre dash) pin 31	630	ST185-AB-cabin	FLEX
	32	w_shc_flex	20	Black		Flex fuel shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	FLEX
	33	w202_c	20	White		Intake temp signal	Link G4X plug A (centre dash) pin 16	630	ST185-AB-cabin	IATC
	34	w_rail_sp_gndout_c	20	Blue		Gnd IAT/TPS/coolant	DT06-12 plug (ECU splice point) pin 2	520	ST185-AB-cabin	SGND
	35					spare, sealing plug				
	36					spare, sealing plug				
	37					spare, sealing plug				
	38					spare, sealing plug				
	39					spare, sealing plug				
	40					spare, sealing plug				
	41	w_rail_sp_5v_c	20	Orange		+5 V throttle sensor	DT06-12 plug (ECU splice point) pin 2	520	ST185-AB-cabin	5V
	42	w128_c	20	White		Throttle pos 1 main	Link G4X plug A (centre dash) pin 22	630	ST185-AB-cabin	ETBS
	43					spare, sealing plug				
	44	w129_c	20	White		Throttle pos 2 sub	Link G4X plug A (centre dash) pin 33	630	ST185-AB-cabin	ETBS
	45	w124_c	18	White		ETB motor +	ECU-B (Link G4X plug B, centre dash) pin 18	630	ST185-AB-cabin	ETBM
	46	w215_c	18	White		ETB motor -	ECU-B (Link G4X plug B, centre dash) pin 26	630	ST185-AB-cabin	ETBM
	47	w_shc_etbs	20	Black		Throttle shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	ETBS
	48					spare, sealing plug				
	49					spare, sealing plug				
	50	w_shc_etbm	20	Black		ETB motor shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	ETBM
	51					spare, sealing plug				
	52	w_5v_a_c40	20	Orange		+5 V turbo speed	DT06-12 plug (ECU splice point) pin 4	520	ST185-AB-cabin	5V
	53	w16_c	20	White		Turbo speed signal	Link G4X plug A (centre dash) pin 30	630	ST185-AB-cabin	TURBO
	54					spare, sealing plug				
	55					spare, sealing plug				
	56	w_gnd_a_c43	20	Blue		Gnd turbo speed	DT06-12 plug (ECU splice point) pin 5	520	ST185-AB-cabin	SGND
	57	w_shc_turbo	20	Black		Turbo speed shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	TURBO
	58	w103_c	20	White		Boost solenoid (-)	Link G4X plug A (centre dash) pin 21	630	ST185-AB-cabin	BOOST
	59	w204_c	20	White		Charge temp signal	ECU-B (Link G4X plug B, centre dash) pin 7	630	ST185-AB-cabin	CIAT
	60					spare, sealing plug				
	61	w203_c	20	White		Oil temp signal	ECU-B (Link G4X plug B, centre dash) pin 6	630	ST185-AB-cabin	OILT
	62					spare, sealing plug				
	63	w_rail_sp_8v_c	20	Orange		+8 V to cam sensor	ECU splice point - SP-8V: +8 V cam sensor supply (ECU A6)	520	ST185-AB-cabin	8V
	64	w_cam_sig_c	20	White		Cam sensor signal	At the ECU plugs - SP-CAM: cam signal + 1.8k pull-up to +8V	520	ST185-AB-cabin	CAM
	65	w_gnd_a_c42	20	Blue		Gnd cam sensor	DT06-12 plug (ECU splice point) pin 4	520	ST185-AB-cabin	SGND
	66	w_shc_cam	20	Black		Cam sensor shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	CAM
	67	w_rail_sw12_b_c_ac	20	Red		EFI relay k_efi -> LOGIC SW12 7.5 A fuse	ECU splice point - SP-SW12: switched +12 V (LOGIC SW12)	520	ST185-AB-cabin	SW12
	68	w_vss_sig_c	20	White		Gearbox speed signal	ECU-B (Link G4X plug B, centre dash) pin 29	630	ST185-AB-cabin	VSS
	69	w_shc_vss	20	Black		Gearbox speed shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	VSS
	70	w201_c	20	White		Coolant temp signal	Link G4X plug A (centre dash) pin 15	630	ST185-AB-cabin	ECT
	71	w205_c	20	White		Knock sensor signal	ECU-B (Link G4X plug B, centre dash) pin 9	630	ST185-AB-cabin	KNOCK
	72	w12_c	20	Blue		Knock sensor (-)	DT06-12 plug (ECU splice point) pin 6	520	ST185-AB-cabin	KNOCK
	73	w_shc_knock1	20	Black		Knock sensor shield	6 mm behind the ECU-B plug - SP-SHIELD-B: drains to B17	630	ST185-AB-cabin	KNOCK
	74	w200_c	20	White		Crank sensor signal	Link G4X plug A (centre dash) pin 8	630	ST185-AB-cabin	CRANKC
	75	w_gnd_a_c41	20	Blue		Gnd crank sensor	DT06-12 plug (ECU splice point) pin 3	520	ST185-AB-cabin	SGND
	76	w_shc_crank	20	Black		Crank sensor shield	6 mm behind the ECU-A plug - SP-SHIELD-A: drains to A7	630	ST185-AB-cabin	CRANKC
	77	w_rev_feed_c	16	Red		Back-up sw +12 V in	GAUGE 15A splice - J/B 3 feed to reverse relay pin 30 and the back-up switch	450	ST185-AB-cabin	REV
	78	w_rev_sw_c	16	Yellow		Reverse sw +12 V out	SP-REV - reverse switch out to CSB3 opto + reverse relay	520	ST185-AB-cabin	REV
	79	wc_h_bh_bc	20	White		CAN H to CAN-Lambda	CAN H join - ECU, CSB3, cluster, Pi, bulkhead	680	ST185-AB-cabin	CAN
	80	wc_l_bh_bc	20	Green		CAN L to CAN-Lambda	CAN L join - ECU, CSB3, cluster, Pi, bulkhead	680	ST185-AB-cabin	CAN
	81	cab_canbh_bc_sh		Shield		CAN-Lambda shield	CAN trunk, bulkhead B branch - SP-CAN-SH-BH: CAN screen to CAN-Lambda	680	ST185-AB-cabin	CAN
	82					spare, sealing plug				
	83	w_fb_mrs_en	20	Red		EFI relay k_efi -> LOGIC MRS 7.5 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-AB-cabin	EPSEN
	84	w_mrs_c	20	White		EHPS pump speed	Link G4X plug A (centre dash) pin 27	630	ST185-AB-cabin	MRSSPD

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout 4 of 5

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	11 OF 12	B (11x17)	DG	2026-10-19

PINOUT - one table for the whole harness: every pin of every connector, bus plug, splice and end (5 of 5)

Length = layout path + end allowance (estimate until measured). Built with = the harness file that builds that wire (a wire passing through this harness is built with its owner). Spare pins take a sealing plug.

END	PIN	WIRE	AWG	COLOUR	BANDS	SIGNAL	OTHER END	LEN MM	BUILT WITH	CIRCUIT
DRB102-CABIN - DRB102 receptacle (RH firewall)	**85**	w_eps_rly	18	White		EHPS relay coil (-)	MR-S EHPS pump relay (HCR150, glove box, beside the POWER box) - coil- (85) switched to...	450	ST185-AB-cabin	EPS
	86					spare, sealing plug				
	87					spare, sealing plug				
	88					spare, sealing plug				
	89					spare, sealing plug				
	90					spare, sealing plug				
	91					spare, sealing plug				
	92					spare, sealing plug				
	93					spare, sealing plug				
	94					spare, sealing plug				
	95	w_lam12_cp	14	Red		EFI relay k_efi -> LOGIC LAM 7.5 A fuse	LOGIC box - custom fuse + relay box, glove box inboard (cad/fusebox rev 5, DECISIONS R7...	450	ST185-CabinPower	LAM
	96	w_lamg_ac	14	Black		CAN-Lambda ground	POWER box NEG bar M8 stud (glove box)	450	ST185-AB-cabin	LAM
	97					spare, sealing plug				
	98					spare, sealing plug				
	99					spare, sealing plug				
	100					spare, sealing plug				
	101					spare, sealing plug				
	102					spare, sealing plug				
APS-PEDAL - accelerator pedal sensor	**1**	w210	20	Red		+5 V pedal sensor 2	DT06-12 plug (ECU splice point) pin 9	1200	ST185-AB-cabin	5V
	2	w_aps_gnd2	20	Yellow		Pedal 2 ground	DT06-12 plug (ECU splice point) pin 8	1200	ST185-AB-cabin	SGND
	3	w_aps_vpa2	20	Blue		Pedal 2 signal sub	ECU-B (Link G4X plug B, centre dash) pin 33	1090	ST185-AB-cabin	APS
	4	w_aps_vc1	20	Red		+5 V pedal sensor 1	DT06-12 plug (ECU splice point) pin 8	1200	ST185-AB-cabin	5V
	5	w40	20	Yellow		Pedal 1 ground	DT06-12 plug (ECU splice point) pin 7	1200	ST185-AB-cabin	SGND
	6	w38	20	Blue		Pedal 1 signal main	Link G4X plug A (centre dash) pin 14	1090	ST185-AB-cabin	APS
IX-FUEL-P - IX-FUEL inline to fuel sender lead (trun...	**1**	w_fl_sig	20	White		Fuel level signal	SP-FUEL-LVL - fuel sender signal + 470R pull-up to ECU-B B24	2820	ST185-AB-cabin	FLVL
	2	w45	20	Blue		Fuel level ground	DT06-12 plug (ECU splice point) pin 2	2820	ST185-AB-cabin	SGND
IX-WS-F-S - to front VR conditioner	**1**	cab_fspur_5v	20	Red		VRC-F +5V	DT06-12 plug (ECU splice point) pin 10	640	ST185-AB-cabin	5V
	2	cab_fspur_gnd	20	Yellow		VRC-F GND	DT06-12 plug (ECU splice point) pin 9	640	ST185-AB-cabin	SGND
	3	cab_fspur_l	20	Blue		FL conditioned out	Link G4X plug A (centre dash) pin 23	530	ST185-AB-cabin	WSSF
	4	cab_fspur_r_ac	20	White		FR conditioned out	ECU-B (Link G4X plug B, centre dash) pin 21	530	ST185-AB-cabin	WSSF
	5	cab_fspur_sh		Shield		WS-F screen drain	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	500	ST185-AB-cabin	WSSF
	6					spare, sealing plug				
IX-WS-R-S - IX-WS-R inline to rear VRC (dash abov...	**1**	cab_rspur_5v	20	Red		VRC-R +5V	DT06-12 plug (ECU splice point) pin 11	640	ST185-AB-cabin	5V
	2	cab_rspur_gnd	20	Yellow		VRC-R GND	DT06-12 plug (ECU splice point) pin 3	640	ST185-AB-cabin	SGND
	3	cab_rspur_l	20	Green		Rear left wheel spd	ECU-B (Link G4X plug B, centre dash) pin 20	530	ST185-AB-cabin	WSSR
	4	cab_rspur_r	20	Blue		Rear right wheel spd	ECU-B (Link G4X plug B, centre dash) pin 19	530	ST185-AB-cabin	WSSR
	5	cab_rspur_sh		Shield		WS-R screen drain	At the rear WS inline - SP-SHIELD-B-WSR: rear wheel-speed drains	500	ST185-AB-cabin	WSSR
	6					spare, sealing plug				
K-ACC - A/C Clutch Relay (on/off) (seated in the LO...	**85**	w_acc_trig	18	White		A/C clutch relay (-)	ECU-B (Link G4X plug B, centre dash) pin 10	680	ST185-AB-cabin	ACC
	86	w_acc86	18	Red		A/C clutch relay (+)	At A/C amp - SP-AC-PSW: A/C pressure switch output	860	ST185-AB-cabin	ACC
POWER-NEG-BAR - POWER box NEG bar M8 stud ...		w_lamg_ac	14	Black		CAN-Lambda ground	DRB102 receptacle (RH firewall) pin 96	450	ST185-AB-cabin	LAM
		w_csbg_ac	20	Black		CSB3 + opto ground	CSB3 ground splice - CSB3 pin 2, opto board COM and stalk ground	1050	ST185-AB-cabin	CSB
		w66	10	Black		ECU power ground	ECU splice point - SP-GND-ECU: ECU power ground (A25 A34 B25 B34) to the NEG bar	570	ST185-AB-cabin	GND
T-AC-BTN - OEM dash A/C switch V-G lead (old A1...		w_ac_btn_in	20	Yellow		A/C switch V-G in	10k A/C switch divider, top pin 1	640	ST185-AB-cabin	ACBTN
T-EVAP-RTN - OEM evaporator thermistor A24 pin ...		w_evap_rtn	20	Blue		Evap thermistor gnd	DT06-12 plug (ECU splice point) pin 5	760	ST185-AB-cabin	SGND
T-EVAP-TEMP - OEM evaporator thermistor A24 pi...		w_evap_sig	20	White		Evap thermistor sig	SP-EVAP - evap thermistor + 2.2k pull-up to ECU-B B32	760	ST185-AB-cabin	EVAP
OEM A/C amplifier	**11**	w_ac_kill	20	White		A/C cancel (ACT)	Link G4X plug A (centre dash) pin 18	820	ST185-AB-cabin	ACKILL
	13	w_ac_psw_sw	20	Yellow		A/C pressure sw out	At A/C amp - SP-AC-PSW: A/C pressure switch output	200	ST185-AB-cabin	ACC
OEM A5, factory Y-R lead	**4**	w_ac_psw_in	20	Yellow		A/C pressure sw out	At A/C amp - SP-AC-PSW: A/C pressure switch output	200	ST185-AB-cabin	ACC
OEM J/B No.1 (LH kick panel) 1H pin 7, B-O	**7**	w_ig2_in	20	Yellow		IG2 wake feed	IG2 wake diode (1N5822) pin 1	1210	ST185-AB-cabin	IG2WAKE
	7	w_ign	20	Yellow		Ignition sw sense	ECU-B (Link G4X plug B, centre dash) pin 28	1100	ST185-AB-cabin	IGNSW
CAB-APS1 cable screen (floats at the device end)		cab_aps1_sh		Shield		Pedal 1 cable shield	At the pedal branch - SP-SHIELD-A-APS: pedal drains	840	ST185-AB-cabin	APS
CAB-APS2 cable screen (floats at the device end)		cab_aps_sh		Shield		Pedal 2 cable shield	At the pedal branch - SP-SHIELD-A-APS: pedal drains	840	ST185-AB-cabin	APS
CAB-FSPUR-FR-AC cable screen (floats at the devi...		cab_fspur_fr_sh_ac		Shield		FR wheel spd shield	At the front WS inline - SP-SHIELD-A-WSF: front wheel-speed drains	500	ST185-AB-cabin	WSSF

REVISIONS

REV	DATE	BY	DESCRIPTION
A	2026-10-19	DG	First issue: own drawings from the wire list (no harness.design app); loom A + B as one harness (...

ST185-AB-cabin - ECU harness (loom AB), cabin side

Pinout 5 of 5

DRAWING NO.	REV	SHEET	SIZE	DRAWN	DATE
ST185-AB-cabin	A	12 OF 12	B (11x17)	DG	2026-10-19