



Assembly Instruction for Component Housing

Step 1: Print/manufacture all parts.

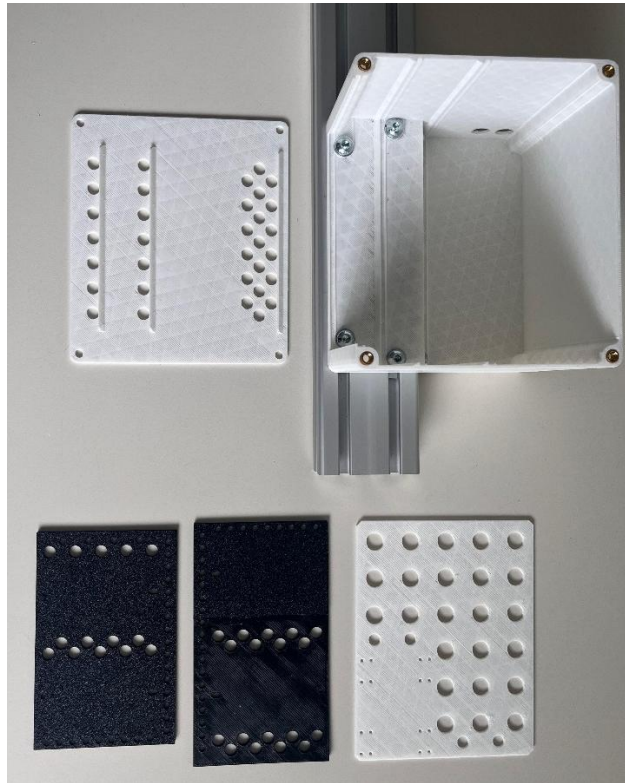


Step 2: Melt the threaded inserts into the predesigned holes in the main body of the housing. This is best done with a soldering iron and a hammer.

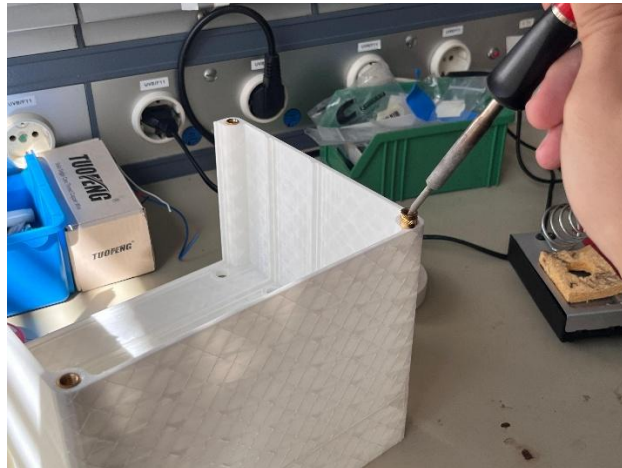


Step 3: Insert T-slot nuts into the ITEM frame.




Step 4: Secure the main body to the frame with 6 M8 screws and washers.

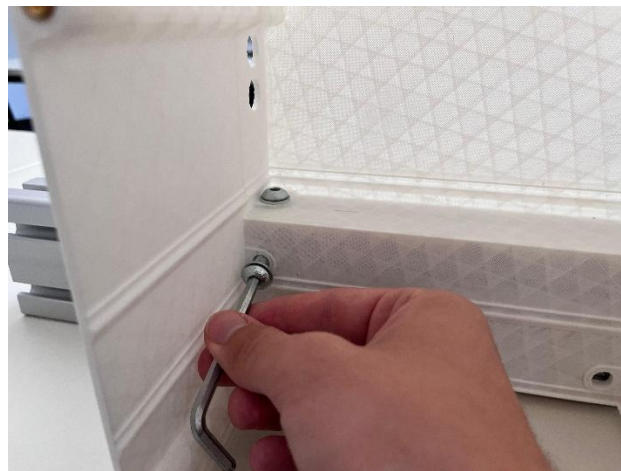


Step 5: Assemble the plates. Use the predesigned screw holes for the BLD-305S motor drivers and the Raspberry Pi.

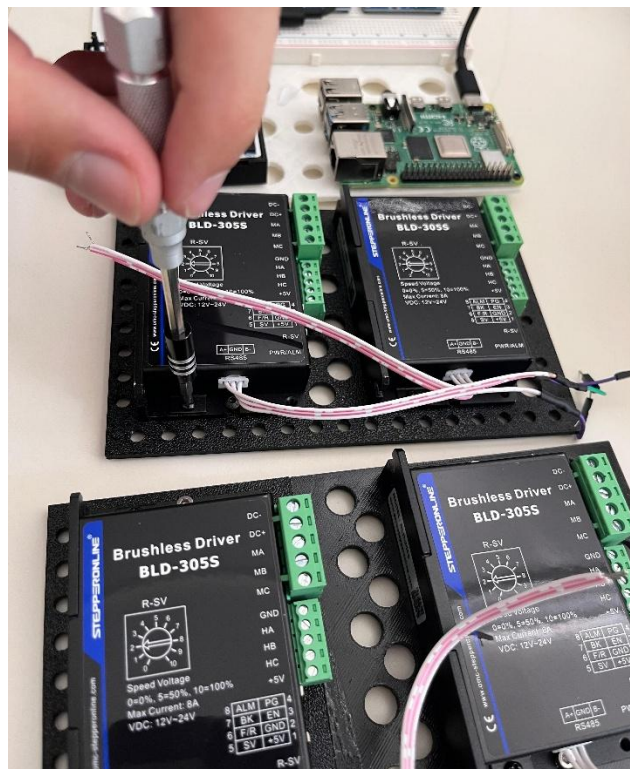

Step 6: Insert the plates on the respective level. Use the slots in the main body.

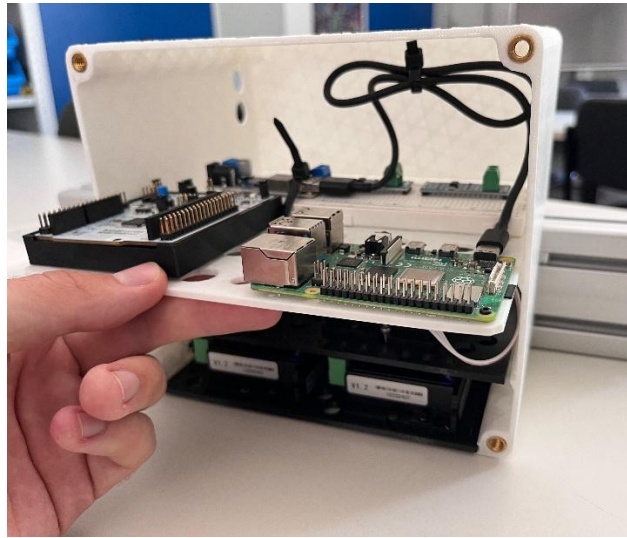

Step 7: Secure the lid with 4 M6 screws.

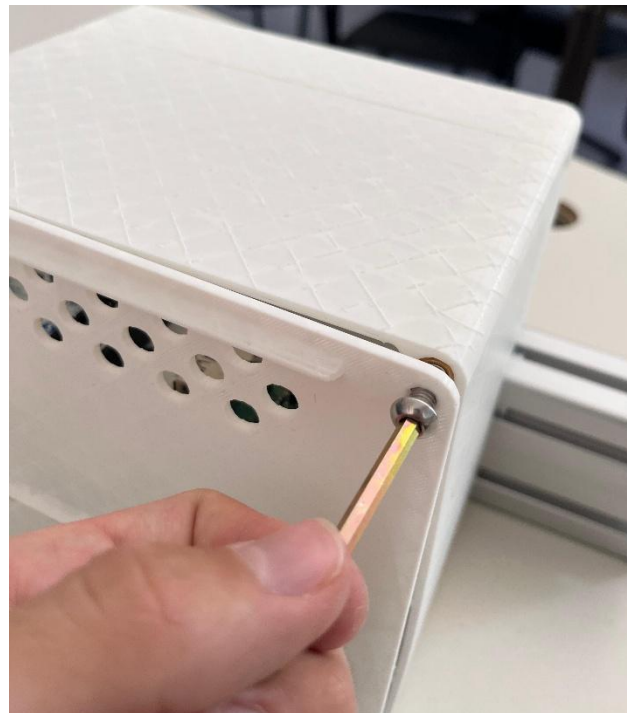

Step 8: (To be done) Once the robot is assembled, connect the cables to the battery, the servo motor drivers and the BLDC motors.