

Page#01 Check the test site

Item	QTY
1. Received FEMB Tray	1
2.Good FEMB Tray	1
3.Bad FEMB Tray	1
4.WIB Box	1
5.Shielding Box	1
6.QR Scanner	1
7.ESD Gloves	1
8.Power Supply	1
9.Adapter Board for HD FEMB	4
10.ESD Monitor and wrist strap	1
11.Control PC	1

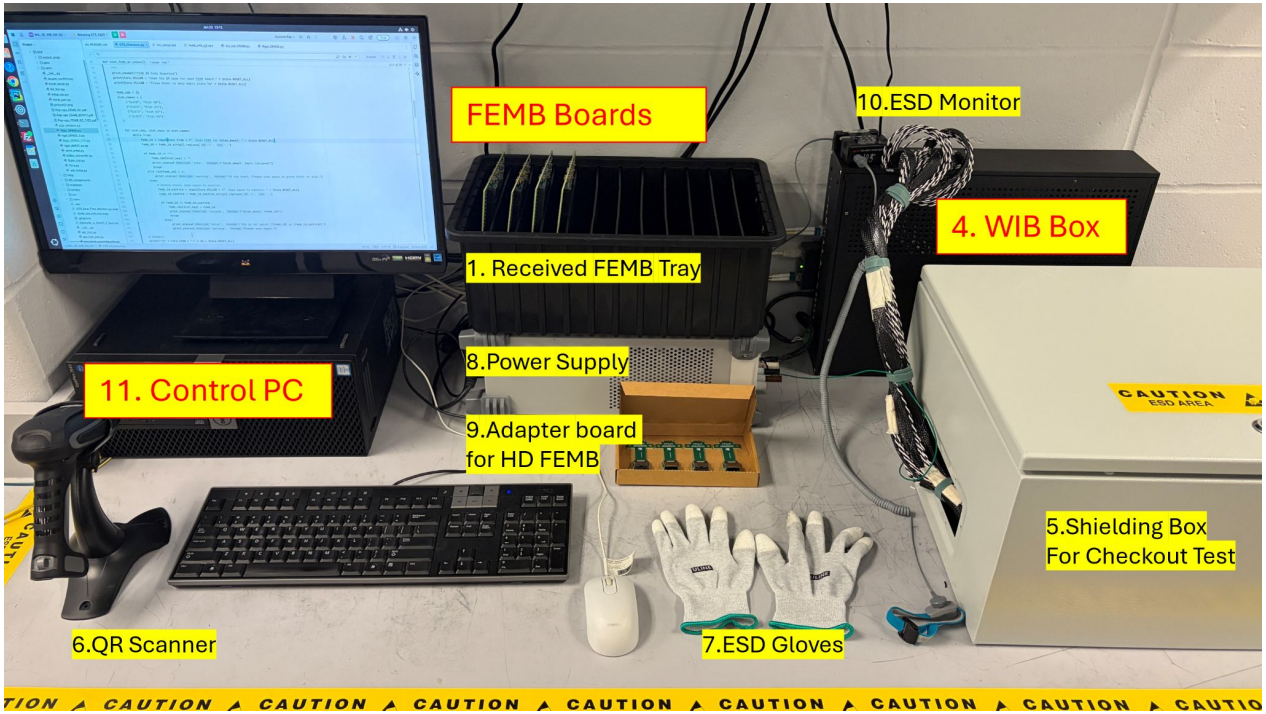

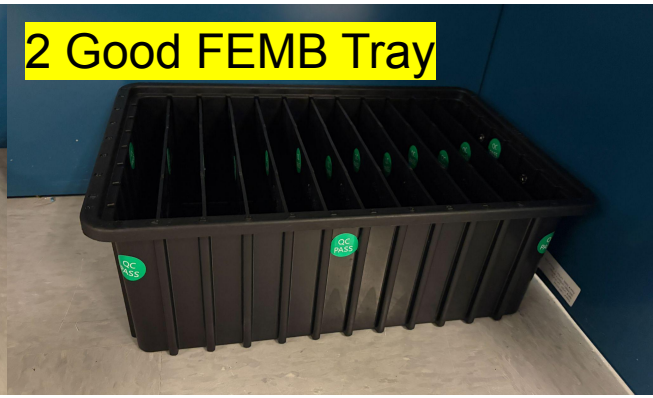




Preparation

Wear ESD glove and **Anti-static Wrist Strap**

Safety First!

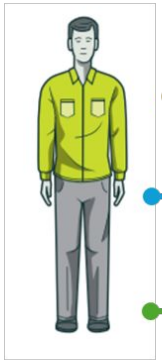

- Long Sleeve Top
- Long Pants
- Closed Toe Shoes




ESD-safe Gloves



Anti-static Wrist Strap



Page#03 Open the Cover of the Shielding Box

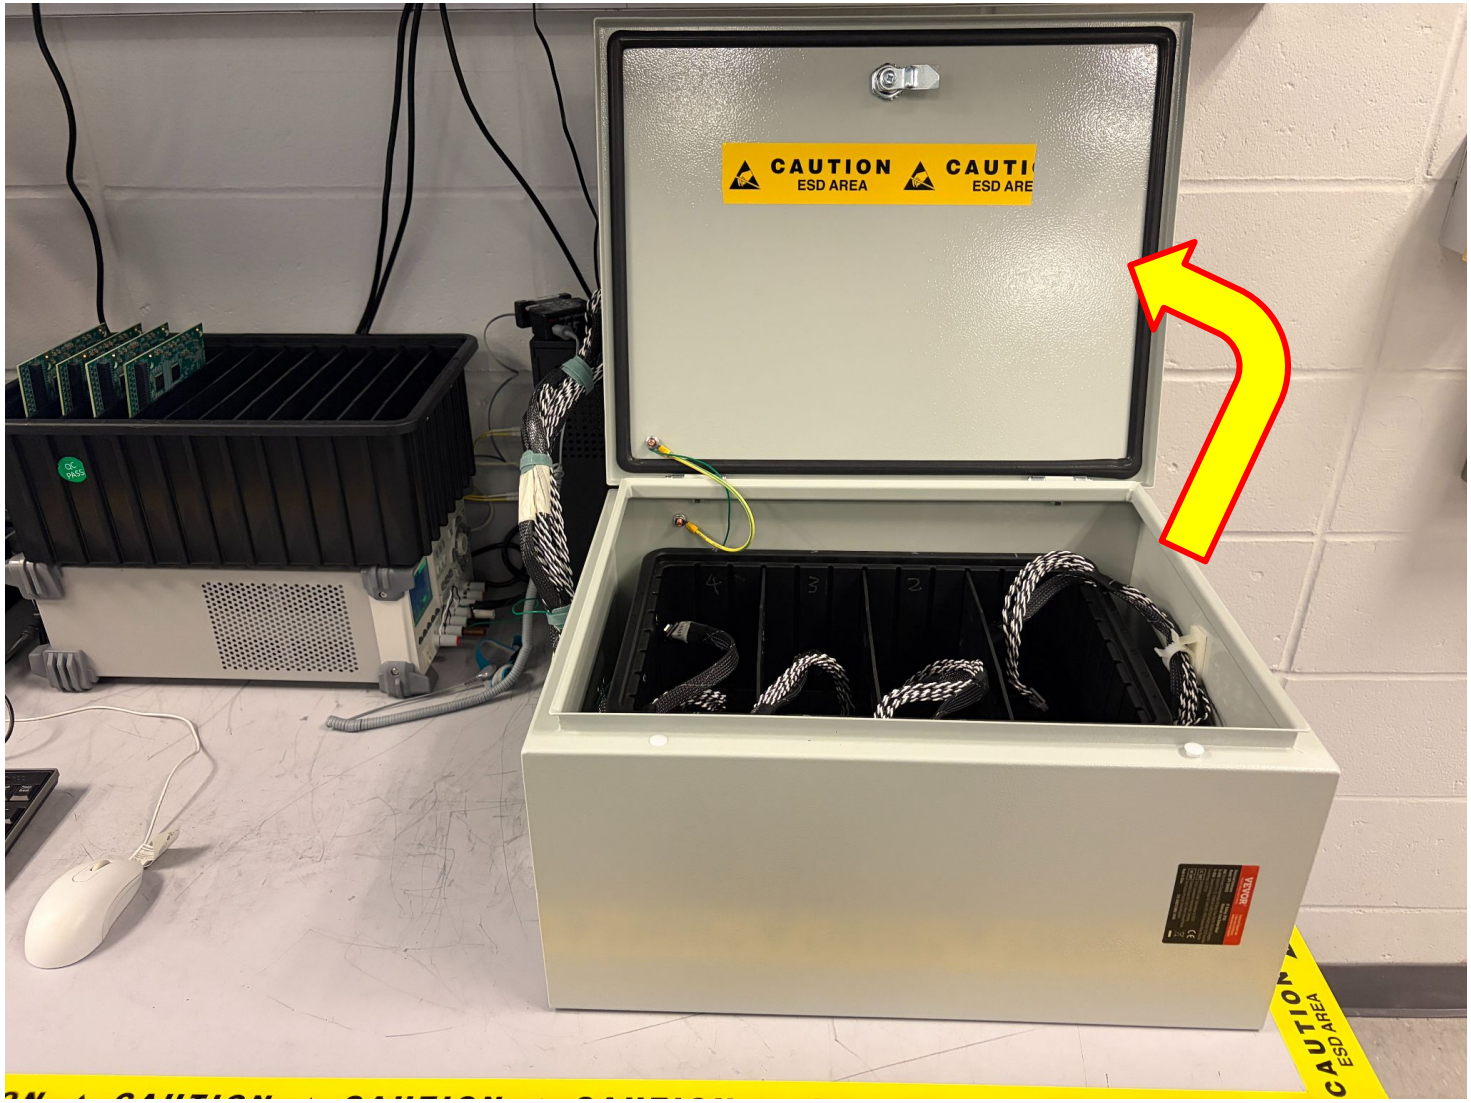

Page#04 Install the FEMB into Slot 01


Step 1: Pick up the board
Step 2: Scan QR code
Step 3: Install Power and Data Cable
Step 4: Put the board into test slot 01


```
[2/5] Scanning FEMB QR Codes


======================================================================
  FEMB QR CODE SCANNING
======================================================================


Scan the QR code for each FEMB board.
Press Enter to skip empty slots.

  Scan FEMB for Slot #1: BNL/FEMB/I0-1865-1K/00020
  Scan again to confirm: BNL/FEMB/I0-1865-1K/00020
✓ Slot #1: BNL_FEMB_I0-1865-1K_00020
```

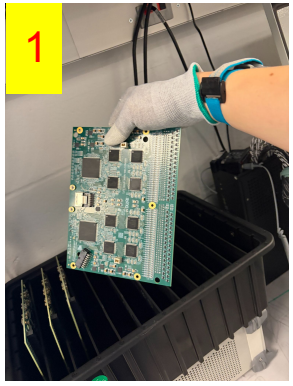

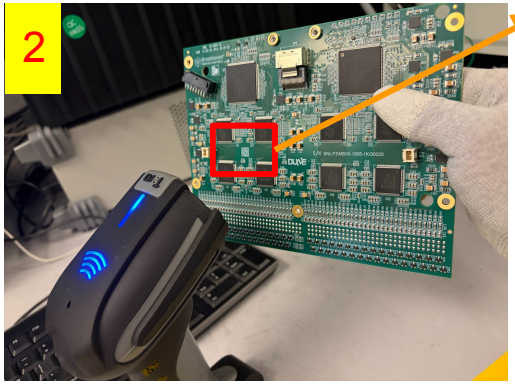


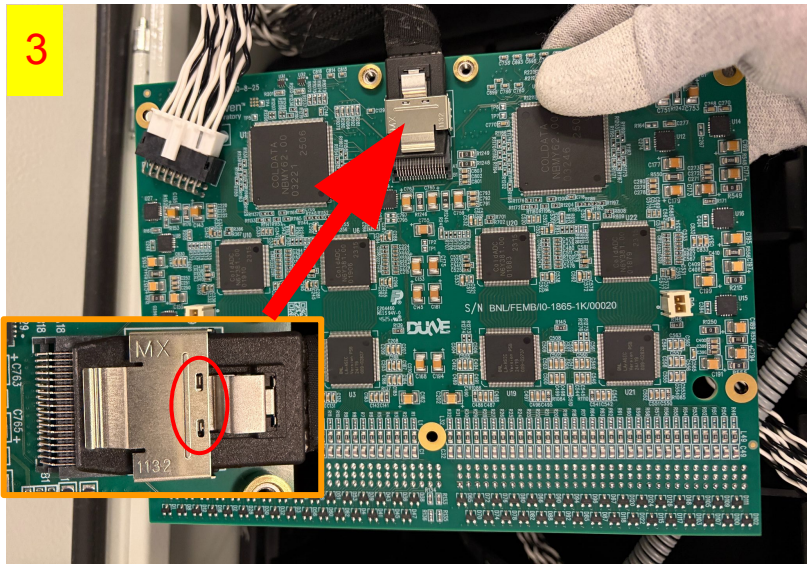


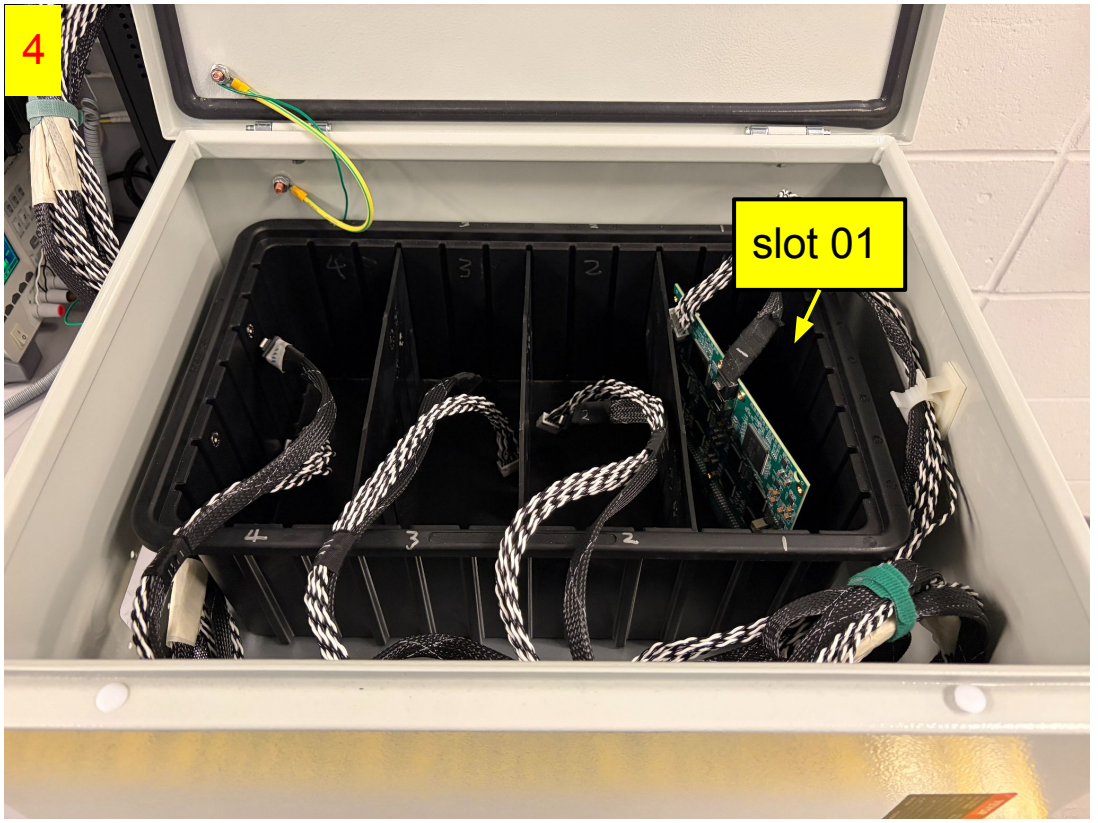


Page#05 Install the FEMB into Slot 02

Step 1: Pick up the board
Step 2: Scan QR code
Step 3: Install Power and Data Cable
Step 4: Put the board into test slot 02

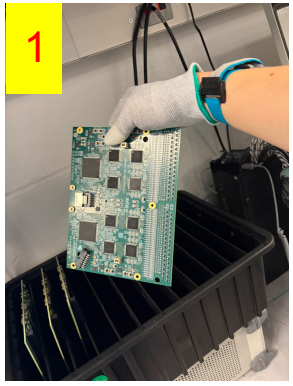

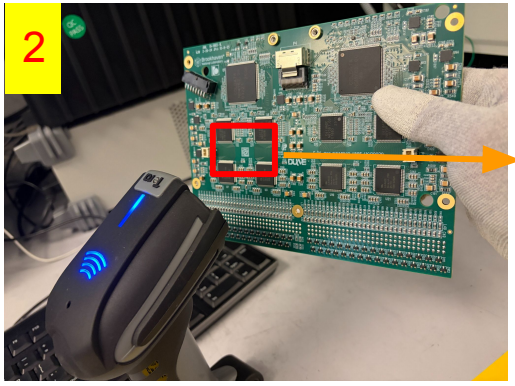

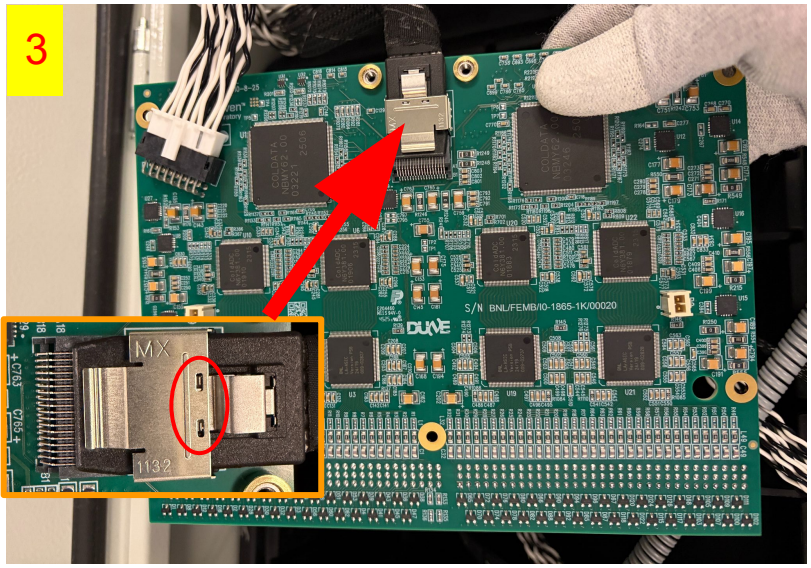



```
[2/5] Scanning FEMB QR Codes

================================================================================
  FEMB QR CODE SCANNING
================================================================================


Scan the QR code for each FEMB board.
Press Enter to skip empty slots.


  Scan FEMB for Slot #1: BNL/FEMB/I0-1865-1K/00020
  Scan again to confirm: BNL/FEMB/I0-1865-1K/00020
✓ Slot #1: BNL_FEMB_I0-1865-1K_00020
  Scan FEMB for Slot #2: IO-1865-1D 00042
  Scan again to confirm: IO-1865-1D 00042
✓ Slot #2: IO-1865-1D 00042
```

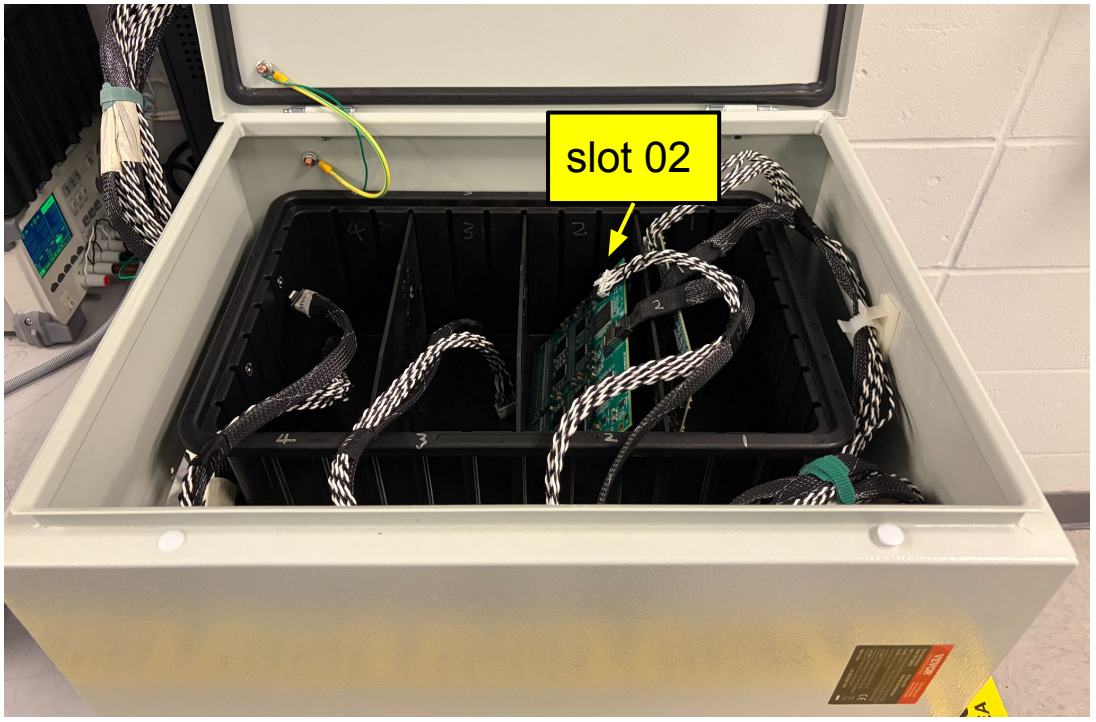


Page#06 Install the FEMB into Slot 03

Step 1: Pick up the board
Step 2: Scan QR code
Step 3: Install Power and Data Cable
Step 4: Put the board into test slot 03

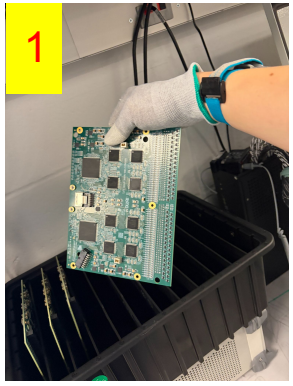

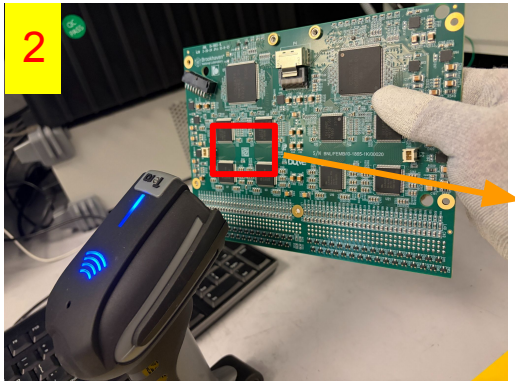


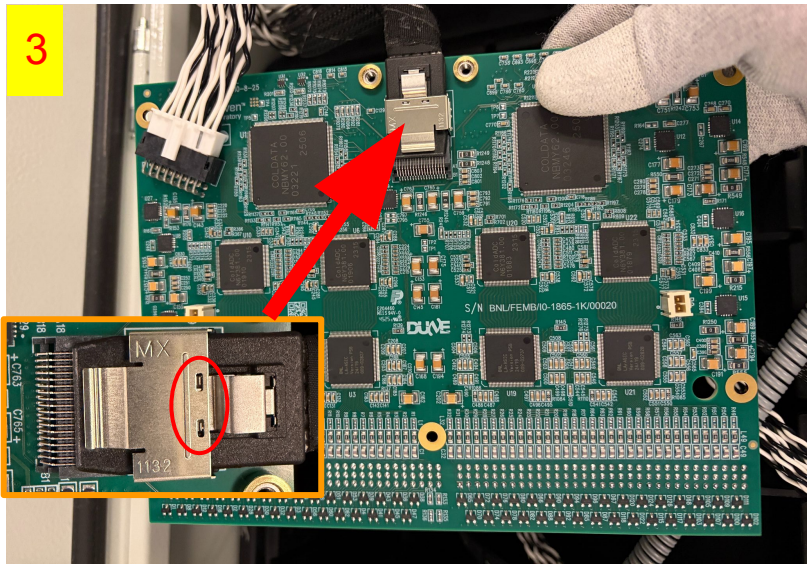


```
================================================================================
  FEMB QR CODE SCANNING
================================================================================


Scan the QR code for each FEMB board.
Press Enter to skip empty slots.


  Scan FEMB for Slot #1: BNL/FEMB/I0-1865-1K/00020
  Scan again to confirm: BNL/FEMB/I0-1865-1K/00020
✓ Slot #1: BNL_FEMB_I0-1865-1K_00020
  Scan FEMB for Slot #2: IO-1865-1D 00042
  Scan again to confirm: IO-1865-1D 00042
✓ Slot #2: IO-1865-1D 00042
  Scan FEMB for Slot #3: BNL/FEMB/I0-1865-1G/00063
  Scan again to confirm: BNL/FEMB/I0-1865-1G/00063
✓ Slot #3: BNL_FEMB_I0-1865-1G_00063
```

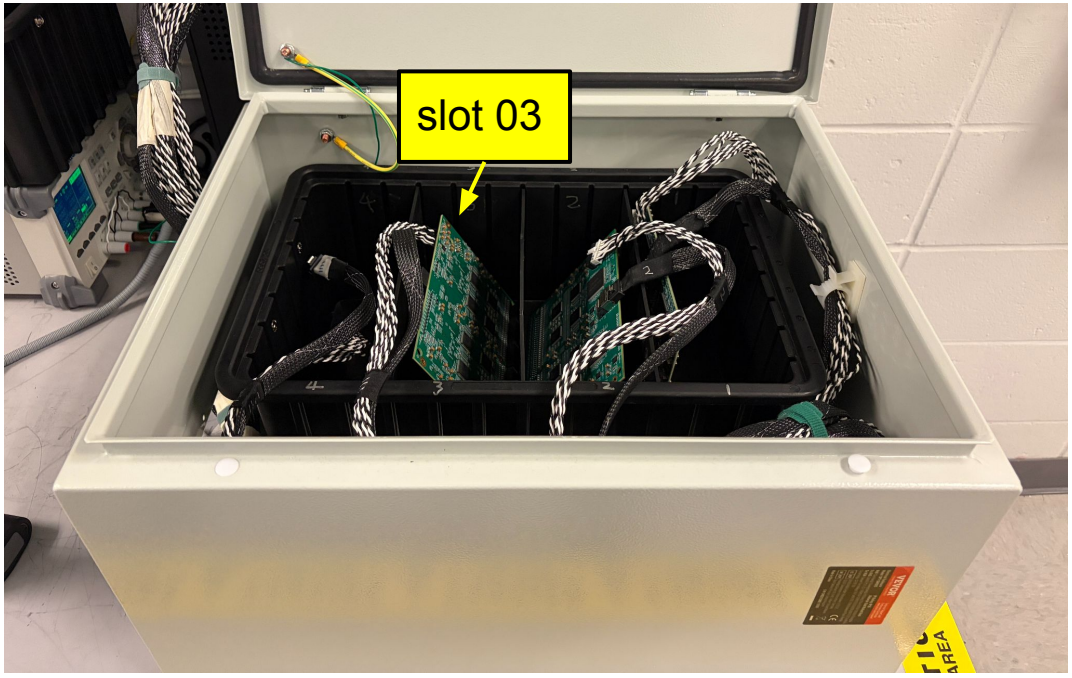


Page#07 Install the FEMB into Slot 04

Step 1: Pick up the board
Step 2: Scan QR code
Step 3: Install Power and Data Cable
Step 4: Put the board into test slot 04

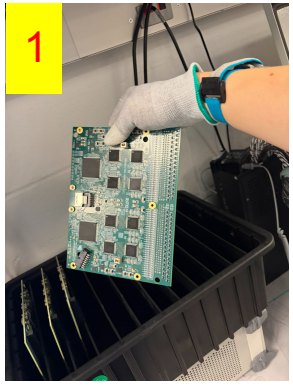

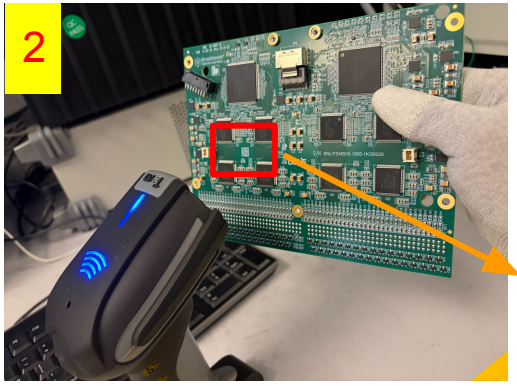


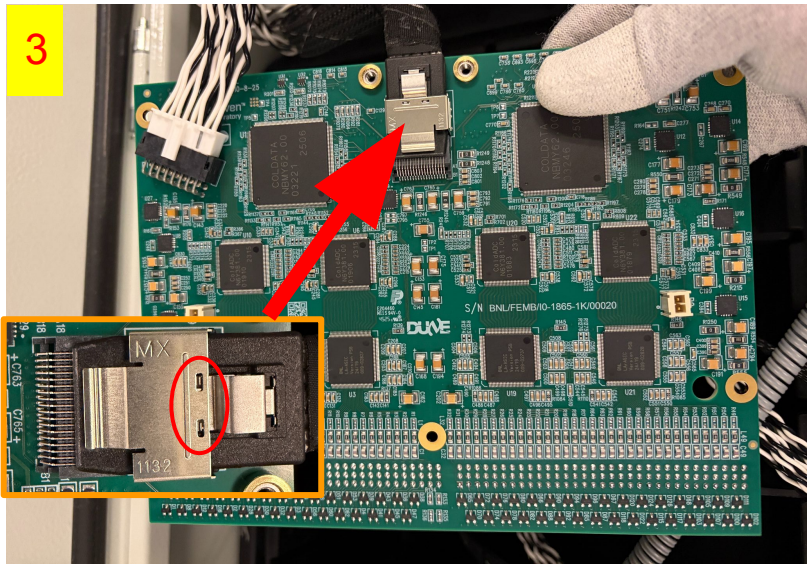


```
================================================================================
  FEMB QR CODE SCANNING
================================================================================

Scan the QR code for each FEMB board.
Press Enter to skip empty slots.

  Scan FEMB for Slot #1: BNL/FEMB/I0-1865-1K/00020
  Scan again to confirm: BNL/FEMB/I0-1865-1K/00020
✓ Slot #1: BNL_FEMB_I0-1865-1K_00020
  Scan FEMB for Slot #2: IO-1865-1D 00042
  Scan again to confirm: IO-1865-1D 00042
✓ Slot #2: IO-1865-1D 00042
  Scan FEMB for Slot #3: BNL/FEMB/I0-1865-1G/00063
  Scan again to confirm: BNL/FEMB/I0-1865-1G/00063
✓ Slot #3: BNL_FEMB_I0-1865-1G_00063
  Scan FEMB for Slot #4: BNL/FEMB/I0-1865-1K/00023
  Scan again to confirm: BNL/FEMB/I0-1865-1K/00023
✓ Slot #4: BNL_FEMB_I0-1865-1K_00023
```

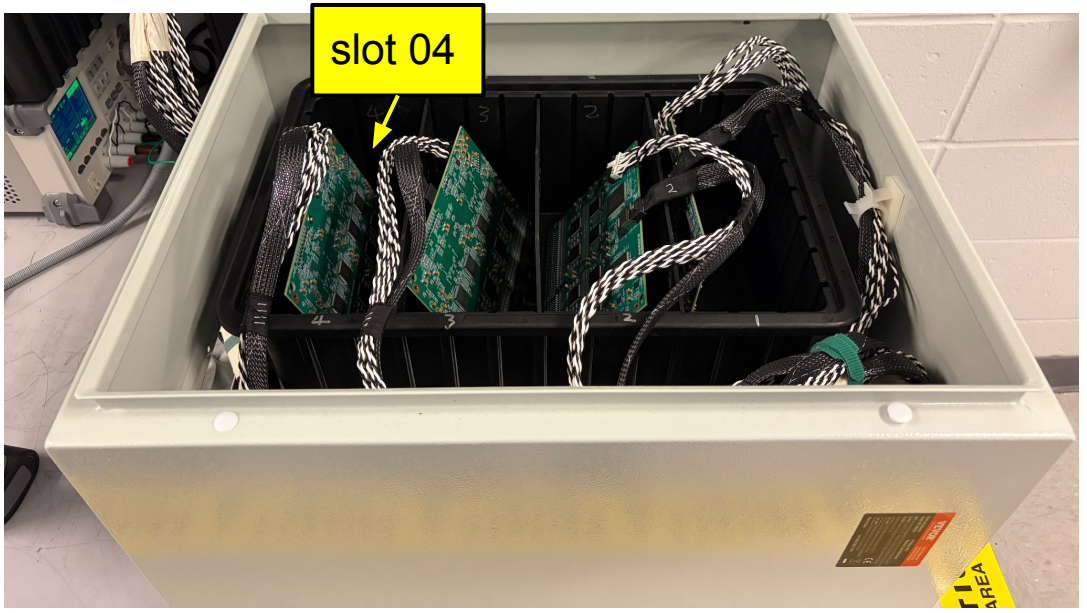


Page#08 Review Information and Continue the test

Step 1: Close the Cover




Page#09 Review Result and Open Cover


Step 1: Open the Cover

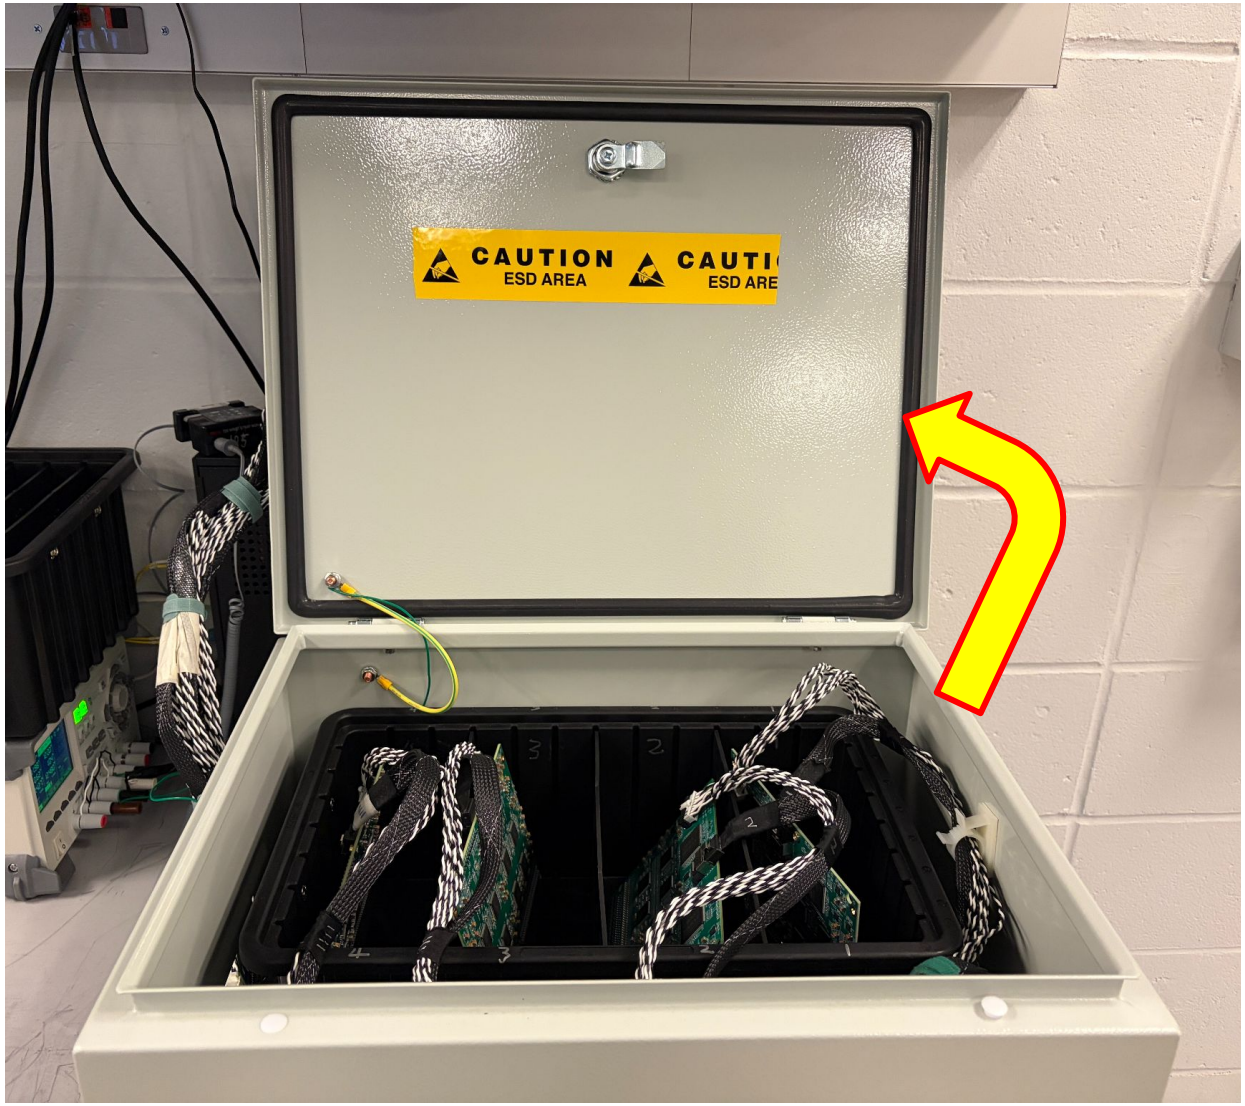

Page#10 Disconnect board at slot 1

Step 1: Pick up the board at slot 1
Step 2: Scan QR and check result
Step 3: Disconnect Board
Good Board: put into PASS tray
Bad Board : put into FAIL tray

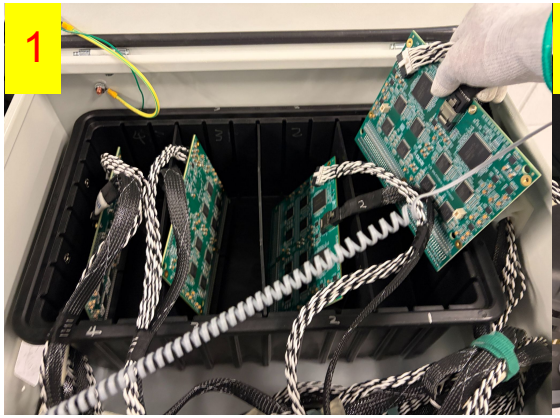


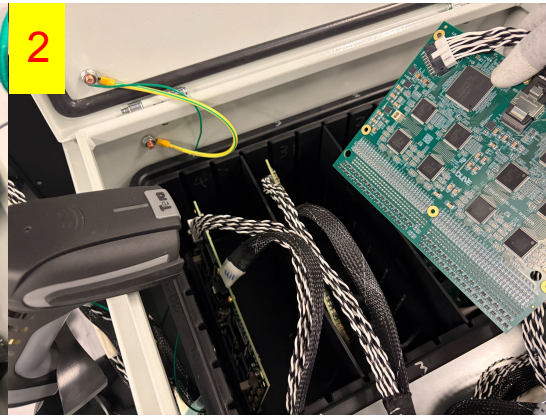


```
============================================================
  BOARD REMOVAL PROCESS
============================================================

Remove boards one by one. Scan QR code to confirm each board.
PASS -> GOOD tray | FAIL -> BAD tray

============================================================
  Slot #1
============================================================
```

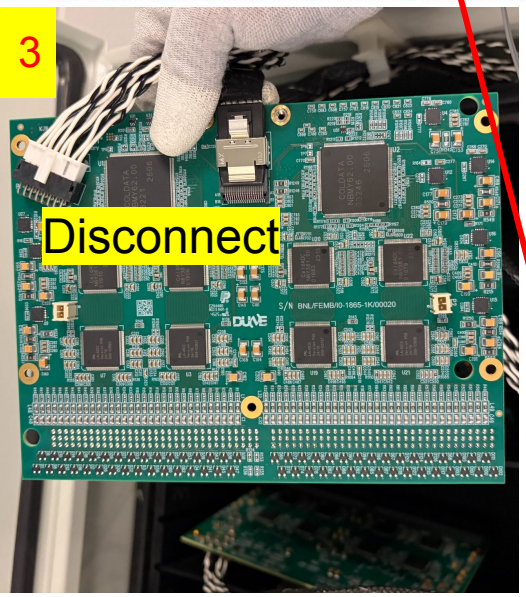


```
  FEMB ID on record: BNL_FEMB_I0-1865-1K_00020
  Test Result: ✓ PASS

  Scan FEMB QR code to confirm: BNL/FEMB/I0-1865-1K/00020
✓ ID matched: BNL_FEMB_I0-1865-1K_00020

  >>> Remove FEMB and place in GOOD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```




```
  FEMB ID on record: IO-1865-1D 00042
  Test Result: ✗ FAIL


  Scan FEMB QR code to confirm: IO-1865-1D 00042
✓ ID matched: IO-1865-1D 00042


  >>> Remove FEMB and place in BAD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```



Page#11 Disconnect board at slot 2

Step 1: Pick up the board at slot 2
Step 2: Scan QR and check result
Step 3: Disconnect Board
Good Board: put into PASS tray
Bad Board : put into FAIL tray

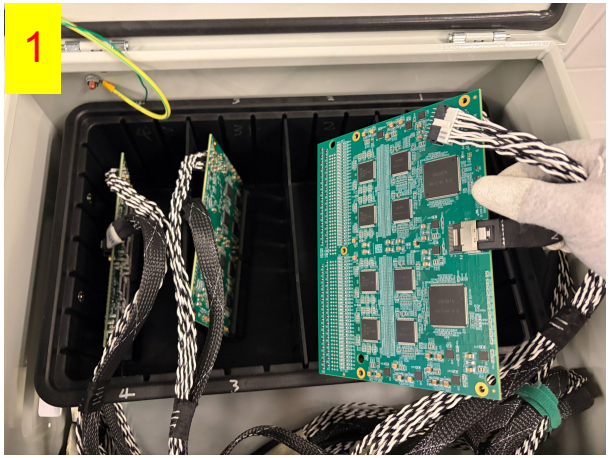


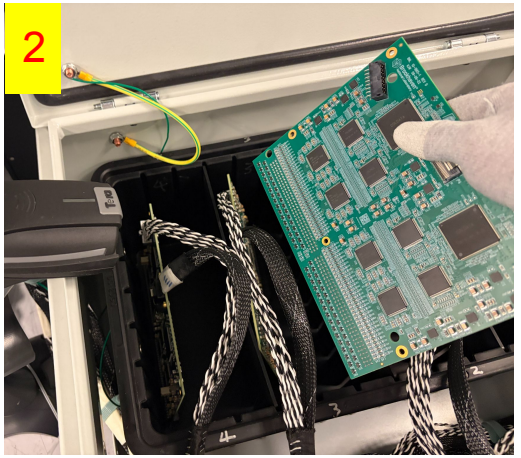


```
============================================================
  BOARD REMOVAL PROCESS
============================================================

Remove boards one by one. Scan QR code to confirm each board.
PASS -> GOOD tray | FAIL -> BAD tray

============================================================
  Slot #2
============================================================
```

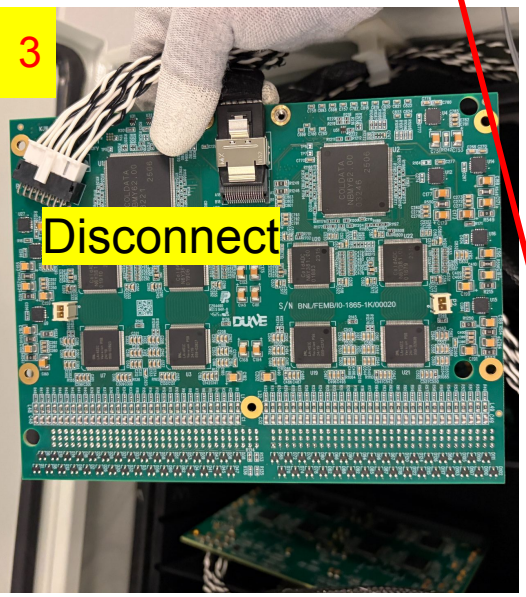


```
  FEMB ID on record: BNL_FEMB_I0-1865-1K_00020
  Test Result: ✓ PASS

  Scan FEMB QR code to confirm: BNL/FEMB/I0-1865-1K/00020
✓ ID matched: BNL_FEMB_I0-1865-1K_00020

  >>> Remove FEMB and place in GOOD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```




```
  FEMB ID on record: IO-1865-1D 00042
  Test Result: ✗ FAIL


  Scan FEMB QR code to confirm: IO-1865-1D 00042
✓ ID matched: IO-1865-1D 00042


  >>> Remove FEMB and place in BAD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```



Page#12 Disconnect board at slot 3

Step 1: Pick up the board at slot 3
Step 2: Scan QR and check result
Step 3: Disconnect Board
Good Board: put into PASS tray
Bad Board : put into FAIL tray

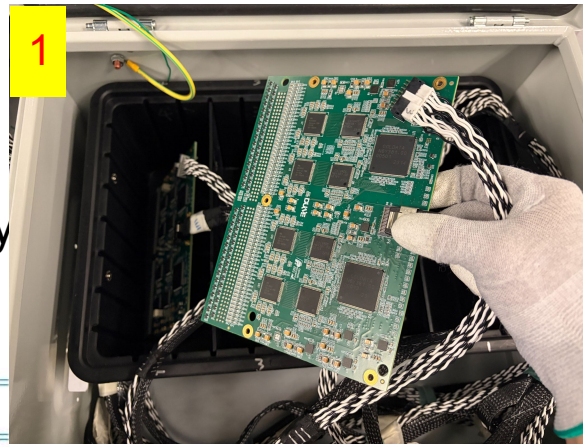


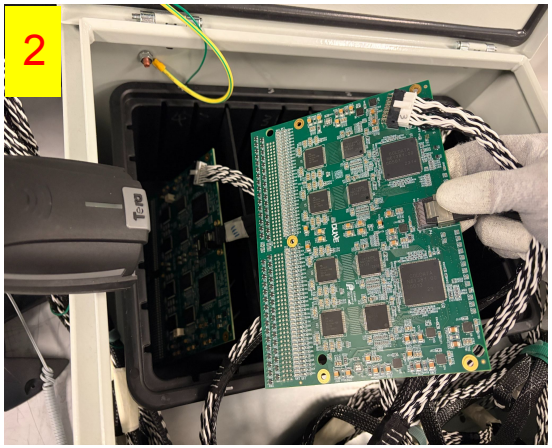


```
================================================================
  BOARD REMOVAL PROCESS
================================================================

Remove boards one by one. Scan QR code to confirm each board.
PASS -> GOOD tray | FAIL -> BAD tray

================================================================
  Slot #3
================================================================
```

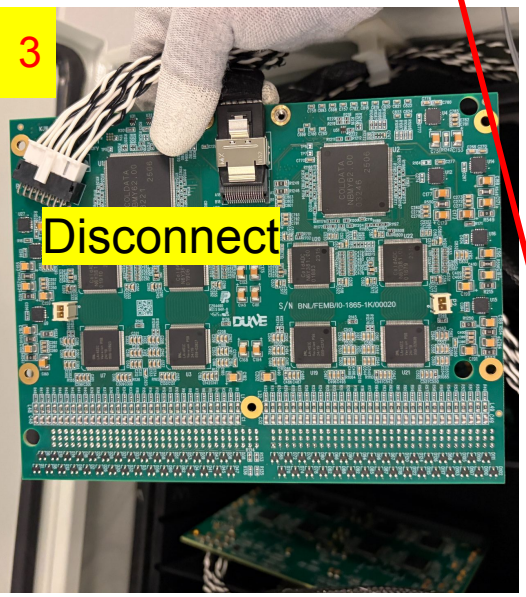


```
  FEMB ID on record: BNL_FEMB_I0-1865-1K_00020
  Test Result: ✓ PASS

  Scan FEMB QR code to confirm: BNL/FEMB/I0-1865-1K/00020
✓ ID matched: BNL_FEMB_I0-1865-1K_00020

  >>> Remove FEMB and place in GOOD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```




```
  FEMB ID on record: IO-1865-1D 00042
  Test Result: ✗ FAIL


  Scan FEMB QR code to confirm: IO-1865-1D 00042
✓ ID matched: IO-1865-1D 00042


  >>> Remove FEMB and place in BAD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```



Page#13 Disconnect board at slot 4

Step 1: Pick up the board at slot 4
Step 2: Scan QR and check result
Step 3: Disconnect Board
Good Board: put into PASS tray
Bad Board : put into FAIL tray

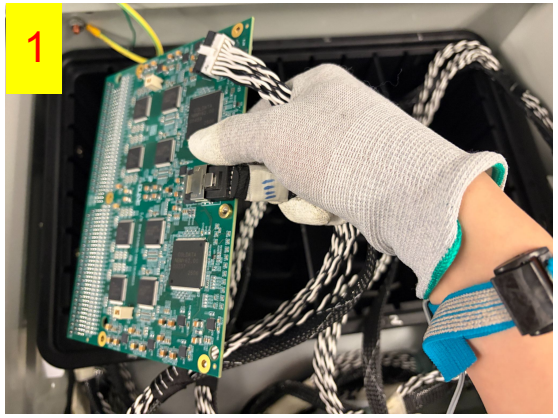


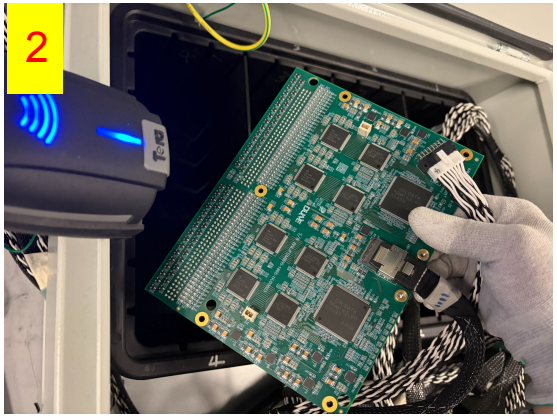


```
============================================================
  BOARD REMOVAL PROCESS
============================================================

Remove boards one by one. Scan QR code to confirm each board.
PASS -> GOOD tray | FAIL -> BAD tray

============================================================
  Slot #4
============================================================
```

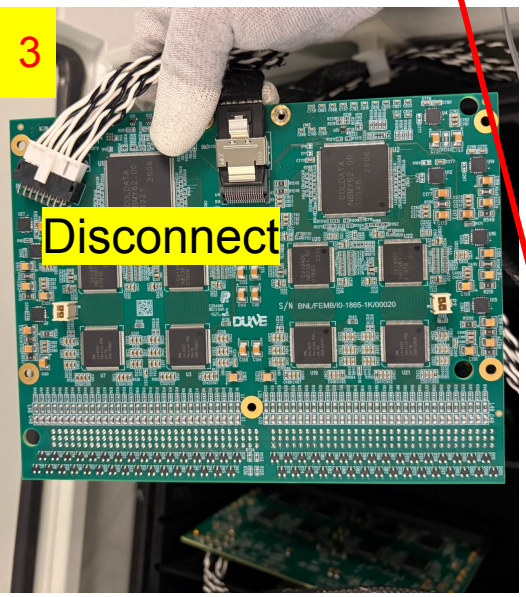


```
  FEMB ID on record: BNL_FEMB_I0-1865-1K_00020
  Test Result: ✓ PASS

  Scan FEMB QR code to confirm: BNL/FEMB/I0-1865-1K/00020
✓ ID matched: BNL_FEMB_I0-1865-1K_00020

  >>> Remove FEMB and place in GOOD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```




```
  FEMB ID on record: IO-1865-1D 00042
  Test Result: ✗ FAIL


  Scan FEMB QR code to confirm: IO-1865-1D 00042
✓ ID matched: IO-1865-1D 00042

  >>> Remove FEMB and place in BAD tray <<<
  Press Enter after FEMB is removed and placed in tray...
```



Page#14 Clean the Test site

Step 1: Clean the test site
Step 2: Prepare for next test cycle

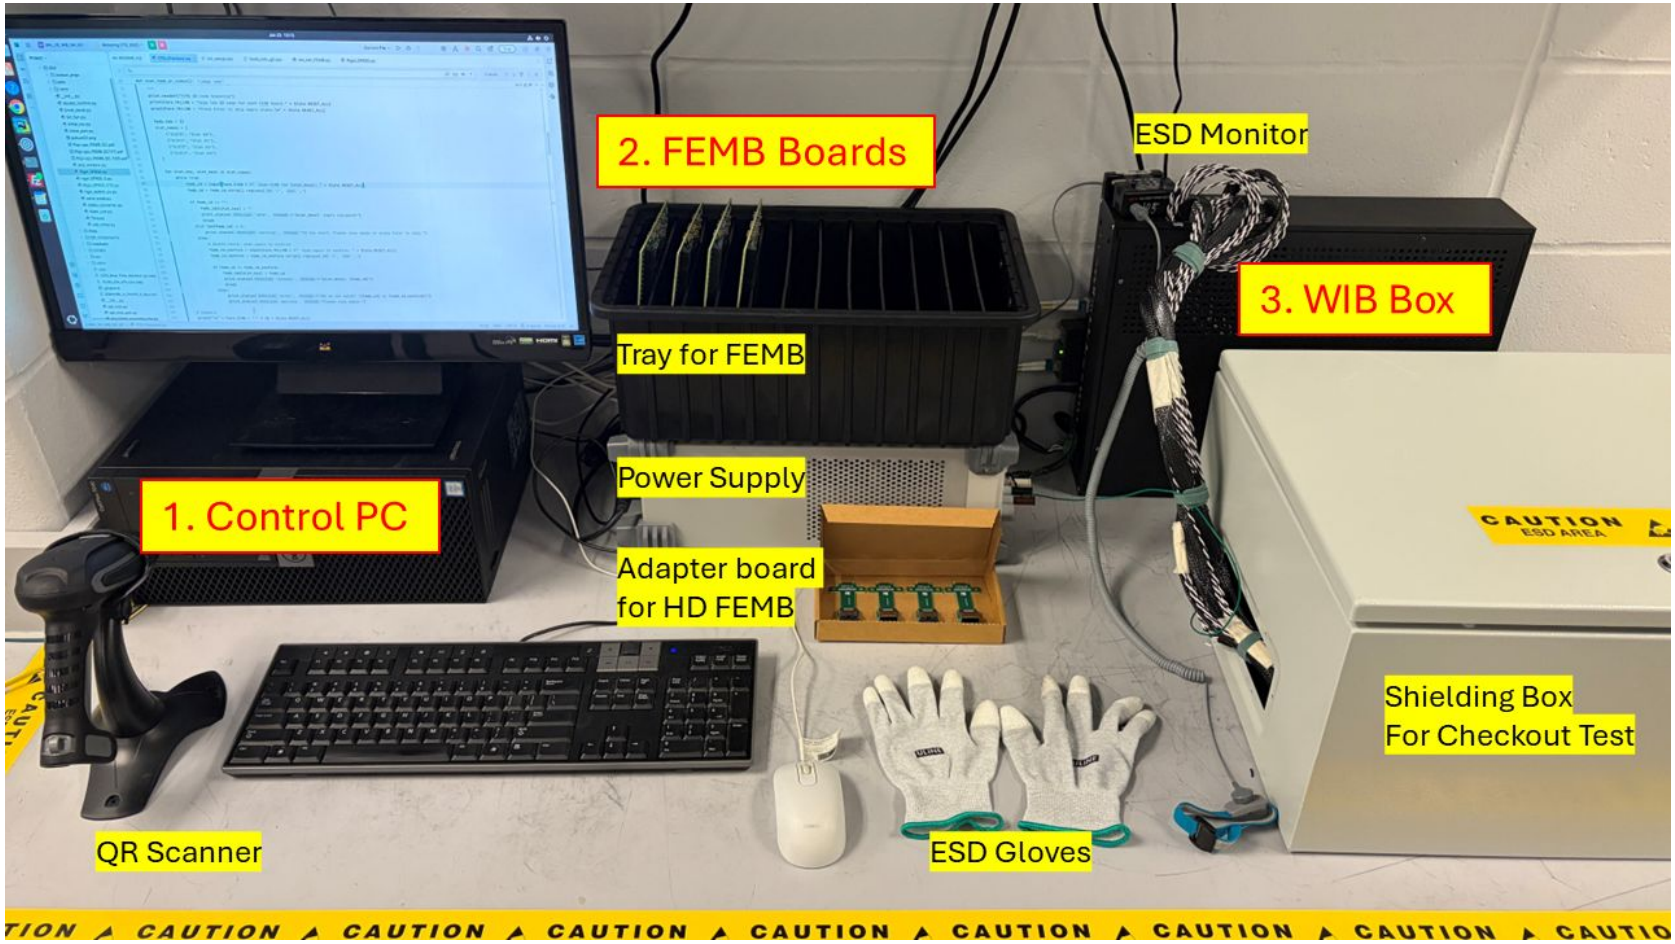

Backup

Page#xx Visual Inspection of P4

Check Part 1 2 3 4 5
If issue found, please fill in the text box

