


Lab – Configuring Port Address Translation (PAT) (Instructor

Version)

Instructor Note: Red font color or Gray highlights indicate text that appears in the instructor copy only.

Topology

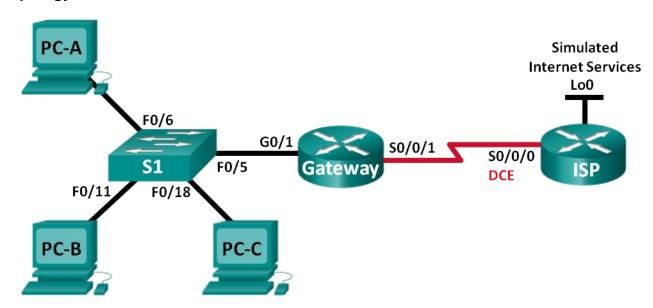

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway
Gateway	G0/1	192.168.1.1	255.255.255.0	N/A
	S0/0/1	209.165.201.18	255.255.255.252	N/A
ISP	S0/0/0 (DCE)	209.165.201.17	255.255.255.252	N/A
	Lo0	192.31.7.1	255.255.255.255	N/A
PC-A	NIC	192.168.1.20	255.255.255.0	192.168.1.1
РС-В	NIC	192.168.1.21	255.255.255.0	192.168.1.1
PC-C	NIC	192.168.1.22	255.255.255.0	192.168.1.1

Objectives

Part 1: Build the Network and Verify Connectivity

Part 2: Configure and Verify NAT Pool Overload

Part 3: Configure and Verify PAT

Background / Scenario

In the first part of the lab, your company is allocated the public IP address range of 209.165.200.224/29 by the ISP. This provides the company with six public IP addresses. Dynamic NAT pool overload uses a pool of IP addresses in a many-to-many relationship. The router uses the first IP address in the pool and assigns

connections using the IP address plus a unique port number. After the maximum number of translations for a single IP address have been reached on the router (platform and hardware specific), it uses the next IP address in the pool. NAT pool overload is a form port address translation (PAT) that overloads a group of public IPv4 addresses.

In Part 2, the ISP has allocated a single IP address, 209.165.201.18, to your company for use on the Internet connection from the company Gateway router to the ISP. You will use the PAT to convert multiple internal addresses into the one usable public address. You will test, view, and verify that the translations are taking place, and you will interpret the NAT/PAT statistics to monitor the process.

Note: The routers used with CCNA hands-on labs are Cisco 1941 Integrated Services Routers (ISRs) with Cisco IOS Release 15.2(4)M3 (universalk9 image). The switches used are Cisco Catalyst 2960s with Cisco IOS Release 15.0(2) (lanbasek9 image). Other routers, switches and Cisco IOS versions can be used. Depending on the model and Cisco IOS version, the commands available and output produced might vary from what is shown in the labs. Refer to the Router Interface Summary Table at the end of this lab for the correct interface identifiers.

Note: Make sure that the routers and switch have been erased and have no startup configurations. If you are unsure, contact your instructor.

Instructor Note: Refer to the Instructor Lab Manual for the procedures to initialize and reload devices.

Required Resources

- 2 Routers (Cisco 1941 with Cisco IOS Release 15.2(4)M3 universal image or comparable)
- 1 Switch (Cisco 2960 with Cisco IOS Release 15.0(2) lanbasek9 image or comparable)
- 3 PCs (Windows 7, Vista, or XP with terminal emulation program, such as Tera Term)
- Console cables to configure the Cisco IOS devices via the console ports
- Ethernet and serial cables as shown in the topology

Part 1: Build the Network and Verify Connectivity

In Part 1, you will set up the network topology and configure basic settings, such as the interface IP addresses, static routing, device access, and passwords.

- Step 1: Cable the network as shown in the topology.
- Step 2: Configure PC hosts.
- Step 3: Initialize and reload the routers and switches.
- Step 4: Configure basic settings for each router.
 - a. Disable DNS lookup.
 - b. Configure IP addresses for the routers as listed in the Addressing Table.
 - c. Set the clock rate to 128000 for DCE serial interface.
 - d. Configure device name as shown in the topology.
 - e. Assign cisco as the console and vty passwords.
 - f. Assign **class** as the encrypted privileged EXEC mode password.
 - g. Configure logging synchronous to prevent console messages from interrupting the command entry.

Step 5: Configure static routing.

a. Create a static route from the ISP router to the Gateway router.

```
ISP(config) # ip route 209.165.200.224 255.255.255.248 209.165.201.18
```

b. Create a default route from the Gateway router to the ISP router.

```
Gateway(config) # ip route 0.0.0.0 0.0.0.0 209.165.201.17
```

Step 6: Verify network connectivity.

- a. From the PC hosts, ping the G0/1 interface on the Gateway router. Troubleshoot if the pings are unsuccessful.
- b. Verify that the static routes are configured correctly on both routers.

Part 2: Configure and Verify NAT Pool Overload

In Part 2, you will configure the Gateway router to translate the IP addresses from the 192.168.1.0/24 network to one of the six usable addresses in the 209.165.200.224/29 range.

Step 1: Define an access control list that matches the LAN private IP addresses.

ACL 1 is used to allow the 192.168.1.0/24 network to be translated.

```
Gateway(config) # access-list 1 permit 192.168.1.0 0.0.0.255
```

Step 2: Define the pool of usable public IP addresses.

```
Gateway(config) # ip nat pool public_access 209.165.200.225 209.165.200.230 netmask 255.255.248
```

Step 3: Define the NAT from the inside source list to the outside pool.

```
Gateway (config) # ip nat inside source list 1 pool public access overload
```

Step 4: Specify the interfaces.

Issue the ip nat inside and ip nat outside commands to the interfaces.

```
Gateway(config)# interface g0/1
Gateway(config-if)# ip nat inside
Gateway(config-if)# interface s0/0/1
Gateway(config-if)# ip nat outside
```

Step 5: Verify the NAT pool overload configuration.

- a. From each PC host, ping the 192.31.7.1 address on the ISP router.
- b. Display NAT statistics on the Gateway router.

```
Gateway# show ip nat statistics
Total active translations: 3 (0 static, 3 dynamic; 3 extended)
Peak translations: 3, occurred 00:00:25 ago
Outside interfaces:
    Serial0/0/1
Inside interfaces:
    GigabitEthernet0/1
```

c. Display NATs on the Gateway router.

Gateway# show ip nat translations

Pro Inside global	Inside local	Outside local	Outside global
icmp 209.165.200.225:0	192.168.1.20:1	192.31.7.1:1	192.31.7.1:0
icmp 209.165.200.225:1	192.168.1.21:1	192.31.7.1:1	192.31.7.1:1
icmp 209.165.200.225:2	192.168.1.22:1	192.31.7.1:1	192.31.7.1:2

Note: Depending on how much time has elapsed since you performed the pings from each PC, you may not see all three translations. ICMP translations have a short timeout value.

How many Inside local IP addresses are listed in the sample output above? _______3

How many Inside global IP addresses are listed? ______1

How many port numbers are used paired with the Inside global addresses? ______ 3

What would be the result of pinging the Inside local address of PC-A from the ISP router? Why?

The ping would fail because the router knows the location of the Inside global address in its routing table but the Inside local address is not advertised.

Part 3: Configure and Verify PAT

In Part 3, you will configure PAT by using an interface instead of a pool of addresses to define the outside address. Not all of the commands in Part 2 will be reused in Part 3.

Step 1: Clear NATs and statistics on the Gateway router.

Step 2: Verify the configuration for NAT.

- a. Verify that statistics have been cleared.
- b. Verify that the outside and inside interfaces are configured for NATs.
- c. Verify that the ACL is still configured for NATs.

What command did you use to confirm the results from steps a to c?

```
Gateway# show ip nat statistics
```

Step 3: Remove the pool of useable public IP addresses.

Gateway (config) # no ip nat pool public_access 209.165.200.225 209.165.200.230 netmask 255.255.255.248

Step 4: Remove the NAT translation from inside source list to outside pool.

Gateway(config) # no ip nat inside source list 1 pool public access overload

Step 5: Associate the source list with the outside interface.

Gateway(config)# ip nat inside source list 1 interface serial 0/0/1 overload

Step 6: Test the PAT configuration.

- a. From each PC, ping the 192.31.7.1 address on the ISP router.
- b. Display NAT statistics on the Gateway router.

```
Gateway# show ip nat statistics
```

```
Total active translations: 3 (0 static, 3 dynamic; 3 extended)

Peak translations: 3, occurred 00:00:19 ago

Outside interfaces:
    Serial0/0/1

Inside interfaces:
    GigabitEthernet0/1

Hits: 24 Misses: 0

CEF Translated packets: 24, CEF Punted packets: 0

Expired translations: 0

Dynamic mappings:
-- Inside Source

[Id: 2] access-list 1 interface Serial0/0/1 refcount 3

Total doors: 0

Appl doors: 0

Normal doors: 0
```

Display NAT translations on Gateway.

Queued Packets: 0

Gateway# show ip nat translations

Pro Inside global		Inside local	Outside local	Outside global
	icmp 209.165.201.18:3	192.168.1.20:1	192.31.7.1:1	192.31.7.1:3
	icmp 209.165.201.18:1	192.168.1.21:1	192.31.7.1:1	192.31.7.1:1
	icmp 209.165.201.18:4	192.168.1.22:1	192.31.7.1:1	192.31.7.1:4

Reflection

What advantages does PAT provide?

Answers will vary, but should include that PAT minimizes the number of public addresses needed to provide Internet access, and that PAT, like NAT, serves to "hide" private addresses from outside networks.

Router Interface Summary Table

Router Interface Summary					
Router Model	Ethernet Interface #1	Ethernet Interface #2	Serial Interface #1	Serial Interface #2	
1800	Fast Ethernet 0/0 (F0/0)	Fast Ethernet 0/1 (F0/1)	Serial 0/0/0 (S0/0/0)	Serial 0/0/1 (S0/0/1)	
1900	Gigabit Ethernet 0/0 (G0/0)	Gigabit Ethernet 0/1 (G0/1)	Serial 0/0/0 (S0/0/0)	Serial 0/0/1 (S0/0/1)	
2801	Fast Ethernet 0/0 (F0/0)	Fast Ethernet 0/1 (F0/1)	Serial 0/1/0 (S0/1/0)	Serial 0/1/1 (S0/1/1)	
2811	Fast Ethernet 0/0 (F0/0)	Fast Ethernet 0/1 (F0/1)	Serial 0/0/0 (S0/0/0)	Serial 0/0/1 (S0/0/1)	
2900	Gigabit Ethernet 0/0 (G0/0)	Gigabit Ethernet 0/1 (G0/1)	Serial 0/0/0 (S0/0/0)	Serial 0/0/1 (S0/0/1)	

Note: To find out how the router is configured, look at the interfaces to identify the type of router and how many interfaces the router has. There is no way to effectively list all the combinations of configurations for each router class. This table includes identifiers for the possible combinations of Ethernet and Serial interfaces in the device. The table does not include any other type of interface, even though a specific router may contain one. An example of this might be an ISDN BRI interface. The string in parenthesis is the legal abbreviation that can be used in Cisco IOS commands to represent the interface.

Device Configs

Router Gateway (After Part 2)

```
Gateway# show run
Building configuration...

Current configuration : 1790 bytes
!

version 15.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
!
hostname Gateway
!
boot-start-marker
boot-end-marker
!
! enable secret 4 06YFDUHH61wAE/kLkDq9BGho1QM5EnRtoyr8cHAUg.2
!
no aaa new-model
memory-size iomem 15
!
```

```
!
!
!
!
no ip domain lookup
ip cef
no ipv6 cef
multilink bundle-name authenticated
!
!
!
!
!
!
!
!
!
!
interface Embedded-Service-Engine0/0
no ip address
shutdown
interface GigabitEthernet0/0
no ip address
shutdown
duplex auto
speed auto
interface GigabitEthernet0/1
ip address 192.168.1.1 255.255.255.0
ip nat inside
ip virtual-reassembly in
duplex auto
speed auto
interface Serial0/0/0
no ip address
shutdown
interface Serial0/0/1
ip address 209.165.201.18 255.255.255.252
ip nat outside
ip virtual-reassembly in
ip forward-protocol nd
no ip http server
```

```
no ip http secure-server
ip nat pool public access 209.165.200.225 209.165.200.230 netmask 255.255.255.248
ip nat inside source list 1 pool public access overload
ip route 0.0.0.0 0.0.0.0 209.165.201.17
access-list 1 permit 192.168.1.0 0.0.0.255
!
!
!
control-plane
!
!
line con 0
password cisco
logging synchronous
login
line aux 0
line 2
no activation-character
no exec
transport preferred none
transport input all
transport output pad telnet rlogin lapb-ta mop udptn v120 ssh
stopbits 1
line vty 0 4
password cisco
login
transport input all
scheduler allocate 20000 1000
end
Router Gateway (After Part 3)
Gateway# show run
Building configuration...
```

```
Gateway# show run
Building configuration...

Current configuration : 1711 bytes
!
version 15.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
!
hostname Gateway
!
boot-start-marker
```

```
boot-end-marker
!
!
enable secret 4 06YFDUHH61wAE/kLkDq9BGho1QM5EnRtoyr8cHAUg.2
no aaa new-model
memory-size iomem 15
!
!
!
!
!
!
no ip domain lookup
ip cef
no ipv6 cef
multilink bundle-name authenticated
!
!
!
!
!
!
!
!
interface Embedded-Service-Engine0/0
no ip address
shutdown
interface GigabitEthernet0/0
no ip address
shutdown
duplex auto
speed auto
interface GigabitEthernet0/1
ip address 192.168.1.1 255.255.255.0
ip nat inside
ip virtual-reassembly in
duplex auto
speed auto
interface Serial0/0/0
no ip address
shutdown
!
```

```
interface Serial0/0/1
ip address 209.165.201.18 255.255.255.252
ip nat outside
ip virtual-reassembly in
ip forward-protocol nd
no ip http server
no ip http secure-server
ip nat inside source list 1 interface Serial0/0/1 overload
ip route 0.0.0.0 0.0.0.0 209.165.201.17
access-list 1 permit 192.168.1.0 0.0.0.255
!
!
Control-plane
!
!
!
line con 0
password cisco
logging synchronous
login
line aux 0
line 2
no activation-character
no exec
transport preferred none
transport input all
transport output pad telnet rlogin lapb-ta mop udptn v120 ssh
stopbits 1
line vty 0 4
password cisco
login
transport input all
scheduler allocate 20000 1000
end
Router ISP
ISP# show run
Building configuration...
Current configuration: 1487 bytes
version 15.2
```

```
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname ISP
boot-start-marker
boot-end-marker
enable secret 4 06YFDUHH61wAE/kLkDq9BGho1QM5EnRtoyr8cHAUg.2
no aaa new-model
memory-size iomem 10
!
!
!
!
!
no ip domain lookup
ip cef
no ipv6 cef
multilink bundle-name authenticated
!
!
!
!
!
!
!
!
interface Loopback0
ip address 192.31.7.1 255.255.255.255
interface Embedded-Service-Engine0/0
no ip address
shutdown
interface GigabitEthernet0/0
no ip address
shutdown
duplex auto
speed auto
interface GigabitEthernet0/1
```

```
no ip address
shutdown
duplex auto
speed auto
interface Serial0/0/0
ip address 209.165.201.17 255.255.255.252
clock rate 128000
interface Serial0/0/1
no ip address
shutdown
ip forward-protocol nd
no ip http server
no ip http secure-server
ip route 209.165.200.224 255.255.255.224 209.165.201.18
!
!
!
control-plane
!
!
line con 0
password cisco
logging synchronous
login
line aux 0
line 2
no activation-character
no exec
transport preferred none
transport input all
transport output pad telnet rlogin lapb-ta mop udptn v120 ssh
stopbits 1
line vty 0 4
password cisco
login
transport input all
scheduler allocate 20000 1000
end
```