## HALF-LAP SCREW TEMPLATE — print at 100% / Actual size (no scaling)

1. Check the scale bars below.  2. Cut along the inside-edge arc and one seam line.
3. Put the arc on the 26 in inside edge and the seam line on the visible top seam (either side: symmetric).
4. Tape down, poke each crosshair with an awl, drill: countersink bit, 9/64 clearance thru upper,
   7/64 pilot into lower.  #6 x 5/8 flat head, flush.  Glue first.
Lap: upper 0.26 / lower 0.46 in.  Screws stay 3/16+ from the pocket and 1/4+ from both seams.

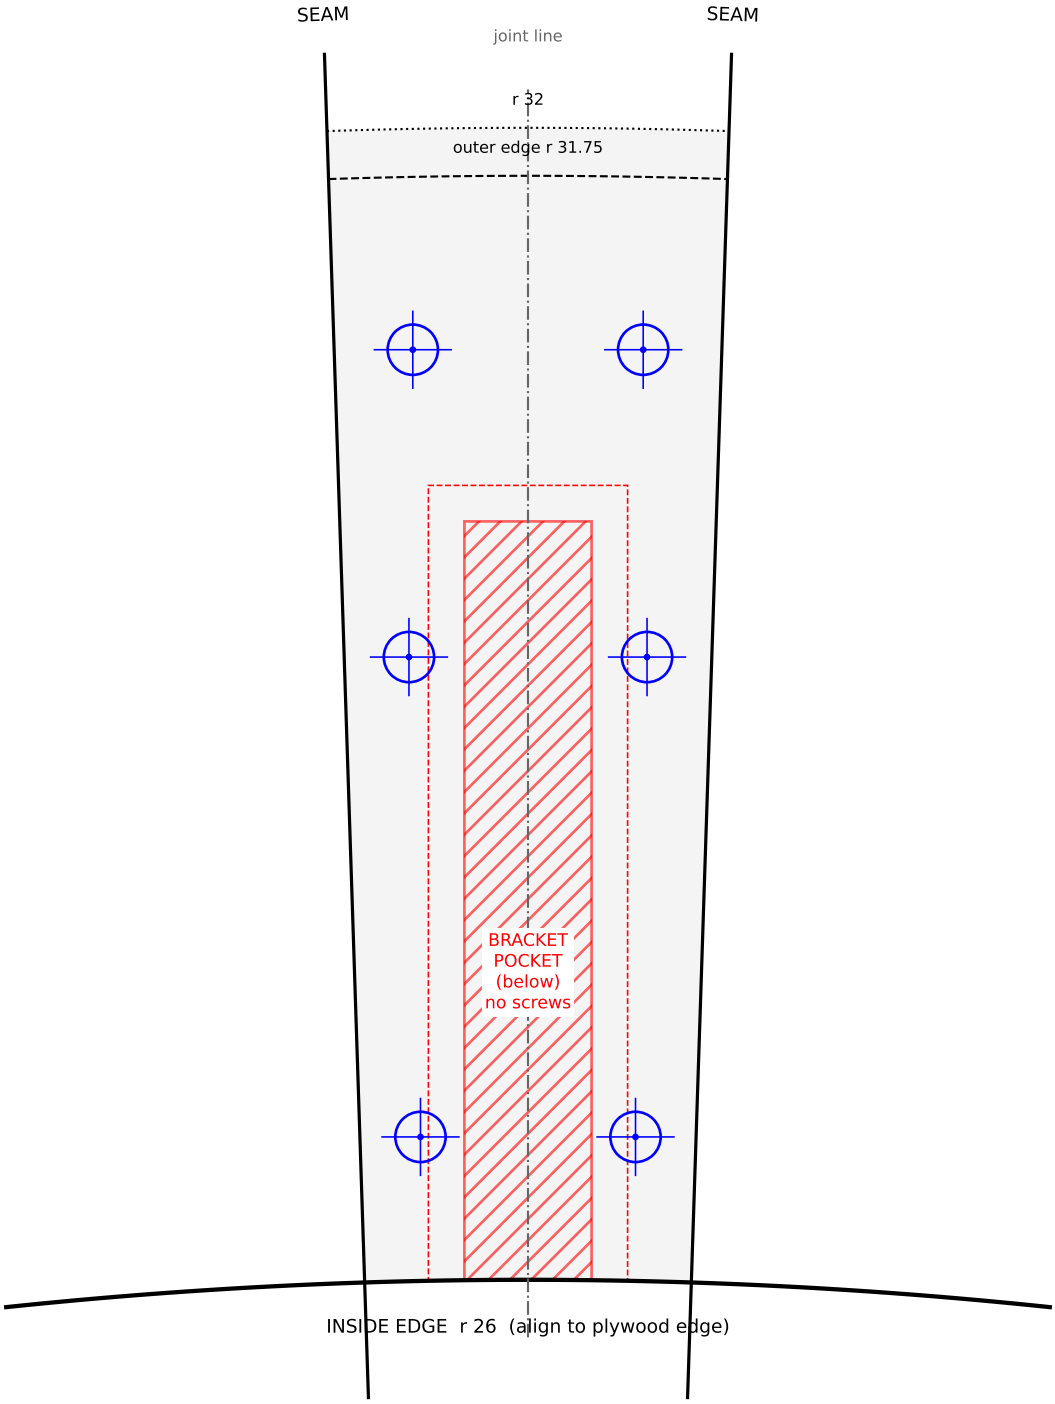


2.000 in

50 mm