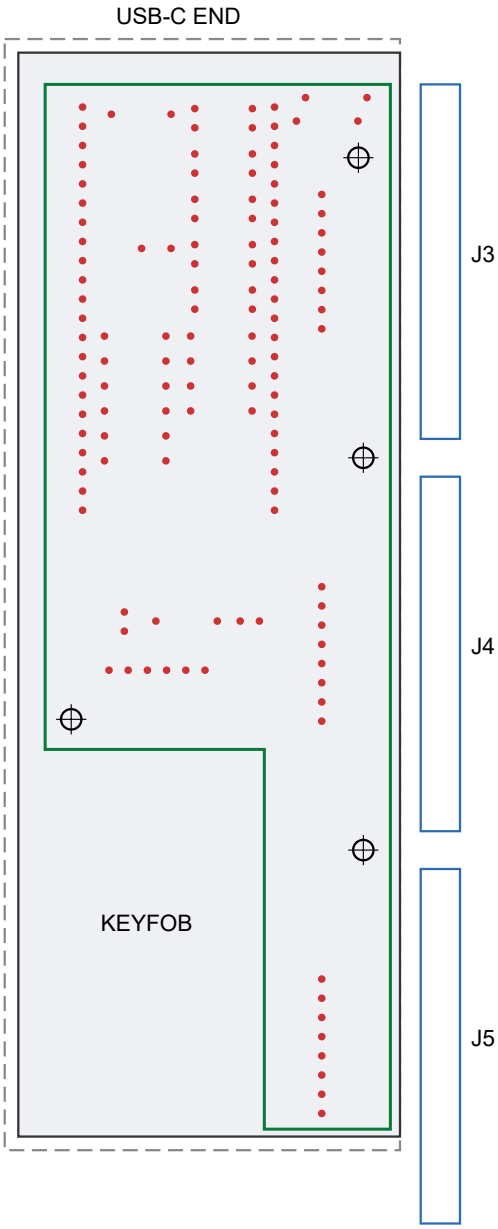


50 mm

TOP VIEW 1:1. Print at 100 % (no fit-to-page), then measure the 50 mm bar.
Lay the PCB on it, components up: holes, pads and outline must line up.
Red = pads, cross = M2.5 hole, grey = block, dashed = lid, blue = screens.