


N4DSC08 8CH RS485 DS18B20 Adapter Board Manual

RES factory settings,

Short RES for 5 seconds to restore factory settings.

8CH DS18B20 interface

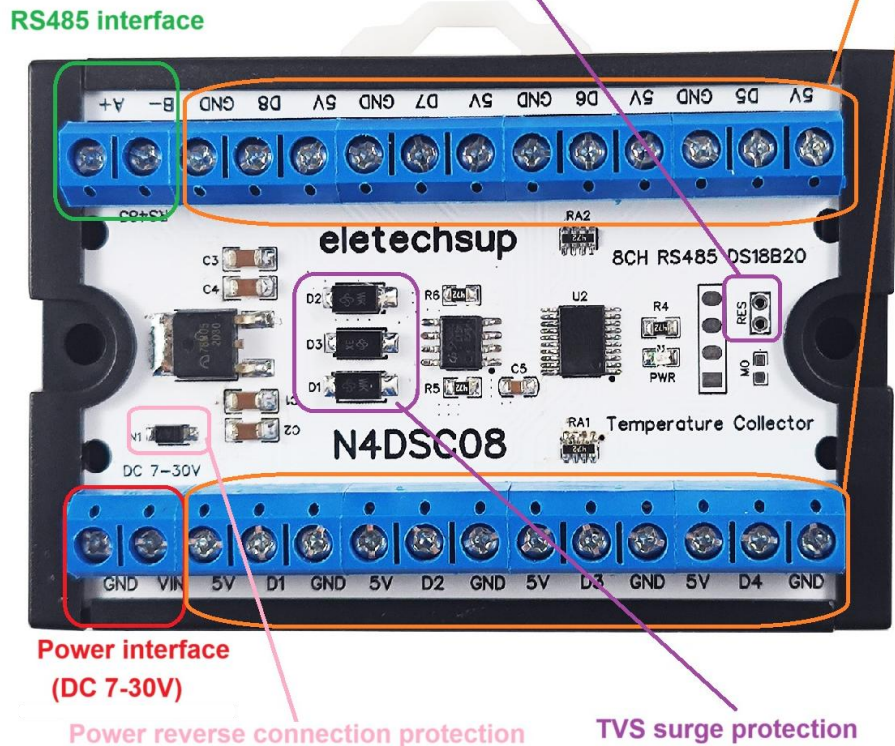

Working voltage: Power Supply DC 7-25V;

Working current: 10-18MA

Number of acquisition channels: 8 channels

MODBUS RTU protocol, 03, 04 read commands, 06, 16 write commands.

Serial port baud rate: 9600 (default), 1200-115200,N, 8, 1

By modifying the RS485 address, up to 247 modules can be cascaded (more than 16 please use R485 repeater)

Adapted sensor: DS18B20 Temperature Sensor

Temperature measurement range: -55°C to +125°C (-67°F to +257°F)

Size: 75 *50 * 14mm(Only Board),80 *54 * 26mm(With DIN housing)

Weight: 36g(Only Board) ,66g(With DIN housing)

In order to collect temperature more stably, it is recommended that the cable length of the DS18B20 probe should not exceed 15 meters.


1 For probes less than or equal to 5 meters, the default settings can be used

2 When the probe cable is greater than 5 meters, data can be collected correctly under normal circumstances. However, some manufacturers' sensors are incompatible and cannot collect data correctly.

The following modifications can be made:

1 Set the 0X00F3 register to 1.

2 Change the RA1/RA2 resistor to 3.9K or 2.7K resistor.

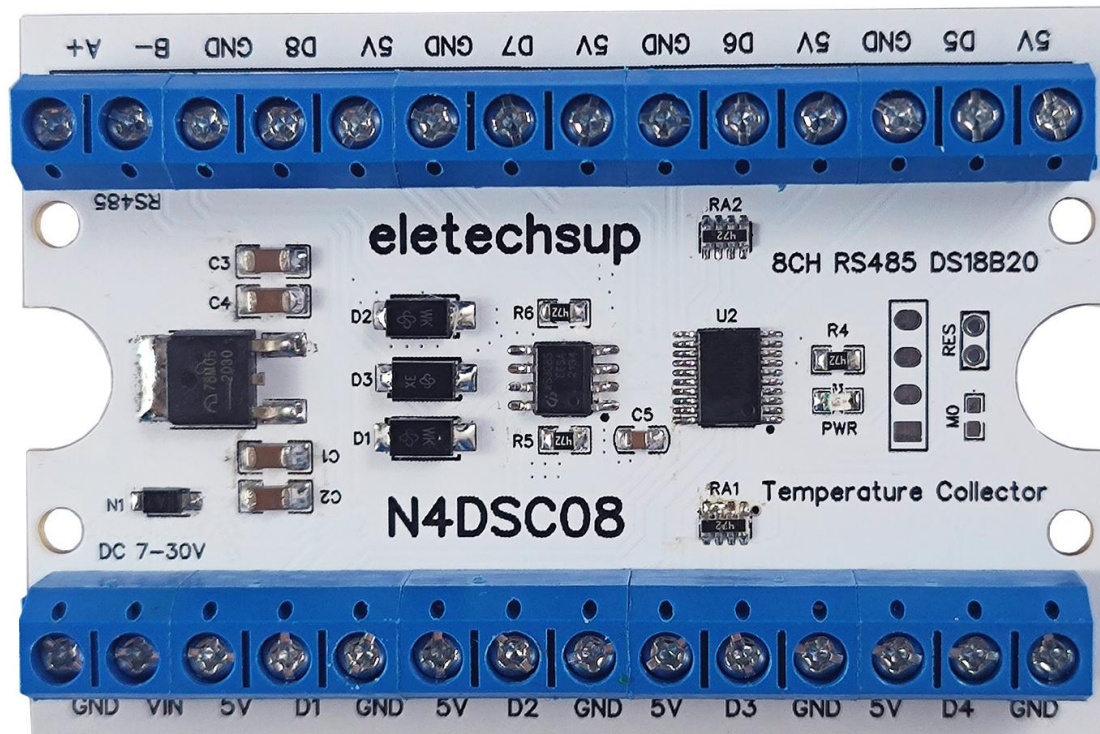

Pin description:

VCC: Positive power supply

VCC: Negative power supply

A+: RS485 A+ port

B- : RS485 B- port

5V: DS18B20 positive power supply

GND: DS18B20 negative power supply

D1: CH1 DS18B20 DATA

D2: CH1 DS18B20 DATA

D3: CH1 DS18B20 DATA

D4: CH1 DS18B20 DATA

D5: CH1 DS18B20 DATA

D6: CH1 DS18B20 DATA

D7: CH1 DS18B20 DATA

D8: CH1 DS18B20 DATA

Wiring Diagram

