


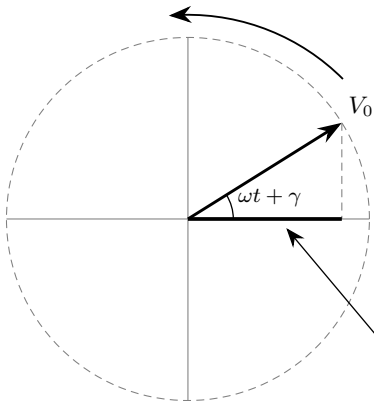

The phasor rotates
counterclockwise with ω

$V = V_0 \cos(\omega t + \gamma)$: projection of V_0 onto the horizontal direction (the real signal at the moment t)