SPI = Simple, 3 wire, full duplex, synchronous serial data transfer

Interfaces to many devices, even many non-SPI peripherals


Can be a master or slave interface

4 interface pins:


- -MOSI master out slave in
- -MIOS master in slave out
- -SCK serial clock
- -SS_n slave select

3 registers:

- -SPCR control register
- -SPSR status register
- -SPDR data register

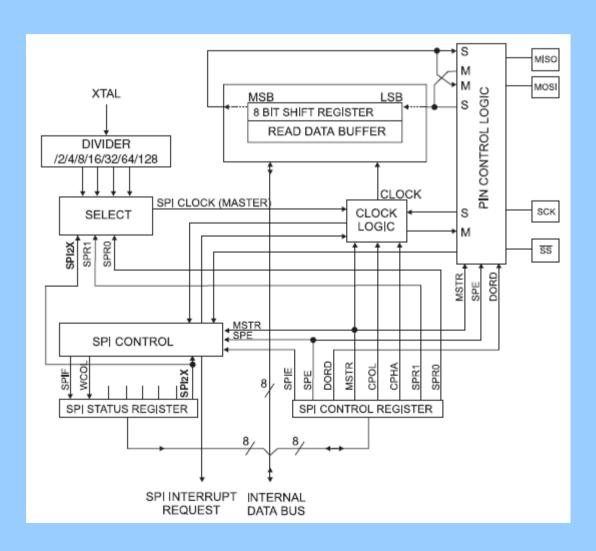

Full duplex, synchronous serial data transfer

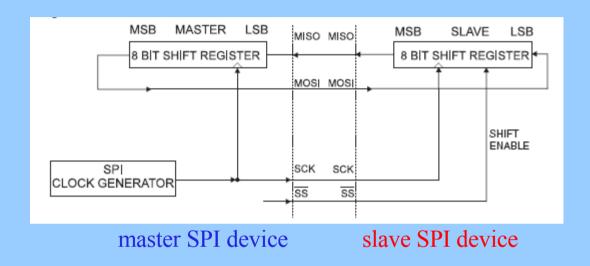

Data is shifted out of the master's (mega128) MOSI pin and in its MISO pin

Data transfer is initiated by simply writing data to the SPI data register.

All data movement is coordinated by SCK.

Slave select may or may not be used depending on interfacing device.

To get input data only you send "junk" data to SPDR to start the clock.


Slave Select... use it carefully!

In master mode:

- -SPI interface has no control of SS n
- -User software has full control of SS_n (Port B, bit 0)
- -If configured as output, it's a general purpose output
- -If configured as input, it must be held high, else you will enter slave mode


We will use SPI in master mode, full duplex

SPI Control Register (SPCR)

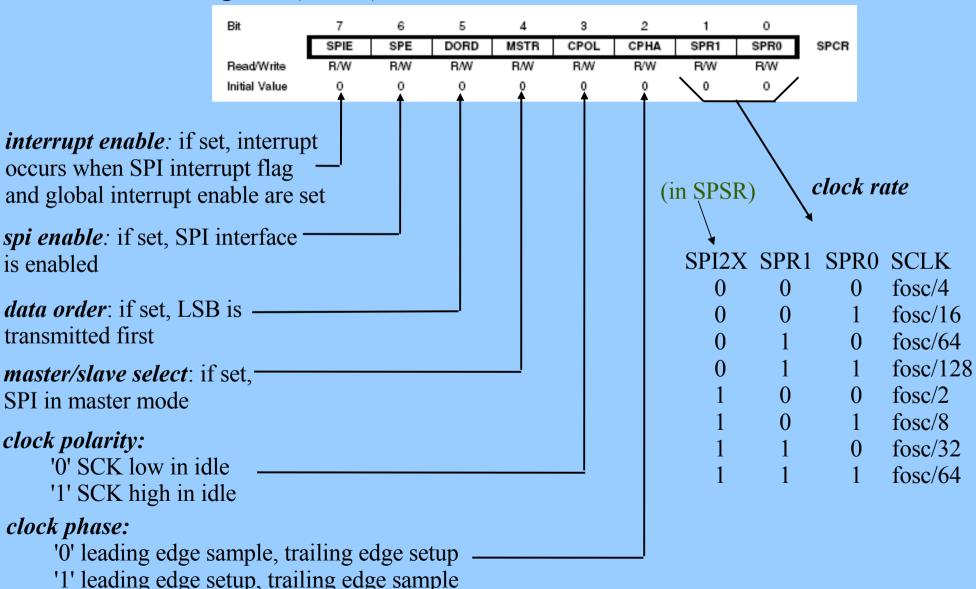


SPI Status Register (SPSR)

transfer is complete

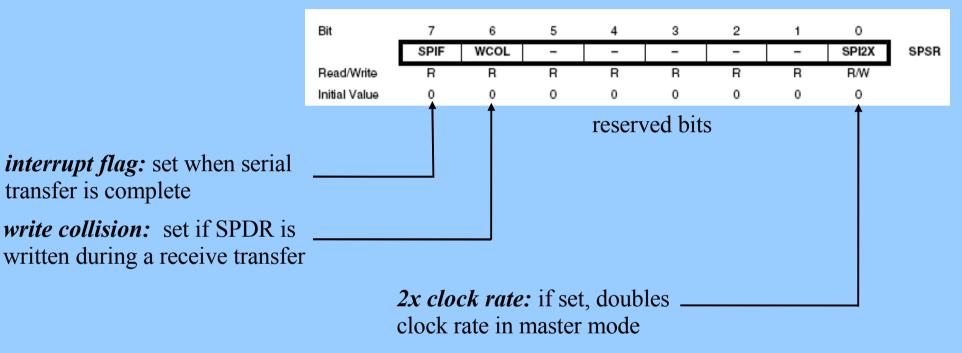


SPI Data Register (SPDR)

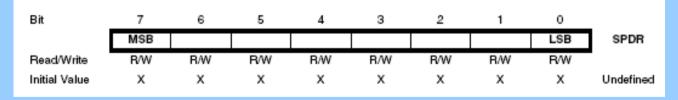

SPDR is a read/write register used for data transfer. Writing SPDR sends data out MOSI. Reading SPDR gets the data that was clocked into MISO.


Mega128 LCD interface

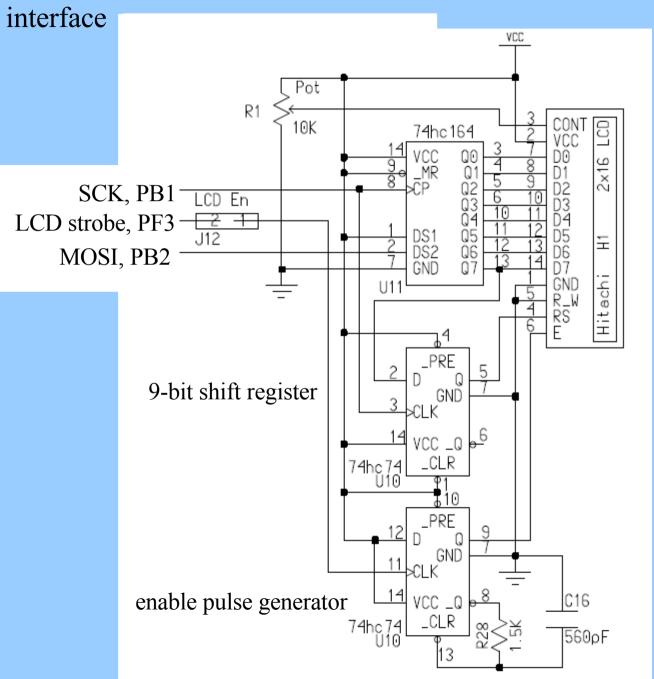



SPI Application - Code


```
spi init
//Initializes the SPI port on the mega128. Does not do any further
//external device specific initializations.
void spi init(void){
 DDRB = DDRB | 0 \times 07;
                         //Turn on SS, MOSI, SCLK (SS is output)
 SPCR |= (1<<SPEN) | (1<<MSTR); //spi enabled, master, low polarity, msb 1st
 SPSR |= (1<<SPI2X);
                         //run at i/o clock div 2
}//spi init
spi send
//Sends command and data to the SPI port. SPI device chip select is
//active low and is connected to port F bit 2. Total of 16 bits are sent.
//One byte for control and one byte as data passed in.
void spi send(uint8 t data) {
                             //port F bit 2, assert active low
 PORTF &= 0xFB;
 SPDR = 0 \times 13;
                             //send command byte (fixed value)
 while (bit is clear(SPSR, SPIF)) {}
                             //wait till data is sent out
                             //send data byte
 SPDR = data:
 while (bit is clear(SPSR, SPIF)) {} //wait till data is sent out
 PORTF = 0 \times 04;
                             //port F bit 2, deassert to logic high
} //spi send
```

Typical SPI IC (MCP42010)

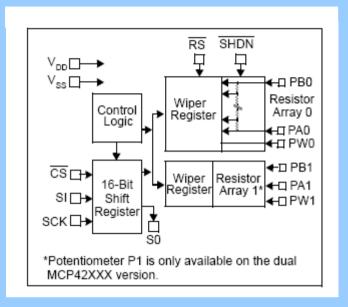


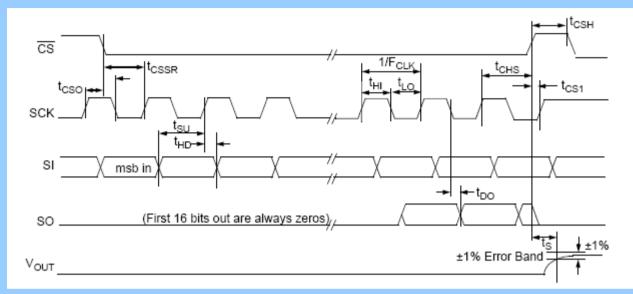

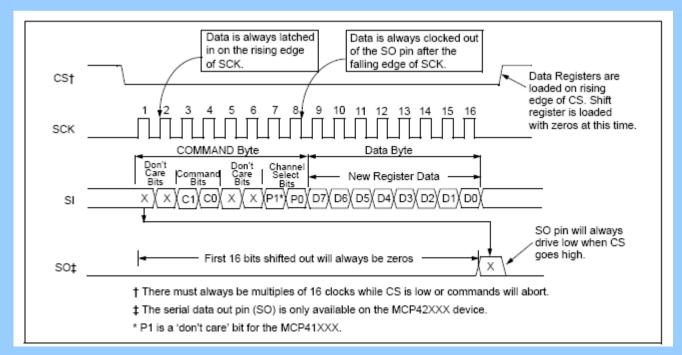

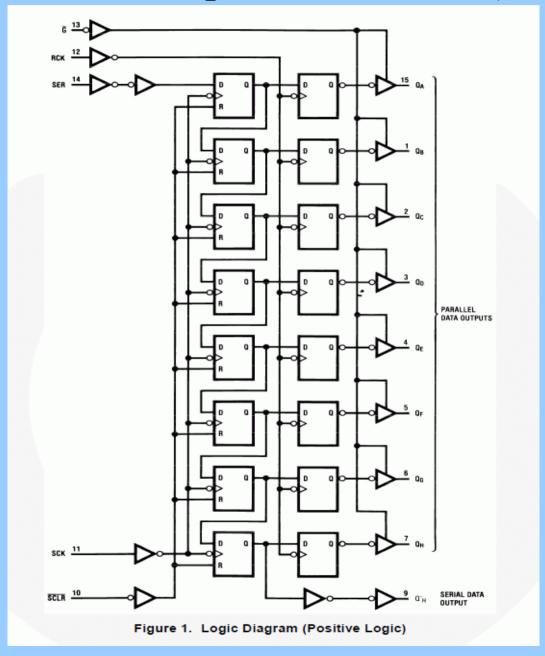

74HC595 – A perfectly fine SPI peripheral

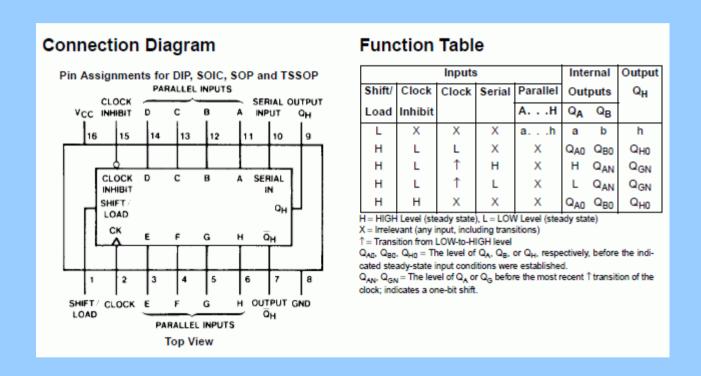

74HC165 – Another fine SPI peripheral

SPI "Gotchas"

"Now my board won't program."

SPI shares SCK with programming interface. If it won't program anymore, you likely messed up SCK.

"SPI acts totally wierd."

Often a symptom of SS_n being configured as an input and being left to float or allowed to go high. SPI goes in and out between slave and master modes.

"I never get data to the SPI device."

Is clock correctly oriented? Did you assert the device chip select? (hint: put SPI write inside a "tight" loop and check with scope. Watch SCK, data, and chip select)

"SPI device interactions:" When programming, the programmer first does a chip reset. When the mega128 resets, all pins are set to input with high impedance (floating). If a SPI device is on the SPI bus, it's chip-select may float low and enable the device, and SPI data will crash the programming data. Adding a pull-up resistor to chip selects will solve this problem.