


The БК-0011М on a PC keyboard — BK Nano

in red, the PC key that gives the БК key (on the digit row, its upper symbol); the letters are the Latin letters printed on them

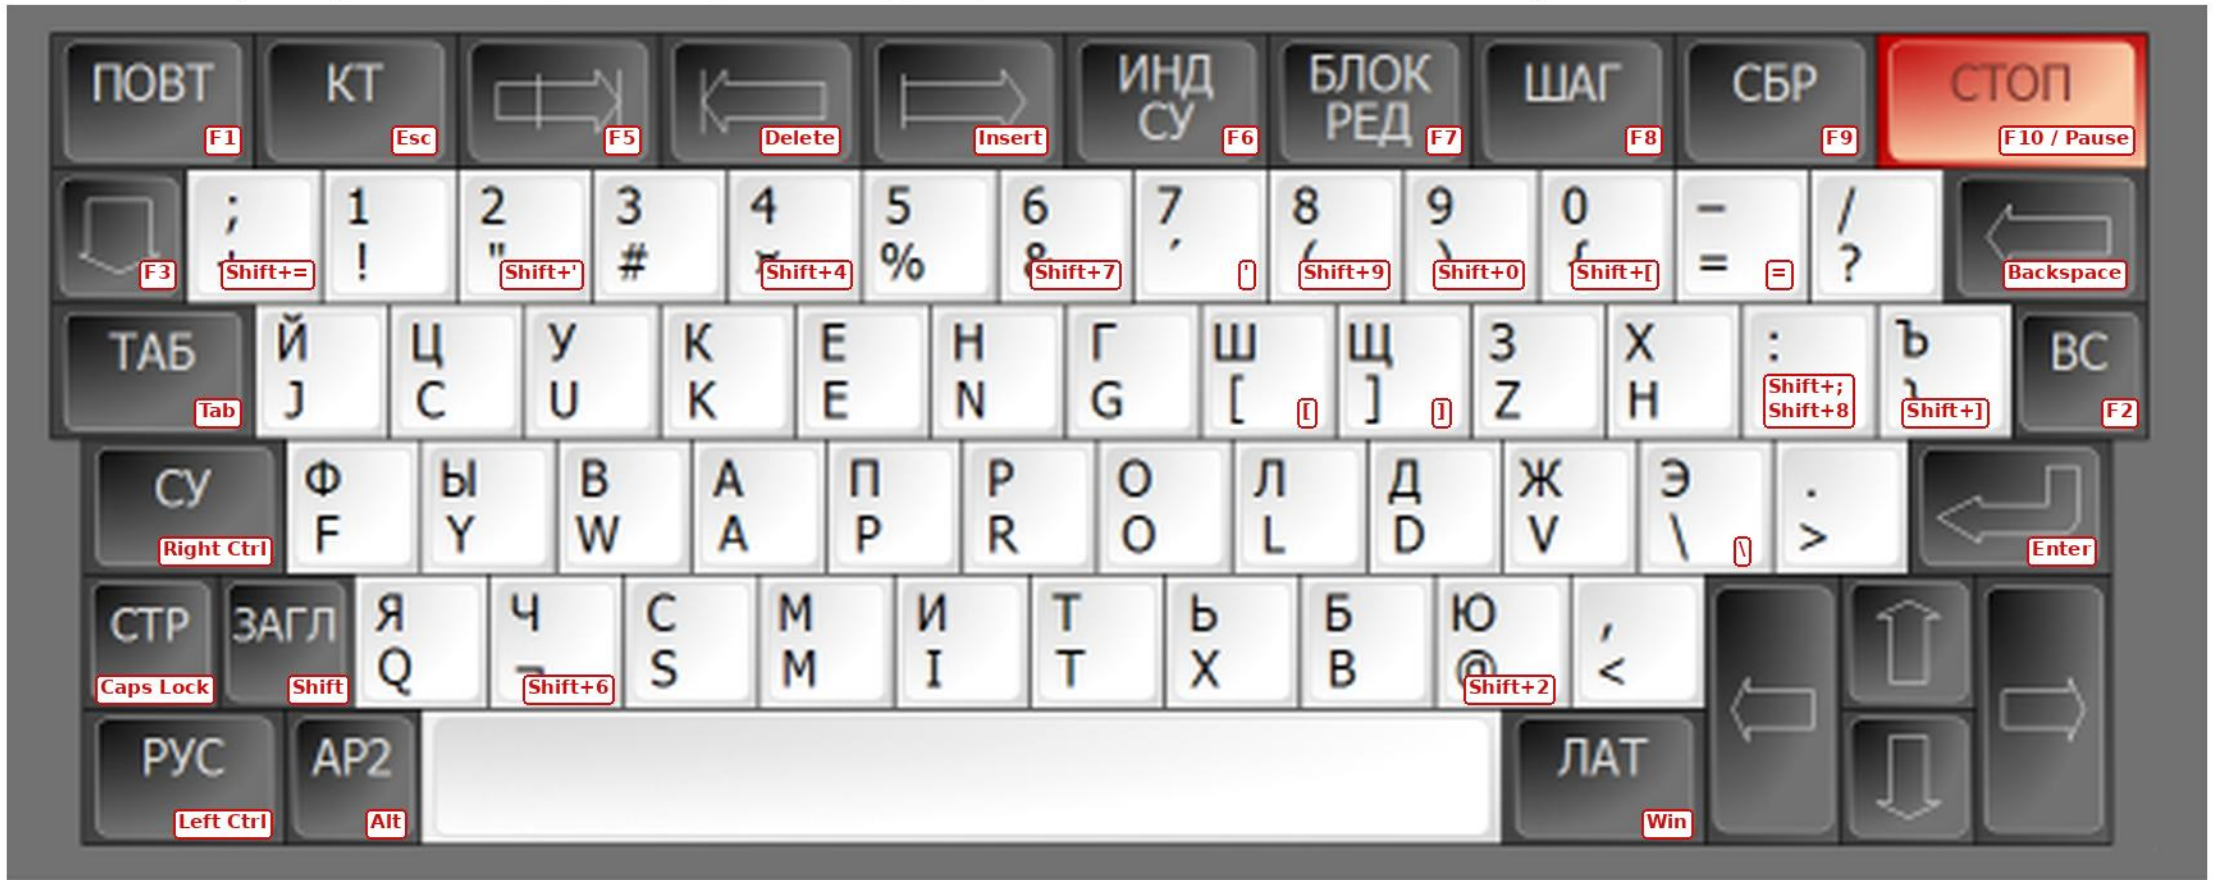

Modes

РУС (Cyrillic) — Left Ctrl, ЛАТ (Latin) — Win, CTP (letter case) — Caps Lock, ЗАГЛ — Shift, СУ (control) — Right Ctrl, AP2 — Alt. Letters are typed on the keys with the same Latin letters (Й = J, Ц = C, У = U, К = K ...): Cyrillic in РУС, Latin in ЛАТ.

Six letters on symbol keys

in РУС: Ш — [, Щ —], Э — \, Ч — Shift+6, Ю — Shift+2, Ъ — Shift+]. In ЛАТ the same keys give [] \ ^ @ }.

Symbols

by their PC keys (US layout), not by their place on the БК: & — Shift+7, (— Shift+9,) — Shift+0, " — Shift+', ' — ', + — Shift+=, = — =, { — Shift+[, : — Shift+;, * — Shift+8, ¤ — Shift+4 (\$). The rest are where the БК has them.

Function keys

F1 ПОВТ (repeat), F2 ВС (line feed), F3 ГРАФ, F5 -!->, F6 ИНД СУ, F7 БЛОК РЕД, F8 ШАГ (step), F9 СБР (clear), F10 or Pause — СТОП (halt), F11 — machine reset (cold, through AZBOOT), F12 — the menu.

Also

Enter — ВВОД, Shift+Enter — УСТ ТАБ, Tab — ТАБ, Shift+Tab — СБР ТАБ, Backspace — ЗАБОЙ, Esc — КТ, Insert — |-->, Delete — |<--, the arrows — the arrows, Home / PgUp / End / PgDn — the diagonal arrows. The keypad — digits and symbols.

The AZBK controller's hotkeys

Alt+Win (AP2+ЛАТ) — the БК's screen as its monochrome output shows it (512 pixels) or as its colour one does (256); Alt+Left Ctrl (AP2+РУС) — the palettes back.

The menu (F12)

arrows move, left/right step a value, Space or Enter selects, Esc closes. In it: the disk images AZ0-AZ3, reset, 4/8 MHz, joystick, volume, debug, save settings.