






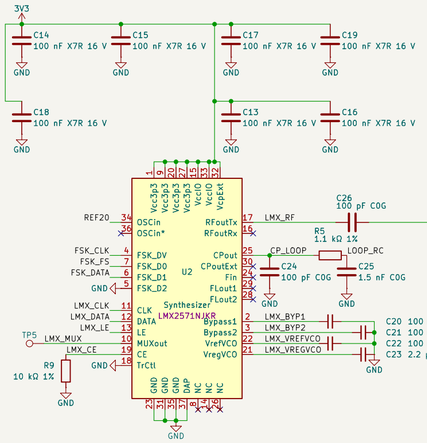


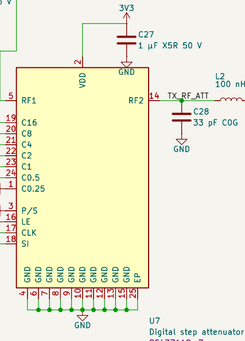




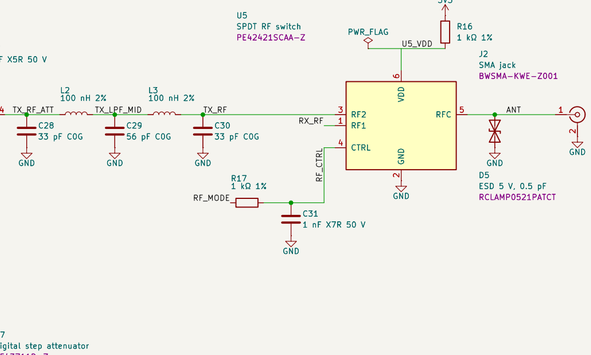

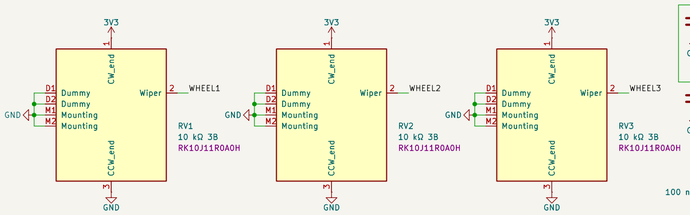


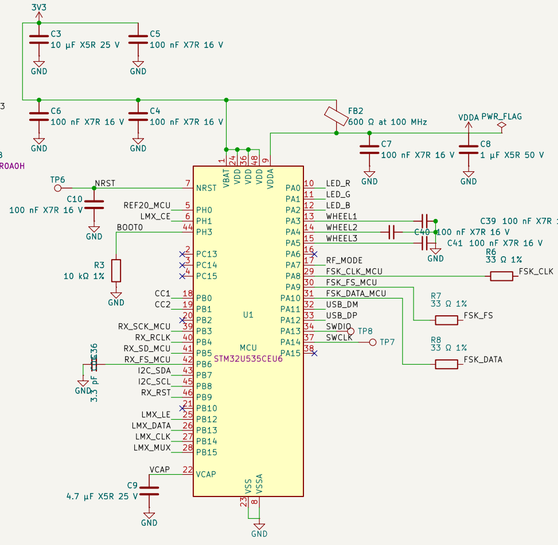





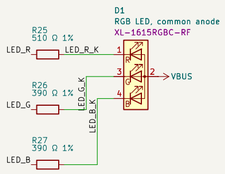





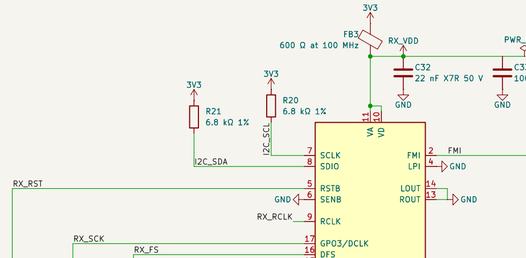

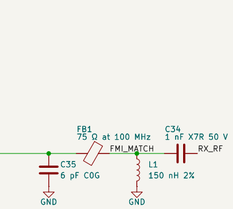

LAYOUT NOTES
1. Decoupling: put each bypass capacitor right at the supply pin it serves, with its ground pad straight into the ground fill [BAC p3].
2. U2 (LMX2571): keep the I2S/FSK clock and every other switching line away from the loop filter (C24, R5, C25) and from OSCin, pin 34 (rule R8) [LMX2571 p55].
3. U4 (SI4705): ground pads of the FMI shunt parts (C35, L1) and the GPO caps (C37, C38) go straight into the top ground fill, with no thermal reliefs and an unbroken top-ground path to system ground [AN383 p17].

MOUNTING HOLES: M2, 2.2 mm unplated. Board positions from the top-left corner: H1 (13, 7), H2 (33, 7), H3 (41, 57), H4 (8, 66) mm

H1 M2 H2 M2 H3 M2 H4 M2

Source of truth: design/rev-a/netlist.json
MagSafe FM transmitter/receiver for iPhone 17 Pro, USB-C audio
louisflakes

Sheet: /
File: IphoneFM.kicad_sch

Title: IphoneFM

Size: A2	Date: 2026-10-21	**Rev: A**
KiCad E.D.A. 10.0.7		Id: 1/1