OPERATING INSTRUCTIONS

Perform the required function, the screen will then show "diagnosis" when this message goes the program is complete and your new item can be found in the menu. (except "Video In Motion")

"Video In Motion"

Press and hold "return" button for three seconds to activate, Repeat to deactivate



AUX Audio

To activate press and hold **OK + DOWN** for 6 seconds

To de-activate press and hold **RETURN + DOWN** for 6 seconds



AUX Video*

To activate press and hold **OK + LEFT** for 6 seconds

To de-activate press and hold **RETURN + LEFT** for 6 seconds



Rear Camera*

To activate press and hold **OK + RIGHT** for 6 seconds

To de-activate press and hold **RETURN + RIGHT** for 6 seconds

*It is not possible to program both AUX Video and Rear Camera.





MERAV-W204-M

A/V INPUT / REAR CAMERA /
VIDEO IN MOTION

MERCEDES C Class W204 (MITSUBISHI)

With / Without TV Tuner

NAV TV (Europe) LTD



NAV TV (Europe) LTD

Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47

technical@nav.tv



NAV TV (Europe) Ltd is not liable for any incidental, consequential or indirect damages. In case of erratic behavior of the vehicle's electrical system please disconnect the NAV TV product and contact our technical support Team. NAV TV (Europe) Ltd does not assume liability for any diagnostic fees.

e11*72/245*2004/104*4020*00 RoHS 2002/95/EC—2002/96/EC

LOCATION & REMOVAL

Installation is made at the front unit.

First remove the A/C vent by inserting a trim tool at the bottom and at the top behind the Rubber pads (1).

Next pull out and unplug the A/C vent (2).

Locate the two screws at the top of the Radio unit and remove (3).

Lastly slide the Radio locking pins upwards to release the Radio unit (4)










INSTALLATION

Remove the "Quadlock" connector (5) from the unit and plug it into the supplied harness, plug the supplied harness into the unit. Some additional plugs will need to be transferred to the supplied loom from the male factory connector e.g. the fibre optic plug and white plug (shown below with white arrows)

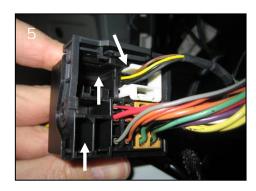





INSTALLATION

Next plug in the supplied Fakra cable into the **Green** socket, circled green opposite, for Video or camera input.

Plug in the supplied **Blue** 18 way harness into the **Blue** socket, circled blue opposite, for Audio input.

Connect the *W204-M*Interface to the 8 way plug of the "Quadlock" harness matching;





The following additional **outputs** are added *(do not exceed 500mA max)*



12v+ VIM MODE



12V+ ACC OUT



BLACK = 12V- GROUND



RED = 12V+ PERMANENT

Before the "programming" step in **OPERATING INSTRUCTIONS**, after installation is complete remove the key for 30 seconds before re-entering and turning to full ignition position. (not engine started)