

# **AV1PRI**

A/V INPUT

**TOYOTA PRIUS 2005>** 

Without TV Tuner and with or without **DVD Changer** 

NAV TV (Europe) LTD



# NAV TV (Europe) LTD

Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47

technical@nav.tv

# **LOCATION & REMOVAL**

Installation is made at the front screen and head unit.

To remove the front unit you need to first un-screw the gear knob, then remove the two air vent trims from either side of the radio. (trim clips only) The driver side air vent trim will require you to also remove the driver side dash-top. (also trim clips only).

You can then access two bolts holding the screen.




Once removed you may disconnect all plugs and remove the unit completely.

To remove the radio unit you will need to remove two screws holding the pocket below.

You can then remove two bolts above and two bolts below holding the radio.

Once removed you may disconnect all plugs and remove the unit completely.

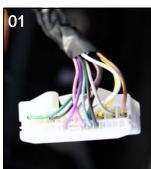



# INSTALLATION

### Video Input

The Video input is inserted at the **White 6 way plug** located on the screen unit. The pins are inserted as follows:

Video signal -pin 3
Video shield -pin 6

### PICTURES SHOWN ARE WIRE SIDE OF PLUG

#### Audio Input

The Audio input is inserted at the *White 12 way plug* located in the centre of the radio unit (labelled as **02** opposite) The pins are inserted as follows;

Left signal -pin 2
Left ground -pin 3
Right signal -pin 4
Right ground -pin 5



# PICTURES SHOWN ARE WIRE SIDE OF PLUG

# AV1PRI Interface FOR 2005 –2007

The AV1PRI interface is connected at the White screen plug (labelled as 01 opposite)

The connections are as follows;

RED	to	12v Acc (PIN 2 GREY)
BLACK	to	12v- Ground (PIN 1 BROWN)
BLUE	to	BLACK (PIN 4)
BLUE/WHITE	to	WHITE (PIN 5)

# **OPERATING INSTRUCTIONS**

### AV1PRI Interface FOR 2007 ON

The AV1PRI interface is connected at the White 12 way plug (labelled as 02 opposite)(same as audio)

The connections are as follows;

RED to 12v Acc
BLACK to 12v- Ground
BLUE to PINK (PIN 15)
BLUE/WHITE to ORANGE (PIN 5)



With the interface installed you will now have an additional source in the menu via the "MODE" or "DISC-AUX" button. The source name you have added can be chosen using the 'dip switches' inside the interface. Settings are as follows.

### Note;

You cannot add a source that it already fitted to the vehicle.

1	2	3	4	Mode added
On	On	On	Off	DVD Changer
Off	On	On	Off	DVD Player
On	Off	On	Off	NAVIGATION