



Parts Book

AR50750 2026/09/16

1004-42

- Catalogue des pièces de rechange
- Ersatzteilliste
- Catalogo parti di ricambio
- Catálogo de repuestos



The information given within this parts book was correct at the time of printing and is subject to change without notice. Always refer to your local Perkins outlet for the latest information. Only fully trained personnel should carry out servicing of engines. Before working on any engine always refer to the correct user service and maintenance manual.

Always refer to your local Perkins outlet before purchasing any parts.

Subject to any existing rights of third parties, the information given in this document is the property of Perkins Engines Limited and should not be copied, in whole or part, without the prior written consent of the Company.

Contents

Perkins Platinum Protection 4

Introduction 5

How to use your Parts Book 5

Engine Breakdown 6

Symbols and Notes 9

Perkins Platinum Protection

Perkins Platinum Protection is the best value cover for Perkins engines. Available to purchase in flexible packages.

What benefits will I receive?

- Unbeatable value for money, with absolutely no excess to pay
- Our global network of fully trained professional Perkins technicians will ensure that you always receive a trustworthy and reliable service
- The same cover as your standard warranty - we won't charge for parts, labour, or travel when we repair your engine (subject to Terms and Conditions)

Upgrade to Perkins Platinum Protection before your standard warranty expires:

- Comprehensive cover for up to 100 percent of components*
- Flexible packages from two to five years
- Support from Perkins global network of fully trained technicians
- We will provide electrical updates at the same time as your engine repairs should you need this, in the event of a claim
- No unexpected charges in getting your engine back up and running
- Talk to your local Perkins distributor today, or visit www.perkins.com/platinumprotection for more information.

* Terms and Conditions apply

Introduction

The build list of your engine, found on the front page of this parts book, provides a unique reference to the components fitted to your engine; therefore this parts book is only applicable to this particular engine

Always quote your build list and engine serial number when contacting your Perkins outlet.

How to use your Parts Book

This parts book has been designed to provide you with all the information you need to identify parts to service your engine. There are several features within the book to make it easy to find the parts you require

Front Page

This lists your build list number and the date of publication of this book.

Symbol Descriptions

Provides a quick reference guide to the symbols used within the book.

Engine Breakdown

Use this to identify all the major sections of your engine and the relevant pages within the book.

Parts Lists & Illustrations

This section shows each major section of your engine broken down into individual part numbers along with an associated illustration for identifying the parts you require.

The illustrations used in this parts book are representational only and should only be used for identification purposes.

For fitting instructions please refer to your engine Service Manual.

Parts Index

Using either the part number or description of the part you require this section will help you locate the page within the **Parts Lists & Illustrations** section where the part appears.

Engine Breakdown

Section	Page
Engine Overhaul Kit	
ACKA2012.....	10
Engine Overhaul Kit - Oversize	
ACKA2012.....	12
Thrust Washer Kit	
ACKA2012.....	14
Valve Train Kit	
ACKA2012.....	18
Long Engine	
ACEA8121.....	20
Short Engine	
ACEA8121.....	22
Cylinder Block	
ACHA0723.....	24
Crankshaft, Pistons & Connecting Rods	
ACHA0723.....	28
Crankshaft, Pistons & Connecting Rods	
ACHA0723.....	34
Cylinder Head	
ACHA0723.....	36
Rocker Shaft	
ACHA0723.....	38
Timing Gear & Camshaft	
ACHA0723.....	42
Lubricating Oil Pump & Delivery Housing	
ACHA0723.....	46
Fuel Injection Equipment (Diesel)	
AFH03826	50
Fan Drive	
FBH00001	54
Lubricating Oil Sump	
GBH02112.....	56
Lubricating Oil Sump	
GBH02112.....	60
Lubricating Oil Sump	
GBH02112.....	62
Lubricating Oil Sump	
GBH02112.....	64
Cylinder Head Cover	

HBH02506	66
Cylinder Head Cover	
HBH02506	68
Breather	
HBH02506	70
Blanking Plates	
HBH02506	72
Blanking Plates	
HBH02506	74
Oil Cooler	
JBH02123	76
Oil Cooler Connections	
JBH02123	78
Oil Filter	
JBH02123	80
Blanking Plates	
JBH02123	82
Front End Drive Input	
KBH00535	84
Water Pump, Thermostat & Heat Exchanger	
LBH02150	86
Water Pump, Thermostat & Heat Exchanger	
LBH02150	90
Water Outlet & Inlet	
LDH00599	92
Water Outlet & Inlet	
LDH00599	94
Alternator & Generator	
NDH01553	96
Gear Drive Auxiliary Drive Option	
QDH01204	98
Gear Drive Auxiliary Drive Option	
QDH01204	100
Air Cleaner & Restriction Indicator	
TDH00293	102
Low Pressure Fuel System	
VBH01906	104
Low Pressure Fuel System	
VBH01906	106
Low Pressure Fuel System	
VBH01906	108
Lift Pump	
VBH02152	112

Fuel Filter	
VBH02152	114
Lift Pump to Filter Pipe	
VBH02152	116
Filter to Injection Pump Pipe	
VBH02152	118
Injection Pump to Filter Pipe	
VBH02152	120
Leak Off Rail to Fuel Filter Pipe	
VBH02152	122
Engine Lifting	
XBH00430	124
Mountings (Front & Rear)	
ZCH00684	126
Heater and Starter Switch	
ZEH00377	128
Lub. Oil Pressure Switch & Gauge	
ZJH00189	130
Temperature Gauge & Sender	
ZLH00008	132
Radiator & Cowling	
ZMH00006	134
Fuel Pre-Lift Pump	
ZVH00003	136
Application Miscellaneous & Auxiliaries	
ZZH00784	138
Joints & Gaskets - Top Service Kit	
SACA0161	140
Bottom Service Kit	
SGBA1327	142

Symbols and Notes

Symbol	Description
	From Engine Number
	Upto Engine Number
	Repairs and Replaces
	See Appropriate Section - Reference Number
	Alternative
	Order
	Remanufactured Part
	New for Old Part
	Number of Teeth
	Thickness
	Bottom
	Top
	Left Hand
	Right Hand
	Reference for Detailed Breakdown
	Other Service Options Available
	Cylinder Number
	See History Section

Engine Overhaul Kit	Plate A
	ACKA2012

1

Engine Overhaul Kit
 Kit de Revision Moteur
 Überholungssatz
 Kit Revisione Motore
 Juego de Reparacion de Motor

7

Engine Overhaul Kit
 Kit de Revision Moteur
 Überholungssatz
 Kit Revisione Motore
 Juego de Reparacion de Motor

Engine Overhaul Kit	Plate A
	ACKA2012

Item	Part No.	References	Qty.	Description	Notes
1	U5MK0812	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	ENGINE OVERHAUL KIT	(1) (2) (3) (4)
2	U4181A045	Ⓢ	4	PISTON RING KIT	
3	33221328		8	CON ROD NUT	
4	U5LT0317		1	GASKET KIT - TOP	
5	U5MK0600		1	GASKET KIT	
6	3681K005		1	GASKET - SUMP	
7	U5MK0813	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	ENGINE OVERHAUL KIT	(5) (3) (1) (4)
8	U5LP0058	Ⓢ	4	PISTON KIT	
9	U4181A045	Ⓢ	4	PISTON RING KIT	
10	33221328		8	CON ROD NUT	
11	U5LT0317		1	GASKET KIT - TOP	
12	U5LB1171		1	GASKET KIT - BOTTOM	
13	2418F436	↔	1	SEAL - FRONT END OIL	
14	2418F475		1	SEAL - REAR END OIL	
15	3681K005		1	GASKET - SUMP	
16	21826411		1	GASKET - TIMING CASE COVER	
Service Options					
2	U4181A046	$\frac{+}{-}$ (+0.5MM)	4	PISTON RING KIT	
2	U4181A047	$\frac{+}{-}$ (+1.0MM)	4	PISTON RING KIT	
8	U5LP0058D	$\frac{+}{-}$ (+1.0MM)	4	PISTON KIT - OVERSIZE	
8	U5LP0058B	$\frac{+}{-}$ (0.5MM)	4	PISTON KIT - OVERSIZE	
9	U4181A046	$\frac{+}{-}$ (+0.5MM)	4	PISTON RING KIT	
9	U4181A047	$\frac{+}{-}$ (+1.0MM)	4	PISTON RING KIT	

Footnotes	
(1)	SERVICE OPTIONS ARE AVAILABLE AND MAY BE REQUIRED FOR YOUR SPECIFICATION, BUT ARE NOT CONTAINED WITHIN THIS OVERHAUL KIT
(2)	RE - RING
(3)	FOR ENGINES POST U176357H CHANGE REOS BY REMOVING 2418F475 AND REPLACING WITH 2418F701
(4)	OVERSIZE OVERHAUL KITS ARE ALSO AVAILABLE
(5)	RE - PISTON AND RINGS

1

Engine Overhaul Kit - Oversize

Kit de Revision Moteur - Majore

Überholungssatz - Übergrosse

Kit Revisione Motore - Maggiorato

Juego de Reparacion de Motor - Descomunal

11

Engine Overhaul Kit - Oversize

Kit de Revision Moteur - Majore

Überholungssatz - Übergrosse

Kit Revisione Motore - Maggiorato

Juego de Reparacion de Motor - Descomunal

Engine Overhaul Kit - Oversize	Plate A
	ACKA2012

Item	Part No.	References	Qty.	Description	Notes
1	U5MK0814	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	ENGINE OVERHAUL KIT	(1) (2) (3)
2	U5LP0058B	$\frac{+}{-}$ (0.5MM)	4	PISTON KIT - OVERSIZE	
3	U4181A046	$\frac{+}{-}$ (+0.5MM)	4	PISTON RING KIT	
4	33221328		8	CON ROD NUT	
5	U5LT0317		1	GASKET KIT - TOP	
6	U5LB1171		1	GASKET KIT - BOTTOM	
7	2418F436		1	SEAL - FRONT END OIL	
8	2418F475		1	SEAL - REAR END OIL	
9	3681K005		1	GASKET - SUMP	
10	21826411		1	GASKET - TIMING CASE COVER	
11	U5MK0815	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	ENGINE OVERHAUL KIT	(2) (3) (1)
12	U5LP0058D	$\frac{+}{-}$ (+1.0MM)	4	PISTON KIT - OVERSIZE	
13	U4181A047	$\frac{+}{-}$ (+1.0MM)	4	PISTON RING KIT	
14	33221328		8	CON ROD NUT	
15	U5LT0317		1	GASKET KIT - TOP	
16	U5LB1171		1	GASKET KIT - BOTTOM	
17	2418F436		1	SEAL - FRONT END OIL	
18	2418F475		1	SEAL - REAR END OIL	
19	3681K005		1	GASKET - SUMP	
20	21826411		1	GASKET - TIMING CASE COVER	

Footnotes	
(1)	STANDARD SIZE OVERHAUL KITS ARE ALSO AVAILABLE
(2)	RE-PISTON AND RING KIT
(3)	FOR ENGINES POST U176357H CHANGE REOS BY REMOVING 2418F475 AND REPLACING WITH 2418F701

Thrust Washer Kit	Plate A
	ACKA2012

1

Thrust Washer Kit

Jeu de Rondelles de Poussee

Anlaufschwibensatz

Kit Rasamenti

Juego de Arandela de Empuje

4

Oversize Thrust Washer Kit

Jeu de Rondelles de Poussee

Anlaufschwibensatz

Kit Rasamenti

Juego de Arandela de Empuje

9

Oversize Thrust Washer Kit

Jeu de Rondelles de Poussee

Anlaufschwibensatz

Kit Rasamenti


Juego de Arandela de Empuje

Thrust Washer Kit	Plate A
	ACKA2012

Item	Part No.	References	Qty.	Description	Notes
1	T427336	 a.	1	THRUST WASHER KIT	(1)
2	T422292	 a.	2	THRUST WASHER	
3	T422291	 a.	2	THRUST WASHER	
4	T427339	 a.	1	THRUST WASHER KIT - O/S	(2)
5	T422292	 a.	1	THRUST WASHER	
6	T422291	 a.	1	THRUST WASHER	
7	T422289	 a.	1	THRUST WASHER	
8	T422290	 a.	1	THRUST WASHER	
9	T427337	 a.	1	THRUST WASHER KIT - O/S	(3)
10	T422289		2	THRUST WASHER	
11	T422290		2	THRUST WASHER	
Service Options					
1	T427337		1	THRUST WASHER KIT - O/S	
1	T427339		1	THRUST WASHER KIT - O/S	
1	U5TW0002B		1	THRUST WASHER KIT - O/S	
2	T422289		2	THRUST WASHER	
2	31137312	$\frac{3}{4} (+)0.007"$	2	THRUST WASHER	
3	T422290		2	THRUST WASHER	
3	31137322	$\frac{3}{4} (+)0.007"$	2	THRUST WASHER	
5	T422289		1	THRUST WASHER	
5	31137312	$\frac{3}{4} (+)0.007"$	1	THRUST WASHER	
6	T422290		1	THRUST WASHER	
6	31137322	$\frac{3}{4} (+)0.007"$	1	THRUST WASHER	

History					
a.					
	31137312	$\frac{3}{4} (+)0.007"$	2	THRUST WASHER	
	31137322	$\frac{3}{4} (+)0.007"$	2	THRUST WASHER	
1	U5TW0002		1	THRUST WASHER KIT	(1)
2	31137551		2	THRUST WASHER	
3	31137561		2	THRUST WASHER	
4	U5TW0002A		1	THRUST WASHER KIT - O/S	(2)
5	31137551		1	THRUST WASHER	
6	31137561		1	THRUST WASHER	
7	31137312	$\frac{3}{4} (+)0.007"$	1	THRUST WASHER	


Thrust Washer Kit	Plate A
	ACKA2012

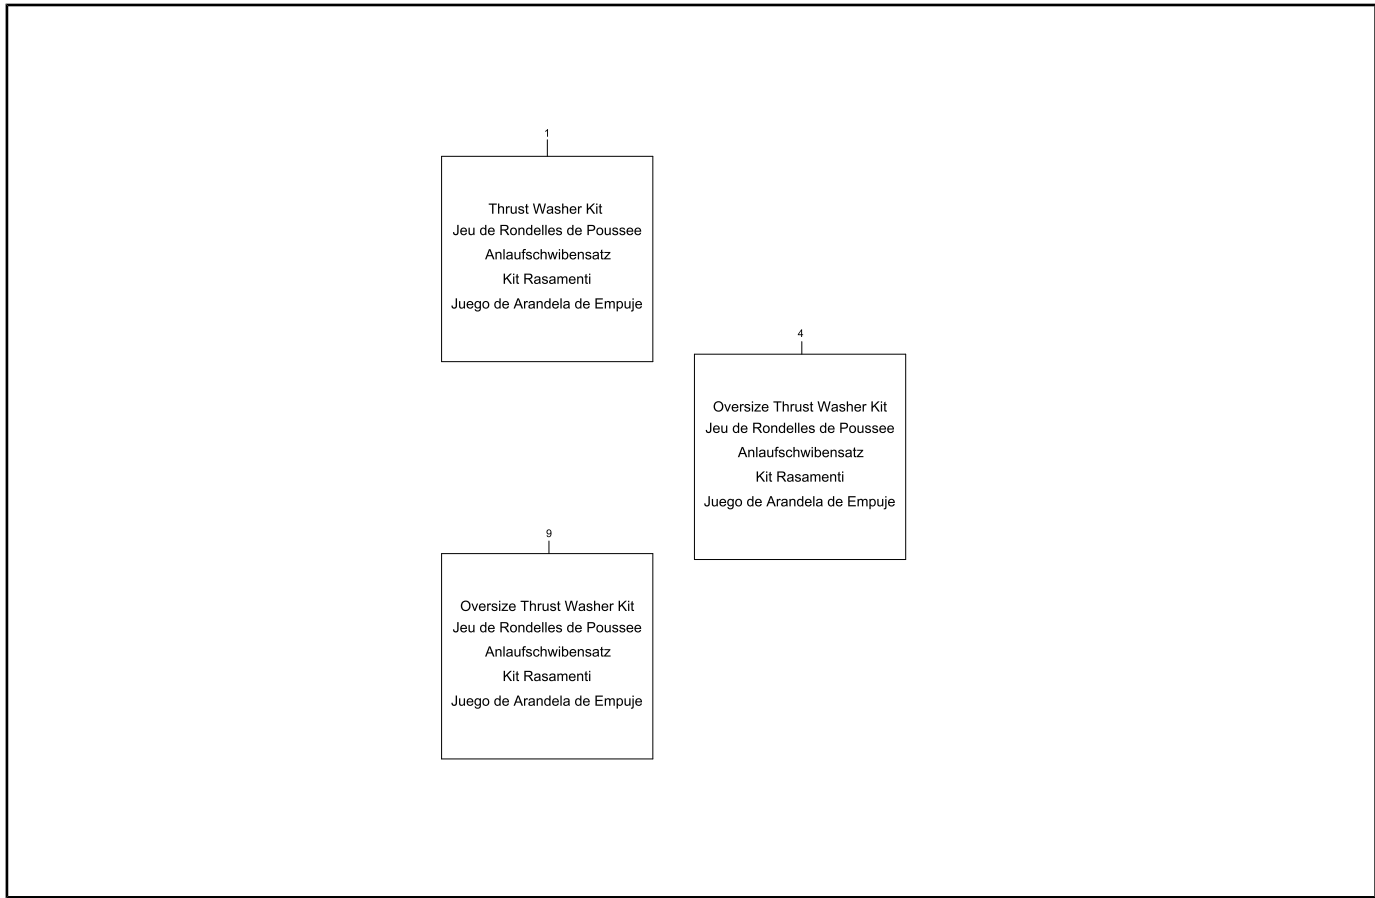

History				
8	31137322	$\frac{+}{-}$ (+)0.007"	1	THRUST WASHER
9	U5TW0002B		1	THRUST WASHER KIT - O/S (3)

Footnotes	
(1)	STANDARD
(2)	STANDARD / OVERSIZE
(3)	OVERSIZE

Valve Train Kit	Plate A
	ACKA2012

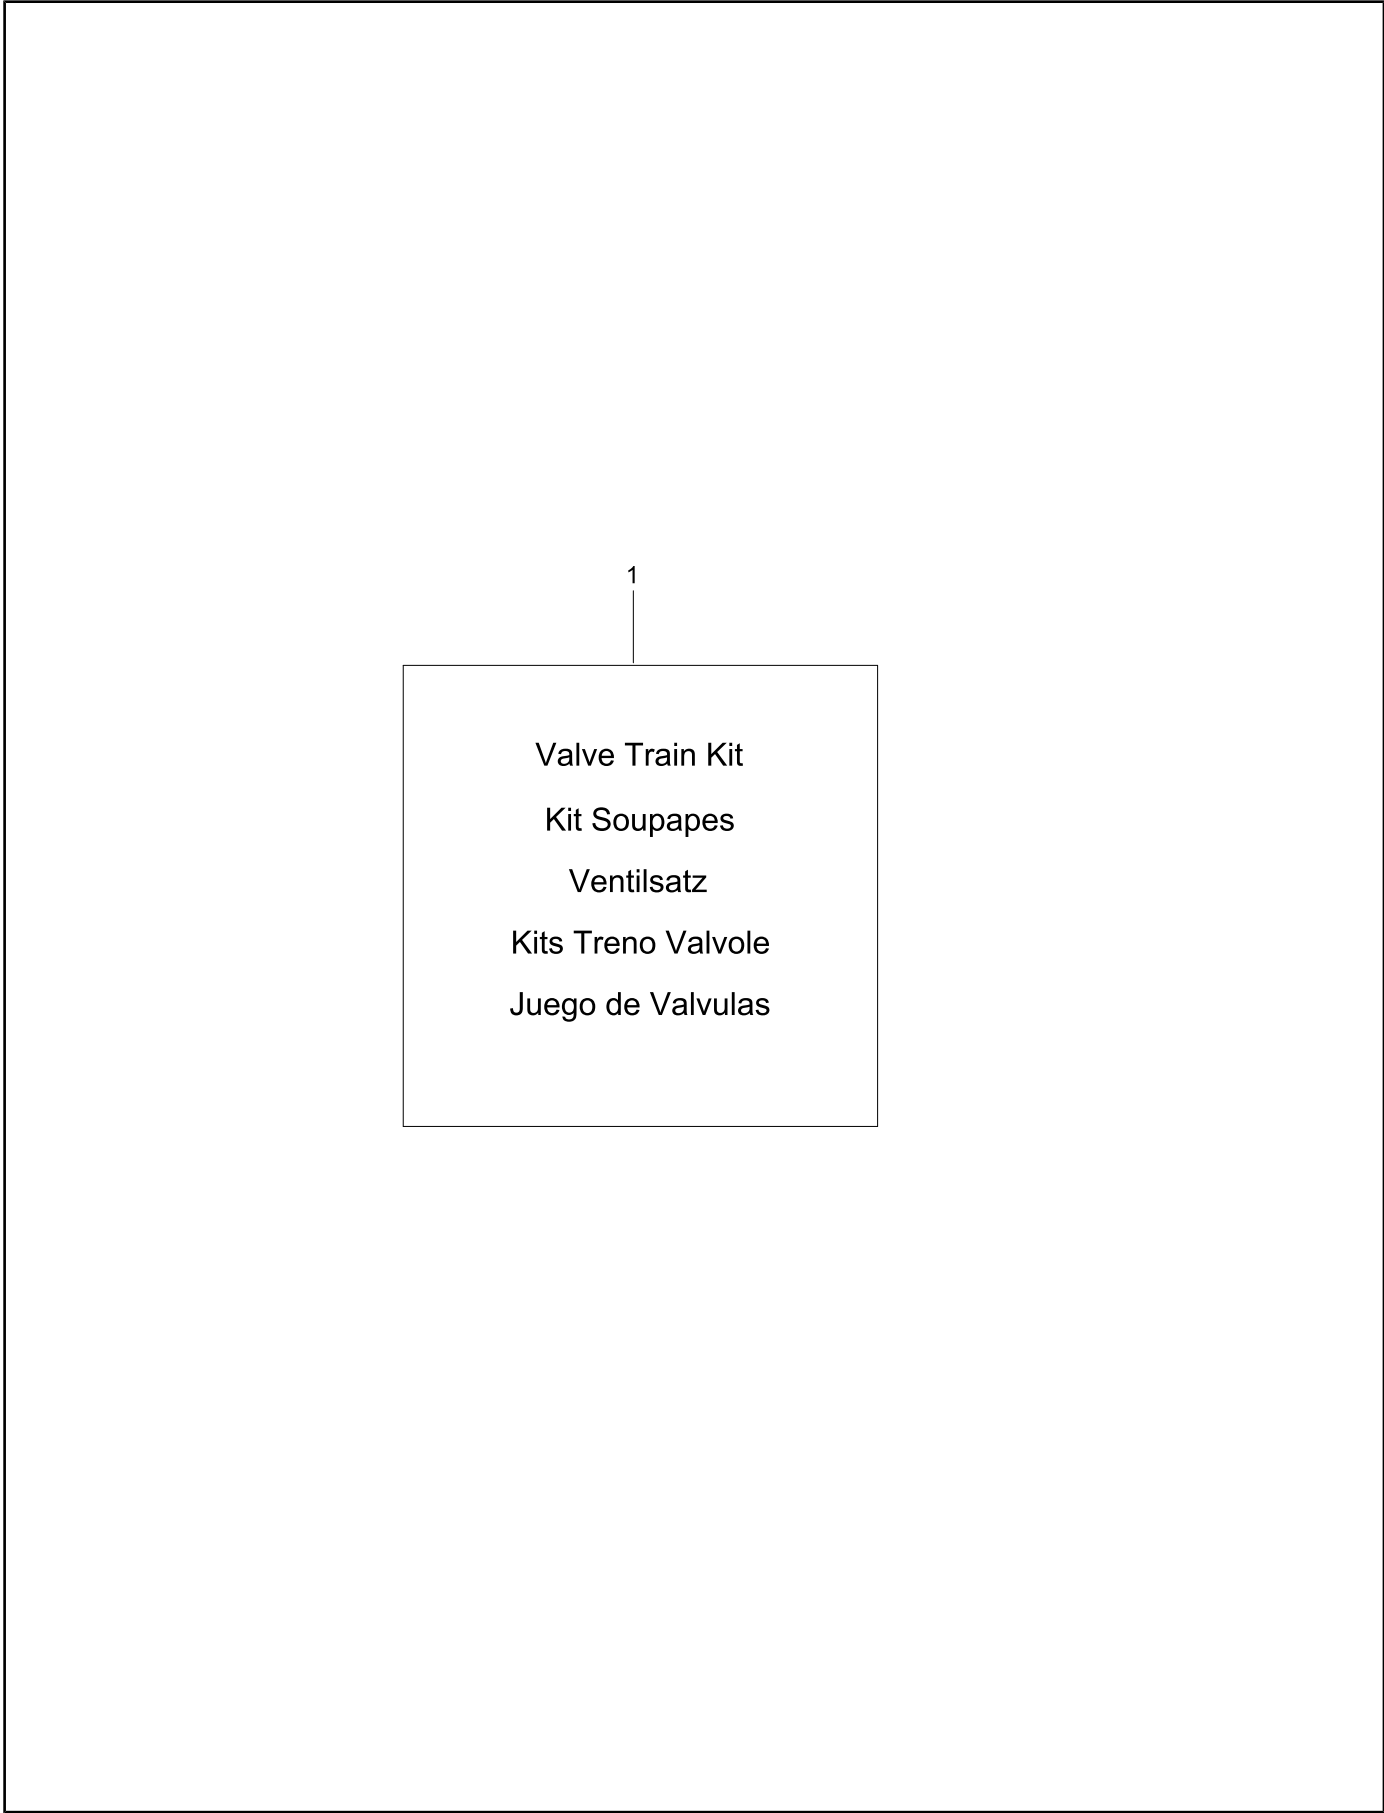

1

Valve Train Kit
Kit Soupapes
Ventilsatz
Kits Treno Valvole
Juego de Valvulas

Valve Train Kit	Plate A
	ACKA2012

Item	Part No.	References	Qty.	Description	Notes
1	U5VK0331		1	VALVETRAIN KIT	(1)
2	3142H041		4	INTAKE VALVE	
3	3313A012		4	VALVE GUIDE	(2)
4	3142D061		4	EXHAUST VALVE	
5	3318A705		4	VALVE GUIDE	
6	3174P412		8	VALVE SPRING	
7	3142W004		16	VALVE COLLET	

Footnotes	
(1)	ENGINE SET, 45 DEGREES
(2)	UNFINISHED


Long Engine	Plate A
	ACEA8121



Long Engine	Plate A
	ACEA8121


Item	Part No.	References	Qty.	Description	Notes
1	U5MK8121		1	LONG ENGINE - KIT	
2	AR39789		1	SHORT ENGINE - ASSEMBLY	
3	ZZ80255	↖	1	CYLINDER HEAD KIT	
4	3218J303		8	SCREW	
5	3218J606		8	SCREW	
6	3218J607		2	SCREW	
7	32166221		4	SCREW	
8	U5LT0317		1	GASKET KIT - TOP	
9	U5LB1171		1	GASKET KIT - BOTTOM	
10	21826404		1	GASKET - TIMING CASE COVER	
11	3681K005		1	GASKET - SUMP	
12	21826411		1	GASKET - TIMING CASE COVER	
13	2418F436	↖	1	SEAL - FRONT END OIL	
Service Options					
3	ZZ80255P		1	CYLINDER HEAD KIT - EXCH	

Short Engine	Plate A
	ACEA8121

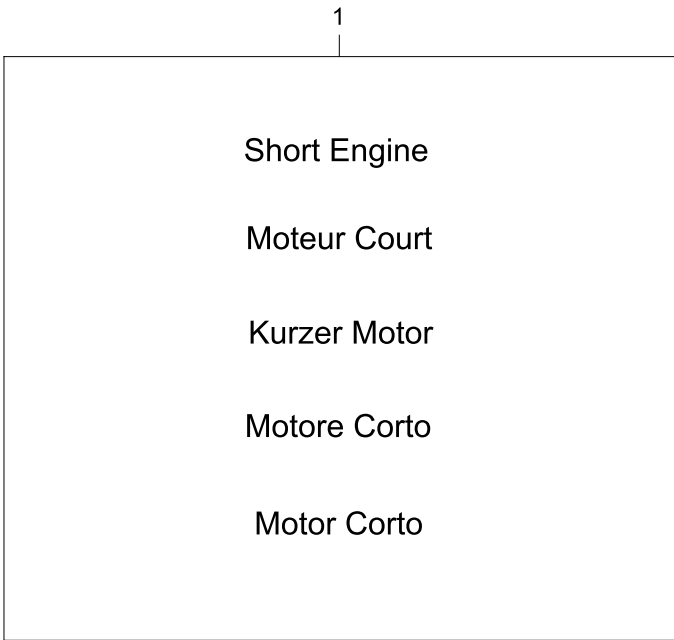

Short Engine	Plate A
	ACEA8121


Item	Part No.	References	Qty.	Description	Notes
1	AR39789		1	SHORT ENGINE - ASSEMBLY	
2	ZZ50314		1	CYLINDER BLOCK ASSEMBLY	
3	ZZ90226		1	CRANKSHAFT KIT	
4	U5LP0058		4	PISTON KIT	
5	U4181A045		4	PISTON RING KIT	
6			4	CON ROD ASSEMBLY	
7	2418F703		1	SEAL - REOS HOUSING	
Service Options					
2	ZZ50314P		1	CYLINDER BLOCK ASSEMBLY	
2	ZZ50314R		1	CYLINDER BLOCK ASSEMBLY	
4	U5LP0058D	 (+1.0MM)	4	PISTON KIT - OVERSIZE	
4	U5LP0058B	 (0.5MM)	4	PISTON KIT - OVERSIZE	
5	U4181A046	 (+0.5MM)	4	PISTON RING KIT	
5	U4181A047	 (+1.0MM)	4	PISTON RING KIT	
6	4115C311		4	CON ROD ASSEMBLY	RED GRADE F
6	4115C312		4	CON ROD ASSEMBLY	ORANGE GRADE G
6	4115C313		4	CON ROD ASSEMBLY	GRADE H WHITE
6	4115C315		4	CON ROD ASSEMBLY	PURPLE GRADE K
6	4115C316		4	CON ROD ASSEMBLY	GRADE L BLUE
6	4115C314		4	CON ROD ASSEMBLY	GREEN GRADE J

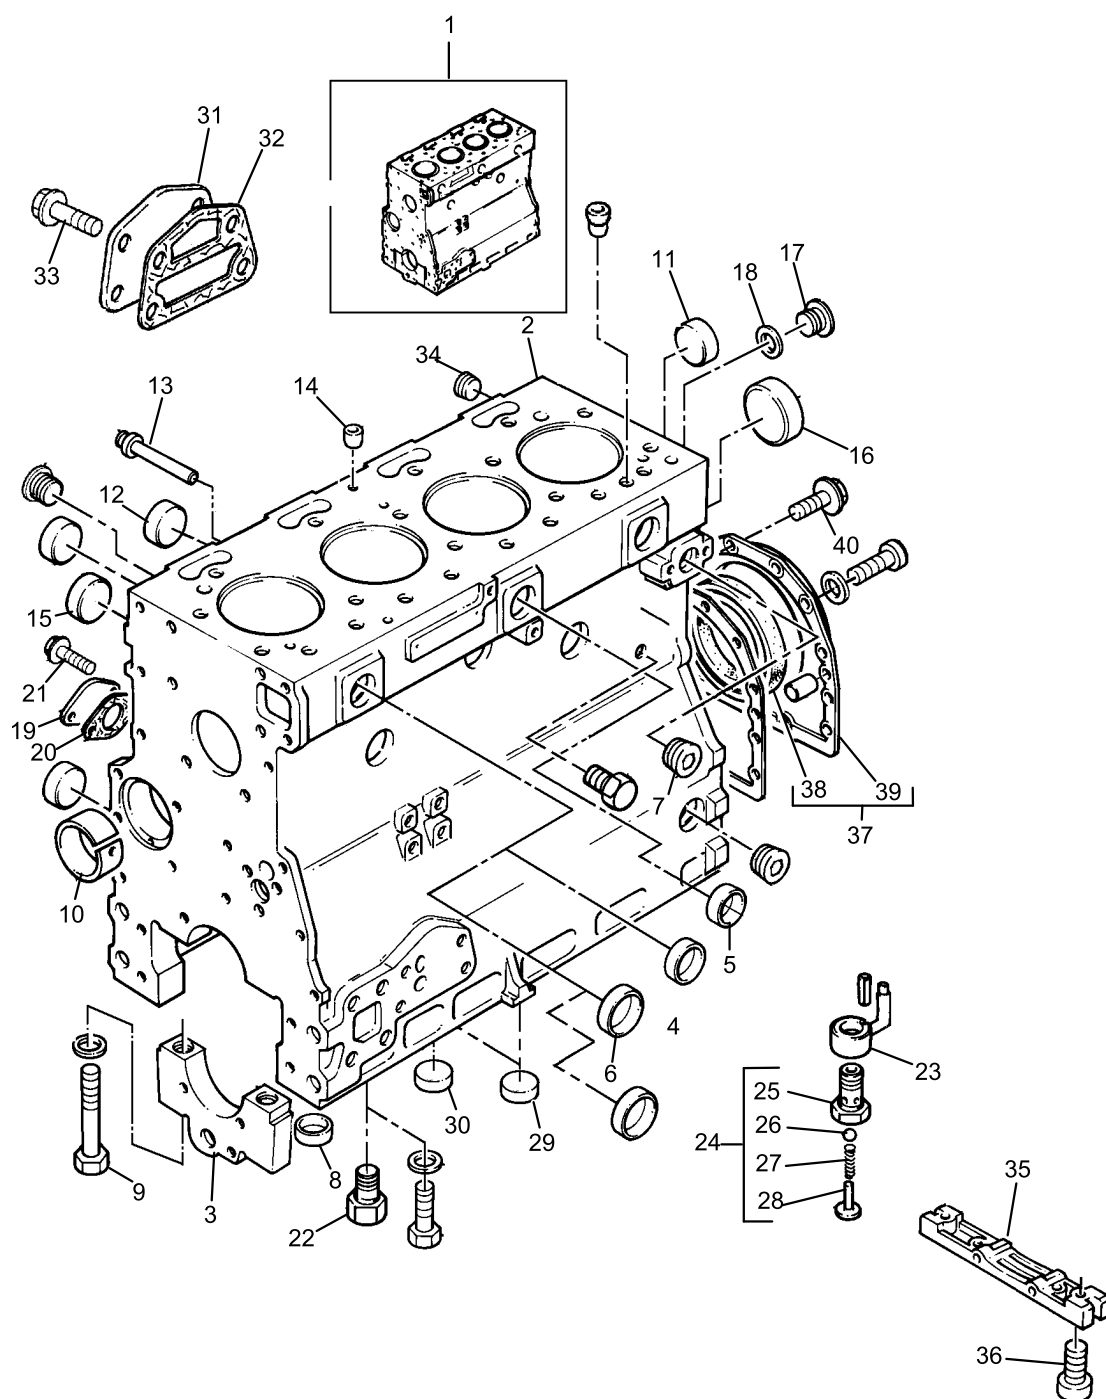

Cylinder Block	Plate E
	ACHA0723

Item	Part No.	References	Qty.	Description	Notes
1	ZZ50299		1	CYLINDER BLOCK ASSEMBLY	
2		⇒ ZZ50299	1	CYLINDER BLOCK	
3		⇒ ZZ50299	1	BEARING CAP	
4	3314A103		1	PLUG	(1)
5	0650710		1	PLUG	
6	0650710		5	PLUG	
7	0650588		1	PLUG	
8	33142111		10	DOWEL	
9	32166329		10	SCREW	
10	31134165		1	CAMSHAFT BUSH	
11	32418122		2	PLUG	
12	3774A004	 a.	4	PLUG	(2)
13	2485A204		1	PLUG	(3)
14	32417134		1	PLUG	(4)
15	32418122		4	PLUG	
16	32416119		1	PLUG	(5)
17	32168212		1	PLUG	(6)
18	2415D108	 e.	1	WASHER	(6)
19	36171131		1	PLATE	
20	36832144		1	GASKET	
21	2314H033		2	SCREW	
22	3278A003		3	PLUG	(7)
23	3861A027		1	PISTON COOLING JET	
24	4138A017		1	RELIEF VALVE	
25		⇒ 4138A017	1	VALVE BODY	
26		⇒ 4138A017	1	BALL	
27		⇒ 4138A017	1	SPRING	
28		 4138A017	1	RETAINER	
29	32161114		1	PLUG	
30	32161114		1	PLUG	
31	3623H008		1	PLATE	
32	3686T006		1	GASKET - OIL FILTER HEAD	
33	2314J033		4	SCREW	
34	0650588		1	PLUG	
35	3627P043	 b. d.	1	BRIDGE PIECE	
36	2311D039		2	SCREW	
37	2418F701	 c. c. → U176357H	1	SEAL - REOS HOUSING	
38		⇒ 2418F701	1	SEAL - REAR END OIL	
39		⇒ 2418F701	1	HOUSING	

Cylinder Block	Plate E
	ACHA0723

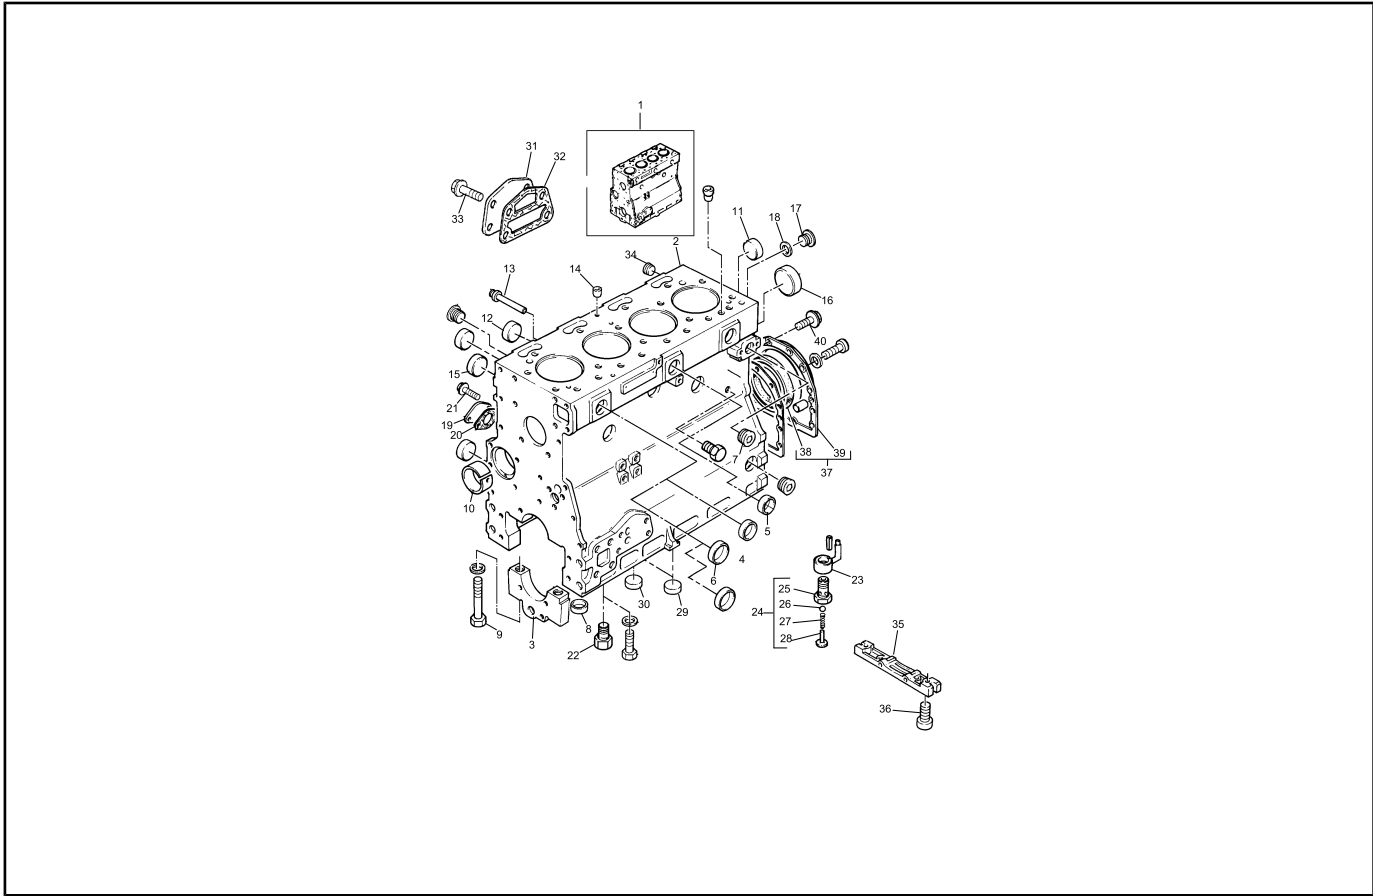


Item	Part No.	References	Qty.	Description	Notes
40	3211C002	c. → U176357H	10	BOLT	
Service Options					
1	ZZ50299P		1	CYLINDER BLOCK ASSEMBLY	

History					
a.					
12	32416118		4	PLUG	(2)
b.					
35	3627P024		1	BRIDGE PIECE	
c.					
	2418F475	→ U176356H	1	SEAL - REAR END OIL	
	3212V002	→ U176356H	1	SCREW	
	0350009	→ U176356H	1	DOWEL	
	3681T018	→ U176356H	1	GASKET - OIL SEAL HOUSING	
37	4142V066	→ U176356H	1	SEAL - REOS HOUSING	
37		→ U176356H	1	SEAL - REOS HOUSING	
40	2314H003	→ U176356H	1	SCREW	
d.					

Cylinder Block	Plate E
	ACHA0723


History				
35	3627P023	1	BRIDGE PIECE	
e.				
	2418F475	1	SEAL - REAR END OIL	
18	3311R003	1	WASHER	(6)

Footnotes	
(1)	WATER JACKET,LEFT HAND SIDE
(2)	TAPPET CHAMBER
(3)	ROCKER OIL FEED DRILLING,RIGHT HAND SIDE
(4)	ROCKER OIL FEED DRILLING,TOP FACE
(5)	CAMSHAFT CHAMBER,REAR END
(6)	LUBRICATING OIL PRESSURE RAIL,REAR END
(7)	USE ONLY WHEN PISTON COOLING JETS ARE NOT REQUIRED

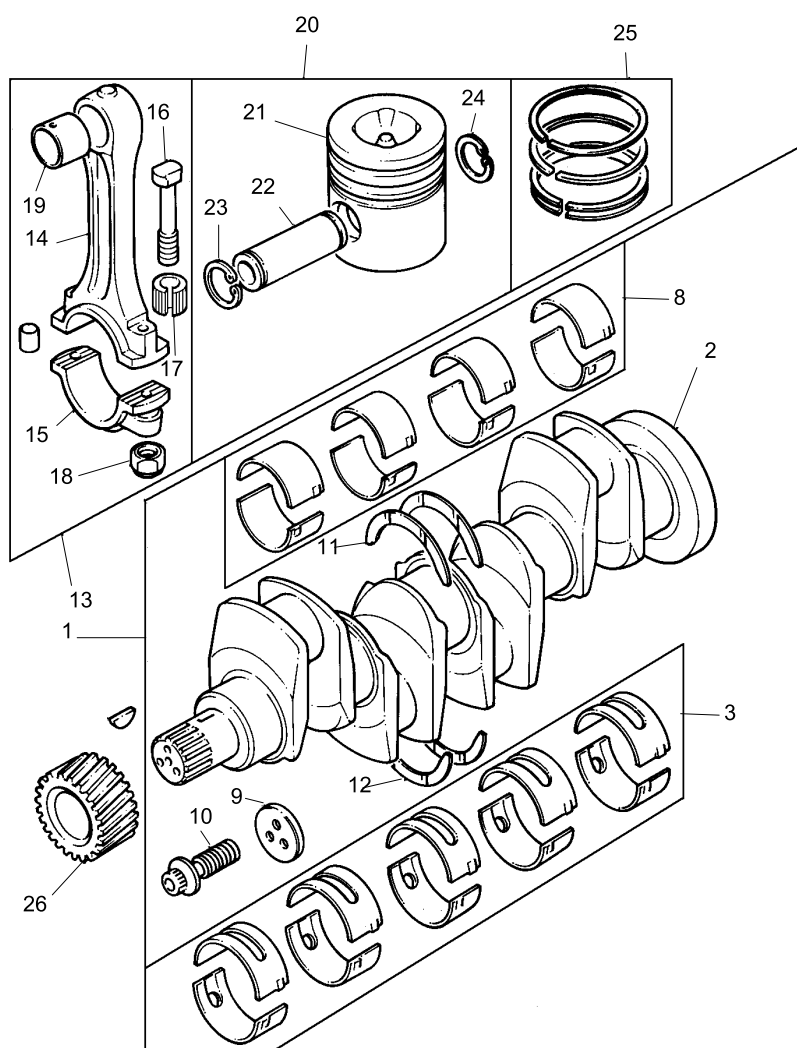

Crankshaft, Pistons & Connecting Rods	Plate A
	ACHA0723

Item	Part No.	References	Qty.	Description	Notes
1	ZZ90238	 a. c. → U284278J	1	CRANKSHAFT KIT	
2		 a. ⇒ ZZ90238	1	CRANKSHAFT	
3	U5MB0034	 a.	1	MAIN BEARING KIT	
4		 a. b. ⇒ U5MB0034	1	CRANK MAIN BEARING	
5		⇒ U5MB0034	4	CRANK MAIN BEARING	
6		⇒ U5MB0034	4	CRANK MAIN BEARING	
7			1	LEAFLET	
8	U5ME0034		1	BIG END BEARING KIT	(2)
9	3242T001	 a.	1	THRUST BLOCK	
10	32186139	 a.	3	SCREW	
11	31137551	 a.	2	THRUST WASHER	
12	31137561		2	THRUST WASHER	
13	ZZ90188	 → ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	4	CON ROD ASSEMBLY	(3) GRADE H
14		⇒ ZZ	1	CON ROD	
15		⇒ ZZ	1	CON ROD CAP	
16	32762145		2	CON ROD BOLT	
17	2135A001		2	THIMBLE	
18	33221328		2	CON ROD NUT	
19	3112E011		1	SMALL END BUSH	
20	U5LP0058		4	PISTON KIT	
21		⇒ U5LP0058	1	PISTON	
22		⇒ U5LP0058	1	PIN	
23	2721332		1	CIRCLIP	
24	2721332		1	CIRCLIP	
25	U4181A045		1	PISTON RING KIT	
26	3117C061		1	CRANKSHAFT GEAR	
Service Options					
	31137312	$\frac{1}{16}$ (+)0.007"	2	THRUST WASHER	
	85042C	$\frac{1}{16}$ (-)0.030"	1	BIG END BRG KIT - U/S	(1)
	85042B	$\frac{1}{16}$ (-)0.020"	1	BIG END BRG KIT - U/S	(1)
	85042A	$\frac{1}{16}$ (-)0.010"	1	BIG END BRG KIT - U/S	(1)
	81558A	$\frac{1}{16}$ (-)0.010"	1	MAIN BEARING KIT - U/S	(1)
	81558B	$\frac{1}{16}$ (-)0.020"	1	MAIN BEARING KIT - U/S	(1)
	81558C	$\frac{1}{16}$ (-)0.030"	1	MAIN BEARING KIT - U/S	(1)

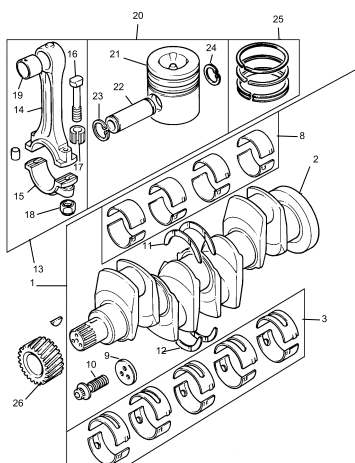


Item	Part No.	References	Qty.	Description	Notes
	31137322	$\frac{+}{-}$ (+)0.007"	2	THRUST WASHER	
1	ZZ90143P		1	CRANKSHAFT KIT - EXCHANGE	
1	ZZ90143R	$\cup$	1	CRANKSHAFT KIT - EXCHANGE	
1	ZZ90238R		1	CRANKSHAFT KIT - EXCHANGE	
3	U5MB0034B	$\frac{+}{-}$ (-)0.50MM	1	MAIN BEARING KIT - U/S	
3	U5MB0034A	$\frac{+}{-}$ (-)0.25MM	1	MAIN BEARING KIT - U/S	
3	U5MB0034C	$\frac{+}{-}$ (-)0.75MM	1	MAIN BEARING KIT - U/S	
3	81558A	$\frac{+}{-}$ (-)0.010"	1	MAIN BEARING KIT - U/S	(1)
3	81558B	$\frac{+}{-}$ (-)0.020"	1	MAIN BEARING KIT - U/S	(1)
3	81558C	$\frac{+}{-}$ (-)0.030"	1	MAIN BEARING KIT - U/S	(1)
4	U5ME0026A	$\frac{+}{-}$ (+) 0.25MM	1	BIG END BRG KIT - U/S	
4	U5ME0026B	$\frac{+}{-}$ (+) 0.50MM	1	BIG END BRG KIT - U/S	
4	U5ME0026C	$\frac{+}{-}$ (+) 0.75MM	1	BIG END BRG KIT - U/S	
4	U5ME0016A		1	BIG END BRG KIT - U/S	
4	U5ME0016C		1	BIG END BRG KIT - U/S	
4	U5ME0016B		1	BIG END BRG KIT - U/S	
8	U5ME0034C	$\frac{+}{-}$ (-)0.75MM	1	BIG END BRG KIT - U/S	(2)

Crankshaft, Pistons & Connecting Rods	Plate A
	ACHA0723

Item	Part No.	References	Qty.	Description	Notes
8	U5ME0034B	$\frac{+}{-} (-)0.50\text{MM}$	1	BIG END BRG KIT - U/S	(2)
8	U5ME0034A	$\frac{+}{-} (-)0.25\text{MM}$	1	BIG END BRG KIT - U/S	(2)
9	31137312	$\frac{+}{-} (+)0.007"$	2	THRUST WASHER	
10	31137322	$\frac{+}{-} (+)0.007"$	2	THRUST WASHER	
11	31137312	$\frac{+}{-} (+)0.007"$	2	THRUST WASHER	
12	31137322	$\frac{+}{-} (+)0.007"$	2	THRUST WASHER	
20	U5LP0058D	$\frac{+}{-} (+)1.0\text{MM}$	4	PISTON KIT - OVERSIZE	
20	U5LP0058B	$\frac{+}{-} (0.5\text{MM})$	4	PISTON KIT - OVERSIZE	
25	U4181A046	$\frac{+}{-} (+)0.5\text{MM}$	1	PISTON RING KIT	
25	U4181A047	$\frac{+}{-} (+)1.0\text{MM}$	1	PISTON RING KIT	

History					
a.					
	3242T001		1	THRUST BLOCK	
	0500012		1	WOODRUFF KEY	
1	ZZ90227	  U284278J	1	CRANKSHAFT KIT	
2		 	1	CRANKSHAFT	
3	81558		1	MAIN BEARING KIT	(1)
4	U5ME0026		1	BIG END BEARING KIT	
9	31137551		2	THRUST WASHER	
10	31137561		2	THRUST WASHER	
11	32186139		3	SCREW	
b.					
4	U5ME0016		1	BIG END BEARING KIT	
c.					
	32762145	 U284277J	2	CON ROD BOLT	
	33221328	 U284277J	2	CON ROD NUT	
	85042A	 U284277J $\frac{+}{-} (-)0.010"$	0	BIG END BRG KIT - U/S	(1)
		 U284277J 	1	CON ROD	
		 U284277J 	1	PISTON	
		 U284277J	1	THRUST BLOCK	
	81558B	 U284277J $\frac{+}{-} (-)0.020"$	0	MAIN BEARING KIT - U/S	(1)
	31137551	  U284277J	2	THRUST WASHER	
	85042	  U284277J	1	BIG END BEARING KIT	(1)
	81558A	 U284277J $\frac{+}{-} (-)0.010"$	0	MAIN BEARING KIT - U/S	(1)

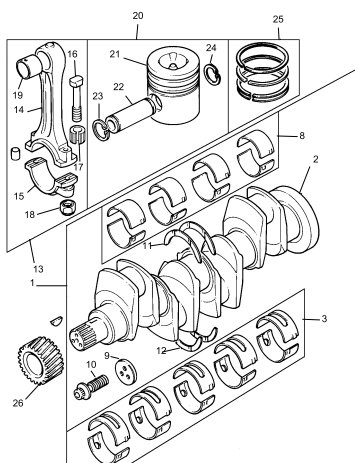


History

85042C	→ U284277J ⚖ (-)0.030"	0	BIG END BRG KIT - U/S	(1)
31137322	→ U284277J ⚖ (+)0.007"	0	THRUST WASHER	
2135A001	→ U284277J	2	THIMBLE	
85042B	→ U284277J ⚖ (-)0.020"	0	BIG END BRG KIT - U/S	(1)
	→ U284277J ⇒	1	PIN	
	→ U284277J ⇒	1	CAP	
31134123	→ U284277J	1	SMALL END BUSH	
	→ U284277J	3	SCREW	
2721332	→ U284277J	1	CIRCLIP	
2721332	→ U284277J	1	CIRCLIP	
U5LP0058B	→ U284277J ⚖ (0.5MM)	0	PISTON KIT - OVERSIZE	
	→ U284277J ⇒	1	CRANKSHAFT	
U5LP0058D	→ U284277J ⚖ (+1.0MM)	0	PISTON KIT - OVERSIZE	
U4181A046	→ U284277J ⚖ (+0.5MM)	0	PISTON RING KIT	

Crankshaft, Pistons & Connecting Rods	Plate A
	ACHA0723


History					
	31137312	→ U284277J ± (+)0.007"	0	THRUST WASHER	
	81558	Ⓢ → U284277J	1	MAIN BEARING KIT	(1)
	81558C	→ U284277J ± (-)0.030"	0	MAIN BEARING KIT - U/S	(1)
	31137561	Ⓢ → U284277J	2	THRUST WASHER	
	U4181A047	→ U284277J ± (+1.0MM)	0	PISTON RING KIT	
1	ZZ90143	Ⓢ → U284277J ↺	1	CRANKSHAFT KIT	

Footnotes	
(1)	PRE-FINISHED
(2)	BEARING FITTING TOOL 27610233 IS NOT INCLUDED
(3)	SEE SERVICE BULLETIN NO.81

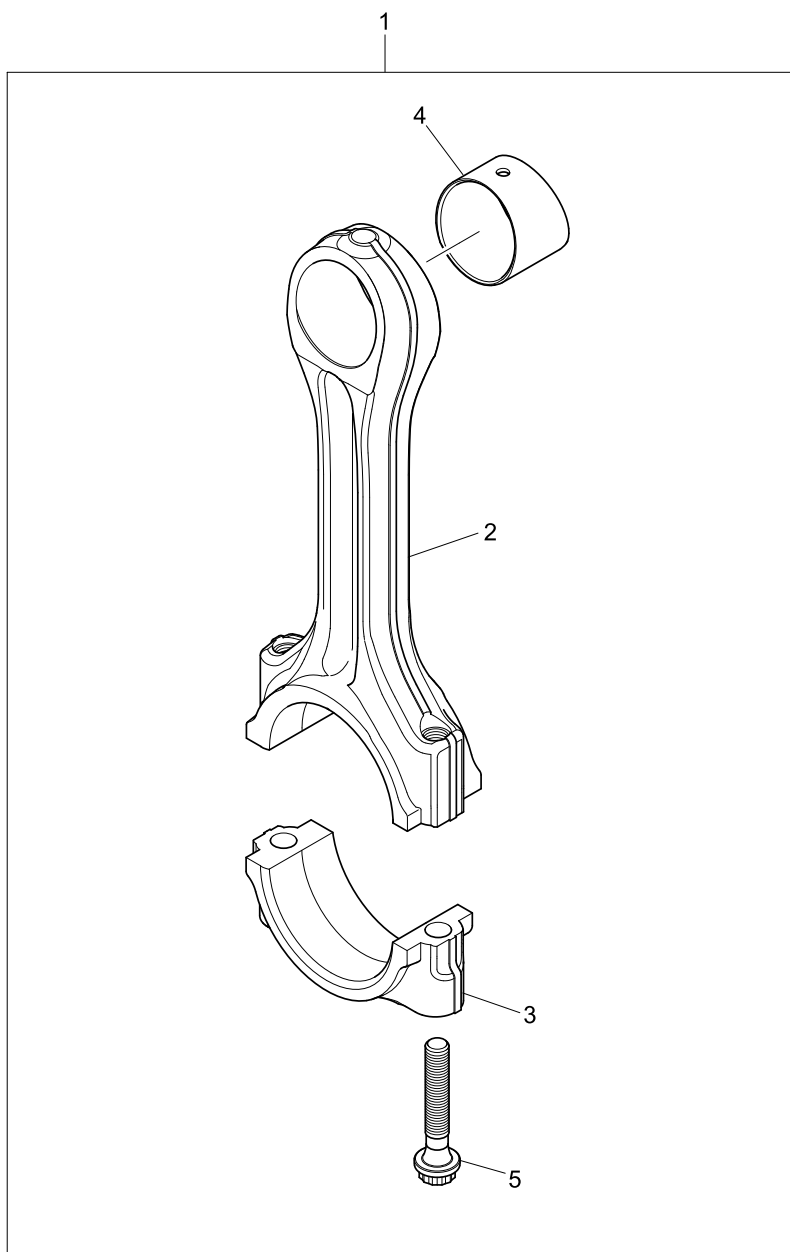

Crankshaft, Pistons & Connecting Rods	Plate C
↳ U284278J	ACHA0723


Item	Part No.	References	Qty.	Description	Notes
1		Ⓢ	4	CON ROD ASSEMBLY	(1)
2		⇒ SERVICE OPTION	1	CON ROD	
3		⇒ SERVICE OPTION	1	CAP	
4	3112A005	↗	1	SMALL END BUSH	
5	3212V003		2	CON ROD BOLT	(2)
Service Options					
1	4115C311		4	CON ROD ASSEMBLY	RED GRADE F
1	4115C312		4	CON ROD ASSEMBLY	ORANGE GRADE G
1	4115C313		4	CON ROD ASSEMBLY	GRADE H WHITE
1	4115C315		4	CON ROD ASSEMBLY	PURPLE GRADE K
1	4115C316		4	CON ROD ASSEMBLY	GRADE L BLUE
1	4115C314		4	CON ROD ASSEMBLY	GREEN GRADE J
Footnotes					
(1)	CONROD WITH 67MM BIG END				
(2)	DO NOT RE-USE ONCE REMOVED				

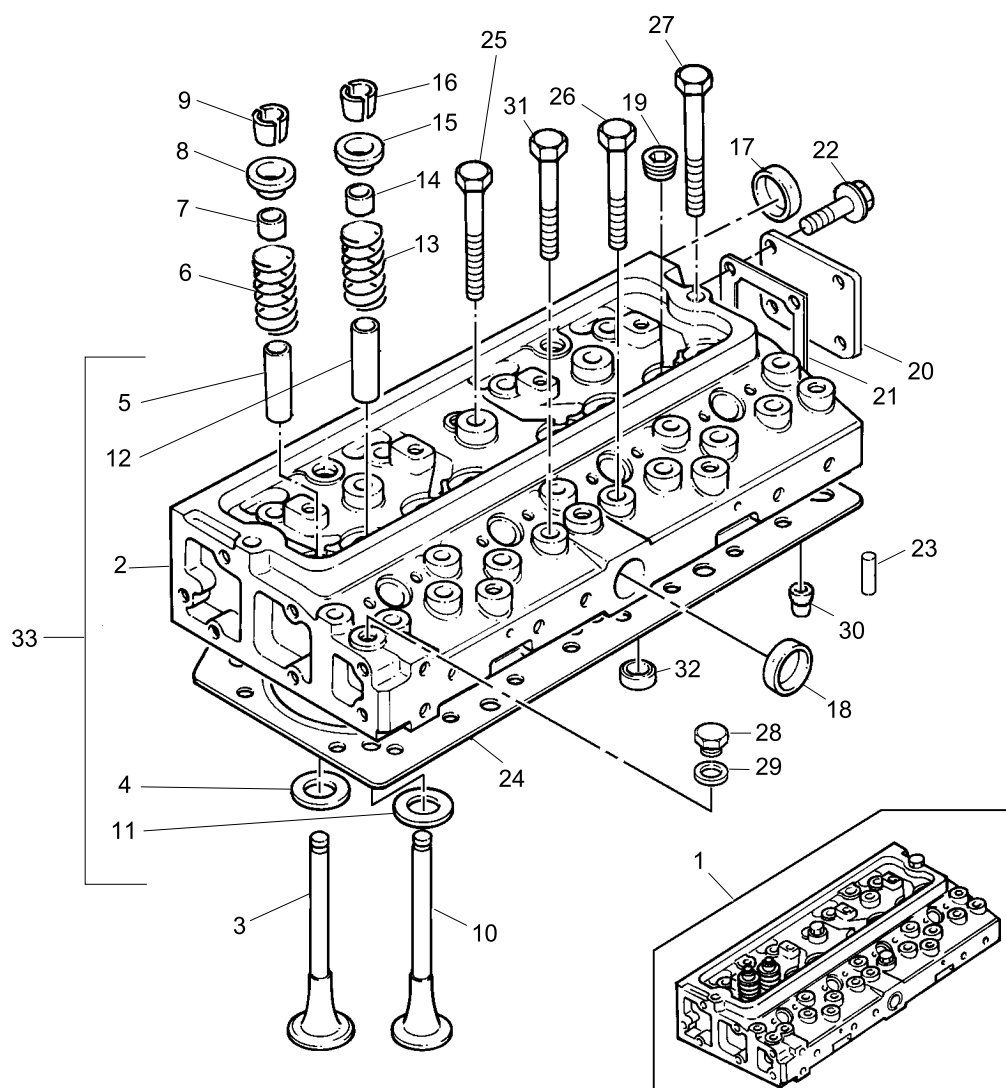

Cylinder Head	Plate C
	ACHA0723

Item	Part No.	References	Qty.	Description	Notes
1	ZZ80255		1	CYLINDER HEAD KIT	
2		 REF.1	1	CYLINDER HEAD	
3	3142H041		4	INTAKE VALVE	
4	3314A101		4	VALVE SEAT INSERT	
5	3313A012	 3313E021	4	VALVE GUIDE	(1)
6	3174P412		4	VALVE SPRING	
7	2418M507		4	SEAL - VALVE STEM	
8	3342N011		4	CAP	
9	3142W004		8	VALVE COLLET	
10	3142D061		4	EXHAUST VALVE	
11	3314A102		4	VALVE SEAT INSERT	
12	3318A705		4	VALVE GUIDE	
13	3174P412		4	VALVE SPRING	
14	2418M505		4	SEAL - VALVE STEM	
15	3342N011		4	CAP	
16	3142W004		8	VALVE COLLET	
17	32418122		1	PLUG	
18	0650710		1	PLUG	
19	2431A054		4	PLUG	
28	0650203		1	PLUG	
20			1	COVER	(2)
21			1	JOINT	(2)
22			4	SCREW	(2)
23	3244A009		2	DOWEL	
24	3681E042		1	GASKET - CYLINDER HEAD	
25	3218J303		8	SCREW	
26	3218J606		8	SCREW	
27	3218J607		2	SCREW	
31	32166221		4	SCREW	
Service Options					
1	ZZ80255P		1	CYLINDER HEAD KIT - EXCH	
8	3342N011P		4	CAP	
15	3342N011P		4	CAP	


Footnotes	
(1)	UNFINISHED
(2)	REFER TO WATER PUMP SECTION

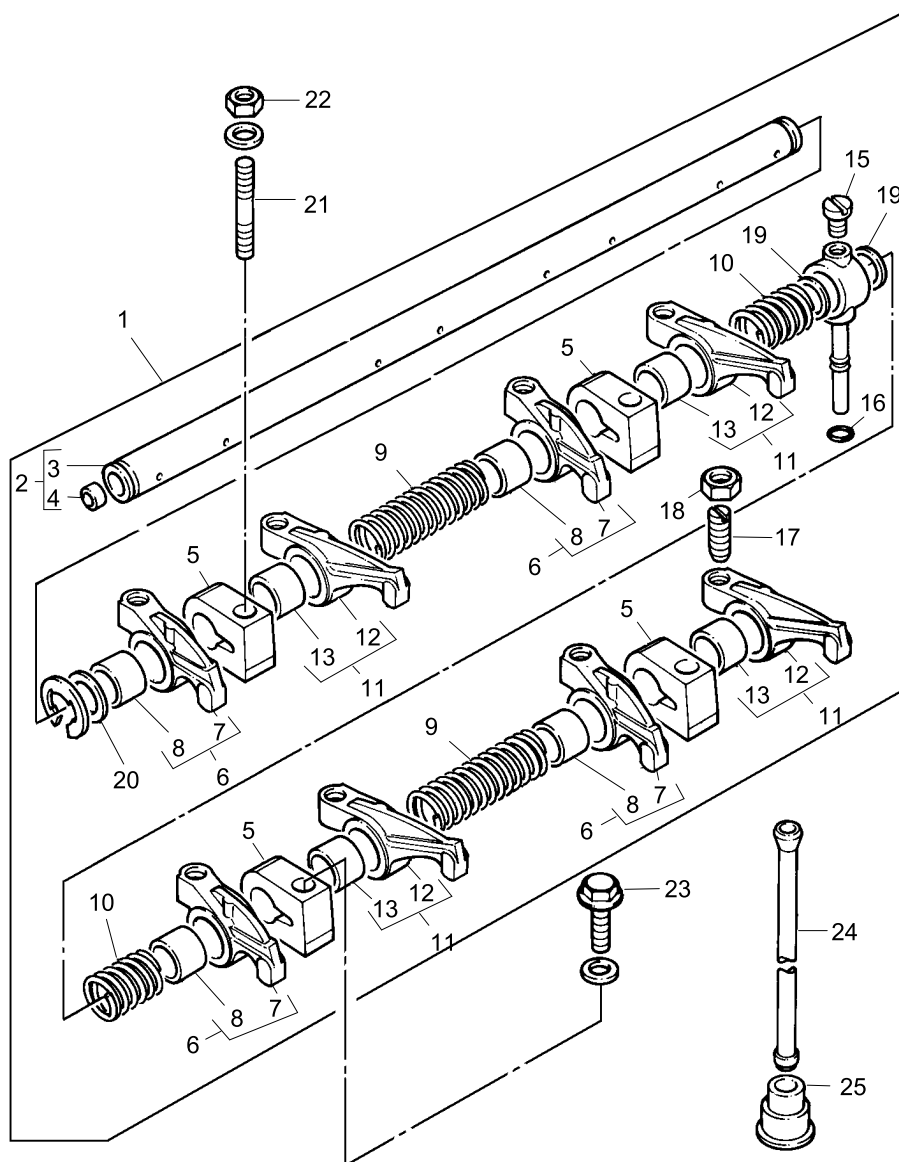


Rocker Shaft	Plate A
	ACHA0723

Item	Part No.	References	Qty.	Description	Notes
1	ZZ90199		1	ROCKER SHAFT ASSEMBLY	
2	ZZ90198		1	ROCKER SHAFT ASSY - MINOR	
3		⇒ ZZ90198	1	SHAFT	
4	0650507		2	PLUG	
5	3818X901		4	BRACKET	
6		↗	4	ROCKER ARM ASSEMBLY	
7			1	ROCKER ARM	
8			1	PAD	
9	31744123		2	ROCKER SHAFT SPRING	
10	31743108		2	ROCKER SHAFT SPRING	
11	4115R311	↗	1	ROCKER ARM ASSEMBLY	
12			1	ROCKER ARM	
13			1	PAD	
14	3775E012		1	CONNECTION	
15	2233022		1	SCREW	
16	33811113		1	OLIVE	
17	32114145		8	SCREW	
18	0576052		8	NUT	
19	3311K012		2	WASHER	
20	3311K015		2	SHIM	
21	2313H331		3	STUD	
22	2318A605		3	NUT	
23	2314J607		1	SCREW	
24	31434307		8	PUSHROD	
25	3142U031	↗	8	TAPPET	

History					
a.					
	33117426		2	SHIM	
	31743108		2	ROCKER SHAFT SPRING	
	33811113		1	OLIVE	
	ZZ90198		1	ROCKER SHAFT ASSY - MINOR	
	4115R311		1	ROCKER ARM ASSEMBLY	
	31744123		2	ROCKER SHAFT SPRING	
			1	ROCKER ARM ASSEMBLY	
		⇒	1	ROCKER SHAFT	
		⇒	1	LEVER	
		⇒	1	LEVER	
	3818X901		4	BRACKET	
	3775E012		1	CONNECTION	
	0650507		2	PLUG	

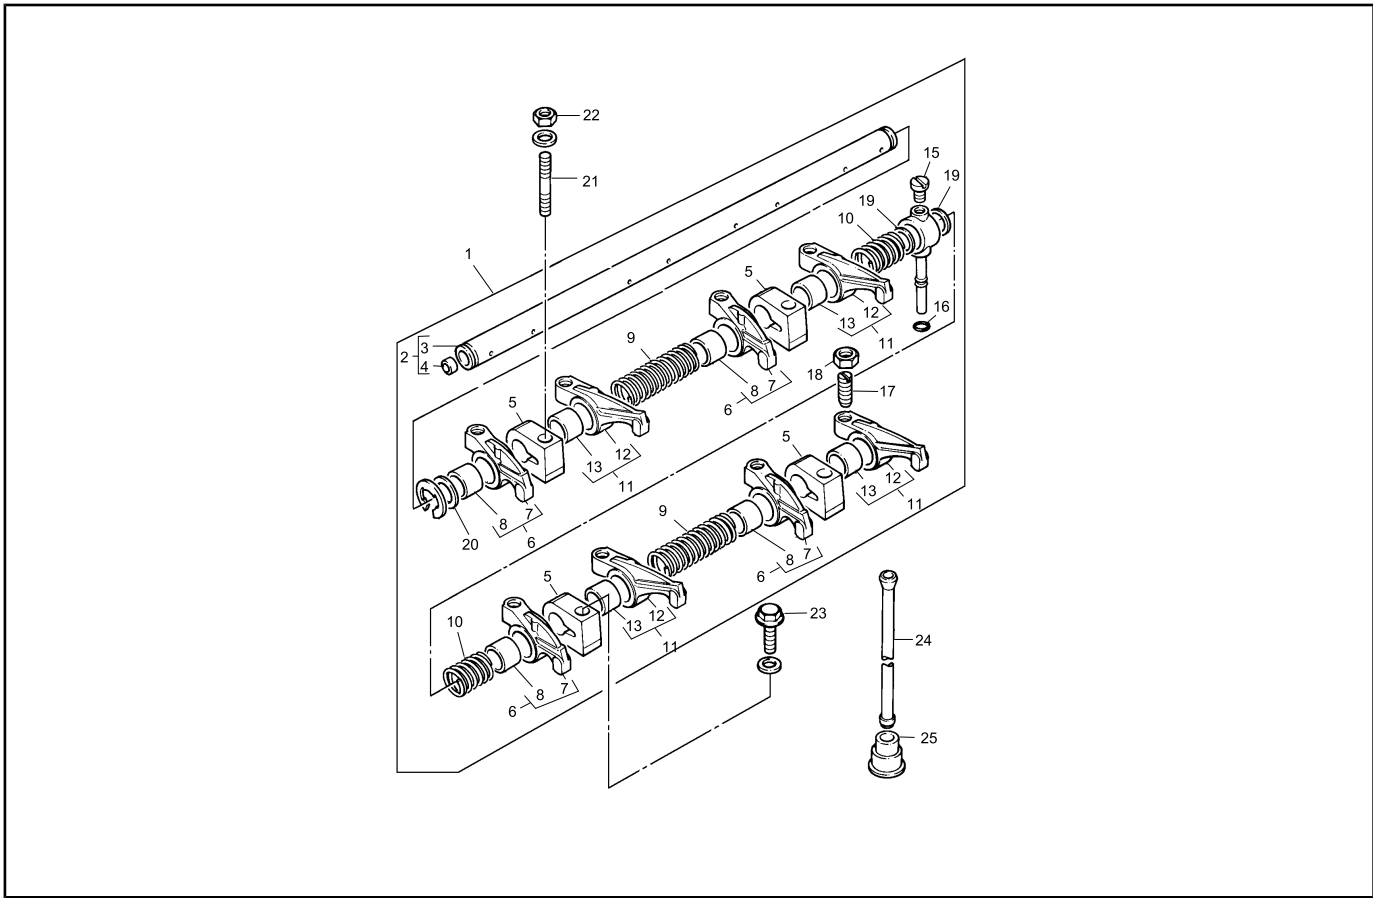


History			
3311K012	2	WASHER	
0170151	2	CIRCLIP	
0576052	8	NUT	
2233022	1	SCREW	
32114145	8	SCREW	

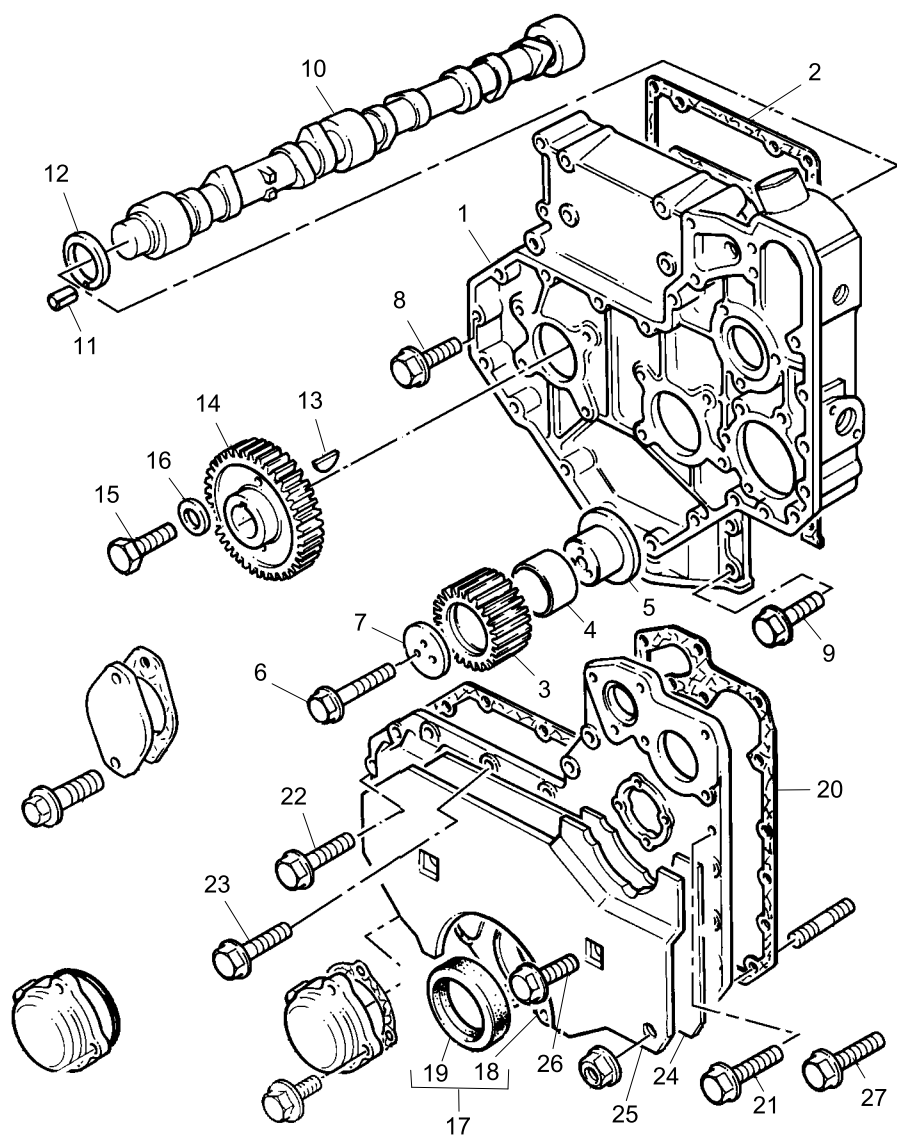

Timing Gear & Camshaft	Plate D
	ACHA0723


Item	Part No.	References	Qty.	Description	Notes
1	3716C165	 d.	1	TIMING CASE	
2	21826415	 f.	1	SEAL - TIMING CASE	
3	4111A013		1	IDLER GEAR	
4	0050345		2	IDLER GEAR BUSH	
5	33426161		1	HUB	
6	2314J011	 e.	3	SCREW	
7	3241A025	 b. e.	1	PLATE	(1)
8	2314H003		8	SCREW	
9	2314H034		4	SCREW	(2)
10	3141D171		1	CAMSHAFT	
11	2116053		1	DOWEL	
12	3112X011	 a. g.	1	THRUST WASHER	
13	0500012		1	WOODRUFF KEY	
14	3117L023		1	CAMSHAFT GEAR	
15	2314J606		1	SCREW	
16	3321A003		1	WASHER	
17	4142A415		1	TIMING COVER	
18		 4142A415	1	COVER	
19	2418F437	 c.	1	SEAL - FRONT END OIL	
20	3681P038		1	GASKET - TIMING COVER	
21	2314H004		1	SCREW	
22	2314H005		7	SCREW	
23	2314H013		6	SCREW	
24	3781N042		1	DAMPER	
25	3781N043		1	SHIELD	
26	2314F003		2	SCREW	
27	2314H034		2	SCREW	(2)
Service Options					
2	21826405		1	GASKET - TIMING CASE	(3)

History					
a.					
12	33153121		1	PLATE	
b.					
7	3241A021		1	PLATE	
c.					
19	2418F436		1	SEAL - FRONT END OIL	
d.					
1	3716C163		1	TIMING CASE	
e.					

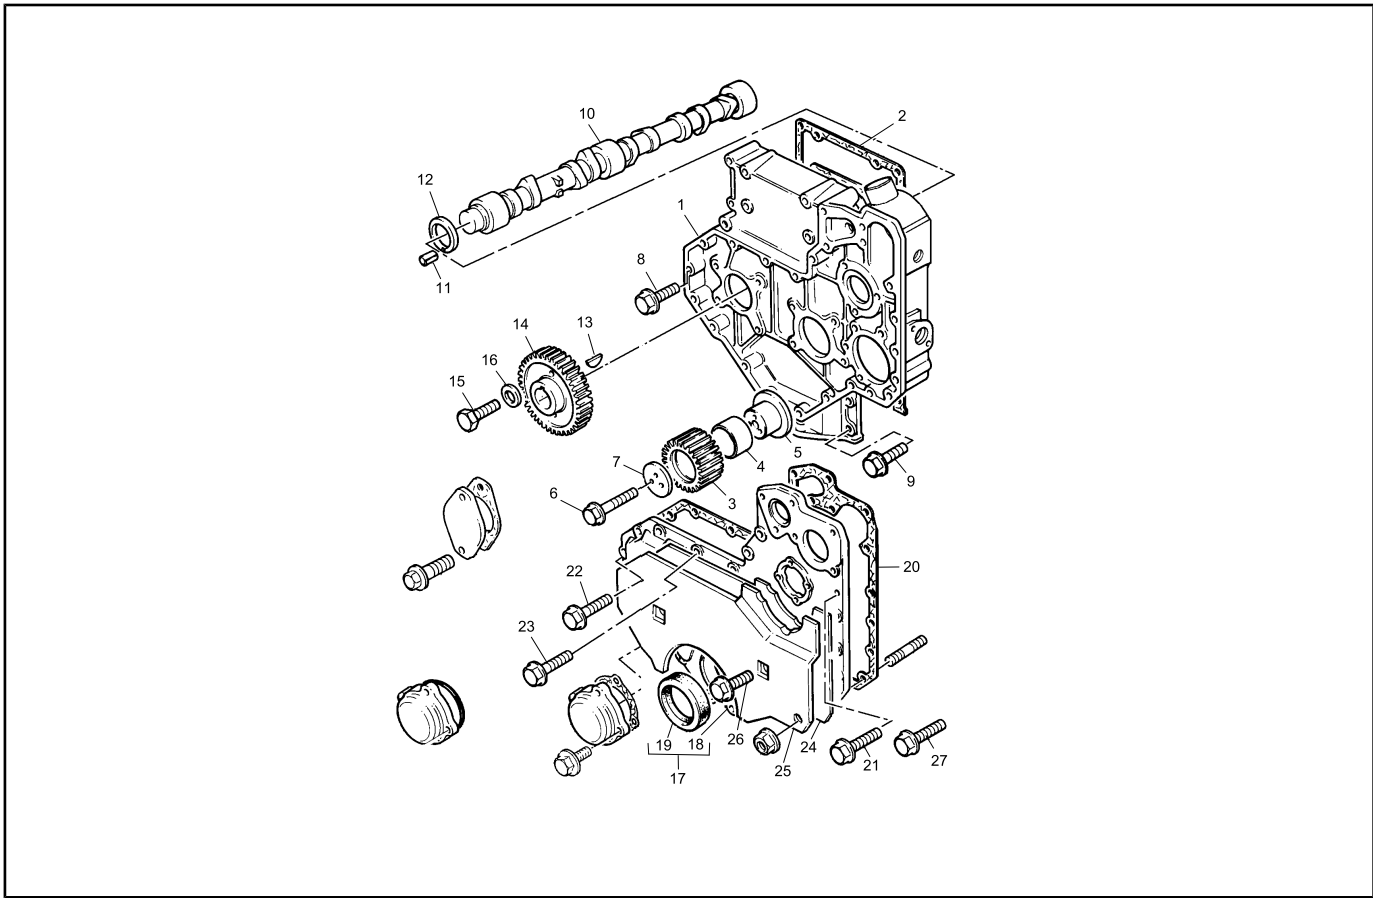

History				
6	2314J010		3	SCREW
7	3241H009		1	PLATE
f.				
2	3681P009	Ⓢ	1	GASKET - TIMING CASE
g.				
	2418F436	⇒	1	SEAL - FRONT END OIL
			1	TIMING COVER
	0050345		1	IDLER GEAR BUSH
12	33153135		1	WASHER


Footnotes	
(1)	USED ONLY WITH 4111A034
(2)	BOTTOM TWO HOLES
(3)	ALTERNATIVE APPLIES TO 4 CYLINDER ENGINES ONLY

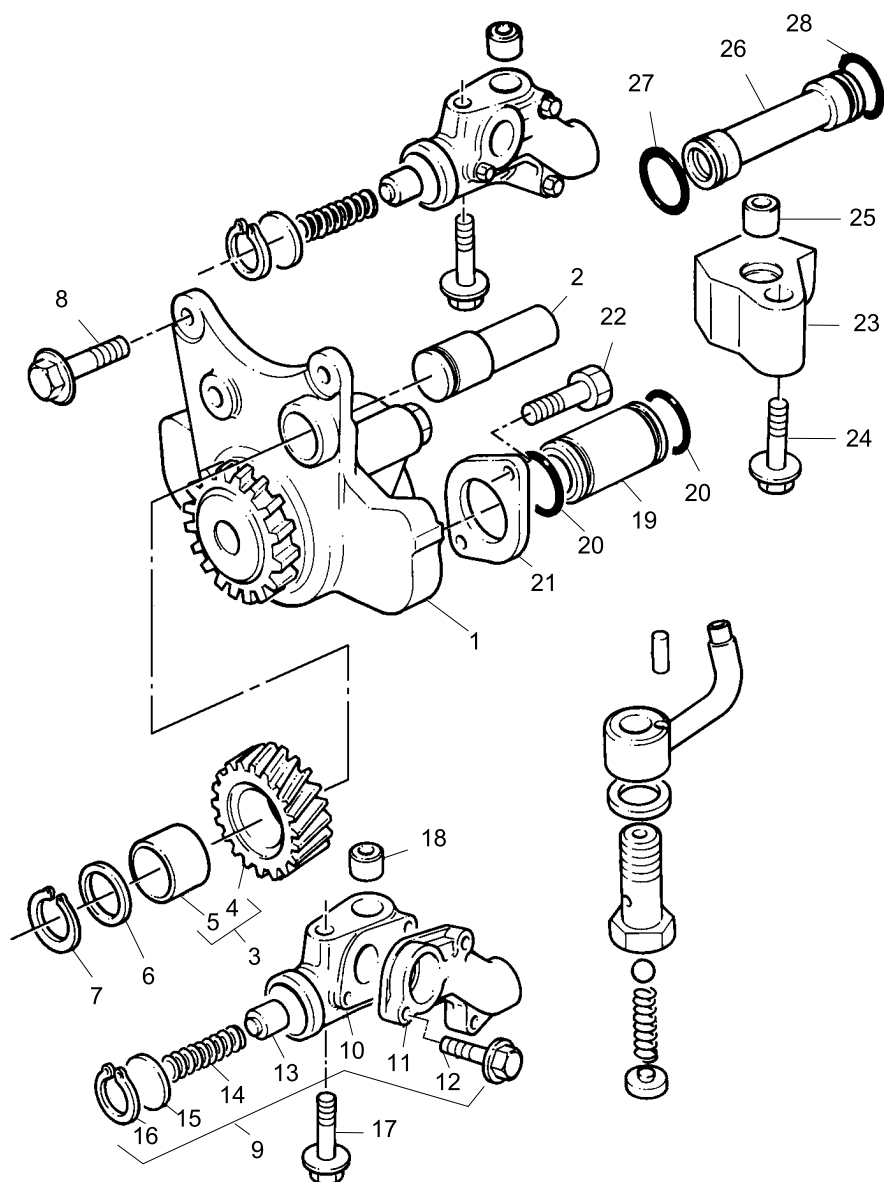

Lubricating Oil Pump & Delivery Housing	Plate A
	ACHA0723


Item	Part No.	References	Qty.	Description	Notes
1	4132F051		1	OIL PUMP	
2	3271H004		1	SHAFT	
3	4111A021		1	IDLER GEAR	
4		 4111A021	1	IDLER GEAR	
5	2511437		1	BUSH	
6	33123125		1	WASHER	
7	2722A206		1	CIRCLIP	
8	2314H005		3	SCREW	
9	4138A057	 a. b.	1	RELIEF VALVE	
10		 4138A057	1	VALVE BODY	
11		 4138A057	1	VALVE COVER	
12	2314F907		3	SCREW	
13	32712726		1	PLUNGER	
14	3174A013	 a.	1	SPRING KIT	
15	32712111		1	SEAT	
16	2721130		1	CIRCLIP	
17	2314J011		1	SCREW	
18	33137409		1	THIMBLE	
19	3343F012		1	PIPE - OIL PUMP DELIVERY	
20	2415H201		2	SEAL - O RING	
21	3748C011		1	FLANGE	
22	2314H004		2	SCREW	
23	3763W011		1	ADAPTOR	
24	2314J008		2	SCREW	
25	33137409		1	THIMBLE	
26	3343M307		1	PIPE - OIL PUMP DELIVERY	
27	2415H201		1	SEAL - O RING	
28	2415H201		1	SEAL - O RING	
Service Options					
2	3271H005	 (+) 1.33MM	1	SHAFT	

History					
a.					
9	4138A053		1	RELIEF VALVE	
14	3174A012		1	SPRING	
b.					
	3174L003		1	SPRING	
	32712726		1	PLUNGER	
	32712111		1	SEAT	
	2511437		1	BUSH	
	2721130		1	CIRCLIP	

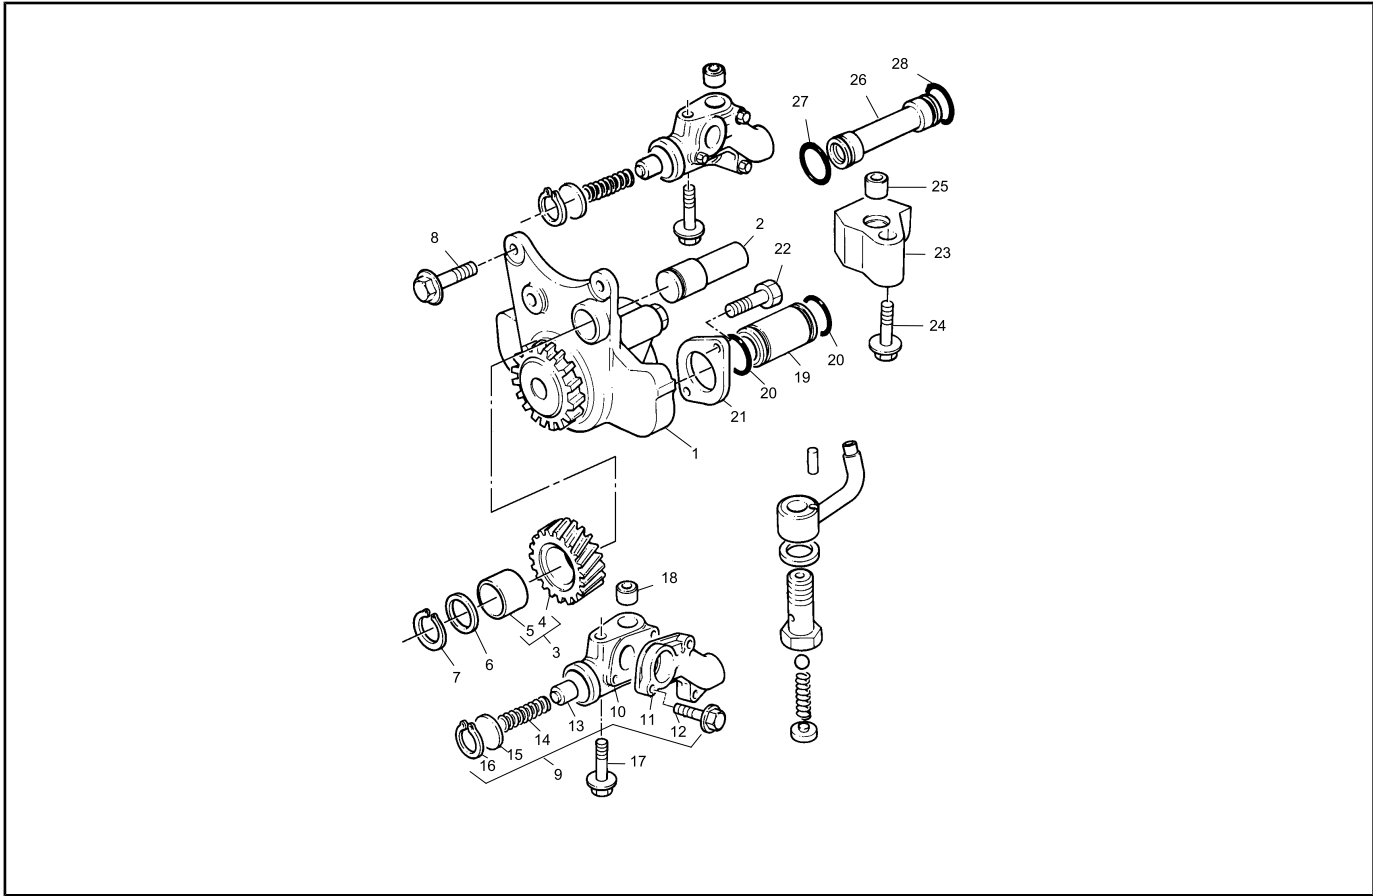


History			
9	4138A036		1 GEAR
			1 HOUSING
			1 RELIEF VALVE

Footnotes

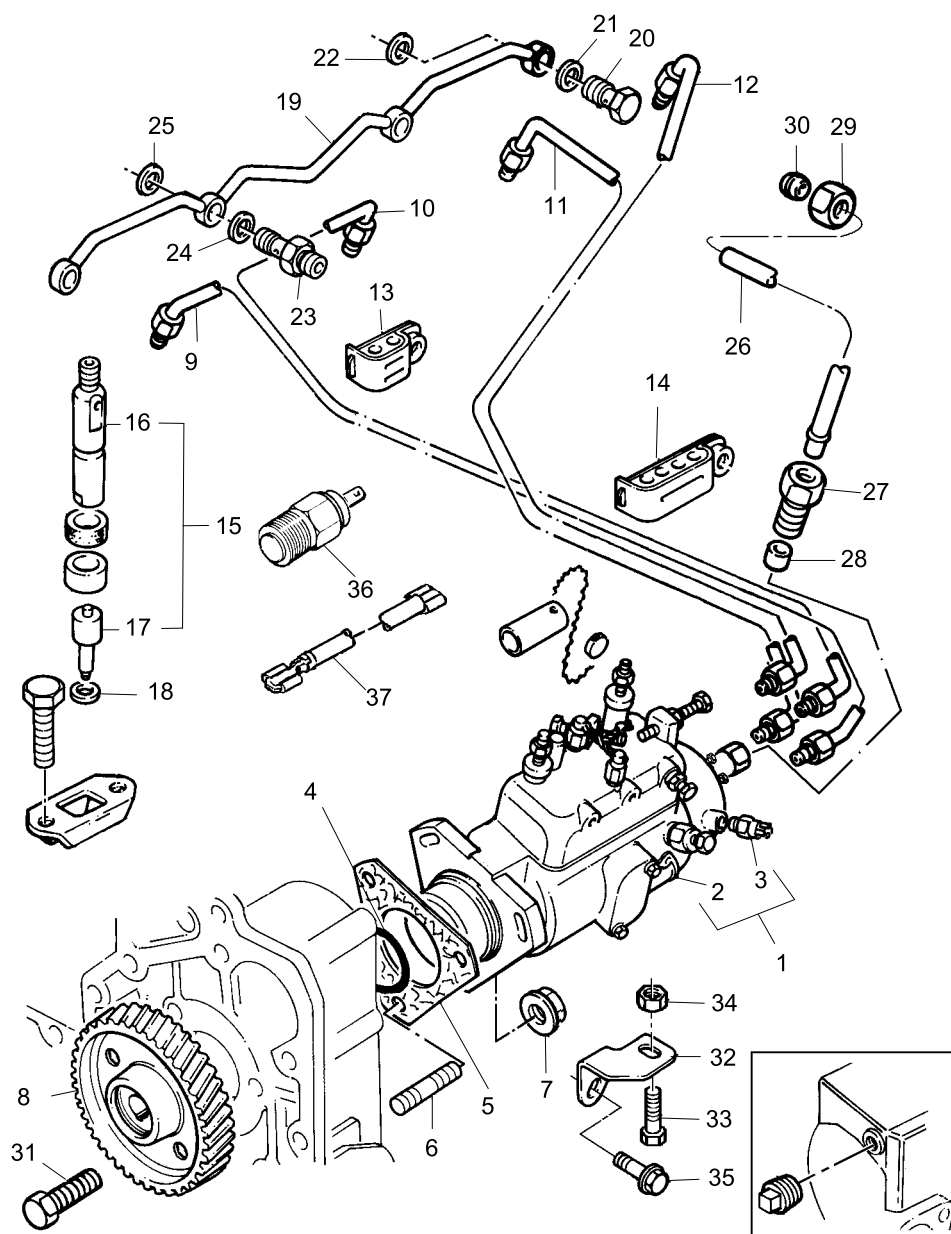

Fuel Injection Equipment (Diesel)	Plate P
	AFH03826

Item	Part No.	References	Qty.	Description	Notes
1	UFK4G736	 b. h. → U969465G	1	FUEL INJECTION PUMP KIT	
2		 b. → UFK4G736	1	FUEL INJECTION PUMP	
3	26420467	 b.	1	SOLENOID	
4	26420318		1	SEAL - O RING	
5			1	JOINT	
6	3211P004		3	STUD	
7	2318A603		3	NUT	
8	3117L212		1	FUEL INJECTION PUMP GEAR	
9	3521H065	 1	1	PIPE - FUEL INJ NO 1 CYL	
10	3521H083	 e.  2	1	PIPE - FUEL INJ NO 2 CYL	
11	3521H067	 3	1	PIPE - FUEL INJ NO 3 CYL	
12	3521H068	 4	1	PIPE - FUEL INJ NO 4 CYL	
13	2646E017		2	CLIP	
14	2646E019		1	CLIP	
15	U2645A058		4	INJECTOR	
16	2645A311		1	HOLDER	
17	2645K609		1	INJECTOR NOZZLE	
18	L311FF02		4	INJECTOR WASHER	
19	3558X051		1	PIPE - LEAK OFF	
20	3218R038	 a. → U561308K	3	BANJO BOLT	
21	2411D006	 a. f.	3	WASHER	
22	2411D006	 a. f.	3	WASHER	
23	3355E003	 a. → U561308K	1	CONNECTION	
24	2411D006	 a. f.	1	WASHER	
25	2411D006	 a. f.	1	WASHER	
26	4121A025	 c. → U183168H	1	PIPE - AIR	
27	3353D004		1	NUT	
28	33811112		1	OLIVE	
29	33225412		1	NUT	
30	33811112		1	OLIVE	
31	2314H002		4	SCREW	
32	3644Y004		1	BRACKET	
33	2314H003		1	SCREW	
34	2318A603		1	NUT	
35	2314J002		1	SCREW	
36	2848A121		1	SENDER	

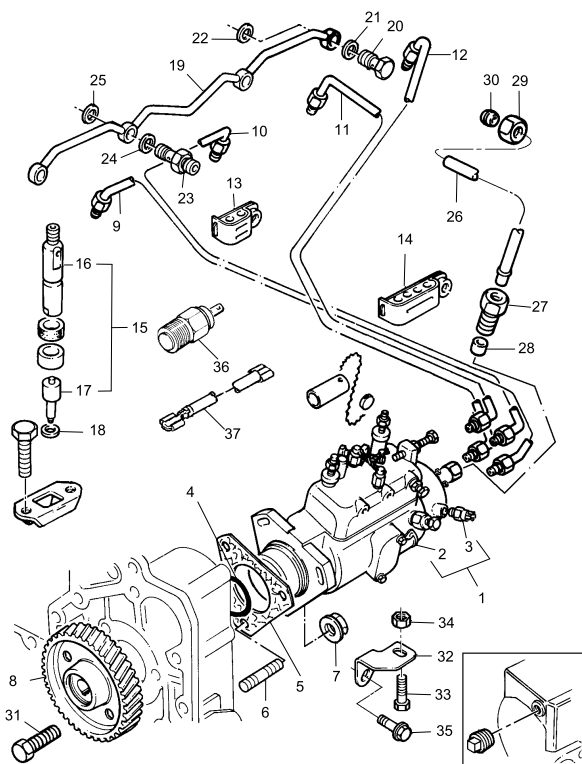

Item	Part No.	References	Qty.	Description	Notes
37	3161C005		1	CABLE	
Service Options					
	2648A124		1	CAP	
15	U2645A058R		4	INJECTOR - EXCHANGE	

History

a.

20	3218R005	→ U969464G	3	BANJO BOLT
21	2415D051	→ U969464G	3	WASHER
22	2415D051	→ U969464G	3	WASHER
23	3355V002	→ U969464G	1	CONNECTION
24	2415D051	→ U969464G	1	WASHER
25	2415D051	→ U969464G	1	WASHER

b.

1	2644G726	→ U969464G	1	FUEL INJECTION PUMP
2	26420517	→ U969464G	1	SOLENOID
3	26420318	→ U969464G	1	SEAL - O RING

c.


3381A002	→ U183167H	1	OLIVE
3353D004	→ U183167H	1	NUT

Fuel Injection Equipment (Diesel)	Plate P
	AFH03826

History				
26	4121C057	→ U183167H	1	PIPE - AIR
d.		Ⓢ	1	CAP
e.				
10	3521H066	🗑 2	1	PIPE - FUEL INJ NO 2 CYL
f.				
21	3311A001		3	WASHER
22	3311A001		3	WASHER
24	3311A001		1	WASHER
25	3311A001		1	WASHER
g.				
	2648A116		1	CAP
h.				
	3381A002		1	OLIVE
	2645K609		1	INJECTOR NOZZLE
	3353D004	🔩	1	NUT
	26420318		1	SEAL - O RING
	26420517		1	SOLENOID
	2645A311		1	HOLDER
		🔩	1	FUEL INJECTION PUMP
1	U2644G726		1	FUEL INJECTION PUMP (1)

Footnotes	
(1)	INJECTION PUMP CONTAINS NO INDIVIDUALLY SERVICED PARTS, SERVICED AS A COMPLETE UNIT ONLY.


Fan Drive	Plate A
	FBH00001

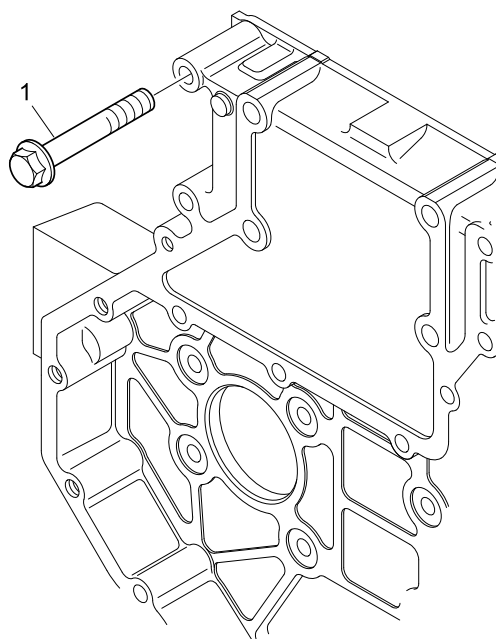

Fan Drive	Plate A
	FBH00001

Item	Part No.	References	Qty.	Description	Notes
1	2314J011		4	SCREW	(1)


Footnotes					
(1)	TIMING CASE TO CYLINDER BLOCK				

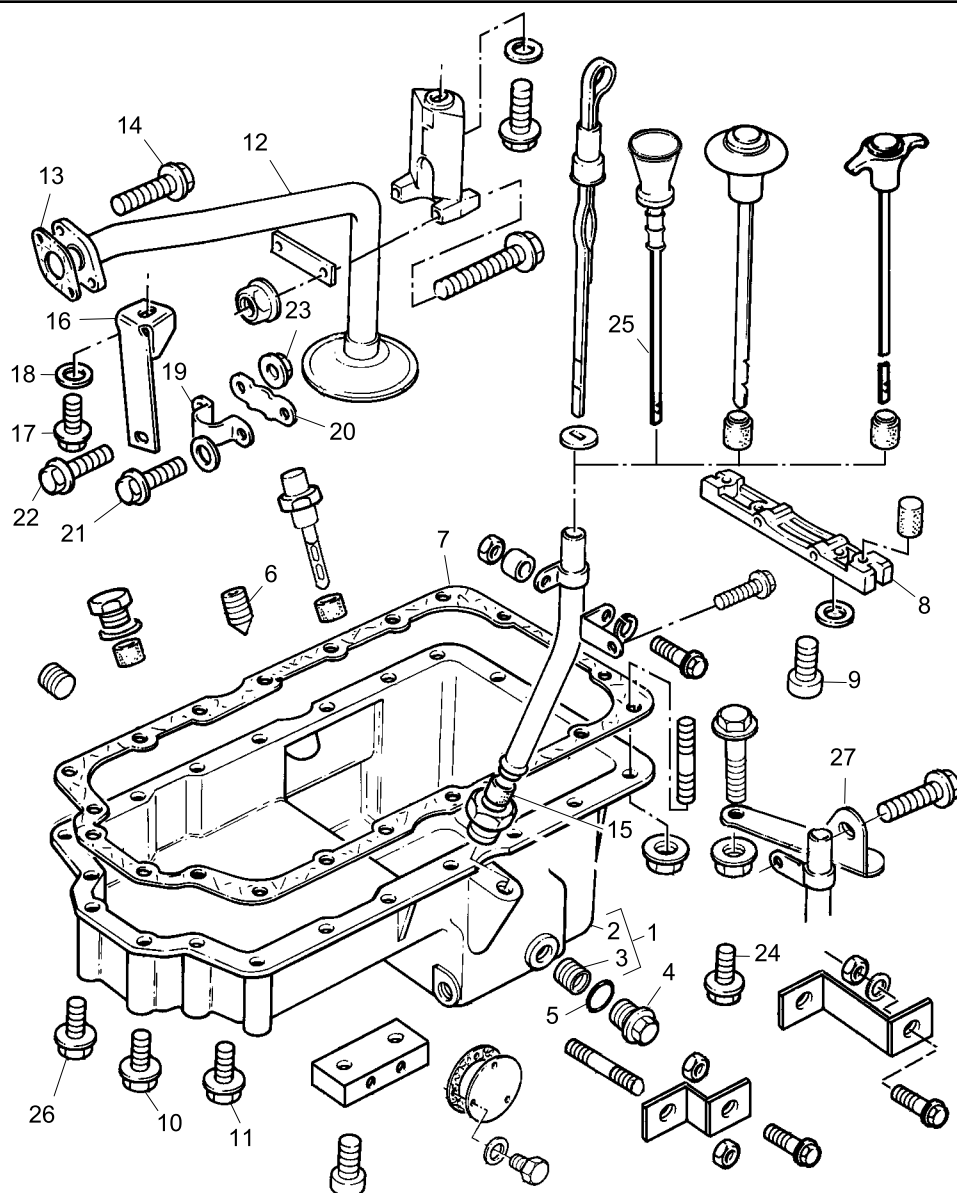


Lubricating Oil Sump	Plate B
	GBH02112

Item	Part No.	References	Qty.	Description	Notes
1	4145H094	 b.	1	SUMP	
2		 4145H094	1	SUMP	
3	2137435		2	INSERT	
4	32186405		2	PLUG	
5	2415715		2	SEAL - O RING	
6	2431A016		1	PLUG	
7	3681K005		1	GASKET - SUMP	
8	3627P043	 a.  U176357H	1	BRIDGE PIECE	
9	2311D039		2	SCREW	
10	2314K166		6	SCREW	
11	2314H003	 d.	11	SCREW	
12	3575A046		1	PIPE - OIL	
13	36832137		1	GASKET	
14	2314H007		2	SCREW	
15	33812116		1	OLIVE	
16	3821D012		1	BRACKET	
17	2314H002		1	SCREW	
18	0920484		1	WASHER	
19	3661C002		1	CLIP	
20	3661V002		1	PLATE	
21	2314F002		1	SCREW	
22	2314F004		1	SCREW	
23	2318A602		2	NUT	
24	2314H033		2	SCREW	
25	3178C122		1	DIPSTICK	
26	2314H004	 d.	1	SCREW	(1)
27	3823D024		1	BRACKET	

History					
a.					
8	3627P023	 U176356H	1	BRIDGE PIECE	
b.					
			1	SUMP	
	2137435		2	INSERT	
1	4145H065		1	SUMP	
c.					
	3353D005	 U879284H	1	NUT	
					
	3656P009	 U879284H	1	CLIP	
	4126X091	 U879284H	1	TUBE	
d.					

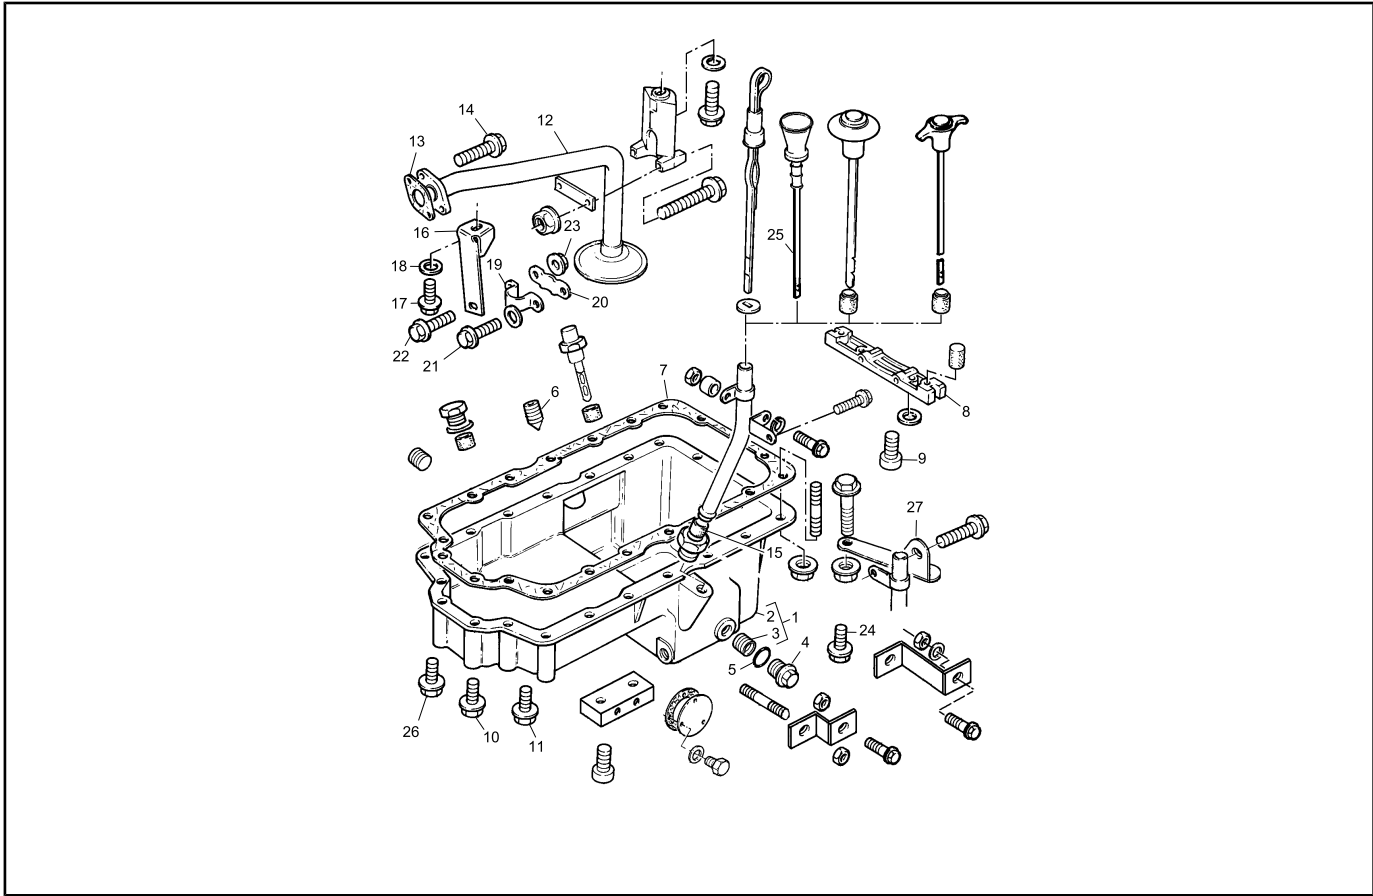


History					
11	2314H003		10	SCREW	
26	2314H004		2	SCREW	(1)
e.					
	3353D005	⇒	1	NUT	
	3656P009		1	CLIP	
	2137435		2	INSERT	
		⇒	1	SUMP	
Footnotes					
(1)	2ND AND 3RD HOLES FROM REAR, LEFT HAND SIDE.				

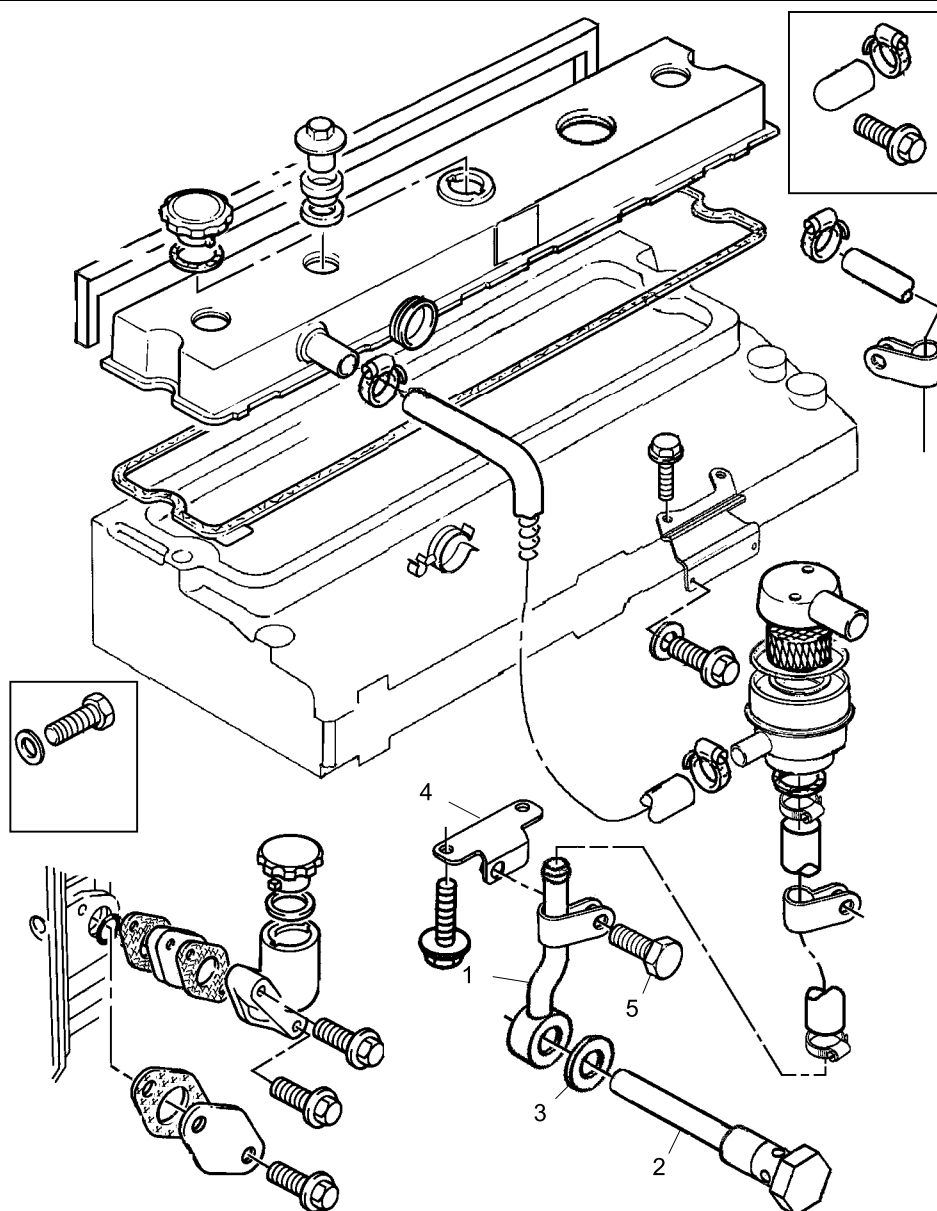


Lubricating Oil Sump	Plate Z
→ U509992H	GBH02112

Item	Part No.	References	Qty.	Description	Notes
1	3551V002		1	PIPE - BREATHER	
2	3218R017		1	PIPE - BREATHER	
3	2415934		2	WASHER	
4	3645H002		1	BRACKET ASSEMBLY	
5	2314H002		1	SCREW	

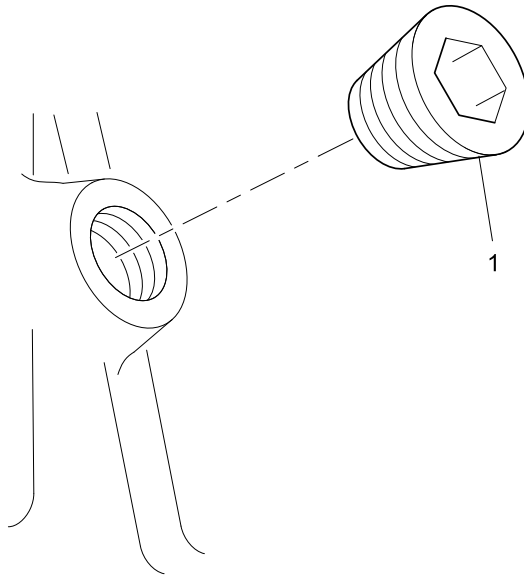


Lubricating Oil Sump	Plate Z
	GBH02112

Item	Part No.	References	Qty.	Description	Notes
1	2431A016		1	PLUG	

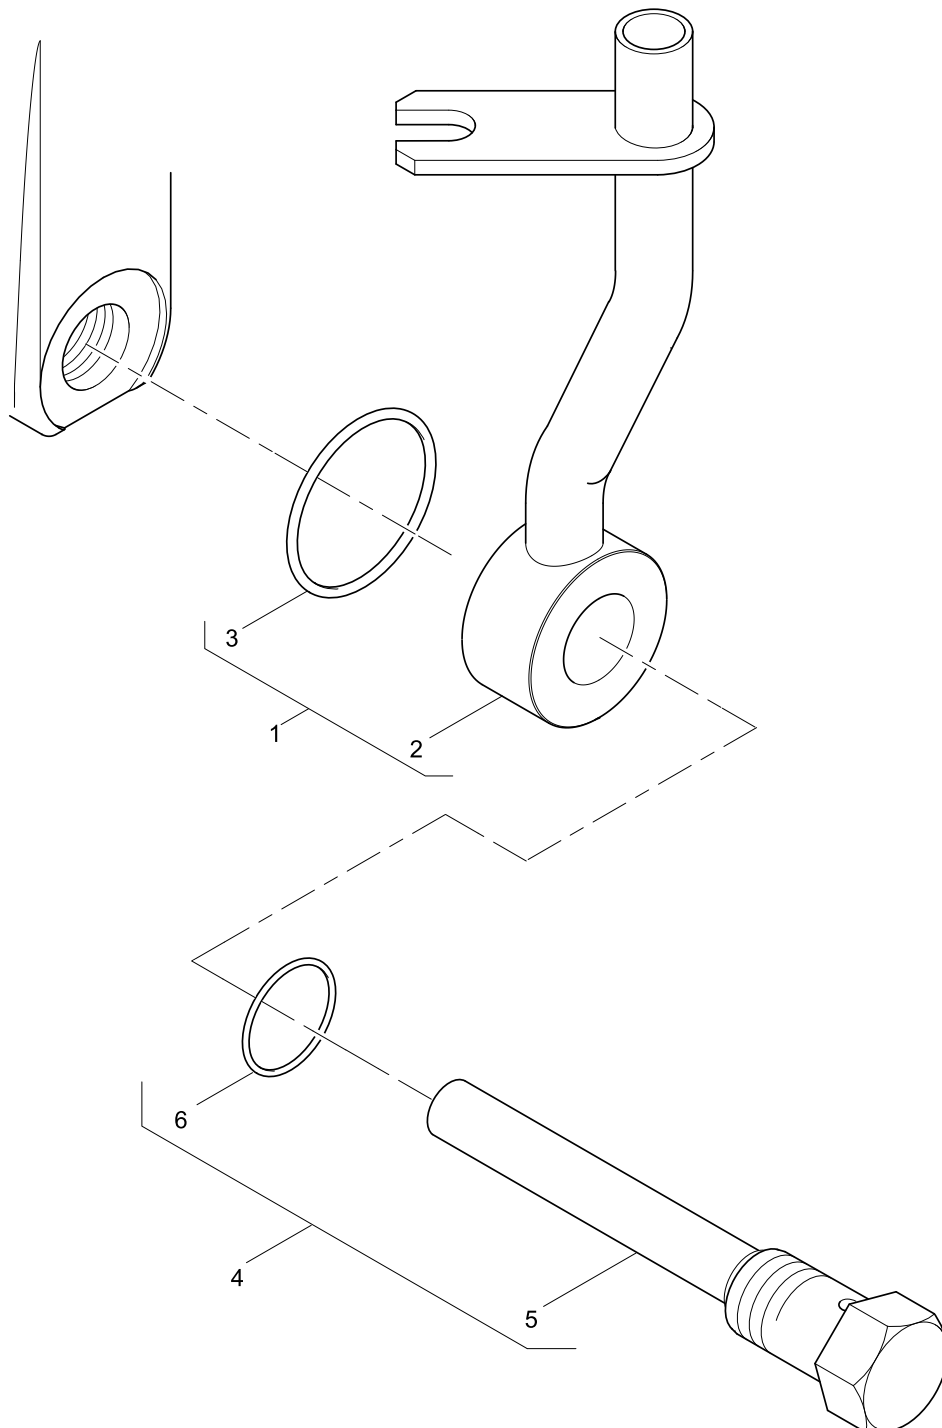

Lubricating Oil Sump	Plate G
↳ U509993H	GBH02112


Item	Part No.	References	Qty.	Description	Notes
1	4127A055		1	PIPE - BREATHER	
2		⇒ 4127A055	1	BREATHER VALVE	
3	2415789		1	SEAL - O RING	
4	4128A022		1	BANJO BOLT	
5		⇒ 4128A022	1	BANJO BOLT	
6	2415H502		1	SEAL - O RING	
7			1	SUMP	

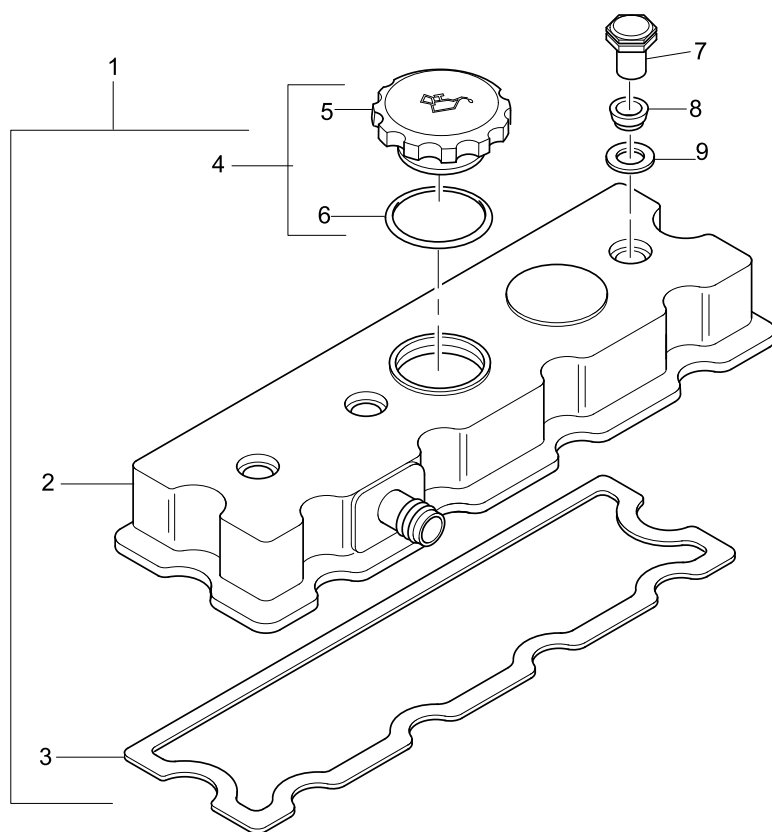

Cylinder Head Cover	Plate A
→ U096945G ● HBH02371	HBH02506


Item	Part No.	References	Qty.	Description	Notes
1	4142X187		1	CYLINDER HEAD COVER	
2		 4142X187	1	CYLINDER HEAD COVER	
3	3681A047		1	GASKET - ROCKER BOX COVER	
4	4142X099		1	OIL FILLER CAP	
5		  4142X099	1	OIL FILLER CAP	
6	2415A131		1	SEAL - O RING	
7	3274A003		3	NUT	
8	33817135		3	SEAL	
9	0920009		3	WASHER	

History					
a.	2415731		1	SEAL - O RING	

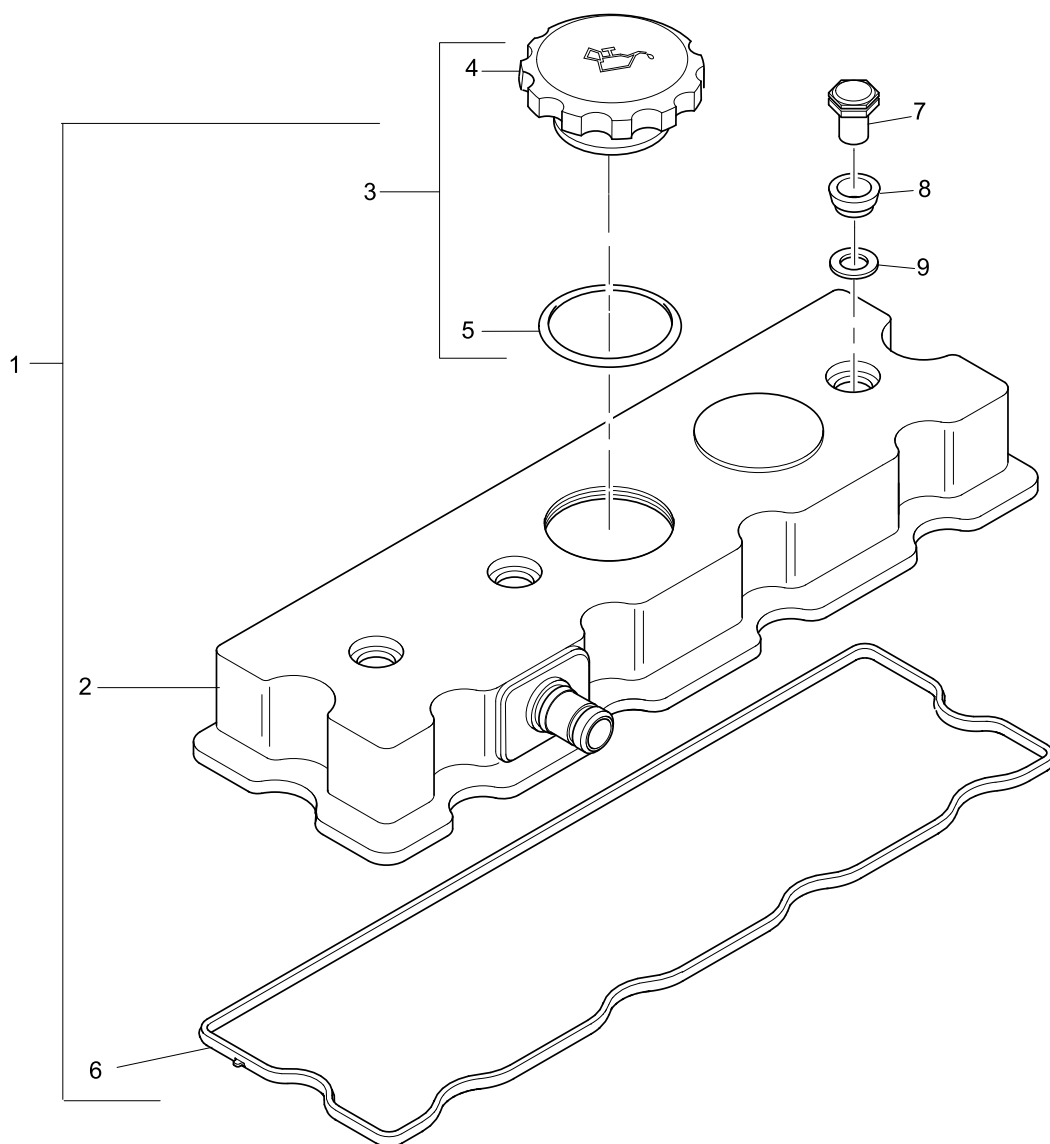


Cylinder Head Cover	Plate B
↳ U096946G ●○ HBH02371	HBH02506

Item	Part No.	References	Qty.	Description	Notes
1	4142X242		1	CYLINDER HEAD COVER	
2		⇒ 4142X242	1	CYLINDER HEAD COVER	
3	4142X099		1	OIL FILLER CAP	
4		 ⇒ 4142X099	1	OIL FILLER CAP	
5	2415A131		1	SEAL - O RING	
6	3681A049		1	GASKET - CYL. HEAD COVER	
7	3274A003		3	NUT	
8	33817135		3	SEAL	
9	0920009		3	WASHER	

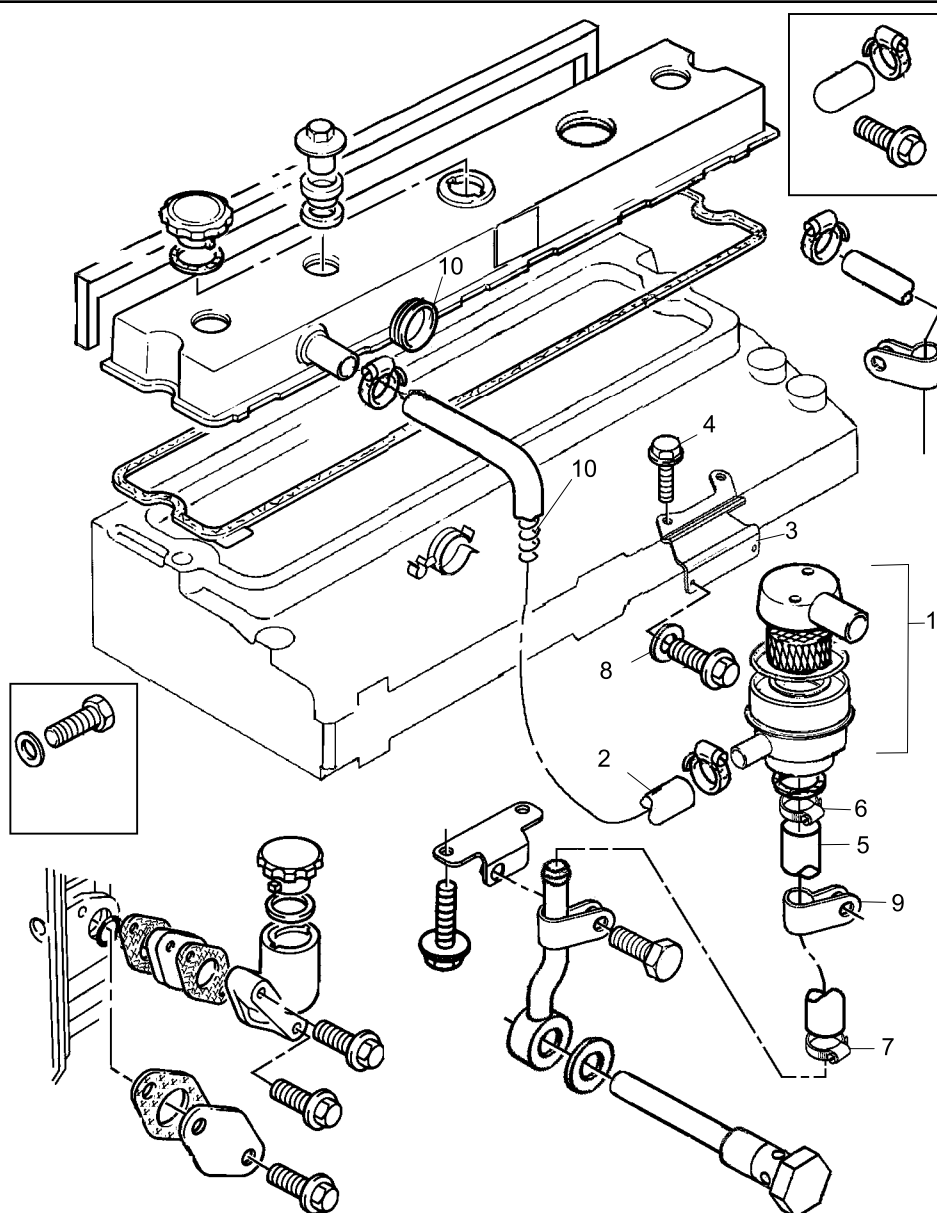


Breather	Plate A
●○ HBH02371	HBH02506

Item	Part No.	References	Qty.	Description	Notes
1	2652A012	●○ U2652A009	1	BREATHER	
2	3385A007	↔	1	HOSE	
3	3663T006		1	BRACKET ASSEMBLY	
4	2314J003		2	SCREW	
5	3386C020		1	HOSE	
6	2481883		1	CLIP	
7	2481883		1	CLIP	
8	33115117		2	SPACER	
9	2481D306		1	CLIP	
10	3175P004		1	SPRING	

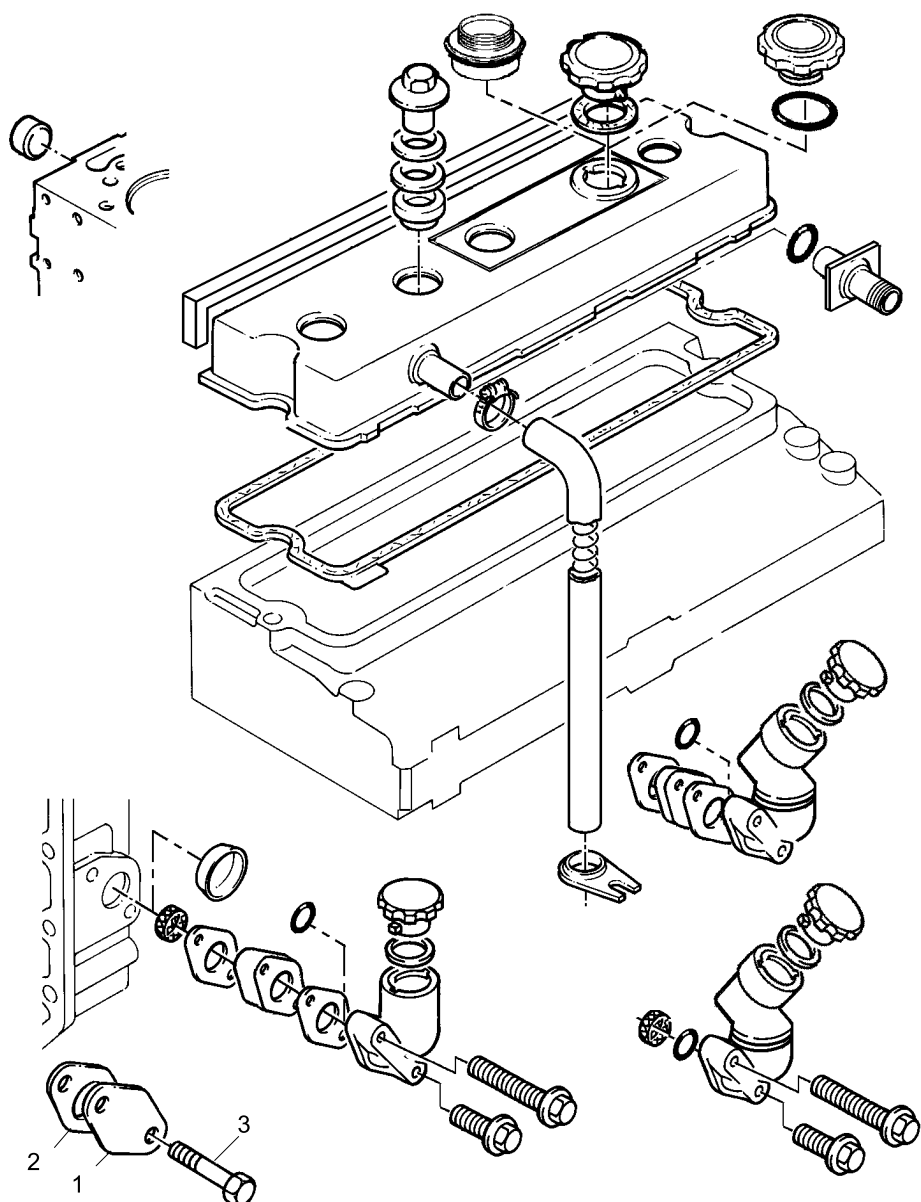


Blanking Plates	Plate A
→ U970521G ●○ HBH02371	HBH02506

Item	Part No.	References	Qty.	Description	Notes
1	3617A001	↔	1	PLATE	
2	3683H006		1	GASKET	
3	2314H003		2	SCREW	

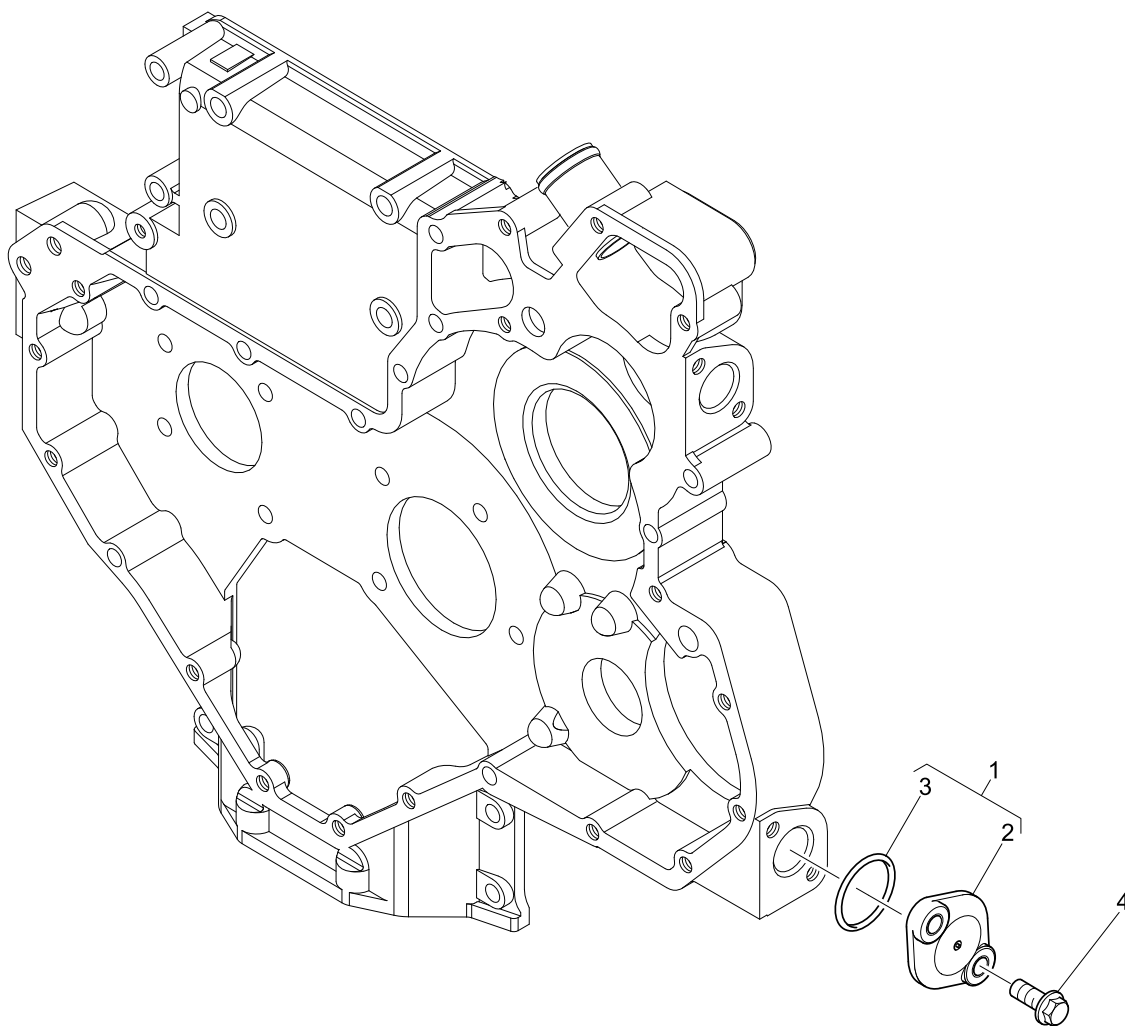

Blanking Plates	Plate B
↳ U970522G	HBH02506


Item	Part No.	References	Qty.	Description	Notes
1	4148K002		1	PLATE	
2		⇒ 4148K002	1	PLATE	
3	2415B121		1	SEAL - O RING	
4	2314H003		2	SCREW	

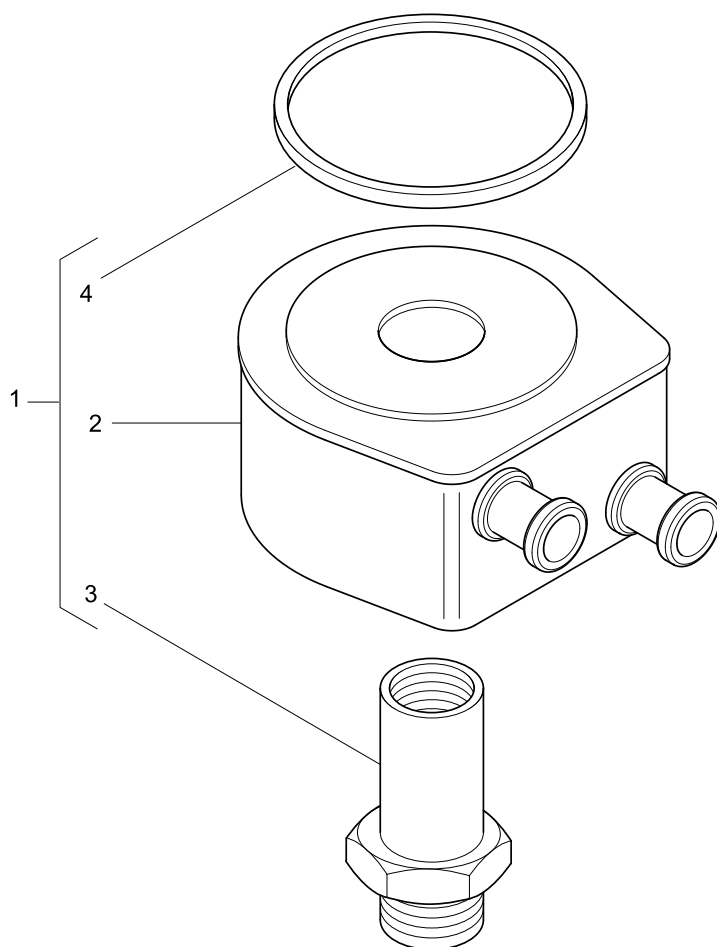

Oil Cooler	Plate B
	JBH02123

Item	Part No.	References	Qty.	Description	Notes
1	2486A218		1	OIL COOLER	
2		⇒ 2486A218	1	OIL COOLER	
3	2486A225		1	ADAPTOR	
4	2486A223		1	SEAL - O RING	


Oil Cooler Connections	Plate A
● JBH02072	JBH02123

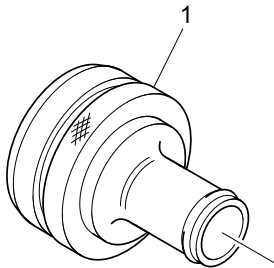

Oil Cooler Connections	Plate A
● JBH02072	JBH02123

Item	Part No.	References	Qty.	Description	Notes
1	3346C006		1	ADAPTOR	

Oil Filter	Plate A
JBH02072	JBH02123

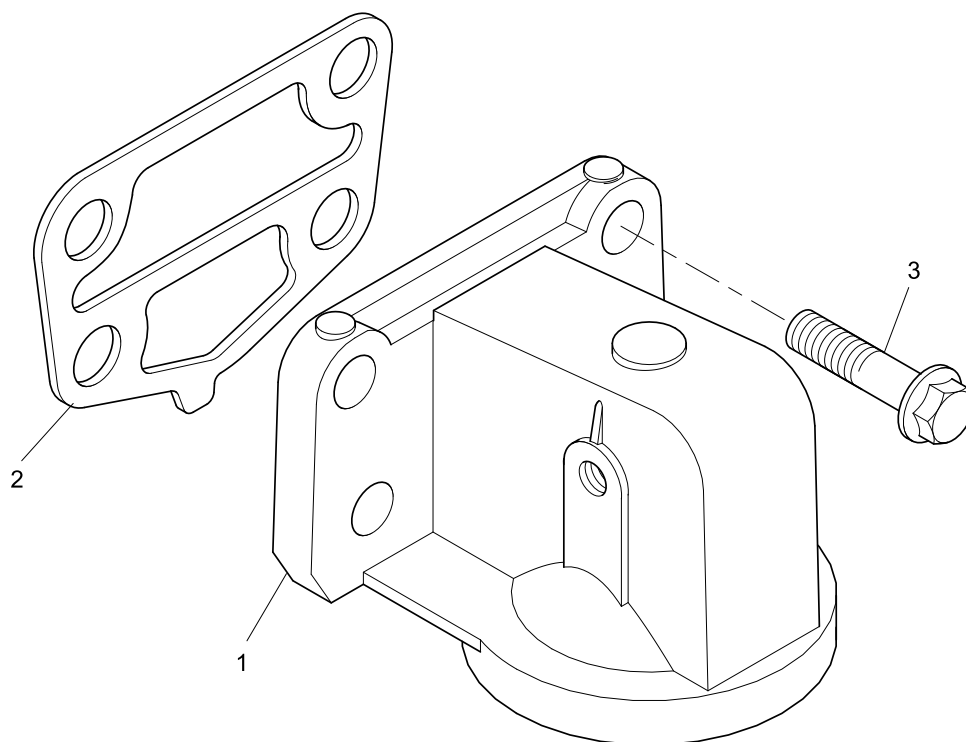


Oil Filter	Plate A
● JBH02072	JBH02123

Item	Part No.	References	Qty.	Description	Notes
1	3773K051		1	OIL FILTER HEAD	
2	3686T006		1	GASKET - OIL FILTER HEAD	
3	2314J034		4	SCREW	


History					
a.	2654403	→ U879284H	1	OIL FILTER	

Blanking Plates	Plate A
JBH02072	JBH02123

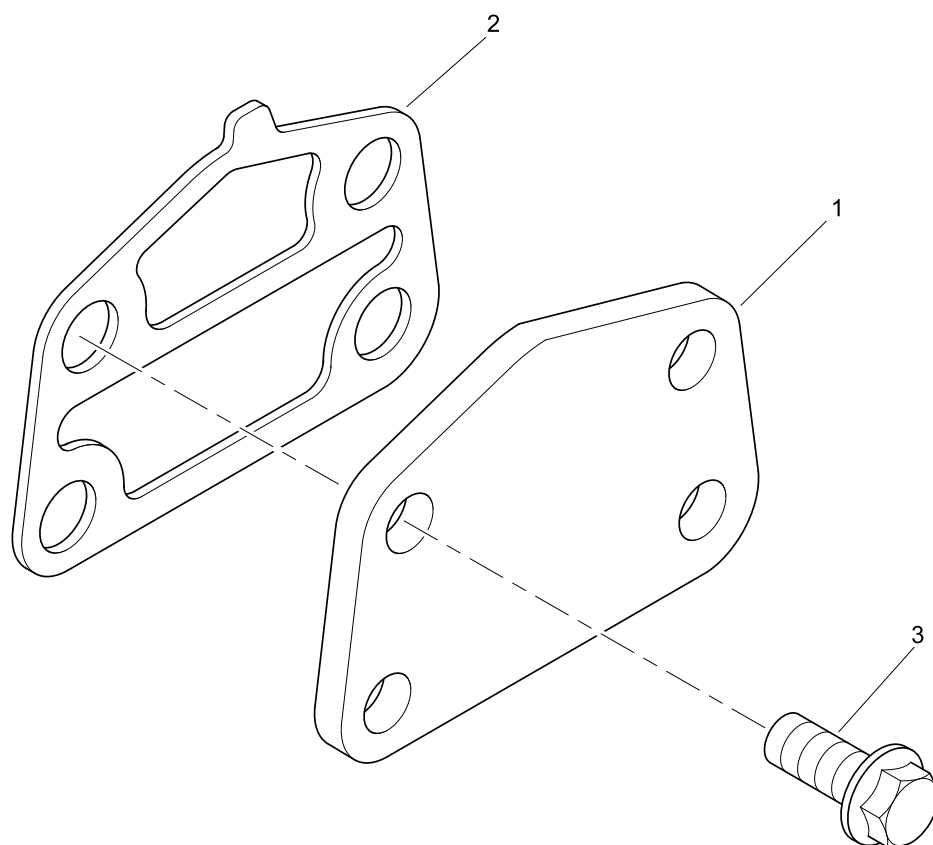


Blanking Plates	Plate A
● JBH02072	JBH02123

Item	Part No.	References	Qty.	Description	Notes
1	3623H008		1	PLATE	
2	3686T006		1	GASKET - OIL FILTER HEAD	
3	2314J033		4	SCREW	

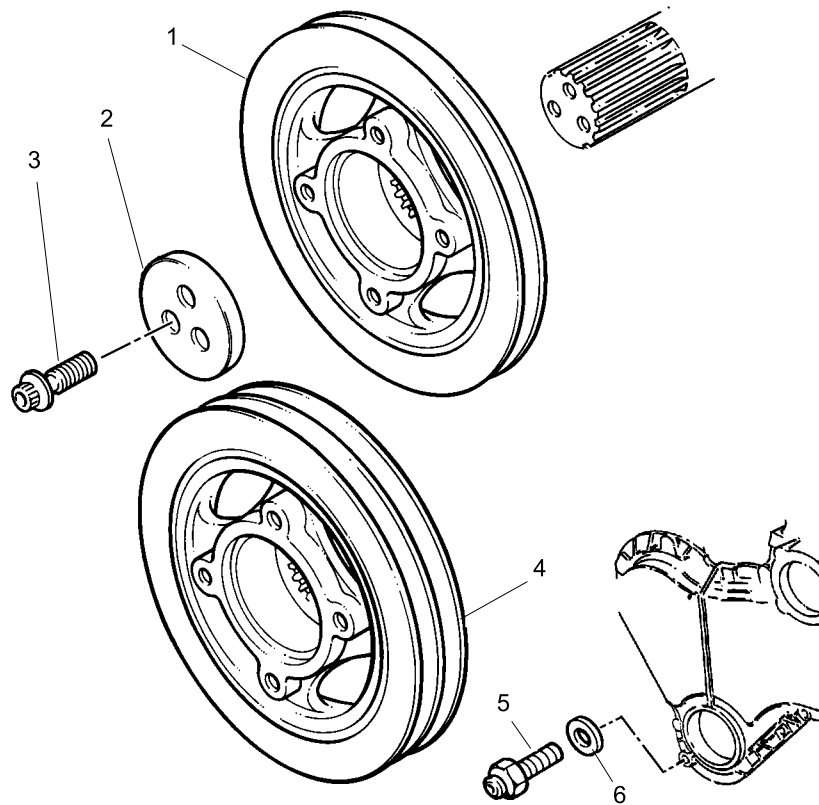

Front End Drive Input	Plate A
	KBH00535


Item	Part No.	References	Qty.	Description	Notes
2	3241N001		1	BLOCK	
3	32186137		3	BOLT	
4	3115T051		1	CRANKSHAFT PULLEY	

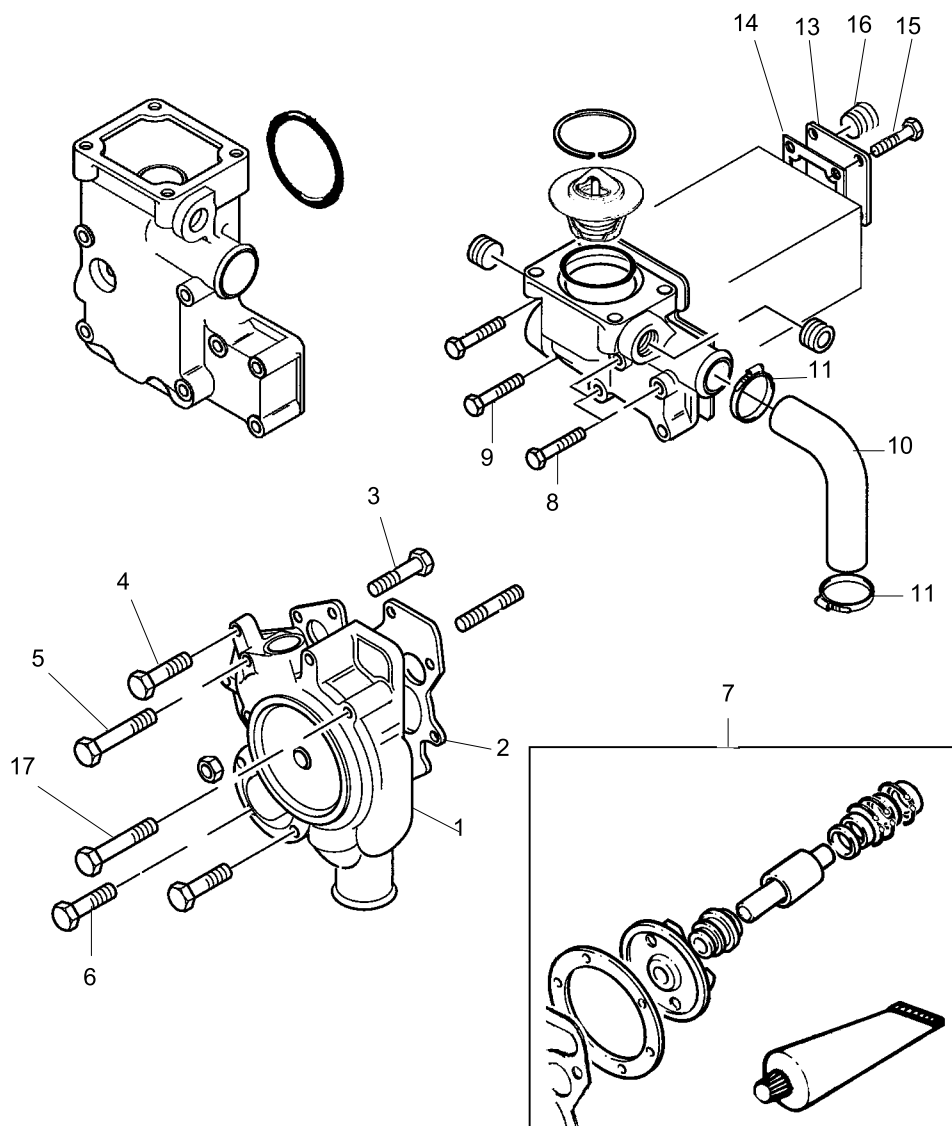

Water Pump, Thermostat & Heat Exchanger	Plate F
	LBH02150


Item	Part No.	References	Qty.	Description	Notes
1	U5MW0192	 d. g.	1	WATER PUMP KIT	
2	3687Y016		1	GASKET - WATER PUMP	
3	2314H013	→ U545542K	2	SCREW	
4	2314K159		1	SCREW	
5	2314H017		3	SCREW	
6	2314H034		3	SCREW	
7	U7LW0173	 b. g.	1	REPAIR KIT - WATER PUMP	
8	2314H008		3	SCREW	
9	2314K161		3	SCREW	
10	U5MH0056		1	HOSE KIT	
11	0180067	 a.	1	CLIP	
12	0180067		1	CLIP	
13	3623H024		1	COVER	
14	U3685R009		1	GASKET	
15			4	SCREW	(1)
16			1	PLUG	(2)
17	2314K166		1	SCREW	
Service Options					
1	U5MW0178R		1	WATER PUMP - EXCHANGE	

History					
a.					
11	21825198		2	CLIP	
b.					
7	U7LW0161		1	REPAIR KIT - WATER PUMP	
c.					
	2314H012	→ U545541K	2	SCREW	
d.					
	3687Y016		1	GASKET - WATER PUMP	
1	U5MW0178		1	WATER PUMP KIT	
e.					
	2431154		1	PLUG	
f.					
	4133L027		1	THERMOSTAT HOUSING	
	2415A102		1	O RING	
	3687Y016		1	GASKET - WATER PUMP	
34	21825198		2	CLIP	
g.					
	0180067		2	CLIP	
	3687Y016		1	GASKET - WATER PUMP	

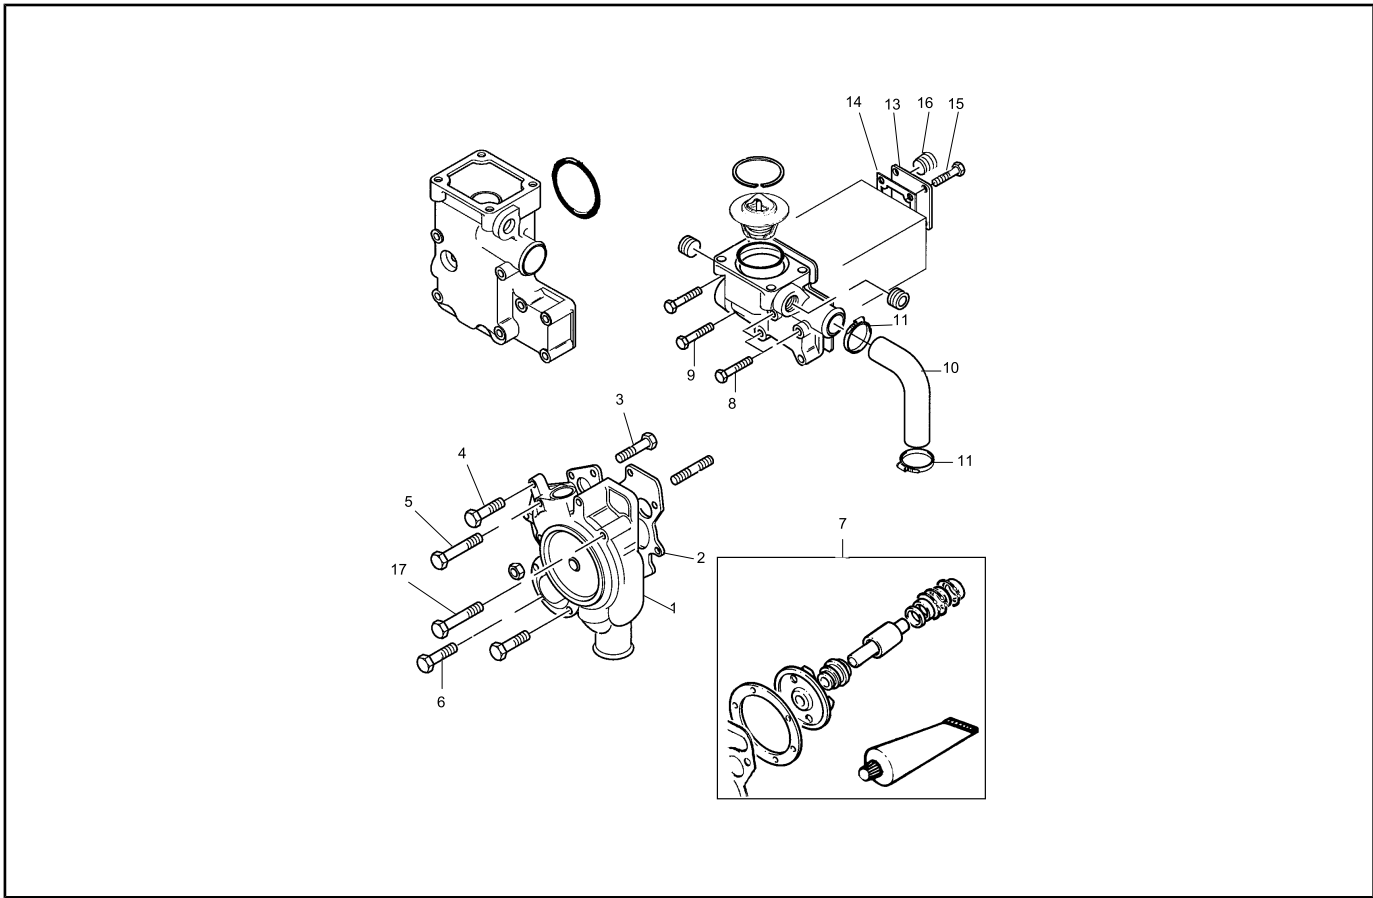

History				
1	U5MW0164	↺	1	WATER PUMP
7	U7LW0147		0	REPAIR KIT - WATER PUMP


Footnotes	
(1)	REFER TO RELEVANT OPTION ACCESSORY PACKS
(2)	NOT FITTED ON THIS APPLICATION

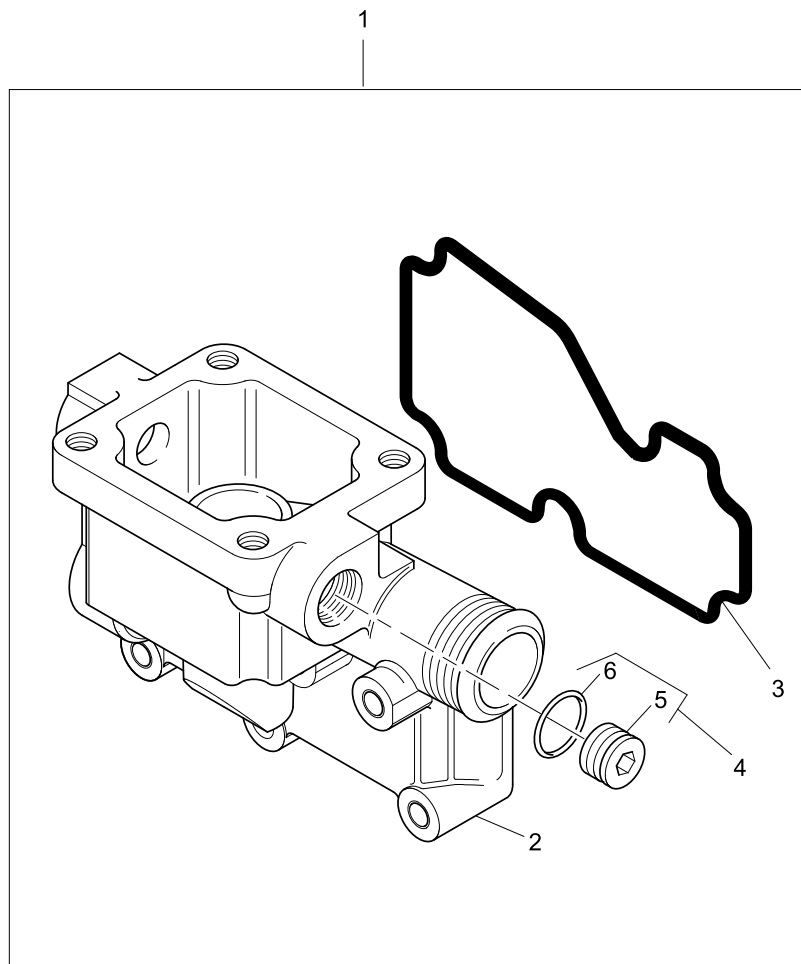

Water Pump, Thermostat & Heat Exchanger	Plate B
	LBH02150


Item	Part No.	References	Qty.	Description	Notes
1	4133L054	 a.	1	THERMOSTAT HOUSING	
2			1	THERMOSTAT HOUSING	
3	3682A015		1	SEAL - THERMOSTAT HOUSING	
4	4148K011		3	PLUG	
5		 4148K011	1	PLUG	
6	2415H509		1	SEAL - O RING	

History					
a.					
			1	THERMOSTAT HOUSING	
	2415A102		1	O RING	
	2415H509		1	SEAL - O RING	
			1	PLUG	
	4148K011		3	PLUG	
1	4133L027		1	THERMOSTAT HOUSING	
b.					
	3781A504		3	PLUG	

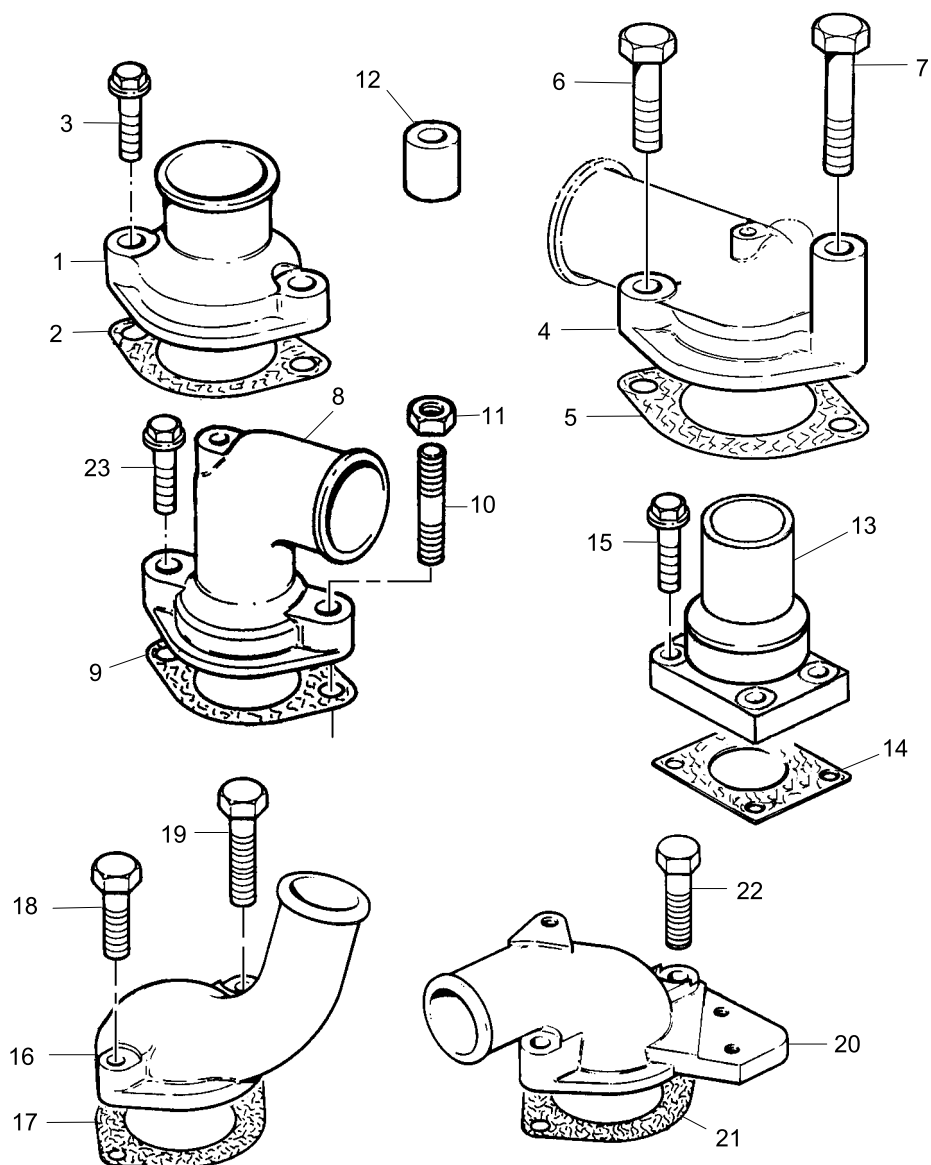

Water Outlet & Inlet	Plate B
	LDH00599


Item	Part No.	References	Qty.	Description	Notes
13	3766P411	→❗ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	CONNECTION	
14	3684N017	→❗ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	GASKET - THERMOSTAT HSG	
15	2314H003	→❗ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	4	SCREW	

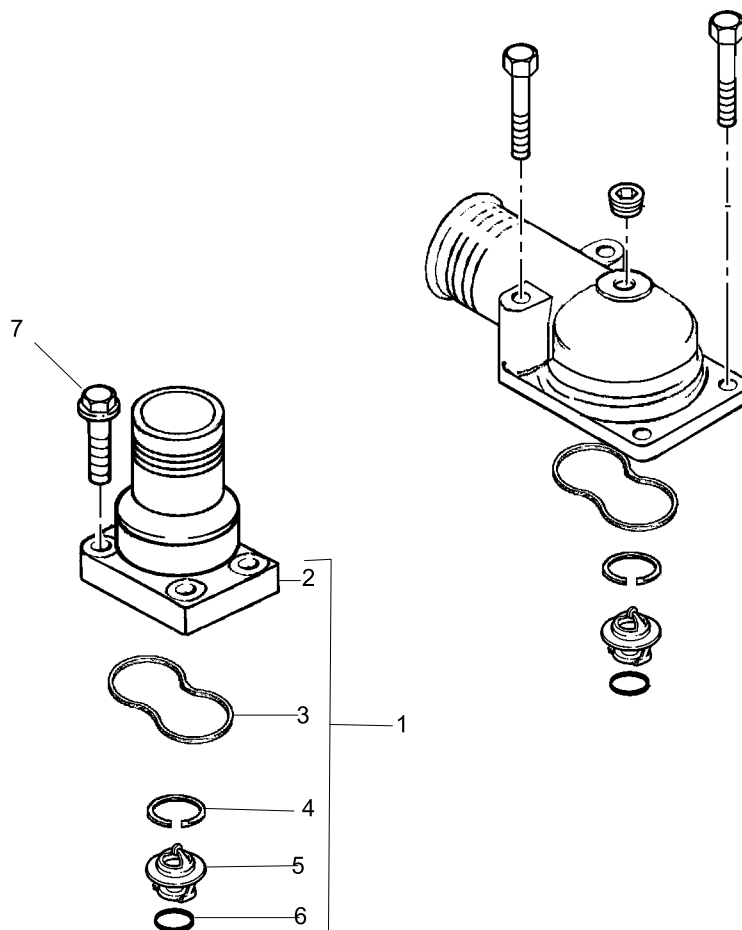

Water Outlet & Inlet	Plate D
	LDH00599


Item	Part No.	References	Qty.	Description	Notes
1	4133L036	 a.	1	CONNECTION	
2			1	CONNECTION	
3	2415H492		1	SEAL - WATER OUTLET	
4	3381J008		1	SNAP RING	
5	2485C036		1	THERMOSTAT	
6	2415A090		1	SEAL - O RING	
7	2314H003	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	4	SCREW	

History					
a.					
	2415H492	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	1	SEAL - WATER OUTLET	
	2485C025	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	1	THERMOSTAT	
	3381J008	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	1	SNAP RING	
	2415A090	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	1	SEAL - O RING	
			1	CONNECTION	
1	4133L019	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	1	CONNECTION	

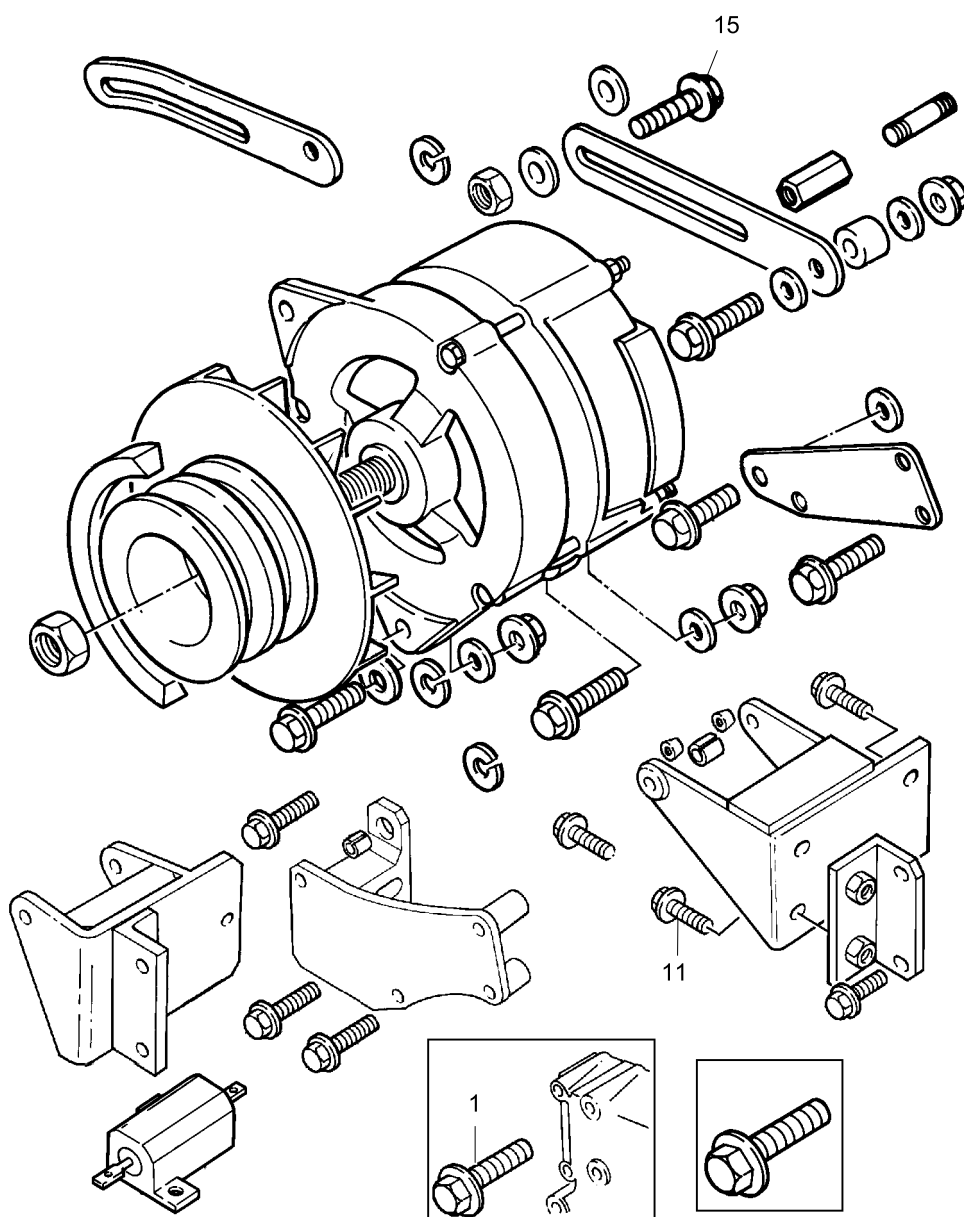

Alternator & Generator	Plate A
	NDH01553

Item	Part No.	References	Qty.	Description	Notes
1	2314H011	 → ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	2	SCREW	
1	2314K161	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn]	2	SCREW	
11	2314H013		1	SCREW	
15	2314H005		2	SCREW	

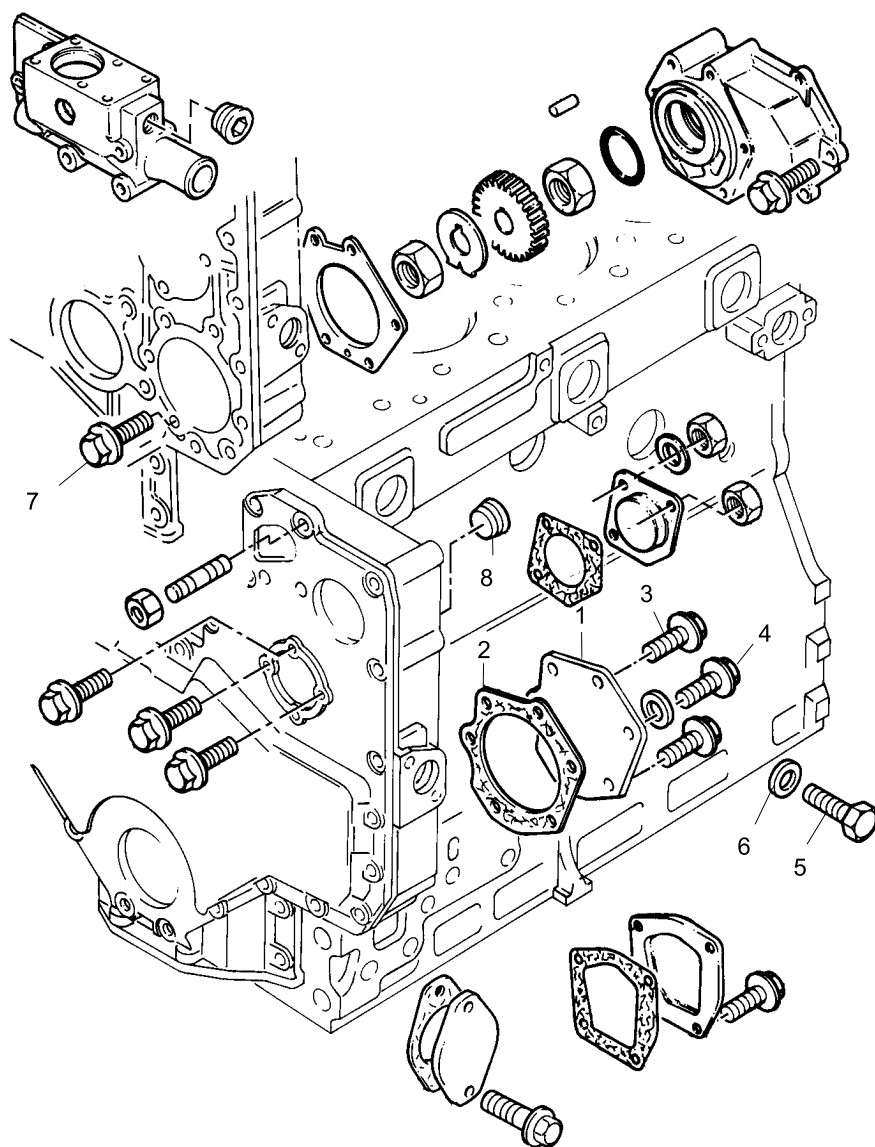


Gear Drive Auxiliary Drive Option	Plate A
	QDH01204

Item	Part No.	References	Qty.	Description	Notes
1	3753V018	 U170759H	1	PLATE	
2	3687H019	 b. → U170759H	1	GASKET	
3	2314H032	● 2314H031	5	SCREW	
4	2314J002		1	SCREW	
5	2314C049		1	SCREW	(2)
6	2415D053	 a.	1	WASHER	
7	2314J004		1	SCREW	(3)
8	2431154		1	PLUG	(1)

History					
a.					
6	0920155		1	WASHER	
b.					
2	3687H005		1	GASKET	
c.					
	2431154		1	PLUG	(1)

Footnotes	
(1)	LOCATES IN WATER BY-PASS CONNECTION
(2)	LOCATES IN COMPRESSOR/EXHAUSTER OIL FEED HOLE
(3)	FRONT COVER TO TIMING CASE


Gear Drive Auxiliary Drive Option		Plate B
↳ U170760H		QDH01204

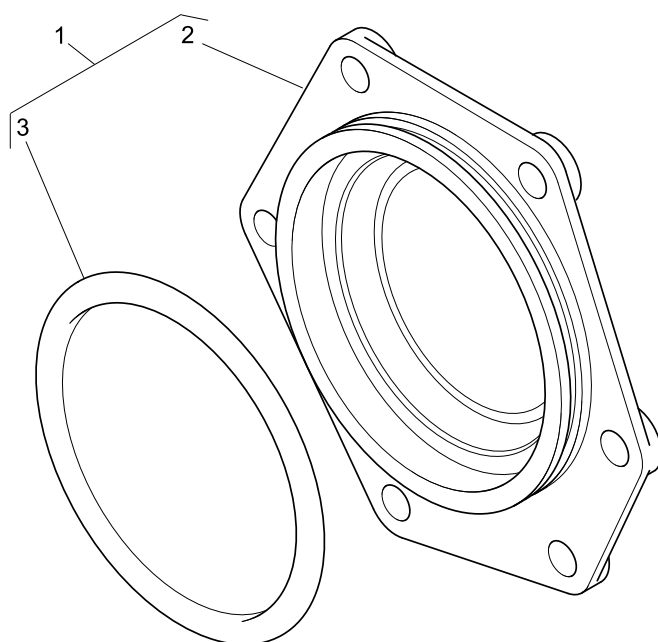

Gear Drive Auxiliary Drive Option	Plate B
↳ U170760H	QDH01204


Item	Part No.	References	Qty.	Description	Notes
1	4148K016	 a.	1	PLATE	
2		 a.  4148K016	1	PLATE	
3	2415H549		1	SEAL - O RING	

History					
a.					
	2415H503		1	SEAL - O RING	
1	4148K006		1	PLATE	
2			1	PLATE	

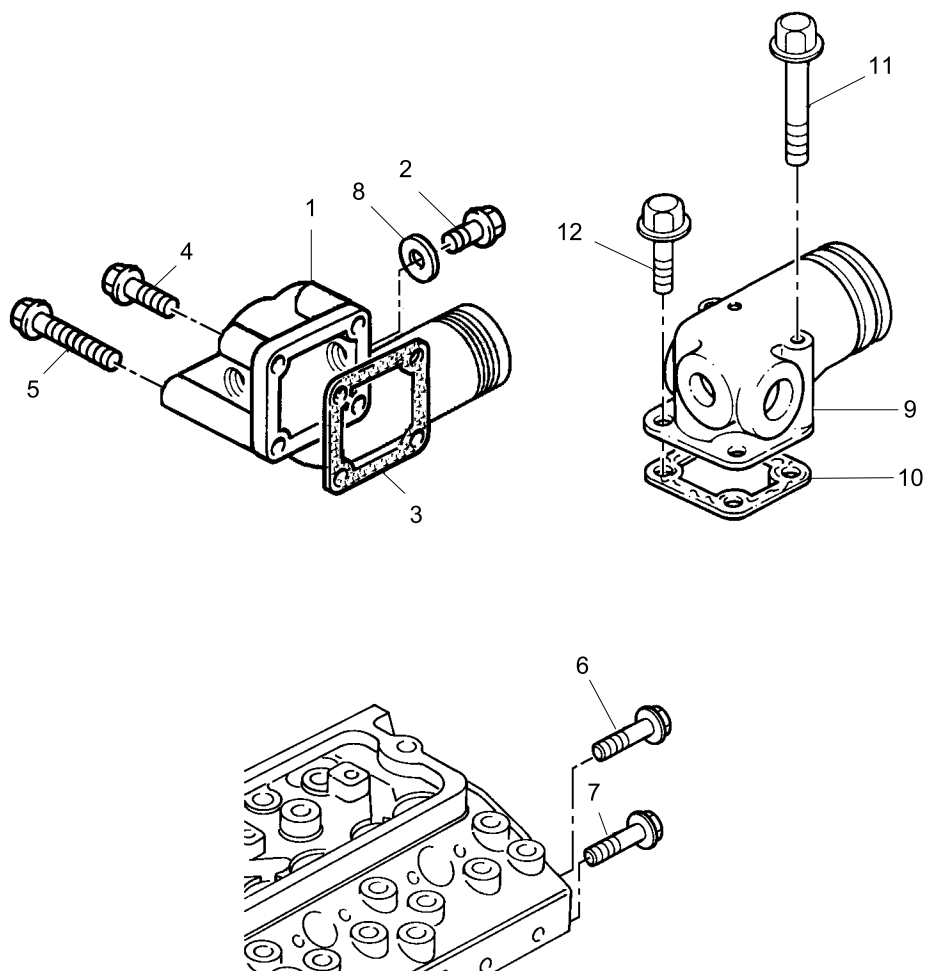

Air Cleaner & Restriction Indicator	Plate D
	TDH00293

Item	Part No.	References	Qty.	Description	Notes
6	2314H002		3	SCREW	

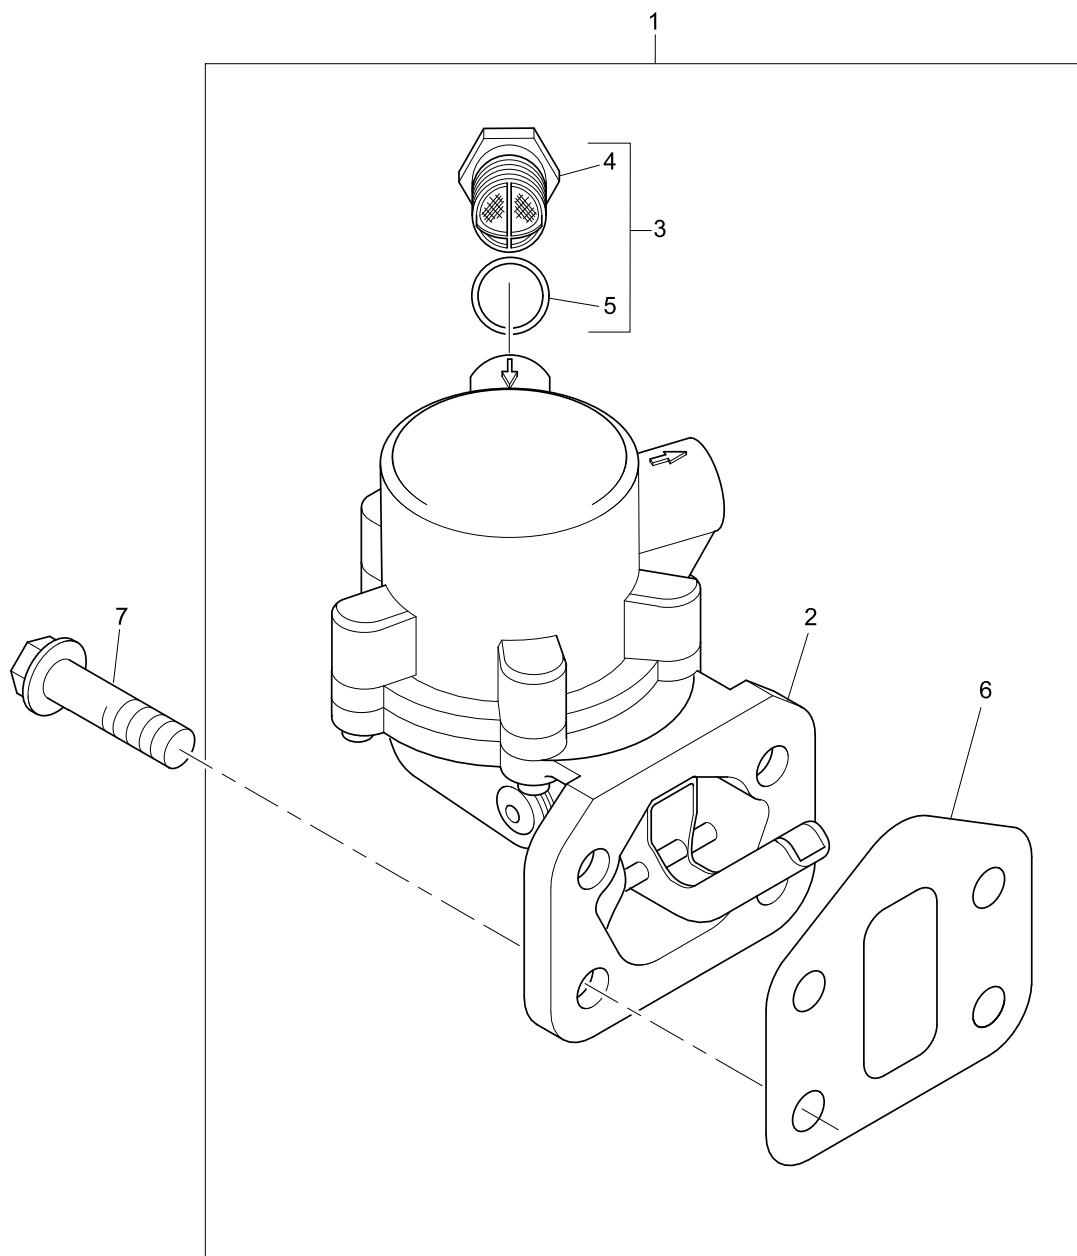


Low Pressure Fuel System	Plate A
→ U879284H	VBH01906

Item	Part No.	References	Qty.	Description	Notes
1	ULPK0034	 b.	1	LIFT PUMP KIT	(1)
2		  ULPK0034	1	LIFT PUMP	
3	U5MK0617		1	STRAINER	
4		 U5MK0617	1	ADAPTOR	
5		 U5MK0617	1	O RING	
6	3685R007	 a.	1	GASKET - LIFT PUMP	
7	2314H033		4	SCREW	


History					
a.					
6	36851123		1	GASKET - LIFT PUMP	
b.					
			1	COVER	
			1	SPRING	
	ULPR0001		0	REPAIR KIT - LIFT PUMP	
			1	HOUSING	
	36851123		1	GASKET - LIFT PUMP	
1	ULPK0005		1	LIFT PUMP	

Footnotes	
(1)	NO SERVICED PARTS

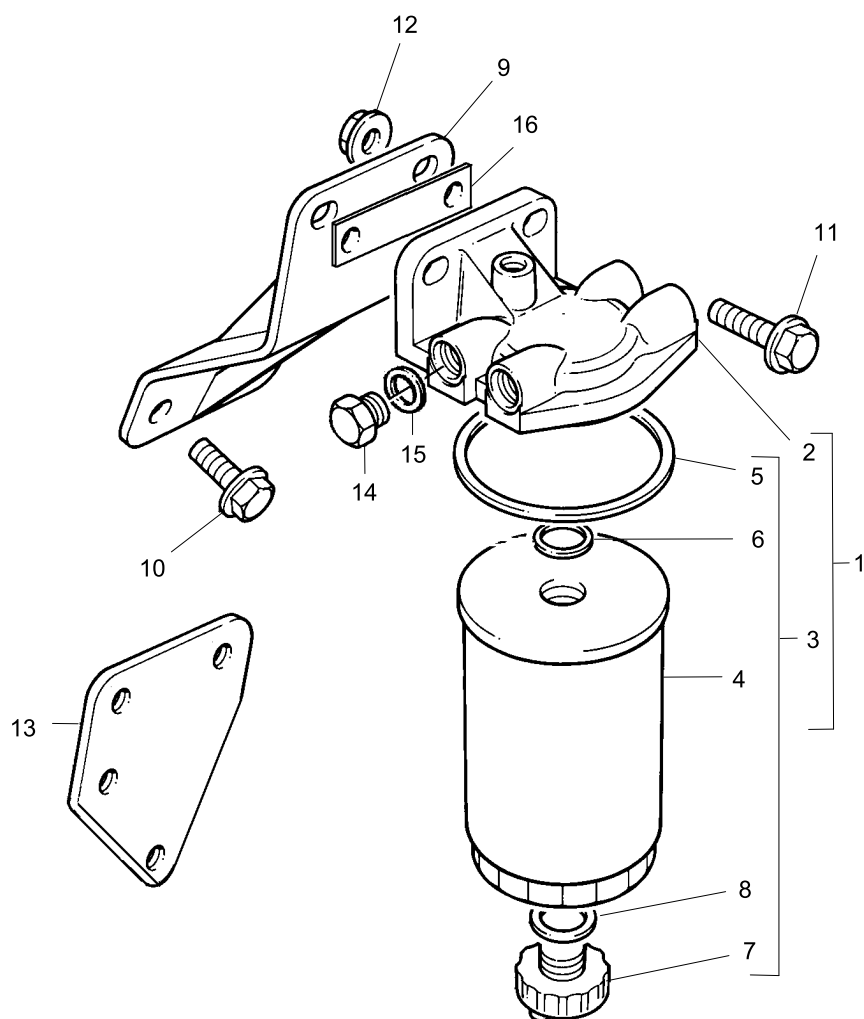

Low Pressure Fuel System	Plate E
→ U879284H	VBH01906


Item	Part No.	References	Qty.	Description	Notes
1	2656F802		1	FUEL FILTER ASSEMBLY	
2		 REF.1	1	FUEL FILTER HEAD	
3	26560608		1	FUEL FILTER	
4		 REF.3	1	ELEMENT	
5		 REF.3	1	SEAL	
6		 REF.3	1	SEAL	
7	26560609		1	DRAIN PLUG	
8	26431192		1	WASHER	
9	3831E006		1	BRACKET	
10	2314J002		2	SCREW	
11	2314J004		2	SCREW	
12	2318A604		2	NUT	

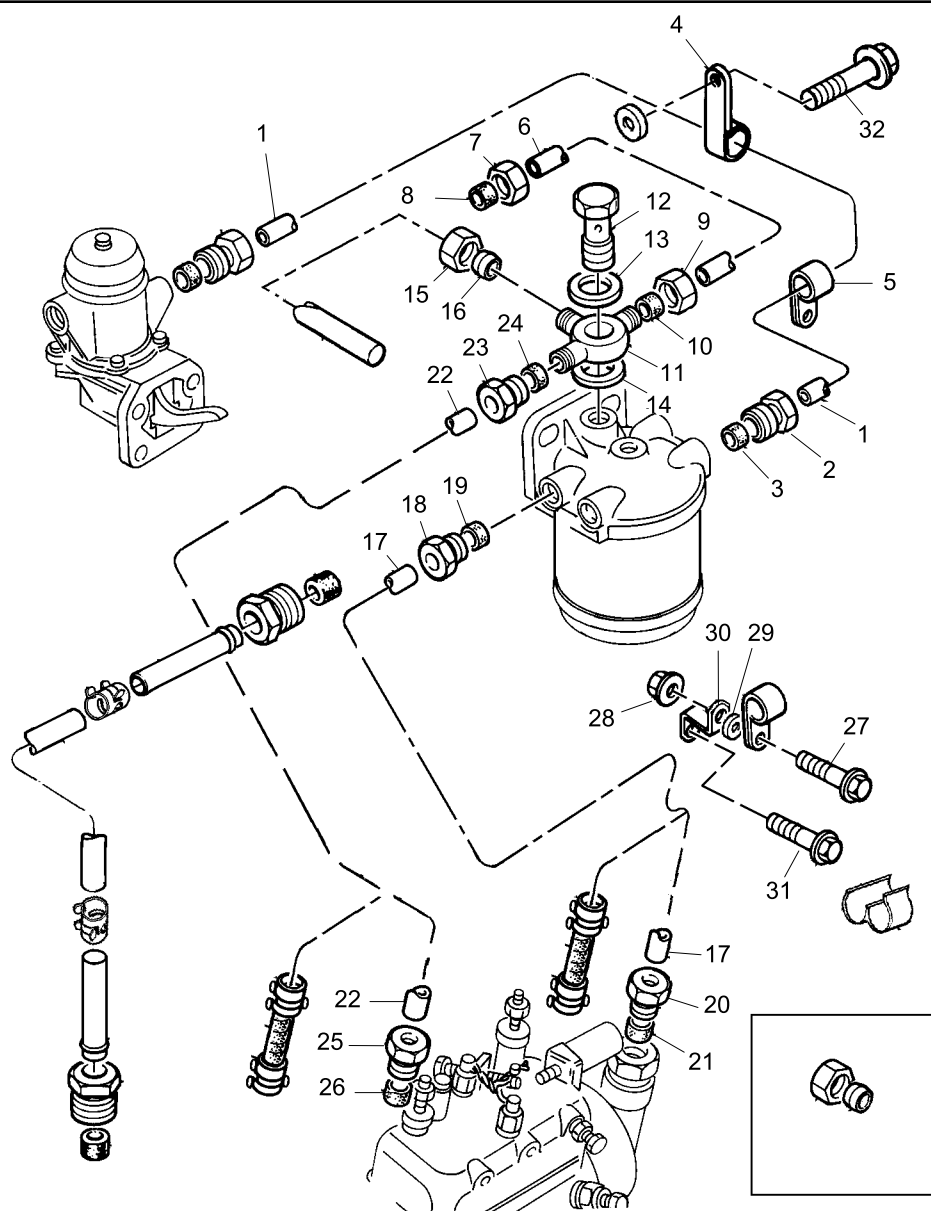

Low Pressure Fuel System	Plate Z
→ U879284H	VBH01906

Item	Part No.	References	Qty.	Description	Notes
1	4125A033	 b.	1	PIPE - LIFT PUMP TO FILTER	
2	33532129		2	NUT	
3	33811114		2	OLIVE	
4	3656P004		1	CLIP	
5	3656P008		1	CLIP	
6	3435P019		1	PIPE - FUEL	(2)
7	33225412		1	NUT	
8	33811112		1	OLIVE	
9	33225412		1	NUT	
10	33811112		1	OLIVE	
11	3172X004		1	CONNECTION	
12	3218R037	 a. → 01/06/03	1	BANJO BOLT	
13	2411D010	 a.	1	WASHER	
14	2411D010	 a.	1	WASHER	
15	0576112		1	NUT	
16	0566003		1	OLIVE	
17	4122M012		1	PIPE	(3)
18	33532129		1	NUT	
19	33811114		1	OLIVE	
20	33532129		1	NUT	
21	33811114		1	OLIVE	
22	4122T008		1	PIPE	(4)
23	33532129		1	NUT	
24	33811114		1	OLIVE	
25	33532129		1	NUT	
26	33811114		1	OLIVE	
27	2314F006		1	SCREW	
28	2318A602		1	NUT	
29	0920496		1	WASHER	
30	3653R002		1	BRACKET	
31	2314F002		1	SCREW	
32	2314H003		1	SCREW	

History					
a.					
12	3218R013	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn] → 31/05/03	1	BANJO BOLT	
13	2415928	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn] → 31/05/03	1	WASHER	

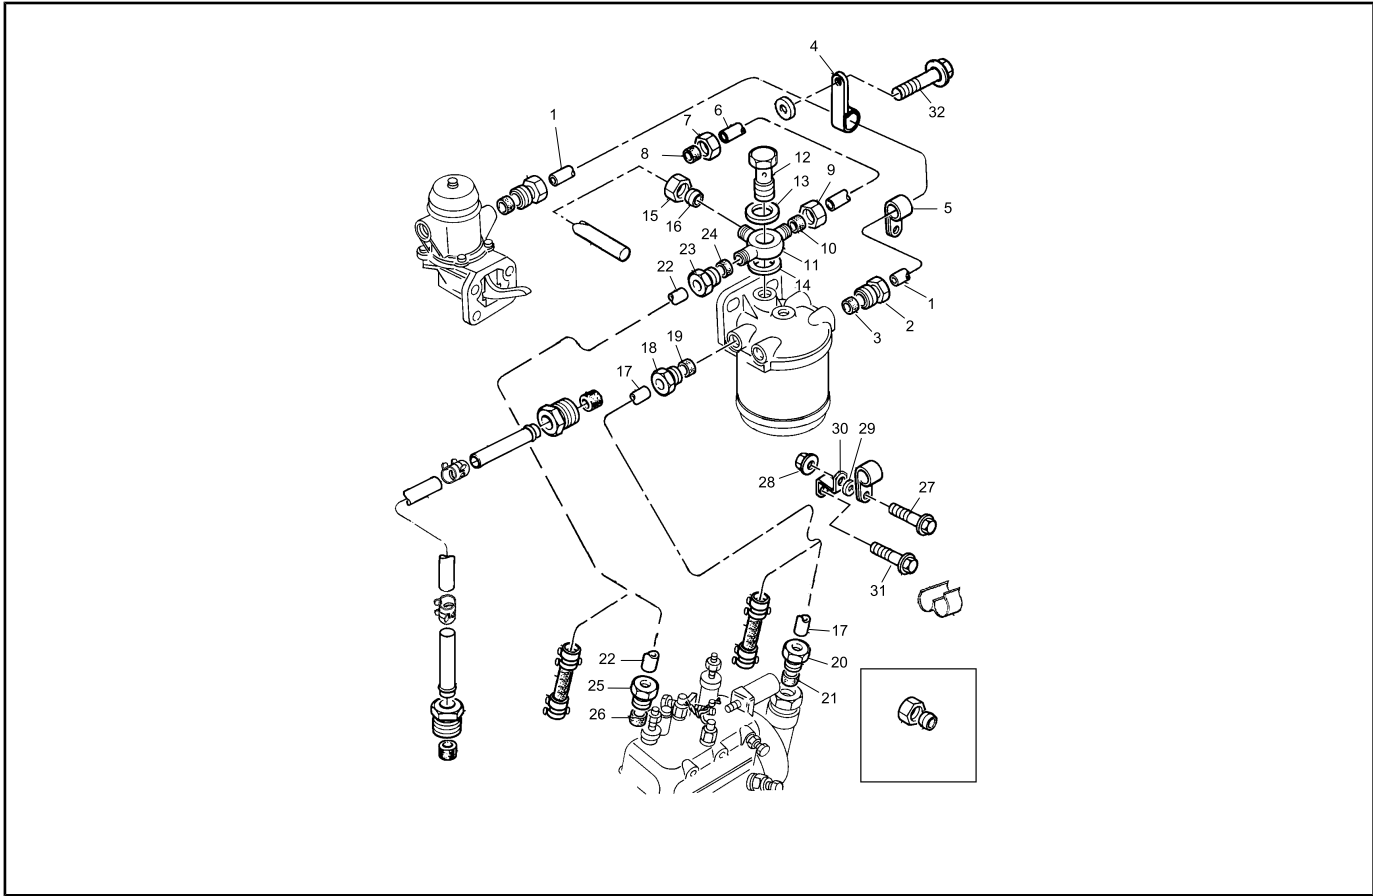


History				
14	2415928	→ ERROR: INCORRECT CUT IN FORMAT [ProductLine~CutIn] → 31/05/03	1	WASHER
b.				
	3656P008		1	CLIP
	3656P004		1	CLIP
	33811114		1	OLIVE
	33811114		1	OLIVE
	33811114		1	OLIVE
	33811114		1	OLIVE
	33811114		1	OLIVE
	33811114		1	OLIVE
	0095344	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	BOLT
	0920146	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	WASHER
	0920146	→ ERROR: INCORRECT CUT OUT FORMAT [ProductLine~CutOut]	1	WASHER
	33532129		1	NUT

Low Pressure Fuel System	Plate Z
→ U879284H	VBH01906

History				
	33532129	1	NUT	
	33532129	1	NUT	
	33532129	1	NUT	
	33532129	1	NUT	
	33532129	1	NUT	
1	4125T011	1	PIPE	(1)

Footnotes	
(1)	FUEL LIFT PUMP TO FUEL FILTER
(2)	INJECTOR LEAK OFF TO FUEL FILTER
(3)	FUEL FILTER TO FUEL INJECTION PUMP
(4)	FUEL INJECTION PUMP TO FUEL FILTER

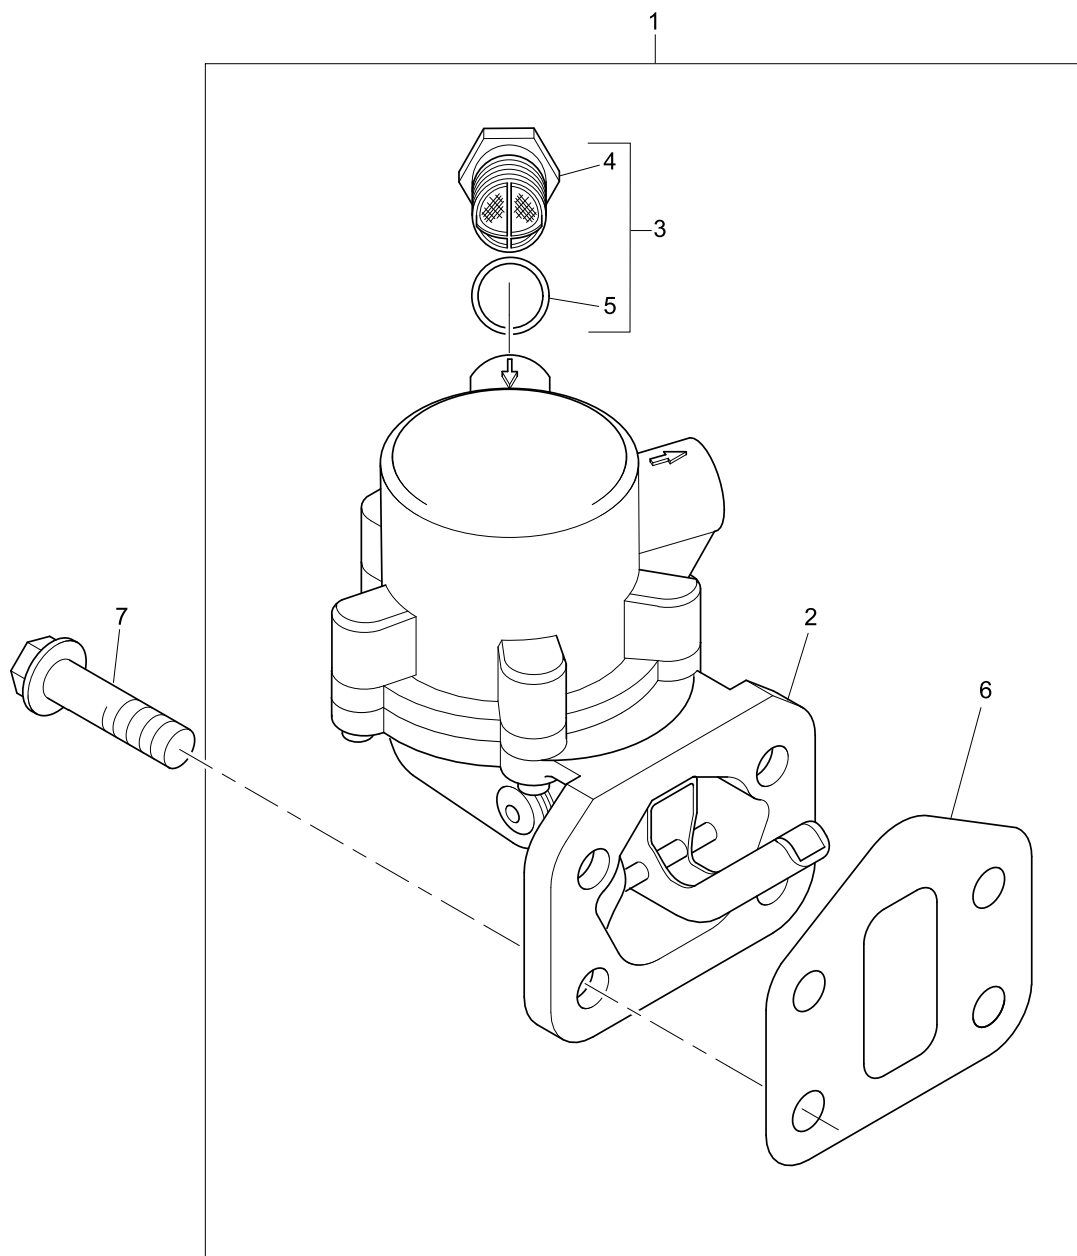


Lift Pump	Plate A
↳ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	ULPK0034		1	LIFT PUMP KIT	(1)
2		 ULPK0034	1	LIFT PUMP	
3	U5MK0617		1	STRAINER	
4		 U5MK0617	1	ADAPTOR	
5		 U5MK0617	1	O RING	
6	3685R007	 a.	1	GASKET - LIFT PUMP	
7	2314H033		4	SCREW	

History					
a.					
6	36851123		1	GASKET - LIFT PUMP	

Footnotes					
(1)	NO SERVICED PARTS				

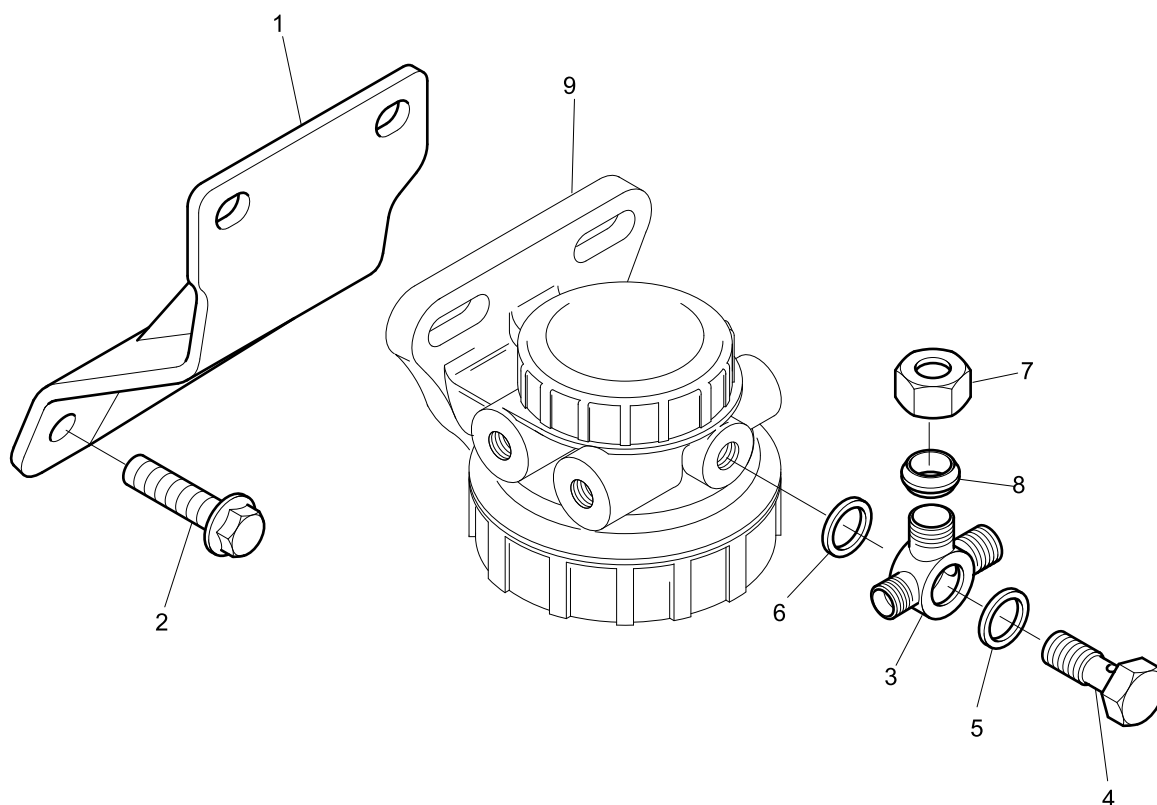


Fuel Filter	Plate A
→ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	3831E011		1	BRACKET	
2	2314J002		2	SCREW	
3	3172X004		1	CONNECTION	
4	3218R037	 a. → 01/06/03	1	BANJO BOLT	
5	2411D010	 a.	1	WASHER	
6	2411D010	 a.	1	WASHER	
7	0576112		1	NUT	(1)
8	0566003		1	OLIVE	(1)
9			1	FUEL FILTER HEAD	(2)

History					
a.					
4	2415928	→ 31/05/03	1	WASHER	
5	3218R013	→ 31/05/03	1	BANJO BOLT	
6	2415928	→ 31/05/03	1	WASHER	


Footnotes	
(1)	SUPPLIED LOOSE.
(2)	NOT SUPPLIED BY PERKINS ENGINES LIMITED.

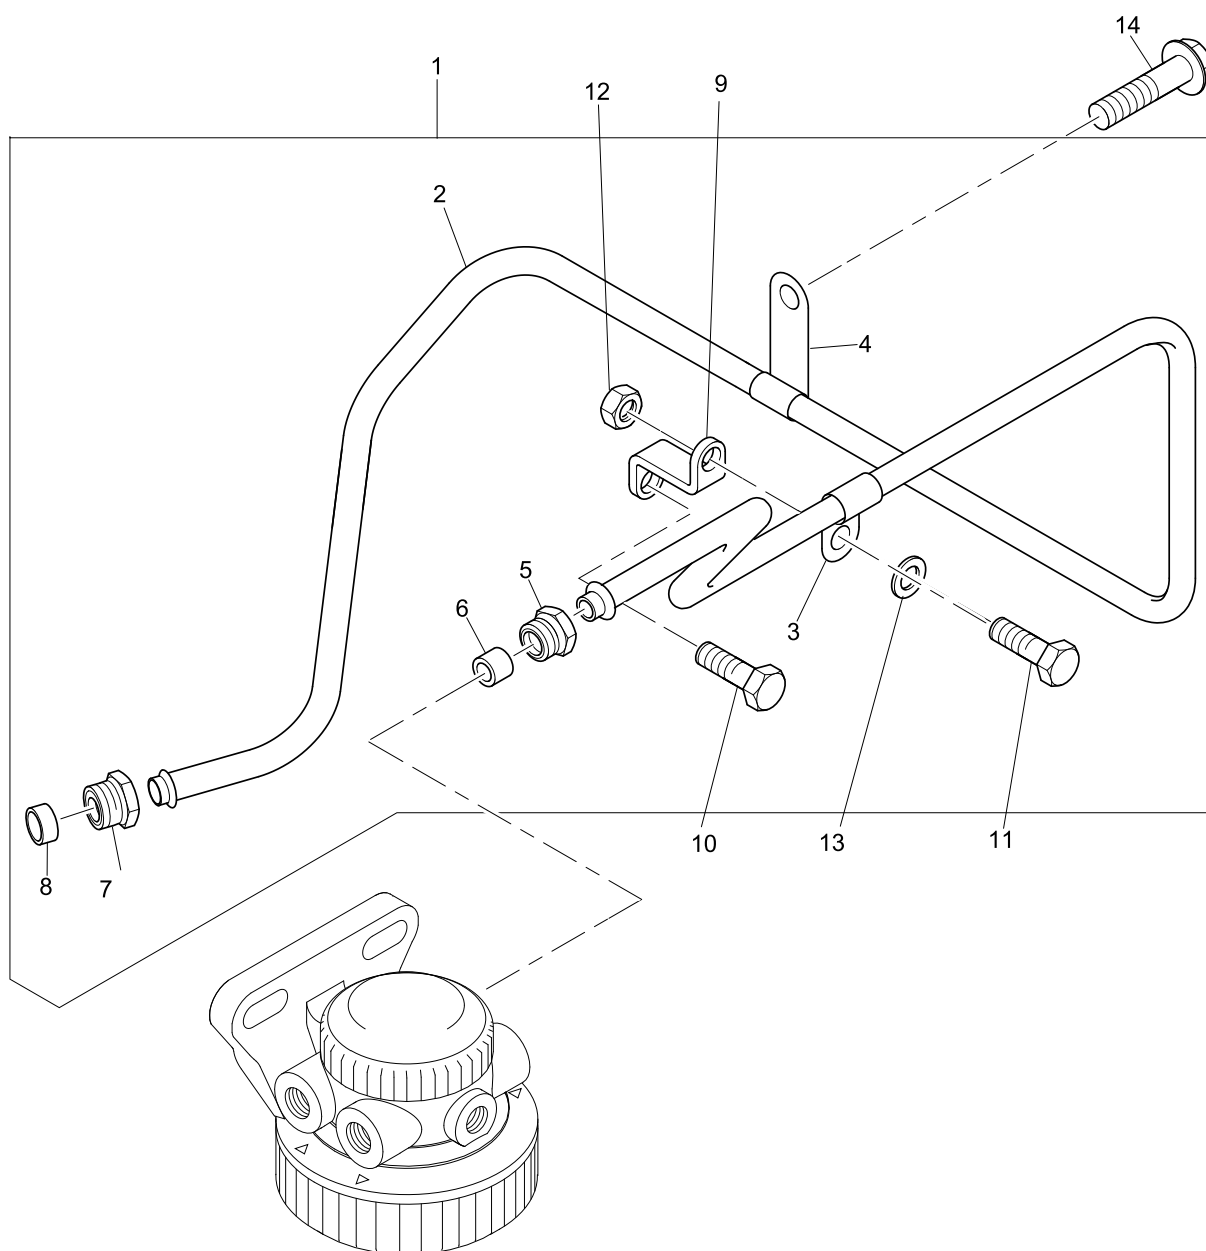

Lift Pump to Filter Pipe	Plate A
↳ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	4125T012		1	PIPE - FUEL	(1)
2		⇒ 4125T012	1	PIPE - FUEL	
3	3656P004		1	CLIP	
4	3656P008		1	CLIP	
5	33532129		1	NUT	
6	33811114		1	OLIVE	
7	33532129		1	NUT	
8	33811114		1	OLIVE	
9	3653R002		1	BRACKET	
10	2314F002		1	SCREW	
11	2314F006		1	SCREW	
12	2318A602		1	NUT	
13	0920496		1	WASHER	
14	2314H003		1	SCREW	


Footnotes	
(1)	SUPPLIED LOOSE.

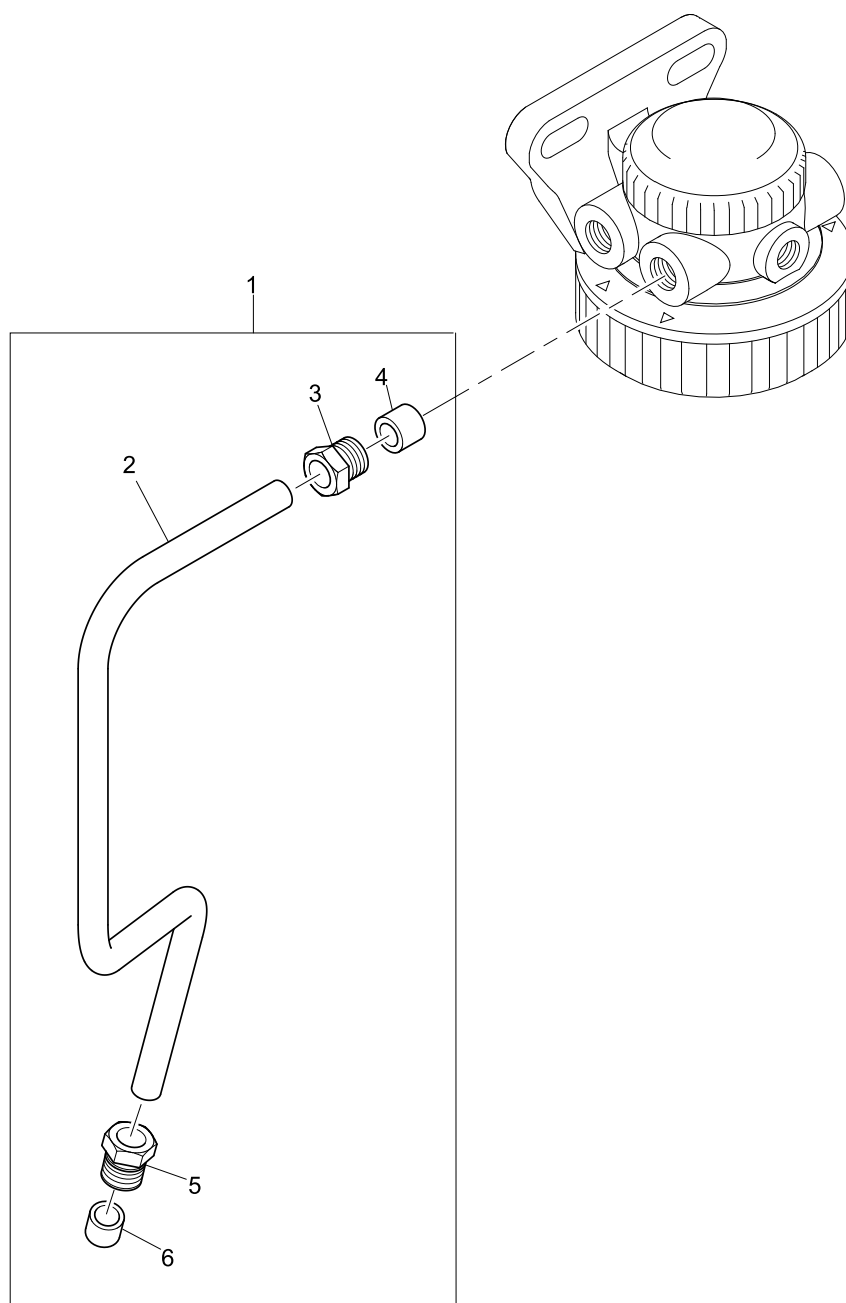

Filter to Injection Pump Pipe	Plate A
↳ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	4122M014		1	PIPE - FUEL	(1)
2		⇒ 4122M014	1	PIPE - FUEL	
3	33532129		1	NUT	
4	33811114		1	OLIVE	
5	33532129		1	NUT	
6	33811114		1	OLIVE	

Footnotes	
(1)	SUPPLIED LOOSE.

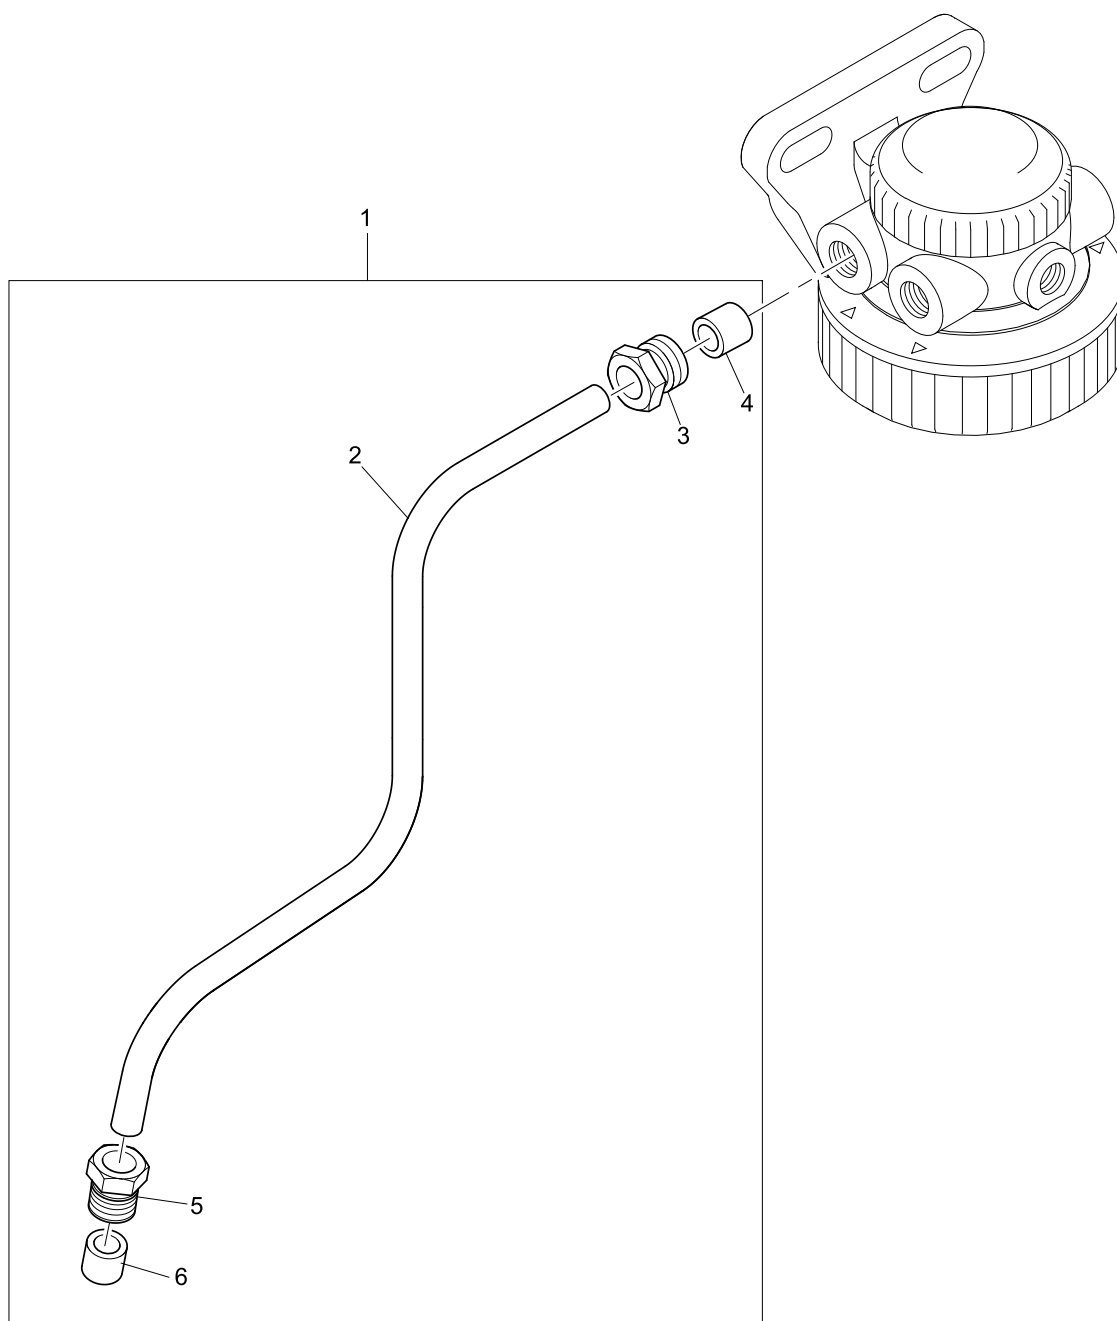


Injection Pump to Filter Pipe	Plate A
↳ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	4122A015		1	PIPE - FUEL	(1)
2		⇒ 4122A015	1	PIPE - FUEL	
3	33532129		1	NUT	
4	33811114		1	OLIVE	
5	33532129		1	NUT	
6	33811114		1	OLIVE	

History					
a.					
	2481D302		1	CLIP	

Footnotes					
(1)	SUPPLIED LOOSE.				


Leak Off Rail to Fuel Filter Pipe	Plate A
↳ U879285H	VBH02152

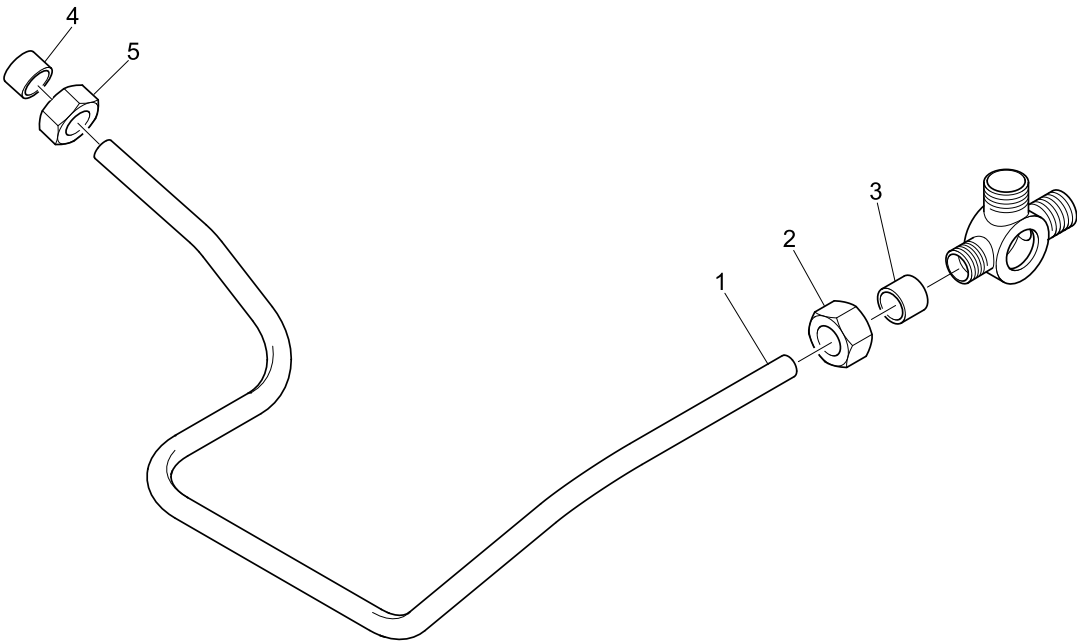

Leak Off Rail to Fuel Filter Pipe	Plate A
↳ U879285H	VBH02152

Item	Part No.	References	Qty.	Description	Notes
1	3432A025		1	PIPE - FUEL	(1)
2	33225412		1	NUT	
3	33811112		1	OLIVE	
4	33225412		1	NUT	
5	33811112		1	OLIVE	


Footnotes	
(1)	SUPPLIED LOOSE.

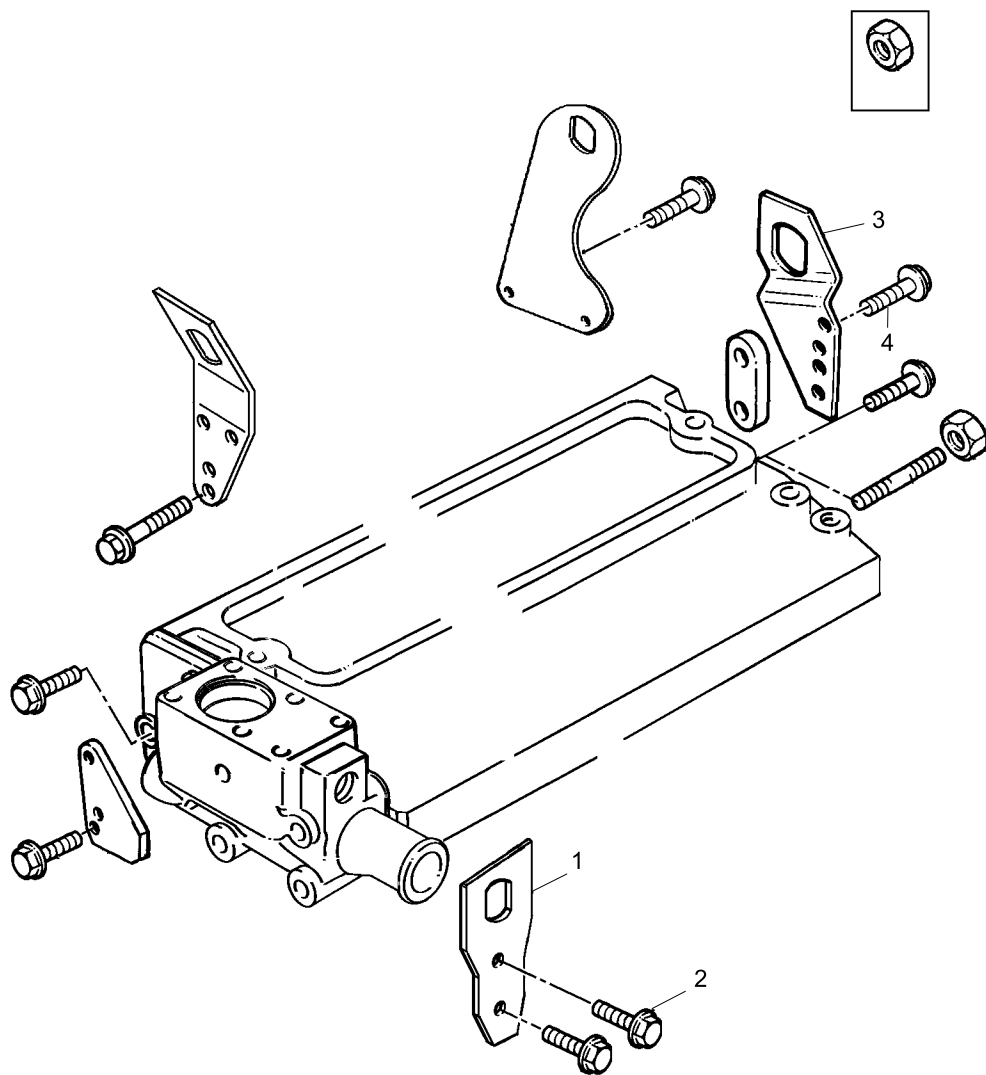

Engine Lifting	Plate B
	XBH00430


Item	Part No.	References	Qty.	Description	Notes
1	3648C008	 a.	1	PLATE	
2	2314J003		2	SCREW	
3	3654W007		1	PLATE	
4	2314J003		2	SCREW	

History					
a.					
1	U3648C008		1	PLATE	

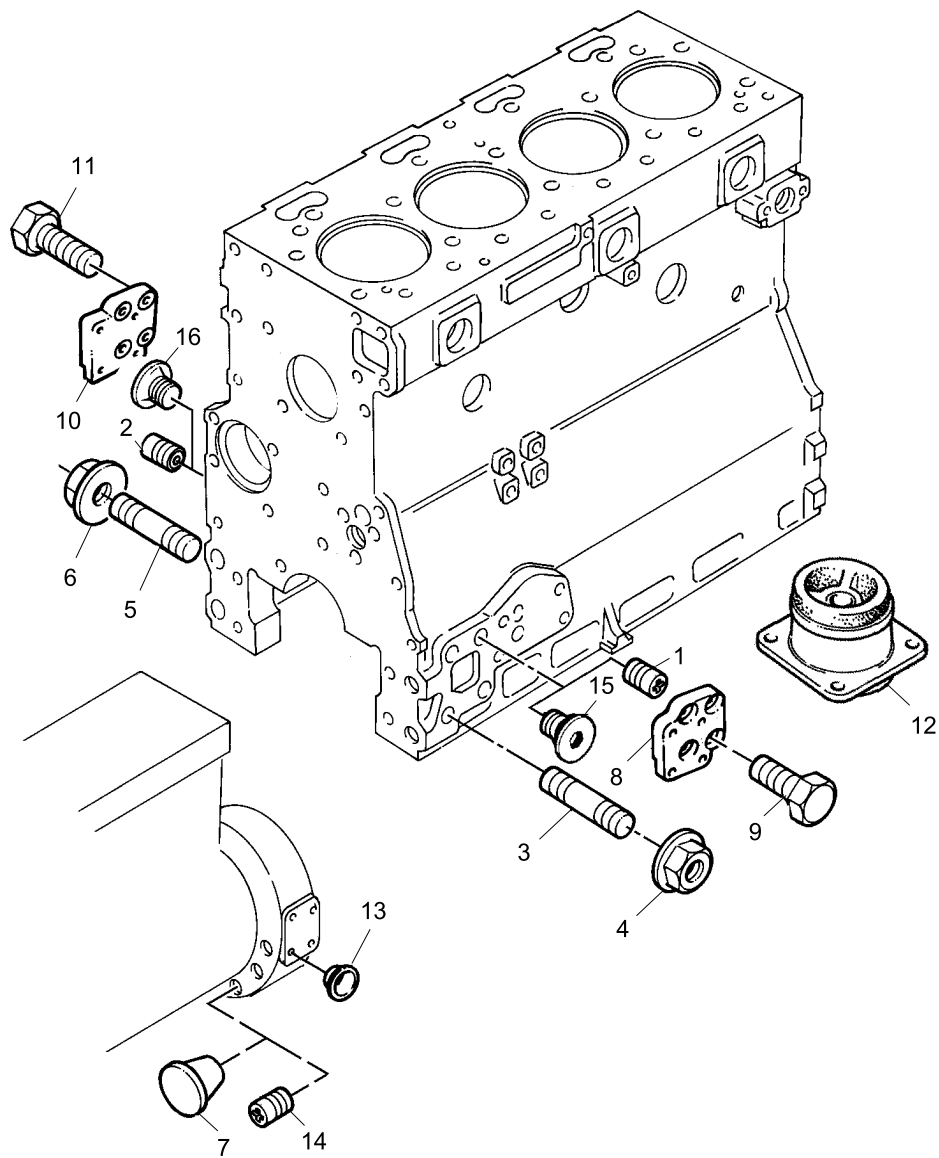

Mountings (Front & Rear)	Plate A
	ZCH00684


Item	Part No.	References	Qty.	Description	Notes
1	3211P002		2	PLUG	
2	3211P002		2	PLUG	

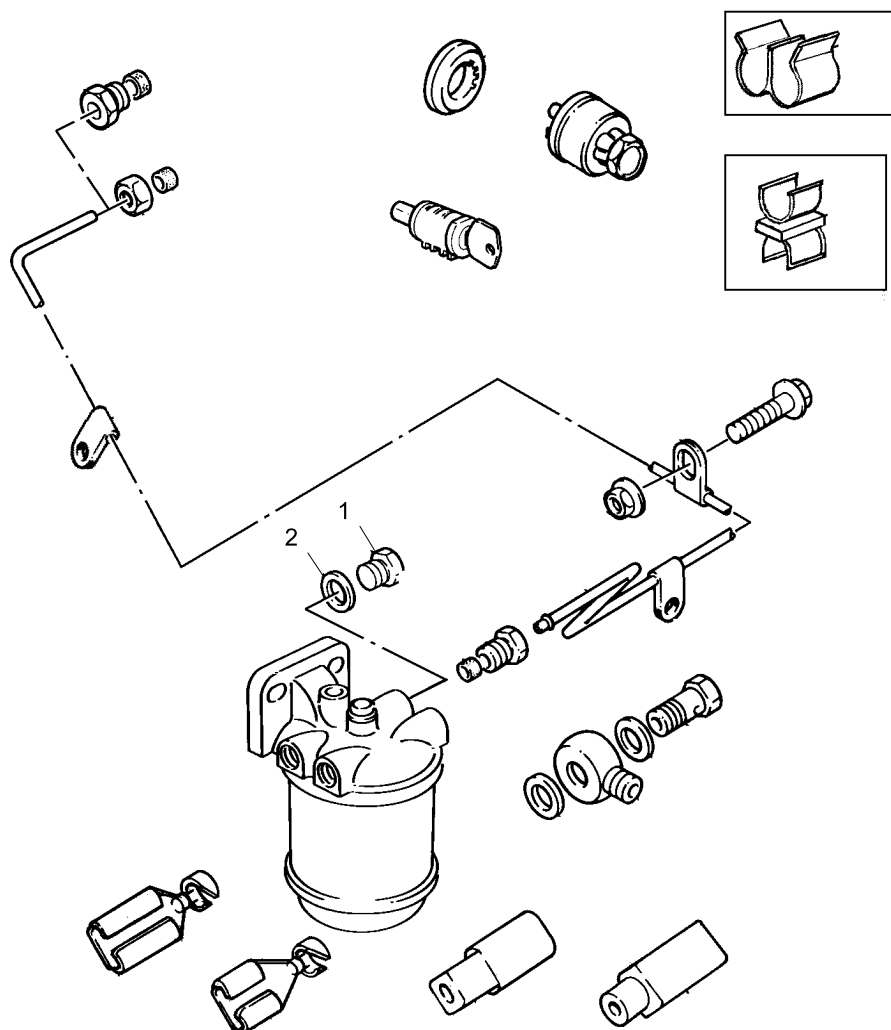

Heater and Starter Switch	Plate A
	ZEH00377


Item	Part No.	References	Qty.	Description	Notes
1	0650204		1	PLUG	
2	2411D013	 a. → 01/06/2003	1	WASHER	

History					
a.					
2	0920154	→ 31/05/2003	1	WASHER	

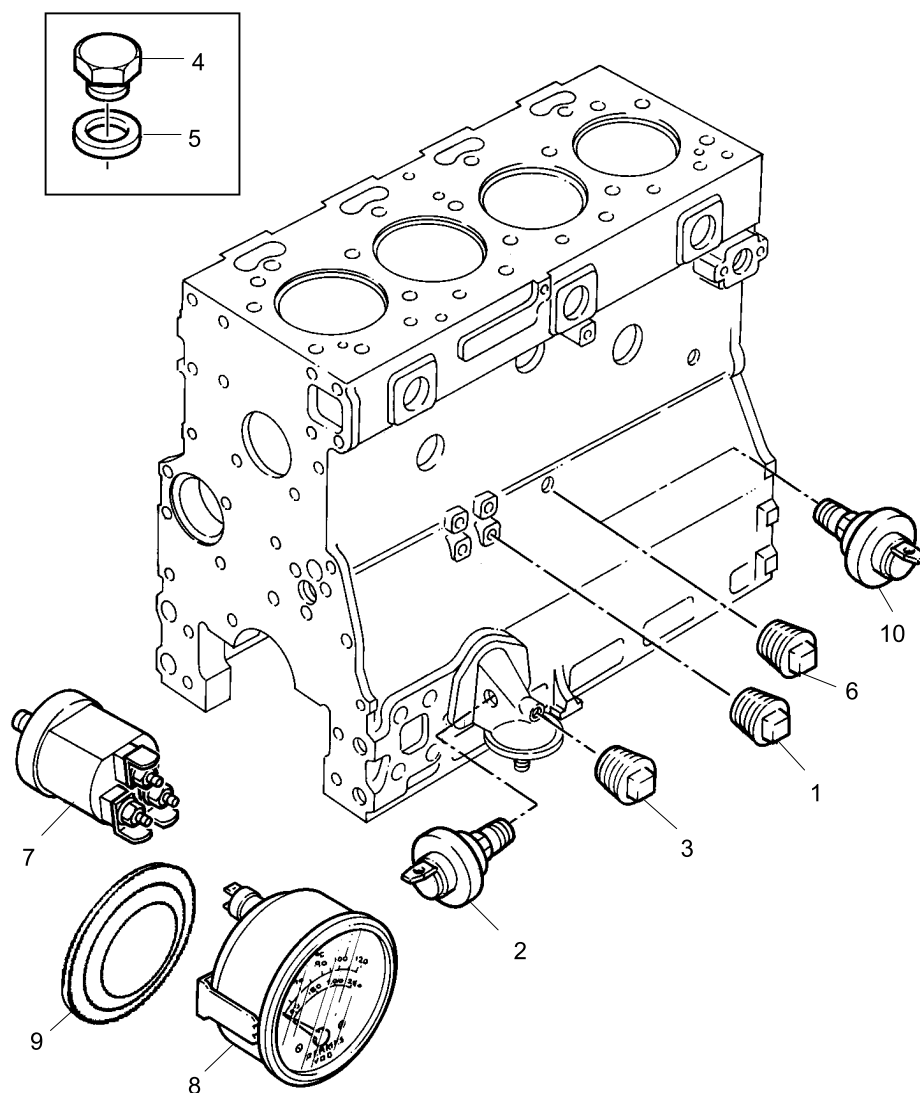

Lub. Oil Pressure Switch & Gauge	Plate A
	ZJH00189


Item	Part No.	References	Qty.	Description	Notes
1	0650594		1	PLUG	

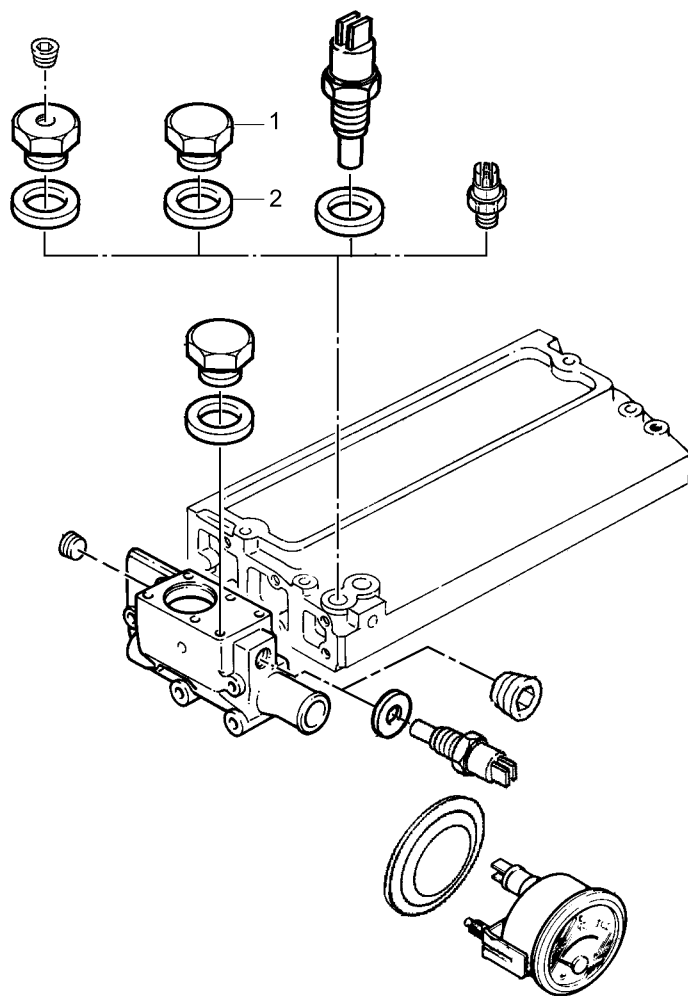

Temperature Gauge & Sender	Plate A
	ZLH00008


Item	Part No.	References	Qty.	Description	Notes
1	0650203		1	PLUG	
2	2411D016	 a. → U561308K	1	WASHER	

History					
a.					
2	2411157	→ U561307K	1	WASHER	

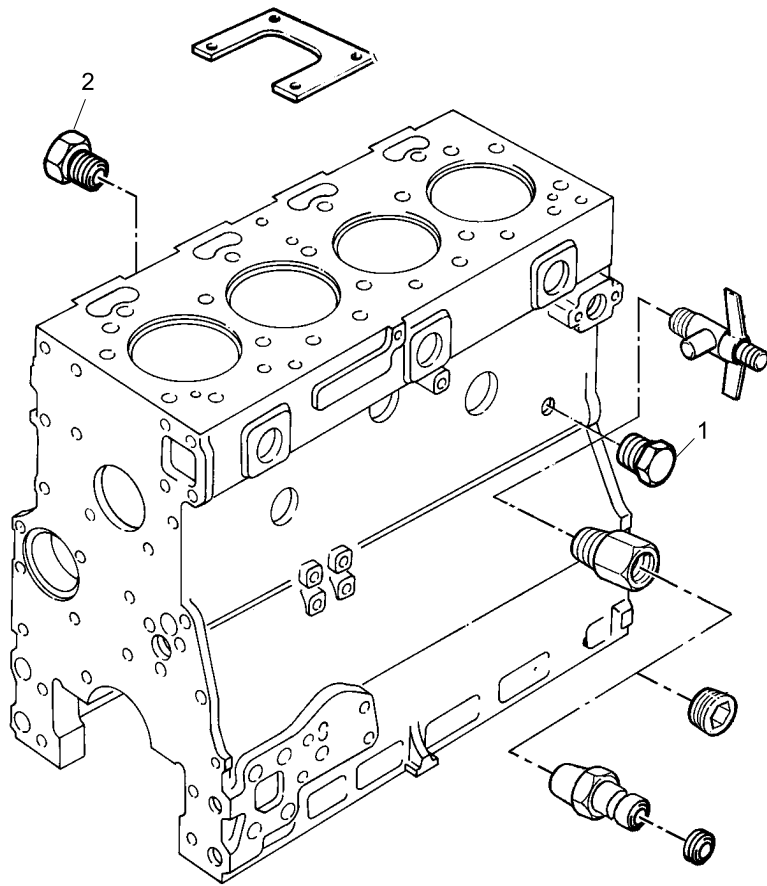


Radiator & Cowling	Plate A
	ZMH00006

Item	Part No.	References	Qty.	Description	Notes
1	32161114		1	PLUG	
2	32161114		1	PLUG	

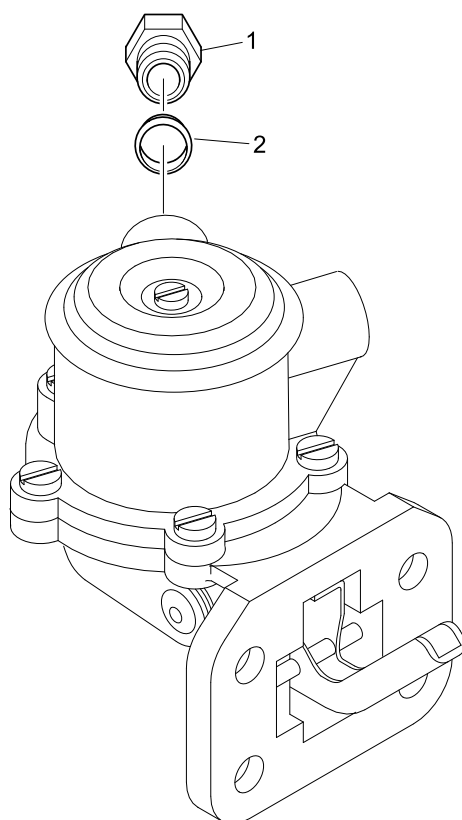

Fuel Pre-Lift Pump	Plate A
	ZVH00003

Item	Part No.	References	Qty.	Description	Notes
1	33532129		1	NUT	
2	0566004		1	OLIVE	

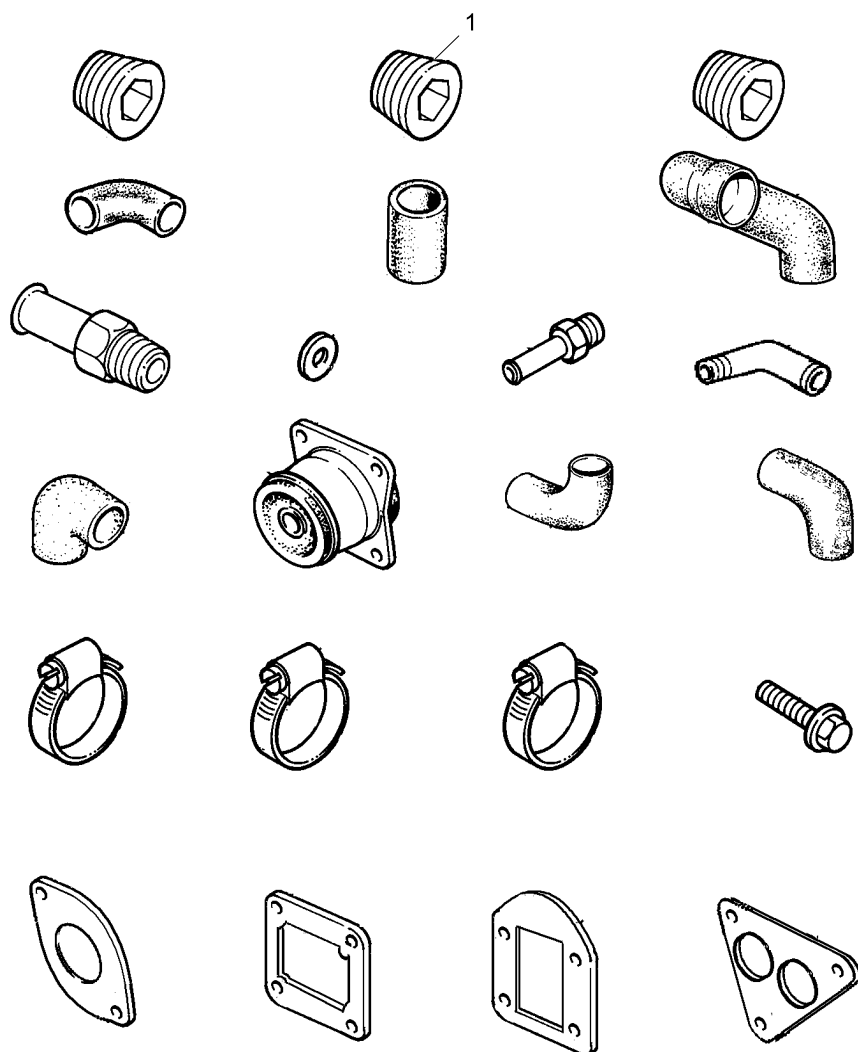


Application Miscellaneous & Auxiliaries	Plate F
	ZZH00784

Item	Part No.	References	Qty.	Description	Notes
1	2431154		1	PLUG	(2)

History					
a.	2431154		1	PLUG	(1)

Footnotes					
(1)	LOCATES IN THERMOSTAT HOUSING				
(2)	LOCATES IN REAR FACE OF TIMING CASE				

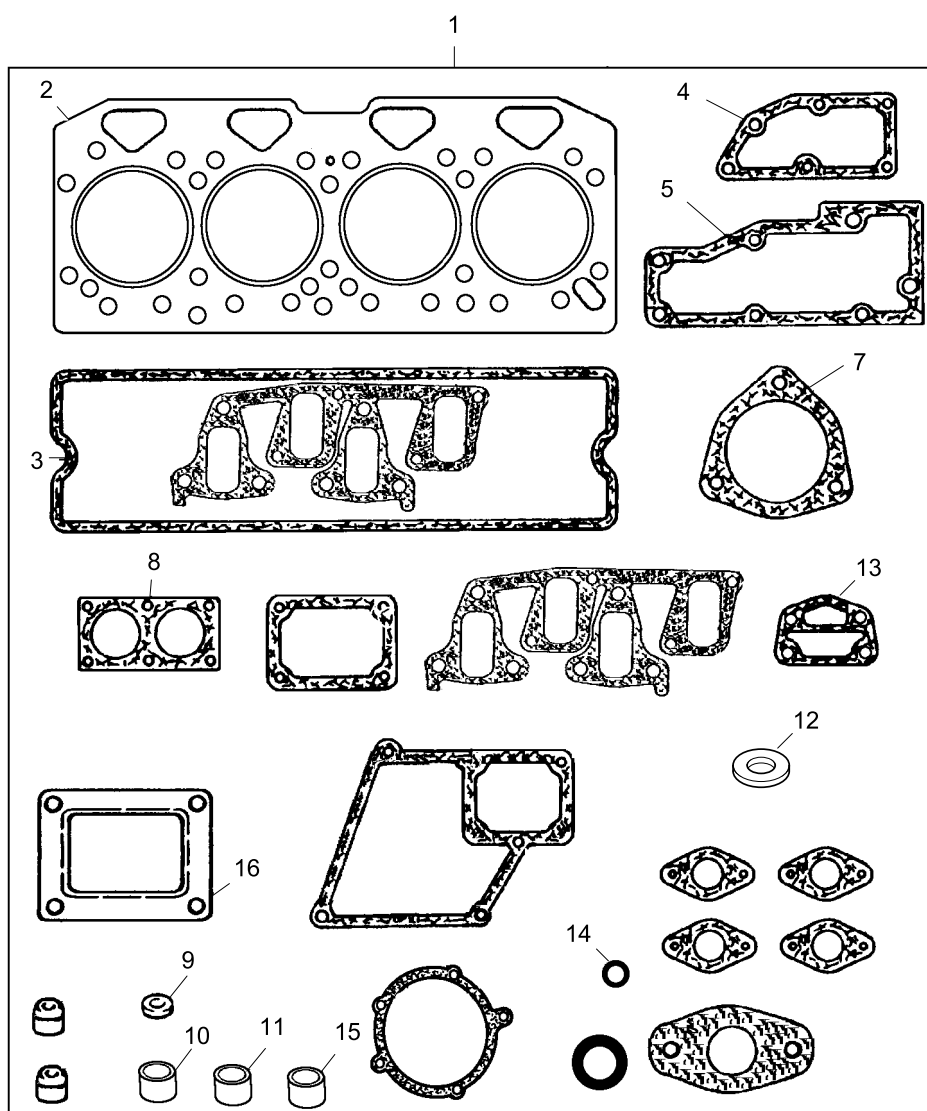

Joints & Gaskets - Top Service Kit	Plate C
	SACA0161

Item	Part No.	References	Qty.	Description	Notes
1	U5LT0317		1	GASKET KIT - TOP	
2	3681E042		1	GASKET - CYLINDER HEAD	
3	3688X012		1	GASKET - CYLINDER HEAD	
4	3686D007		1	GASKET - THERMOSTAT HSG	
5	3682A015		1	SEAL - THERMOSTAT HOUSING	
5	3685A013		1	GASKET - THERMOSTAT HSG	
7	3688C018		1	GASKET - EXHAUST OUTLET	
8	3683R009		1	GASKET	
9	2415D0511	 a.	8	WASHER	
10	33811112		1	OLIVE	
11	0566003		1	OLIVE	
12	L311FF02		4	INJECTOR WASHER	
13	3684N017		1	GASKET - THERMOSTAT HSG	
14	2415A090		1	SEAL - O RING	
15	33811114		6	OLIVE	
16	3684N503		1	GASKET	

History			
a.			
9	3311A001	8	WASHER
b.			
	3688C018	1	GASKET - EXHAUST OUTLET
	3686D007	1	GASKET - THERMOSTAT HSG
	3311A001	8	WASHER
	3685N503	1	GASKET
	3683R009	1	GASKET
	3684N017	1	GASKET - THERMOSTAT HSG
	3688X012	1	GASKET - CYLINDER HEAD
	3685A013	1	GASKET - THERMOSTAT HSG
	U2418M507	4	SEAL
	3681E042	1	GASKET - CYLINDER HEAD
	U2418M505	4	SEAL
	2415A090	1	SEAL - O RING
	U3681V012	1	GASKET - IND MANIFOLD

1

Bottom Joints & Gasket Kit

Kit d'Entretien Bas du Moteur

Wartungssatz für Motorunterteil

Kit per la manutenzione della parte inferiore del motore

Juego de Servicio de la Parte Inferior

Bottom Service Kit	Plate A
	SGBA1327

Item	Part No.	References	Qty.	Description	Notes
1	U5LB1327		1	GASKET KIT - BOTTOM	

ADAPTOR			
2486A225	77	3342N011	37
3346C006	79	CIRCLIP	
3763W011	47	0170151	40
		2721130	47
		2721332	29, 32
		2722A206	47
BANJO BOLT		CLIP	
3218R005	52	0180067	87
3218R013	109, 115	21825198	87
3218R037	109, 115	2481883	71
3218R038	51	2481D302	121
4128A022	65	2481D306	71
BIG END BEARING KIT		2646E017	51
85042	31	2646E019	51
U5ME0016	31	3656P004	109–110, 117
U5ME0026	31	3656P008	109–110, 117
U5ME0034	29	3656P009	57–58
BIG END BRG KIT - U/S	29–31	3661C002	57
85042A	31	CON ROD ASSEMBLY	23, 35
85042B	32	ZZ90188	29
85042C	32	CON ROD BOLT	
BLOCK		3212V003	35
3241N001	85	32762145	29, 31
BOLT		CON ROD NUT	
0095344	110	33221328	11, 13, 29, 31
3211C002	26	CONNECTION	
32186137	85	3172X004	109, 115
BRACKET		3355E003	51
3644Y004	51	3355V002	52
3653R002	109, 117	3766P411	93
3818X901	39	3775E012	39
3821D012	57	4133L019	95
3823D024	57	4133L036	95
3831E006	107	COVER	
3831E011	115	3623H024	87
BRACKET ASSEMBLY		CRANKSHAFT GEAR	
3645H002	61	3117C061	29
3663T006	71	CRANKSHAFT KIT	
BREATHER		ZZ90143	33
2652A012	71	ZZ90226	23
BRIDGE PIECE		ZZ90227	31
3627P023	27, 57	ZZ90238	29
3627P024	26	CRANKSHAFT KIT - EXCHANGE	30
3627P043	25, 57	CRANKSHAFT PULLEY	
BUSH		3115T051	85
2511437	47	CYLINDER BLOCK ASSEMBLY	23, 26
		ZZ50299	25
		ZZ50314	23
CABLE		CYLINDER HEAD COVER	
3161C005	52	4142X187	67
CAMSHAFT		4142X242	69
3141D171	43	CYLINDER HEAD KIT	
CAMSHAFT BUSH		ZZ80255	21, 37
31134165	25	CYLINDER HEAD KIT - EXCH	21, 37
CAMSHAFT GEAR			
3117L023	43		
CAP	37, 52		
2648A116	53		
		DAMPER	

Parts Index

3781N042.....	43
DIPSTICK	
3178C122.....	57
DOWEL	
0350009.....	26
2116053.....	43
3244A009.....	37
33142111.....	25
DRAIN PLUG	
26560609.....	107
ENGINE OVERHAUL KIT	
U5MK0812.....	11
U5MK0813.....	11
U5MK0814.....	13
U5MK0815.....	13
EXHAUST VALVE	
3142D061.....	19, 37
FLANGE	
3748C011.....	47
FUEL FILTER	
26560608.....	107
FUEL FILTER ASSEMBLY	
2656F802.....	107
FUEL INJECTION PUMP	
2644G726.....	52
U2644G726.....	53
FUEL INJECTION PUMP GEAR	
3117L212.....	51
FUEL INJECTION PUMP KIT	
UFK4G736.....	51
GASKET	
36832137.....	57
36832144.....	25
3683H006.....	73
3683R009.....	141
3684N503.....	141
3685N503.....	141
3687H005.....	99
3687H019.....	99
U3685R009.....	87
GASKET - CYL. HEAD COVER	
3681A049.....	69
GASKET - CYLINDER HEAD	
3681E042.....	37, 141
3688X012.....	141
GASKET - EXHAUST OUTLET	
3688C018.....	141
GASKET - IND MANIFOLD	
U3681V012.....	141
GASKET - LIFT PUMP	
36851123.....	105, 113
3685R007.....	105, 113

GASKET - OIL FILTER HEAD	
3686T006.....	25, 81, 83
GASKET - OIL SEAL HOUSING	
3681T018.....	26
GASKET - ROCKER BOX COVER	
3681A047.....	67
GASKET - SUMP	
3681K005.....	11, 13, 21, 57
GASKET - THERMOSTAT HSG	
3684N017.....	93, 141
3685A013.....	141
3686D007.....	141
GASKET - TIMING CASE	
3681P009.....	44
GASKET - TIMING CASE COVER	
21826404.....	21
21826411.....	11, 13, 21
GASKET - TIMING COVER	
3681P038.....	43
GASKET - WATER PUMP	
3687Y016.....	87
GASKET KIT	
U5MK0600.....	11
GASKET KIT - BOTTOM	
U5LB1171.....	11, 13, 21
U5LB1327.....	143
GASKET KIT - TOP	
U5LT0317.....	11, 13, 21, 141
HOLDER	
2645A311.....	51, 53
HOSE	
3385A007.....	71
3386C020.....	71
HOSE KIT	
U5MH0056.....	87
HUB	
33426161.....	43
IDLER GEAR	
4111A013.....	43
4111A021.....	47
IDLER GEAR BUSH	
0050345.....	43-44
INJECTOR	
U2645A058.....	51
INJECTOR - EXCHANGE	
INJECTOR NOZZLE	
2645K609.....	51, 53
INJECTOR WASHER	
L311FF02.....	51, 141
INSERT	
2137435.....	57-58
INTAKE VALVE	
3142H041.....	19, 37

LIFT PUMP		4121C057	53
ULPK0005	105	PIPE - BREATHER	
LIFT PUMP KIT		3218R017	61
ULPK0034	105, 113	3551V002	61
LONG ENGINE - KIT		4127A055	65
U5MK8121	21	PIPE - FUEL	
		3432A025	123
MAIN BEARING KIT		3435P019	109
81558	31, 33	4122A015	121
U5MB0034	29	4122M014	119
MAIN BEARING KIT - U/S	29-30	4125T012	117
81558A	31	PIPE - FUEL INJ NO 1 CYL	
81558B	31	3521H065	51
81558C	33	PIPE - FUEL INJ NO 2 CYL	
		3521H066	53
NUT		3521H083	51
0576052	39-40	PIPE - FUEL INJ NO 3 CYL	
0576112	109, 115	3521H067	51
2318A602	57, 109, 117	PIPE - FUEL INJ NO 4 CYL	
2318A603	51	3521H068	51
2318A604	107	PIPE - LEAK OFF	
2318A605	39	3558X051	51
3274A003	67, 69	PIPE - LIFT PUMP TO FILTER	
33225412	51, 109, 123	4125A033	109
33532129	109-111, 117, 119, 121, 137	PIPE - OIL	
3353D004	51-53	3575A046	57
3353D005	57-58	PIPE - OIL PUMP DELIVERY	
		3343F012	47
O RING		3343M307	47
2415A102	87, 91	PISTON COOLING JET	
OIL COOLER		3861A027	25
2486A218	77	PISTON KIT	
OIL FILLER CAP		U5LP0058	11, 23, 29
4142X099	67, 69	PISTON KIT - OVERSIZE	11, 23, 31
OIL FILTER		U5LP0058B	13, 32
2654403	81	U5LP0058D	13, 32
OIL FILTER HEAD		PISTON RING KIT	11, 23, 31
3773K051	81	U4181A045	11, 23, 29
OIL PUMP		U4181A046	13, 32
4132F051	47	U4181A047	13, 33
OLIVE		PLATE	
0566003	109, 115, 141	3241A021	43
0566004	137	3241A025	43
33811112	51, 109, 123, 141	3241H009	44
33811113	39	33153121	43
33811114	109-110, 117, 119, 121, 141	36171131	25
33812116	57	3617A001	73
3381A002	52-53	3623H008	25, 83
		3648C008	125
PIPE		3654W007	125
4122M012	109	3661V002	57
4122T008	109	3753V018	99
4125T011	111	4148K002	75
PIPE - AIR		4148K006	101
4121A025	51	4148K016	101
		U3648C008	125
		PLUG	

Parts Index

0650203	37, 133
0650204	129
0650507	39
0650588	25
0650594	131
0650710	25, 37
2431154	87, 99, 139
2431A016	57, 63
2431A054	37
2485A204	25
3211P002	127
32161114	25, 135
32168212	25
32186405	57
32416118	26
32416119	25
32417134	25
32418122	25, 37
3278A003	25
3314A103	25
3774A004	25
3781A504	91
4148K011	91
PLUNGER	
32712726	47
PUSHROD	
31434307	39
RELIEF VALVE	
4138A017	25
4138A036	48
4138A053	47
4138A057	47
REPAIR KIT - LIFT PUMP	
ULPR0001	105
REPAIR KIT - WATER PUMP	
U7LW0147	88
U7LW0161	87
U7LW0173	87
ROCKER ARM ASSEMBLY	
4115R311	39
ROCKER SHAFT ASSEMBLY	
ZZ90199	39
ROCKER SHAFT ASSY - MINOR	
ZZ90198	39
ROCKER SHAFT SPRING	
31743108	39
31744123	39
SCREW	
2233022	39–40
2311D039	25, 57
2314C049	99
2314F002	57, 109, 117
2314F003	43
2314F004	57

2314F006	109, 117
2314F907	47
2314H002	51, 57, 61, 103
2314H003	26, 43, 51, 57–58, 73, 75, 93, 95, 109, 117
2314H004	43, 47, 57–58
2314H005	43, 47, 97
2314H007	57
2314H008	87
2314H011	97
2314H012	87
2314H013	43, 87, 97
2314H017	87
2314H032	99
2314H033	25, 57, 105, 113
2314H034	43, 87
2314J002	51, 99, 107, 115
2314J003	71, 125
2314J004	99, 107
2314J008	47
2314J010	44
2314J011	43, 47, 55
2314J033	25, 83
2314J034	81
2314J606	43
2314J607	39
2314K159	87
2314K161	87, 97
2314K166	57, 87
32114145	39–40
3212V002	26
32166221	21, 37
32166329	25
32186139	29, 31
3218J303	21, 37
3218J606	21, 37
3218J607	21, 37
SEAL	
33817135	67, 69
U2418M505	141
U2418M507	141
SEAL - FRONT END OIL	
2418F436	11, 13, 21, 43–44
2418F437	43
SEAL - O RING	
2415715	57
2415731	67
2415789	65
2415A090	95, 141
2415A131	67, 69
2415B121	75
2415H201	47
2415H502	65
2415H503	101
2415H509	91
2415H549	101
2486A223	77

26420318	51–53	3142U031	39
SEAL - REAR END OIL		THERMOSTAT	
2418F475	11, 13, 26–27	2485C025	95
SEAL - REOS HOUSING		2485C036	95
2418F701	25	THERMOSTAT HOUSING	
2418F703	23	4133L027	87, 91
4142V066	26	4133L054	91
SEAL - THERMOSTAT HOUSING		THIMBLE	
3682A015	91, 141	2135A001	29, 32
SEAL - TIMING CASE		33137409	47
21826415	43	THRUST BLOCK	
SEAL - VALVE STEM		3242T001	29, 31
2418M505	37	THRUST WASHER	15, 29–31
2418M507	37	3112X011	43
SEAL - WATER OUTLET		31137312	15, 33
2415H492	95	31137322	15–16, 32
SEAT		31137551	15, 29, 31
32712111	47	31137561	15, 29, 31, 33
SENDER		T422289	15
2848A121	51	T422290	15
SHAFT	47	T422291	15
3271H004	47	T422292	15
SHIELD		THRUST WASHER KIT	
3781N043	43	T427336	15
SHIM		U5TW0002	15
33117426	39	THRUST WASHER KIT - O/S	15
3311K015	39	T427337	15
SHORT ENGINE - ASSEMBLY		T427339	15
AR39789	21, 23	U5TW0002A	15
SMALL END BUSH		U5TW0002B	16
3112A005	35	TIMING CASE	
3112E011	29	3716C163	43
31134123	32	3716C165	43
SNAP RING		TIMING COVER	
3381J008	95	4142A415	43
SOLENOID		TUBE	
26420467	51	4126X091	57
26420517	52–53		
SPACER		VALVE COLLET	
33115117	71	3142W004	19, 37
SPRING		VALVE GUIDE	
3174A012	47	3313A012	19, 37
3174L003	47	3318A705	19, 37
3175P004	71	VALVE SEAT INSERT	
SPRING KIT		3314A101	37
3174A013	47	3314A102	37
STRAINER		VALVE SPRING	
U5MK0617	105, 113	3174P412	19, 37
STUD		VALVETRAIN KIT	
2313H331	39	U5VK0331	19
3211P004	51		
SUMP		WASHER	
4145H065	57	0920009	67, 69
4145H094	57	0920146	110
		0920154	129
TAPPET		0920155	99

Parts Index

0920484	57
0920496	109, 117
2411157	133
2411D006	51
2411D010	109, 115
2411D013	129
2411D016	133
2415928	109–110, 115
2415934	61
2415D051	52
2415D051I	141
2415D053	99
2415D108	25
26431192	107
3311A001	53, 141
3311K012	39–40
3311R003	27
33123125	47
33153135	44
3321A003	43
WATER PUMP	
U5MW0164	88
WATER PUMP - EXCHANGE	87
WATER PUMP KIT	
U5MW0178	87
U5MW0192	87
WOODRUFF KEY	
0500012	31, 43

Perkins Sales

Americas

North America

1600 W Kingsbury St
Seguin
Texas 78155
United States
Toll free number: 1-888-PERK-ENG

South America

Rua Dr. Chucri Zaidan, 1240
Golden Tower – 17th Floor
São Paulo – SP CEP 04711-130
Brazil
Tel: +55 11 2109 2038

Asia

China

20/F Lei Shing International Plaza
1319 West Yan'an Road
Shanghai 200050
China
Tel: +86 21 22160774
Fax: +86 21 52136624

Korea

8F, Songchon Building, 503
Nonhyeon-ro, Gangnam-gu
Seoul 06132
Korea
Tel: +82 10 8669 8358

Japan

Ocean Gate Minato Mirai 12F
3-7-1 Minatomirai, Nishi-ku, Yokohama city
Kanagawa, 220-0012
Japan
Tel: +81 45 682 3579
Fax: +81 45 682 3690

India

Floor 6, Tower 'B' Prestige Shantiniketan
The Business Precinct, Whitefield Main Road
Bangalore 560048
India
Email: IPSD_India@perkins.com

Singapore

14 Tractor Road
Singapore 627973
Tel: +65 6828 7469
Fax: +65 6828 7414

Europe, Middle East and Africa

Peterborough, PE1 5FQ
United Kingdom
Tel: +44 1733 583000