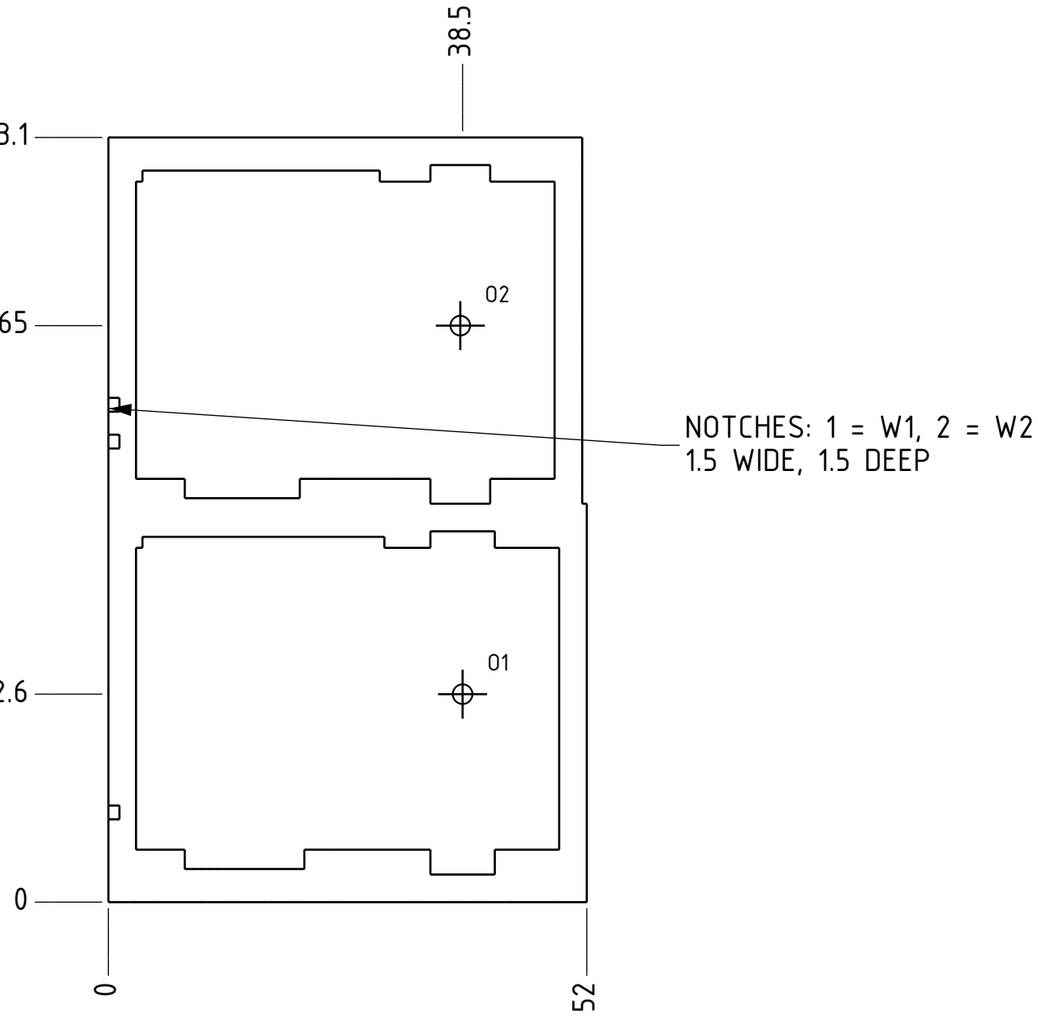

TOP (AS PRINTED)

FRONT

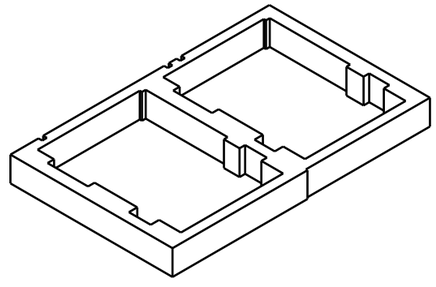

ISOMETRIC (NOT TO SCALE)

GAUGE WINDOW AT ZERO CLEARANCE (X, Y)

RECTANGLE	X	Y
Case	−35.1 to 10.1	−16.5 to 15.5
Rib notch	−34.3 to −9	0 to 16.6
Spline notch	−3 to 3	0 to 17.2
Bump notch	−29.7 to −17.7	−18.5 to 0
Boss notch	−3 to 3	−19.1 to 0

FEATURES (in order)

1. Two frames, 8 thick (z 0 to 8), 3 walls, sharing the middle wall; overall 52 × 83.1.
2. Window W1 about 01 (38.5, 22.6): the case rectangle grown by 0.4 and the four notches by 0.5, the clearances every servo pocket uses. Cut through Z.
3. Window W2 about 02 (38.25, 62.65): the same, grown by 0.15 and 0.25 (tight).
4. Notches on the x 0 wall's top edge: one beside W1, two beside W2.

NOTES

- All dimensions mm. Third-angle projection. Do not scale the drawing.
- Use: take both horns off and push the bare servo (no cables) through each window along its width, top face (rib, spline) toward the rib notch, bottom face (bump, idler boss) toward the boss notch.
- It should go through W1 by hand with light friction and not through W2. If W1 binds, or W2 lets it through, tune the printer (flow, horizontal expansion) before printing the arm.
- Print: flat; no support. Print it first, with the same settings as the arm.

THIRD ANGLE PROJECTION

WORK SET A: base, shoulder, upper arm, hub caps, fit gauge

PROJECT	EST. MASS
TALOS 5-axis arm	11 g
PART	SCALE
Servo fit gauge	3:2
PART NO.	UNITS / REV
TAL-111	mm / A
QTY / ARM	DATE
1	2026-11-10
MATERIAL	SHEET
PLA, 20 % infill, 3 perimeters	21 of 21