




Remove R20–R22, R26–R28, and install Q7–Q12 for use with dumb coils

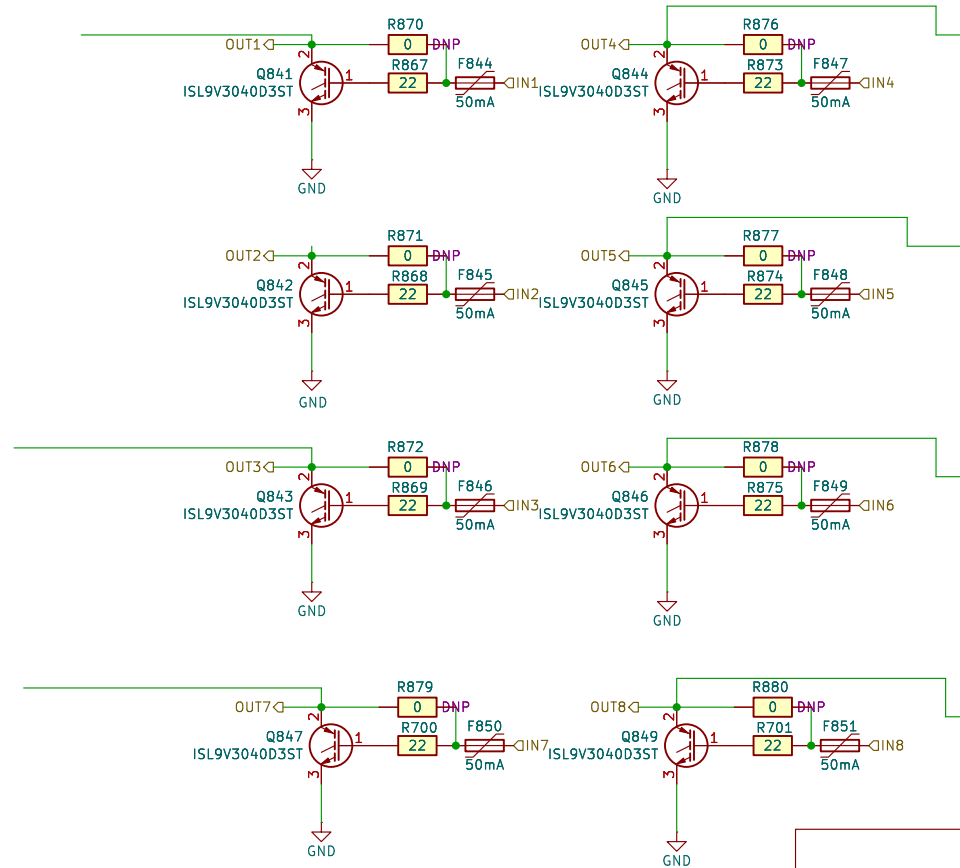

Sheet: /Ignition/
File: IGN6.kicad_sch

Title:


Size: A4


Date:

KiCad E.D.A. 8.0.9

Rev:

Id: 5/6

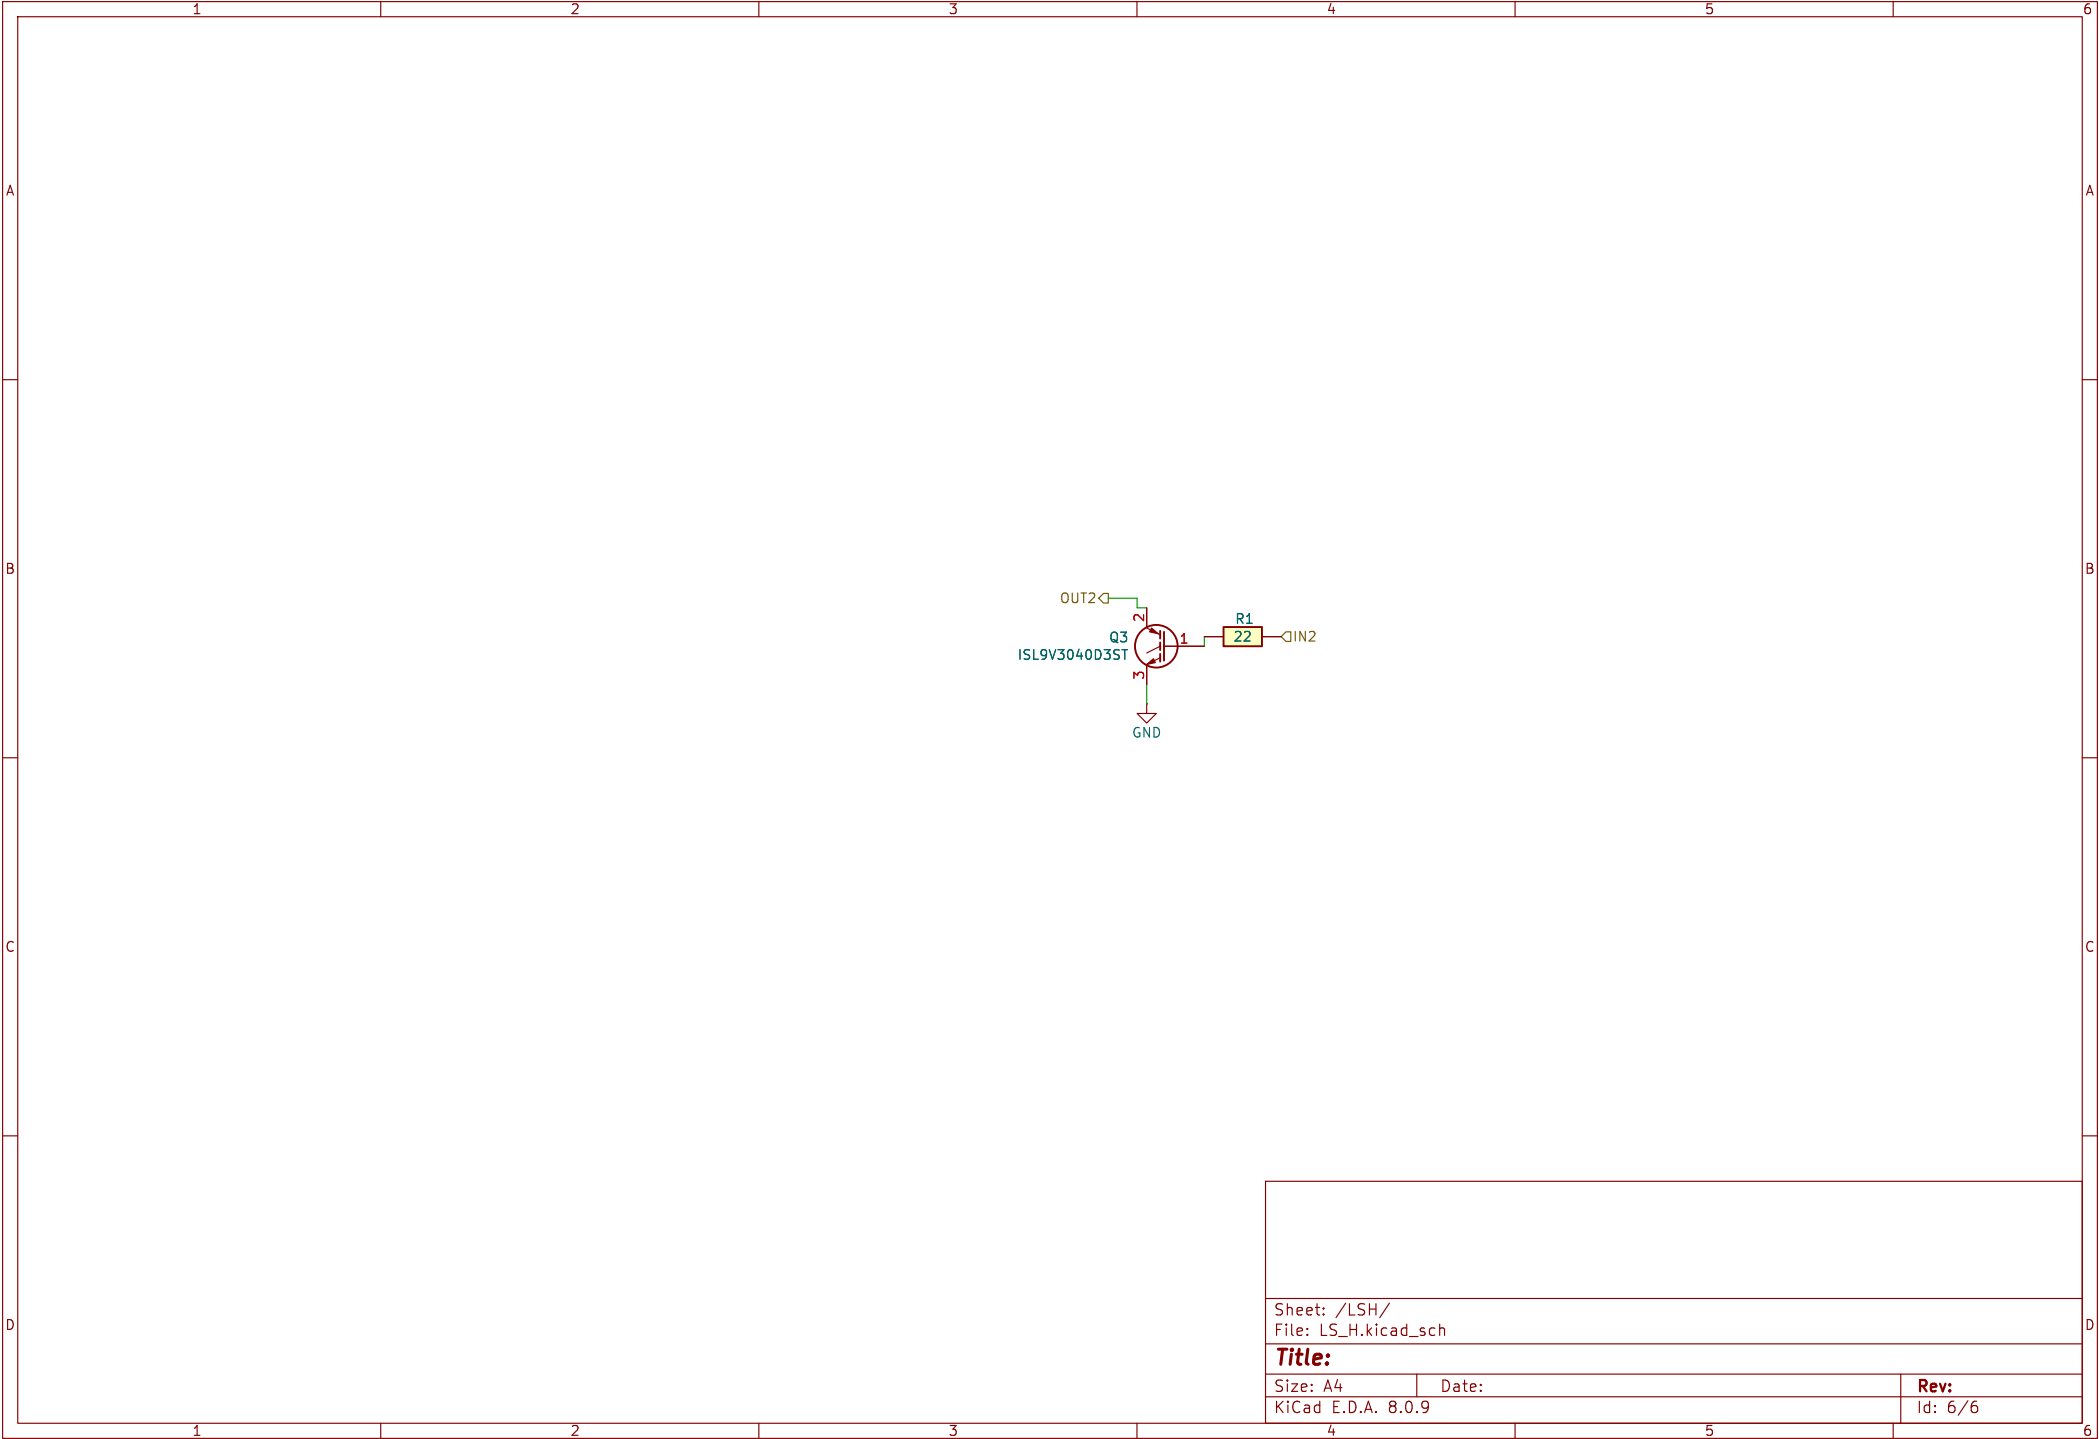

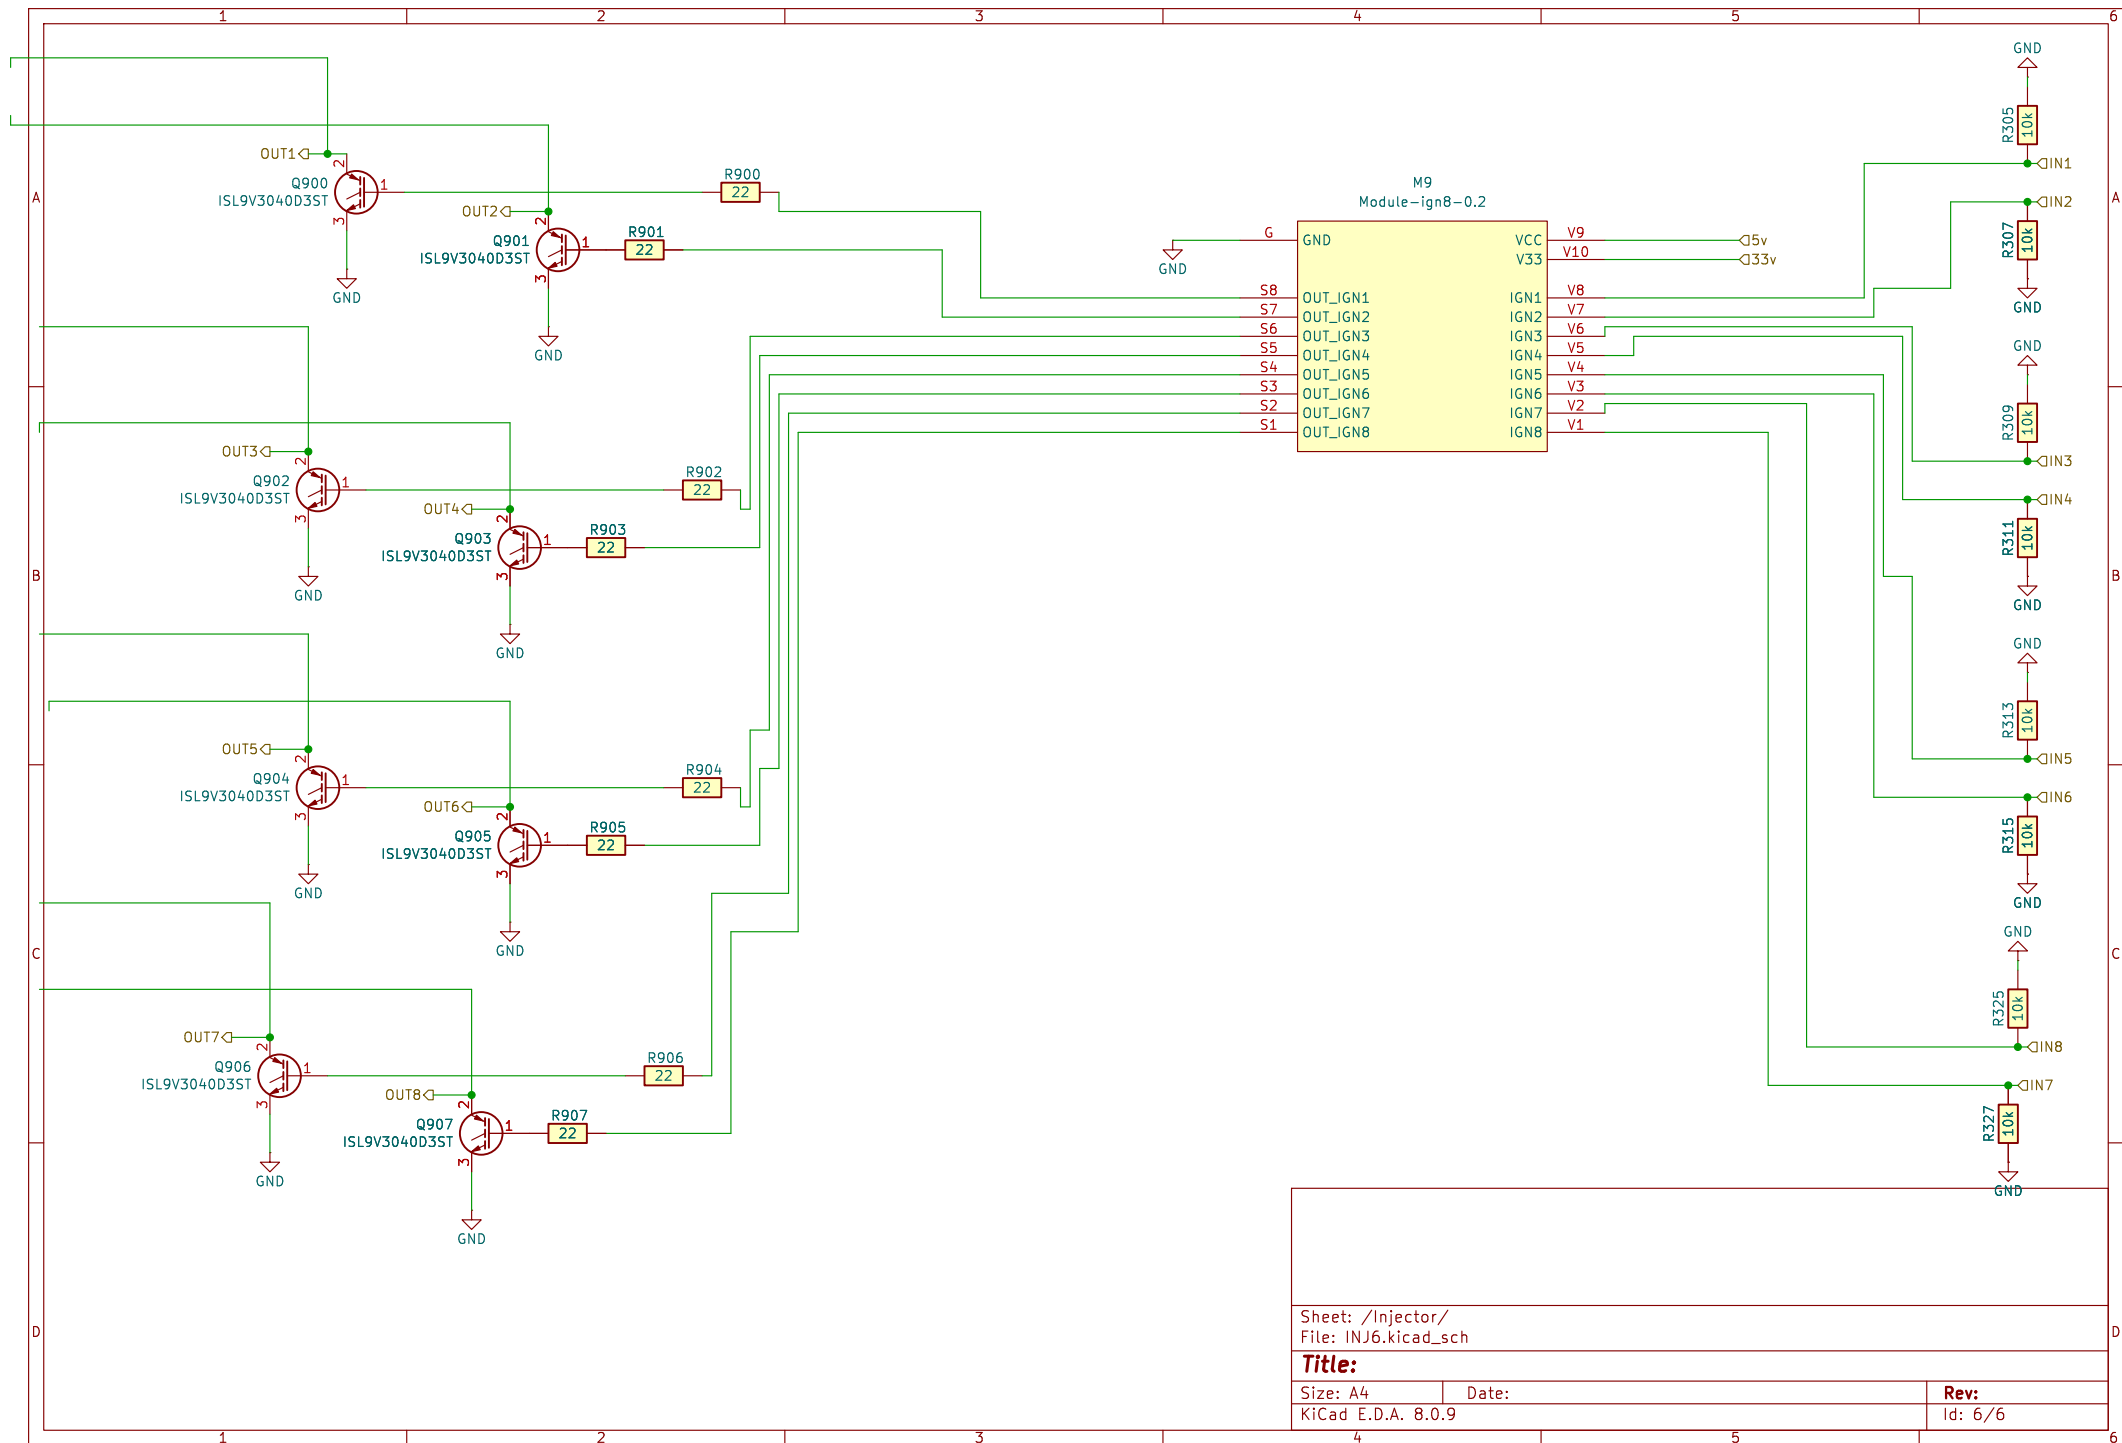

Sheet: /Injector/
File: INJ6.kicad_sch

Title:


Size: A4

Date:

KiCad E.D.A. 8.0.9

Rev:

Id: 6/6

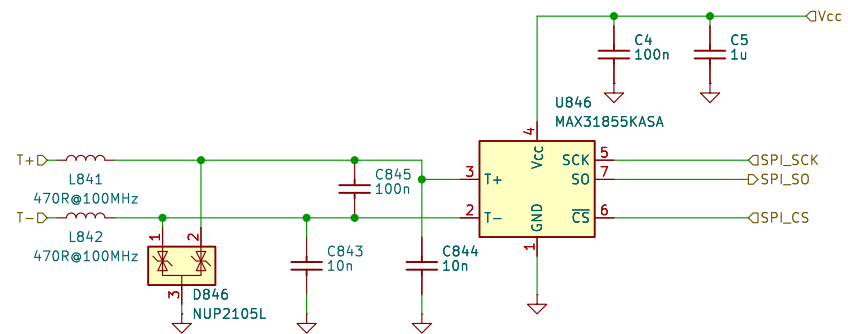

NUP2105L is optional, used for protection

Sheet: /EGT/
File: egt.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 8.0.9

Rev:

Id: 9/6