


16:1 - spacer order and wheel orientation

Side diagrams show the assembled order. Axial positions come from CAD; diameters are compressed. Not 1:1.

PIVOT MAP

Seen from the front

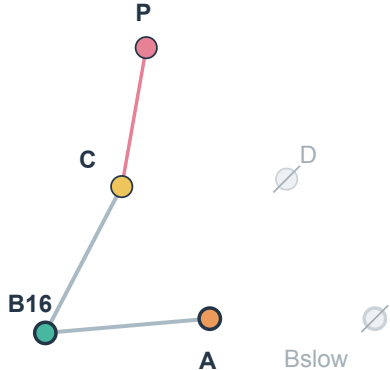

B uses B16.

Gear files: STL/16x/

Spacer label: part / length.

Anchor file:

STL/16x/

18_anchor_forward.stl

Pinions always face REAR.


Anchor sleeve faces FRONT.

13 = short gear pivot

19 = long anchor pivot

Rear spacers sit against the pivot foot, ahead of frame 05.

REAR / ballast bowl side

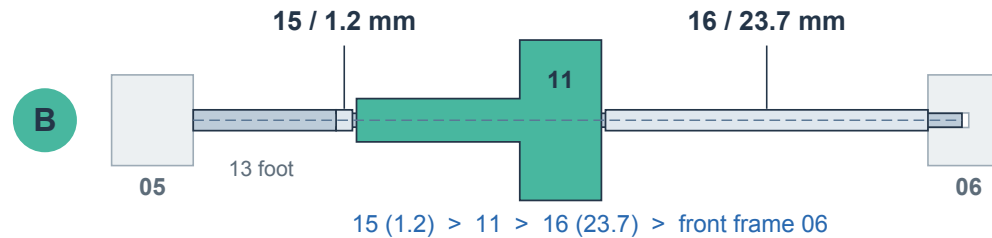


FRONT / pendulum side

11_B_18_72.stl

18T pinion toward REAR


72T wheel toward FRONT

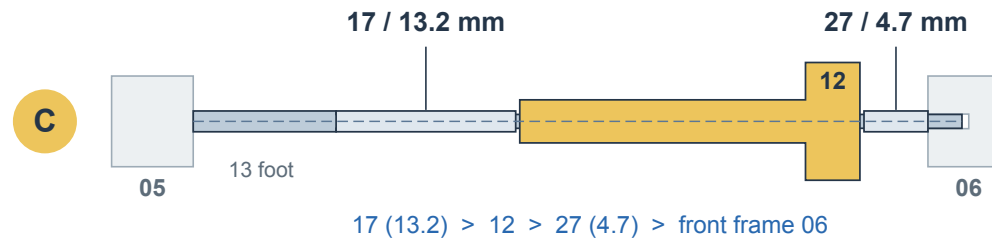

12_escape_compound.stl

18T pinion toward REAR

30T escape teeth toward FRONT

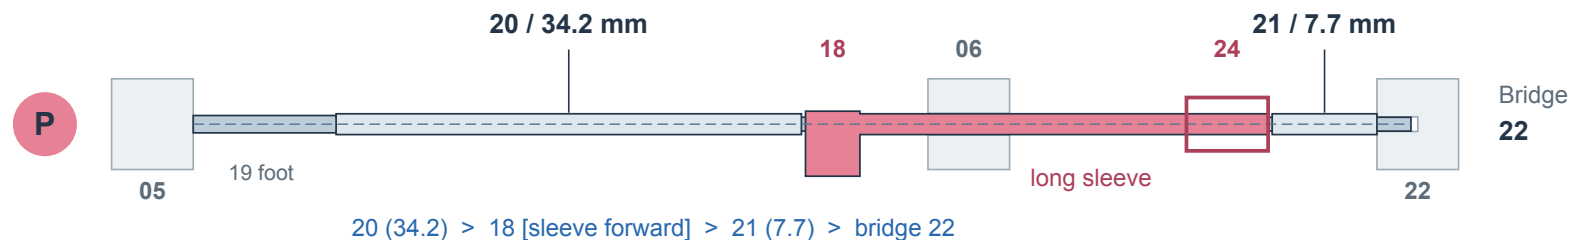

P: sleeve 18 passes through frame 06; clamp 24 surrounds its front end. Spacer 21 goes beyond both.

One of each spacer shown. Use common/ for 20 and 21. Main axle A and its sleeves: guide page 6 / AXLE-1-TO-1.pdf.


Corrected 54 mm frame posts. Nominal gear endplay: 0.6 mm total. Do not squeeze rotating parts between fixed faces.

32:1 - spacer order and wheel orientation

Side diagrams show the assembled order. Axial positions come from CAD; diameters are compressed. Not 1:1.

PIVOT MAP

Seen from the front

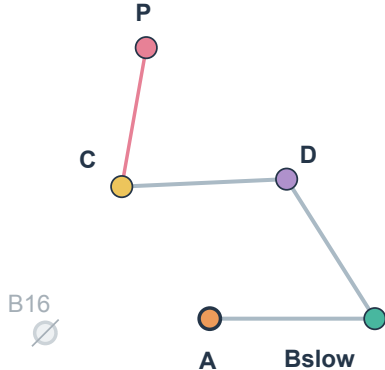

B uses Bslow.

Gear files: STL/32x/

Spacer label: part / length.

Anchor file:

STL/slow-common/

18_anchor_reversed.stl

Pinions always face REAR.

Anchor sleeve faces FRONT.





13 = short gear pivot

19 = long anchor pivot

Rear spacers sit against the pivot foot, ahead of frame 05.

REAR / ballast bowl side

FRONT / pendulum side

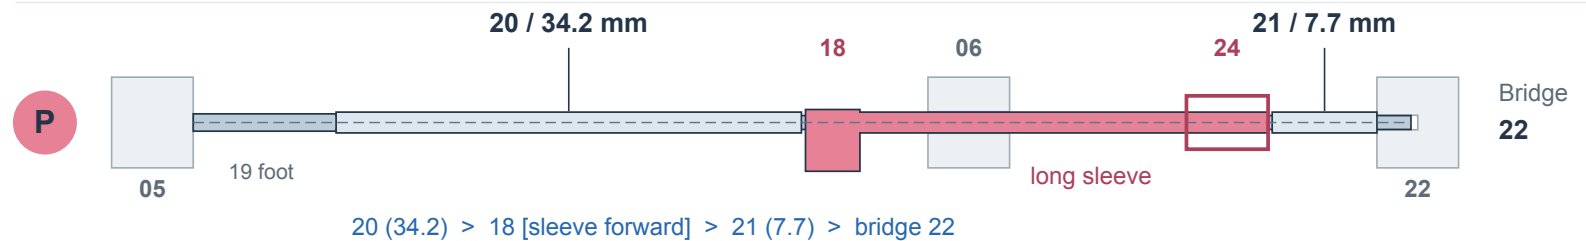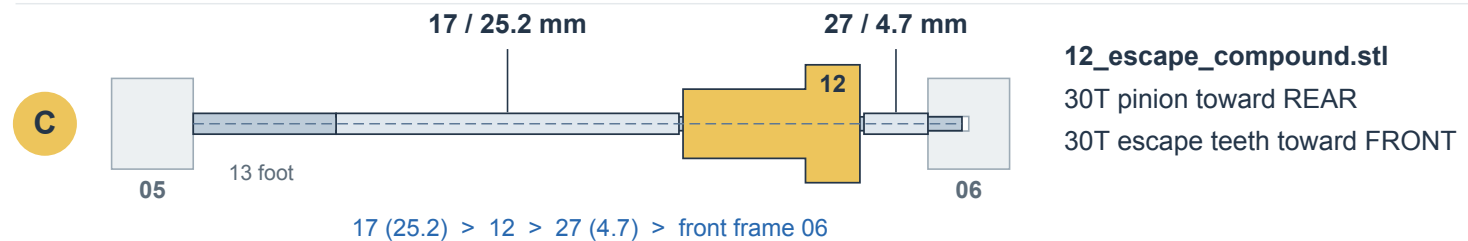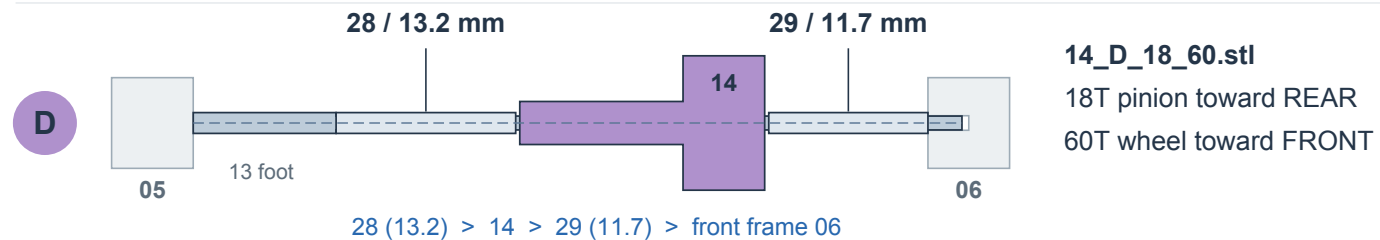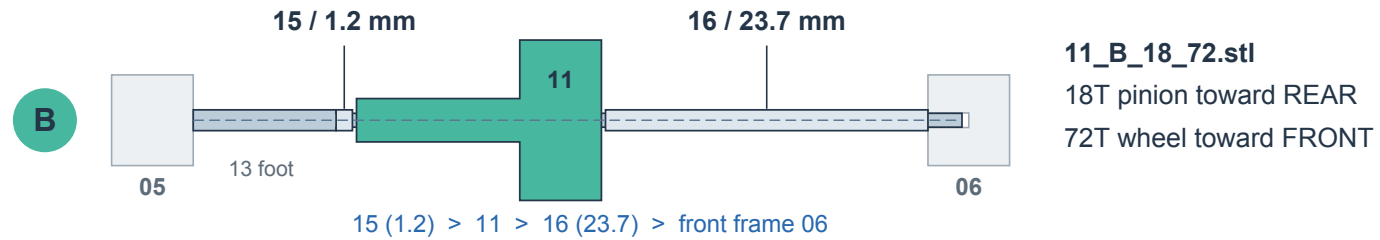

P: sleeve 18 passes through frame 06; clamp 24 surrounds its front end. Spacer 21 goes beyond both.

One of each spacer shown. Use common/ for 20 and 21. Main axle A and its sleeves: guide page 6 / AXLE-1-TO-1.pdf.


Corrected 54 mm frame posts. Nominal gear endplay: 0.6 mm total. Do not squeeze rotating parts between fixed faces.

64:1 - spacer order and wheel orientation

Side diagrams show the assembled order. Axial positions come from CAD; diameters are compressed. Not 1:1.

PIVOT MAP

Seen from the front

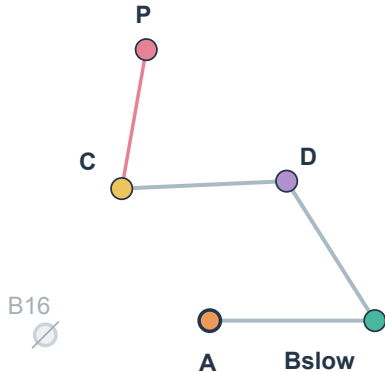

B uses Bslow.

Gear files: STL/64x/

Spacer label: part / length.

Anchor file:

STL/slow-common/

18_anchor_reversed.stl

Pinions always face REAR.

Anchor sleeve faces FRONT.


13 = short gear pivot

19 = long anchor pivot

Rear spacers sit against the pivot foot, ahead of frame 05.

REAR / ballast bowl side


FRONT / pendulum side

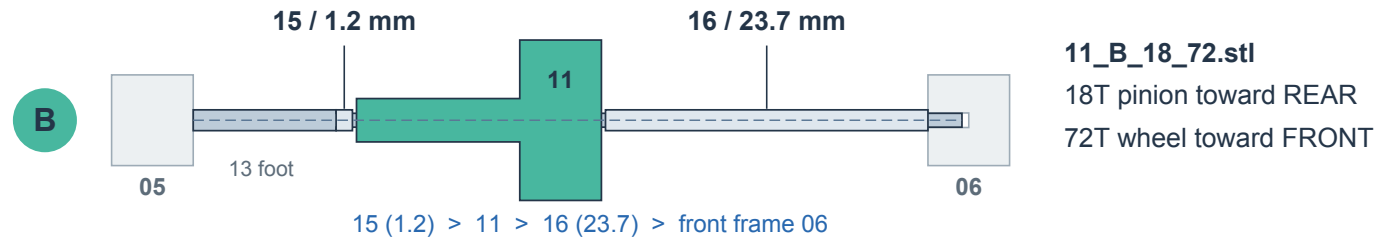

11_B_18_72.stl

18T pinion toward REAR


72T wheel toward FRONT

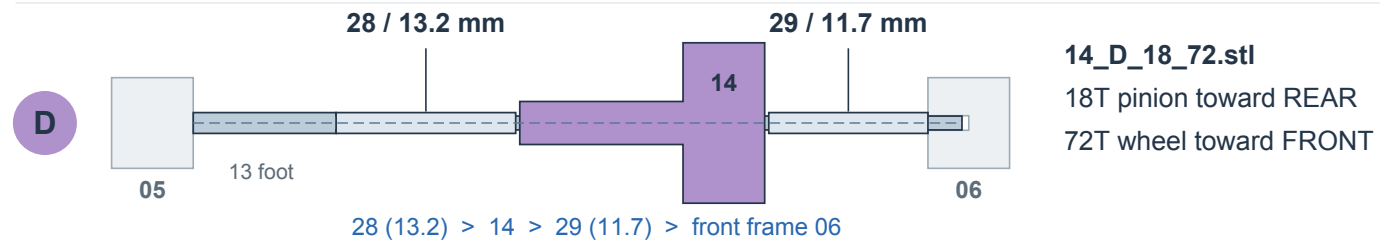

14_D_18_72.stl

18T pinion toward REAR


72T wheel toward FRONT

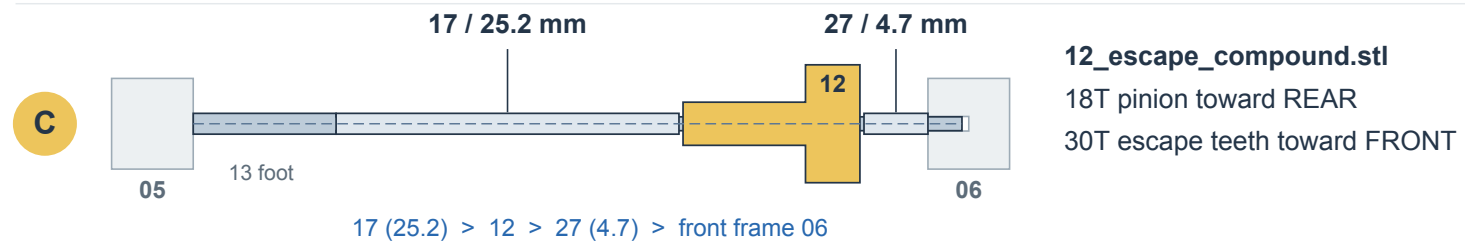

12_escape_compound.stl

18T pinion toward REAR

30T escape teeth toward FRONT

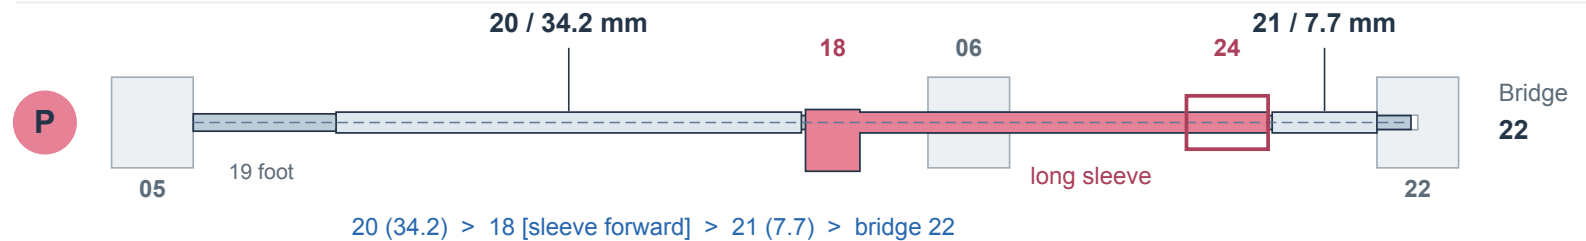

P: sleeve 18 passes through frame 06; clamp 24 surrounds its front end. Spacer 21 goes beyond both.

One of each spacer shown. Use common/ for 20 and 21. Main axle A and its sleeves: guide page 6 / AXLE-1-TO-1.pdf.

Corrected 54 mm frame posts. Nominal gear endplay: 0.6 mm total. Do not squeeze rotating parts between fixed faces.