


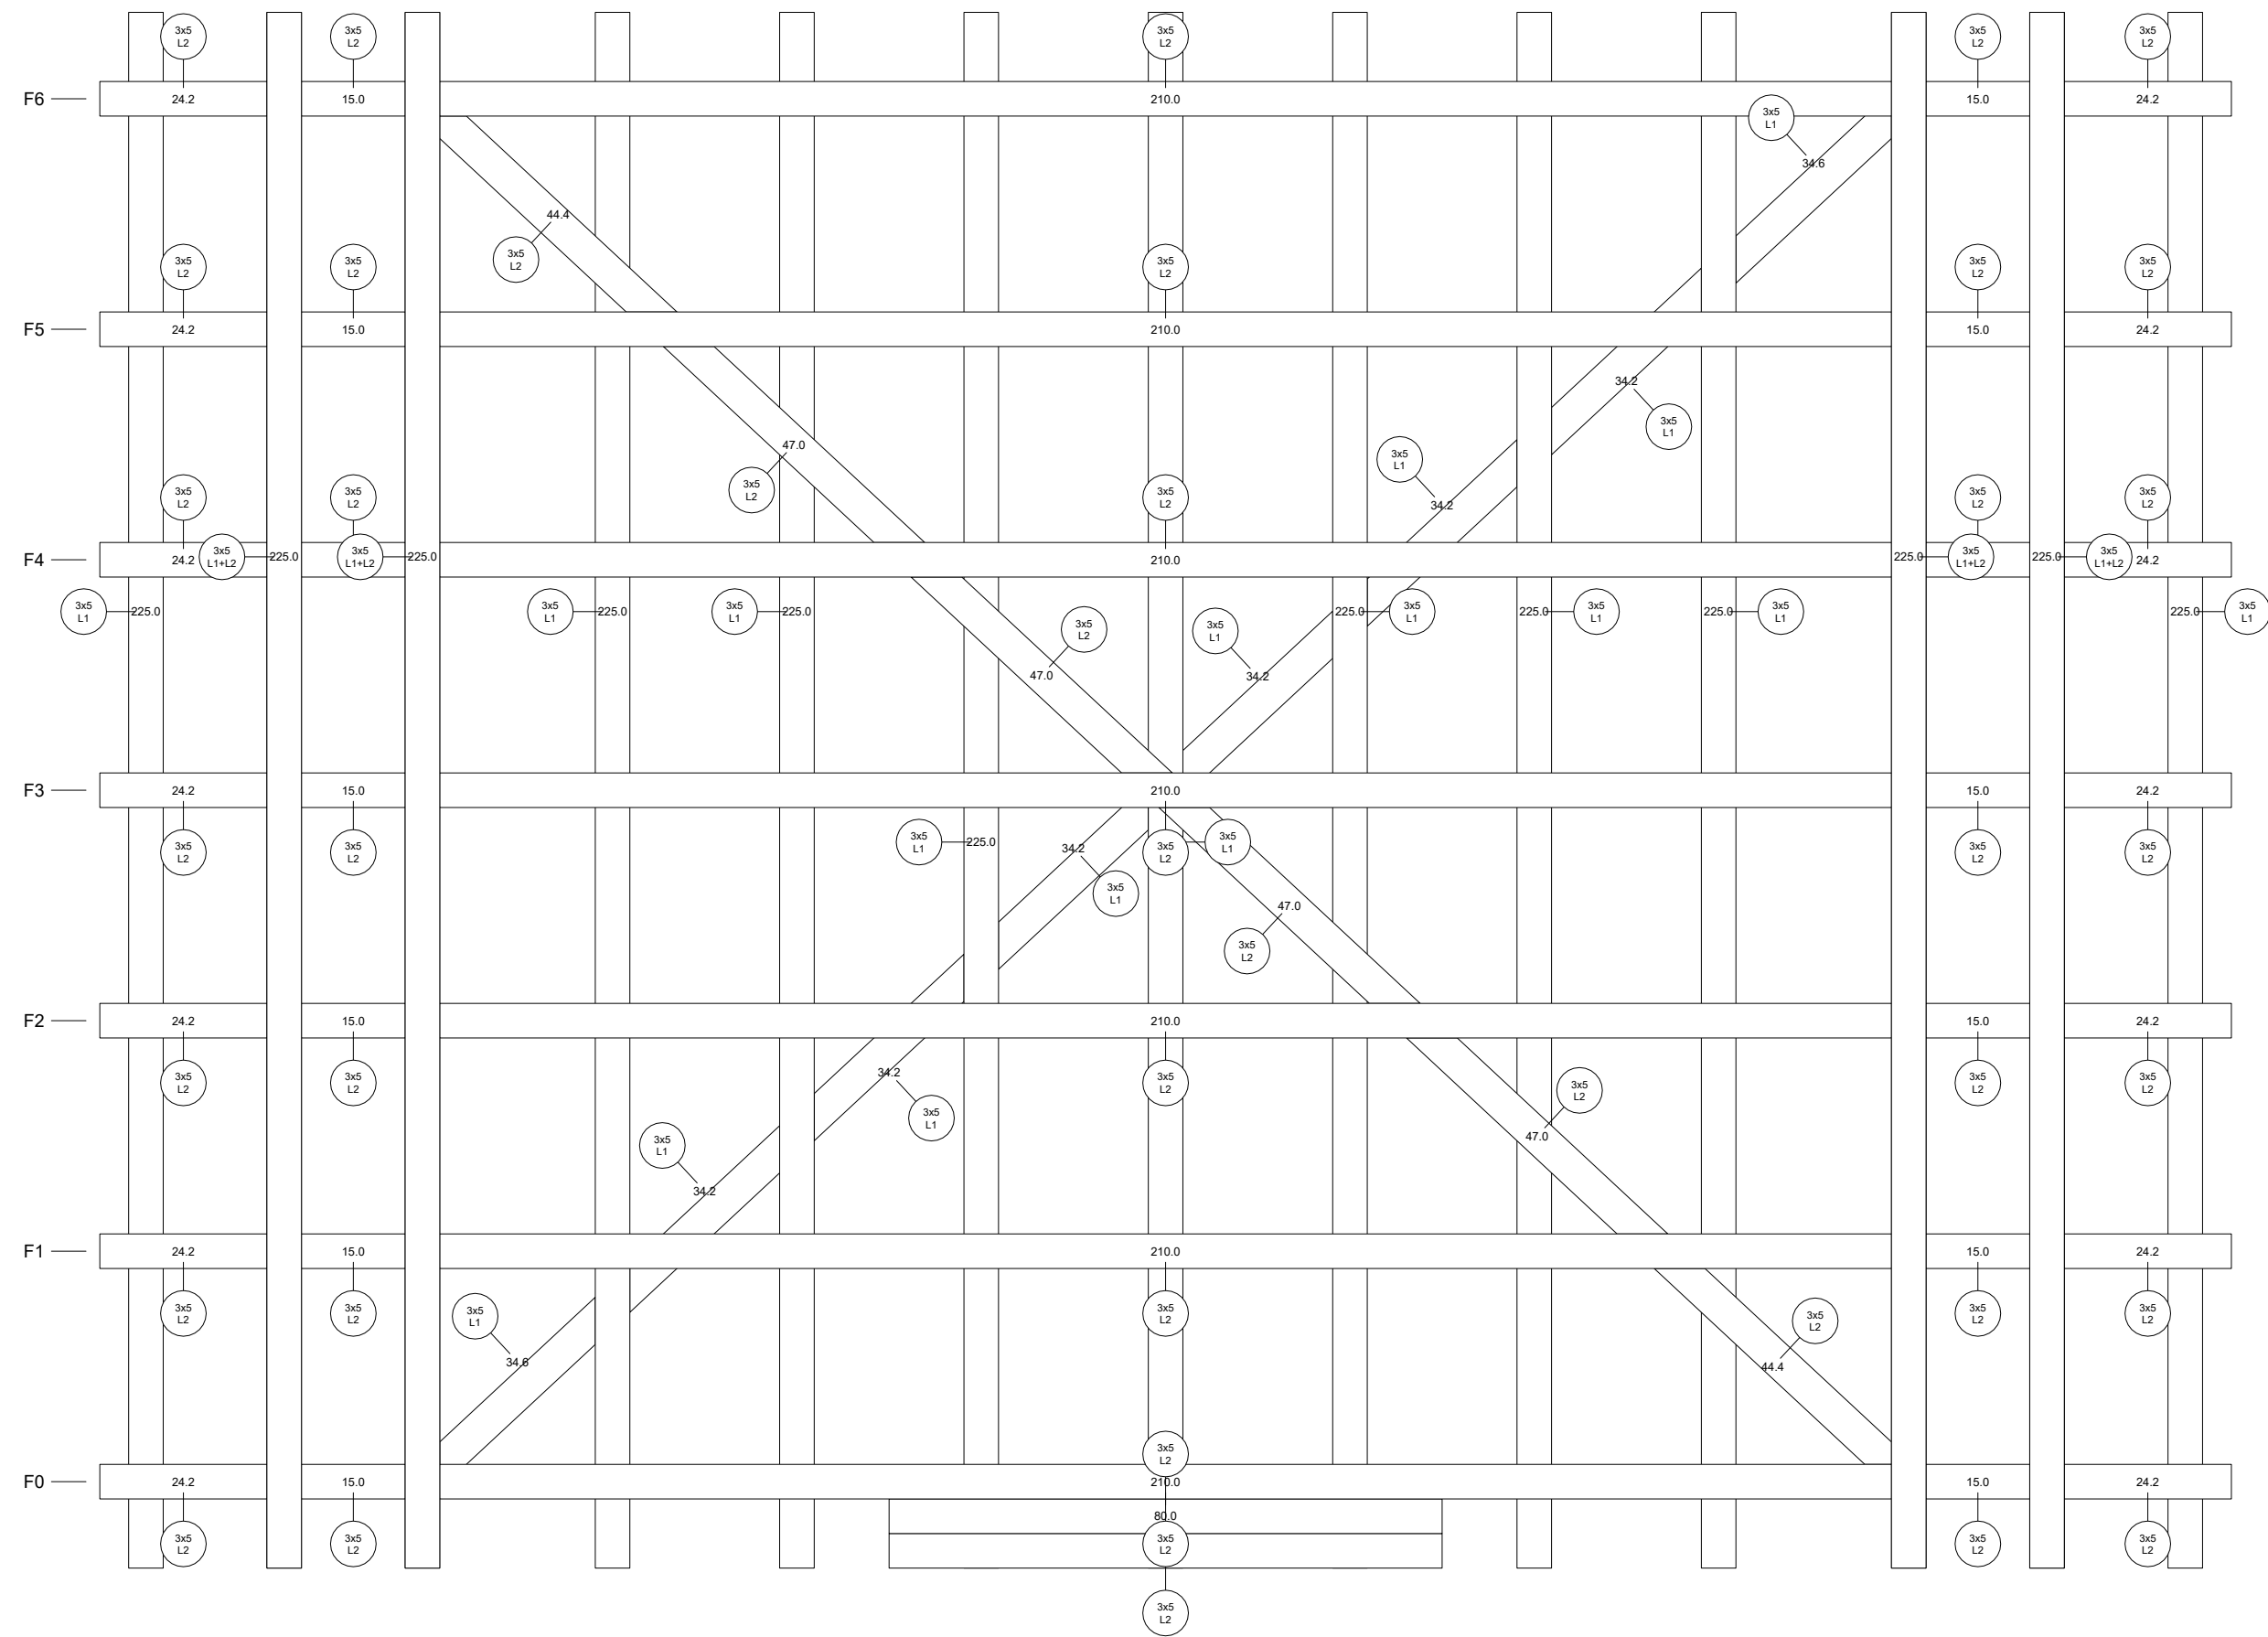

NOTE Two crossed sleeper layers with sole runners and plan braces. Door end at the bottom. Numbers: cut length in mm. Circles: stick profile and layer, L1 lies on the paper.

