TEAM VIRAGE

PITSTOP
PROCEDURE

EUROPEAN LE MANS SERIES

ELMS ARMBANDS

RED

One person allowed to go to the car in case of red flag.

GREEN

3 mechanics allowed to touch the car during the pitstop, as long as the car is not being refuelled.

BLUE

2 persons allowed for tyre pressure and temperatures (allowed even during refuelling)

CAR CONTROLLER DOES NOT HAVE AN ARMBAND

PITLANE & BOX RULES

IN THE TENT

LMC

- 2 extinguishers of 6L must be placed in LMC tent
- No more than 200 L per car per garage
- After the qualifying, parc fermé will be under the tent. Please mark the cars as “PARC FERMÉ”, so nobody touch the cars !

IN THE PITLANE “WORKING AREA”

- Only 4 persons max to push the car
- No skates used to bring back the car in box or tent after qualifying
- You can push the car with 4 persons from pit entry to pit exit in case of issue (see picture)
- The Driver is not allowed to use Reverse in pitlane. If he needs to go backward, he must be pushed by max 4 persons => ENGINE OFF

- A maximum of three persons, without any tools except for those for manual cleaning or tyre/brake checking, ma perform operations, **and ground the car**, provided that no bodywork panel is removed.
- Two industry representatives are permitted to check the tyres and/or the brakes but may not perform any other function. Only the person(s) mentioned above are authorized in the working area.

PITSTOP RULES

BEFORE A PITSTOP

- No tools in the working area
- Only the Car Controller can be present
- Nobody can cross the working line

DURING A PITSTOP

NOBODY CAN ENTER THE AREA WHILE THE ENGINE IS ON !

- If REFUELLING
  - Refuelling must be done first, except if there are damages to fix, then refuelling will be done at last
  - Car must be always on its wheels and engine off
  - No tools allowed
  - Three armbands and the two controllers checking **visually !**
  - Car must be connected to the ground and extinguisher man ready
  - **All full face helmet visors must be closed, balaclavas inside the suits and suits closed !!!**
  - All the others must wear complete nomex clothing + helmet + fire goggles
- Tyres changes and other work :
  - **3 mechanics** allowed to work on the car with **1 pitgun**
  - **1 driver helper** with the appropriate armband (One of the other drivers (not necessarily the one going out) can be a driver help)
  - **2 pressure & temps controllers**
  - Do not leave wheels unattended and NEVER make it roll

PIT-IN PROCEDURE

After crossing the Pit Entry Line, loosen your upper belts as much as possible.
Stop where the Lollipop indicates you and KILL the engine. On the radio you will be told:

Nothing : stop in the pit stop place and KILL the engine.

45° : stop in the pit stop place but in 45° angle. Remember to leave the steering STRAIGHT and DO NOT jump outside the car until the car is positioned in the right place

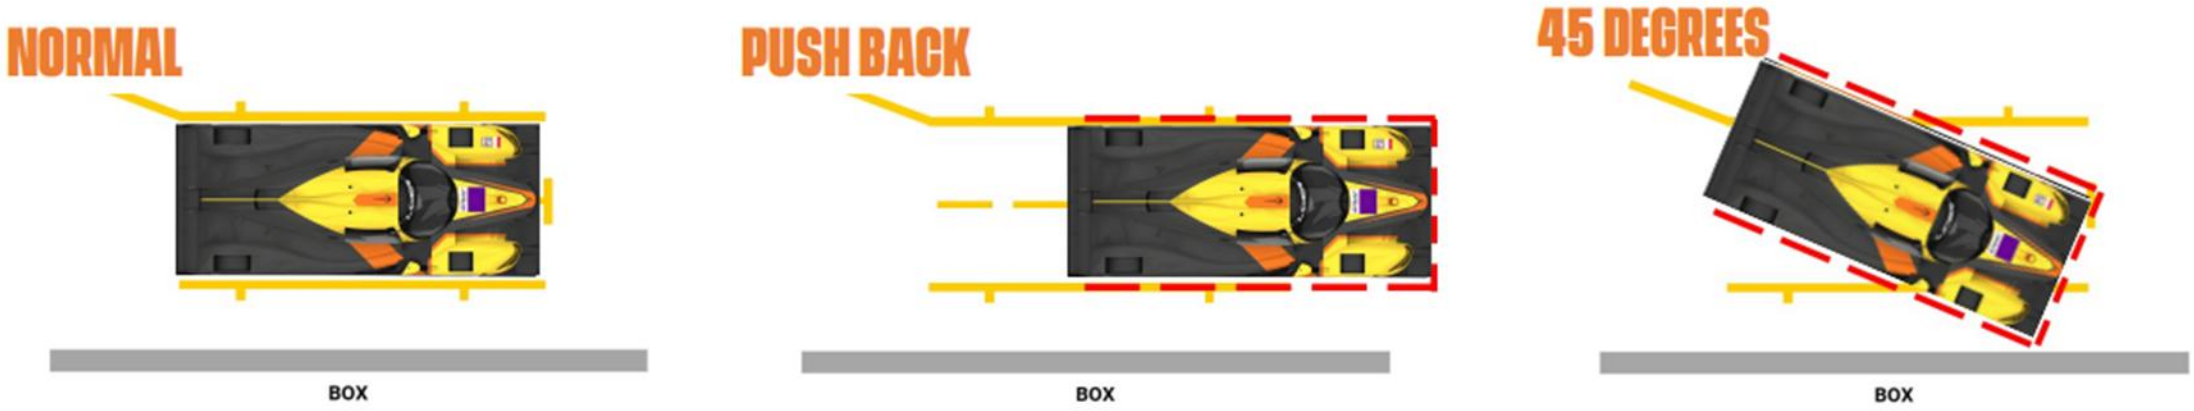

PIT-OUT PROCEDURE

Once you are inside the car with the seatbelt fasten :

- Connect your radio and drink system. Make sure there is no free play in any of the connections
- Check if Master switch and Ignition are ON
- When the Lollipop indicates you, START the engine
- Tighten the upper belts if necessary

The PIT OUT can follow three options :

Normal : you will leave from the pit stop place.

Push Back : in case there is a car in front close to us, we will push you backwards.
You will be warned on the radio and you will need to PRESS THE CLUTCH.

45º : we will place the car at 45º angle. You will leave from the pit stop place but with this angle.

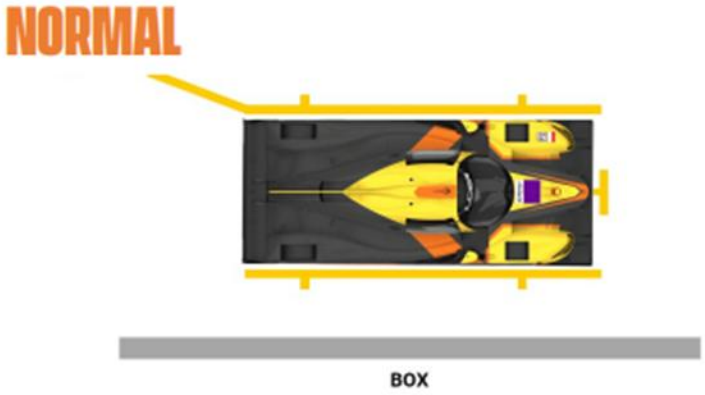

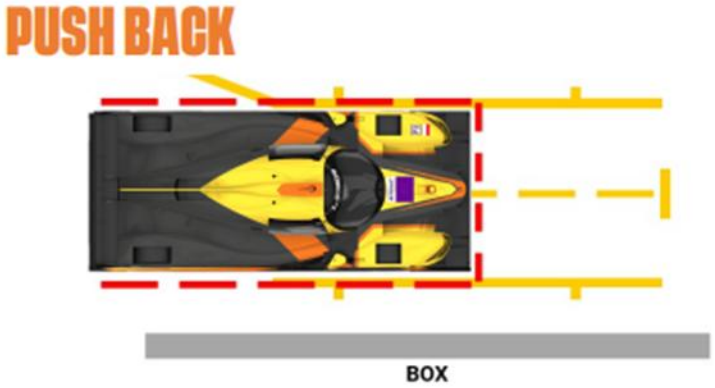

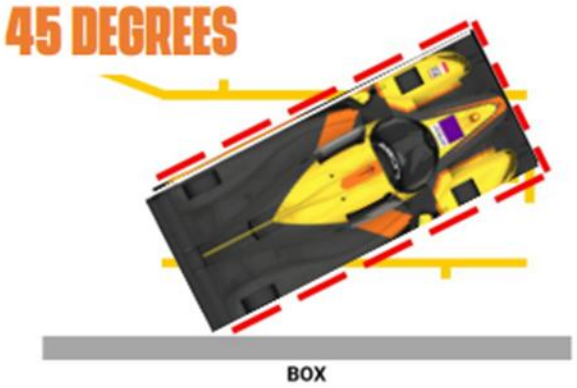

CAR CONTROLLER & USB STICK

Car Controller is responsible for the pitstop safety => Please listen if he tells you something during the pitstop.

- As trained: turn lollipop while the car is going down = can crank engine as soon as car is down
- Do not look in front
- Do not turn it if *Other Team* is in front => Push backward. **OR** Nose out (45º) if *Other Team* is also behind
- If the driver stalls a bit further and doesn't restart, you must keep on controlling the car to allow a safe release.
- If the Safety Car comes through the pitlane followed by the rest of the cars while we are in the working area, we need to wait in the working area until the last car has passed in front of our garage.
- If you receive the "Nose In" (45º) indication, please act accordingly.

USB Stick => To be downloaded and transferred as per regulations

PITSTOP CREW

ELMS			
Nr.	Designation	Code	Function
1	Mechanic 1	G1	Gun 1
2	Mechanic 2	G2	Gun 2
3	Mechanic 3	M3	Wheels charge
4	Refueller	RF	Operation of Fuel Hose
5	Deadman Valve	DV	Operation of Fuel valve
6	Extinguisher	E	Extinguisher
7	Lollypop	CC	Car controller
8	Driver Aid	DA	Driver change aid
9	Helper	H	Wheels Prep

VIRAGE

PITSTOP CREW

1

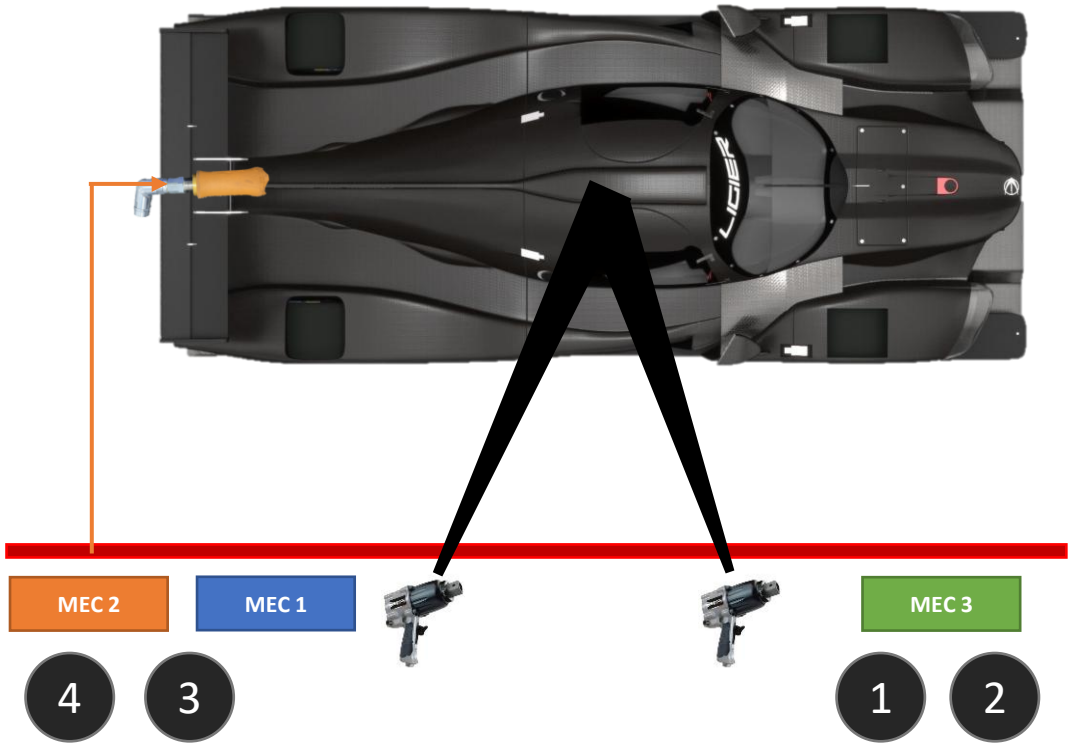

- MEC 2 puts the lance

PITSTOP CREW

2

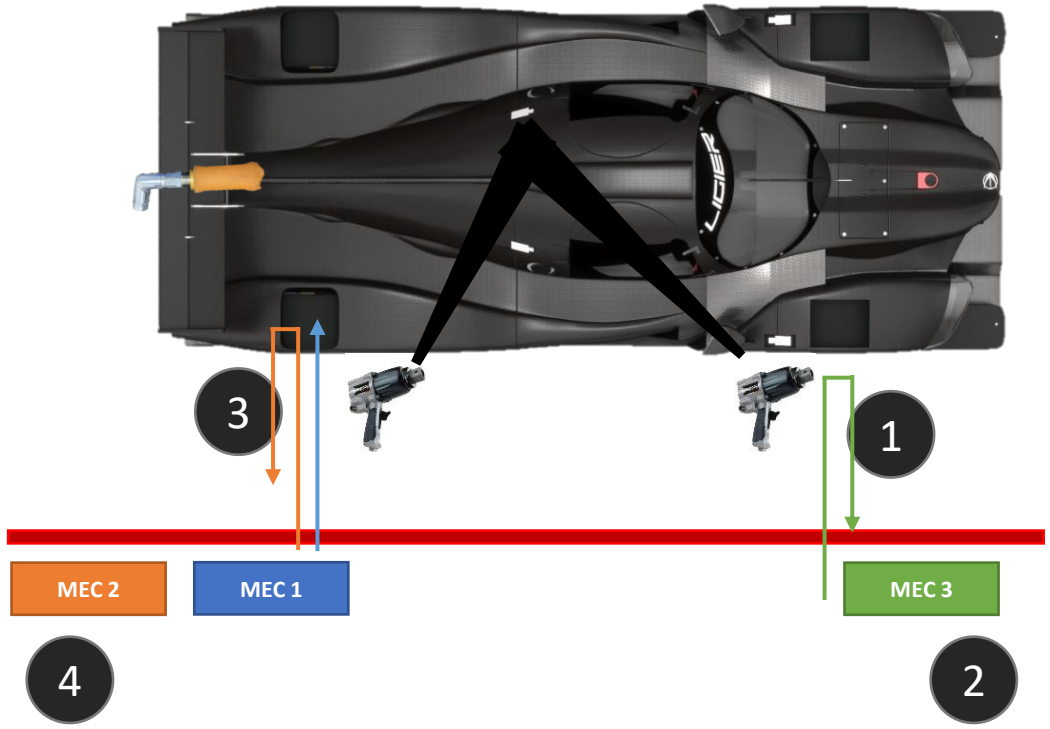

- MEC 1 operates the rear gun. He removes wheel 3, and MEC 2 puts the new one
- MEC 3 changes by himself the tyre 1

PITSTOP CREW

3

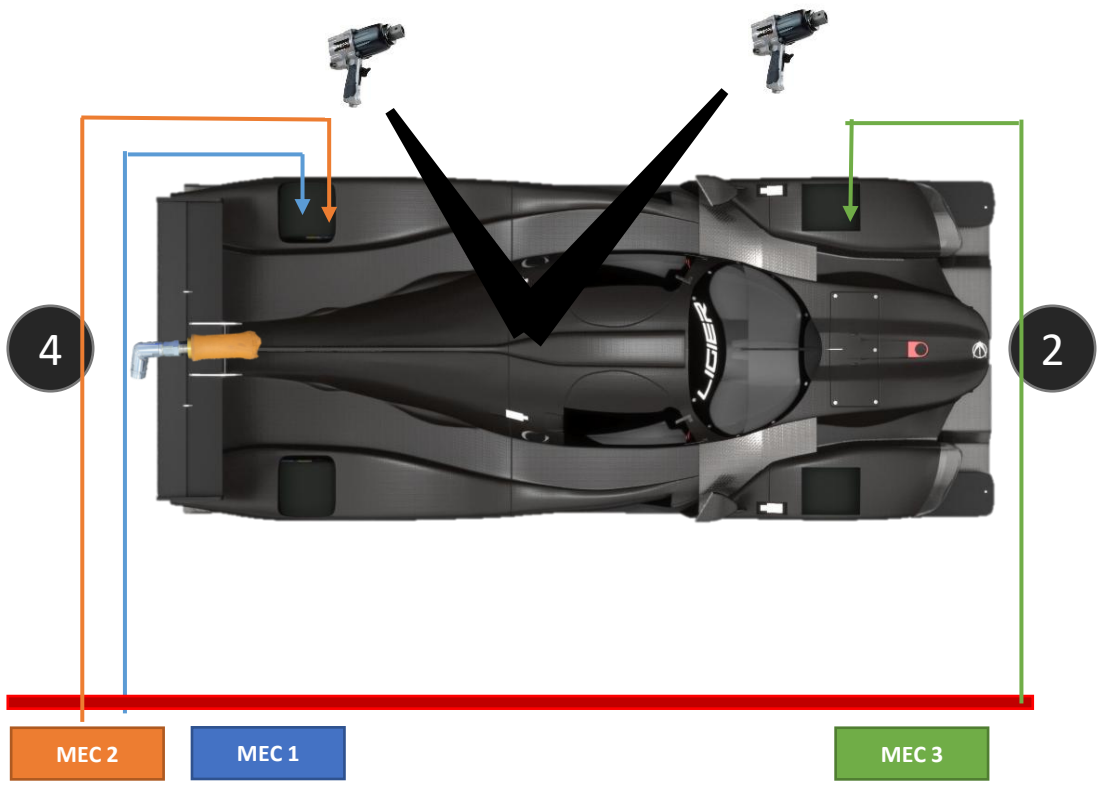

- MEC 2 takes wheel 4 new and puts it. MEC 1 removes old wheel 1 and takes it behind the line.
- MEC 3 takes wheel 2 and removes old tyre.

PITSTOP CREW

4

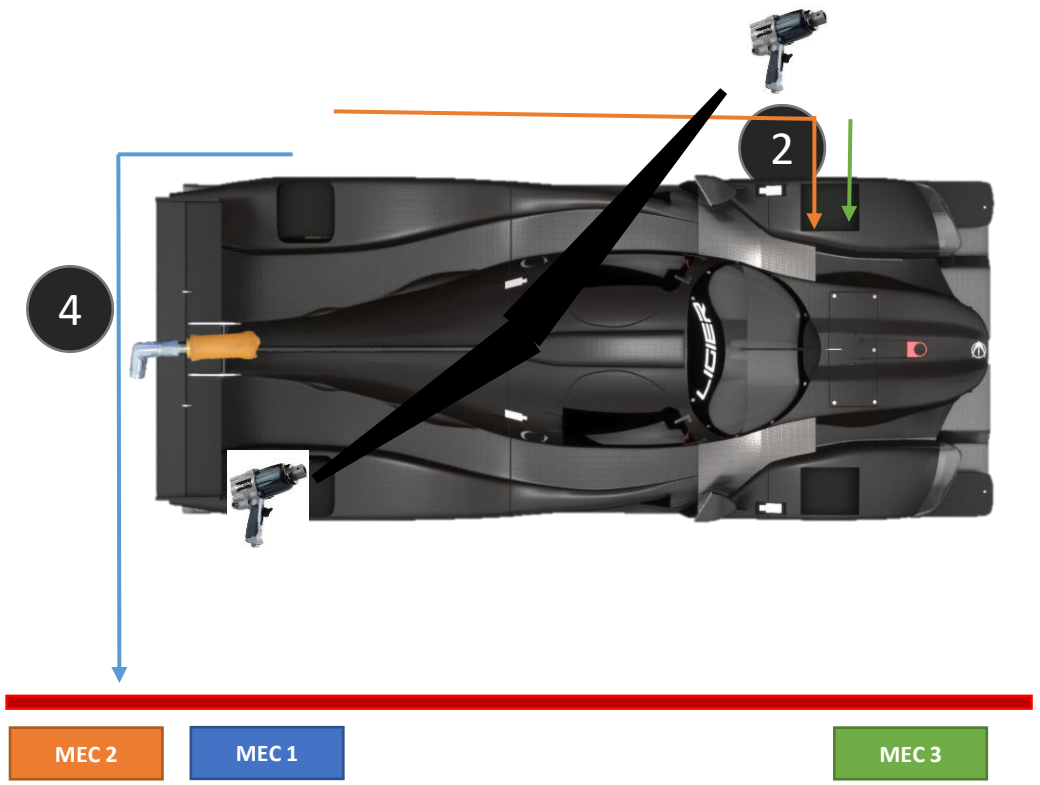

- MEC 2 goes to wheel 2, puts the new tyre and takes the old one behind the line
- MEC 1 removes the lance and drops the car.

PITSTOP CREW

5

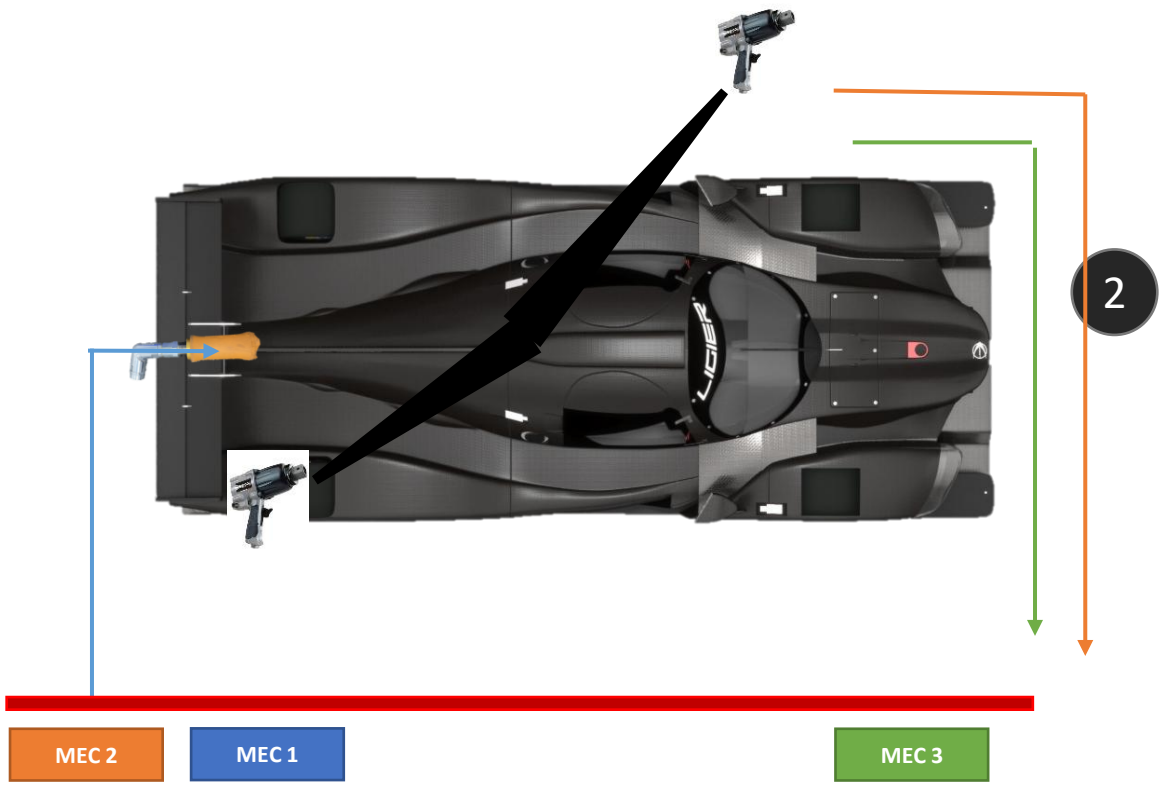

- MEC 2 goes to wheel 2, puts the new tyre and takes the old one behind the line
- MEC 1 removes the lance and drops the car.

VIRAGE

LIGIER