CadQuery Documentation

Release 2.5.2

David Cowden

CONTENTS

1	See CadQuery in Action		3
2	Quick Links	:	5
3	Table Of Contents		7
	3.1 Introduction		7
	3.2 Installing CadQuery		9
	3.3 QuickStart	1	3
	3.4 Design Principles	1	9
	3.5 Concepts	2	1
	3.6 Workplane	3	1
	3.7 Sketch	4	0
	3.8 Assemblies	4	5
	3.9 Free function API	6	0
	3.10 Visualization	6	5
	3.11 CadQuery Scripts and Object Output	6	8
	3.12 Examples		8
	3.13 API Reference	9	7
	3.14 Selectors Reference		3
	3.15 CadQuery Class Summary	10	7
	3.16 Importing and Exporting Files		9
	3.17 The CadQuery Gateway Interface		9
	3.18 Extending CadQuery		5
	3.19 Citing		9
4	Indices and tables	30	1
Py	ython Module Index	30	3
In	ndex	30	5

CadQuery is an intuitive, easy-to-use Python library for building parametric 3D CAD models. It has several goals:

- Build models with scripts that are as close as possible to how you'd describe the object to a human, using a standard, already established programming language
- Create parametric models that can be very easily customized by end users
- Output high quality CAD formats like STEP, AMF and 3MF in addition to traditional STL
- Provide a non-proprietary, plain text model format that can be edited and executed with only a web browser

CONTENTS 1

2 CONTENTS

CHAPTER
ONE

SEE CADQUERY IN ACTION

This Getting Started Video will show you what CadQuery can do. Please note that the video has not been updated for CadQuery 2 and still shows CadQuery use within FreeCAD.

CHAPTER

TWO

QUICK LINKS

- QuickStart
- CadQuery CheatSheet
- API Reference

CHAPTER

THREE

TABLE OF CONTENTS

3.1 Introduction

3.1.1 What is CadQuery


CadQuery is an intuitive, easy-to-use Python library for building parametric 3D CAD models. It has several goals:

- Build models with scripts that are as close as possible to how you'd describe the object to a human, using a standard, already established programming language
- Create parametric models that can be very easily customized by end users
- Output high quality CAD formats like STEP, AMF and 3MF in addition to traditional STL
- Provide a non-proprietary, plain text model format that can be edited and executed with only a web browser

CadQuery 2 is based on OCP, which is a set of Python bindings for the open-source OpenCascade modelling kernel.

Using CadQuery, you can build fully parametric models with a very small amount of code. For example, this simple script produces a flat plate with a hole in the middle:

```
thickness = 0.5
width = 2.0
result = Workplane("front").box(width, width, thickness).faces(">Z").hole(thickness)
```

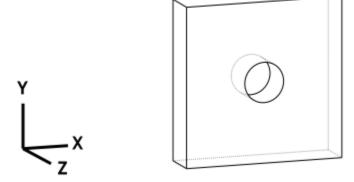


That's a bit of a dixie-cup example. But it is pretty similar to a more useful part: a parametric pillow block for a standard 608-size ball bearing:

```
(length, height, diam, thickness, padding) = (30.0, 40.0, 22.0, 10.0, 8.0)

(continues on next page)
```

(continued from previous page)

```
result = (
    Workplane("XY")
    .box(length, height, thickness)
    .faces(">Z")
    .workplane()
    .hole(diam)
    .faces(">Z")
    .workplane()
    .rect(length - padding, height - padding, forConstruction=True)
    .vertices()
    .cboreHole(2.4, 4.4, 2.1)
)
```

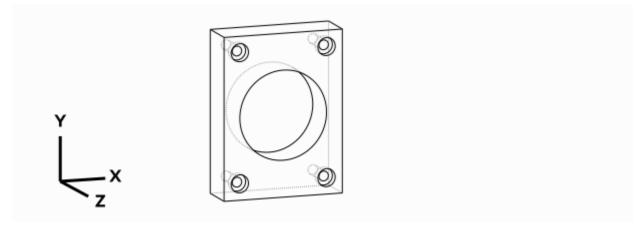

Lots more examples are available in the Examples

3.1.2 CadQuery is a library, GUIs are separate

CadQuery is a library, that's intentionally designed to be usable as a GUI-less library. This enables its use in a variety of engineering and scientific applications that create 3D models programmatically.

If you'd like a GUI, you have a couple of options:

- The Qt-based GUI CQ-editor
- As a Jupyter extension jupyter-cadquery

3.1.3 Why CadQuery instead of OpenSCAD?

Like OpenSCAD, CadQuery is an open-source, script based, parametric model generator. But CadQuery has several key advantages:

- 1. **The scripts use a standard programming language**, Python, and thus can benefit from the associated infrastructure. This includes many standard libraries and IDEs
- More powerful CAD kernel OpenCascade is much more powerful than CGAL. Features supported natively by OCC include NURBS, splines, surface sewing, STL repair, STEP import/export, and other complex operations, in addition to the standard CSG operations supported by CGAL
- 3. **Ability to import/export STEP and DXF** We think the ability to begin with a STEP model, created in a CAD package, and then add parametric features is key. This is possible in OpenSCAD using STL, but STL is a lossy format

- 4. **Less Code and easier scripting** CadQuery scripts require less code to create most objects, because it is possible to locate features based on the position of other features, workplanes, vertices, etc.
- 5. Better Performance CadQuery scripts can build STL, STEP, AMF and 3MF faster than OpenSCAD.

3.1.4 Where does the name CadQuery come from?

CadQuery is inspired by jQuery, a popular framework that revolutionized web development involving JavaScript.

CadQuery is for 3D CAD what jQuery is for JavaScript. If you are familiar with how jQuery works, you will probably recognize several jQuery features that CadQuery uses:

- A fluent API to create clean, easy to read code
- Ability to use the library along side other Python libraries
- Clear and complete documentation, with plenty of samples.

3.2 Installing CadQuery

To install both Cadquery and CQ-Editor together with a single installer see the instructions below *Adding a Nicer GUI* via CQ-editor.

CadQuery may be installed with either conda or pip. The conda installation method is the better tested and more mature option.

3.2.1 Install via conda

Begin by installing the conda package manager. If conda is already installed skip to *conda*.

Install the Conda Package Manager

In principle, any Conda distribution will work, but it is probably best to install Miniforge to a local directory and to avoid running *conda init*. After performing a local directory installation, Miniforge can be activated via the [scripts,bin]/activate scripts. This will help avoid polluting and breaking the local Python installation.

Miniforge is a minimal installer that sets *conda-forge* as the default channel for package installation and provides mamba. You can swap almost all commands between conda & mamba.

In Linux/MacOS, the local directory installation method looks something like this:

```
# Install to ~/miniforge
curl -L -o miniforge.sh "https://github.com/conda-forge/miniforge/releases/latest/
    download/Miniforge3-$(uname) - $(uname -m).sh"
bash miniforge.sh -b -p $HOME/miniforge

# Activate
source $HOME/miniforge/bin/activate
```

On Windows, download the installer and double click it on the file browser or install non-interactively as follows:

Listing 1: Windows CMD

```
:: Install to %USERPROFILE%\Miniforge
curl -L -o miniforge.exe https://github.com/conda-forge/miniforge/releases/latest/
download/Miniforge3-Windows-x86_64.exe
start "" /wait miniforge.exe /InstallationType=JustMe /RegisterPython=0 /NoRegistry=1 /
NoScripts=1 /S /D=%USERPROFILE%\Miniforge
```

(continues on next page)

(continued from previous page)

```
:: Activate
cmd /K ""%USERPROFILE%/Miniforge/Scripts/activate.bat" "%USERPROFILE%/Miniforge""
```

Listing 2: PowerShell

```
# Install to $env:USERPROFILE\Miniforge
curl.exe -L -o miniforge.exe https://github.com/conda-forge/miniforge/releases/latest/
    download/Miniforge3-Windows-x86_64.exe
Start-Process -Wait -FilePath miniforge.exe -ArgumentList @("/InstallationType=JustMe",
    "/RegisterPython=0", "/NoRegistry=1", "/NoScripts=1", "/S", "/D=$env:USERPROFILE\
    Miniforge")

# Activate
. $env:USERPROFILE\Miniforge\shell\condabin\conda-hook.ps1
conda activate
```

It might be worthwhile to consider using /NoScripts=0 to have an activation shortcut added to the start menu.

After conda installation, create and activate a new conda environment to prepare for cadquery installation.

conda

mamba install is recommended over conda install for faster and less memory intensive cadquery installation.

Install the latest released version of cadquery:

```
conda create -n cq
conda activate cq
mamba install cadquery
```

or install a given version of cadquery¹:

```
conda create -n cq231
conda activate cq231
mamba install cadquery=2.3.1
```

or install the latest dev version:

```
conda create -n cqdev
conda activate cqdev
mamba install -c cadquery cadquery=master
```

Add the *conda-forge* channel explicitly to the install command if needed (not using a miniforge based conda distribution).

```
mamba install cadquery=2.2.0 ocp=7.7.0.*
```

¹ Older releases may not be compatible with the latest OCP/OCCT version. In that case, specify the version of the dependency explicitly.

3.2.2 Install via pip

CadQuery can be installed via pip on Linux, MacOS and Windows. Python versions 3.9 and newer are supported by CadQuery, however a bleeding-edge Python installation may be broken due to lagging support in CadQuery's complex set of dependencies. If the pip installation method does not work for your system, you can try the conda installation method above.

It is highly recommended that a virtual environment is used when installing CadQuery, although it is not strictly required. Installing CadQuery via pip requires an up-to-date version of pip, which can be obtained with the following command line (or a slight variation thereof).:

```
python3 -m pip install --upgrade pip
```

Once a current version of pip is installed, CadQuery can be installed using the following command line.:

```
pip install cadquery
```

It is also possible to install the very latest changes directly from CadQuery's GitHub repository, with the understanding that sometimes breaking changes can occur. To install from the git repository, run the following command line.:

```
pip install git+https://github.com/CadQuery/cadquery.git
```

You should now have a working CadQuery installation, but developers or users who want to use CadQuery with IPython/Jupyter or to set up a developer environment can read the rest of this section.

If you are installing CadQuery to use with IPython/Jupyter, you may want to run the following command line to install the extra dependencies.:

```
pip install cadquery[ipython]
```

If you want to create a developer setup to contribute to CadQuery, the following command line will install all the development dependencies that are needed.:

```
pip install cadquery[dev]
```

3.2.3 Adding a Nicer GUI via CQ-editor

If you prefer to have a GUI available, your best option is to use CQ-editor.

You can download the newest build here. Install and run the *run.sh* (Linux/MacOS) or *run.bat* (Windows) script in the root CQ-editor directory. The CQ-editor window should launch.

Linux/MacOS

- 1. Download the installer (.sh script matching OS and platform).
- 2. Select the script in the file browser and make executable. Choose **Properties** from the context menu and select **Permissions**, **Allow executing file as a program** (or similar, this step varies depending on OS and window manager).
- 3. Select the script in the file browser and choose **Run as Program** (or similar).

Follow the prompts to accept the license and optionally change the installation location.

The default installation location is /home/<username>/cq-editor.

4. Launch the **run.sh** script from the file brower (again make executable first and then run as program).

To install from command line, download the installer using curl or wget or your favorite program and run the script.:

```
curl -LO https://github.com/CadQuery/CQ-editor/releases/download/nightly/CQ-editor-

master-Linux-x86_64.sh
sh CQ-editor-master-Linux-x86_64.sh
```

To run from command.:

```
$HOME/cq-editor/run.sh
```

Windows

1. Download the installer (.exe) and double click it on the file browser.

Follow the prompts to accept the license and optionally change the installation location.

The default installation location is C:\Users\<username>\cq-editor.

2. Launch the **run.bat** script from the file brower (select **Open**).

To run from command line, activate the environment, then run cq-editor:

```
C:\Users\<username>\cq-editor\run.bat
```

Installing extra packages

mamba, and pip are bundled with the CQ-editor installer and available for package installation.

First activate the environment, then call mamba or pip to install additional packages.

On windows.:

```
C:\Users\<username>\cq-editor\Scripts\activate
mamba install <packagename>
```

On Linux/MacOS.:

```
source $HOME/cq-editor/bin/activate mamba install <packagename>
```

3.2.4 Adding CQ-editor to an Existing Environment

You can install CQ-editor into a conda environment or Python virtual environment using conda (mamba) or pip.

Example cq-editor installation with conda (this installs both cadquery and cq-editor):

```
conda create -n cqdev
conda activate cqdev
mamba install -c cadquery cq-editor=master
```

Example cq-editor installation with pip:

```
pip install PyQt5 spyder pyqtgraph logbook
pip install git+https://github.com/CadQuery/CQ-editor.git
```

3.2.5 Jupyter

Viewing models in Jupyter is another good option for a GUI. Models are rendered in the browser.

The cadquery library works out-of-the-box with Jupyter. First install cadquery, then install JupyterLab in the same conda or Python venv.:

conda

```
mamba install jupyterlab
```

pip

```
pip install jupyterlab
```

Start JupyterLab:

```
jupyter lab
```

JupyterLab will open automatically in your browser. Create a Notebook to interactively edit/view CadQuery models. Call display to show the model.:

```
display(<Workplane, Shape, or Assembly object>)
```

3.2.6 Test Your Installation

If all has gone well, you can open a command line/prompt, and type:

```
$ python
>>> import cadquery
>>> cadquery.Workplane('XY').box(1,2,3).toSvg()
```

You should see raw SVG output displayed on the command line if the CadQuery installation was successful.



3.3 QuickStart


Want a quick glimpse of what CadQuery can do? This quickstart will demonstrate the basics of CadQuery using a simple example

3.3.1 Prerequisites: CadQuery and CQ-editor installation

If you have not already done so, follow the Installing CadQuery, to install CadQuery and CQ-editor.

After installation, run CQ-editor:


3.3. QuickStart 13

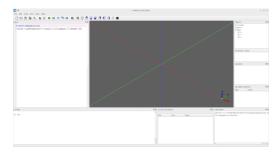

Find the CadQuery code editor, on the left side. You'll see that we start out with the script for a simple block.

3.3.2 What we'll accomplish

We will build a fully parametric bearing pillow block in this quickstart. Our finished object will look like this:

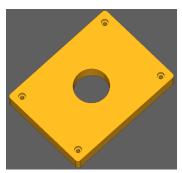

We would like our block to have these features:

- 1. It should be sized to hold a single 608 ('skate') bearing, in the center of the block.
- 2. It should have counter-bored holes for M2 socket head cap screws at the corners.
- 3. The length and width of the block should be configurable by the user to any reasonable size.

A human would describe this as:

"A rectangular block $80 \text{mm} \times 60 \text{mm} \times 10 \text{mm}$, with counter-bored holes for M2 socket head cap screws at the corners, and a circular pocket 22 mm in diameter in the middle for a bearing."

Human descriptions are very elegant, right? Hopefully our finished script will not be too much more complex than this human-oriented description.

Let's see how we do.


3.3.3 Start With A single, simple Plate

Let's start with a simple model that makes nothing but a rectangular block, but with place-holders for the dimensions. Paste this into the code editor:

```
height = 60.0
width = 80.0
thickness = 10.0

# make the base
result = cq.Workplane("XY").box(height, width, thickness)

# Render the solid
show_object(result)
```

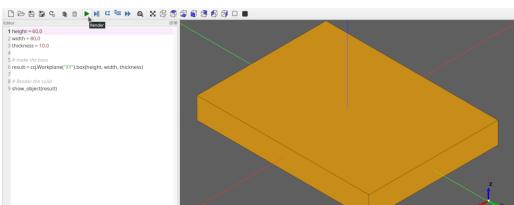

Press the green Render button in the toolbar to run the script. You should see our base object.

Nothing special, but its a start!

3.3.4 Add the Holes


Our pillow block needs to have a 22mm diameter hole in the center to hold the bearing.

This modification will do the trick:

```
height = 60.0
    width = 80.0
2
    thickness = 10.0
    diameter = 22.0
    # make the base
6
    result = (
        cq.Workplane("XY")
        .box(height, width, thickness)
        .faces(">Z")
10
        .workplane()
11
        .hole(diameter)
12
    )
13
14
    # Render the solid
15
    show_object(result)
```

Rebuild your model by clicking the Render button. Your block should look like this:

3.3. QuickStart 15

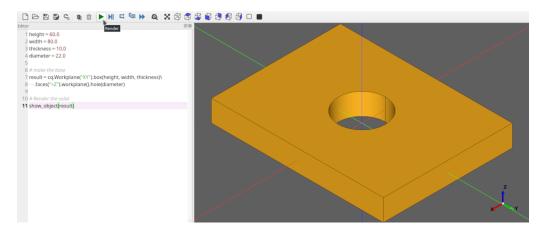

The code is pretty compact, let's step through it.

Line 4 adds a new parameter, diameter, for the diameter of the hole

Lines 10-12, we're adding the hole. *cadquery.Workplane.faces()* selects the top-most face in the Z direction, and then *cadquery.Workplane.workplane()* begins a new workplane located on this face. The center of this workplane is located at the center of mass of the shape, which in this case is the center of the plate. Finally, *cadquery.Workplane.hole()* drills a hole through the part, 22mm in diameter.

1 Note

Don't worry about the CadQuery syntax now.. you can learn all about it in the API Reference later.

3.3.5 More Holes

Ok, that hole was not too hard, but what about the counter-bored holes in the corners?

An M2 Socket head cap screw has these dimensions:

Head Diameter: 3.8 mm
Head height: 2.0 mm
Clearance Hole: 2.4 mm

• CounterBore diameter: 4.4 mm

The centers of these holes should be 6mm from the edges of the block. And, we want the block to work correctly even when the block is re-sized by the user.

Don't tell me we'll have to repeat the steps above 8 times to get counter-bored holes? Good news!— we can get the job done with just a few lines of code. Here's the code we need:

```
height = 60.0

width = 80.0

thickness = 10.0

diameter = 22.0

padding = 12.0

# make the base

result = (

cq.Workplane("XY")


.box(height, width, thickness)
```

(continues on next page)

(continued from previous page)

```
.faces(">Z")
11
         .workplane()
12
         .hole(diameter)
13
         .faces(">Z")
         .workplane()
15
         .rect(height - padding, width - padding, forConstruction=True)
16
         .vertices()
17
         .cboreHole(2.4, 4.4, 2.1)
18
    )
19
    # Render the solid
20
    show_object(result)
21
```

After clicking the Render button to re-execute the model, you should see something like this:

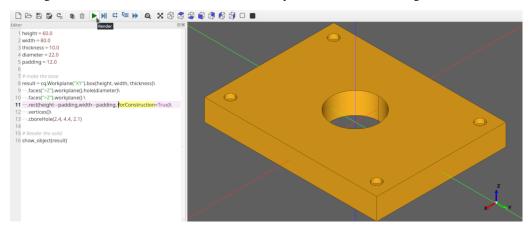

There is quite a bit going on here, so let's break it down a bit.

Line 5 creates a new padding parameter that decides how far the holes are from the edges of the plate.

Lines 11-12 selects the top-most face of the block, and creates a workplane on the top of that face, which we'll use to define the centers of the holes in the corners.

There are a couple of things to note about this line:

- 1. The *cadquery.Workplane.rect()* function draws a rectangle. **forConstruction=True** tells CadQuery that this rectangle will not form a part of the solid, but we are just using it to help define some other geometry.
- 2. Unless you specify otherwise, a rectangle is drawn with its center on the current workplane center—in this case, the center of the top face of the block. So this rectangle will be centered on the face.

Line 16 draws a rectangle 12mm smaller than the overall length and width of the block, which we will use to locate the corner holes. We'll use the vertices (corners) of this rectangle to locate the holes. The rectangle's center is at the center of the workplane, which in this case coincides with the center of the bearing hole.

Line 17 selects the vertices of the rectangle, which we will use for the centers of the holes. The *cadquery.Workplane.vertices()* function selects the corners of the rectangle.

Line 18 uses the cboreHole function to draw the holes. The *cadquery.Workplane.cboreHole()* function is a handy CadQuery function that makes a counterbored hole. Like most other CadQuery functions, it operates on the values on the stack. In this case, since we selected the four vertices before calling the function, the function operates on each of the four points— which results in a counterbore hole at each of the rectangle corners.

3.3. QuickStart 17

3.3.6 Filleting

Almost done. Let's just round the corners of the block a bit. That's easy, we just need to select the edges and then fillet them:


We can do that using the preset dictionaries in the parameter definition:

```
height = 60.0
    width = 80.0
    thickness = 10.0
    diameter = 22.0
    padding = 12.0
    # make the base
    result = (
8
        cq.Workplane("XY")
         .box(height, width, thickness)
10
        .faces(">Z")
11
         .workplane()
12
         .hole(diameter)
13
         .faces(">Z")
14
        .workplane()
         .rect(height - padding, width - padding, forConstruction=True)
16
         .vertices()
         .cboreHole(2.4, 4.4, 2.1)
18
         .edges("|Z")
         .fillet(2.0)
20
    )
21
22
    # Render the solid
23
    show_object(result)
24
```

Line 20 fillets the edges using the *cadquery.Workplane.fillet()* method.

To grab the right edges, the cadquery.Workplane.edges() selects all of the edges that are parallel to the Z axis ("|Z"),

The finished product looks like this:

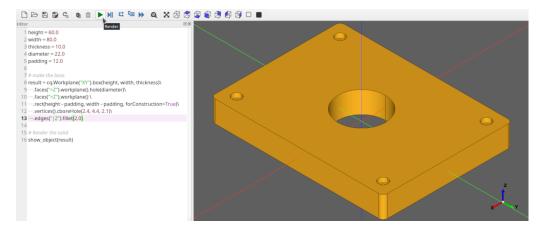

3.3.7 Exporting

If you want to fabricate a physical object you need to export the result to STL or DXF. Additionally, exporting as STEP for post-processing in another CAD tool is also possible.

This can be easily accomplished using the cadquery.exporters.export() function:

```
height = 60.0
    width = 80.0
2
    thickness = 10.0
    diameter = 22.0
    padding = 12.0
    # make the base
    result = (
        cq.Workplane("XY")
         .box(height, width, thickness)
10
         .faces(">Z")
11
         .workplane()
12
         .hole(diameter)
13
         .faces(">Z")
14
         .workplane()
         .rect(height - padding, width - padding, forConstruction=True)
16
         .vertices()
         .cboreHole(2.4, 4.4, 2.1)
18
         .edges("|Z")
         .fillet(2.0)
20
    )
21
22
    # Render the solid
23
    show_object(result)
24
25
    # Export
26
    cq.exporters.export(result, "result.stl")
27
    cq.exporters.export(result.section(), "result.dxf")
28
    cq.exporters.export(result, "result.step")
```

3.3.8 Done!

You just made a parametric, model that can generate pretty much any bearing pillow block with <30 lines of code.

3.3.9 Want to learn more?


- The Examples contains lots of examples demonstrating cadquery features
- The API Reference is a good overview of language features grouped by function
- The CadQuery Class Summary is the hard-core listing of all functions available.

3.4 Design Principles

3.4.1 Principle 1: Intuitive Construction

CadQuery aims to make building models using python scripting easy and intuitive. CadQuery strives to allow scripts to read roughly as a human would describe an object verbally.

For example, consider this object:

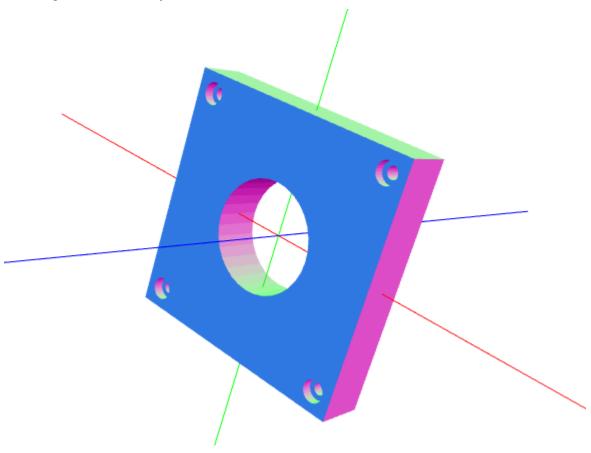

A human would describe this as:

"A block 80mm square x 30mm thick, with countersunk holes for M2 socket head cap screws at the corners, and a circular pocket 22mm in diameter in the middle for a bearing"

The goal is to have the CadQuery script that produces this object be as close as possible to the English phrase a human would use.

3.4.2 Principle 2: Capture Design Intent

The features that are **not** part of the part description above are just as important as those that are. For example, most humans will assume that:

- The countersunk holes are spaced a uniform distance from the edges
- The circular pocket is in the center of the block, no matter how big the block is

If you have experience with 3D CAD systems, you also know that there is a key design intent built into this object. After the base block is created, how the hole is located is key. If it is located from one edge, changing the block size will have a different effect than if the hole is located from the center.

Many scripting languages do not provide a way to capture design intent—because they require that you always work in global coordinates. CadQuery is different—you can locate features relative to others in a relative way—preserving the design intent just like a human would when creating a drawing or building an object.

In fact, though many people know how to use 3D CAD systems, few understand how important the way that an object is built impact its maintainability and resiliency to design changes.

3.4.3 Principle 3: Plugins as first class citizens

Any system for building 3D models will evolve to contain an immense number of libraries and feature builders. It is important that these can be seamlessly included into the core and used alongside the built in libraries. Plugins should be easy to install and familiar to use.

3.4.4 Principle 4: CAD models as source code makes sense

It is surprising that the world of 3D CAD is primarily dominated by systems that create opaque binary files. Just like the world of software, CAD models are very complex.

CAD models have many things in common with software, and would benefit greatly from the use of tools that are standard in the software industry, such as:

- 1. Easily re-using features between objects
- 2. Storing objects using version control systems
- 3. Computing the differences between objects by using source control tools
- 4. Share objects on the Internet
- 5. Automate testing and generation by allowing objects to be built from within libraries

CadQuery is designed to make 3D content creation easy enough that the above benefits can be attained without more work than using existing 'opaque', 'point and click' solutions.

3.5 Concepts

3.5.1 3D BREP Topology Concepts

Before talking about CadQuery, it makes sense to talk a little about 3D CAD topology. CadQuery is based upon the OpenCascade kernel, which uses Boundary Representations (BREP) for objects. This just means that objects are defined by their enclosing surfaces.

When working in a BREP system, these fundamental constructs exist to define a shape (working up the food chain):

```
vertex
    a single point in space

edge
    a connection between two or more vertices along a particular path (called a curve)

wire
    a collection of edges that are connected together.

face
    a set of edges or wires that enclose a surface

shell
    a collection of faces that are connected together along some of their edges

solid
    a shell that has a closed interior

compound
    a collection of solids
```

When using CadQuery, all of these objects are created, hopefully with the least possible work. In the actual CAD kernel, there is another set of Geometrical constructs involved as well. For example, an arc-shaped edge will hold a reference to an underlying curve that is a full circle, and each linear edge holds underneath it the equation for a line. CadQuery shields you from these constructs.

3.5. Concepts 21

3.5.2 CadQuery API layers

Once you start to dive a bit more into CadQuery, you may find yourself a bit confused juggling between different types of objects the CadQuery APIs can return. This chapter aims to give an explanation on this topic and to provide background on the underlying implementation and kernel layers so you can leverage more of CadQuery functionality.

CadQuery is composed of 4 different API, which are implemented on top of each other.

- 1. The Fluent API
 - 1. Workplane
 - 2. Sketch
 - 3. Assembly
- 2. The Direct API
 - 1. Shape
- 2. The Geometry API
 - 1. Vector
 - 2. Plane
 - 3. Location
- 3. The OCCT API

The Fluent API

What we call the fluent API is what you work with when you first start using CadQuery, the *Workplane* class and all its methods defines the Fluent API. This is the API you will use and see most of the time, it's fairly easy to use and it simplifies a lot of things for you. A classic example could be:

```
part = Workplane("XY").box(1, 2, 3).faces(">Z").vertices().circle(0.5).cutThruAll()
```

Here we create a *Workplane* object on which we subsequently call several methods to create our part. A general way of thinking about the Fluent API is to consider the *Workplane* as your part object and all it's methods as operations that will affect your part. Often you will start with an empty *Workplane*, then add more features by calling *Workplane* methods.

This hierarchical structure of operations modifying a part is well seen with the traditional code style used in CadQuery code. Code written with the CadQuery fluent API will often look like this:

```
part = Workplane("XY").box(1, 2, 3).faces(">Z").vertices().circle(0.5).cutThruAll()
```

Or like this:

22

```
part = Workplane("XY")
part = part.box(1, 2, 3)
part = part.faces(">Z")
part = part.vertices()
part = part.circle(0.5)
part = part.cutThruAll()
```

```
1 Note
```

While the first code style is what people default to, it's important to note that when you write your code like this it's equivalent as writting it on a single line. It's then more difficult to debug as you cannot visualize each operation step by step, which is a functionality that is provided by the CQ-Editor debugger for example.

The Direct API

While the fluent API exposes much functionality, you may find scenarios that require extra flexibility or require working with lower level objects.

The direct API is the API that is called by the fluent API under the hood. The 9 topological classes and their methods compose the direct API. These classes actually wrap the equivalent Open CASCADE Technology (OCCT) classes. The 9 topological classes are :

- 1. Shape
- 2. Compound
- 3. CompSolid
- 4. Solid
- 5. Shell
- 6. Face
- 7. Wire
- 8. Edge
- 9. Vertex

Each class has its own methods to create and/or edit shapes of their respective type. One can also use the *Free function API* to create and modify shapes. As already explained in *Concepts* there is also some kind of hierarchy in the topological classes. A Wire is made of several edges which are themselves made of several vertices. This means you can create geometry from the bottom up and have a lot of control over it.

For example we can create a circular face like so

```
circle_wire = Wire.makeCircle(10, Vector(0, 0, 0), Vector(0, 0, 1))
circular_face = Face.makeFromWires(circle_wire, [])
```

1 Note

In CadQuery (and OCCT) all the topological classes are shapes, the *Shape* class is the most abstract topological class. The topological class inherits Mixin3D or Mixin1D which provide aditional methods that are shared between the classes that inherits them.

The direct API as its name suggests doesn't provide a parent/children data structure, instead each method call directly returns an object of the specified topological type. It is more verbose than the fluent API and more tedious to work with, but as it offers more flexibility (you can work with faces, which is something you can't do in the fluent API) it is sometimes more convenient than the fluent API.

The OCCT API

Finally we are discussing about the OCCT API. The OCCT API is the lowest level of CadQuery. The direct API is built upon the OCCT API, where the OCCT API in CadQuery is available through OCP. OCP are the Python bindings of the OCCT C++ libraries CadQuery uses. This means you have access to (almost) all the OCCT C++ libraries in Python and in CadQuery. Working with the OCCT API will give you the maximum flexibility and control over you

3.5. Concepts 23

designs, it is however very verbose and difficult to use. You will need to have a strong knowledge of the different C++ libraries to be able to achieve what you want. To obtain this knowledge the most obvious ways are :

- 1. Read the direct API source code, since it is build upon the OCCT API it is full of example usage.
- 2. Go through the C++ documentation

1 Note

The general way of importing a specific class of the OCCT API is

```
from OCP.thePackageName import theClassName
```

For example if you want to use the class BRepPrimAPI_MakeBox. You will go by the following

```
from OCP.BRepPrimAPI import BRepPrimAPI_MakeBox
```

The package name of any class is written at the top of the documentation page. Often it's written in the class name itself as a prefix.

Going back and forth between the APIs

While the 3 APIs provide 3 different layer of complexity and functionality you can mix the 3 layers as you wish. Below is presented the different ways you can interact with the different API layers.

Fluent API <=> Direct API

Here are all the possibilities you have to get an object from the Direct API (i.e a topological object).

You can end the Fluent API call chain and get the last object on the stack with Workplane.val() alternatively you can get all the objects with Workplane.vals()

```
>>> box = Workplane().box(10, 5, 5)
>>> print(type(box))
<class cadquery.cq.Workplane>
>>> box = Workplane().box(10, 5, 5).val()
>>> print(type(box))
<class cadquery.occ_impl.shapes.Solid>
```

If you are only interested in getting the context solid of your Workplane, you can use Workplane.findSolid():

```
>>> part = Workplane().box(10,5,5).circle(3).val()
>>> print(type(part))
<class cadquery.cq.Wire>
>>> part = Workplane().box(10,5,5).circle(3).findSolid()
>>> print(type(part))
<class cadquery.occ_impl.shapes.Compound>
# The return type of findSolid is either a Solid or a Compound object
```

If you want to go the other way around i.e using objects from the topological API in the Fluent API here are your options:

You can pass a topological object as a base object to the Workplane object.

```
solid_box = Solid.makeBox(10, 10, 10)
part = Workplane(obj=solid_box)
# And you can continue your modelling in the fluent API
part = part.faces(">Z").circle(1).extrude(10)
```

You can add a topological object as a new operation/step in the Fluent API call chain with Workplane.newObject()

```
circle_wire = Wire.makeCircle(1, Vector(0, 0, 0), Vector(0, 0, 1))
box = Workplane().box(10, 10, 10).newObject([circle_wire])
# And you can continue modelling
box = (
    box.toPending().cutThruAll()
) # notice the call to `toPending` that is needed if you want to use it in a subsequent_
    operation
```

Direct API <=> OCCT API

Every object of the Direct API stores its OCCT equivalent object in its wrapped attribute.:

```
>>> box = Solid.makeBox(10,5,5)
>>> print(type(box))
<class cadquery.occ_impl.shapes.Solid>
>>> box = Solid.makeBox(10,5,5).wrapped
>>> print(type(box))
<class OCP.TopoDS.TopoDS_Solid>
```

If you want to cast an OCCT object into a Direct API one you can just pass it as a parameter of the intended class:

```
>>> occt_box = BRepPrimAPI_MakeBox(5,5,5).Solid()
>>> print(type(occt_box))
<class OCP.TopoDS.TopoDS_Solid>
>>> direct_api_box = Solid(occt_box)
>>> print(type(direct_api_box))
<class cadquery.occ_impl.shapes.Solid>
```

1 Note

You can cast into the direct API the types found here

3.5.3 Multimethods

CadQuery uses Multimethod to allow a call to a method to be dispatched depending on the types of the arguments. An example is arc(), where a_sketch.arc((1, 2), (2, 3)) would be dispatched to one method but a_sketch.arc((1, 2), (2, 3), (3, 4)) would be dispatched to a different method. For multimethods to work, you should not use keyword arguments to specify positional parameters. For example, you should not write a_sketch. arc(p1=(1, 2), p2=(2, 3), p3=(3, 4)), instead you should use the previous example. Note CadQuery makes an attempt to fall back on the first registered multimethod in the event of a dispatch error, but it is still best practice to not use keyword arguments to specify positional arguments in CadQuery.

3.5. Concepts 25

3.5.4 Selectors

Selectors allow you to select one or more features, in order to define new features. As an example, you might extrude a box, and then select the top face as the location for a new feature. Or, you might extrude a box, and then select all of the vertical edges so that you can apply a fillet to them.

You can select Vertices, Edges, Faces, Solids, and Wires using selectors.

Think of selectors as the equivalent of your hand and mouse, if you were to build an object using a conventional CAD system.

See Selectors to learn more.


3.5.5 Workplane class

The Workplane class contains the currently selected objects (a list of Shapes, Vectors or Locations in the objects attribute), the modelling context (in the ctx attribute), and CadQuery's fluent api methods. It is the main class that users will instantiate.

See API Reference to learn more.

3.5.6 Assemblies

Simple models can be combined into complex, possibly nested, assemblies.

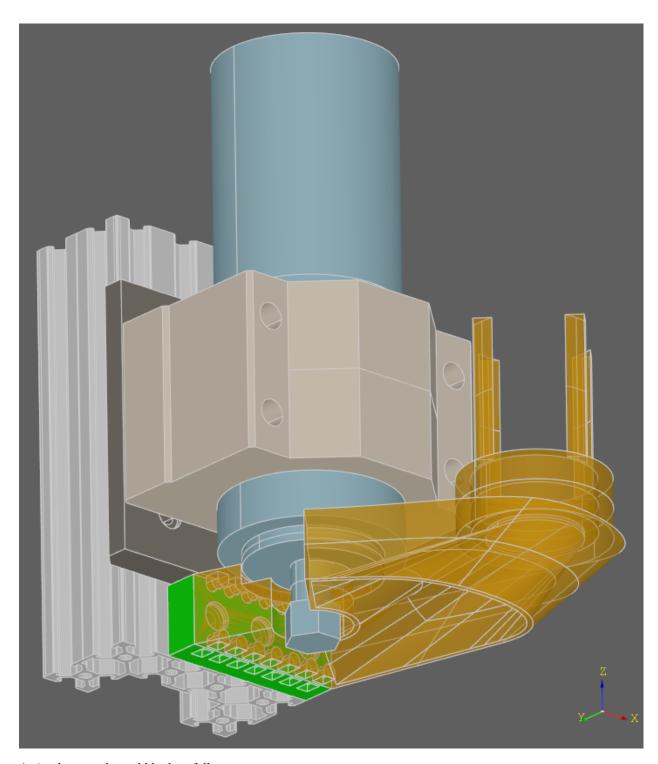

A simple example could look as follows:


3.5. Concepts 27

(continued from previous page)

```
part1 = Workplane().box(2 * w, 2 * d, h)
part2 = Workplane().box(w, d, 2 * h)
part3 = Workplane().box(w, d, 3 * h)

assy = (
    Assembly(part1, loc=Location(Vector(-w, 0, h / 2)))
    .add(
        part2, loc=Location(Vector(1.5 * w, -0.5 * d, h / 2)), color=Color(0, 0, 1, 0.5)
    )
    .add(part3, loc=Location(Vector(-0.5 * w, -0.5 * d, 2 * h)), color=Color("red"))
)
```

Resulting in:

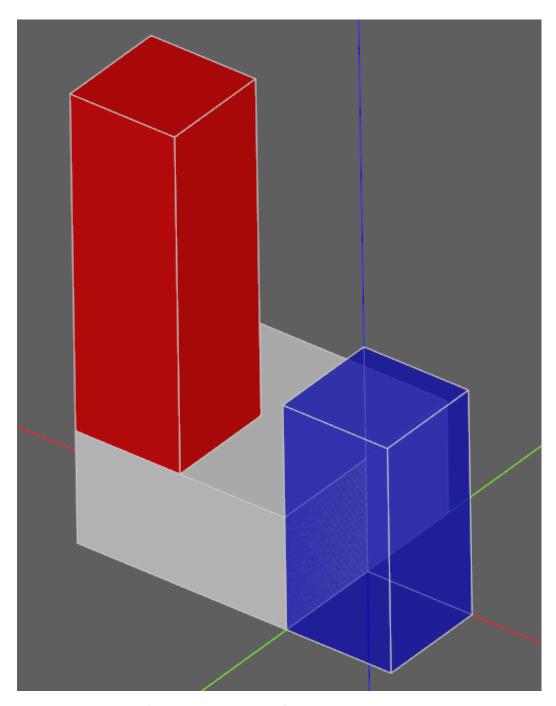

Note that the locations of the children parts are defined with respect to their parents - in the above example part3 will be located at (-5,-5,20) in the global coordinate system. Assemblies with different colors can be created this way and exported to STEP or the native OCCT xml format.

You can browse assembly related methods here: Assemblies.

3.5.7 Assemblies with constraints

Sometimes it is not desirable to define the component positions explicitly but rather use constraints to obtain a fully parametric assembly. This can be achieved in the following way:

3.5. Concepts 29

```
from cadquery import *
w = 10
d = 10
h = 10
part1 = Workplane().box(2 * w, 2 * d, h)
part2 = Workplane().box(w, d, 2 * h)
part3 = Workplane().box(w, d, 3 * h)
assy = (
    Assembly(part1, name="part1", loc=Location(Vector(-w, 0, h / 2)))
     .add(part2, name="part2", color=Color(0, 0, 1, 0.5))
     .add(part3, name="part3", color=Color("red"))
    .constrain("part1@faces@>Z", "part3@faces@<Z", "Axis")
.constrain("part1@faces@>Z", "part2@faces@<Z", "Axis")
.constrain("part1@faces@>Y", "part3@faces@<Y", "Axis")</pre>
     .constrain("part1@faces@>Y", "part2@faces@<Y", "Axis")</pre>
     .constrain("part1@vertices@>(-1,-1,1)", "part3@vertices@>(-1,-1,-1)", "Point")
     .constrain("part1@vertices@>(1,-1,-1)", "part2@vertices@>(-1,-1,-1)", "Point")
     .solve()
)
```

This code results in identical object as one from the previous section. The added benefit is that with changing parameters w, d, h the final locations will be calculated automatically. It is admittedly dense and can be made clearer using tags. Tags can be directly referenced when constructing the constraints:

```
from cadquery import *
w = 10
d = 10
h = 10
part1 = Workplane().box(2 * w, 2 * d, h)
part2 = Workplane().box(w, d, 2 * h)
part3 = Workplane().box(w, d, 3 * h)
part1.faces(">Z").edges("<X").vertices("<Y").tag("pt1")</pre>
part1.faces(">X").edges("<Z").vertices("<Y").tag("pt2")</pre>
part3.faces("<Z").edges("<X").vertices("<Y").tag("pt1")</pre>
part2.faces("<X").edges("<Z").vertices("<Y").tag("pt2")</pre>
assy1 = (
    Assembly(part1, name="part1", loc=Location(Vector(-w, 0, h / 2)))
     .add(part2, name="part2", color=Color(0, 0, 1, 0.5))
     .add(part3, name="part3", color=Color("red"))
    .constrain("part1@faces@>Z", "part3@faces@<Z", "Axis")
.constrain("part1@faces@>Z", "part2@faces@<Z", "Axis")
.constrain("part1@faces@>Y", "part3@faces@<Y", "Axis")</pre>
     .constrain("part1@faces@>Y", "part2@faces@<Y", "Axis")</pre>
     .constrain("part1?pt1", "part3?pt1", "Point")
     .constrain("part1?pt2", "part2?pt2", "Point")
     .solve()
```

(continues on next page)

)

(continued from previous page)

The following constraints are currently implemented:

Axis

two normal vectors are anti-coincident or the angle (in radians) between them is equal to the specified value. Can be defined for all entities with consistent normal vector - planar faces, wires and edges.

Point

two points are coincident or separated by a specified distance. Can be defined for all entities, center of mass is used for lines, faces, solids and the vertex position for vertices.

Plane

combination of :Axis: and :Point: constraints.

For a more elaborate assembly example see *Assemblies*.

3.6 Workplane

Most CAD programs use the concept of Workplanes. If you have experience with other CAD programs you will probably feel comfortable with CadQuery's Workplanes, but if you don't have experience then they are an essential concept to understand.

Workplanes represent a plane in space, from which other features can be located. They have a center point and a local coordinate system. Most methods that create an object do so relative to the current workplane.

Usually the first workplane created is the "XY" plane, also known as the "front" plane. Once a solid is defined the most common way to create a workplane is to select a face on the solid that you intend to modify and create a new workplane relative to it. You can also create new workplanes anywhere in the world coordinate system, or relative to other planes using offsets or rotations.

The most powerful feature of workplanes is that they allow you to work in 2D space in the coordinate system of the workplane, and then CadQuery will transform these points from the workplane coordinate system to the world coordinate system so your 3D features are located where you intended. This makes scripts much easier to create and maintain.

See cadquery. Workplane to learn more.

3.6.1 2D Construction

Once you create a workplane, you can work in 2D, and then later use the features you create to make 3D objects. You'll find all of the 2D constructs you expect – circles, lines, arcs, mirroring, points, etc.

See 2D Operations to learn more.

3.6.2 3D Construction

You can construct 3D primitives such as boxes, wedges, cylinders and spheres directly. You can also sweep, extrude, and loft 2D geometry to form 3D features. Of course the basic primitive operations are also available.

See 3D Operations to learn more.

3.6. Workplane 31

3.6.3 Selectors

Selectors allow you to select one or more features, in order to define new features. As an example, you might extrude a box, and then select the top face as the location for a new feature. Or, you might extrude a box, and then select all of the vertical edges so that you can apply a fillet to them.

You can select Vertices, Edges, Faces, Solids, and Wires using selectors.

Think of selectors as the equivalent of your hand and mouse, if you were to build an object using a conventional CAD system.

See Selectors to learn more.

3.6.4 Construction Geometry

Construction geometry are features that are not part of the object, but are only defined to aid in building the object. A common example might be to define a rectangle, and then use the corners to define the location of a set of holes.

Most CadQuery construction methods provide a forConstruction keyword, which creates a feature that will only be used to locate other features.

3.6.5 The Stack

As you work in CadQuery, each operation returns a new Workplane object with the result of that operation. Each Workplane object has a list of objects, and a reference to its parent.

You can always go backwards to older operations by removing the current object from the stack. For example:

```
Workplane(someObject).faces(">Z").first().vertices()
```

returns a CadQuery object that contains all of the vertices on the highest face of someObject. But you can always move backwards in the stack to get the face as well:

```
Workplane(someObject).faces(">Z").first().vertices().end()
```

You can browse stack access methods here: Stack and Selector Methods.

3.6.6 Chaining

All Workplane methods return another Workplane object, so that you can chain the methods together fluently. Use the core Workplane methods to get at the objects that were created.

Each time a new Workplane object is produced during these chained calls, it has a parent attribute that points to the Workplane object that created it. Several CadQuery methods search this parent chain, for example when searching for the context solid. You can also give a Workplane object a tag, and further down your chain of calls you can refer back to this particular object using its tag.

3.6.7 The Context Solid

Most of the time, you are building a single object, and adding features to that single object. CadQuery watches your operations, and defines the first solid object created as the 'context solid'. After that, any features you create are automatically combined (unless you specify otherwise) with that solid. This happens even if the solid was created a long way up in the stack. For example:

```
Workplane("XY").box(1, 2, 3).faces(">Z").circle(0.25).extrude(1)
```

Will create a 1x2x3 box, with a cylindrical boss extending from the top face. It was not necessary to manually combine the cylinder created by extruding the circle with the box, because the default behavior for extrude is to combine the

result with the context solid. The *hole()* method works similarly – CadQuery presumes that you want to subtract the hole from the context solid.

If you want to avoid this, you can specify combine=False, and CadQuery will create the solid separately.

3.6.8 Iteration

CAD models often have repeated geometry, and it's really annoying to resort to for loops to construct features. Many CadQuery methods operate automatically on each element on the stack, so that you don't have to write loops. For example, this:

```
Workplane("XY").box(1, 2, 3).faces(">Z").vertices().circle(0.5)
```

Will actually create 4 circles, because vertices() selects 4 vertices of a rectangular face, and the circle() method iterates on each member of the stack.

This is really useful to remember when you author your own plugins. *cadquery.Workplane.each()* is useful for this purpose.

3.6.9 An Introspective Example

1 Note

If you are just beginning with CadQuery then you can leave this example for later. If you have some experience with creating CadQuery models and now you want to read the CadQuery source to better understand what your code does, then it is recommended you read this example first.

To demonstrate the above concepts, we can define a more detailed string representations for the *Workplane*, *Plane* and CQContext classes and patch them in:

```
import cadquery as cq
def tidy_repr(obj):
    """Shortens a default repr string"""
    return repr(obj).split(".")[-1].rstrip(">")
def _ctx_str(self):
    return (
        tidy_repr(self)
        + ":\n"
               pendingWires: {self.pendingWires}\n"
                pendingEdges: {self.pendingEdges}\n"
        + f"
                tags: {self.tags}"
    )
cq.cq.CQContext.\__str\_\_ = \_ctx\_str
def _plane_str(self):
    return (
```

(continues on next page)

3.6. Workplane 33

```
tidy_repr(self)
        + ":\n"
       + f"
              origin: {self.origin.toTuple()}\n"
       + f"
               z direction: {self.zDir.toTuple()}"
   )
cq.occ_impl.geom.Plane.__str__ = _plane_str
def _wp_str(self):
   out = tidy_repr(self) + ":\n"
   out += f" parent: {tidy_repr(self.parent)}\n" if self.parent else " no parent\n"
   out += f" plane: {self.plane}\n"
   out += f" objects: {self.objects}\n"
   out += f" modelling context: {self.ctx}"
   return out
cq.Workplane.__str__ = _wp_str
```

Now we can make a simple part and examine the *Workplane* and CQContext objects at each step. The final part looks like:

```
part = (
    cq.Workplane()
    .box(1, 1, 1)
    .tag("base")
    .wires(">Z")
    .toPending()
    .translate((0.1, 0.1, 1.0))
    .toPending()
    .loft()
    .faces(">>X", tag="base")
    .workplane(centerOption="CenterOfMass")
    .circle(0.2)
    .extrude(1)
)
```

1 Note

Some of the modelling process for this part is a bit contrived and not a great example of fluent CadQuery techniques.

The start of our chain of calls is:

```
part = cq.Workplane()
print(part)
```

Which produces the output:

```
Workplane object at 0x2760:

(continues on next page)
```

```
no parent
plane: Plane object at 0x2850:
    origin: (0.0, 0.0, 0.0)
    z direction: (0.0, 0.0, 1.0)
    objects: []
    modelling context: CQContext object at 0x2730:
        pendingWires: []
        pendingEdges: []
        tags: {}
```

This is simply an empty *Workplane*. Being the first *Workplane* in the chain, it does not have a parent. The plane attribute contains a *Plane* object that describes the XY plane.

Now we create a simple box. To keep things short, the print(part) line will not be shown for the rest of these code blocks:

```
part = part.box(1, 1, 1)
```

Which produces the output:

```
Workplane object at 0xaa90:
  parent: Workplane object at 0x2760
  plane: Plane object at 0x3850:
    origin: (0.0, 0.0, 0.0)
    z direction: (0.0, 0.0, 1.0)
    objects: [<cadquery.occ_impl.shapes.Solid object at 0xbbe0>]
  modelling context: CQContext object at 0x2730:
    pendingWires: []
    pendingEdges: []
    tags: {}
```

The first thing to note is that this is a different *Workplane* object to the previous one, and in the parent attribute of this *Workplane* is our previous *Workplane*. Returning a new instance of *Workplane* is the normal behaviour of most *Workplane* methods (with some exceptions, as will be shown below) and this is how the *chaining* concept is implemented.

Secondly, the modelling context object is the same as the one in the previous *Workplane*, and this one modelling context at 0x2730 will be shared between every Workplane object in this chain. If we instantiate a new *Workplane* with part2 = cq.Workplane(), then this part2 would have a different instance of the CQContext attached to it.

Thirdly, in our objects list is a single *Solid* object, which is the box we just created.

Often when creating models you will find yourself wanting to refer back to a specific *Workplane* object, perhaps because it is easier to select the feature you want in this earlier state, or because you want to reuse a plane. Tags offer a way to refer back to a previous *Workplane*. We can tag the *Workplane* that contains this basic box now:

```
part = part.tag("base")
```

The string representation of part is now:

```
Workplane object at 0xaa90:
   parent: Workplane object at 0x2760
   plane: Plane object at 0x3850:
        origin: (0.0, 0.0, 0.0)
        z direction: (0.0, 0.0, 1.0)

(continues on next page)
```

3.6. Workplane 35

```
objects: [<cadquery.occ_impl.shapes.Solid object at 0xbbe0>]
modelling context: CQContext object at 0x2730:
   pendingWires: []
   pendingEdges: []
   tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

The tags attribute of the modelling context is simply a dict associating the string name given by the tag() method to the Workplane. Methods such as WorkplaneFromTagged() and selection methods like edges() can operate on a tagged Workplane. Note that unlike the part = part.box(1, 1, 1) step where we went from Workplane object at Ox2760 to Workplane object at Ox2760 to Workplane object at Ox2760 to Workplane method.

The next step is:

```
part = part.faces(">>Z")
```

The output is:

```
Workplane object at 0x8c40:
   parent: Workplane object at 0xaa90
   plane: Plane object at 0xac40:
        origin: (0.0, 0.0, 0.0)
        z direction: (0.0, 0.0, 1.0)
        objects: [<cadquery.occ_impl.shapes.Face object at 0x3c10>]
        modelling context: CQContext object at 0x2730:
        pendingWires: []
        pendingEdges: []
        tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

Our selection method has taken the *Solid* from the objects list of the previous *Workplane*, found the face with its center furthest in the Z direction, and placed that face into the objects attribute. The *Solid* representing the box we are modelling is gone, and when a *Workplane* method needs to access that solid it searches through the parent chain for the nearest solid. This action can also be done by a user through the *findSolid()* method.

Now we want to select the boundary of this Face (a Wire), so we use:

```
part = part.wires()
```

The output is now:

```
Workplane object at 0x6880:
   parent: Workplane object at 0x8c40
   plane: Plane object at 0x38b0:
        origin: (0.0, 0.0, 0.0)
        z direction: (0.0, 0.0, 1.0)
        objects: [<cadquery.occ_impl.shapes.Wire object at 0xaca0>]
        modelling context: CQContext object at 0x2730:
        pendingWires: []
        pendingEdges: []
        tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

Modelling operations take their wires and edges from the modelling context's pending lists. In order to use the *loft()* command further down the chain, we need to push this wire to the modelling context with:

```
part = part.toPending()
```

Now we have:

```
Workplane object at 0x6880:
  parent: Workplane object at 0x8c40
  plane: Plane object at 0x38b0:
    origin: (0.0, 0.0, 0.0)
    z direction: (0.0, 0.0, 1.0)
    objects: [<cadquery.occ_impl.shapes.Wire object at 0xaca0>]
    modelling context: CQContext object at 0x2730:
    pendingWires: [<cadquery.occ_impl.shapes.Wire object at 0xaca0>]
    pendingEdges: []
    tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

The *Wire* object that was only in the objects attribute before is now also in the modelling context's pendingWires. The *toPending()* method is also another of the unusual methods that return the same *Workplane* object instead of a new one.

To set up the other side of the loft() command further down the chain, we translate the wire in objects by calling:

```
part = part.translate((0.1, 0.1, 1.0))
```

Now the string representation of part looks like:

```
Workplane object at 0x3a00:
   parent: Workplane object at 0x6880
   plane: Plane object at 0xac70:
        origin: (0.0, 0.0, 0.0)
        z direction: (0.0, 0.0, 1.0)
        objects: [<cadquery.occ_impl.shapes.Wire object at 0x35e0>]
        modelling context: CQContext object at 0x2730:
        pendingWires: [<cadquery.occ_impl.shapes.Wire object at 0xaca0>]
        pendingEdges: []
        tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

It may look similar to the previous step, but the *Wire* object in objects is different. To get this wire into the pending wires list, again we use:

```
part = part.toPending()
```

The result:

```
Workplane object at 0x3a00:
   parent: Workplane object at 0x6880
   plane: Plane object at 0xac70:
        origin: (0.0, 0.0, 0.0)
        z direction: (0.0, 0.0, 1.0)
        objects: [<cadquery.occ_impl.shapes.Wire object at 0x35e0>]
        modelling context: CQContext object at 0x2730:
        pendingWires: [<cadquery.occ_impl.shapes.Wire object at 0xaca0>, <cadquery.occ_impl.

        shapes.Wire object at 0x7f5c7f5c35e0>]
        pendingEdges: []
        tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

3.6. Workplane 37

The modelling context's pendingWires attribute now contains the two wires we want to loft between, and we simply call:

```
part = part.loft()
```

After the loft operation, our Workplane looks quite different:

```
Workplane object at 0x32b0:
  parent: Workplane object at 0x3a00
  plane: Plane object at 0x3d60:
    origin: (0.0, 0.0, 0.0)
    z direction: (0.0, 0.0, 1.0)
    objects: [<cadquery.occ_impl.shapes.Compound object at 0xad30>]
    modelling context: CQContext object at 0x2730:
    pendingWires: []
    pendingEdges: []
    tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

In the cq.Workplane.objects attribute we now have one *Compound* object and the modelling context's pendingWires has been cleared by *loft()*.

1 Note

To inspect the *Compound* object further you can use val() or findSolid() to get at the *Compound* object, then use cadquery.Shape.Solids() to return a list of the Solid objects contained in the *Compound*, which in this example will be a single Solid object. For example:

```
>>> a_compound = part.findSolid()
>>> a_list_of_solids = a_compound.Solids()
>>> len(a_list_of_solids)
1
```

Now we will create a small cylinder protruding from a face on the original box. We need to set up a workplane to draw a circle on, so firstly we will select the correct face:

```
part = part.faces(">>X", tag="base")
```

Which results in:

```
Workplane object at 0x3f10:
   parent: Workplane object at 0x32b0
   plane: Plane object at 0xefa0:
      origin: (0.0, 0.0, 0.0)
      z direction: (0.0, 0.0, 1.0)
   objects: [<cadquery.occ_impl.shapes.Face object at 0x3af0>]
   modelling context: CQContext object at 0x2730:
      pendingWires: []
      pendingEdges: []
   tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

We have the desired *Face* in the objects attribute, but the plane has not changed yet. To create the new plane we use the Workplane.workplane() method:

```
part = part.workplane()
```

Now:

```
Workplane object at 0xe700:
  parent: Workplane object at 0x3f10
  plane: Plane object at 0xe730:
    origin: (0.5, 0.0, 0.0)
    z direction: (1.0, 0.0, 0.0)
    objects: []
  modelling context: CQContext object at 0x2730:
    pendingWires: []
  pendingEdges: []
  tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

The objects list has been cleared and the *Plane* object has a local Z direction in the global X direction. Since the base of the plane is the side of the box, the origin is offset in the X direction.

Onto this plane we can draw a circle:

```
part = part.circle(0.2)
```

Now:

```
Workplane object at 0xe790:
   parent: Workplane object at 0xe700
   plane: Plane object at 0xaf40:
      origin: (0.5, 0.0, 0.0)
      z direction: (1.0, 0.0, 0.0)
   objects: [<cadquery.occ_impl.shapes.Wire object at 0xe610>]
   modelling context: CQContext object at 0x2730:
      pendingWires: [<cadquery.occ_impl.shapes.Wire object at 0xe610>]
      pendingEdges: []
      tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

The <code>circle()</code> method - like all 2D drawing methods - has placed the circle into both the <code>objects</code> attribute (where it will be cleared during the next modelling step), and the modelling context's pending wires (where it will persist until used by another <code>Workplane</code> method).

The next step is to extrude this circle and create a cylindrical protrusion:

```
part = part.extrude(1, clean=False)
```

Now:

```
Workplane object at 0xafd0:
   parent: Workplane object at 0xe790
   plane: Plane object at 0x3e80:
        origin: (0.5, 0.0, 0.0)
        z direction: (1.0, 0.0, 0.0)
        objects: [<cadquery.occ_impl.shapes.Compound object at 0xaaf0>]
        modelling context: CQContext object at 0x2730:
        pendingWires: []
        pendingEdges: []
        tags: {'base': <cadquery.cq.Workplane object at 0xaa90>}
```

3.6. Workplane 39

The *extrude()* method has cleared all the pending wires and edges. The objects attribute contains the final *Compound* object that is shown in the 3D view above.



The <code>extrude()</code> has an argument for <code>clean</code> which defaults to <code>True</code>. This extrudes the pending wires (creating a new <code>Workplane</code> object), then runs the <code>clean()</code> method to refine the result, creating another <code>Workplane</code>. If you were to run the example with the default <code>clean=True</code> then you would see an intermediate <code>Workplane</code> object in <code>parent</code> rather than the object from the previous step.

3.7 Sketch

3.7.1 Sketch tutorial

The purpose of this section is to demonstrate how to construct sketches using different approaches.

Face-based API

The main approach for constructing sketches is based on constructing faces and combining them using boolean operations.

```
import cadquery as cq

result = (
    cq.Sketch()
    .trapezoid(4, 3, 90)
    .vertices()
    .circle(0.5, mode="s")
    .reset()
    .vertices()
    .fillet(0.25)
    .reset()
    .rarray(0.6, 1, 5, 1)
    .slot(1.5, 0.4, mode="s", angle=90)
)
```

Note that selectors are implemented, but selection has to be explicitly reset. Sketch class does not implement history and all modifications happen in-place.

Modes

Every operation from the face API accepts a mode parameter to define how to combine the created object with existing ones. It can be fused (mode='a'), cut (mode='s'), intersected (mode='i'), replaced (mode='r') or just stored for construction (mode='c'). In the last case, it is mandatory to specify a tag in order to be able to refer to the object later on. By default faces are fused together. Note the usage of the subtractive and additive modes in the example above. The additional two are demonstrated below.

```
result = (
    cq.Sketch()
    .rect(1, 2, mode="c", tag="base")
    .vertices(tag="base")
    .circle(0.7)
```

```
.reset()
    .edges("|Y", tag="base")
    .ellipse(1.2, 1, mode="i")
    .reset()
    .rect(2, 2, mode="i")
    .clean()
)
```

Edge-based API

If needed, one can construct sketches by placing individual edges.

```
import cadquery as cq

result = (
    cq.Sketch()
    .segment((0.0, 0), (0.0, 2.0))
    .segment((2.0, 0))
    .close()
    .arc((0.6, 0.6), 0.4, 0.0, 360.0)
    .assemble(tag="face")
    .edges("%LINE", tag="face")
    .vertices()
    .chamfer(0.2)
)
```

Once the construction is finished it has to be converted to the face-based representation using <code>assemble()</code>. Afterwards, face based operations can be applied.

Convex hull

```
⚠ Warning
The Convex Hull feature is currently experimental.
```

For certain special use-cases convex hull can be constructed from straight segments and circles.

```
result = (
    cq.Sketch()
    .arc((0, 0), 1.0, 0.0, 360.0)
    .arc((1, 1.5), 0.5, 0.0, 360.0)
    .segment((0.0, 2), (-1, 3.0))
    .hull()
)
```

Constraint-based sketches

▲ Warning

The 2D Sketch constraints and solver is currently experimental.

3.7. Sketch 41

Finally, if desired, geometric constraints can be used to construct sketches. So far only line segments and arcs can be used in such a use case.

```
import cadquery as cq

result = (
    cq.Sketch()
    .segment((0, 0), (0, 3.0), "s1")
    .arc((0.0, 3.0), (1.5, 1.5), (0.0, 0.0), "a1")
    .constrain("s1", "Fixed", None)
    .constrain("s1", "a1", "Coincident", None)
    .constrain("a1", "s1", "Coincident", None)
    .constrain("s1", "a1", "Angle", 45)
    .solve()
    .assemble()
)
```

Following constraints are implemented. Arguments are passed in as one tuple in *constrain()*. In this table, 0..1 refers to a float between 0 and 1 where 0 would create a constraint relative to the start of the element, and 1 the end.

Name	Arity	Entities	Arguments	Description
FixedPoint	1	All	<i>None</i> for arc center or 01 for point on segment/arc	Specified point is fixed
Coincident	2	All	None	Specified points coincide
Angle	2	All	angle	Angle between the tangents of the two entities is fixed
Length	1	All	length	Specified entity has fixed length
Distance	2	All	None or 01, None or 01, distance	Distance between two points is fixed
Radius	1	Arc	radius	Specified entity has a fixed radius
Orientation	1	Segment	x,y	Specified entity is parallel to (x,y)
ArcAngle	1	Arc	angle	Specified entity is fixed angular span

3.7.2 Workplane integration

Once created, a sketch can be used to construct various features on a workplane. Supported operations include extrude(), twistExtrude(), revolve(), sweep(), cutBlind(), cutThruAll() and loft().

Sketches can be created as separate entities and reused, but also created ad-hoc in one fluent chain of calls as shown below.

Sketches in-place

Constructing sketches in-place can be accomplished as follows.

```
import cadquery as cq
result = (
    cq.Workplane()
    .box(5, 5, 1)
```

```
.faces(">Z")
.sketch()
.regularPolygon(2, 3, tag="outer")
.regularPolygon(1.5, 3, mode="s")
.vertices(tag="outer")
.fillet(0.2)
.finalize()
.extrude(0.5)
```

Sketch API is available after the *sketch()* call and original *workplane*.

Placing an existing sketch on a workplane

Sometimes it is desired to place an existing sketches as-is on a workplane. This can be done with placeSketch()

```
import cadquery as cq

s = cq.Sketch().trapezoid(3, 1, 110).vertices().fillet(0.2)

result = (
    cq.Workplane()
    .box(5, 5, 5)
    .faces(">X")
    .workplane()
    .transformed((0, 0, -90))
    .placeSketch(s)
    .cutThruAll()
)
```

Sketches spanning multiple elements

When multiple elements are selected before constructing the sketch, multiple sketches will be created.

Note that the sketch is placed on all locations that are on the top of the stack.

```
import cadquery as cq
result = (
    cq.Workplane()
    .box(5, 5, 1)
    .faces(">Z")
    .workplane()
    .rarray(2, 2, 2, 2)
    .rect(1.5, 1.5)
    .extrude(0.5)
    .faces(">Z")
    .sketch()
    .circle(0.4)
    .wires()
    .distribute(6)
    .circle(0.1, mode="a")
    .clean()
```

(continues on next page)

3.7. Sketch 43

```
.finalize()
.cutBlind(-0.5, taper=10)
)
```

Lofting between two sketches

Two sketches on different workplanes are needed when using loft().

```
from cadquery import Workplane, Sketch, Vector, Location

s1 = Sketch().trapezoid(3, 1, 110).vertices().fillet(0.2)

s2 = Sketch().rect(2, 1).vertices().fillet(0.2)

result = Workplane().placeSketch(s1, s2.moved(z=3)).loft()
```

When lofting only outer wires are taken into account and inner wires are silently ignored. Note that only sketches on the top of stack are considered for the current operation (i.e. there are no pending sketches), so when lofting or sweeping all relevant sketches have to be added in one *placeSketch* call.

Combining sketches

Sketches can be combined using *face()*.

```
import cadquery as cq
s1 = cq.Sketch().rect(2, 2)
s2 = cq.Sketch().circle(0.5)
result = s1.face(s2, mode='s')
```

It is also possible to use boolean operations to achieve the same effect.

```
import cadquery as cq
s1 = cq.Sketch().rect(2, 2).vertices().fillet(0.25).reset()
s2 = cq.Sketch().rect(1, 1, angle=45).vertices().chamfer(0.1).reset()
result = s1 - s2
```

Boolean operations are selection sensitive, so in this example *reset()* call is needed.

Offsets made easy

Conveniently, it is possible to reuse a sketch to create an offset() shape.

```
import cadquery as cq

sketch = (cq.Sketch()
.rect(1.0, 4.0)
.circle(1.0)
.clean()
)
```

```
sketch_offset = sketch.copy().wires().offset(0.25)

result = cq.Workplane("front").placeSketch(sketch_offset).extrude(1.0)
result = result.faces(">Z").workplane().placeSketch(sketch).cutBlind(-0.50)
```

It is obviously possible to use negative offsets, but it requires being more careful with the mode of the offset operation. Usually one wants to replace the original face, hence mode='r'.

```
import cadquery as cq

sketch = (cq.Sketch()
.rect(1.0, 4.0)
.circle(1.0)
.clean()
)

sketch_offset = sketch.copy().wires().offset(-0.25, mode='r')

result = cq.Workplane("front").placeSketch(sketch).extrude(1.0)
result = result.faces(">Z").workplane().placeSketch(sketch_offset).cutBlind(-0.50)
```

Exporting and importing

It is possible to export sketches using *export()*. See *Importing and Exporting Files* for more details. Importing of DXF files is supported as well using *importDXF()*.

3.8 Assemblies

3.8.1 Assembly tutorial

The purpose of this section is to demonstrate how to use the assembly and constraints functionality to build a realistic model. It will be a enclosure door assembly made out of 20x20 v-slot profiles.

Defining parameters

We want to start with defining the model parameters to allow for easy dimension changes later:

```
import cadquery as cq

# Parameters
H = 400
W = 200
D = 350

PROFILE = cq.importers.importDXF("vslot-2020_1.dxf").wires()

SLOT_D = 5
PANEL_T = 3

HANDLE_D = 20
```

(continues on next page)

3.8. Assemblies 45

```
HANDLE_L = 50
HANDLE_W = 4
```

It is interesting to note that the v-slot profile is imported from a DXF file. This way it is very easy to change to other aluminum extrusion type, e.g. Item or Bosch. Vendors usually provide DXF files.

Defining reusable components

Next we want to define functions generating the assembly components based on the specified parameters.

```
def make vslot(1):
    return PROFILE.toPending().extrude(1)
def make_connector():
    rv = (
        cq.Workplane()
        .box(20, 20, 20)
        .faces("<X")
        .workplane()
        .cboreHole(6, 15, 18)
        .faces("<Z")
        .workplane(centerOption="CenterOfMass")
        .cboreHole(6, 15, 18)
    )
    # tag mating faces
    rv.faces(">X").tag("X").end()
    rv.faces(">Z").tag("Z").end()
    return rv
def make_panel(w, h, t, cutout):
    rv = (
        cq.Workplane("XZ")
        .rect(w, h)
        .extrude(t)
        .faces(">Y")
        .vertices()
        .rect(2 * cutout, 2 * cutout)
        .cutThruAll()
        .faces("<Y")
        .workplane()
        .pushPoints([(-w / 3, HANDLE_L / 2), (-w / 3, -HANDLE_L / 2)])
        .hole(3)
    )
    # tag mating edges
    rv.faces(">Y").edges("%CIRCLE").edges(">Z").tag("hole1")
    rv.faces(">Y").edges("%CIRCLE").edges("<Z").tag("hole2")</pre>
```

```
return rv
def make_handle(w, h, r):
    pts = ((0, 0), (w, 0), (w, h), (0, h))
    path = cq.Workplane().polyline(pts)
    rv = (
        cq.Workplane("YZ")
        .rect(r, r)
        .sweep(path, transition="round")
        .tag("solid")
        .faces("<X")
        .workplane()
        .faces("<X", tag="solid")</pre>
        .hole(r / 1.5)
    )
    # tag mating faces
    rv.faces("<X").faces(">Y").tag("mate1")
    rv.faces("<X").faces("<Y").tag("mate2")</pre>
    return rv
```

Initial assembly

Next we want to instantiate all the components and add them to the assembly.

```
# define the elements
door = (
   cq.Assembly()
    .add(make_vslot(H), name="left")
    .add(make_vslot(H), name="right")
    .add(make_vslot(W), name="top")
    .add(make_vslot(W), name="bottom")
    .add(make_connector(), name="con_tl", color=cq.Color("black"))
    .add(make_connector(), name="con_tr", color=cq.Color("black"))
    .add(make_connector(), name="con_bl", color=cq.Color("black"))
    .add(make_connector(), name="con_br", color=cq.Color("black"))
    .add(
       make_panel(W + SLOT_D, H + SLOT_D, PANEL_T, SLOT_D),
       name="panel",
       color=cq.Color(0, 0, 1, 0.2),
   )
    .add(
       make_handle(HANDLE_D, HANDLE_W),
       name="handle",
       color=cq.Color("yellow"),
   )
```

3.8. Assemblies 47

Constraints definition

Then we want to define all the constraints

```
# define the constraints
(
    door
    # left profile
    .constrain("left@faces@<Z", "con_bl?Z", "Plane")</pre>
    .constrain("left@faces@<X", "con_bl?X", "Axis")</pre>
    .constrain("left@faces@>Z", "con_tl?Z", "Plane")
    .constrain("left@faces@<X", "con_tl?X", "Axis")</pre>
    .constrain("top@faces@<Z", "con_tl?X", "Plane")</pre>
    .constrain("top@faces@<Y", "con_tl@faces@>Y", "Axis")
    .constrain("bottom@faces@<Y", "con_bl@faces@>Y", "Axis")
    .constrain("bottom@faces@>Z", "con_bl?X", "Plane")
    # right connectors
    .constrain("top@faces@>Z", "con_tr@faces@>X", "Plane")
    .constrain("bottom@faces@<Z", "con_br@faces@>X", "Plane")
    .constrain("left@faces@>Z", "con_tr?Z", "Axis")
    .constrain("left@faces@<Z", "con_br?Z", "Axis")
    # right profile
    .constrain("right@faces@>Z", "con_tr@faces@>Z", "Plane")
    .constrain("right@faces@<X", "left@faces@<X", "Axis")</pre>
    # panel
    .constrain("left@faces@>X[-4]", "panel@faces@<X", "Plane")</pre>
    .constrain("left@faces@>Z", "panel@faces@>Z", "Axis")
    .constrain("panel?hole1", "handle?mate1", "Plane")
    .constrain("panel?hole2", "handle?mate2", "Point")
)
```

Should you need to do something unusual that is not possible with the string based selectors (e.g. use *cadquery*. *selectors*. *BoxSelector* or a user-defined selector class), it is possible to pass *cadquery*. *Shape* objects to the *cadquery*. *Assembly*. *constrain*() method directly. For example, the above

```
.constrain("part1@faces@>Z", "part3@faces@<Z", "Axis")
```

is equivalent to

```
.constrain("part1", part1.faces(">z").val(), "part3", part3.faces("<Z").val(), "Axis")</pre>
```

This method requires a *cadquery.Shape* object, so remember to use the *cadquery.Workplane.val()* method to pass a single *cadquery.Shape* and not the whole *cadquery.Workplane* object.

Final result

Below is the complete code including the final solve step.

```
import cadquery as cq
# Parameters
H = 400
(continues on next page)
```

```
W = 200
D = 350
PROFILE = cq.importers.importDXF("vslot-2020_1.dxf").wires()
SLOT_D = 6
PANEL_T = 3
HANDLE_D = 20
HANDLE_L = 50
HANDLE_W = 4
def make_vslot(1):
    return PROFILE.toPending().extrude(1)
def make_connector():
    rv = (
        cq.Workplane()
        .box(20, 20, 20)
        .faces("<X")
        .workplane()
        .cboreHole(6, 15, 18)
        .faces("<Z")
        .workplane(centerOption="CenterOfMass")
        .cboreHole(6, 15, 18)
    )
    # tag mating faces
    rv.faces(">X").tag("X").end()
    rv.faces(">Z").tag("Z").end()
    return rv
def make_panel(w, h, t, cutout):
    rv = (
        cq.Workplane("XZ")
        .rect(w, h)
        .extrude(t)
        .faces(">Y")
        .vertices()
        .rect(2 * cutout, 2 * cutout)
        .cutThruAll()
        .faces("<Y")
        .workplane()
        .pushPoints([(-w / 3, HANDLE_L / 2), (-w / 3, -HANDLE_L / 2)])
        .hole(3)
    )
    # tag mating edges
                                                                              (continues on next page)
```

3.8. Assemblies 49

```
rv.faces(">Y").edges("%CIRCLE").edges(">Z").tag("hole1")
    rv.faces(">Y").edges("%CIRCLE").edges("<Z").tag("hole2")</pre>
    return rv
def make_handle(w, h, r):
    pts = ((0, 0), (w, 0), (w, h), (0, h))
    path = cq.Workplane().polyline(pts)
    rv = (
        cq.Workplane("YZ")
        .rect(r, r)
        .sweep(path, transition="round")
        .tag("solid")
        .faces("<X")
        .workplane()
        .faces("<X", tag="solid")</pre>
        .hole(r / 1.5)
    )
    # tag mating faces
    rv.faces("<X").faces(">Y").tag("mate1")
    rv.faces("<X").faces("<Y").tag("mate2")</pre>
    return rv
# define the elements
door = (
    cq.Assembly()
    .add(make_vslot(H), name="left")
    .add(make_vslot(H), name="right")
    .add(make_vslot(W), name="top")
    .add(make_vslot(W), name="bottom")
    .add(make_connector(), name="con_tl", color=cq.Color("black"))
    .add(make_connector(), name="con_tr", color=cq.Color("black"))
    .add(make_connector(), name="con_bl", color=cq.Color("black"))
    .add(make_connector(), name="con_br", color=cq.Color("black"))
    .add(
        make_panel(W + 2 * SLOT_D, H + 2 * SLOT_D, PANEL_T, SLOT_D),
        name="panel",
        color=cq.Color(0, 0, 1, 0.2),
    )
    .add(
        make_handle(HANDLE_D, HANDLE_L, HANDLE_W),
        name="handle",
        color=cq.Color("yellow"),
    )
)
```

```
# define the constraints
    door
    # left profile
    .constrain("left@faces@<Z", "con_bl?Z", "Plane")</pre>
    .constrain("left@faces@<X", "con_bl?X", "Axis")</pre>
    .constrain("left@faces@>Z", "con_tl?Z", "Plane")
    .constrain("left@faces@<X", "con_tl?X", "Axis")</pre>
    .constrain("top@faces@<Z", "con_tl?X", "Plane")</pre>
    .constrain("top@faces@<Y", "con_tl@faces@>Y", "Axis")
    .constrain("bottom@faces@<Y", "con_bl@faces@>Y", "Axis")
    .constrain("bottom@faces@>Z", "con_bl?X", "Plane")
    # right connectors
    .constrain("top@faces@>Z", "con_tr@faces@>X", "Plane")
    .constrain("bottom@faces@<Z", "con_br@faces@>X", "Plane")
.constrain("left@faces@>Z", "con_tr?Z", "Axis")
.constrain("left@faces@<Z", "con_br?Z", "Axis")</pre>
    # right profile
    .constrain("right@faces@>Z", "con_tr@faces@>Z", "Plane")
    .constrain("right@faces@<X", "left@faces@<X", "Axis")</pre>
    .constrain("left@faces@>X[-4]", "panel@faces@<X", "Plane")</pre>
    .constrain("left@faces@>Z", "panel@faces@>Z", "Axis")
    # handle
    .constrain("panel?hole1", "handle?mate1", "Plane")
    .constrain("panel?hole2", "handle?mate2", "Point")
)
# solve
door.solve()
show_object(door, name="door")
```


Data export

The resulting assembly can be exported as a STEP file or in a internal OCCT XML format.

STEP can be loaded in all CAD tool, e.g. in FreeCAD and the XML be used in other applications using OCCT.

```
door.save("door.step")
door.save("door.xml")
```

3.8. Assemblies 51

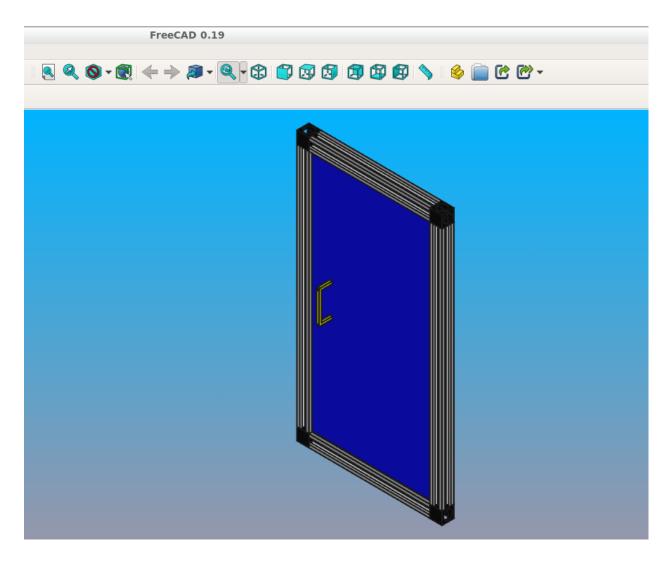

3.8.2 Object locations

Objects can be added to an assembly with initial locations supplied, such as:

```
import cadquery as cq

cone = cq.Solid.makeCone(1, 0, 2)

assy = cq.Assembly()
assy.add(
    cone,
    loc=cq.Location((0, 0, 0), (1, 0, 0), 180),
    name="cone0",
    color=cq.Color("green"),
)
assy.add(cone, name="cone1", color=cq.Color("blue"))

show_object(assy)
```

As an alternative to the user calculating locations, constraints and the method <code>solve()</code> can be used to position objects in an assembly.

If initial locations and the method *solve()* are used the solver will overwrite these initial locations with it's solution, however initial locations can still affect the final solution. In an underconstrained system the solver may not move an object if it does not contribute to the cost function, or if multiple solutions exist (ie. multiple instances where the cost function is at a minimum) initial locations can cause the solver to converge on one particular solution. For very complicated assemblies setting approximately correct initial locations can also reduce the computational time required.

3.8.3 Constraints

Constraints are often a better representation of the real world relationship the user wants to model than directly supplying locations. In the above example the real world relationship is that the bottom face of each cone should touch, which can be modelled with a Plane constraint. When the user provides explicit locations (instead of constraints) then they are also responsible for updating them when, for example, the location of cone1 changes.

When at least one constraint is supplied and the method <code>solve()</code> is run, an optimization problem is set up. Each constraint provides a cost function that depends on the position and orientation (represented by a <code>Location</code>) of the two objects specified when creating the constraint. The solver varies the location of the assembly's children and attempts to minimize the sum of all cost functions. Hence by reading the formulae of the cost functions below, you can understand exactly what each constraint does.

Point

The Point constraint is a frequently used constraint that minimizes the distance between two points. Some example uses are centering faces or aligning verticies, but it is also useful with dummy vertices to create offsets between two parts.

The cost function is:

$$(param - |\vec{c_1} - \vec{c_2}|)^2$$

Where:

- param is the parameter of the constraint, which defaults to 0,
- $\vec{c_i}$ is the center of the ith object, and
- $|\vec{v}|$ is the modulus of \vec{v} , ie. the length of \vec{v} .

When creating a Point constraint, the param argument can be used to specify a desired offset between the two centers. This offset does not have a direction associated with it, if you want to specify an offset in a specific direction then you should use a dummy *Vertex*.

The Point constraint uses the *Center()* to find the center of the argument. Hence it will work with all subclasses of *Shape*.

```
import cadquery as cq

# Use the Point constraint to position boxes relative to an arc
line = cq.Edge.makeCircle(radius=10, angle1=0, angle2=90)
box = cq.Workplane().box(1, 1, 1)

assy = cq.Assembly()
assy.add(line, name="line")

# position the red box on the center of the arc
assy.add(box, name="box0", color=cq.Color("red"))
assy.constrain("line", "box0", "Point")

# position the green box at a normalized distance of 0.8 along the arc
```

(continues on next page)

3.8. Assemblies 53

```
position0 = line.positionAt(0.8)
assy.add(box, name="box1", color=cq.Color("green"))
assy.constrain(
    "line",
    cq.Vertex.makeVertex(*position0.toTuple()),
    "box1",
    box.val(),
    "Point",
)
# position the orange box 2 units in any direction from the green box
assy.add(box, name="box2", color=cq.Color("orange"))
assy.constrain(
    "line",
    cq.Vertex.makeVertex(*position0.toTuple()),
    "box2".
    box.val(),
    "Point".
    param=2,
)
# position the blue box offset 2 units in the x direction from the green box
position1 = position0 + cq.Vector(2, 0, 0)
assy.add(box, name="box3", color=cq.Color("blue"))
assy.constrain(
    "line",
    cq.Vertex.makeVertex(*position1.toTuple()),
    "box3".
    box.val(),
    "Point",
)
assy.solve()
show_object(assy)
```

Axis

The Axis constraint minimizes the angle between two vectors. It is frequently used to align faces and control the rotation of an object.

The cost function is:

$$(k_{dir} \times (param - \vec{d_1} \angle \vec{d_2})^2$$

Where:

- k_{dir} is a scaling factor for directional constraints,
- param is the parameter of the constraint, which defaults to 180 degrees,
- $\vec{d_i}$ is the direction created from the ith object argument as described below, and
- $\vec{d_1} \angle \vec{d_2}$ is the angle between $\vec{d_1}$ and $\vec{d_2}$.

The argument param defaults to 180 degrees, which sets the two directions opposite to each other. This represents what is often called a "mate" relationship, where the external faces of two objects touch.

```
import cadquery as cq
cone = cq.Solid.makeCone(1, 0, 2)
assy = cq.Assembly()
assy.add(cone, name="cone0", color=cq.Color("green"))
assy.add(cone, name="cone1", color=cq.Color("blue"))
assy.constrain("cone0@faces@<Z", "cone1@faces@<Z", "Axis")</pre>
assy.solve()
show_object(assy)
```

If the param argument is set to zero, then the two objects will point in the same direction. This is often used when one object goes through another, such as a pin going into a hole in a plate:

```
import cadquery as cq
plate = cq.Workplane().box(10, 10, 1).faces(">Z").workplane().hole(2)
cone = cq.Solid.makeCone(0.8, 0, 4)
assy = cq.Assembly()
assy.add(plate, name="plate", color=cq.Color("green"))
assy.add(cone, name="cone", color=cq.Color("blue"))
# place the center of the flat face of the cone in the center of the upper face of the
→plate
assy.constrain("plate@faces@>Z", "cone@faces@<Z", "Point")</pre>
# set both the flat face of the cone and the upper face of the plate to point in the.
→ same direction
assy.constrain("plate@faces@>Z", "cone@faces@<Z", "Axis", param=0)</pre>
assy.solve()
show_object(assy)
```

In creating an Axis constraint, a direction vector is extracted in one of three different ways, depending on the object's type.

Face:

```
Using normalAt()
```

Edge and geomType() is "CIRCLE":

Using normal()

Edge and geomType() is not "CIRCLE":

Using tangentAt()

Using any other type of object will raise a ValueError. By far the most common use case is to define an Axis constraint from a Face.

```
import cadquery as cq
from math import cos, sin, pi
# Create a sinusoidal surface:
surf = cq.Workplane().parametricSurface(
    lambda u, v: (u, v, 5 * sin(pi * u / 10) * cos(pi * v / 10)),
```

3.8. Assemblies 55

```
N=40.
    start=0,
    stop=20,
)
# Create a cone with a small, flat tip:
cone = (
   cq.Workplane()
    .add(cq.Solid.makeCone(1, 0.1, 2))
    # tag the tip for easy reference in the constraint:
    .faces(">Z")
    .tag("tip")
    .end()
assy = cq.Assembly()
assy.add(surf, name="surf", color=cq.Color("lightgray"))
assy.add(cone, name="cone", color=cq.Color("green"))
# set the Face on the tip of the cone to point in
# the opposite direction of the center of the surface:
assy.constrain("surf", "cone?tip", "Axis")
# to make the example clearer, move the cone to the center of the face:
assy.constrain("surf", "cone?tip", "Point")
assy.solve()
show_object(assy)
```

Plane

The Plane constraint is simply a combination of both the Point and Axis constraints. It is a convenient shortcut for a commonly used combination of constraints. It can be used to shorten the previous example from the two constraints to just one:

```
assy = cq.Assembly()
assy.add(surf, name="surf", color=cq.Color("lightgray"))
assy.add(cone, name="cone", color=cq.Color("green"))
-# set the Face on the tip of the cone to point in
-# the opposite direction of the center of the surface:
-assy.constrain("surf", "cone?tip", "Axis")
-# to make the example clearer, move the cone to the center of the face:
-assy.constrain("surf", "cone?tip", "Point")
+assy.constrain("surf", "cone?tip", "Plane")
assy.solve()
show_object(assy)
```

The result of this code is identical to the above two constraint example.

For the cost function of Plane, please see the Point and Axis sections. The param argument is applied to Axis and should be left as the default value for a "mate" style constraint (two surfaces touching) or can be set to 0 for a through surface constraint (see description in the Axis constraint section).

PointInPlane

PointInPlane positions the center of the first object within the plane defined by the second object. The cost function is:

$$\operatorname{dist}(\vec{c}, p_{\text{offset}})^2$$

Where:

- \vec{c} is the center of the first argument,
- ullet $p_{
 m offset}$ is a plane created from the second object, offset in the plane's normal direction by param, and
- $\operatorname{dist}(\vec{a}, b)$ is the distance between point \vec{a} and plane b.

```
import cadquery as cq
# Create an L-shaped object:
bracket = (
   cq.Workplane("YZ")
    .hLine(1)
    .vLine(0.1)
    .hLineTo(0.2)
   .vLineTo(1)
   .hLineTo(0)
   .close()
   .extrude(1)
   # tag some faces for easy reference:
    .faces(">Y[1]")
    .tag("inner_vert")
   .end()
   .faces(">Z[1]")
    .tag("inner_horiz")
    .end()
)
box = cq.Workplane().box(0.5, 0.5, 0.5)
assy = cq.Assembly()
assy.add(bracket, name="bracket", color=cq.Color("gray"))
assy.add(box, name="box", color=cq.Color("green"))
# lock bracket orientation:
assy.constrain("bracket@faces@>Z", "box@faces@>Z", "Axis", param=0)
assy.constrain("bracket@faces@>X", "box@faces@>X", "Axis", param=0)
# constrain the bottom of the box to be on the plane defined by inner_horiz:
assy.constrain("box@faces@<Z", "bracket?inner_horiz", "PointInPlane")</pre>
# constrain the side of the box to be 0.2 units from the plane defined by inner_vert
assy.constrain("box@faces@<Y", "bracket?inner_vert", "PointInPlane", param=0.2)
# constrain the end of the box to be 0.1 units inside the end of the bracket
assy.constrain("box@faces@>X", "bracket@faces@>X", "PointInPlane", param=-0.1)
assy.solve()
show_object(assy)
```

3.8. Assemblies 57

PointOnLine

PointOnLine positions the center of the first object on the line defined by the second object. The cost function is:

$$(param - \operatorname{dist}(\vec{c}, l))^2$$

Where:

- \vec{c} is the center of the first argument,
- l is a line created from the second object
- param is the parameter of the constraint, which defaults to 0,
- $\operatorname{dist}(\vec{a}, b)$ is the distance between point \vec{a} and line b.

```
import cadquery as cq
b1 = cq.Workplane().box(1, 1, 1)
b2 = cq.Workplane().sphere(0.15)
assy = (
   cq.Assembly()
    .add(b1, name="b1")
    .add(b2, loc=cq.Location((0, 0, 4)), name="b2", color=cq.Color("red"))
)
# fix the position of b1
assy.constrain("b1", "Fixed")
# b2 on one of the edges of b1
assy.constrain("b2", "b1@edges@>>Z and >>Y", "PointOnLine")
# b2 on another of the edges of b1
assy.constrain("b2", "b1@edges@>>Z and >>X", "PointOnLine")
# effectively b2 will be constrained to be on the intersection of the two edges
assy.solve()
show_object(assy)
```

FixedPoint

FixedPoint fixes the position of the given argument to be equal to the given point specified via the parameter of the constraint. This constraint locks all translational degrees of freedom of the argument. The cost function is:

$$\left\| \vec{c} - pa\vec{ram} \right\|^2$$

Where:

- \vec{c} is the center of the argument,
- param is the parameter of the constraint tuple specifying the target position.

Chapter 3. Table Of Contents

```
cq.Assembly()
    .add(b1, name="b1")
    .add(b2, loc=cq.Location((0, 0, 4)), name="b2", color=cq.Color("red"))
    .add(b1, loc=cq.Location((-2, 0, 0)), name="b3", color=cq.Color("red"))
)

pnt = (0.5, 0.5, 0.5)

# fix the position of b1
assy.constrain("b1", "Fixed")
# fix b2 center at point
assy.constrain("b2", "FixedPoint", pnt)
# fix b3 vertex position at point
assy.constrain("b3@vertices@<X and <Y and <Z", "FixedPoint", pnt)

assy.solve()
show_object(assy)</pre>
```

FixedRotation

FixedRotation fixes the rotation of the given argument to be equal to the value specified via the parameter of the constraint.

This constraint locks all rotational degrees of freedom of the argument. The cost function is:

$$\left\| \vec{R} - param \right\|^2$$

Where:

- \vec{R} vector of the rotation angles of the rotation applied to the argument,
- param is the parameter of the constraint tuple specifying the target rotation.

```
import cadquery as cq
b1 = cq.Workplane().box(1, 1, 1)
b2 = cq.Workplane().rect(0.1, 0.1).extrude(1, taper=-15)

assy = (
    cq.Assembly()
    .add(b1, name="b1")
    .add(b2, loc=cq.Location((0, 0, 4)), name="b2", color=cq.Color("red"))
)

# fix the position of b1
assy.constrain("b1", "Fixed")
# fix b2 bottom face position (but not rotation)
assy.constrain("b2@faces@<Z", "FixedPoint", (0, 0, 0.5))
# fix b2 rotational degrees of freedom too
assy.constrain("b2", "FixedRotation", (45, 0, 45))

assy.solve()
show_object(assy)</pre>
```

3.8. Assemblies 59

FixedAxis

FixedAxis fixes the orientation of the given argument's normal or tangent to be equal to the orientation of the vector specified via the parameter of the constraint. This constraint locks two rotational degrees of freedom of the argument. The cost function is:

 $(\vec{a} \angle par\vec{a}m)^2$

Where:

- \vec{a} normal or tangent vector of the argument,
- param is the parameter of the constraint tuple specifying the target direction.

```
import cadquery as cq
b1 = cq.Workplane().box(1, 1, 1)
b2 = cq.Workplane().rect(0.1, 0.1).extrude(1, taper=-15)

assy = (
    cq.Assembly()
    .add(b1, name="b1")
    .add(b2, loc=cq.Location((0, 0, 4)), name="b2", color=cq.Color("red"))
)

# fix the position of b1
assy.constrain("b1", "Fixed")
# fix b2 bottom face position (but not rotation)
assy.constrain("b2@faces@<Z", "FixedPoint", (0, 0, 0.5))
# fix b2 some rotational degrees of freedom too
assy.constrain("b2@faces@>Z", "FixedAxis", (1, 0, 2))
assy.solve()
show_object(assy)
```

3.8.4 Assembly colors

Aside from RGBA values, the *Color* class can be instantiated from a text name. Valid names are listed along with a color sample below:

3.9 Free function API



The free function API is experimental and may change.

For situations when more freedom in crafting individual objects is required, a free function API is provided. This API has no hidden state, but may result in more verbose code. One can still use selectors as methods, but all other operations are implemented as free functions. Placement of objects and creation of patterns can be achieved using the various overloads of the moved method.

Currently this documentation is incomplete, more examples can be found in the tests.

3.9.1 Tutorial

The purpose of this section is to demonstrate how to construct Shape objects using the free function API.

```
from cadquery.func import *
dh = 2
r = 1
# construct edges
edge1 = circle(r)
edge2 = circle(1.5*r).moved(z=dh)
edge3 = circle(r).moved(z=1.5*dh)
# loft the side face
side = loft(edge1, edge2, edge3)
# bottom face
bottom = fill(side.edges('<Z'))</pre>
# top face with continuous curvature
top = cap(side.edges('>Z'), side, [(0,0,1.6*dh)])
# assemble into a solid
s = solid(side, bottom, top)
# construct the final result
result = s.moved((-3*r, 0, 0), (3*r, 0, 0))
```

The code above builds a non-trivial object by sequentially constructing individual faces, assembling them into a solid and finally generating a pattern.

It begins with defining few edges.

```
edge1 = circle(r)
edge2 = circle(2*r).moved(z=dh)
edge3 = circle(r).moved(z=1.5*dh)
```

Those edges are used to create the side faces of the final solid using loft().

```
side = loft(edge1, edge2, edge3)
```

Once the side is there, cap() and fill() are used to define the top and bottom faces. Note that cap() tries to maintain curvature continuity with respect to the context shape. This is not the case for fill().

```
# bottom face
bottom = fill(side.edges('<Z'))

# top face with continuous curvature
top = cap(side.edges('>Z'), side, [(0,0,1.75*dh)])
```

Next, all the faces are assembled into a solid.

```
s = solid(side, bottom, top)
```

3.9. Free function API 61

Finally, the solid is duplicated and placed in the desired locations creating the final compound object. Note various usages of *moved()*.

```
  \left[ \text{result} = \text{s.moved}((-3*r, 0, 0), (3*r, 0, 0)) \right]
```

In general all the operations are implemented as free functions, with the exception of placement and selection which are strictly related to a specific shape.

3.9.2 Primitives

Various 1D, 2D and 3D primitives are supported.

```
from cadquery.func import *
e = segment((0,0), (0,1))
c = circle(1)
f = plane(1, 1.5)
b = box(1, 1, 1)
result = compound(e, c.move(2), f.move(4), b.move(6))
```

3.9.3 Boolean operations

Boolean operations are supported and implemented as operators and free functions. In general boolean operations are slow and it is advised to avoid them and not to perform the in a loop. One can for example union multiple solids at once by first combining them into a compound.

```
from cadquery.func import *
c1 = cylinder(1, 2)
c2 = cylinder(0.5, 3)
f1 = plane(2, 2).move(z=1)
f2 = plane(1, 1).move(z=1)
e1 = segment((0, -2.5, 1), (0, 2.5, 1))
# union
r1 = c2 + c1
r2 = fuse(f1, f2)
# difference
r3 = c1 - c2
r4 = cut(f1, f2)
# intersection
r5 = c1*c2
r6 = intersect(f1, f2)
# splitting
r7 = (c1 / f1).solids('<Z')
```

```
r8 = split(f2, e1).faces('<X')
results = (r1, r2, r3, r4, r5, r6, r7, r8)
result = compound([el.moved(2*i) for i,el in enumerate(results)])</pre>
```

Note that bool operations work on 2D shapes as well.

3.9.4 Shape construction

Constructing complex shapes from simple shapes is possible in various contexts.

```
from cadquery.func import *
e1 = segment((0,0), (1,0))
e2 = segment((1,0), (1,1))
# wire from edges
r1 = wire(e1, e2)
c1 = circle(1)
# face from a planar wire
r2 = face(c1)
# solid from faces
f1 = plane(1,1)
f2 = f1.moved(z=1)
f3 = extrude(f1.wires(), (0,0,1))
r3 = solid(f1, f2, *f3)
# compound from shapes
s1 = circle(1).moved(ry=90)
s2 = plane(1,1).move(rx=90).move(y=2)
s3 = cone(1,1.5).move(y=4)
r4 = compound(s1, s2, s3)
results = (r1, r2, r3, r4,)
result = compound([el.moved(2*i) for i,el in enumerate(results)])
```

3.9.5 Operations

Free function API currently supports extrude(), loft(), revolve() and sweep() operations.

```
from cadquery.func import *

r = rect(1,0.5)
f = face(r, circle(0.2).moved(0.2), rect(0.2, 0.4).moved(-0.2))
c = circle(0.2)
p = spline([(0,0,0), (0,-1,2)], [(0,0,1), (0,-1,1)])

(continues on next page)
```

3.9. Free function API 63

```
# extrude
s1 = extrude(r, (0,0,2))
s2 = extrude(fill(r), (0,0,1))

# sweep
s3 = sweep(r, p)
s4 = sweep(f, p)

# loft
s5 = loft(r, c.moved(z=2))
s6 = loft(r, c.moved(z=1), cap=True)\

# revolve
s7 = revolve(fill(r), (0.5, 0, 0), (0, 1, 0), 90)

results = (s1, s2, s3, s4, s5, s6, s7)
result = compound([el.moved(2*i) for i,el in enumerate(results)])
```

3.9.6 Placement

Placement and creation of arrays is possible using move() and moved().

```
from cadquery.func import *
locs = [(0,-1,0), (0,1,0)]
s = sphere(1).moved(locs)
c = cylinder(1,2).move(rx=15).moved(*locs)
result = compound(s, c.moved(2))
```

3.9.7 Text

The free function API has extensive text creation capabilities including text on planar curves and text on surfaces.

```
from cadquery.func import *
from math import pi

# parameters
D = 5
H = 2*D
S = H/10
TH = S/10
TXT = "CadQuery"

# base and spine
c = cylinder(D, H).moved(rz=-135)
cf = c.faces("%CYLINDER")
spine = (c*plane().moved(z=D)).edges().trim(pi/2, pi)

# planar
```

```
r1 = text(TXT, 1, spine, planar=True).moved(z=-S)
# normal
r2 = text(TXT, 1, spine)
# projected
r3 = text(TXT, 1, spine, cf).moved(z=S)
# projected and thickened
r4 = offset(r3, TH).moved(z=S)
result = compound(r1, r2, r3, r4)
```

3.10 Visualization


3.10.1 Pure Python

Since version 2.4 CadQuery supports visualization without any external tools. Those facilities are based on the VTK library and are not tied to any external tool.

```
from cadquery import *
from cadquery.vis import show

w = Workplane().sphere(1).split(keepBottom=True) - Workplane().sphere(0.5)
r = w.faces('>Z').fillet(0.1)

# Show the result
show(r, alpha=0.5)
```

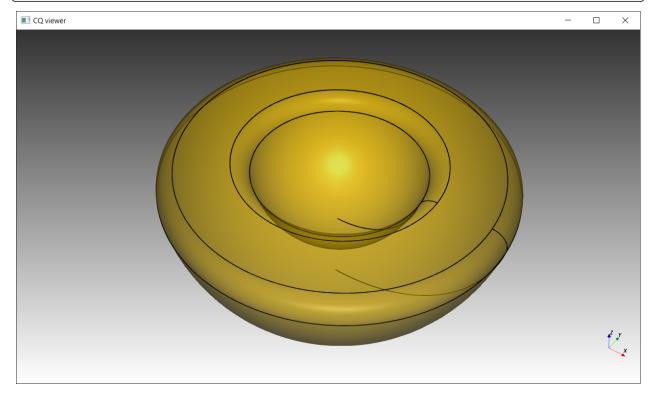

3.10. Visualization 65

One can visualize objects of type Workplane, Sketch, Assembly, Shape, Vector, Location and lists thereof.

```
from cadquery import *
from cadquery.occ_impl.shapes import *
from cadquery.vis import show


w = Workplane().sphere(0.5).split(keepTop=True)
sk = Sketch().rect(1.5, 1.5)
sh = torus(5, 0.5)

r = rect(2, 2)
c = circle(2)

N = 50
params = [i/N for i in range(N)]

vecs = r.positions(params)
locs = c.locations(params)

# Render the solid
show(w, sk, sh, vecs, locs)
```

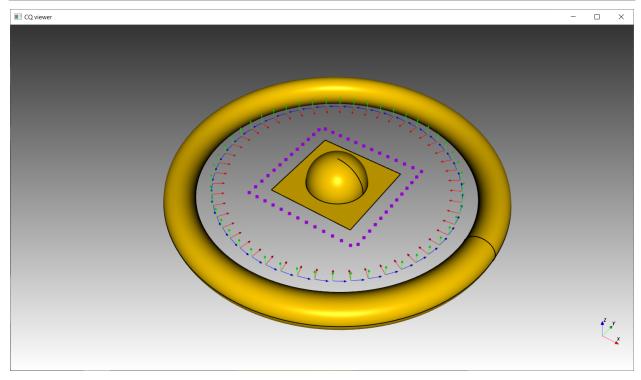


Additionally it is possible to integrate with other libraries using VTK and display any vtkProp object.

```
from cadquery.vis import show
from cadquery.occ_impl.shapes import torus
from vtkmodules.vtkRenderingAnnotation import vtkAnnotatedCubeActor

(continues on next page)
```

```
a = vtkAnnotatedCubeActor()
t = torus(5,1)
show(t, a)
```

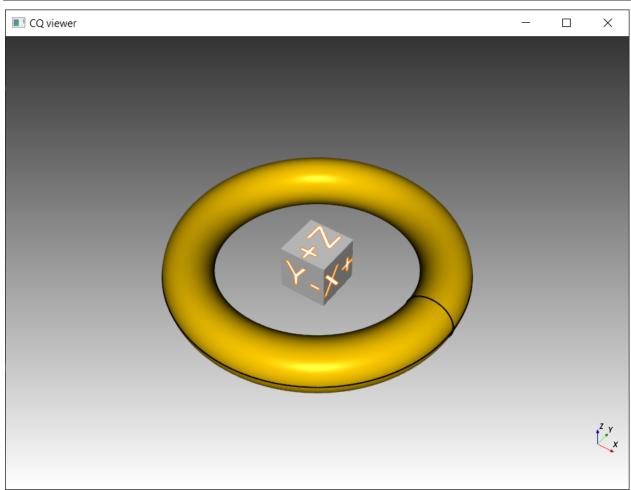

Note that currently the show function is blocking.


3.10.2 Jupyter/JupterLab

There is also more limited support for displaying *Workplane*, *Sketch*, *Assembly*, *Shape* in Jupyter and JupyterLab. This functionality is implemented using VTK.js.

```
from cadquery import *
Workplane().sphere(1).split(keepTop=True)
```

3.10. Visualization 67

[7]:

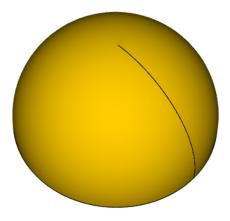



3.11 CadQuery Scripts and Object Output

CadQuery scripts are pure Python scripts, that may follow a few conventions.

If you are using CadQuery as a library, there are no constraints.

If you are using CadQuery scripts inside of a CadQuery execution environment like CQ-editor, there are a few conventions you need to be aware of:

- cadquery is usually imported as 'cq' at the top of a script
- to return an object to the execution environment (like CQ-editor) for rendering, you need to call the show_object() method

Each script generally has three sections:

- Variable Assignments and metadata definitions
- CadQuery and other Python code
- object export or rendering, via the show_object() function

see the The CadQuery Gateway Interface section for more details.

3.12 Examples

The examples on this page can help you learn how to build objects with CadQuery.

They are organized from simple to complex, so working through them in order is the best way to absorb them.

Each example lists the API elements used in the example for easy reference. Items introduced in the example are marked with a!



1 Note

We strongly recommend installing CQ-editor, so that you can work along with these examples interactively. See *Installing CadQuery* for more info.

If you do, make sure to take these steps so that they work:

- 1. import cadquery as cq
- 2. add the line show_object(result) at the end. The samples below are autogenerated, but they use a different syntax than the models on the website need to be.

List of Examples

- Examples
 - Simple Rectangular Plate
 - Plate with Hole
 - An extruded prismatic solid
 - Building Profiles using lines and arcs
 - Moving The Current working point
 - Using Point Lists
 - Polygons
 - Polylines
 - Defining an Edge with a Spline
 - Mirroring Symmetric Geometry
 - Mirroring 3D Objects
 - Mirroring From Faces
 - Creating Workplanes on Faces
 - Locating a Workplane on a vertex
 - Offset Workplanes
 - Copying Workplanes
 - Rotated Workplanes
 - Using construction Geometry
 - Shelling To Create Thin features
 - Making Lofts
 - Extruding until a given face
 - Making Counter-bored and Counter-sunk Holes
 - Offsetting wires in 2D
 - Rounding Corners with Fillet
 - Tagging objects
 - A Parametric Bearing Pillow Block
 - Splitting an Object
 - The Classic OCC Bottle

```
A Parametric Enclosure
Lego Brick
Braille Example
Panel With Various Connector Holes
Cycloidal gear
```

3.12.1 Simple Rectangular Plate

Just about the simplest possible example, a rectangular box

```
result = cadquery.Workplane("front").box(2.0, 2.0, 0.5)
```

```
Api References

• Workplane()!

• Workplane.box()!
```

3.12.2 Plate with Hole

A rectangular box, but with a hole added.

">Z" selects the top most face of the resulting box. The hole is located in the center because the default origin of a working plane is the projected origin of the last Workplane, the last Workplane having origin at (0,0,0) the projection is at the center of the face. The default hole depth is through the entire part.

```
# The dimensions of the box. These can be modified rather than changing the
# object's code directly.
length = 80.0
height = 60.0
thickness = 10.0
center_hole_dia = 22.0

# Create a box based on the dimensions above and add a 22mm center hole
result = (
    cq.Workplane("XY")
    .box(length, height, thickness)
    .faces(">Z")
    .workplane()
    .hole(center_hole_dia)
)
```

```
Api References

• Workplane.hole()!
• Workplane.box()
```

3.12.3 An extruded prismatic solid

Build a prismatic solid using extrusion. After a drawing operation, the center of the previous object is placed on the stack, and is the reference for the next operation. So in this case, the rect() is drawn centered on the previously draw circle.

By default, rectangles and circles are centered around the previous working point.

```
result = cq.Workplane("front").circle(2.0).rect(0.5, 0.75).extrude(0.5)
```

```
Api References

• Workplane.circle()!
• Workplane.rect()!
• Workplane()
```

3.12.4 Building Profiles using lines and arcs

Sometimes you need to build complex profiles using lines and arcs. This example builds a prismatic solid from 2D operations.

2D operations maintain a current point, which is initially at the origin. Use close() to finish a closed curve.

```
result = (
    cq.Workplane("front")
    .lineTo(2.0, 0)
    .lineTo(2.0, 1.0)
    .threePointArc((1.0, 1.5), (0.0, 1.0))
    .close()
    .extrude(0.25)
)
```

```
Api References

• Workplane.threePointArc()!
• Workplane.lineTo()!
• Workplane()
```

3.12.5 Moving The Current working point

In this example, a closed profile is required, with some interior features as well.

This example also demonstrates using multiple lines of code instead of longer chained commands, though of course in this case it was possible to do it in one long line as well.

A new work plane center can be established at any point.

```
result = cq.Workplane("front").circle(
    3.0
) # current point is the center of the circle, at (0, 0)
result = result.center(1.5, 0.0).rect(0.5, 0.5) # new work center is (1.5, 0.0)
result = result.center(-1.5, 1.5).circle(0.25) # new work center is (0.0, 1.5).
# The new center is specified relative to the previous center, not global coordinates!
result = result.extrude(0.25)
```

Api References • Workplane.center()! • Workplane() • Workplane.circle() • Workplane.extrude()

3.12.6 Using Point Lists

Sometimes you need to create a number of features at various locations, and using Workplane.center() is too cumbersome.

You can use a list of points to construct multiple objects at once. Most construction methods, like *Workplane*. circle() and *Workplane*.rect(), will operate on multiple points if they are on the stack

```
r = cq.Workplane("front").circle(2.0) # make base
r = r.pushPoints(
    [(1.5, 0), (0, 1.5), (-1.5, 0), (0, -1.5)]
) # now four points are on the stack
r = r.circle(0.25) # circle will operate on all four points
result = r.extrude(0.125) # make prism
```

```
Api References

• Workplane.pushPoints()!
• Workplane.circle()
• Workplane.extrude()
```

3.12.7 Polygons

You can create polygons for each stack point if you would like. Useful in 3d printers whose firmware does not correct for small hole sizes.

```
result = (
    cq.Workplane("front")
    .box(3.0, 4.0, 0.25)
    .pushPoints([(0, 0.75), (0, -0.75)])
    .polygon(6, 1.0)
    .cutThruAll()
)
```

```
Api References

• Workplane.polygon()!
• Workplane.box()
```

3.12.8 Polylines

Workplane.polyline() allows creating a shape from a large number of chained points connected by lines.

This example uses a polyline to create one half of an i-beam shape, which is mirrored to create the final profile.

```
(L, H, W, t) = (100.0, 20.0, 20.0, 1.0)
pts = [
    (0, H / 2.0),
    (W / 2.0, H / 2.0),
    (W / 2.0, (H / 2.0 - t)),
    (t / 2.0, (H / 2.0 - t)),
    (t / 2.0, (t - H / 2.0)),
    (W / 2.0, (t - H / 2.0)),
    (W / 2.0, H / -2.0),
    (0, H / -2.0),
]
result = cq.Workplane("front").polyline(pts).mirrorY().extrude(L)
```

```
Api References

• Workplane.polyline()!
• Workplane()

• Workplane.extrude()
```

3.12.9 Defining an Edge with a Spline

This example defines a side using a spline curve through a collection of points. Useful when you have an edge that needs a complex profile

```
s = cq.Workplane("XY")
sPnts = [
    (2.75, 1.5),
    (2.5, 1.75),
    (2.0, 1.5),
    (1.5, 1.0),
    (1.0, 1.25),
    (0.5, 1.0),
    (0, 1.0),
]
r = s.lineTo(3.0, 0).lineTo(3.0, 1.0).spline(sPnts, includeCurrent=True).close()
result = r.extrude(0.5)
```

```
Api References

• Workplane.spline()!
• Workplane()
• Workplane.close()

• Workplane.extrude()
```

3.12.10 Mirroring Symmetric Geometry

You can mirror 2D geometry when your shape is symmetric. In this example we also introduce horizontal and vertical lines, which make for slightly easier coding.

```
) # hLineTo allows using xCoordinate not distance
result = r.mirrorY().extrude(0.25) # mirror the geometry and extrude
```

```
Api References

• Workplane.hLine()!
• Workplane.vLine()!
• Workplane.hLineTo()!
• Workplane.mirrorY()!
• Workplane.mirrorY()!
```

3.12.11 Mirroring 3D Objects

```
result0 = (
    cadquery.Workplane("XY")
    .moveTo(10, 0)
    .lineTo(5, 0)
    .threePointArc((3.9393, 0.4393), (3.5, 1.5))
    .threePointArc((3.0607, 2.5607), (2, 3))
    .lineTo(1.5, 3)
    .threePointArc((0.4393, 3.4393), (0, 4.5))
    .lineTo(0, 13.5)
    .threePointArc((0.4393, 14.5607), (1.5, 15))
    .lineTo(28, 15)
    .lineTo(28, 13.5)
    .lineTo(24, 13.5)
    .lineTo(24, 11.5)
    .lineTo(27, 11.5)
    .lineTo(27, 10)
    .lineTo(22, 10)
    .lineTo(22, 13.2)
    .lineTo(14.5, 13.2)
    .lineTo(14.5, 10)
    .lineTo(12.5, 10)
    .lineTo(12.5, 13.2)
    .lineTo(5.5, 13.2)
    .lineTo(5.5, 2)
    .threePointArc((5.793, 1.293), (6.5, 1))
    .lineTo(10, 1)
    .close()
result = result0.extrude(100)
result = result.rotate((0, 0, 0), (1, 0, 0), 90)
result = result.translate(result.val().BoundingBox().center.multiply(-1))
mirXY_neg = result.mirror(mirrorPlane="XY", basePointVector=(0, 0, -30))
mirXY_pos = result.mirror(mirrorPlane="XY", basePointVector=(0, 0, 30))
mirZY_neg = result.mirror(mirrorPlane="ZY", basePointVector=(-30, 0, 0))
mirZY_pos = result.mirror(mirrorPlane="ZY", basePointVector=(30, 0, 0))
```

result = result.union(mirXY_neg).union(mirXY_pos).union(mirZY_neg).union(mirZY_pos)

Api References

- Workplane.moveTo()
- Workplane.lineTo()
- Workplane.threePointArc()
- Workplane.extrude()

- Workplane.mirror()
- Workplane.union()
- Workplane.rotate()

3.12.12 Mirroring From Faces

This example shows how you can mirror about a selected face. It also shows how the resulting mirrored object can be unioned immediately with the referenced mirror geometry.

```
result = cq.Workplane("XY").line(0, 1).line(1, 0).line(0, -0.5).close().extrude(1)
result = result.mirror(result.faces(">X"), union=True)
```

Api References

- Workplane.line()
- Workplane.close()
- Workplane.extrude()

- Workplane.faces()
- Workplane.mirror()
- Workplane.union()

3.12.13 Creating Workplanes on Faces

This example shows how to locate a new workplane on the face of a previously created feature.

1 Note

Using workplanes in this way are a key feature of CadQuery. Unlike a typical 3d scripting language, using work planes frees you from tracking the position of various features in variables, and allows the model to adjust itself with removing redundant dimensions

The Workplane.faces() method allows you to select the faces of a resulting solid. It accepts a selector string or object, that allows you to target a single face, and make a workplane oriented on that face.

Keep in mind that by default the origin of a new workplane is calculated by forming a plane from the selected face and projecting the previous origin onto that plane. This behaviour can be changed through the centerOption argument of *Workplane.workplane()*.

```
result = cq.Workplane("front").box(2, 3, 0.5) # make a basic prism
result = (
    result.faces(">Z").workplane().hole(0.5)
) # find the top-most face and make a hole
```

Api References

- Workplane.faces()!
- StringSyntaxSelector()!
- Selectors Reference!

- Workplane.workplane()
- Workplane.box()
- Workplane()

3.12.14 Locating a Workplane on a vertex

Normally, the Workplane.workplane() method requires a face to be selected. But if a vertex is selected **immediately** after a face, Workplane. workplane() with the centerOption argument set to CenterOfMass will locate the workplane on the face, with the origin at the vertex instead of at the center of the face

The example also introduces Workplane.cutThruAll(), which makes a cut through the entire part, no matter how deep the part is.

```
result = cq.Workplane("front").box(3, 2, 0.5) # make a basic prism
result = (
   result.faces(">Z").vertices("<XY").workplane(centerOption="CenterOfMass")
) # select the lower left vertex and make a workplane
result = result.circle(1.0).cutThruAll() # cut the corner out
```

Api References

- Workplane.cutThruAll()!
- Selectors Reference!
- Workplane.vertices()!

- Workplane.box()
- Workplane()
- StringSyntaxSelector()!

3.12.15 Offset Workplanes

Workplanes do not have to lie exactly on a face. When you make a workplane, you can define it at an offset from an existing face.

This example uses an offset workplane to make a compound object, which is perfectly valid!

```
result = cq.Workplane("front").box(3, 2, 0.5) # make a basic prism
result = result.faces("<X").workplane(</pre>
   offset=0.75
) # workplane is offset from the object surface
result = result.circle(1.0).extrude(0.5) # disc
```

Api References

- Workplane.extrude()
- Selectors Reference!

- Workplane.box()
- Workplane()

3.12.16 Copying Workplanes

An existing CQ object can copy a workplane from another CQ object.

```
result = (
    cq.Workplane("front")
                                                                                           (continues on next page)
```

```
.circle(1)
.extrude(10) # make a cylinder
# We want to make a second cylinder perpendicular to the first,
# but we have no face to base the workplane off
.copyWorkplane(
    # create a temporary object with the required workplane
    cq.Workplane("right", origin=(-5, 0, 0))
)
.circle(1)
.extrude(10)
```

```
API References

• Workplane.copyWorkplane()!
• Workplane.circle()

• Workplane()
```

3.12.17 Rotated Workplanes

You can create a rotated work plane by specifying angles of rotation relative to another workplane

```
result = (
    cq.Workplane("front")
    .box(4.0, 4.0, 0.25)
    .faces(">Z")
    .workplane()
    .transformed(offset=cq.Vector(0, -1.5, 1.0), rotate=cq.Vector(60, 0, 0))
    .rect(1.5, 1.5, forConstruction=True)
    .vertices()
    .hole(0.25)
)
```

```
Api References

• Workplane.transformed()!
• Workplane.box()

• Workplane.faces()
```

3.12.18 Using construction Geometry

You can draw shapes to use the vertices as points to locate other features. Features that are used to locate other features, rather than to create them, are called Construction Geometry

In the example below, a rectangle is drawn, and its vertices are used to locate a set of holes.

```
result = (
    cq.Workplane("front")
    .box(2, 2, 0.5)
    .faces(">Z")
    .workplane()
    .rect(1.5, 1.5, forConstruction=True)
    (continues on next page)
```

```
.vertices()
    .hole(0.125)
)
```

```
Api References
   • Workplane.rect() (forConstruction=True)
                                                     • Workplane.box()
```

• Selectors Reference

• Workplane.workplane()

Workplane.hole()

• Workplane()

3.12.19 Shelling To Create Thin features

Shelling converts a solid object into a shell of uniform thickness.

To shell an object and 'hollow out' the inside pass a negative thickness parameter to the Workplane.shell() method of a shape.

```
result = cq.Workplane("front").box(2, 2, 2).shell(-0.1)
```

A positive thickness parameter wraps an object with filleted outside edges and the original object will be the 'hollowed out' portion.

```
result = cq.Workplane("front").box(2, 2, 2).shell(0.1)
```

Use face selectors to select a face to be removed from the resulting hollow shape.

```
result = cq.Workplane("front").box(2, 2, 2).faces("+Z").shell(0.1)
```

Multiple faces can be removed using more complex selectors.

```
result = cq.Workplane("front").box(2, 2, 2).faces("+Z or -X or +X").shell(0.1)
```

```
Api References
   • Workplane.shell()!
                                                    • Workplane.faces()
                                                    • Workplane()
   • Selectors Reference
   • Workplane.box()
```

3.12.20 Making Lofts

A loft is a solid swept through a set of wires. This example creates lofted section between a rectangle and a circular section.

```
result = (
    cq.Workplane("front")
    .box(4.0, 4.0, 0.25)
    .faces(">Z")
    .circle(1.5)
    .workplane(offset=3.0)
    .rect(0.75, 0.5)
```

```
.loft(combine=True)
```

```
Api References

• Workplane.loft()!
• Workplane.box()
• Workplane.faces()

• Workplane.rect()
```

3.12.21 Extruding until a given face

Sometimes you will want to extrude a wire until a given face that can be not planar or where you might not know easily the distance you have to extrude to. In such cases you can use *next*, *last* or even give a *Face* object for the *until* argument of *extrude()*.

```
result = (
    cq.Workplane(origin=(20, 0, 0))
    .circle(2)
    .revolve(180, (-20, 0, 0), (-20, -1, 0))
    .center(-20, 0)
    .workplane()
    .rect(20, 4)
    .extrude("next")
)
```

The same behaviour is available with *cutBlind()* and as you can see it is also possible to work on several *Wire* objects at a time (the same is true for *extrude()*).

```
skyscrapers_locations = [(-16, 1), (-8, 0), (7, 0.2), (17, -1.2)]
angles = iter([15, 0, -8, 10])
skyscrapers = (
    cq.Workplane()
    .pushPoints(skyscrapers_locations)
    .eachpoint(
        lambda loc: (
            cq.Workplane()
            .rect(5, 16)
            .workplane(offset=10)
            .ellipse(3, 8)
            .workplane(offset=10)
            .slot2D(20, 5, 90)
            .loft()
            .rotateAboutCenter((0, 0, 1), next(angles))
            .val()
            .located(loc)
        )
    )
)
result = (
    skyscrapers.transformed((0, -90, 0))
                                                                              (continues on next page)
```

```
.moveTo(15, 0)
    .rect(3, 3, forConstruction=True)
    .vertices()
    .circle(1)
    .cutBlind("last")
)
```

Here is a typical situation where extruding and cuting until a given surface is very handy. It allows us to extrude or cut until a curved surface without overlapping issues.

```
import cadquery as cq
sphere = cq.Workplane().sphere(5)
base = cq.Workplane(origin=(0, 0, -2)).box(12, 12, 10).cut(sphere).edges("|Z").fillet(2)
sphere_face = base.faces(">>X[2] and (not |Z) and (not |Y)").val()
base = base.faces("<Z").workplane().circle(2).extrude(10)</pre>
shaft = cq.Workplane().sphere(4.5).circle(1.5).extrude(20)
spherical_joint = (
   base.union(shaft)
    .faces(">X")
    .workplane(centerOption="CenterOfMass")
    .move(0, 4)
    .slot2D(10, 2, 90)
    .cutBlind(sphere_face)
    .workplane(offset=10)
    .move(0, 2)
    .circle(0.9)
    .extrude("next")
result = spherical_joint
```

⚠ Warning

If the wire you want to extrude cannot be fully projected on the target surface, the result will be unpredictable. Furthermore, the algorithm in charge of finding the candidate faces does its search by counting all the faces intersected by a line created from your wire center along your extrusion direction. So make sure your wire can be projected on your target face to avoid unexpected behaviour.

Api References

- Workplane.cutBlind()!
- Workplane.rect()
- Workplane.ellipse()
- Workplane.workplane()
- Workplane.slot2D()
- Workplane.loft()
- Workplane.
- rotateAboutCenter()
- Workplane.
 - transformed()
- Workplane.moveTo()
- Workplane.circle()

3.12.22 Making Counter-bored and Counter-sunk Holes

Counterbored and countersunk holes are so common that CadQuery creates macros to create them in a single step.

Similar to Workplane.hole(), these functions operate on a list of points as well as a single point.

```
result = (
    cq.Workplane(cq.Plane.XY())
    .box(4, 2, 0.5)
    .faces(">Z")
    .workplane()
    .rect(3.5, 1.5, forConstruction=True)
    .vertices()
    .cboreHole(0.125, 0.25, 0.125, depth=None)
)
```

3.12.23 Offsetting wires in 2D

Two dimensional wires can be transformed with *Workplane.offset2D()*. They can be offset inwards or outwards, and with different techniques for extending the corners.

```
original = cq.Workplane().polygon(5, 10).extrude(0.1).translate((0, 0, 2))
arc = cq.Workplane().polygon(5, 10).offset2D(1, "arc").extrude(0.1).translate((0, 0, 1))
intersection = cq.Workplane().polygon(5, 10).offset2D(1, "intersection").extrude(0.1)
result = original.add(arc).add(intersection)
```

Using the forConstruction argument you can do the common task of offsetting a series of bolt holes from the outline of an object. Here is the counterbore example from above but with the bolt holes offset from the edges.

```
result = (
    cq.Workplane()
    .box(4, 2, 0.5)
    .faces(">Z")
    .edges()
    .toPending()
    .offset2D(-0.25, forConstruction=True)
    .vertices()
    .cboreHole(0.125, 0.25, 0.125, depth=None)
)
```

Note that <code>Workplane.edges()</code> is for selecting objects. It does not add the selected edges to pending edges in the modelling context, because this would result in your next extrusion including everything you had only selected in addition to the lines you had drawn. To specify you want these edges to be used in <code>Workplane.offset2D()</code>, you call <code>Workplane.toPending()</code> to explicitly put them in the list of pending edges.

```
Api References

• Workplane.offset2D()!
• Workplane.cboreHole()
• Workplane.cskHole()
• Workplane.cskHole()
• Workplane.box()
• Workplane.box()
• Workplane.polygon()
• Workplane()
```

3.12.24 Rounding Corners with Fillet

Filleting is done by selecting the edges of a solid, and using the fillet function.

Here we fillet all of the edges of a simple plate.

```
result = cq.Workplane("XY").box(3, 3, 0.5).edges("|Z").fillet(0.125)
```

```
Api References

• Workplane.fillet()!
• Workplane.edges()
• Workplane.box()
• Workplane()
```

3.12.25 Tagging objects

The Workplane.tag() method can be used to tag a particular object in the chain with a string, so that it can be referred to later in the chain.

The Workplane.workplaneFromTagged() method applies Workplane.copyWorkplane() to a tagged object. For example, when extruding two different solids from a surface, after the first solid is extruded it can become difficult to reselect the original surface with CadQuery's other selectors.

```
result = (
    cq.Workplane("XY")
    # create and tag the base workplane
    box(10, 10, 10)
    .faces(">Z")
    .workplane()
    .tag("baseplane")
    # extrude a cylinder
    .center(-3, 0)
    .circle(1)
    .extrude(3)
    # to reselect the base workplane, simply
    .workplaneFromTagged("baseplane")
    # extrude a second cylinder
    .center(3, \emptyset)
    .circle(1)
    .extrude(2)
)
```

Tags can also be used with most selectors, including Workplane.vertices(), Workplane.faces(), Workplane.edges(), Workplane.wires(), Workplane.shells(), Workplane.solids() and Workplane.compounds().

```
result = (
   cq.Workplane("XY")
    # create a triangular prism and tag it
    .polygon(3, 5)
    .extrude(4)
    .tag("prism")
    # create a sphere that obscures the prism
    .sphere(10)
    # create features based on the prism's faces
    .faces("<X", tag="prism")</pre>
    .workplane()
    .circle(1)
    .cutThruAll()
    .faces(">X", tag="prism")
    .faces(">Y")
    .workplane()
    .circle(1)
    .cutThruAll()
```

3.12.26 A Parametric Bearing Pillow Block

Combining a few basic functions, its possible to make a very good parametric bearing pillow block, with just a few lines of code.

```
(length, height, bearing_diam, thickness, padding) = (30.0, 40.0, 22.0, 10.0, 8.0)

result = (
    cq.Workplane("XY")
    .box(length, height, thickness)
    .faces(">Z")
    .workplane()
    .hole(bearing_diam)
    .faces(">Z")
    .workplane()
    .rect(length - padding, height - padding, forConstruction=True)
    .vertices()
    .cboreHole(2.4, 4.4, 2.1)
)
```

3.12.27 Splitting an Object

You can split an object using a workplane, and retain either or both halves

```
c = cq.Workplane("XY").box(1, 1, 1).faces(">Z").workplane().circle(0.25).cutThruAll()
# now cut it in half sideways
result = c.faces(">Y").workplane(-0.5).split(keepTop=True)
```

```
Api References

• Workplane.split()!
• Workplane.box()
• Workplane.circle()

• Workplane.workplane()
• Workplane()
```

3.12.28 The Classic OCC Bottle

CadQuery is based on the OpenCascade.org (OCC) modeling Kernel. Those who are familiar with OCC know about the famous 'bottle' example. The bottle example in the OCCT online documentation.

A pythonOCC version is listed here.

Of course one difference between this sample and the OCC version is the length. This sample is one of the longer ones at 13 lines, but that's very short compared to the pythonOCC version, which is 10x longer!

```
Api References

• Workplane.extrude()
• Workplane.mirrorX()
• Workplane.threePointArc()
• Workplane.workplane()
• Workplane.faces()
• Workplane()
```

3.12.29 A Parametric Enclosure

```
# parameter definitions
p_outerWidth = 100.0 # Outer width of box enclosure
p_outerLength = 150.0 # Outer length of box enclosure
p_outerHeight = 50.0 # Outer height of box enclosure
p_thickness = 3.0 # Thickness of the box walls
p_sideRadius = 10.0 # Radius for the curves around the sides of the box
p_topAndBottomRadius = (
    2.0 # Radius for the curves on the top and bottom edges of the box
p_screwpostInset = 12.0 # How far in from the edges the screw posts should be place.
p_screwpostID = 4.0 # Inner Diameter of the screw post holes, should be roughly screw_
→ diameter not including threads
p_screwpostOD = 10.0 # Outer Diameter of the screw posts.\nDetermines overall thickness_
\rightarrow of the posts
p_boreDiameter = 8.0 # Diameter of the counterbore hole, if any
p_boreDepth = 1.0 # Depth of the counterbore hole, if
p_countersinkDiameter = 0.0 # Outer diameter of countersink. Should roughly match the.
→outer diameter of the screw head
p_countersinkAngle = 90.0 # Countersink angle (complete angle between opposite sides,
→not from center to one side)
p_flipLid = True # Whether to place the lid with the top facing down or not.
p_lipHeight = 1.0 # Height of lip on the underside of the lid.\nSits inside the box_
→body for a snug fit.
# outer shell
oshell = (
   cq.Workplane("XY")
    .rect(p_outerWidth, p_outerLength)
    .extrude(p_outerHeight + p_lipHeight)
# weird geometry happens if we make the fillets in the wrong order
if p_sideRadius > p_topAndBottomRadius:
    oshell = oshell.edges("|Z").fillet(p_sideRadius)
   oshell = oshell.edges("#Z").fillet(p_topAndBottomRadius)
else:
    oshell = oshell.edges("#Z").fillet(p_topAndBottomRadius)
    oshell = oshell.edges("|Z").fillet(p_sideRadius)
# inner shell
ishell = (
   oshell.faces("<Z")
    .workplane(p_thickness, True)
    .rect((p_outerWidth - 2.0 * p_thickness), (p_outerLength - 2.0 * p_thickness))
   .extrude(
        (p_outerHeight - 2.0 * p_thickness), False
   ) # set combine false to produce just the new boss
)
```

(continues on next page)

```
ishell = ishell.edges("|Z").fillet(p_sideRadius - p_thickness)
# make the box outer box
box = oshell.cut(ishell)
# make the screw posts
POSTWIDTH = p_outerWidth - 2.0 * p_screwpostInset
POSTLENGTH = p_outerLength - 2.0 * p_screwpostInset
box = (
   box.faces(">Z")
    .workplane(-p_thickness)
    .rect(POSTWIDTH, POSTLENGTH, forConstruction=True)
    .vertices()
   .circle(p_screwpostOD / 2.0)
   .circle(p_screwpostID / 2.0)
    .extrude(-1.0 * (p_outerHeight + p_lipHeight - p_thickness), True)
# split lid into top and bottom parts
(lid, bottom) = (
   box.faces(">Z")
    .workplane(-p_thickness - p_lipHeight)
    .split(keepTop=True, keepBottom=True)
    .all()
) # splits into two solids
# translate the lid, and subtract the bottom from it to produce the lid inset
lowerLid = lid.translate((0, 0, -p_lipHeight))
cutlip = lowerLid.cut(bottom).translate(
    (p_outerWidth + p_thickness, 0, p_thickness - p_outerHeight + p_lipHeight)
# compute centers for screw holes
topOfLidCenters = (
   cutlip.faces(">Z")
    .workplane(centerOption="CenterOfMass")
    .rect(POSTWIDTH, POSTLENGTH, forConstruction=True)
    .vertices()
# add holes of the desired type
if p_boreDiameter > 0 and p_boreDepth > 0:
    topOfLid = topOfLidCenters.cboreHole(
        p_screwpostID, p_boreDiameter, p_boreDepth, 2.0 * p_thickness
elif p_countersinkDiameter > 0 and p_countersinkAngle > 0:
    topOfLid = topOfLidCenters.cskHole(
        p_screwpostID, p_countersinkDiameter, p_countersinkAngle, 2.0 * p_thickness
   )
else:
   topOfLid = topOfLidCenters.hole(p_screwpostID, 2.0 * p_thickness)
```

• Workplane.hole()

(continued from previous page)

```
# flip lid upside down if desired
if p_flipLid:
    topOfLid = topOfLid.rotateAboutCenter((1, 0, 0), 180)

# return the combined result
result = topOfLid.union(bottom)
```

```
      Api References

      • Workplane.circle()
      • Workplane.vertices()
      • Workplane.

      • Workplane.rect()
      • Workplane.edges()
      rotateAboutCenter()

      • Workplane.extrude()
      • Workplane.workplane()
      • Workplane.cboreHole()

      • Workplane.box()
      • Workplane.fillet()
      • Workplane.cskHole()
```

• Workplane.cut()

• Workplane.union()

3.12.30 Lego Brick

• Workplane.all()

Workplane.faces()

This script will produce any size regular rectangular Lego(TM) brick. Its only tricky because of the logic regarding the underside of the brick.

```
#####
# Inputs
######
lbumps = 6 # number of bumps long
wbumps = 2 # number of bumps wide
thin = True # True for thin, False for thick
# Lego Brick Constants-- these make a Lego brick a Lego :)
pitch = 8.0
clearance = 0.1
bumpDiam = 4.8
bumpHeight = 1.8
if thin:
   height = 3.2
else:
   height = 9.6
t = (pitch - (2 * clearance) - bumpDiam) / 2.0
postDiam = pitch - t # works out to 6.5
total_length = lbumps * pitch - 2.0 * clearance
total_width = wbumps * pitch - 2.0 * clearance
# make the base
s = cq.Workplane("XY").box(total_length, total_width, height)
# shell inwards not outwards
s = s.faces("<Z").shell(-1.0 * t)
                                                                            (continues on next page)
```

```
# make the bumps on the top
s = (
    s.faces(">Z")
    .workplane()
    .rarray(pitch, pitch, lbumps, wbumps, True)
    .circle(bumpDiam / 2.0)
    .extrude(bumpHeight)
# add posts on the bottom. posts are different diameter depending on geometry
# solid studs for 1 bump, tubes for multiple, none for 1x1
tmp = s.faces("<Z").workplane(invert=True)</pre>
if lbumps > 1 and wbumps > 1:
    tmp = (
        tmp.rarray(pitch, pitch, lbumps - 1, wbumps - 1, center=True)
        .circle(postDiam / 2.0)
        .circle(bumpDiam / 2.0)
        .extrude(height - t)
    )
elif lbumps > 1:
    tmp = (
        tmp.rarray(pitch, pitch, lbumps - 1, 1, center=True)
        .circle(t)
        .extrude(height - t)
    )
elif wbumps > 1:
    tmp = (
        tmp.rarray(pitch, pitch, 1, wbumps - 1, center=True)
        .circle(t)
        .extrude(height - t)
    )
else:
    tmp = s
```

3.12.31 Braille Example

```
from collections import namedtuple

# text_lines is a list of text lines.
# Braille (converted with braille-converter:
# https://github.com/jpaugh/braille-converter.git).
text_lines = [" "]
# See http://www.tiresias.org/research/reports/braille_cell.htm for examples
# of braille cell geometry.
horizontal_interdot = 2.5
vertical_interdot = 2.5
horizontal_intercell = 6
vertical_interline = 10
```

```
dot_height = 0.5
dot_diameter = 1.3
base_thickness = 1.5
# End of configuration.
BrailleCellGeometry = namedtuple(
    "BrailleCellGeometry",
        "horizontal_interdot",
        "vertical_interdot",
        "intercell",
        "interline",
        "dot_height"
        "dot_diameter",
   ),
)
class Point(object):
   def __init__(self, x, y):
        self.x = x
        self.y = y
   def __add__(self, other):
       return Point(self.x + other.x, self.y + other.y)
   def __len__(self):
        return 2
   def __getitem__(self, index):
       return (self.x, self.y)[index]
   def __str__(self):
       return "({}, {})".format(self.x, self.y)
def brailleToPoints(text, cell_geometry):
   # Unicode bit pattern (cf. https://en.wikipedia.org/wiki/Braille_Patterns).
   mask1 = 0b00000001
   mask2 = 0b00000010
   mask3 = 0b00000100
   mask4 = 0b00001000
   mask5 = 0b00010000
   mask6 = 0b00100000
   mask7 = 0b01000000
   mask8 = 0b10000000
   masks = (mask1, mask2, mask3, mask4, mask5, mask6, mask7, mask8)
   # Corresponding dot position
   w = cell_geometry.horizontal_interdot
   h = cell_geometry.vertical_interdot
                                                                            (continues on next page)
```

```
pos1 = Point(0, 2 * h)
   pos2 = Point(0, h)
   pos3 = Point(0, 0)
   pos4 = Point(w, 2 * h)
   pos5 = Point(w, h)
   pos6 = Point(w, 0)
   pos7 = Point(0, -h)
   pos8 = Point(w, -h)
   pos = (pos1, pos2, pos3, pos4, pos5, pos6, pos7, pos8)
   # Braille blank pattern (u'\u2800').
   blank = ""
   points = []
   # Position of dot1 along the x-axis (horizontal).
   character_origin = 0
    for c in text:
        for m, p in zip(masks, pos):
            delta_to_blank = ord(c) - ord(blank)
            if m & delta_to_blank:
                points.append(p + Point(character_origin, ∅))
        character_origin += cell_geometry.intercell
   return points
def get_plate_height(text_lines, cell_geometry):
    # cell_geometry.vertical_interdot is also used as space between base
    # borders and characters.
   return (
        2 * cell_geometry.vertical_interdot
        + 2 * cell_geometry.vertical_interdot
        + (len(text_lines) - 1) * cell_geometry.interline
   )
def get_plate_width(text_lines, cell_geometry):
    # cell_geometry.horizontal_interdot is also used as space between base
    # borders and characters.
   max_len = max([len(t) for t in text_lines])
   return (
        2 * cell_geometry.horizontal_interdot
        + cell_geometry.horizontal_interdot
        + (max_len - 1) * cell_geometry.intercell
   )
def get_cylinder_radius(cell_geometry):
    """Return the radius the cylinder should have
    The cylinder have the same radius as the half-sphere make the dots (the
   hidden and the shown part of the dots).
   The radius is such that the spherical cap with diameter
    cell_geometry.dot_diameter has a height of cell_geometry.dot_height.
```

```
h = cell_geometry.dot_height
   r = cell_geometry.dot_diameter / 2
   return (r^{**2} + h^{**2}) / 2 / h
def get_base_plate_thickness(plate_thickness, cell_geometry):
    """Return the height on which the half spheres will sit"""
   return (
       plate_thickness + get_cylinder_radius(cell_geometry) - cell_geometry.dot_height
def make_base(text_lines, cell_geometry, plate_thickness):
    base_width = get_plate_width(text_lines, cell_geometry)
   base_height = get_plate_height(text_lines, cell_geometry)
   base_thickness = get_base_plate_thickness(plate_thickness, cell_geometry)
   base = cq.Workplane("XY").box(
       base_width, base_height, base_thickness, centered=False
   )
   return base
def make_embossed_plate(text_lines, cell_geometry):
    """Make an embossed plate with dots as spherical caps
   Method:
        - make a thin plate on which sit cylinders
        - fillet the upper edge of the cylinders so to get pseudo half-spheres
        - make the union with a thicker plate so that only the sphere caps stay
          "visible".
   base = make_base(text_lines, cell_geometry, base_thickness)
   dot_pos = []
   base_width = get_plate_width(text_lines, cell_geometry)
   base_height = get_plate_height(text_lines, cell_geometry)
   y = base_height - 3 * cell_geometry.vertical_interdot
   line_start_pos = Point(cell_geometry.horizontal_interdot, y)
    for text in text_lines:
        dots = brailleToPoints(text, cell_geometry)
        dots = [p + line_start_pos for p in dots]
        dot_pos += dots
        line_start_pos += Point(0, -cell_geometry.interline)
   r = get_cylinder_radius(cell_geometry)
   base = (
       base.faces(">Z")
        .vertices("<XY")</pre>
        .workplane()
        .pushPoints(dot_pos)
        .circle(r)
        .extrude(r)
   )
                                                                            (continues on next page)
```

```
# Make a fillet almost the same radius to get a pseudo spherical cap.
   base = base.faces(">Z").edges().fillet(r - 0.001)
   hidding_box = cq.Workplane("XY").box(
       base_width, base_height, base_thickness, centered=False
   result = hidding_box.union(base)
   return result
_cell_geometry = BrailleCellGeometry(
   horizontal_interdot,
   vertical_interdot,
   horizontal_intercell,
   vertical_interline,
   dot_height,
   dot_diameter,
)
if base_thickness < get_cylinder_radius(_cell_geometry):</pre>
   raise ValueError("Base thickness should be at least {}".format(dot_height))
result = make_embossed_plate(text_lines, _cell_geometry)
```

3.12.32 Panel With Various Connector Holes

```
# The dimensions of the model. These can be modified rather than changing the
# object's code directly.
width = 400
height = 500
thickness = 2
# Create a plate with two polygons cut through it
result = cq.Workplane("front").box(width, height, thickness)
h_sep = 60
for idx in range(4):
   result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(157, 210 - idx * h_sep)
        .moveTo(-23.5, 0)
        .circle(1.6)
        .moveTo(23.5, 0)
        .circle(1.6)
        .moveTo(-17.038896, -5.7)
        .threePointArc((-19.44306, -4.70416), (-20.438896, -2.3))
        .lineTo(-21.25, 2.3)
        .threePointArc((-20.25416, 4.70416), (-17.85, 5.7))
        .lineTo(17.85, 5.7)
        .threePointArc((20.25416, 4.70416), (21.25, 2.3))
        .lineTo(20.438896, -2.3)
        .threePointArc((19.44306, -4.70416), (17.038896, -5.7))
```

```
.close()
        .cutThruAll()
for idx in range(4):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(157, -30 - idx * h_sep)
        .moveTo(-16.65, 0)
        .circle(1.6)
        .moveTo(16.65, 0)
        .circle(1.6)
        .moveTo(-10.1889, -5.7)
        .threePointArc((-12.59306, -4.70416), (-13.5889, -2.3))
        .lineTo(-14.4, 2.3)
        .threePointArc((-13.40416, 4.70416), (-11, 5.7))
        .lineTo(11, 5.7)
        .threePointArc((13.40416, 4.70416), (14.4, 2.3))
        .lineTo(13.5889, -2.3)
        .threePointArc((12.59306, -4.70416), (10.1889, -5.7))
        .close()
        .cutThruAll()
    )
h_sep4DB9 = 30
for idx in range(8):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(91, 225 - idx * h_sep4DB9)
        .moveTo(-12.5, 0)
        .circle(1.6)
        .moveTo(12.5, 0)
        .circle(1.6)
        .moveTo(-6.038896, -5.7)
        .threePointArc((-8.44306, -4.70416), (-9.438896, -2.3))
        .lineTo(-10.25, 2.3)
        .threePointArc((-9.25416, 4.70416), (-6.85, 5.7))
        .lineTo(6.85, 5.7)
        .threePointArc((9.25416, 4.70416), (10.25, 2.3))
        .lineTo(9.438896, -2.3)
        .threePointArc((8.44306, -4.70416), (6.038896, -5.7))
        .close()
        .cutThruAll()
    )
for idx in range(4):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(25, 210 - idx * h_sep)
        .moveTo(-23.5, 0)
        .circle(1.6)
        .moveTo(23.5, 0)
                                                                             (continues on next page)
```

```
.circle(1.6)
        .moveTo(-17.038896, -5.7)
        .threePointArc((-19.44306, -4.70416), (-20.438896, -2.3))
        .lineTo(-21.25, 2.3)
        .threePointArc((-20.25416, 4.70416), (-17.85, 5.7))
        .lineTo(17.85, 5.7)
        .threePointArc((20.25416, 4.70416), (21.25, 2.3))
        .lineTo(20.438896, -2.3)
        .threePointArc((19.44306, -4.70416), (17.038896, -5.7))
        .close()
        .cutThruAll()
   )
for idx in range(4):
   result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(25, -30 - idx * h_sep)
        .moveTo(-16.65, 0)
        .circle(1.6)
        .moveTo(16.65, 0)
        .circle(1.6)
        .moveTo(-10.1889, -5.7)
        .threePointArc((-12.59306, -4.70416), (-13.5889, -2.3))
        .lineTo(-14.4, 2.3)
        .threePointArc((-13.40416, 4.70416), (-11, 5.7))
        .lineTo(11, 5.7)
        .threePointArc((13.40416, 4.70416), (14.4, 2.3))
        .lineTo(13.5889, -2.3)
        .threePointArc((12.59306, -4.70416), (10.1889, -5.7))
        .close()
        .cutThruAll()
   )
for idx in range(8):
   result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(-41, 225 - idx * h_sep4DB9)
        .moveTo(-12.5, 0)
        .circle(1.6)
        .moveTo(12.5, 0)
        .circle(1.6)
        .moveTo(-6.038896, -5.7)
        .threePointArc((-8.44306, -4.70416), (-9.438896, -2.3))
        .lineTo(-10.25, 2.3)
        .threePointArc((-9.25416, 4.70416), (-6.85, 5.7))
        .lineTo(6.85, 5.7)
        .threePointArc((9.25416, 4.70416), (10.25, 2.3))
        .lineTo(9.438896, -2.3)
        .threePointArc((8.44306, -4.70416), (6.038896, -5.7))
        .close()
        .cutThruAll()
   )
```

95

```
for idx in range(4):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(-107, 210 - idx * h_sep)
        .moveTo(-23.5, 0)
        .circle(1.6)
        .moveTo(23.5, 0)
        .circle(1.6)
        .moveTo(-17.038896, -5.7)
        .threePointArc((-19.44306, -4.70416), (-20.438896, -2.3))
        .lineTo(-21.25, 2.3)
        .threePointArc((-20.25416, 4.70416), (-17.85, 5.7))
        .lineTo(17.85, 5.7)
        .threePointArc((20.25416, 4.70416), (21.25, 2.3))
        .lineTo(20.438896, -2.3)
        .threePointArc((19.44306, -4.70416), (17.038896, -5.7))
        .close()
        .cutThruAll()
    )
for idx in range(4):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(-107, -30 - idx * h_sep)
        .circle(14)
        .rect(24.7487, 24.7487, forConstruction=True)
        .vertices()
        .hole(3.2)
        .cutThruAll()
    )
for idx in range(8):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(-173, 225 - idx * h_sep4DB9)
        .moveTo(-12.5, 0)
        .circle(1.6)
        .moveTo(12.5, 0)
        .circle(1.6)
        .moveTo(-6.038896, -5.7)
        .threePointArc((-8.44306, -4.70416), (-9.438896, -2.3))
        .lineTo(-10.25, 2.3)
        .threePointArc((-9.25416, 4.70416), (-6.85, 5.7))
        .lineTo(6.85, 5.7)
        .threePointArc((9.25416, 4.70416), (10.25, 2.3))
        .lineTo(9.438896, -2.3)
        .threePointArc((8.44306, -4.70416), (6.038896, -5.7))
        .close()
        .cutThruAll()
    )
                                                                             (continues on next page)
```

```
for idx in range(4):
    result = (
        result.workplane(offset=1, centerOption="CenterOfBoundBox")
        .center(-173, -30 - idx * h_sep)
        .moveTo(-2.9176, -5.3)
        .threePointArc((-6.05, 0), (-2.9176, 5.3))
        .lineTo(2.9176, 5.3)
        .threePointArc((6.05, 0), (2.9176, -5.3))
        .close()
        .cutThruAll()
)
```

3.12.33 Cycloidal gear

You can define complex geometries using the parametricCurve functionality. This specific examples generates a helical cycloidal gear.

```
import cadquery as cq
from math import sin, cos, pi, floor
# define the generating function
def hypocycloid(t, r1, r2):
   return (
        (r1 - r2) * cos(t) + r2 * cos(r1 / r2 * t - t),
        (r1 - r2) * sin(t) + r2 * sin(-(r1 / r2 * t - t)),
   )
def epicycloid(t, r1, r2):
   return (
        (r1 + r2) * cos(t) - r2 * cos(r1 / r2 * t + t),
        (r1 + r2) * sin(t) - r2 * sin(r1 / r2 * t + t),
   )
def gear(t, r1=4, r2=1):
   if (-1) ** (1 + floor(t / 2 / pi * (r1 / r2))) < 0:
       return epicycloid(t, r1, r2)
   else:
       return hypocycloid(t, r1, r2)
# create the gear profile and extrude it
result = (
   cq.Workplane("XY")
    .parametricCurve(lambda t: gear(t * 2 * pi, 6, 1))
   .twistExtrude(15, 90)
   .faces(">Z")
   .workplane()
    .circle(2)
    .cutThruAll()
```

)

(continued from previous page)

3.13 API Reference

The CadQuery API is made up of 4 main objects:

- Sketch Construct 2D sketches
- Workplane Wraps a topological entity and provides a 2D modelling context.
- **Selector** Filter and select things
- Assembly Combine objects into assemblies.

This page lists methods of these objects grouped by functional area



This page lists api methods grouped by functional area. Use *CadQuery Class Summary* to see methods alphabetically by class.

3.13.1 Sketch initialization

Creating new sketches.

Sketch(parent, locs, obj)	2D sketch.
<pre>Sketch.importDXF(filename[, tol, exclude,])</pre>	Import a DXF file and construct face(s)
Workplane.sketch()	Initialize and return a sketch
Sketch.finalize()	Finish sketch construction and return the parent.
Sketch.copy()	Create a partial copy of the sketch.
Sketch.located(loc)	Create a partial copy of the sketch with a new location.
Sketch.moved()	Create a partial copy of the sketch with moved _faces.

3.13.2 Sketch selection

Selecting, tagging and manipulating elements.

Sketch.tag(tag)	Tag current selection.
Sketch.select(*tags)	Select based on tags.
Sketch.reset()	Reset current selection.
Sketch.delete()	Delete selected object.
Sketch.faces([s, tag])	Select faces.
Sketch.edges([s, tag])	Select edges.
Sketch.vertices([s, tag])	Select vertices.

3.13.3 Sketching with faces

Sketching using the face-based API.

3.13. API Reference 97

Sketch. face(b[, angle, mode, tag,])	Construct a face from a wire or edges.
Sketch.rect(w, h[, angle, mode, tag])	Construct a rectangular face.
Sketch.circle(r[, mode, tag])	Construct a circular face.
Sketch.ellipse(a1, a2[, angle, mode, tag])	Construct an elliptical face.
Sketch.trapezoid(w, h, a1[, a2, angle,])	Construct a trapezoidal face.
Sketch.slot(w, h[, angle, mode, tag])	Construct a slot-shaped face.
Sketch.regularPolygon(r, n[, angle, mode, tag])	Construct a regular polygonal face.
<pre>Sketch.polygon(pts[, angle, mode, tag])</pre>	Construct a polygonal face.
Sketch.rarray(xs, ys, nx, ny)	Generate a rectangular array of locations.
Sketch.parray(r, a1, da, n[, rotate])	Generate a polar array of locations.
<pre>Sketch.distribute(n[, start, stop, rotate])</pre>	Distribute locations along selected edges or wires.
Sketch.each(callback[, mode, tag,])	Apply a callback on all applicable entities.
Sketch.push(locs[, tag])	Set current selection to given locations or points.
Sketch.hull([mode, tag])	Generate a convex hull from current selection or all ob-
	jects.
Sketch.offset(d[, mode, tag])	Offset selected wires or edges.
Sketch.fillet(d)	Add a fillet based on current selection.
Sketch.chamfer(d)	Add a chamfer based on current selection.
Sketch.clean()	Remove internal wires.

3.13.4 Sketching with edges and constraints

Sketching using the edge-based API.

<pre>Sketch.edge(val[, tag, forConstruction])</pre>	Add an edge to the sketch.
Sketch.segment()	Construct a segment.
Sketch.arc()	Construct an arc.
Sketch.spline()	Construct a spline edge.
Sketch.close([tag])	Connect last edge to the first one.
<pre>Sketch.assemble([mode, tag])</pre>	Assemble edges into faces.
Sketch.constrain()	Add a constraint.
Sketch.solve()	Solve current constraints and update edge positions.

3.13.5 Initialization

Creating new workplanes and object chains

Workplane(, obj=None))	Defines a coordinate system in space, in which 2D coor-
	dinates can be used.

3.13.6 2D Operations

Creating 2D constructs that can be used to create 3D features.

All 2D operations require a Workplane object to be created.

Workplane.center(x, y)	Shift local coordinates to the specified location.
<pre>Workplane.lineTo(x, y[, forConstruction])</pre>	Make a line from the current point to the provided point
<pre>Workplane.line(xDist, yDist[, forConstruction])</pre>	Make a line from the current point to the provided point,
	using dimensions relative to the current point
	continues on next page

Table 1 – continued from previous page

	u nom previous page
<pre>Workplane.vLine(distance[, forConstruction])</pre>	Make a vertical line from the current point the provided distance
<pre>Workplane.vLineTo(yCoord[, forConstruction])</pre>	Make a vertical line from the current point to the provided y coordinate.
<pre>Workplane.hLine(distance[, forConstruction])</pre>	Make a horizontal line from the current point the provided distance
<pre>Workplane.hLineTo(xCoord[, forConstruction])</pre>	Make a horizontal line from the current point to the provided x coordinate.
Workplane.polarLine(distance, angle[,])	Make a line of the given length, at the given angle from the current point
Workplane.polarLineTo(distance, angle[,])	Make a line from the current point to the given polar co- ordinates
Workplane.moveTo([x, y])	Move to the specified point, without drawing.
Workplane.move([xDist, yDist])	Move the specified distance from the current point, without drawing.
Workplane.spline(listOfXYTuple[, tangents,])	Create a spline interpolated through the provided points (2D or 3D).
Workplane.parametricCurve(func[, N, start,])	Create a spline curve approximating the provided function.
Workplane.parametricSurface(func[, N,])	Create a spline surface approximating the provided function.
<pre>Workplane.threePointArc(point1, point2[,])</pre>	Draw an arc from the current point, through point1, and ending at point2
Workplane.sagittaArc(endPoint, sag[,])	Draw an arc from the current point to endPoint with an arc defined by the sag (sagitta).
Workplane.radiusArc(endPoint, radius[,])	Draw an arc from the current point to endPoint with an arc defined by the radius.
<pre>Workplane.tangentArcPoint(endpoint[,])</pre>	Draw an arc as a tangent from the end of the current edge to endpoint.
Workplane.mirrorY()	Mirror entities around the y axis of the workplane plane.
<pre>Workplane.mirrorX()</pre>	Mirror entities around the x axis of the workplane plane.
Workplane.wire([forConstruction])	Returns a CQ object with all pending edges connected into a wire.
<pre>Workplane.rect(xLen, yLen[, centered,])</pre>	Make a rectangle for each item on the stack.
<pre>Workplane.circle(radius[, forConstruction])</pre>	Make a circle for each item on the stack.
<pre>Workplane.ellipse(x_radius, y_radius[,])</pre>	Make an ellipse for each item on the stack.
Workplane.ellipseArc(x_radius, y_radius[,])	Draw an elliptical arc with x and y radiuses either with start point at current point or or current point being the center of the arc
<pre>Workplane.polyline(listOfXYTuple[,])</pre>	Create a polyline from a list of points
Workplane.close()	End construction, and attempt to build a closed wire.
Workplane.rarray(xSpacing, ySpacing, xCount,)	Creates an array of points and pushes them onto the stack.
Workplane.polarArray(radius, startAngle,)	Creates a polar array of points and pushes them onto the stack.
<pre>Workplane.slot2D(length, diameter[, angle])</pre>	Creates a rounded slot for each point on the stack.
<pre>Workplane.offset2D(d[, kind, forConstruction])</pre>	Creates a 2D offset wire.
Workplane.placeSketch(*sketches)	Place the provided sketch(es) based on the current items on the stack.

3.13. API Reference 99

3.13.7 3D Operations

Some 3D operations also require an active 2D workplane, but some do not.

3D operations that require a 2D workplane to be active:

** 1 7 1 ** 7 (1)	
	unterbored hole for each item on the stack.
	untersunk hole for each item on the stack.
2 2 1 7 27	le for each item on the stack.
Workplane.extrude(until[, combine, clean,]) Use all un-exprismatic so	extruded wires in the parent chain to create a olid.
	ovided solid from the current solid, IE, per- l subtraction.
	extruded wires in the parent chain to create a aut from existing solid.
	extruded wires in the parent chain to create a aut from existing solid.
Workplane.box(length, width, height[,]) Return a 3d ject on the s	box with specified dimensions for each obstack.
Workplane.sphere(radius[, direct, angle1,]) Returns a 3 point on the	D sphere with the specified radius for each estack.
Workplane.wedge(dx, dy, dz, xmin, zmin,) Returns a 3 each point of	D wedge with the specified dimensions for on the stack.
	ylinder with the specified radius and height nt on the stack
Workplane.union([toUnion, clean, glue, tol]) Unions all current solice	of the items on the stack of toUnion with the d.
Workplane.combine([clean, glue, tol]) Attempts to single item.	combine all of the items on the stack into a
Workplane.intersect(toIntersect[, clean, tol]) Intersects the	ne provided solid from the current solid.
Workplane.loft([ruled, combine, clean]) Make a loft	ed solid, through the set of wires.
Workplane.sweep(path[, multisection,]) Use all unesweept solid.	extruded wires in the parent chain to create a
also twists lextrusion.	wire in the direction normal to the plane, but by the specified angle over the length of the
solid.	revolved wires in the parent chain to create a
Workplane.text(txt, fontsize, distance[,]) Returns a 3	D text.

3D operations that do NOT require a 2D workplane to be active:

Workplane.shell(thickness[, kind])	Remove the selected faces to create a shell of the specified thickness.
Workplane.fillet(radius)	Fillets a solid on the selected edges.
<pre>Workplane.chamfer(length[, length2])</pre>	Chamfers a solid on the selected edges.
Workplane.split()	Splits a solid on the stack into two parts, optionally keeping the separate parts.
Workplane.rotate(axisStartPoint,)	Returns a copy of all of the items on the stack rotated through and angle around the axis of rotation.
<pre>Workplane.rotateAboutCenter(axisEndPoint,)</pre>	Rotates all items on the stack by the specified angle, about the specified axis
Workplane.translate(vec)	Returns a copy of all of the items on the stack moved by the specified translation vector.
<pre>Workplane.mirror([mirrorPlane,])</pre>	Mirror a single CQ object.

3.13.8 File Management and Export

Workplane.toSvg([opts]) Workplane.exportSvg(fileName)	Returns svg text that represents the first item on the stack. Exports the first item on the stack as an SVG file
<pre>importers.importStep(fileName)</pre>	Accepts a file name and loads the STEP file into a cad- query Workplane
<pre>importers.importDXF(filename[, tol,])</pre>	Loads a DXF file into a Workplane.
<pre>exporters.export(w, fname[, exportType,])</pre>	Export Workplane or Shape to file.
<pre>occ_impl.exporters.dxf.DxfDocument([])</pre>	Create DXF document from CadQuery objects.

3.13.9 Iteration Methods

Methods that allow iteration over the stack or objects

Workplane.each(callback[,])	Runs the provided function on each value in the stack, and collects the return values into a new CQ object.
<pre>Workplane.eachpoint(arg[,])</pre>	Same as each(), except arg is translated by the positions on the stack.

3.13.10 Stack and Selector Methods

CadQuery methods that operate on the stack

3.13. API Reference

Workplane.all()	Return a list of all CQ objects on the stack.
Workplane.size()	Return the number of objects currently on the stack
Workplane.vals()	get the values in the current list
Workplane.add()	Adds an object or a list of objects to the stack
Workplane.val()	Return the first value on the stack.
Workplane.first()	Return the first item on the stack
Workplane.item(i)	Return the ith item on the stack.
Workplane.last()	Return the last item on the stack.
Workplane.end([n])	Return the nth parent of this CQ element
<pre>Workplane.vertices([selector, tag])</pre>	Select the vertices of objects on the stack, optionally filtering the selection.
Workplane.faces([selector, tag])	Select the faces of objects on the stack, optionally filtering the selection.
<pre>Workplane.edges([selector, tag])</pre>	Select the edges of objects on the stack, optionally filtering the selection.
Workplane.wires([selector, tag])	Select the wires of objects on the stack, optionally filtering the selection.
<pre>Workplane.solids([selector, tag])</pre>	Select the solids of objects on the stack, optionally filtering the selection.
Workplane.shells([selector, tag])	Select the shells of objects on the stack, optionally filtering the selection.
<pre>Workplane.compounds([selector, tag])</pre>	Select compounds on the stack, optionally filtering the selection.

3.13.11 Selectors

Objects that filter and select CAD objects. Selectors are used to select existing geometry as a basis for further operations.

NearestToPointSelector(pnt) Selects object nearest the provided point. BoxSelector(point0, point1[, boundingbox]) Selects objects inside the 3D box defined by 2 points. BaseDirSelector(vector[, tolerance]) A selector that handles selection on the basis of a single direction vector. ParallelDirSelector(vector[, tolerance]) Selects objects parallel with the provided direction. DirectionSelector(vector[, tolerance]) Selects objects aligned with the provided direction. DirectionNthSelector(vector, n[,]) Filters for objects parallel (or normal) to the specified direction then returns the Nth one. LengthNthSelector(n[, directionMax, tolerance]) Select the object(s) with the Nth length AreaNthSelector(n[, directionMax, tolerance]) Select the object with the Nth radius. PerpendicularDirSelector(vector[, tolerance]) Selects objects perpendicular with the provided direction. TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction. CenterNthSelector(vector, n[, directionMax,]) Sorts objects into a list with order determined by the dis-
BaseDirSelector(vector[, tolerance])A selector that handles selection on the basis of a single direction vector.ParallelDirSelector(vector[, tolerance])Selects objects parallel with the provided direction.DirectionSelector(vector[, tolerance])Selects objects aligned with the provided direction.DirectionNthSelector(vector, n[,])Filters for objects parallel (or normal) to the specified direction then returns the Nth one.LengthNthSelector(n[, directionMax, tolerance])Select the object(s) with the Nth lengthAreaNthSelector(n[, directionMax, tolerance])Selects the object(s) with Nth areaRadiusNthSelector(n[, directionMax, tolerance])Select the object with the Nth radius.PerpendicularDirSelector(vector[, tolerance])Selects objects perpendicular with the provided direction.TypeSelector(typeString)Selects objects having the prescribed geometry type.DirectionMinMaxSelector(vector[,])Selects objects closest or farthest in the specified direction.
direction vector. ParallelDirSelector(vector[, tolerance]) Selects objects parallel with the provided direction. DirectionSelector(vector, tolerance]) Selects objects aligned with the provided direction. DirectionNthSelector(vector, n[,]) Filters for objects parallel (or normal) to the specified direction then returns the Nth one. LengthNthSelector(n[, directionMax, tolerance]) Select the object(s) with the Nth length AreaNthSelector(n[, directionMax, tolerance]) Select the object(s) with Nth area RadiusNthSelector(n[, directionMax, tolerance]) Select the object with the Nth radius. PerpendicularDirSelector(vector[, tolerance]) Selects objects perpendicular with the provided direction. TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
ParallelDirSelector(vector[, tolerance])Selects objects parallel with the provided direction.DirectionSelector(vector[, tolerance])Selects objects aligned with the provided direction.DirectionNthSelector(vector, n[,])Filters for objects parallel (or normal) to the specified direction then returns the Nth one.LengthNthSelector(n[, directionMax, tolerance])Select the object(s) with the Nth lengthAreaNthSelector(n[, directionMax, tolerance])Selects the object(s) with Nth areaRadiusNthSelector(n[, directionMax, tolerance])Select the object with the Nth radius.PerpendicularDirSelector(vector[, tolerance])Selects objects perpendicular with the provided direction.TypeSelector(typeString)Selects objects having the prescribed geometry type.DirectionMinMaxSelector(vector[,])Selects objects closest or farthest in the specified direction.
DirectionSelector(vector[, tolerance]) Selects objects aligned with the provided direction. DirectionNthSelector(vector, n[,]) Filters for objects parallel (or normal) to the specified direction then returns the Nth one. LengthNthSelector(n[, directionMax, tolerance]) Select the object(s) with the Nth length AreaNthSelector(n[, directionMax, tolerance]) Selects the object(s) with Nth area RadiusNthSelector(n[, directionMax, tolerance]) Select the object with the Nth radius. PerpendicularDirSelector(vector[, tolerance]) Selects objects perpendicular with the provided direction. TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
DirectionNthSelector(vector, n[,])Filters for objects parallel (or normal) to the specified direction then returns the Nth one.LengthNthSelector(n[, directionMax, tolerance])Select the object(s) with the Nth lengthAreaNthSelector(n[, directionMax, tolerance])Selects the object(s) with Nth areaRadiusNthSelector(n[, directionMax, tolerance])Select the object with the Nth radius.PerpendicularDirSelector(vector[, tolerance])Selects objects perpendicular with the provided direction.TypeSelector(typeString)Selects objects having the prescribed geometry type.DirectionMinMaxSelector(vector[,])Selects objects closest or farthest in the specified direction.
direction then returns the Nth one. LengthNthSelector(n[, directionMax, tolerance]) AreaNthSelector(n[, directionMax, tolerance]) RadiusNthSelector(n[, directionMax, tolerance]) PerpendicularDirSelector(vector[, tolerance]) TypeSelector(typeString) DirectionMinMaxSelector(vector[,]) direction then returns the Nth one. Select the object(s) with the Nth length Selects the object(s) with Nth area Select the object with the Nth radius. Selects objects perpendicular with the provided direction. Selects objects having the prescribed geometry type. Selects objects closest or farthest in the specified direction.
LengthNthSelector(n[, directionMax, tolerance]) Select the object(s) with the Nth length AreaNthSelector(n[, directionMax, tolerance]) Selects the object(s) with Nth area RadiusNthSelector(n[, directionMax, tolerance]) Select the object with the Nth radius. PerpendicularDirSelector(vector[, tolerance]) Selects objects perpendicular with the provided direction. TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
AreaNthSelector(n[, directionMax, tolerance])Selects the object(s) with Nth areaRadiusNthSelector(n[, directionMax, tolerance])Select the object with the Nth radius.PerpendicularDirSelector(vector[, tolerance])Selects objects perpendicular with the provided direction.TypeSelector(typeString)Selects objects having the prescribed geometry type.DirectionMinMaxSelector(vector[,])Selects objects closest or farthest in the specified direction.
RadiusNthSelector(n[, directionMax, tolerance]) Select the object with the Nth radius. PerpendicularDirSelector(vector[, tolerance]) Selects objects perpendicular with the provided direction. TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
PerpendicularDirSelector(vector[, tolerance]) TypeSelector(typeString) DirectionMinMaxSelector(vector[,]) Selects objects perpendicular with the provided direction. Selects objects having the prescribed geometry type. Selects objects closest or farthest in the specified direction.
tion. TypeSelector(typeString) DirectionMinMaxSelector(vector[,]) Selects objects having the prescribed geometry type. Selects objects closest or farthest in the specified direction.
TypeSelector(typeString) Selects objects having the prescribed geometry type. DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
DirectionMinMaxSelector(vector[,]) Selects objects closest or farthest in the specified direction.
tion.
CenterNthSelector(vector, n[, directionMax]) Sorts objects into a list with order determined by the dis-
total objects into a list with order determined by the dis
tance of their center projected onto the specified direc-
tion.
BinarySelector(left, right) Base class for selectors that operates with two other se-
lectors.
AndSelector(left, right) Intersection selector.
SumSelector(left, right) Union selector.
SubtractSelector(left, right) Difference selector.
InverseSelector(selector) Inverts the selection of given selector.
StringSyntaxSelector(selectorString) Filter lists objects using a simple string syntax.

3.13.12 Assemblies

Workplane and Shape objects can be connected together into assemblies

Assembly([obj, loc, name, color, metadata])	Nested assembly of Workplane and Shape objects defining their relative positions.
Assembly.add()	Add a subassembly to the current assembly.
<pre>Assembly.save(path[, exportType, mode,])</pre>	Save assembly to a file.
Assembly.constrain()	Define a new constraint.
Assembly.solve([verbosity])	Solve the constraints.
Constraint	alias of ConstraintSpec
Color()	Wrapper for the OCCT color object Quantity_ColorRGBA.

3.14 Selectors Reference

CadQuery selector strings allow filtering various types of object lists. Most commonly, Edges, Faces, and Vertices are used, but all objects types can be filtered.

Object lists are created by using the following methods, which each collect a type of shape:

- cadquery.Workplane.vertices()
- cadquery.Workplane.edges()
- cadquery.Workplane.faces()

- cadquery.Workplane.shells()
- cadquery.Workplane.solids()

Each of these methods accepts either a Selector object or a string. String selectors are simply shortcuts for using the full object equivalents. If you pass one of the string patterns in, CadQuery will automatically use the associated selector object.

1 Note

String selectors are simply shortcuts to concrete selector classes, which you can use or extend. For a full description of how each selector class works, see *CadQuery Class Summary*.

If you find that the built-in selectors are not sufficient, you can easily plug in your own. See *Extending CadQuery* to see how.

3.14.1 Combining Selectors

Selectors can be combined logically, currently defined operators include **and**, **or**, **not** and **exc[ept]** (set difference). For example:

```
result = cq.Workplane("XY").box(2, 2, 2).edges("|Z and >Y").chamfer(0.2)
```

Much more complex expressions are possible as well:

```
result = (
    cq.Workplane("XY")
    .box(2, 2, 2)
    .faces(">Z")
    .shell(-0.2)
    .faces(">Z")
    .edges("not(<X or >X or <Y or >Y)")
    .chamfer(0.1)
)
```

3.14.2 Filtering Faces

All types of string selectors work on faces. In most cases, the selector refers to the direction of the **normal vector** of the face.

A Warning

If a face is not planar, selectors are evaluated at the center of mass of the face. This can lead to results that are quite unexpected.

The axis used in the listing below are for illustration: any axis would work similarly in each case.

Selector	Selects	Selector Class
+Z	Faces with normal in +z direction	cadquery.DirectionSelector
Z	Faces with normal parallel to z dir	cadquery.ParallelDirSelector
-X	Faces with normal in neg x direction	cadquery.DirectionSelector
#Z	Faces with normal orthogonal to z dir	cadquery.PerpendicularDirSelector
%Plane	Faces of type plane	cadquery.TypeSelector
>Y	Face farthest in the positive y dir	cadquery.DirectionMinMaxSelector
<y< td=""><td>Face farthest in the negative y dir</td><td>cadquery.DirectionMinMaxSelector</td></y<>	Face farthest in the negative y dir	cadquery.DirectionMinMaxSelector
>Y[-2]	2nd farthest Face normal to the y dir	cadquery.DirectionNthSelector
<y[0]< td=""><td>1st closest Face normal to the y dir</td><td>cadquery.DirectionNthSelector</td></y[0]<>	1st closest Face normal to the y dir	cadquery.DirectionNthSelector
>>Y[-2]	2nd farthest Face in the y dir	cadquery.CenterNthSelector
< <y[0]< td=""><td>1st closest Face in the y dir</td><td>cadquery.CenterNthSelector</td></y[0]<>	1st closest Face in the y dir	cadquery.CenterNthSelector

3.14.3 Filtering Edges

The selector usually refers to the **direction** of the edge.



A Warning

Non-linear edges are not selected for any string selectors except type (%) and center (>>). Non-linear edges are never returned when these filters are applied.

The axis used in the listing below are for illustration: any axis would work similarly in each case.

Selector	Selects	Selector Class
+Z	Edges aligned in the Z direction	cadquery.DirectionSelector
Z	Edges parallel to z direction	cadquery.ParallelDirSelector
-X	Edges aligned in neg x direction	cadquery.DirectionSelector
#Z	Edges perpendicular to z direction	cadquery.PerpendicularDirSelector
%Line	Edges of type line	cadquery.TypeSelector
>Y	Edges farthest in the positive y dir	cadquery.DirectionMinMaxSelector
<y< td=""><td>Edges farthest in the negative y dir</td><td>cadquery.DirectionMinMaxSelector</td></y<>	Edges farthest in the negative y dir	cadquery.DirectionMinMaxSelector
>Y[1]	2nd closest parallel edge in the positive y dir	cadquery.DirectionNthSelector
<y[-2]< td=""><td>2nd farthest parallel edge in the negative y dir</td><td>cadquery.DirectionNthSelector</td></y[-2]<>	2nd farthest parallel edge in the negative y dir	cadquery.DirectionNthSelector
>>Y[-2]	2nd farthest edge in the y dir	cadquery.CenterNthSelector
< <y[0]< td=""><td>1st closest edge in the y dir</td><td>cadquery.CenterNthSelector</td></y[0]<>	1st closest edge in the y dir	cadquery.CenterNthSelector

3.14.4 Filtering Vertices

Only a few of the filter types apply to vertices. The location of the vertex is the subject of the filter.

Selector	Selects	Selector Class
>Y	Vertices farthest in the positive y dir	cadquery.DirectionMinMaxSelector
<y< th=""><th>Vertices farthest in the negative y dir</th><th>cadquery.DirectionMinMaxSelector</th></y<>	Vertices farthest in the negative y dir	cadquery.DirectionMinMaxSelector
>>Y[-2]	2nd farthest vertex in the y dir	cadquery.CenterNthSelector
< <y[0]< th=""><th>1st closest vertex in the y dir</th><th>cadquery.CenterNthSelector</th></y[0]<>	1st closest vertex in the y dir	cadquery.CenterNthSelector

3.14.5 User-defined Directions

It is possible to use user defined vectors as a basis for the selectors. For example:

```
result = cq.Workplane("XY").box(10, 10, 10)

# chamfer only one edge
result = result.edges(">(-1, 1, 0)").chamfer(1)
```

3.14.6 Topological Selectors

Is is also possible to use topological relations to select objects. Currently the following methods are supported:

- cadquery.Workplane.ancestors()
- cadquery.Workplane.siblings()

Ancestors allows to select all objects containing currently selected object.

```
result = cq.Workplane("XY").box(10, 10, 10).faces(">Z").edges("<Y")
result = result.ancestors("Face")</pre>
```

Siblings allows to select all objects of the same type as selection that are connected via the specified kind of elements.

```
result = cq.Workplane("XY").box(10, 10, 10).faces(">Z")
result = result.siblings("Edge")
```

3.14.7 Using selectors with Shape and Sketch objects

It is possible to use selectors with *cadquery.Shape* and *cadquery.Sketch* objects. This includes chaining and combining.

```
box = cq.Solid.makeBox(1,2,3)

# select top and bottom wires
result = box.faces(">Z or <Z").wires()</pre>
```

3.14.8 Additional special methods

cadquery. Workplane and cadquery. Sketch provide the following special methods that can be used for quick prototyping of selectors when implementing a complete selector via subclassing of cadquery. Selector is not desirable.

- cadquery.Workplane.filter()
- cadquery.Workplane.sort()
- cadquery.Workplane.__getitem__()
- cadquery.Sketch.filter()
- cadquery.Sketch.sort()
- cadquery.Sketch.__getitem__()

For example, one could use those methods for selecting objects within a certain range of volumes.

```
from cadquery.occ_impl.shapes import box

result = (
    cq.Workplane()
    .add([box(1,1,i+1).moved(x=2*i) for i in range(5)])
)

# select boxes with volume <= 3
result = result.filter(lambda s: s.Volume() <= 3)</pre>
```

The same can be achieved using sorting.

```
from cadquery.occ_impl.shapes import box

result = (
    cq.Workplane()
    .add([box(1,1,i+1).moved(x=2*i) for i in range(5)])
)

# select boxes with volume <= 3
result = result.sort(lambda s: s.Volume())[:3]</pre>
```

3.15 CadQuery Class Summary

This page documents all of the methods and functions of the CadQuery classes, organized alphabetically.

```
➢ See alsoFor a listing organized by functional area, see the API Reference
```

3.15.1 Core Classes

Sketch(parent, locs, obj)	2D sketch.
Workplane(, obj=None))	Defines a coordinate system in space, in which 2D coordinates can be used.
Assembly([obj, loc, name, color, metadata])	Nested assembly of Workplane and Shape objects defining their relative positions.
Constraint	alias of ConstraintSpec

3.15.2 Topological Classes

Shape(obj)	Represents a shape in the system.
<pre>Vertex(obj[, forConstruction])</pre>	A Single Point in Space
Edge(obj)	A trimmed curve that represents the border of a face
<pre>cadquery.occ_impl.shapes.Mixin1D()</pre>	
Wire(obj)	A series of connected, ordered Edges, that typically bounds a Face
Face(obj)	a bounded surface that represents part of the boundary of a solid
Shell(obj)	the outer boundary of a surface
<pre>cadquery.occ_impl.shapes.Mixin3D()</pre>	
Solid(obj)	a single solid
Compound(obj)	a collection of disconnected solids

3.15.3 Geometry Classes

Vector()	Create a 3-dimensional vector
Matrix()	A 3d, 4x4 transformation matrix.
<pre>Plane(origin[, xDir, normal])</pre>	A 2D coordinate system in space
Location(t)	Location in 3D space.

3.15.4 Selector Classes

Selector()	Filters a list of objects.
NearestToPointSelector(pnt)	Selects object nearest the provided point.
<pre>BoxSelector(point0, point1[, boundingbox])</pre>	Selects objects inside the 3D box defined by 2 points.
BaseDirSelector(vector[, tolerance])	A selector that handles selection on the basis of a single direction vector.
<pre>ParallelDirSelector(vector[, tolerance])</pre>	Selects objects parallel with the provided direction.
<pre>DirectionSelector(vector[, tolerance])</pre>	Selects objects aligned with the provided direction.
PerpendicularDirSelector(vector[, tolerance])	Selects objects perpendicular with the provided direction.
TypeSelector(typeString)	Selects objects having the prescribed geometry type.
<pre>RadiusNthSelector(n[, directionMax, tolerance])</pre>	Select the object with the Nth radius.
<pre>CenterNthSelector(vector, n[, directionMax,])</pre>	Sorts objects into a list with order determined by the dis-
	tance of their center projected onto the specified direc-
	tion.
<pre>DirectionMinMaxSelector(vector[,])</pre>	Selects objects closest or farthest in the specified direction.
<pre>DirectionNthSelector(vector, n[,])</pre>	Filters for objects parallel (or normal) to the specified direction then returns the Nth one.
<pre>LengthNthSelector(n[, directionMax, tolerance])</pre>	Select the object(s) with the Nth length
<pre>AreaNthSelector(n[, directionMax, tolerance])</pre>	Selects the object(s) with Nth area
BinarySelector(left, right)	Base class for selectors that operates with two other se-
	lectors.
AndSelector(left, right)	Intersection selector.
SumSelector(left, right)	Union selector.
SubtractSelector(left, right)	Difference selector.
InverseSelector(selector)	Inverts the selection of given selector.
<pre>StringSyntaxSelector(selectorString)</pre>	Filter lists objects using a simple string syntax.

3.15.5 Class Details

class cadquery. Assembly (obj: Shape | Workplane | None = None, loc: Location | None = None, name: str | None = None, color: Color | None = None, metadata: Dict[str, Any] | None = None)

Bases: object

Nested assembly of Workplane and Shape objects defining their relative positions.

Parameters

- obj (Shape / Workplane / None)
- loc (Location)
- name (str)
- color (Color / None)
- metadata(Dict[str, Any])

__init__(obj: Shape | Workplane | None = None, loc: Location | None = None, name: str | None = None, color: Color | None = None, metadata: Dict[str, Any] | None = None)

construct an assembly

Parameters

• **obj** (Shape / Workplane / None) – root object of the assembly (default: None)

- **loc** (Location / None) location of the root object (default: None, interpreted as identity transformation)
- name (str / None) unique name of the root object (default: None, resulting in an UUID being generated)
- **color** (Color / None) color of the added object (default: None)
- metadata (Dict[str, Any] | None) a store for user-defined metadata (default: None)

Returns

An Assembly object.

To create an empty assembly use:

```
assy = Assembly(None)
```

To create one constraint a root object:

```
 b = Workplane().box(1, 1, 1) 
 assy = Assembly(b, Location(Vector(0, 0, 1)), name="root")
```

__iter__(loc: Location | $None = None, name: str | None = None, color: Color | None = None) <math>\rightarrow$ Iterator[Tuple[Shape, str, Location, Color | None]]

Assembly iterator yielding shapes, names, locations and colors.

Parameters

- loc (Location / None)
- name (str | None)
- color (Color / None)

Return type

Iterator[Tuple[Shape, str, Location, Color | None]]

__weakref__

list of weak references to the object (if defined)

- add(obj: Assembly, loc: Location | None = None, name: $str \mid None = None$, $color: Color \mid None = None$) \rightarrow Assembly
- **add**(obj: Shape | Workplane | None, loc: Location | None = None, name: $str \mid None = None$, color: Color | None = None, metadata: Dict[str, Any] | None = None) \rightarrow Assembly

Add a subassembly to the current assembly.

- $\begin{aligned} \textbf{constrain}(q1: str, q2: str, kind: Literal['Plane', 'Point', 'Axis', 'PointInPlane', 'Fixed', 'FixedPoint', 'FixedAxis', 'PointOnLine', 'FixedRotation'], param: Any = None) \rightarrow Assembly \end{aligned}$
- **constrain**(q1: str, kind: Literal['Plane', 'Point', 'Axis', 'PointInPlane', 'Fixed', 'FixedPoint', 'FixedAxis', 'PointOnLine', 'FixedRotation'], param: <math>Any = None) $\rightarrow Assembly$
- **constrain**(id1: str, s1: Shape, id2: str, s2: Shape, kind: Literal['Plane', 'Point', 'Axis', 'PointInPlane', 'Fixed', 'FixedPoint', 'FixedAxis', 'PointOnLine', 'FixedRotation'], param: Any = None) $\rightarrow Assembly$
- **constrain**(id1: str, s1: Shape, kind: Literal['Plane', 'Point', 'Axis', 'PointInPlane', 'FixedPoint', 'FixedAxis', 'PointOnLine', 'FixedRotation'], param: Any = None) $\rightarrow Assembly$

Define a new constraint.

export(path: str, exportType: Literal['STEP', 'XML', 'GLTF', 'VTKJS', 'VRML', 'STL'] | None = None, mode: Literal['default', 'fused'] = 'default', tolerance: float = 0.1, angularTolerance: float = 0.1, **kwargs) \rightarrow Assembly

Save assembly to a file.

Parameters

- path (str) Path and filename for writing.
- **exportType** (*Literal['STEP'*, 'XML', 'GLTF', 'VTKJS', 'VRML', 'STL'] | None) export format (default: None, results in format being inferred form the path)
- mode (Literal ['default', 'fused']) STEP only See exportAssembly().
- **tolerance** (*float*) the deflection tolerance, in model units. Only used for glTF, VRML. Default 0.1.
- angularTolerance (float) the angular tolerance, in radians. Only used for glTF, VRML. Default 0.1.
- **kwargs Additional keyword arguments. Only used for STEP, glTF and STL. See exportAssembly().
- ascii (bool) STL only Sets whether or not STL export should be text or binary

Return type

Assembly

save(path: str, exportType: Literal['STEP', 'XML', 'GLTF', 'VTKJS', 'VRML', 'STL'] | None = None, mode: Literal['default', 'fused'] = 'default', tolerance: float = 0.1, angularTolerance: float = 0.1, **kwargs') \rightarrow Assembly

Save assembly to a file.

Parameters

- path (str) Path and filename for writing.
- **exportType** (*Literal['STEP'*, 'XML', 'GLTF', 'VTKJS', 'VRML', 'STL'] | None) export format (default: None, results in format being inferred form the path)
- mode (Literal ['default', 'fused']) STEP only See exportAssembly().
- **tolerance** (*float*) the deflection tolerance, in model units. Only used for glTF, VRML. Default 0.1.
- angularTolerance (*float*) the angular tolerance, in radians. Only used for glTF, VRML. Default 0.1.
- **kwargs Additional keyword arguments. Only used for STEP, glTF and STL. See exportAssembly().
- ascii (bool) STL only Sets whether or not STL export should be text or binary

Return type

Assembly

property shapes: List[Shape]

List of Shape objects in the .obj field

solve(*verbosity:* int = 0) $\rightarrow Assembly$

Solve the constraints.

Parameters

verbosity(int)

Return type

Assembly

```
toCompound() \rightarrow Compound
```

Returns a Compound made from this Assembly (including all children) with the current Locations applied. Usually this method would only be used after solving.

Return type

Compound

 $traverse() \rightarrow Iterator[Tuple[str, Assembly]]$

Yield (name, child) pairs in a bottom-up manner

Return type

Iterator[Tuple[str, Assembly]]

class cadquery.BoundBox(bb: Bnd_Box)

Bases: object

A BoundingBox for an object or set of objects. Wraps the OCP one

Parameters

bb (Bnd_Box)

```
__init__(bb: Bnd Box) \rightarrow None
```

Parameters

bb (Bnd_Box)

Return type

None

```
__weakref__
```

list of weak references to the object (if defined)

 $add(obj: Tuple[float, float] \mid Vector \mid BoundBox, tol: float \mid None = None) \rightarrow BoundBox$

Returns a modified (expanded) bounding box

obj can be one of several things:

- 1. a 3-tuple corresponding to x,y, and z amounts to add
- 2. a vector, containing the x,y,z values to add
- 3. another bounding box, where a new box will be created that encloses both.

This bounding box is not changed.

Parameters

- **obj** (Tuple[float, float, float] / Vector / BoundBox)
- tol (float | None)

Return type

BoundBox

```
enlarge(tol: float) \rightarrow BoundBox
```

Returns a modified (expanded) bounding box, expanded in all directions by the tolerance value.

This means that the minimum values of its X, Y and Z intervals of the bounding box are reduced by the absolute value of tol, while the maximum values are increased by the same amount.

```
tol (float)
               Return type
                    BoundBox
     static findOutsideBox2D(bb1: BoundBox, bb2: BoundBox) \rightarrow BoundBox | None
           Compares bounding boxes
           Compares bounding boxes. Returns none if neither is inside the other. Returns the outer one if either is
           outside the other.
           BoundBox.isInside works in 3d, but this is a 2d bounding box, so it doesn't work correctly plus, there was
           all kinds of rounding error in the built-in implementation i do not understand.
               Parameters
                    • bb1 (BoundBox)
                    • bb2 (BoundBox)
               Return type
                    BoundBox | None
     isInside(b2: BoundBox) \rightarrow bool
           Is the provided bounding box inside this one?
               Parameters
                   b2 (BoundBox)
               Return type
                   bool
cadquery.CQ
     alias of Workplane
class cadquery.Color(name: str)
class cadquery.Color(r: float, g: float, b: float, a: float = 0)
class cadquery.Color
     Bases: object
     Wrapper for the OCCT color object Quantity_ColorRGBA.
      __eq__(other)
           Return self==value.
     __hash__()
           Return hash(self).
     __init__(name: str)
     __init__(r: float, g: float, b: float, a: float = 0)
      __init__()
     __weakref__
           list of weak references to the object (if defined)
     toTuple() \rightarrow Tuple[float, float, float, float]
           Convert Color to RGB tuple.
               Return type
                   Tuple[float, float, float, float]
```

```
class cadquery.Compound(obj: TopoDS_Shape)
     Bases: Shape, Mixin3D
     a collection of disconnected solids
           Parameters
               obj (TopoDS_Shape)
      __bool__() → bool
           Check if empty.
               Return type
                   bool
     ancestors(shape: Shape, kind: Literal] 'Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
                  'Compound']) \rightarrow Compound
           Iterate over ancestors, i.e. shapes of same kind within shape that contain elements of self.
               Parameters
                   • shape (Shape)
                   kind
                                         (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                      'CompSolid', 'Compound'])
               Return type
                   Compound
     cut(*toCut: Shape, tol: float | None = None) \rightarrow Compound
           Remove the positional arguments from this Shape.
               Parameters
                   • tol (float / None) – Fuzzy mode tolerance
                   • toCut (Shape)
               Return type
                   Compound
     fuse(*toFuse: Shape, glue: bool = False, tol: float | None = None) \rightarrow Compound
           Fuse shapes together
               Parameters
                   • toFuse (Shape)
                   • glue (bool)
                   • tol (float | None)
               Return type
                   Compound
     intersect(*toIntersect: Shape, tol: float | None = None) \rightarrow Compound
           Intersection of the positional arguments and this Shape.
               Parameters
                   • tol (float / None) – Fuzzy mode tolerance
                   • toIntersect (Shape)
               Return type
```

Compound

```
classmethod makeCompound(listOfShapes: Iterable[Shape]) \rightarrow Compound
           Create a compound out of a list of shapes
               Parameters
                   listOfShapes (Iterable[Shape])
               Return type
                    Compound
      classmethod makeText(text: str, size: float, height: float, font: str = 'Arial', fontPath: str | None = None,
                                kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left',
                                'right'] = 'center', valign: Literal['center', 'top', 'bottom'] = 'center', position: Plane
                                = Plane(origin=(0.0, 0.0, 0.0), xDir=(1.0, 0.0, 0.0), normal=(0.0, 0.0, 1.0))) \rightarrow
                                Shape
           Create a 3D text
               Parameters

    text (str)

                    • size (float)
                    • height (float)
                    • font (str)
                    • fontPath(str | None)
                    • kind (Literal ['regular', 'bold', 'italic'])
                    • halign (Literal['center', 'left', 'right'])
                    • valign(Literal['center', 'top', 'bottom'])
                    • position (Plane)
               Return type
                    Shape
      remove(shape: Shape)
           Remove the specified shape.
               Parameters
                    shape (Shape)
      siblings(shape: Shape, kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
                 'Compound'], level: int = 1) \rightarrow Compound
           Iterate over siblings, i.e. shapes within shape that share subshapes of kind with the elements of self.
               Parameters
                    • shape (Shape)

    kind

                                          (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                      'CompSolid', 'Compound'])
                    • level (int)
               Return type
                    Compound
cadquery.Constraint
      alias of ConstraintSpec
```

Bases: CenterNthSelector

Selects objects closest or farthest in the specified direction.

Applicability:

All object types. for a vertex, its point is used. for all other kinds of objects, the center of mass of the object is used

You can use the string shortcuts >(X|Y|Z) or <(X|Y|Z) if you want to select based on a cardinal direction.

For example this:

```
CQ(aCube).faces(DirectionMinMaxSelector((0, 0, 1), True))
```

Means to select the face having the center of mass farthest in the positive z direction, and is the same as:

```
CQ(aCube).faces(">Z")
```

Parameters

- vector (Vector)
- directionMax (bool)
- tolerance (float)

__init__(vector: Vector, directionMax: bool = True, tolerance: float = 0.0001)

Parameters

- vector (Vector)
- directionMax (bool)
- tolerance (float)

class cadquery.DirectionSelector(vector: Vector, tolerance: float = 0.0001)

Bases: BaseDirSelector

Selects objects aligned with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut $\pm /-(X|Y|Z)$ if you want to select based on a cardinal direction.

Example:

```
CQ(aCube).faces(DirectionSelector((0, 0, 1)))
```

selects faces with the normal in the z direction, and is equivalent to:

```
CQ(aCube).faces("+Z")
```

- vector (Vector)
- tolerance (float)

```
test(vec: Vector) → bool

Test a specified vector. Subclasses override to provide other implementations

Parameters
vec (Vector)

Return type
bool

class cadquery.Edge(obj: TopoDS_Shape)

Bases: Shape, Mixin1D

A trimmed curve that represents the border of a face

Parameters
obj (TopoDS_Shape)

arcCenter() → Vector
```

Return type

Vector

 $close() \rightarrow Edge \mid Wire$

Close an Edge

Return type

Edge | Wire

classmethod makeBezier(points: List[Vector]) $\rightarrow Edge$

Center of an underlying circle or ellipse geometry.

Create a cubic Bézier Curve from the points.

Parameters

points (*List* [Vector]) – a list of Vectors that represent the points. The edge will pass through the first and the last point, and the inner points are Bézier control points.

Returns

An edge

Return type

Edge

```
classmethod makeEllipse(x_radius: float, y_radius: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), xdir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (1.0, 0.0, 0.0), angle1: float = 360.0, angle2: float = 360.0, sense: ~typing.Literal[-1, 1] = 1) \rightarrow Edge
```

Makes an Ellipse centered at the provided point, having normal in the provided direction.

- cls
- **x_radius** (*float*) x radius of the ellipse (along the x-axis of plane the ellipse should lie in)
- **y_radius** (*float*) y radius of the ellipse (along the y-axis of plane the ellipse should lie in)

- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the center of the ellipse
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the direction of the plane the ellipse should lie in
- angle1 (float) start angle of arc
- angle2 (float) end angle of arc (angle2 == angle1 return closed ellipse = default)
- sense (Literal[-1, 1]) clockwise (-1) or counter clockwise (1)
- xdir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Returns

an Edge

Return type

Edge

classmethod makeLine(v1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Edge

Create a line between two points

Parameters

- v1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Vector that represents the first point
- v2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Vector that represents the second point

Returns

A linear edge between the two provided points

Return type

Edge

classmethod makeSpline(listOfVector: List[Vector], tangents: Sequence[Vector] | None = None, periodic: bool = False, parameters: Sequence[float] | None = None, scale: bool = True, tol: float = 1e-06) $\rightarrow Edge$

Interpolate a spline through the provided points.

- **listOfVector** (*List* [Vector]) a list of Vectors that represent the points
- tangents (Sequence[Vector] / None) tuple of Vectors specifying start and finish tangent
- **periodic** (bool) creation of periodic curves
- parameters (Sequence[float] / None) the value of the parameter at each interpolation point. (The interpolated curve is represented as a vector-valued function of a scalar parameter.) If periodic == True, then len(parameters) must be len(interpolation points) + 1, otherwise len(parameters) must be equal to len(interpolation points).
- **scale** (*boo1*) whether to scale the specified tangent vectors before interpolating. Each tangent is scaled, so it's length is equal to the derivative of the Lagrange interpolated curve. I.e., set this to True, if you want to use only the direction of the tangent vectors specified by tangents, but not their magnitude.

• **tol** (*float*) – tolerance of the algorithm (consult OCC documentation). Used to check that the specified points are not too close to each other, and that tangent vectors are not too short. (In either case interpolation may fail.)

Returns

an Edge

Return type

Edge

classmethod makeSplineApprox(listOfVector: List[Vector], tol: float = 0.001, smoothing: Tuple[float, float, float] | None = None, minDeg: int = 1, maxDeg: int = 6) \rightarrow Edge

Approximate a spline through the provided points.

Parameters

- **listOfVector** (*List* [Vector]) a list of Vectors that represent the points
- **tol** (*float*) tolerance of the algorithm (consult OCC documentation).
- **smoothing** (*Tuple[float, float, float] | None*) optional tuple of 3 weights use for variational smoothing (default: None)
- **minDeg** (*int*) minimum spline degree. Enforced only when smothing is None (default: 1)
- maxDeg (int) maximum spline degree (default: 6)

Returns

an Edge

Return type

Edge

classmethod makeTangentArc(v1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v3: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) $\rightarrow Edge$

Makes a tangent arc from point v1, in the direction of v2 and ends at v3.

Parameters

- cls
- v1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) start vector
- v2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) tangent vector
- v3 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) end vector

Returns

an edge

Return type

Edge

classmethod makeThreePointArc($v1: Vector \mid Tuple[int \mid float, int \mid float] \mid Tuple[int \mid float, int \mid float, int \mid float], <math>v2: Vector \mid Tuple[int \mid float, int \mid float] \mid Tuple[int \mid float, int \mid float, int \mid float], <math>v3: Vector \mid Tuple[int \mid float, int \mid float] \mid Tuple[int \mid float, int \mid float, int \mid float]) \rightarrow Edge$

Makes a three point arc through the provided points

```
Parameters
```

- cls
- v1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) start vector
- v2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) middle vector
- v3 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) end vector

Returns

an edge object through the three points

Return type

Edge

trim(u0: float | int, u1: float | int) $\rightarrow Edge$

Trim the edge in the parametric space to (u0, u1).

NB: this operation is done on the base geometry.

Parameters

- **u0** (float | int)
- **u1** (float | int)

Return type

Edge

class cadquery.Face(obj: TopoDS_Shape)

Bases: Shape

a bounded surface that represents part of the boundary of a solid

Parameters

obj (TopoDS_Shape)

Center() → *Vector*

Returns

The point of the center of mass of this Shape

Return type

Vector

chamfer2D($d: float, vertices: Iterable[Vertex]) \rightarrow Face$

Apply 2D chamfer to a face

Parameters

- **d** (float)
- vertices (Iterable[Vertex])

Return type

Face

```
fillet2D(radius: float, vertices: Iterable[Vertex]) <math>\rightarrow Face
     Apply 2D fillet to a face
         Parameters
              • radius (float)
              • vertices (Iterable [Vertex])
         Return type
              Face
isoline(param: float | int, direction: Literal['u', 'v'] = 'v') \rightarrow Edge
     Construct an isoline.
         Parameters
              • param (float | int)
              • direction (Literal['u', 'v'])
         Return type
              Edge
isolines(params: Iterable[float | int], direction: Literal['u', 'v'] = 'v') \rightarrow List[Edge]
     Construct multiple isolines.
         Parameters
              • params (Iterable[float | int])
              • direction (Literal['u', 'v'])
         Return type
              List[Edge]
classmethod makeFromWires (outerWire: Wire, innerWires: List[Wire] = []) \rightarrow Face
     Makes a planar face from one or more wires
         Parameters
              • outerWire (Wire)
              • innerWires (List[Wire])
         Return type
              Face
classmethod makeNSidedSurface(edges: ~typing.Iterable[~cadquery.occ_impl.shapes.Edge |
                                      ~cadquery.occ impl.shapes.Wire], constraints:
                                      ~typing.Iterable[~cadquery.occ impl.shapes.Edge |
                                      ~cadquery.occ_impl.shapes.Wire | ~cadquery.occ_impl.geom.Vector |
                                      ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float,
                                      int | float] | ~OCP.gp.gp_Pnt], continuity:
                                      \sim OCP. GeomAbs. GeomAbs_Shape = < GeomAbs_Shape. GeomAbs_CO:
                                      0>, degree: int = 3, nbPtsOnCur: int = 15, nbIter: int = 2, anisotropy:
                                      bool = False, tol2d: float = 1e-05, tol3d: float = 0.0001, tolAng: float
                                      = 0.01, tolCurv: float = 0.1, maxDeg: int = 8, maxSegments: int = 9)
                                      \rightarrow Face
```

Returns a surface enclosed by a closed polygon defined by 'edges' and 'constraints'.

Parameters

• edges (list of edges or wires) - edges

- constraints (list of points or edges) constraints
- **continuity** (*GeomAbs_Shape*) OCC.Core.GeomAbs continuity condition
- **degree** (*int*) ->=2
- **nbPtsOnCur** (*int*) number of points on curve >= 15
- **nbIter** (*int*) number of iterations >= 2
- anisotropy (bool) bool Anisotropy
- **tol2d** (*float*) 2D tolerance >0
- tol3d (float) 3D tolerance >0
- tolAng (float) angular tolerance
- tolCurv (float) tolerance for curvature >0
- maxDeg (int) highest polynomial degree >= 2
- maxSegments (int) greatest number of segments >= 2

Return type

Face

```
classmethod makeRuledSurface(edgeOrWire1: Edge, edgeOrWire2: Edge) \rightarrow Face classmethod makeRuledSurface(edgeOrWire1: Wire, edgeOrWire2: Wire) \rightarrow Face
```

makeRuledSurface(Edge|Wire,Edge|Wire) – Make a ruled surface Create a ruled surface out of two edges or wires. If wires are used then these must have the same number of edges

classmethod makeSplineApprox(points: List[List[Vector]], tol: float = 0.01, smoothing: Tuple[float, float, float] | None = None, minDeg: int = 1, maxDeg: int = 3) \rightarrow Face

Approximate a spline surface through the provided points.

Parameters

- points (List[Vector]]) a 2D list of Vectors that represent the points
- **tol** (*float*) tolerance of the algorithm (consult OCC documentation).
- **smoothing** (*Tuple[float, float, float] | None*) optional tuple of 3 weights use for variational smoothing (default: None)
- **minDeg** (*int*) minimum spline degree. Enforced only when smothing is None (default: 1)
- maxDeg (int) maximum spline degree (default: 6)

Return type

Face

```
normalAt(u: float | int, v: float | int) \rightarrow Tuple[Vector, Vector]
```

Computes the normal vector at the desired location on the face.

Returns

a vector representing the direction

Parameters

locationVector (a vector that lies on the surface.) – the location to compute the normal at. If none, the center of the face is used.

Return type

Vector

Computes the normal vector at the desired location in the u,v parameter space.

Returns

a vector representing the normal direction and the position

Parameters

- \mathbf{u} the u parametric location to compute the normal at.
- \mathbf{v} the v parametric location to compute the normal at.
- locationVector (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] | None)

Return type

Vector

 $normals(us: Iterable[float | int], vs: Iterable[float | int]) \rightarrow Tuple[List[Vector], List[Vector]]$

Computes the normal vectors at the desired locations in the u,v parameter space.

Returns

a tuple of list of vectors representing the normal directions and the positions

Parameters

- **us** (*Iterable*[*float* / *int*]) the u parametric locations to compute the normal at.
- vs (Iterable[float | int]) the v parametric locations to compute the normal at.

Return type

Tuple[*List*[Vector], *List*[Vector]]

thicken(*thickness: float*) \rightarrow *Solid*

Return a thickened face

Parameters

thickness (float)

Return type

Solid

toArcs(tolerance: float = 0.001) $\rightarrow Face$

Approximate planar face with arcs and straight line segments.

Parameters

tolerance (*float*) – Approximation tolerance.

Return type

Face

 $toPln() \rightarrow gp_Pln$

Convert this face to a gp_Pln.

Note the Location of the resulting plane may not equal the center of this face, however the resulting plane will still contain the center of this face.

Return type

 gp_Pln

```
trim(u0: float | int, u1: float | int, v0: float | int, v1: float | int, tol: float | int = 1e-06) \rightarrow Face Trim the face in the parametric space to (u0, u1).
```

NB: this operation is done on the base geometry.

Parameters

- **u0** (float | int)
- **u1**(float | int)
- **v0** (float | int)
- **v1**(float | int)
- tol (float | int)

Return type

Face

class cadquery.Location(t: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Bases: object

Location in 3D space. Depending on usage can be absolute or relative.

This class wraps the TopLoc_Location class from OCCT. It can be used to move Shape objects in both relative and absolute manner. It is the preferred type to locate objects in CQ.

Parameters

```
t (Vector | Tuple[int | float, int | float] | Tuple[int | float, int |
float, int | float])
```

- **__init__**($T: TopLoc_Location$) \rightarrow None
- __init__(t: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], ax: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], angle: int | float) → None
- **__init__**(t: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], angles: Tuple[int | float, int | float, int | float]) \rightarrow None
- **__init__**(t: Plane) \rightarrow None
- **__init__**(x: int | float = 0, y: int | float = 0, z: int | float = 0, rx: int | float = 0, ry: int | float = 0, rz: int | float = 0, rz: int |
- **__init__**($T: gp_Trsf$) \rightarrow None
- $_$ **init** $_$ (t: Plane, v: Vector | $Tuple[int | float, int | float] | <math>Tuple[int | float, int | float, int | float]) <math>\rightarrow$ None
- **__init__**(t: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow None

Location with translation t with respect to the original location.

Location with translation (x,y,z) and 3 rotation angles.

Location corresponding to the location of the Plane t.

Location corresponding to the angular location of the Plane t with translation v.

Location wrapping the low-level TopLoc_Location object t

Location wrapping the low-level gp_Trsf object t

Location with translation t and rotation around ax by angle

with respect to the original location.

Location with translation t and 3 rotation angles.

```
Parameters
                   t (Vector | Tuple[int | float, int | float] | Tuple[int | float, int |
                    float, int | float])
               Return type
                    None
      weakref
           list of weak references to the object (if defined)
      toTuple() → Tuple[Tuple[float, float], Tuple[float, float]]
           Convert the location to a translation, rotation tuple.
               Return type
                    Tuple[float, float, float], Tuple[float, float, float]]
class cadquery.Matrix
class cadquery.Matrix(matrix: gp_GTrsf | gp_Trsf)
class cadquery.Matrix(matrix: Sequence[Sequence[float]])
      Bases: object
      A 3d, 4x4 transformation matrix.
      Used to move geometry in space.
      The provided "matrix" parameter may be None, a gp_GTrsf, or a nested list of values.
      If given a nested list, it is expected to be of the form:
           [[m11, m12, m13, m14],
               [m21, m22, m23, m24], [m31, m32, m33, m34]]
      A fourth row may be given, but it is expected to be: [0.0, 0.0, 0.0, 1.0] since this is a transform matrix.
      __getitem__(rc: Tuple[int, int]) \rightarrow float
           Provide Matrix[r, c] syntax for accessing individual values. The row and column parameters start at zero,
           which is consistent with most python libraries, but is counter to gp_GTrsf(), which is 1-indexed.
               Parameters
                   rc (Tuple[int, int])
               Return type
                    float
      __init__() \rightarrow None
      __init__(matrix: gp\_GTrsf \mid gp\_Trsf) \rightarrow None
      __init__(matrix: Sequence[Sequence[float]]) \rightarrow None
      \_repr\_() \rightarrow str
           Generate a valid python expression representing this Matrix
               Return type
                    str
      __weakref__
           list of weak references to the object (if defined)
      transposed_list() → Sequence[float]
           Needed by the caparts gltf exporter
```

Return type

Sequence[float]

class cadquery.NearestToPointSelector(pnt)

Bases: Selector

Selects object nearest the provided point.

If the object is a vertex or point, the distance is used. For other kinds of shapes, the center of mass is used to to compute which is closest.

Applicability: All Types of Shapes

Example:

```
CQ(aCube).vertices(NearestToPointSelector((0, 1, 0)))
```

returns the vertex of the unit cube closest to the point x=0,y=1,z=0

```
__init__(pnt)
```

filter(objectList: Sequence[Shape])

Filter the provided list.

The default implementation returns the original list unfiltered.

Parameters

```
objectList (list of OCCT primitives) - list to filter
```

Returns

filtered list

class cadquery.ParallelDirSelector(vector: Vector, tolerance: float = 0.0001)

Bases: BaseDirSelector

Selects objects parallel with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut |(X|Y|Z) if you want to select based on a cardinal direction.

Example:

```
CQ(aCube).faces(ParallelDirSelector((0, 0, 1)))
```

selects faces with the normal parallel to the z direction, and is equivalent to:

```
CQ(aCube).faces("|Z")
```

Parameters

- vector (Vector)
- tolerance (float)

test(vec: Vector) $\rightarrow bool$

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

class cadquery.PerpendicularDirSelector(vector: Vector, tolerance: float = 0.0001)

Bases: BaseDirSelector

Selects objects perpendicular with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut #(X|Y|Z) if you want to select based on a cardinal direction.

Example:

```
CQ(aCube).faces(PerpendicularDirSelector((0, 0, 1)))
```

selects faces with the normal perpendicular to the z direction, and is equivalent to:

```
CQ(aCube).faces("#Z")
```

Parameters

- vector (Vector)
- tolerance (float)

test(vec: Vector) $\rightarrow bool$

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

class cadquery. Plane (origin: Tuple[float, float] | Vector, xDir: Tuple[float, float, float] | Vector | None = None, normal: Tuple[float, float, float] | Vector = (0, 0, 1))

Bases: object

A 2D coordinate system in space

A 2D coordinate system in space, with the x-y axes on the plane, and a particular point as the origin.

A plane allows the use of 2D coordinates, which are later converted to global, 3d coordinates when the operations are complete.

Frequently, it is not necessary to create work planes, as they can be created automatically from faces.

Parameter:

```
    origin (Tuple[float, float, float] | Vector)
    **xDir*(Vector)
    normal (Tuple[float, float, float] | Vector)
    __eq__(other)
    Return self==value.
```

__hash__ = None

__init__(origin: Tuple[float, float, float] | Vector, xDir: Tuple[float, float, float] | Vector | None = None, normal: Tuple[float, float, float] | Vector = (0, 0, 1))

Create a Plane with an arbitrary orientation

Parameters

- origin (Tuple[float, float, float] / Vector) the origin in global coordinates
- xDir(Tuple[float, float, float] / Vector / None) an optional vector representing the xDirection.
- normal (Tuple[float, float, float] / Vector) the normal direction for the plane

Raises

ValueError – if the specified xDir is not orthogonal to the provided normal

```
__ne__(other)
Return self!=value.
__repr__()
Return repr(self).
__weakref_
```

list of weak references to the object (if defined)

classmethod named(stdName: str, origin=(0, 0, 0)) $\rightarrow Plane$

Create a predefined Plane based on the conventional names.

Parameters

- **stdName** (*string*) one of (XY|YZ|ZX|XZ|YX|ZY|front|back|left|right|top|bottom)
- origin (3-tuple of the origin of the new plane, in global coordinates.) the desired origin, specified in global coordinates

Return type

Plane

Available named planes are as follows. Direction references refer to the global directions.

Name	xDir	yDir	zDir
XY	+x	+y	+z
YZ	+y	+z	+x
ZX	+z	+x	+y
XZ	+x	+z	-y
YX	+y	+x	-Z
ZY	+z	+y	-X
front	+x	+y	+z
back	-X	+y	-Z
left	+z	+y	-X
right	-Z	+y	+x
top	+x	-Z	+y
bottom	+x	+z	-y

rotated(*rotate*=(0, 0, 0))

Returns a copy of this plane, rotated about the specified axes

Since the z axis is always normal the plane, rotating around Z will always produce a plane that is parallel to this one.

The origin of the workplane is unaffected by the rotation.

Rotations are done in order x, y, z. If you need a different order, manually chain together multiple rotate() commands.

Parameters

rotate – Vector [xDegrees, yDegrees, zDegrees]

Returns

a copy of this plane rotated as requested.

setOrigin2d(x, y)

Set a new origin in the plane itself

Set a new origin in the plane itself. The plane's orientation and xDrection are unaffected.

Parameters

- **x** (float) offset in the x direction
- y (float) offset in the y direction

Returns

void

The new coordinates are specified in terms of the current 2D system. As an example:

```
p = Plane.XY() p.setOrigin2d(2, 2) p.setOrigin2d(2, 2)
```

results in a plane with its origin at (x, y) = (4, 4) in global coordinates. Both operations were relative to local coordinates of the plane.

toLocalCoords(obj)

Project the provided coordinates onto this plane

Parameters

obj – an object or vector to convert

Returns

an object of the same type, but converted to local coordinates

Most of the time, the z-coordinate returned will be zero, because most operations based on a plane are all 2D. Occasionally, though, 3D points outside of the current plane are transformed. One such example is *Workplane.box()*, where 3D corners of a box are transformed to orient the box in space correctly.

$toWorldCoords(tuplePoint) \rightarrow Vector$

Convert a point in local coordinates to global coordinates

Parameters

tuplePoint (a 2 or three tuple of float. The third value is taken to be zero if not supplied.) – point in local coordinates to convert.

Returns

a Vector in global coordinates

Return type

Vector

```
class cadquery.Selector
      Bases: object
      Filters a list of objects.
      Filters must provide a single method that filters objects.
      __weakref__
           list of weak references to the object (if defined)
      filter(objectList: Sequence[Shape]) \rightarrow List[Shape]
           Filter the provided list.
           The default implementation returns the original list unfiltered.
               Parameters
                    objectList (list of OCCT primitives) - list to filter
               Returns
                    filtered list
               Return type
                    List[Shape]
class cadquery.Shape(obj: TopoDS_Shape)
      Bases: object
      Represents a shape in the system. Wraps TopoDS_Shape.
           Parameters
               obj (TopoDS_Shape)
      Area() \rightarrow float
               Returns
                    The surface area of all faces in this Shape
               Return type
                    float
      BoundingBox(tolerance: float \mid None = None) \rightarrow BoundBox
           Create a bounding box for this Shape.
               Parameters
                    tolerance (float | None) - Tolerance value passed to BoundBox
                   A BoundBox object for this Shape
               Return type
                    BoundBox
      Center() → Vector
               Returns
                    The point of the center of mass of this Shape
               Return type
                    Vector
      CenterOfBoundBox(tolerance: float \mid None = None) \rightarrow Vector
               Parameters
                    tolerance (float | None) - Tolerance passed to the BoundingBox() method
```

Returns

Center of the bounding box of this shape

Return type

Vector

 $Closed() \rightarrow bool$

Returns

The closedness flag

Return type

bool

$static CombinedCenter(objects: Iterable[Shape]) \rightarrow Vector$

Calculates the center of mass of multiple objects.

Parameters

objects (Iterable[Shape]) - A list of objects with mass

Return type

Vector

$static CombinedCenterOfBoundBox(objects: List[Shape]) \rightarrow Vector$

Calculates the center of a bounding box of multiple objects.

Parameters

objects (List[Shape]) - A list of objects

Return type

Vector

 $CompSolids() \rightarrow List[CompSolid]$

Returns

All the compsolids in this Shape

Return type

List[CompSolid]

 $Compounds() \rightarrow List[Compound]$

Returns

All the compounds in this Shape

Return type

List[Compound]

Edges() \rightarrow List[Edge]

Returns

All the edges in this Shape

Return type

List[Edge]

Faces() \rightarrow List[*Face*]

Returns

All the faces in this Shape

Return type

List[Face]

```
Shells() \rightarrow List[Shell]
           Returns
                All the shells in this Shape
           Return type
               List[Shell]
Solids() \rightarrow List[Solid]
           Returns
                All the solids in this Shape
           Return type
               List[Solid]
\textbf{Vertices()} \rightarrow \text{List}[\textit{Vertex}]
           Returns
                All the vertices in this Shape
           Return type
               List[Vertex]
Volume() \rightarrow float
           Returns
               The volume of this Shape
           Return type
                float
Wires() \rightarrow List[Wire]
           Returns
                All the wires in this Shape
           Return type
               List[Wire]
__add__(other: Shape) \rightarrow Shape
      Fuse self and other.
           Parameters
               other (Shape)
           Return type
               Shape
\_\_eq\_\_(other) \rightarrow bool
      Return self==value.
           Return type
               bool
\_hash\_() \rightarrow int
      Return hash(self).
           Return type
```

int

```
__init__(obj: TopoDS_Shape)
         Parameters
             obj (TopoDS_Shape)
__iter__() \rightarrow Iterator[Shape]
     Iterate over subshapes.
         Return type
              Iterator[Shape]
__mul__(other: Shape) \rightarrow Shape
     Intersect self and other.
         Parameters
             other (Shape)
         Return type
              Shape
__sub__(other: Shape) \rightarrow Shape
     Subtract other from self.
         Parameters
             other (Shape)
         Return type
              Shape
__truediv__(other: Shape) \rightarrow Shape
     Split self with other.
         Parameters
             other (Shape)
         Return type
              Shape
__weakref__
     list of weak references to the object (if defined)
ancestors(shape: Shape, kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
             'Compound']) \rightarrow Compound
     Iterate over ancestors, i.e. shapes of same kind within shape that contain self.
         Parameters
              • shape (Shape)
                                    (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                'CompSolid', 'Compound'])
         Return type
              Compound
classmethod cast(obj: TopoDS\_Shape, forConstruction: bool = False) \rightarrow Shape
     Returns the right type of wrapper, given a OCCT object
         Parameters
              • obj (TopoDS_Shape)
              • forConstruction (bool)
```

```
Return type
              Shape
static centerOfMass(obj: Shape) \rightarrow Vector
     Calculates the center of 'mass' of an object.
          Parameters
              obj (Shape) – Compute the center of mass of this object
          Return type
              Vector
clean() \rightarrow T
     Experimental clean using ShapeUpgrade
          Parameters
              self(T)
          Return type
              T
static computeMass(obj: Shape) \rightarrow float
     Calculates the 'mass' of an object.
          Parameters
              obj (Shape) – Compute the mass of this object
          Return type
              float
copy(mesh: bool = False) \rightarrow T
     Creates a new object that is a copy of this object.
          Parameters
              • self(T)
              • mesh (bool) – should I copy the triangulation too (default: False)
          Returns
              a copy of the object
          Return type
cut(*toCut: Shape, tol: float | None = None) \rightarrow Shape
     Remove the positional arguments from this Shape.
          Parameters
              • tol (float / None) – Fuzzy mode tolerance
              • toCut (Shape)
          Return type
              Shape
distance(other: Shape) \rightarrow float
     Minimal distance between two shapes
          Parameters
              other (Shape)
```

```
Return type
              float
distances(*others: Shape) → Iterator[float]
     Minimal distances to between self and other shapes
         Parameters
             others (Shape)
         Return type
             Iterator[float]
edges(selector: Selector | str | None = None) \rightarrow Shape
     Select edges.
         Parameters
              selector (Selector | str | None)
         Return type
              Shape
export (fname: str, tolerance: float = 0.1, angular Tolerance: float = 0.1, opt: Dict[str, Any] | None = None)
     Export Shape to file.
         Parameters
              • self (T)
              • fname (str)
              • tolerance (float)
              • angularTolerance (float)
              • opt (Dict[str, Any] | None)
exportBin(f: str \mid BytesIO) \rightarrow bool
     Export this shape to a binary BREP file.
         Parameters
              f(str | BytesI0)
         Return type
             bool
exportBrep(f: str \mid BytesIO) \rightarrow bool
     Export this shape to a BREP file
         Parameters
             f(str | BytesI0)
         Return type
exportStep(fileName: str, **kwargs) \rightarrow IFSelect_ReturnStatus
     Export this shape to a STEP file.
     kwargs is used to provide optional keyword arguments to configure the exporter.
```

Parameters

• **fileName** (*str*) – Path and filename for writing.

• write_pcurves (bool) – Enable or disable writing parametric curves to the STEP file.

Default True.

If False, writes STEP file without pourves. This decreases the size of the resulting STEP file.

precision_mode (int) – Controls the uncertainty value for STEP entities. Specify -1, 0, or 1. Default 0. See OCCT documentation.

Return type

IFSelect_ReturnStatus

exportStl($fileName: str, tolerance: float = 0.001, angularTolerance: float = 0.1, ascii: bool = False, relative: bool = True, parallel: bool = True) <math>\rightarrow$ bool

Exports a shape to a specified STL file.

Parameters

- **fileName** (*str*) The path and file name to write the STL output to.
- **tolerance** (*float*) A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 1e-3, which is a good starting point for a range of cases.
- **angularTolerance** (*float*) Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.
- **ascii** (*bool*) Export the file as ASCII (True) or binary (False) STL format. Default is binary.
- **relative** (*bool*) If True, tolerance will be scaled by the size of the edge being meshed. Default is True. Setting this value to True may cause large features to become faceted, or small features dense.
- **parallel** (*bool*) If True, OCCT will use parallel processing to mesh the shape. Default is True.

Return type

bool

faces($selector: Selector | str | None = None) \rightarrow Shape$

Select faces.

Parameters

```
selector (Selector | str | None)
```

Return type

Shape

facesIntersectedByLine(point: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axis: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], tol: float = 0.0001, direction: Literal['AlongAxis', 'Opposite'] | None = None)

Computes the intersections between the provided line and the faces of this Shape

- point (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Base point for defining a line
- axis (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Axis on which the line rests

- tol (float) Intersection tolerance
- **direction** (*Literal['AlongAxis'*, 'Opposite'] | None) Valid values: "AlongAxis", "Opposite"; If specified, will ignore all faces that are not in the specified direction including the face where the point lies if it is the case

Returns

A list of intersected faces sorted by distance from point

```
fix() \rightarrow T
```

Try to fix shape if not valid

Parameters

self(T)

Return type

T

fuse(*toFuse: Shape, glue: bool = False, tol: float | None = None) \rightarrow Shape

Fuse the positional arguments with this Shape.

Parameters

- **glue** (*bool*) Sets the glue option for the algorithm, which allows increasing performance of the intersection of the input shapes
- tol (float / None) Fuzzy mode tolerance
- toFuse (Shape)

Return type

Shape

Gets the underlying geometry type.

Implementations can return any values desired, but the values the user uses in type filters should correspond to these.

As an example, if a user does:

```
CQ(object).faces("%mytype")
```

The expectation is that the geomType attribute will return 'mytype'

The return values depend on the type of the shape:

Vertex: always 'Vertex'

Edge: LINE, CIRCLE, ELLIPSE, HYPERBOLA, PARABOLA, BEZIER,

BSPLINE, OFFSET, OTHER

Face: PLANE, CYLINDER, CONE, SPHERE, TORUS, BEZIER, BSPLINE,

REVOLUTION, EXTRUSION, OFFSET, OTHER

Solid: 'Solid' Shell: 'Shell'

Compound: 'Compound'

Wire: 'Wire'

Returns

A string according to the geometry type

Return type

```
Literal['Vertex', 'Wire', 'Shell', 'Solid', 'Compound', 'PLANE', 'CYLINDER', 'CONE', 'SPHERE', 'TORUS', 'BEZIER', 'BSPLINE', 'REVOLUTION', 'EXTRUSION', 'OFFSET', 'OTHER', 'LINE', 'CIRCLE', 'ELLIPSE', 'HYPERBOLA', 'PARABOLA']
```

$hashCode() \rightarrow int$

Returns a hashed value denoting this shape. It is computed from the TShape and the Location. The Orientation is not used.

Return type

int

classmethod importBin($f: str \mid BytesIO$) $\rightarrow Shape$

Import shape from a binary BREP file.

Parameters

f(str | BytesIO)

Return type

Shape

classmethod importBrep($f: str \mid BytesIO$) $\rightarrow Shape$

Import shape from a BREP file

Parameters

f(str | BytesIO)

Return type

Shape

$intersect(*toIntersect: Shape, tol: float | None = None) \rightarrow Shape$

Intersection of the positional arguments and this Shape.

Parameters

- tol (float / None) Fuzzy mode tolerance
- toIntersect (Shape)

Return type

Shape

isEqual(other: Shape) $\rightarrow bool$

Returns True if two shapes are equal, i.e. if they share the same TShape with the same Locations and Orientations. Also see *isSame()*.

Parameters

other (Shape)

Return type

bool

$isNull() \rightarrow bool$

Returns true if this shape is null. In other words, it references no underlying shape with the potential to be given a location and an orientation.

Return type

bool

```
isSame(other: Shape) \rightarrow bool
     Returns True if other and this shape are same, i.e. if they share the same TShape with the same Locations.
     Orientations may differ. Also see isEqual()
          Parameters
              other (Shape)
          Return type
              bool
isValid() \rightarrow bool
     Returns True if no defect is detected on the shape S or any of its subshapes. See the OCCT docs on
     BRepCheck_Analyzer::IsValid for a full description of what is checked.
          Return type
              bool
locate(loc: Location) \rightarrow T
     Apply a location in absolute sense to self.
          Parameters
              • self(T)
              • loc (Location)
          Return type
located(loc: Location) \rightarrow T
     Apply a location in absolute sense to a copy of self.
          Parameters
              • self(T)
              • loc (Location)
          Return type
location() \rightarrow Location
     Return the current location
          Return type
              Location
static matrixOfInertia(obj: Shape) → List[List[float]]
     Calculates the matrix of inertia of an object. Since the part's density is unknown, this result is inertia/density
     with units of [1/length]. :param obj: Compute the matrix of inertia of this object
          Parameters
              obj (Shape)
          Return type
              List[List[float]]
mesh(tolerance: float, angularTolerance: float = 0.1)
     Generate triangulation if none exists.
```

Parameters

• tolerance (float)

• angularTolerance (float)

```
mirror(mirrorPlane: Literal['XY', 'YX', 'XZ', 'ZX', 'YZ', 'ZY'] | Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] = 'XY', basePointVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] = (0, 0, 0) \rightarrow Shape
```

Applies a mirror transform to this Shape. Does not duplicate objects about the plane.

Parameters

- mirrorPlane (Literal['XY', 'YX', 'XZ', 'ZX', 'YZ', 'ZY'] | ~cadquery. occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float]) The direction of the plane to mirror about one of 'XY', 'XZ' or 'YZ'
- basePointVector (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) The origin of the plane to mirror about

Returns

The mirrored shape

Return type

Shape

```
move (x: float | int = 0, y: float | int = 0, z: float | int = 0, rx: float | int = 0, ry: float | int = 0, rz: float | int = 0) \rightarrow T
```

```
move(loc: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow T
```

move(loc: Location) \rightarrow T

Apply a location in relative sense (i.e. update current location) to self.

Apply translation and rotation in relative sense (i.e. update current location) to self.

Apply a VectorLike in relative sense (i.e. update current location) to self.

Parameters

- **self**(T)
- loc (Location)

Return type

T

Apply a location in relative sense (i.e. update current location) to a copy of self.

Apply multiple locations.

Apply multiple locations.

Apply translation and rotation in relative sense to a copy of self.

Apply a VectorLike in relative sense to a copy of self.

Apply multiple VectorLikes in relative sense to a copy of self.

Apply multiple VectorLikes in relative sense to a copy of self.

Parameters

- **self** (T)
- loc (Location)

Return type

T

rotate(startVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], endVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], endVector: Rotates a shape around an axis.

Parameters

- self(T)
- startVector (either a 3-tuple or a Vector) start point of rotation axis
- endVector (either a 3-tuple or a Vector) end point of rotation axis
- **angleDegrees** (*float*) angle to rotate, in degrees

Returns

a copy of the shape, rotated

Return type

 τ

 $scale(factor: float) \rightarrow Shape$

Scales this shape through a transformation.

Parameters

factor (float)

Return type

Shape

shells($selector: Selector | str | None = None) \rightarrow Shape$

Select shells.

Parameters

```
selector (Selector | str | None)
```

Return type

Shape

```
siblings(shape: Shape, kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound'], level: int = 1) \rightarrow Compound
```

Iterate over siblings, i.e. shapes within shape that share subshapes of kind with self.

- shape (Shape)
- kind (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound'])
- level (int)

Return type Compound

solids($selector: Selector | str | None = None) \rightarrow Shape$

Select solids.

Parameters

selector (Selector | str | None)

Return type

Shape

 $split(*splitters: Shape) \rightarrow Shape$

Split this shape with the positional arguments.

Parameters

splitters (Shape)

Return type

Shape

toSplines($degree: int = 3, tolerance: float = 0.001, nurbs: bool = False) <math>\rightarrow$ T

Approximate shape with b-splines of the specified degree.

Parameters

- **self** (T)
- **degree** (*int*) Maximum degree.
- **tolerance** (*float*) Approximation tolerance.
- **nurbs** (*boo1*) Use rational splines.

Return type

T

 $\label{eq:local_policy} \textbf{toVtkPolyData}(\textit{tolerance: float} \mid \textit{None} = \textit{None}, \textit{angularTolerance: float} \mid \textit{None} = \textit{None}, \textit{normals: bool} = False) \rightarrow \textit{vtkPolyData}$

Convert shape to vtkPolyData

Parameters

- tolerance (float | None)
- angularTolerance (float | None)
- normals (bool)

Return type

vtkPolyData

 $transformGeometry(tMatrix: Matrix) \rightarrow Shape$

Transforms this shape by tMatrix.

WARNING: transformGeometry will sometimes convert lines and circles to splines, but it also has the ability to handle skew and stretching transformations.

If your transformation is only translation and rotation, it is safer to use *transformShape()*, which doesn't change the underlying type of the geometry, but cannot handle skew transformations.

Parameters

tMatrix (Matrix) – The transformation matrix

```
a copy of the object, but with geometry transformed instead of just rotated.
               Return type
                   Shape
     transformShape(tMatrix: Matrix) \rightarrow Shape
           Transforms this Shape by tMatrix. Also see transformGeometry().
               Parameters
                   tMatrix (Matrix) - The transformation matrix
               Returns
                   a copy of the object, transformed by the provided matrix, with all objects keeping their type
               Return type
                   Shape
     translate(vector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow T
           Translates this shape through a transformation.
               Parameters
                   • self (T)
                   vector
                                     (Vector | Tuple[int | float, int | float] | Tuple[int |
                      float, int | float, int | float])
               Return type
     vertices(selector: Selector | str | None = None) \rightarrow Shape
           Select vertices.
               Parameters
                   selector (Selector | str | None)
               Return type
                   Shape
     wires(selector: Selector | str | None = None) \rightarrow Shape
           Select wires.
               Parameters
                   selector (Selector | str | None)
               Return type
                   Shape
class cadquery.Shell(obj: TopoDS Shape)
     Bases: Shape
     the outer boundary of a surface
           Parameters
               obj (TopoDS_Shape)
     classmethod makeShell(listOfFaces: Iterable[Face]) \rightarrow Shell
           Makes a shell from faces.
               Parameters
                   listOfFaces (Iterable[Face])
```

Returns

```
Return type
                   Shell
class cadquery.Sketch(parent: ~typing.Any = None, locs:
                           ~typing.Iterable[~cadquery.occ_impl.geom.Location] =
                           (<cadquery.occ_impl.geom.Location object>, ), obj:
                           ~cadquery.occ impl.shapes.Compound | None = None)
     Bases: object
     2D sketch. Supports faces, edges and edges with constraints based construction.
           Parameters
                 • parent (Any)
                 • locs (List[Location])
                 • obj (Compound / None)
     __add__(other: Sketch) \rightarrow T
           Fuse self and other.
               Parameters
                   • self(T)
                   • other (Sketch)
               Return type
                   T
     __init__(parent: ~typing.Any = None, locs: ~typing.Iterable[~cadquery.occ_impl.geom.Location] =
                (<cadquery.occ_impl.geom.Location object>, ), obj: ~cadquery.occ_impl.shapes.Compound |
                None = None)
           Construct an empty sketch.
               Parameters
                   • self(T)
                   • parent (Any)
                   • locs (Iterable [Location])
                   • obj (Compound / None)
     __iter__() \rightarrow Iterator[Face]
           Iterate over faces-locations combinations. If not faces are present iterate over edges:
               Return type
                   Iterator[Face]
     \_mul\_(other: Sketch) \rightarrow T
           Intersect self and other.
               Parameters
                   • self(T)
                   • other (Sketch)
               Return type
```

T

```
\_sub\_(other: Sketch) \rightarrow T
     Subtract other from self.
          Parameters
               • self(T)
               • other (Sketch)
          Return type
__truediv__(other: Sketch) \rightarrow T
     Split self with other.
          Parameters
               • self(T)
               • other (Sketch)
          Return type
weakref
     list of weak references to the object (if defined)
add() \rightarrow T
     Add selection to the underlying faces.
          Parameters
              self(T)
          Return type
apply(f: Callable[[Iterable[Shape | Location]], Iterable[Shape | Location]])
     Apply a callable to all items at once.
          Parameters
               • self(T)
                                 (Callable[[Iterable[Shape | Location]], Iterable[Shape |
                 Location]]) – Callable to be applied.
          Returns
              Sketch object with f applied to all items.
arc(p1: Vector | Tuple[int | float, int | float], p2: Vector | Tuple[int | float, int | float], p3: Vector | Tuple[int |
     float, int | float], tag: str \mid None = None, forConstruction: bool = False) <math>\rightarrow T
arc(c: Vector | Tuple[int | float, int | float], r: int | float, a: int | float, da: int | float, tag: str | None = None,
     forConstruction: bool = False) \rightarrow T
arc(p2: Vector | Tuple[int | float, int | float], p3: Vector | Tuple[int | float, int | float], tag: str | None = None,
     forConstruction: bool = False) \rightarrow T
     Construct an arc.
          Parameters
               • self(T)
               • p1 (Vector | Tuple[int | float, int | float])
```

```
• p2 (Vector | Tuple[int | float, int | float])
              • p3 (Vector | Tuple[int | float, int | float])
              • tag(str | None)
              • forConstruction (bool)
         Return type
assemble(mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str | None = None) <math>\rightarrow T
     Assemble edges into faces.
         Parameters
              • self(T)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
              • tag(str | None)
         Return type
bezier(pts: Iterable[Vector | Tuple[int | float, int | float]], tag: str | None = None, forConstruction: bool =
        False) \rightarrow T
     Construct an bezier curve.
     The edge will pass through the last points, and the inner points are bezier control points.
         Parameters
              • self(T)
              • pts(Iterable[Vector | Tuple[int | float, int | float]])
              • tag(str | None)
              • forConstruction (bool)
         Return type
chamfer(d: int \mid float) \rightarrow T
     Add a chamfer based on current selection.
         Parameters
              • self(T)
              • d(int | float)
         Return type
circle(r: int | float, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str | None = None) \rightarrow T
     Construct a circular face.
         Parameters
              • self(T)
              • r(int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
```

```
• tag(str | None)
          Return type
              T
clean() \rightarrow T
     Remove internal wires.
          Parameters
              self(T)
          Return type
close(tag: str | None = None) \rightarrow T
     Connect last edge to the first one.
          Parameters
              • self(T)
              • tag(str | None)
          Return type
constrain(tag: str, constraint: Literal['Fixed', 'FixedPoint', 'Coincident', 'Angle', 'Length', 'Distance',
             'Radius', 'Orientation', 'ArcAngle'], arg: Any) \rightarrow T
constrain(tag1: str, tag2: str, constraint: Literal['Fixed', 'FixedPoint', 'Coincident', 'Angle', 'Length',
             'Distance', 'Radius', 'Orientation', 'ArcAngle'], arg: Any) → T
     Add a constraint.
          Parameters
              • self(T)
              • tag (str)
              • constraint (Literal ['Fixed', 'FixedPoint', 'Coincident', 'Angle', 'Length',
                'Distance', 'Radius', 'Orientation', 'ArcAngle'])
              • arg (Any)
          Return type
copy() \rightarrow T
     Create a partial copy of the sketch.
          Parameters
              self(T)
          Return type
              T
delete() \rightarrow T
     Delete selected object.
          Parameters
              self(T)
          Return type
              T
```

```
distribute(n: int, start: int | float = 0, stop: int | float = 1, rotate: bool = True) \rightarrow T
     Distribute locations along selected edges or wires.
         Parameters
              • self(T)
              • n (int)
              • start(int | float)
              • stop(int | float)
              • rotate (bool)
         Return type
each(callback: Callable[[Location], Face | Sketch | Compound], mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag:
      str \mid None = None, ignore\_selection: bool = False) \rightarrow T
     Apply a callback on all applicable entities.
         Parameters
              • self(T)
              • callback (Callable [[Location], Face | Sketch | Compound])
              • mode (Literal['a', 's', 'i', 'c', 'r'])
              • tag(str | None)
              • ignore_selection (bool)
         Return type
edge(val: Edge, tag: str \mid None = None, forConstruction: bool = False) \rightarrow T
     Add an edge to the sketch.
         Parameters
              • self(T)
              • val (Edge)
              • tag(str | None)
              • forConstruction (bool)
         Return type
edges(s: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
     Select edges.
         Parameters
              • self(T)
              • s(str / Selector / None)
              • tag(str | None)
         Return type
              T
```

```
ellipse(a1: int | float, a2: int | float, angle: int | float = 0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str |
          None = None \rightarrow T
     Construct an elliptical face.
          Parameters
              • self(T)
              • a1 (int | float)
              • a2 (int | float)
              • angle (int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
              • tag(str | None)
          Return type
              T
export (fname: str, tolerance: float = 0.1, angular Tolerance: float = 0.1, opt: Dict[str, Any] | None = None)
         \rightarrow T
     Export Sketch to file.
          Parameters
              • self (T)
              • path - Filename.
              • tolerance (float) – the deflection tolerance, in model units. Default 0.1.
              • angularTolerance (float) – the angular tolerance, in radians. Default 0.1.
              • opt (Dict[str, Any] | None) – additional options passed to the specific exporter. De-
                fault None.
              • fname (str)
          Returns
              Self.
          Return type
face(b: Wire | Iterable[Edge] | Shape | T, angle: int | float = 0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str
      | None = None, ignore_selection: bool = False) \rightarrow T
     Construct a face from a wire or edges.
          Parameters
              • self(T)
              • b (Wire | Iterable[Edge] | Shape | T)
              • angle (int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
              • tag(str | None)
              • ignore_selection (bool)
          Return type
              T
```

```
faces(s: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
     Select faces.
          Parameters
               • self(T)
               • s(str | Selector | None)
               • tag(str | None)
          Return type
fillet(d: int \mid float) \rightarrow T
     Add a fillet based on current selection.
          Parameters
               • self(T)
               • d(int | float)
          Return type
filter(f: Callable[[Shape | Location], bool]) \rightarrow T
     Filter items using a boolean predicate.
          Parameters
               • self(T)
               • f (Callable[[Shape | Location], bool]) – Callable to be used for filtering.
          Returns
              Sketch object with filtered items.
          Return type
finalize() \rightarrow Any
     Finish sketch construction and return the parent.
          Return type
              Any
hull(mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str | None = None) <math>\rightarrow T
     Generate a convex hull from current selection or all objects.
          Parameters
               • self(T)
               • mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
               T
importDXF (filename: str, tol: float = 1e-06, exclude: List[str] = [], include: List[str] = [], angle: int | float =
             0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str \mid None = None) \rightarrow T
     Import a DXF file and construct face(s)
```

Parameters

- **self** (T)
- filename (str)
- tol (float)
- exclude (List[str])
- include (List[str])
- angle (int | float)
- mode (Literal['a', 's', 'i', 'c', 'r'])
- tag(str | None)

Return type

T

invoke(f: Callable[[T], T] | Callable[[T], None] | Callable[[], None])

Invoke a callable mapping Sketch to Sketch or None. Supports also callables that take no arguments such as breakpoint. Returns self if callable returns None.

Parameters

- **self**(T)
- **f** (Callable[[T], T] | Callable[[T], None] | Callable[[], None]) Callable to be invoked.

Returns

Sketch object.

 $located(loc: Location) \rightarrow T$

Create a partial copy of the sketch with a new location.

Parameters

- self(T)
- loc (Location)

Return type

T

map(f: Callable[[Shape | Location], Shape | Location])

Apply a callable to every item separately.

Parameters

- self(T)
- **f** (Callable[[Shape / Location], Shape / Location]) Callable to be applied to every item separately.

Returns

Sketch object with f applied to all items.

```
\begin{aligned} & \textbf{moved}(loc: Location) \rightarrow \mathbf{T} \\ & \textbf{moved}(loc1: Location, loc2: Location, *locs: Location}) \rightarrow \mathbf{T} \\ & \textbf{moved}(locs: Sequence[Location]) \rightarrow \mathbf{T} \\ & \textbf{moved}(x: int \mid float = 0, y: int \mid float = 0, rz: int \mid float = 0, ry: int \mid float = 0, rz: int \mid flo
```

```
moved(loc: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow T
moved(loc1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], loc2: Vector |
        Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], *locs: Vector | Tuple[int | float, int |
        float] \mid Tuple[int \mid float, int \mid float, int \mid float]) \rightarrow T
moved(loc: Sequence[Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]]) \rightarrow T
      Create a partial copy of the sketch with moved _faces.
offset(d: int \mid float, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str \mid None = None) \rightarrow T
      Offset selected wires or edges.
          Parameters
               • self(T)
               • d(int | float)
               • mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
parray(r: int \mid float, al: int \mid float, da: int \mid float, n: int, rotate: bool = True) \rightarrow T
      Generate a polar array of locations.
          Parameters
               • self(T)
               • r(int | float)
               • a1 (int | float)
               • da (int | float)
               • n (int)
               • rotate (bool)
          Return type
               T
polygon(pts: Iterable[Vector | Tuple[int | float, int | float]], angle: int | float = 0, mode: Literal['a', 's', 'i', 'c',
           'r'] = 'a', tag: str \mid None = None) \rightarrow T
      Construct a polygonal face.
          Parameters
               • self (T)
               • pts(Iterable[Vector | Tuple[int | float, int | float]])
               • angle (int | float)
               • mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
               T
```

```
push(locs: Iterable[Location | Vector | Tuple[int | float, int | float]], tag: str | None = None) \rightarrow T
     Set current selection to given locations or points.
          Parameters
               • self(T)
               • locs (Iterable [Location | Vector | Tuple [int | float, int | float]])
               • tag(str | None)
          Return type
rarray(xs: int \mid float, ys: int \mid float, nx: int, ny: int) \rightarrow T
     Generate a rectangular array of locations.
          Parameters
               • self(T)
              • xs (int | float)
              • ys (int | float)
              • nx (int)
               • ny (int)
          Return type
              T
rect(w: int | float, h: int | float, angle: int | float = 0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str | None = 1
      None) \rightarrow T
     Construct a rectangular face.
          Parameters
               • self(T)
               • w(int | float)
              • h(int | float)
               • angle (int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
regularPolygon(r: int | float, n: int, angle: int | float = 0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str |
                   None = None) \rightarrow T
     Construct a regular polygonal face.
          Parameters
```

• self(T)

• **n** (int)

• r(int | float)

• angle (int | float)

```
• mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
replace() \rightarrow T
     Replace the underlying faces with the selection.
          Parameters
              self(T)
          Return type
reset() \rightarrow T
     Reset current selection.
          Parameters
              self(T)
          Return type
segment(l: int | float, a: int | float, tag: str | None = None, for Construction: bool = False) \rightarrow T
segment(p2: Vector | Tuple[int | float, int | float], tag: str | None = None, for Construction: bool = False) \rightarrow T
segment(p1: Vector | Tuple[int | float, int | float], p2: Vector | Tuple[int | float, int | float], tag: str | None =
          None, for Construction: bool = False \rightarrow T
     Construct a segment.
          Parameters
               • self(T)
               • p1 (Vector | Tuple[int | float, int | float])
               • p2 (Vector | Tuple[int | float, int | float])
               • tag(str | None)
               \bullet \  \, {\bf for Construction} \ (bool)
          Return type
select(*tags: str) \rightarrow T
     Select based on tags.
          Parameters
               • self(T)
               • tags (str)
          Return type
slot(w: int | float, h: int | float, angle: int | float = 0, mode: Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str | None = 1
      None) \rightarrow T
     Construct a slot-shaped face.
          Parameters
```

```
• self(T)
              • w(int | float)
              • h(int | float)
              • angle (int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
              • tag(str | None)
         Return type
solve() \rightarrow T
     Solve current constraints and update edge positions.
         Parameters
              self(T)
         Return type
sort(key: Callable[[Shape | Location], Any]) \rightarrow T
     Sort items using a callable.
         Parameters
              • self(T)
              • key (Callable[[Shape / Location], Any]) – Callable to be used for sorting.
             Sketch object with items sorted.
         Return type
spline(pts: Iterable[Vector | Tuple[int | float, int | float]], tag: str | None = None, for Construction: bool =
        False) \rightarrow T
spline(pts: Iterable[Vector | Tuple[int | float, int | float]], tangents: Iterable[Vector | Tuple[int | float, int |
        float]] | None, periodic: bool, tag: str \mid None = None, for Construction: bool = False) \rightarrow T
     Construct a spline edge.
         Parameters
              • self(T)
              • pts(Iterable[Vector | Tuple[int | float, int | float]])
              • tangents (Iterable [Vector | Tuple [int | float, int | float]] | None)
              • periodic (bool)
              • tag(str | None)
              • forConstruction (bool)
         Return type
subtract() \rightarrow T
     Subtract selection from the underlying faces.
```

```
Parameters
              self(T)
          Return type
tag(tag: str) \rightarrow T
     Tag current selection.
          Parameters
               • self(T)
              • tag (str)
          Return type
trapezoid(w: int | float, h: int | float, a1: int | float, a2: float | None = None, angle: int | float = 0, mode:
             Literal['a', 's', 'i', 'c', 'r'] = 'a', tag: str \mid None = None) \rightarrow T
     Construct a trapezoidal face.
          Parameters
               • self(T)
               • w(int | float)
              • h(int | float)
              • a1 (int | float)
              • a2 (float | None)
              • angle (int | float)
              • mode (Literal['a', 's', 'i', 'c', 'r'])
               • tag(str | None)
          Return type
val() \rightarrow Shape \mid Location
     Return the first selected item, underlying compound or first edge.
          Parameters
              self(T)
          Return type
              Shape | Location
vals() \rightarrow List[Shape \mid Location]
     Return all selected items, underlying compound or all edges.
          Parameters
              self(T)
          Return type
              List[Shape | Location]
vertices(s: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
     Select vertices.
```

```
• self(T)
                    • s(str / Selector / None)
                    • tag(str | None)
                Return type
      wires(s: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
           Select wires.
                Parameters
                    • self (T)
                    • s(str | Selector | None)
                    • tag(str | None)
                Return type
class cadquery.Solid(obj: TopoDS_Shape)
      Bases: Shape, Mixin3D
      a single solid
           Parameters
                obj (TopoDS_Shape)
      classmethod extrudeLinear(outerWire: Wire, innerWires: List[Wire], vecNormal: Vector | Tuple[int |
                                       float, int \mid float] | Tuple[int \mid float, int \mid float, int \mid float], taper: float \mid int = 0)
                                        \rightarrow Solid
      classmethod extrudeLinear(face: Face, vecNormal: Vector | Tuple[int | float, int | float] | Tuple[int | float,
                                       int \mid float, int \mid float], taper: float \mid int = 0) \rightarrow Solid
           Attempt to extrude the list of wires into a prismatic solid in the provided direction
                Parameters
                    • outerWire (Wire) – the outermost wire
                    • innerWires (List [Wire]) – a list of inner wires

    vecNormal

                                       (Vector | Tuple[int | float, int | float] | Tuple[int |
                       float, int | float, int | float]) – a vector along which to extrude the wires
                    • taper (float | int) - taper angle, default=0
                Returns
                    a Solid object
```

Solid
The wires must not intersect

Return type

Extruding wires is very non-trivial. Nested wires imply very different geometry, and there are many geometries that are invalid. In general, the following conditions must be met:

- · all wires must be closed
- there cannot be any intersecting or self-intersecting wires
- wires must be listed from outside in

more than one levels of nesting is not supported reliably

This method will attempt to sort the wires, but there is much work remaining to make this method reliable.

```
classmethod extrudeLinearWithRotation(outerWire: Wire, innerWires: List[Wire], vecCenter: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float, int | float], vecNormal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], angleDegrees: float | int) \rightarrow Solid
```

classmethod extrudeLinearWithRotation(face: Face, vecCenter: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], vecNormal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], angleDegrees: float | int) \rightarrow Solid

Creates a 'twisted prism' by extruding, while simultaneously rotating around the extrusion vector.

Though the signature may appear to be similar enough to extrudeLinear to merit combining them, the construction methods used here are different enough that they should be separate.

At a high level, the steps followed are:

- (1) accept a set of wires
- (2) create another set of wires like this one, but which are transformed and rotated
- (3) create a ruledSurface between the sets of wires
- (4) create a shell and compute the resulting object

Parameters

- outerWire (Wire) the outermost wire
- innerWires (List[Wire]) a list of inner wires
- vecCenter (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) the center point about which to rotate. the axis of rotation is defined by vecNormal, located at vecCenter.
- vecNormal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) a vector along which to extrude the wires
- angleDegrees (float / int) the angle to rotate through while extruding

Returns

a Solid object

Return type

Solid

 $innerShells() \rightarrow List[Shell]$

Returns inner shells.

Return type

List[Shell]

classmethod interpPlate($surf_edges$, $surf_pts$, thickness, degree=3, nbPtsOnCur=15, nbIter=2, anisotropy=False, tol2d=1e-05, tol3d=0.0001, tolAng=0.01, tolCurv=0.1, maxDeg=8, maxSegments=9) $\rightarrow Solid \mid Face$

Returns a plate surface that is 'thickness' thick, enclosed by 'surf_edge_pts' points, and going through 'surf_pts' points.

- surf_edges list of [x,y,z] float ordered coordinates or list of ordered or unordered wires
- **surf_pts** list of [x,y,z] float coordinates (uses only edges if [])
- **thickness** thickness may be negative or positive depending on direction, (returns 2D surface if 0)
- **degree** ->=2
- **nbPtsOnCur** number of points on curve >= 15
- **nbIter** number of iterations >= 2
- anisotropy bool Anisotropy
- **tol2d** 2D tolerance >0
- **tol3d** 3D tolerance >0
- tolAng angular tolerance
- **tolCurv** tolerance for curvature >0
- maxDeg highest polynomial degree >= 2
- maxSegments greatest number of segments >= 2

Return type

Solid | Face

static isSolid(obj: Shape) \rightarrow bool

Returns true if the object is a solid, false otherwise

Parameters

obj (Shape)

Return type

bool

classmethod makeBox(length,width,height,[pnt,dir]) -- Make a box located in pnt with the dimensions (length,width,height)

By default pnt=Vector(0,0,0) and dir=Vector(0,0,1)

Parameters

- length (float)
- width (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Solid

classmethod makeCone(radius1: float, radius2: float, height: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0, 0.0), angleDegrees: float = 360) \rightarrow Solid

Make a cone with given radii and height By default pnt=Vector(0,0,0), dir=Vector(0,0,1) and angle=360

Parameters

- radius1 (float)
- radius2 (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees (float)

Return type

Solid

```
classmethod makeCylinder(radius: float, height: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees: float = 360) \rightarrow Solid
```

 $make Cylinder (radius, height, [pnt, dir, angle]) - Make \ a \ cylinder \ with \ a \ given \ radius \ and \ height \ By \ default \\ pnt=Vector(0,0,0), dir=Vector(0,0,1) \ and \ angle=360$

Parameters

- radius (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees (float)

Return type

Solid

classmethod makeLoft($listOfWire: List[Wire], ruled: bool = False) \rightarrow Solid$

makes a loft from a list of wires The wires will be converted into faces when possible—it is presumed that nobody ever actually wants to make an infinitely thin shell for a real FreeCADPart.

Parameters

- listOfWire (List[Wire])
- ruled (bool)

Return type

Solid

classmethod makeSolid($shell: Shell) \rightarrow Solid$

Makes a solid from a single shell.

```
Parameters
```

shell (Shell)

Return type

Solid

```
classmethod makeSphere(radius: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees1: float = 0, angleDegrees2: float = 90, angleDegrees3: float = 360) \rightarrow Shape
```

Make a sphere with a given radius By default pnt=Vector(0,0,0), dir=Vector(0,0,1), angle1=0, angle2=90 and angle3=360

Parameters

- radius (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees1 (float)
- angleDegrees2 (float)
- angleDegrees3 (float)

Return type

Shape

```
classmethod makeTorus (radius1: float, radius2: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees1: float = 0, angleDegrees2: float = 360) \rightarrow Solid
```

makeTorus(radius1,radius2,[pnt,dir,angle1,angle2,angle]) – Make a torus with a given radii and angles By default pnt=Vector(0,0,0),dir=Vector(0,0,1),angle1=0 ,angle1=360 and angle=360

Parameters

- radius1(float)
- radius2 (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees1 (float)
- angleDegrees2 (float)

Return type

Solid

```
classmethod makeWedge(dx: float, dy: float, dx: float, xmin: float, xmin: float, xmax: float, xma
```

Make a wedge located in pnt By default pnt=Vector(0,0,0) and dir=Vector(0,0,1)

Parameters

- dx (float)
- dy (float)
- dz (float)
- xmin (float)
- zmin (float)
- xmax (float)
- zmax (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Solid

 $outerShell() \rightarrow Shell$

Returns outer shell.

Return type

Shell

classmethod revolve(outerWire: Wire, innerWires: List[Wire], angleDegrees: float | int, axisStart: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axisEnd: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Solid

classmethod revolve(face: Face, angleDegrees: float | int, axisStart: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axisEnd: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow Solid

Attempt to revolve the list of wires into a solid in the provided direction

Parameters

- outerWire (Wire) the outermost wire
- innerWires (List[Wire]) a list of inner wires
- angleDegrees (float, anything less than 360 degrees will leave the shape open) the angle to revolve through.
- axisStart (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) the start point of the axis of rotation
- p axisEnd (Vector | Tuple[int | float, int | float] | Tuple[int |
 float, int | float, int | float]) the end point of the axis of rotation

Returns

a Solid object

Return type

Solid

The wires must not intersect

- · all wires must be closed
- there cannot be any intersecting or self-intersecting wires

- · wires must be listed from outside in
- more than one levels of nesting is not supported reliably
- the wire(s) that you're revolving cannot be centered

This method will attempt to sort the wires, but there is much work remaining to make this method reliable.

```
classmethod sweep(face: Face, path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None, transitionMode: Literal['transformed', 'round', 'right'] = 'transformed') \rightarrow Shape
```

```
classmethod sweep(outerWire: Wire, innerWires: List[Wire], path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None, transitionMode: Literal['transformed', 'round', 'right'] = 'transformed') \rightarrow Shape
```

Attempt to sweep the list of wires into a prismatic solid along the provided path

Parameters

- outerWire (Wire) the outermost wire
- **innerWires** (*List* [Wire]) a list of inner wires
- path (Wire / Edge) The wire to sweep the face resulting from the wires over
- makeSolid (bool) return Solid or Shell (default True)
- **isFrenet** (*bool*) Frenet mode (default False)
- mode (Vector / Wire / Edge / None) additional sweep mode parameters
- transitionMode (Literal ['transformed', 'round', 'right']) handling of profile orientation at C1 path discontinuities. Possible values are {'transformed','round', 'right'} (default: 'right').

Returns

a Solid object

Return type

Shape

classmethod sweep_multi(profiles: Iterable[Wire | Face], path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None) \rightarrow Solid

Multi section sweep. Only single outer profile per section is allowed.

Parameters

- profiles (Iterable[Wire / Face]) list of profiles
- path (Wire / Edge) The wire to sweep the face resulting from the wires over
- mode (Vector / Wire / Edge / None) additional sweep mode parameters.
- makeSolid (bool)
- isFrenet (bool)

Returns

a Solid object

Return type

Solid

class cadquery.StringSyntaxSelector(selectorString)

```
Bases: Selector
```

Filter lists objects using a simple string syntax. All of the filters available in the string syntax are also available (usually with more functionality) through the creation of full-fledged selector objects. see *Selector* and its subclasses

Filtering works differently depending on the type of object list being filtered.

```
Parameters
         selectorString – A two-part selector string, [selector][axis]
     Returns
         objects that match the specified selector
*Modifiers* are ('|','+','-','<','>','%')
             parallel to ( same as ParallelDirSelector ). Can return multiple objects.
         #
             perpendicular to (same as PerpendicularDirSelector)
             positive direction (same as DirectionSelector)
             negative direction (same as DirectionSelector )
             maximize (same as DirectionMinMaxSelector with directionMax=True)
             minimize (same as DirectionMinMaxSelector with directionMax=False )
         %
             curve/surface type (same as TypeSelector)
*axisStrings* are: X,Y,Z,XY,YZ,XZ or (x,y,z) which defines an arbitrary direction
It is possible to combine simple selectors together using logical operations. The following operations are sup-
ported
         and
             Logical AND, e.g. >X and >Y
         \mathbf{or}
```

```
or
Logical OR, e.g. |X or |Y

not
Logical NOT, e.g. not #XY

exc(ept)
Set difference (equivalent to AND NOT): |X exc >Z
```

Finally, it is also possible to use even more complex expressions with nesting and arbitrary number of terms, e.g.

```
(not >X[0] and \#XY) or >XY[0]
```

Selectors are a complex topic: see Selectors Reference for more information

```
__init__(selectorString)
```

Feed the input string through the parser and construct an relevant complex selector object

```
filter(objectList: Sequence[Shape])
          Filter give object list through th already constructed complex selector object
              Parameters
                  objectList (Sequence[Shape])
class cadquery.TypeSelector(typeString: str)
     Bases: Selector
     Selects objects having the prescribed geometry type.
     Applicability:
          Faces: PLANE, CYLINDER, CONE, SPHERE, TORUS, BEZIER, BSPLINE, REVOLUTION, EXTRU-
          SION, OFFSET, OTHER Edges: LINE, CIRCLE, ELLIPSE, HYPERBOLA, PARABOLA, BEZIER,
          BSPLINE, OFFSET, OTHER
     You can use the string selector syntax. For example this:
     CQ(aCube).faces(TypeSelector("PLANE"))
     will select 6 faces, and is equivalent to:
     CQ(aCube).faces("%PLANE")
          Parameters
              {\bf typeString}\,(str)
     __init__(typeString: str)
              Parameters
                  typeString (str)
     filter(objectList: Sequence[Shape]) → List[Shape]
          Filter the provided list.
          The default implementation returns the original list unfiltered.
                  objectList (list of OCCT primitives) – list to filter
              Returns
                  filtered list
              Return type
                  List[Shape]
class cadquery.Vector(x: float, y: float, z: float)
class cadquery.Vector(x: float, y: float)
class cadquery.Vector(v: Vector)
class cadquery.Vector(v: Sequence[float])
class cadquery.Vector(v: gp_Vec | gp_Pnt | gp_Dir | gp_XYZ)
```

Create a 3-dimensional vector

Parameters

class cadquery.Vector
 Bases: object

args – a 3D vector, with x-y-z parts.

you can either provide:

- nothing (in which case the null vector is return)
- a gp_Vec
- a vector (in which case it is copied)
- a 3-tuple
- a 2-tuple (z assumed to be 0)
- three float values: x, y, and z
- two float values: x,y

Center() → Vector

Return the vector itself

The center of myself is myself. Provided so that vectors, vertices, and other shapes all support a common interface, when Center() is requested for all objects on the stack.

```
Return type
                Vector
__eq__(other: Vector) \rightarrow bool
      Return self==value.
           Parameters
               other (Vector)
           Return type
               bool
__hash__ = None
__init__(x: float, y: float, z: float) \rightarrow None
__init__(x: float, y: float) \rightarrow None
__init__(v: Vector) \rightarrow None
__init__(v: Sequence[float]) \rightarrow None
__init__(v: gp\_Vec \mid gp\_Pnt \mid gp\_Dir \mid gp\_XYZ) \rightarrow None
\_init\_() \rightarrow None
\_repr\_() \rightarrow str
      Return repr(self).
           Return type
                str
\__{str}_{()} \rightarrow str
      Return str(self).
           Return type
                str
__weakref__
```

list of weak references to the object (if defined)

```
multiply(scale: float) \rightarrow Vector
           Return a copy multiplied by the provided scalar
                Parameters
                    scale (float)
                Return type
                    Vector
      normalized() \rightarrow Vector
           Return a normalized version of this vector
                Return type
                    Vector
      projectToLine(line: Vector) \rightarrow Vector
           Returns a new vector equal to the projection of this Vector onto the line represented by Vector 
                Parameters
                    • args - Vector
                    • line (Vector)
                Return type
                    Vector
           Returns the projected vector.
      projectToPlane(plane: Plane) \rightarrow Vector
           Vector is projected onto the plane provided as input.
                Parameters
                    • args – Plane object
                    • plane (Plane)
                Return type
                    Vector
           Returns the projected vector.
class cadquery.Vertex(obj: TopoDS_Shape, forConstruction: bool = False)
      Bases: Shape
      A Single Point in Space
           Parameters
                  • obj (TopoDS_Shape)
                  • forConstruction (bool)
      Center() \rightarrow Vector
           The center of a vertex is itself!
                Return type
                    Vector
      __init__(obj: TopoDS_Shape, forConstruction: bool = False)
           Create a vertex
```

```
• obj (TopoDS_Shape)
```

• forConstruction(bool)

class cadquery.Wire(obj: TopoDS_Shape)

Bases: Shape, Mixin1D

A series of connected, ordered Edges, that typically bounds a Face

Parameters

obj (TopoDS_Shape)

 $Vertices() \rightarrow List[Vertex]$

Ordered list of vertices of the wire.

Return type

List[Vertex]

__iter__() \rightarrow Iterator[Edge]

Iterate over edges in an ordered way.

Return type

Iterator[Edge]

 $\textbf{classmethod assembleEdges}(\textit{listOfEdges: Iterable[Edge]}) \rightarrow \textit{Wire}$

Attempts to build a wire that consists of the edges in the provided list

Parameters

- cls
- listOfEdges (Iterable[Edge]) a list of Edge objects. The edges are not to be consecutive.

Returns

a wire with the edges assembled

Return type

Wire

BRepBuilderAPI_MakeWire::Error() values:

- BRepBuilderAPI_WireDone = 0
- BRepBuilderAPI_EmptyWire = 1
- BRepBuilderAPI_DisconnectedWire = 2
- BRepBuilderAPI NonManifoldWire = 3

chamfer2D($d: float, vertices: Iterable[Vertex]) \rightarrow Wire$

Apply 2D chamfer to a wire

Parameters

- d(float)
- vertices (Iterable[Vertex])

Return type

Wire

```
close() \rightarrow Wire
     Close a Wire
          Return type
              Wire
          Parameters
              • cls
          Returns
              List[Wire]
          Return type
```

classmethod combine(listOfWires: Iterable[Wire | Edge], tol: float = 1e-09) \rightarrow List[Wire]

Attempt to combine a list of wires and edges into a new wire.

- listOfWires (Iterable[Wire | Edge])
- tol (float) default 1e-9

List[Wire]

fillet(radius: float, vertices: Iterable[Vertex] | None = None) \rightarrow Wire Apply 2D or 3D fillet to a wire

Parameters

- radius (float) the radius of the fillet, must be > zero
- vertices (Iterable[Vertex] / None) the vertices to delete (where the fillet will be applied). By default all vertices are deleted except ends of open wires.

Returns

A wire with filleted corners

Return type

Wire

fillet2D(radius: float, vertices: Iterable[Vertex]) \rightarrow Wire

Apply 2D fillet to a wire

Parameters

- radius (float)
- vertices (Iterable[Vertex])

Return type

Wire

classmethod makeCircle(radius: float, center: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], normal: Vector | Tuple[int | float, int | float] | Tuple[int | float, $int \mid float, int \mid float) \rightarrow Wire$

Makes a Circle centered at the provided point, having normal in the provided direction

- radius (float) floating point radius of the circle, must be > 0
- (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) - vector representing the center of the circle

• normal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) - vector representing the direction of the plane the circle should lie in

Return type

Wire

classmethod makeEllipse(x_radius : float, y_radius : float, center: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], normal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], xDir: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], angle1: float = 360.0, angle2: float = 360.0, rotation_angle: float = 0.0, closed: bool = True) \rightarrow Wire

Makes an Ellipse centered at the provided point, having normal in the provided direction

Parameters

- **x_radius** (*float*) floating point major radius of the ellipse (x-axis), must be > 0
- y_radius (float) floating point minor radius of the ellipse (y-axis), must be > 0
- center (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the center of the circle
- normal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the direction of the plane the circle should lie in
- angle1 (float) start angle of arc
- angle2 (float) end angle of arc
- rotation_angle (float) angle to rotate the created ellipse / arc
- xDir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- closed (bool)

Return type

Wire

classmethod makeHelix(pitch: float, height: float, radius: float, center: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angle: float = 360.0, lefthand: bool = False) \rightarrow Wire

Make a helix with a given pitch, height and radius By default a cylindrical surface is used to create the helix. If the fourth parameter is set (the apex given in degree) a conical surface is used instead'

- $\bullet \ \, \textbf{pitch} \, (\textit{float})$
- **height** (float)
- radius (float)
- center (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

```
• angle (float)
```

• lefthand (bool)

Return type

Wire

classmethod makePolygon(listOfVertices: Iterable[Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]], forConstruction: bool = False, close: bool = False) \rightarrow Wire

Construct a polygonal wire from points.

Parameters

- listOfVertices (Iterable[Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]])
- forConstruction (bool)
- close (bool)

Return type

Wire

offset2D(d: float, kind: $Literal['arc', 'intersection', 'tangent'] = 'arc') <math>\rightarrow List[Wire]$ Offsets a planar wire

Parameters

- d(float)
- kind (Literal['arc', 'intersection', 'tangent'])

Return type

List[Wire]

 $stitch(other: Wire) \rightarrow Wire$

Attempt to stitch wires

Parameters

other (Wire)

Return type

Wire

class cadquery. **Workplane**(*obj*: Vector | Location | Shape | Sketch)

class cadquery. Workplane (inPlane: Plane | str = 'XY', origin: Tuple[float, float] | Tuple[float, float] | Vector = (0, 0, 0), obj: Vector | Location | Shape | Sketch | None = None)

Bases: object

Defines a coordinate system in space, in which 2D coordinates can be used.

- plane(a Plane object, or a string in (XY/YZ/XZ/front/back/top/bottom/left/right))
 the plane in which the workplane will be done
- origin (a 3-tuple in global coordinates, or None to default to the origin) the desired origin of the new workplane
- **obj** (a CAD primitive, or None to use the centerpoint of the plane as the initial stack value.) an object to use initially for the stack

Raises

ValueError if the provided plane is not a plane, a valid named workplane

Returns

A Workplane object, with coordinate system matching the supplied plane.

The most common use is:

```
s = Workplane("XY")
```

After creation, the stack contains a single point, the origin of the underlying plane, and the *current point* is on the origin.

1 Note

You can also create workplanes on the surface of existing faces using workplane()

```
__add__(other: Workplane | Solid | Compound) \rightarrow T
     Syntactic sugar for union.
     Notice that r = a + b is equivalent to r = a.union(b) and r = a \mid b.
         Parameters
              • self (T)
              • other (Workplane / Solid / Compound)
         Return type
__and__(other: Workplane | Solid | Compound) \rightarrow T
     Syntactic sugar for intersect.
     Notice that r = a \& b is equivalent to r = a.intersect(b).
     Example:
     Box = Workplane("XY").box(1, 1, 1, centered=(False, False))
     Sphere = Workplane("XY").sphere(1)
     result = Box & Sphere
         Parameters
              • self (T)
              • other (Workplane / Solid / Compound)
         Return type
             T
__init__(obj: Vector | Location | Shape | Sketch) \rightarrow None
__init__(inPlane: Plane | str = 'XY', origin: Tuple[float, float] | Tuple[float, float, float] | Vector = (0, 0, 0),
           obj: Vector | Location | Shape | Sketch | None = None \rightarrow None
     make a workplane from a particular plane
```

- inPlane(a Plane object, or a string in (XY/YZ/XZ/front/back/top/bottom/left/right))
 the plane in which the workplane will be done
- origin (a 3-tuple in global coordinates, or None to default to the origin) the desired origin of the new workplane
- **obj** (a CAD primitive, or None to use the centerpoint of the plane as the initial stack value.)—an object to use initially for the stack

Raises

ValueError if the provided plane is not a plane, or one of XY|YZ|XZ

Returns

A Workplane object, with coordinate system matching the supplied plane.

The most common use is:

```
s = Workplane("XY")
```

After creation, the stack contains a single point, the origin of the underlying plane, and the *current point* is on the origin.

```
__iter__() \rightarrow Iterator[Shape]
```

Special method for iterating over Shapes in objects

Parameters

self(T)

Return type

Iterator[Shape]

```
__mul__(other: Workplane | Solid | Compound) \rightarrow T
```

Syntactic sugar for intersect.

Notice that r = a * b is equivalent to r = a.intersect(b).

Example:

```
Box = Workplane("XY").box(1, 1, 1, centered=(False, False, False))
Sphere = Workplane("XY").sphere(1)
result = Box * Sphere
```

Parameters

- self(T)
- other (Workplane / Solid / Compound)

Return type

T

```
__or__(other: Workplane | Solid | Compound) \rightarrow T
```

Syntactic sugar for union.

Notice that $r = a \mid b$ is equivalent to r = a.union(b) and r = a + b.

Example:

```
Box = Workplane("XY").box(1, 1, 1, centered=(False, False, False))
Sphere = Workplane("XY").sphere(1)
result = Box | Sphere
```

```
Parameters
             • self (T)
             • other (Workplane / Solid / Compound)
         Return type
             T
__sub__(other: Workplane | Solid | Compound) \rightarrow T
     Syntactic sugar for cut.
     Notice that r = a - b is equivalent to r = a.cut(b).
     Example:
     Box = Workplane("XY").box(1, 1, 1, centered=(False, False, False))
     Sphere = Workplane("XY").sphere(1)
     result = Box - Sphere
         Parameters
             • self(T)
             • other (Workplane / Solid / Compound)
         Return type
__truediv__(other: Workplane | Solid | Compound) \rightarrow T
     Syntactic sugar for intersect.
     Notice that r = a / b is equivalent to r = a.split(b).
     Example:
     Box = Workplane("XY").box(1, 1, 1, centered=(False, False, False))
     Sphere = Workplane("XY").sphere(1)
     result = Box / Sphere
         Parameters
             • self(T)
             • other (Workplane / Solid / Compound)
         Return type
             T
__weakref__
    list of weak references to the object (if defined)
add(obj: Workplane) \rightarrow T
add(obj: Vector | Location | Shape | Sketch) \rightarrow T
add(obj: Iterable[Vector | Location | Shape | Sketch]) → T
     Adds an object or a list of objects to the stack
         Parameters
             obj (a Workplane, CAD primitive, or list of CAD primitives) — an object to
             add
```

Returns

a Workplane with the requested operation performed

If a Workplane object, the values of that object's stack are added. If a list of cad primitives, they are all added. If a single CAD primitive then it is added.

Used in rare cases when you need to combine the results of several CQ results into a single Workplane object.

```
all() \rightarrow List[T]
```

Return a list of all CQ objects on the stack.

useful when you need to operate on the elements individually.

Contrast with vals, which returns the underlying objects for all of the items on the stack

Parameters

self(T)

Return type

List[T]

ancestors(kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound'], tag: $str \mid None = None$) $\rightarrow T$

Select topological ancestors.

Parameters

- **self** (*T*)
- kind (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound']) kind of ancestor, e.g. "Face" or "Edge"
- tag (str / None) if set, search the tagged object instead of self

Returns

a Workplane object whose stack contains selected ancestors.

Return type

T

 $\begin{array}{l} \textbf{apply}(\textit{f: Callable[[Iterable[Vector \mid Location \mid Shape \mid Sketch]], Iterable[Vector \mid Location \mid Shape \mid Sketch]]) \rightarrow T \end{array}$

Apply a callable to all items at once.

Parameters

- self(T)
- f (Callable[[Iterable[Vector | Location | Shape | Sketch]], Iterable[Vector | Location | Shape | Sketch]]) Callable to be applied.

Returns

Workplane object with f applied to all items.

Return type

T

bezier(listOfXYTuple: Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector], forConstruction: bool = False, includeCurrent: bool = False, makeWire: bool = False) \rightarrow T

Make a cubic Bézier curve by the provided points (2D or 3D).

- **self**(T)
- listOfXYTuple (Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector]) Bezier control points and end point. All points except the last point are Bezier control points, and the last point is the end point
- **includeCurrent** (bool) Use the current point as a starting point of the curve
- makeWire (bool) convert the resulting bezier edge to a wire
- forConstruction (bool)

Returns

a Workplane object with the current point at the end of the bezier

Return type

T

The Bézier Will begin at either current point or the first point of listOfXYTuple, and end with the last point of listOfXYTuple

box(length: float, width: float, height: float, centered: bool | Tuple[bool, bool, bool] = True, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True) \rightarrow T

Return a 3d box with specified dimensions for each object on the stack.

Parameters

- **self** (T)
- **length** (*float*) box size in X direction
- width (float) box size in Y direction
- height (float) box size in Z direction
- **centered** (bool | Tuple[bool, bool, bool]) If True, the box will be centered around the reference point. If False, the corner of the box will be on the reference point and it will extend in the positive x, y and z directions. Can also use a 3-tuple to specify centering along each axis.
- **combine** (*bool* | *Literal*['*cut*', 'a', 's']) should the results be combined with other solids on the stack (and each other)?
- **clean** (bool) call **clean**() afterwards to have a clean shape

Return type

T

One box is created for each item on the current stack. If no items are on the stack, one box using the current workplane center is created.

If combine is true, the result will be a single object on the stack. If a solid was found in the chain, the result is that solid with all boxes produced fused onto it otherwise, the result is the combination of all the produced boxes.

If combine is false, the result will be a list of the boxes produced.

Most often boxes form the basis for a part:

```
# make a single box with lower left corner at origin
s = Workplane().box(1, 2, 3, centered=False)
```

But sometimes it is useful to create an array of them:

```
# create 4 small square bumps on a larger base plate:
s = (
    Workplane()
    .box(4, 4, 0.5)
    .faces(">Z")
    .workplane()
    .rect(3, 3, forConstruction=True)
    .vertices()
    .box(0.25, 0.25, 0.25, combine=True)
)
```

cboreHole(diameter: float, cboreDiameter: float, cboreDepth: float, depth: float | None = None, clean: bool = True) \rightarrow T

Makes a counterbored hole for each item on the stack.

Parameters

- **self** (T)
- **diameter** (*float*) the diameter of the hole
- **cboreDiameter** (*float*) the diameter of the cbore, must be greater than hole diameter
- **cboreDepth** (*float* > **0**) depth of the counterbore
- depth (float > 0 or None to drill thru the entire part) the depth of the hole
- **clean** (bool) call *clean* () afterwards to have a clean shape

Return type

The surface of the hole is at the current workplane plane.

One hole is created for each item on the stack. A very common use case is to use a construction rectangle to define the centers of a set of holes, like so:

```
s = (
    Workplane()
    .box(2, 4, 0.5)
    .faces(">Z")
    .workplane()
    .rect(1.5, 3.5, forConstruction=True)
    .vertices()
    .cboreHole(0.125, 0.25, 0.125, depth=None)
)
```

This sample creates a plate with a set of holes at the corners.

Plugin Note: this is one example of the power of plugins. Counterbored holes are quite time consuming to create, but are quite easily defined by users.

see cskHole() to make countersinks instead of counterbores

```
center(x: float, y: float) \rightarrow T
```

Shift local coordinates to the specified location.

The location is specified in terms of local coordinates.

- **self** (*T*)
- **x** (*float*) the new x location
- y (float) the new y location

the Workplane object, with the center adjusted.

Return type

T

The current point is set to the new center. This method is useful to adjust the center point after it has been created automatically on a face, but not where you'd like it to be.

In this example, we adjust the workplane center to be at the corner of a cube, instead of the center of a face, which is the default:

The result is a cube with a round boss on the corner

```
chamfer(length: float, length2: float | None = None) \rightarrow T
```

Chamfers a solid on the selected edges.

The edges on the stack are chamfered. The solid to which the edges belong must be in the parent chain of the selected edges.

Optional parameter *length2* can be supplied with a different value than *length* for a chamfer that is shorter on one side longer on the other side.

Parameters

- **self** (*T*)
- **length** (*float*) the length of the chamfer, must be greater than zero
- length2 (float / None) optional parameter for asymmetrical chamfer

Raises

- **ValueError** if at least one edge is not selected
- **ValueError** if the solid containing the edge is not in the chain

Returns

CQ object with the resulting solid selected.

Return type

T

This example will create a unit cube, with the top edges chamfered:

```
s = Workplane("XY").box(1, 1, 1).faces("+Z").chamfer(0.1)
```

This example will create chamfers longer on the sides:

```
s = Workplane("XY").box(1, 1, 1).faces("+Z").chamfer(0.2, 0.1)
```

 $circle(radius: float, for Construction: bool = False) \rightarrow T$

Make a circle for each item on the stack.

Parameters

- self(T)
- radius (float) radius of the circle
- **forConstruction** (true if the wires are for reference, false if they are creating part geometry) should the new wires be reference geometry only?

Returns

a new CQ object with the created wires on the stack

Return type

T

A common use case is to use a for-construction rectangle to define the centers of a hole pattern:

```
s = Workplane().rect(4.0, 4.0, forConstruction=True).vertices().circle(0.25)
```

Creates 4 circles at the corners of a square centered on the origin. Another common case is to use successive circle() calls to create concentric circles. This works because the center of a circle is its reference point:

```
s = Workplane().circle(2.0).circle(1.0)
```

Creates two concentric circles, which when extruded will form a ring.

Future Enhancements:

better way to handle forConstruction project points not in the workplane plane onto the workplane plane

```
clean() \rightarrow T
```

Cleans the current solid by removing unwanted edges from the faces.

Normally you don't have to call this function. It is automatically called after each related operation. You can disable this behavior with *clean=False* parameter if method has any. In some cases this can improve performance drastically but is generally dis-advised since it may break some operations such as fillet.

Note that in some cases where lots of solid operations are chained, *clean()* may actually improve performance since the shape is 'simplified' at each step and thus next operation is easier.

Also note that, due to limitation of the underlying engine, *clean* may fail to produce a clean output in some cases such as spherical faces.

Parameters

self(T)

Return type

T

$close() \rightarrow T$

End construction, and attempt to build a closed wire.

Returns

a CQ object with a completed wire on the stack, if possible.

Parameters

self(T)

Return type

T

After 2D (or 3D) drafting with methods such as lineTo, threePointArc, tangentArcPoint and polyline, it is necessary to convert the edges produced by these into one or more wires.

When a set of edges is closed, CadQuery assumes it is safe to build the group of edges into a wire. This example builds a simple triangular prism:

```
s = Workplane().lineTo(1, 0).lineTo(1, 1).close().extrude(0.2)
```

combine(clean: bool = True, glue: bool = False, tol: float | None = None) \rightarrow T

Attempts to combine all of the items on the stack into a single item.

WARNING: all of the items must be of the same type!

Parameters

- **self**(T)
- **clean** (bool) call **clean**() afterwards to have a clean shape
- **glue** (*bool*) use a faster gluing mode for non-overlapping shapes (default False)
- tol (float / None) tolerance value for fuzzy bool operation mode (default None)

Raises

ValueError if there are no items on the stack, or if they cannot be combined

Returns

a CQ object with the resulting object selected

Return type

T

```
combineSolids(otherCQToCombine: Workplane | None = None) \rightarrow Workplane
```

!!!DEPRECATED!!! use union() Combines all solids on the current stack, and any context object, together into a single object.

After the operation, the returned solid is also the context solid.

Parameters

```
otherCQToCombine (Workplane / None) – another CadQuery to combine.
```

Returns

a CQ object with the resulting combined solid on the stack.

Return type

Workplane

Most of the time, both objects will contain a single solid, which is combined and returned on the stack of the new object.

```
compounds (selector: str \mid Selector \mid None = None, tag: <math>str \mid None = None) \rightarrow T
```

Select compounds on the stack, optionally filtering the selection. If there are multiple objects on the stack, they are collected and a list of all the distinct compounds is returned.

- **self**(T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)

• tag (str / None) – if set, search the tagged object instead of self

Returns

a CQ object whose stack contains all of the *distinct* compounds of *all* objects on the current stack, filtered by the provided selector.

Return type

T

A compound contains multiple CAD primitives that resulted from a single operation, such as a union, cut, split, or fillet. Compounds can contain multiple edges, wires, or solids.

$consolidateWires() \rightarrow T$

Attempt to consolidate wires on the stack into a single. If possible, a new object with the results are returned. if not possible, the wires remain separated

Parameters

self(T)

Return type

T

$copyWorkplane(obj: T) \rightarrow T$

Copies the workplane from obj.

Parameters

obj (a CQ object) – an object to copy the workplane from

Returns

a CQ object with obj's workplane

Return type

T

 $\textbf{cskHole} (\textit{diameter: float, cskDiameter: float, cskAngle: float, depth: float | None = None, clean: bool = True) } \rightarrow T$

Makes a countersunk hole for each item on the stack.

Parameters

- self(T)
- **diameter** (*float* > 0) the diameter of the hole
- **cskDiameter** (*float*) the diameter of the countersink, must be greater than hole diameter
- **cskAngle** (float > 0) angle of the countersink, in degrees (82 is common)
- depth(float > 0 or None to drill thru the entire part.) the depth of the hole
- **clean** (bool) call **clean**() afterwards to have a clean shape

Return type

T

The surface of the hole is at the current workplane.

One hole is created for each item on the stack. A very common use case is to use a construction rectangle to define the centers of a set of holes, like so:

```
s = (
    Workplane()
    .box(2, 4, 0.5)
    .faces(">Z")
    .workplane()
    .rect(1.5, 3.5, forConstruction=True)
    .vertices()
    .cskHole(0.125, 0.25, 82, depth=None)
)
```

This sample creates a plate with a set of holes at the corners.

Plugin Note: this is one example of the power of plugins. CounterSunk holes are quite time consuming to create, but are quite easily defined by users.

see cboreHole() to make counterbores instead of countersinks

 $cut(toCut: Workplane \mid Solid \mid Compound, clean: bool = True, tol: float \mid None = None) \rightarrow T$

Cuts the provided solid from the current solid, IE, perform a solid subtraction.

Parameters

- **self** (T)
- toCut (Workplane / Solid / Compound) a solid object, or a Workplane object having a solid
- **clean** (bool) call **clean**() afterwards to have a clean shape
- tol (float | None) tolerance value for fuzzy bool operation mode (default None)

Raises

ValueError – if there is no solid to subtract from in the chain

Returns

a Workplane object with the resulting object selected

Return type

T

cutBlind(until: float | Literal['next', 'last'] | Face, clean: bool = True, both: bool = False, taper: float | None = None) \rightarrow T

Use all un-extruded wires in the parent chain to create a prismatic cut from existing solid.

Specify either a distance value, or one of "next", "last" to indicate a face to cut to.

Similar to extrude, except that a solid in the parent chain is required to remove material from. cutBlind always removes material from a part.

- **self** (*T*)
- until (float | Literal['next', 'last'] | ~cadquery.occ_impl.shapes. Face) The distance to cut to, normal to the workplane plane. When a negative float is passed the cut extends this far in the opposite direction to the normal of the plane (i.e in the solid). The string "next" cuts until the next face orthogonal to the wire normal. "last" cuts to the last face. If an object of type Face is passed, then the cut will extend until this face.
- **clean** (bool) call **clean**() afterwards to have a clean shape

- **both** (*bool*) cut in both directions symmetrically
- taper (float / None) angle for optional tapered extrusion

Raises

ValueError – if there is no solid to subtract from in the chain

Returns

a CQ object with the resulting object selected

Return type

T

see cutThruAll() to cut material from the entire part

 $cutEach(fcn: Callable[[Location], Shape], useLocalCoords: bool = False, clean: bool = True) \rightarrow T$

Evaluates the provided function at each point on the stack (ie, eachpoint) and then cuts the result from the context solid.

Parameters

- **self** (T)
- fcn (Callable[[Location], Shape]) a function suitable for use in the eachpoint method: ie, that accepts a vector
- useLocalCoords (bool) same as for eachpoint()
- **clean** (bool) call *clean*() afterwards to have a clean shape

Raises

ValueError – if no solids or compounds are found in the stack or parent chain

Returns

a CQ object that contains the resulting solid

Return type

T

```
cutThruAll(clean: bool = True, taper: float = 0) \rightarrow T
```

Use all un-extruded wires in the parent chain to create a prismatic cut from existing solid. Cuts through all material in both normal directions of workplane.

Similar to extrude, except that a solid in the parent chain is required to remove material from. cutThruAll always removes material from a part.

Parameters

- **self** (*T*)
- **clean** (bool) call **clean**() afterwards to have a clean shape
- taper (float)

Raises

- ValueError if there is no solid to subtract from in the chain
- **ValueError** if there are no pending wires to cut with

Returns

a CQ object with the resulting object selected

Return type

see cutBlind() to cut material to a limited depth

```
cylinder(height: float, radius: float, direct: ~typing.Tuple[float, float, float] | \sim cadquery.occ_impl.geom.Vector = Vector: (0.0, 0.0, 1.0), angle: float = 360, centered: bool | \sim typing.Tuple[bool, bool, bool] = True, combine: bool | \sim typing.Literal['cut', 'a', 's'] = True, clean: bool = True) \rightarrow T
```

Returns a cylinder with the specified radius and height for each point on the stack

Parameters

- **self**(*T*)
- **height** (*float*) The height of the cylinder
- radius (float) The radius of the cylinder
- direct (A three-tuple) The direction axis for the creation of the cylinder
- angle (float > 0) The angle to sweep the cylinder arc through
- **centered** (bool | Tuple[bool, bool, bool]) If True, the cylinder will be centered around the reference point. If False, the corner of a bounding box around the cylinder will be on the reference point and it will extend in the positive x, y and z directions. Can also use a 3-tuple to specify centering along each axis.
- **combine** (*true to combine shapes, false otherwise*) Whether the results should be combined with other solids on the stack (and each other)
- **clean** (bool) call **clean**() afterwards to have a clean shape

Returns

A cylinder object for each point on the stack

Return type

T

One cylinder is created for each item on the current stack. If no items are on the stack, one cylinder is created using the current workplane center.

If combine is true, the result will be a single object on the stack. If a solid was found in the chain, the result is that solid with all cylinders produced fused onto it otherwise, the result is the combination of all the produced cylinders.

If combine is false, the result will be a list of the cylinders produced.

```
each(callback: Callable[[Vector | Location | Shape | Sketch], Shape], useLocalCoordinates: bool = False, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True) <math>\rightarrow T
```

Runs the provided function on each value in the stack, and collects the return values into a new CQ object.

Special note: a newly created workplane always has its center point as its only stack item

- **self**(T)
- **callBackFunction** the function to call for each item on the current stack.
- useLocalCoordinates (bool) should values be converted from local coordinates first?
- **combine** (*bool | Literal['cut', 'a', 's']*) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape

```
• callback(Callable[[Vector / Location / Shape / Sketch], Shape])
Return type
```

The callback function must accept one argument, which is the item on the stack, and return one object, which is collected. If the function returns None, nothing is added to the stack. The object passed into the callBackFunction is potentially transformed to local coordinates, if useLocalCoordinates is true

useLocalCoordinates is very useful for plugin developers.

If false, the callback function is assumed to be working in global coordinates. Objects created are added as-is, and objects passed into the function are sent in using global coordinates

If true, the calling function is assumed to be working in local coordinates. Objects are transformed to local coordinates before they are passed into the callback method, and result objects are transformed to global coordinates after they are returned.

This allows plugin developers to create objects in local coordinates, without worrying about the fact that the working plane is different than the global coordinate system.

TODO: wrapper object for Wire will clean up for Construction flag everywhere

```
eachpoint(arg: Shape | Workplane | Callable[[Location], Shape], useLocalCoordinates: bool = False, combine: bool | Literal['cut', 'a', 's'] = False, clean: bool = True) \rightarrow T
```

Same as each(), except arg is translated by the positions on the stack. If arg is a callback function, then the function is called for each point on the stack, and the resulting shape is used. :return: CadQuery object which contains a list of vectors (points) on its stack.

Parameters

- **self** (T)
- useLocalCoordinates (bool) should points be in local or global coordinates
- **combine** (*bool | Literal['cut', 'a', 's']*) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape
- arg(Shape / Workplane / Callable[[Location], Shape])

Return type

T

The resulting object has a point on the stack for each object on the original stack. Vertices and points remain a point. Faces, Wires, Solids, Edges, and Shells are converted to a point by using their center of mass.

If the stack has zero length, a single point is returned, which is the center of the current workplane/coordinate system

```
edges(selector: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
```

Select the edges of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the edges of all objects are collected and a list of all the distinct edges is returned.

- **self** (T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

a CQ object whose stack contains all of the *distinct* edges of *all* objects on the current stack, filtered by the provided selector.

Return type

T

If there are no edges for any objects on the current stack, an empty CQ object is returned

The typical use is to select the edges of a single object on the stack. For example:

```
Workplane().box(1, 1, 1).faces("+Z").edges().size()
```

returns 4, because the topmost face of a cube will contain four edges. Similarly:

```
Workplane().box(1, 1, 1).edges().size()
```

returns 12, because a cube has a total of 12 edges, And:

```
Workplane().box(1, 1, 1).edges("|Z").size()
```

returns 4, because a cube has 4 edges parallel to the z direction

ellipse(x_radius: float, y_radius: float, rotation_angle: float = 0.0, forConstruction: bool = False) \rightarrow T Make an ellipse for each item on the stack.

Parameters

- **self**(T)
- **x_radius** (*float*) x radius of the ellipse (x-axis of plane the ellipse should lie in)
- **y_radius** (*float*) y radius of the ellipse (y-axis of plane the ellipse should lie in)
- **forConstruction** (true if the wires are for reference, false if they are creating part geometry) should the new wires be reference geometry only?

Returns

a new CQ object with the created wires on the stack

Return type

T

NOTE Due to a bug in opencascade (https://tracker.dev.opencascade.org/view.php?id=31290) the center of mass (equals center for next shape) is shifted. To create concentric ellipses use:

```
Workplane("XY").center(10, 20).ellipse(100, 10).center(0, 0).ellipse(50, 5)
```

```
ellipseArc(x_radius: float, y_radius: float, angle1: float = 360, angle2: float = 360, rotation_angle: float = 0.0, sense: Literal[-1, 1] = 1, forConstruction: bool = False, startAtCurrent: bool = True, makeWire: bool = False) \rightarrow T
```

Draw an elliptical arc with x and y radiuses either with start point at current point or or current point being the center of the arc

- **self**(T)
- **x_radius** (*float*) x radius of the ellipse (along the x-axis of plane the ellipse should lie in)

- **y_radius** (*float*) y radius of the ellipse (along the y-axis of plane the ellipse should lie in)
- angle1 (float) start angle of arc
- angle2 (float) end angle of arc (angle2 == angle1 return closed ellipse = default)
- rotation_angle (float) angle to rotate the created ellipse / arc
- sense (Literal[-1, 1]) clockwise (-1) or counter clockwise (1)
- **startAtCurrent** (*bool*) True: start point of arc is moved to current point; False: center of arc is on current point
- **makeWire** (*bool*) convert the resulting arc edge to a wire
- forConstruction (bool)

Return type

7

end(n: int = 1) $\rightarrow Workplane$

Return the nth parent of this CQ element

Parameters

n (int) – number of ancestor to return (default: 1)

Return type

a CQ object

Raises

ValueError if there are no more parents in the chain.

For example:

```
CQ(obj).faces("+Z").vertices().end()
```

will return the same as:

```
CQ(obj).faces("+Z")
```

export (fname: str, tolerance: float = 0.1, angularTolerance: float = 0.1, opt: $Dict[str, Any] \mid None = None$) $\rightarrow T$

Export Workplane to file.

Parameters

- **self** (*T*)
- path Filename.
- **tolerance** (*float*) the deflection tolerance, in model units. Default 0.1.
- **angularTolerance** (*float*) the angular tolerance, in radians. Default 0.1.
- opt (Dict[str, Any] | None) additional options passed to the specific exporter. Default None.
- fname (str)

Returns

Self.

Return type

```
exportSvg(fileName: str) \rightarrow None
```

Exports the first item on the stack as an SVG file

For testing purposes mainly.

Parameters

fileName (str) – the filename to export, absolute path to the file

Return type

None

extrude(until: float | Literal['next', 'last'] | Face, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True, both: bool = False, taper: float | None = None) \rightarrow T

Use all un-extruded wires in the parent chain to create a prismatic solid.

Parameters

- **self**(T)
- until (float | Literal['next', 'last'] | ~cadquery.occ_impl.shapes. Face) The distance to extrude, normal to the workplane plane. When a float is passed, the extrusion extends this far and a negative value is in the opposite direction to the normal of the plane. The string "next" extrudes until the next face orthogonal to the wire normal. "last" extrudes to the last face. If a object of type Face is passed then the extrusion will extend until this face. Note that the Workplane must contain a Solid for extruding to a given face.
- **combine** (bool | Literal ['cut', 'a', 's']) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape
- **both** (*bool*) extrude in both directions symmetrically
- taper (float | None) angle for optional tapered extrusion

Returns

a CQ object with the resulting solid selected.

Return type

T

The returned object is always a CQ object, and depends on whether combine is True, and whether a context solid is already defined:

- if combine is False, the new value is pushed onto the stack. Note that when extruding until a specified face, combine can not be False
- if combine is true, the value is combined with the context solid if it exists, and the resulting solid becomes the new context solid.

```
faces(selector: str \mid Selector \mid None = None, tag: str \mid None = None) <math>\rightarrow T
```

Select the faces of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the faces of all objects are collected and a list of all the distinct faces is returned.

- **self**(T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

a CQ object whose stack contains all of the *distinct* faces of *all* objects on the current stack, filtered by the provided selector.

Return type

T

If there are no faces for any objects on the current stack, an empty CQ object is returned.

The typical use is to select the faces of a single object on the stack. For example:

```
Workplane().box(1, 1, 1).faces("+Z").size()
```

returns 1, because a cube has one face with a normal in the +Z direction. Similarly:

```
Workplane().box(1, 1, 1).faces().size()
```

returns 6, because a cube has a total of 6 faces, And:

```
Workplane().box(1, 1, 1).faces("|Z").size()
```

returns 2, because a cube has 2 faces having normals parallel to the z direction

fillet(radius: float) \rightarrow T

Fillets a solid on the selected edges.

The edges on the stack are filleted. The solid to which the edges belong must be in the parent chain of the selected edges.

Parameters

- self(T)
- radius (float) the radius of the fillet, must be > zero

Raises

- ValueError if at least one edge is not selected
- **ValueError** if the solid containing the edge is not in the chain

Returns

CQ object with the resulting solid selected.

Return type

T

This example will create a unit cube, with the top edges filleted:

```
s = Workplane().box(1, 1, 1).faces("+Z").edges().fillet(0.1)
```

filter(*f*: Callable[[Vector | Location | Shape | Sketch], bool]) → T

Filter items using a boolean predicate.

Parameters

- **self**(T)
- **f** (Callable[[Vector | Location | Shape | Sketch], bool]) Callable to be used for filtering.

Returns

Workplane object with filtered items.

Return type

T

findFace($searchStack: bool = True, searchParents: bool = True) <math>\rightarrow$ Face

Finds the first face object in the chain, searching from the current node backwards through parents until one is found.

Parameters

- **searchStack** (*bool*) should objects on the stack be searched first.
- **searchParents** (*boo1*) should parents be searched?

Returns

A face or None if no face is found.

Return type

Face

findSolid($searchStack: bool = True, searchParents: bool = True) <math>\rightarrow Solid \mid Compound$

Finds the first solid object in the chain, searching from the current node backwards through parents until one is found.

Parameters

- **searchStack** (*boo1*) should objects on the stack be searched first?
- **searchParents** (*boo1*) should parents be searched?

Raises

ValueError – if no solid is found

Return type

Solid | Compound

This function is very important for chains that are modifying a single parent object, most often a solid.

Most of the time, a chain defines or selects a solid, and then modifies it using workplanes or other operations.

Plugin Developers should make use of this method to find the solid that should be modified, if the plugin implements a unary operation, or if the operation will automatically merge its results with an object already on the stack.

```
\textbf{first()} \rightarrow T
```

Return the first item on the stack

Returns

the first item on the stack.

Return type

a CQ object

Parameters

self(T)

 $\textbf{hLine}(\textit{distance: float, for Construction: bool} = \textit{False}) \rightarrow T$

Make a horizontal line from the current point the provided distance

- self(T)
- distance (float) -
- (x) distance from current point

• forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

T

hLineTo(xCoord: float, forConstruction: bool = False) \rightarrow T

Make a horizontal line from the current point to the provided x coordinate.

Useful if it is more convenient to specify the end location rather than distance, as in hLine()

Parameters

- self(T)
- **xCoord** (*float*) x coordinate for the end of the line
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

T

hole(diameter: float, depth: float | None = None, clean: bool = True) \rightarrow T

Makes a hole for each item on the stack.

Parameters

- **self** (*T*)
- diameter (float) the diameter of the hole
- depth(float > 0 or None to drill thru the entire part.)—the depth of the hole
- clean (bool) call clean() afterwards to have a clean shape

Return type

T

The surface of the hole is at the current workplane.

One hole is created for each item on the stack. A very common use case is to use a construction rectangle to define the centers of a set of holes, like so:

```
s = (
    Workplane()
    .box(2, 4, 0.5)
    .faces(">Z")
    .workplane()
    .rect(1.5, 3.5, forConstruction=True)
    .vertices()
    .hole(0.125, 82)
)
```

This sample creates a plate with a set of holes at the corners.

Plugin Note: this is one example of the power of plugins. CounterSunk holes are quite time consuming to create, but are quite easily defined by users.

see cboreHole() and cskHole() to make counterbores or countersinks

interpPlate(surf_edges: Sequence[Tuple[float, float] | Tuple[float, float] | Vector] | Sequence[Edge | Wire] | Workplane, surf_pts: Sequence[Tuple[float, float] | Tuple[float, float, float] | Vector] = [], thickness: float = 0, combine: bool | Literal['cut', 'a', 's'] = False, clean: bool = True, degree: int = 3, nbPtsOnCur: int = 15, nbIter: int = 2, anisotropy: bool = False, tol2d: float = 1e-05, tol3d: float = 0.0001, tolAng: float = 0.01, tolCurv: float = 0.1, maxDeg: int = 0.1, maxSegments: int = 0.1

Returns a plate surface that is 'thickness' thick, enclosed by 'surf_edge_pts' points, and going through 'surf_pts' points. Using pushPoints directly with interpPlate and combine=True, can be very resource intensive depending on the complexity of the shape. In this case set combine=False.

Parameters

- **self** (*T*)
- **surf_edges** (Sequence[Tuple[float, float] | Tuple[float, float, float] | Vector] | Sequence[Edge | Wire] | Workplane) list of [x,y,z] ordered coordinates or list of ordered or unordered edges, wires
- surf_pts (Sequence[Tuple[float, float] | Tuple[float, float, float] | Vector]) list of points (uses only edges if [])
- **thickness** (*float*) value may be negative or positive depending on thickening direction (2D surface if 0)
- **combine** (*bool* | *Literal*['*cut*', 'a', 's']) should the results be combined with other solids on the stack (and each other)?
- **clean** (bool) call **clean**() afterwards to have a clean shape
- degree (int) >= 2
- **nbPtsOnCur** (*int*) number of points on curve >= 15
- **nbIter** (int) number of iterations >= 2
- anisotropy (bool) -= bool Anisotropy
- tol2d (float) 2D tolerance
- tol3d (float) 3D tolerance
- tolAng (float) angular tolerance
- **tolCurv** (*float*) tolerance for curvature
- maxDeg(int) highest polynomial degree >= 2
- maxSegments (int) greatest number of segments >= 2

Return type

T

intersect (*toIntersect*: Workplane | Solid | Compound, *clean*: bool = True, tol: float | None = None) \rightarrow T Intersects the provided solid from the current solid.

- **self** (T)
- toIntersect (Workplane / Solid / Compound) a solid object, or a Workplane object having a solid
- **clean** (*bool*) call *clean*() afterwards to have a clean shape

• tol (float / None) – tolerance value for fuzzy bool operation mode (default None)

Raises

ValueError – if there is no solid to intersect with in the chain

Returns

a Workplane object with the resulting object selected

Return type

T

 $invoke(f: Callable[[T], T] \mid Callable[[T], None] \mid Callable[[], None]) \rightarrow T$

Invoke a callable mapping Workplane to Workplane or None. Supports also callables that take no arguments such as breakpoint. Returns self if callable returns None.

Parameters

- **self**(T)
- **f** (Callable[[T], T] | Callable[[T], None] | Callable[[], None]) Callable to be invoked.

Returns

Workplane object.

Return type

7

 $item(i:int) \rightarrow T$

Return the ith item on the stack.

Return type

a CQ object

Parameters

- **self**(T)
- i (int)

$\textbf{largestDimension()} \rightarrow float$

Finds the largest dimension in the stack.

Used internally to create thru features, this is how you can compute how long or wide a feature must be to make sure to cut through all of the material

Raises

ValueError – if no solids or compounds are found

Returns

A value representing the largest dimension of the first solid on the stack

Return type

float

$last() \rightarrow T$

Return the last item on the stack.

Return type

a CQ object

Parameters

self(T)

line($xDist: float, yDist: float, forConstruction: bool = False) <math>\rightarrow$ T

Make a line from the current point to the provided point, using dimensions relative to the current point

Parameters

- **self** (*T*)
- xDist (float) x distance from current point
- yDist (float) y distance from current point
- forConstruction (bool)

Returns

the workplane object with the current point at the end of the new line

Return type

T

see lineTo() if you want to use absolute coordinates to make a line instead.

lineTo(x: float, y: float, forConstruction: bool = False) \rightarrow T

Make a line from the current point to the provided point

Parameters

- **self**(T)
- **x** (*float*) the x point, in workplane plane coordinates
- **y** (*float*) the y point, in workplane plane coordinates
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

T

See *line()* if you want to use relative dimensions to make a line instead.

loft($ruled: bool = False, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True) <math>\rightarrow$ T Make a lofted solid, through the set of wires.

Parameters

- **self** (T)
- ruled (bool) When set to True connects each section linearly and without continuity
- **combine** (*bool | Literal['cut', 'a', 's']*) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call *clean*() afterwards to have a clean shape

Returns

a Workplane object containing the created loft

Return type

 $map(f: Callable[[Vector | Location | Shape | Sketch], Vector | Location | Shape | Sketch]) \rightarrow T$ Apply a callable to every item separately.

Parameters

- **self**(T)
- **f**(Callable[[Vector | Location | Shape | Sketch], Vector | Location | Shape | Sketch]) Callable to be applied to every item separately.

Returns

Workplane object with f applied to all items.

Return type

T

mirror(mirrorPlane: Literal['XY', 'YX', 'XZ', 'ZX', 'YZ', 'ZY'] | Tuple[float, float] | Tuple[float, float] | Vector | Face | Workplane = 'XY', basePointVector: Tuple[float, float] | Tuple[float, float] | Vector | None = None, union: bool = False) \rightarrow T

Mirror a single CQ object.

Parameters

- **self** (T)
- mirrorPlane (string, one of "XY", "YX", "XZ", "ZX", "YZ", "ZY" the planes or the normal vector of the plane eg (1,0,0) or a Face object)—the plane to mirror about
- basePointVector (Tuple[float, float] | Tuple[float, float, float] | Vector | None) the base point to mirror about (this is overwritten if a Face is passed)
- union (bool) If true will perform a union operation on the mirrored object

Return type

T

$\textbf{mirrorX}() \to T$

Mirror entities around the x axis of the workplane plane.

Returns

a new object with any free edges consolidated into as few wires as possible.

Parameters

self(T)

Return type

T

All free edges are collected into a wire, and then the wire is mirrored, and finally joined into a new wire Typically used to make creating wires with symmetry easier.

$mirrorY() \rightarrow T$

Mirror entities around the y axis of the workplane plane.

Returns

a new object with any free edges consolidated into as few wires as possible.

Parameters

self(T)

Return type

All free edges are collected into a wire, and then the wire is mirrored, and finally joined into a new wire Typically used to make creating wires with symmetry easier. This line of code:

```
s = Workplane().lineTo(2, 2).threePointArc((3, 1), (2, 0)).mirrorX().extrude(0. \rightarrow25)
```

Produces a flat, heart shaped object

```
move(xDist: float = 0, yDist: float = 0) \rightarrow T
```

Move the specified distance from the current point, without drawing.

Parameters

- **self**(T)
- xDist(float, or none for zero) desired x distance, in local coordinates
- yDist (float, or none for zero.) desired y distance, in local coordinates

Return type

T

Not to be confused with *center()*, which moves the center of the entire workplane, this method only moves the current point (and therefore does not affect objects already drawn).

See moveTo() to do the same thing but using absolute coordinates

```
moveTo(x: float = 0, y: float = 0) \rightarrow T
```

Move to the specified point, without drawing.

Parameters

- **self** (T)
- **x** (float, or none for zero) desired x location, in local coordinates
- y (float, or none for zero.) desired y location, in local coordinates

Return type

T

Not to be confused with *center()*, which moves the center of the entire workplane, this method only moves the current point (and therefore does not affect objects already drawn).

See move() to do the same thing but using relative dimensions

```
newObject(objlist: Iterable[Vector | Location | Shape | Sketch]) → T
```

Create a new workplane object from this one.

Overrides CQ.newObject, and should be used by extensions, plugins, and subclasses to create new objects.

Parameters

- **self**(T)
- **objlist** (a list of CAD primitives) new objects to put on the stack

Returns

a new Workplane object with the current workplane as a parent.

Return type

offset2D(d: float, kind: Literal['arc', 'intersection', 'tangent'] = 'arc', forConstruction: bool = False) \rightarrow T Creates a 2D offset wire.

Parameters

- **self** (*T*)
- **d** (*float*) thickness. Negative thickness denotes offset to inside.
- **kind** (*Literal['arc'*, *'intersection'*, *'tangent']*) offset kind. Use "arc" for rounded and "intersection" for sharp edges (default: "arc")
- **forConstruction** (*bool*) Should the result be added to pending wires?

Returns

CQ object with resulting wire(s).

Return type

T

```
parametricCurve(func: Callable[[float], Tuple[float, float] | Tuple[float, float] | Vector], N: int = 400, start: float = 0, stop: float = 1, tol: float = 1e-06, minDeg: int = 1, maxDeg: int = 6, smoothing: Tuple[float, float] | None = (1, 1, 1), makeWire: bool = True) \rightarrow T
```

Create a spline curve approximating the provided function.

Parameters

- self(T)
- **func** (float --> (float, float, float)) function f(t) that will generate (x,y,z) pairs
- N (int) number of points for discretization
- **start** (*float*) starting value of the parameter t
- **stop** (*float*) final value of the parameter t
- tol (float) tolerance of the algorithm (default: 1e-6)
- minDeg (int) minimum spline degree (default: 1)
- maxDeg (int) maximum spline degree (default: 6)
- **smoothing** (*Tuple[float, float, float] | None*) optional parameters for the variational smoothing algorithm (default: (1,1,1))
- makeWire (bool) convert the resulting spline edge to a wire

Returns

a Workplane object with the current point unchanged

Return type

T

```
parametricSurface(func: Callable[[float, float], Tuple[float, float] | Tuple[float, float, float] | Vector], N: int = 20, start: float = 0, stop: float = 1, tol: float = 0.01, minDeg: int = 1, maxDeg: int = 6, smoothing: Tuple[float, float] | None = (1, 1, 1)) \rightarrow T
```

Create a spline surface approximating the provided function.

- **self** (T)
- **func** ((float, float) --> (float, float, float)) function f(u,v) that will generate (x,y,z) pairs

- N (int) number of points for discretization in one direction
- start (float) starting value of the parameters u,v
- **stop** (*float*) final value of the parameters u,v
- **tol** (*float*) tolerance used by the approximation algorithm (default: 1e-3)
- **minDeg** (*int*) minimum spline degree (default: 1)
- maxDeg (int) maximum spline degree (default: 3)
- **smoothing** (*Tuple[float, float, float] | None*) optional parameters for the variational smoothing algorithm (default: (1,1,1))

a Workplane object with the current point unchanged

Return type

T

This method might be unstable and may require tuning of the tol parameter.

```
placeSketch(*sketches: Sketch) \rightarrow T
```

Place the provided sketch(es) based on the current items on the stack.

Returns

Workplane object with the sketch added.

Parameters

- **self**(T)
- sketches (Sketch)

Return type

T

 $extbf{polarArray}(radius: float, startAngle: float, angle: float, count: int, fill: bool = True, rotate: bool = True) <math> o$ T

Creates a polar array of points and pushes them onto the stack. The zero degree reference angle is located along the local X-axis.

Parameters

- self(T)
- radius (float) Radius of the array.
- **startAngle** (*float*) Starting angle (degrees) of array. Zero degrees is situated along the local X-axis.
- **angle** (*float*) The angle (degrees) to fill with elements. A positive value will fill in the counter-clockwise direction. If fill is False, angle is the angle between elements.
- **count** (*int*) Number of elements in array. (count >= 1)
- **fill** (*bool*) Interpret the angle as total if True (default: True).
- **rotate** (*bool*) Rotate every item (default: True).

Return type

polarLine(distance: float, angle: float, forConstruction: bool = False) \rightarrow T

Make a line of the given length, at the given angle from the current point

Parameters

- **self** (T)
- **distance** (*float*) distance of the end of the line from the current point
- angle (float) angle of the vector to the end of the line with the x-axis
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

T

polarLineTo(distance: float, angle: float, forConstruction: bool = False) \rightarrow T

Make a line from the current point to the given polar coordinates

Useful if it is more convenient to specify the end location rather than the distance and angle from the current point

Parameters

- **self** (T)
- **distance** (*float*) distance of the end of the line from the origin
- angle (float) angle of the vector to the end of the line with the x-axis
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

7

polygon($nSides: int, diameter: float, for Construction: bool = False, circumscribed: bool = False) <math>\rightarrow$ T Make a polygon for each item on the stack.

By default, each polygon is created by inscribing it in a circle of the specified diameter, such that the first vertex is oriented in the x direction. Alternatively, each polygon can be created by circumscribing it around a circle of the specified diameter, such that the midpoint of the first edge is oriented in the x direction. Circumscribed polygons are thus rotated by pi/nSides radians relative to the inscribed polygon. This ensures the extent of the polygon along the positive x-axis is always known. This has the advantage of not requiring additional formulae for purposes such as tiling on the x-axis (at least for even sided polygons).

- self (T)
- **nSides** (*int*) number of sides, must be >= 3
- **diameter** (*float*) the diameter of the circle for constructing the polygon
- circumscribed (true to create the polygon by circumscribing it about a circle, false to create the polygon by inscribing it in a circle) circumscribe the polygon about a circle
- forConstruction (bool)

a polygon wire

Return type

T

polyline(*listOfXYTuple: Sequence*[*Tuple*[*float, float*] | *Tuple*[*float, float*] | Vector], *forConstruction:* $bool = False, includeCurrent: bool = False) \rightarrow T$

Create a polyline from a list of points

Parameters

- self(T)
- listOfXYTuple (Sequence[Tuple[float, float] | Tuple[float, float, float] | Vector]) a list of points in Workplane coordinates (2D or 3D)
- forConstruction (true if the edges are for reference, false if they are for creating geometry part geometry) whether or not the edges are used for reference
- includeCurrent (bool) use current point as a starting point of the polyline

Returns

a new CQ object with a list of edges on the stack

Return type

T

NOTE most commonly, the resulting wire should be closed.

```
pushPoints(pntList: Iterable[Tuple[float, float] | Tuple[float, float] | Vector | Location]) \rightarrow T
```

Pushes a list of points onto the stack as vertices. The points are in the 2D coordinate space of the workplane face

Parameters

- **self** (T)
- pntList (list of 2-tuples, in *local* coordinates) a list of points to push onto the stack

Returns

a new workplane with the desired points on the stack.

Return type

T

A common use is to provide a list of points for a subsequent operation, such as creating circles or holes. This example creates a cube, and then drills three holes through it, based on three points:

```
s = (
    Workplane()
    .box(1, 1, 1)
    .faces(">Z")
    .workplane()
    .pushPoints([(-0.3, 0.3), (0.3, 0.3), (0, 0)])
)
body = s.circle(0.05).cutThruAll()
```

Here the circle function operates on all three points, and is then extruded to create three holes. See *circle()* for how it works.

radiusArc(endPoint: Tuple[float, float] | Tuple[float, float, float] | Vector, radius: float, forConstruction: bool = False) \rightarrow T

Draw an arc from the current point to endPoint with an arc defined by the radius.

Parameters

- **self** (T)
- endPoint (2-tuple, in workplane coordinates) end point for the arc
- radius (float, the radius of the arc between start point and end point.) the radius of the arc
- forConstruction (bool)

Returns

a workplane with the current point at the end of the arc

Return type

T

Given that a closed contour is drawn clockwise; A positive radius means convex arc and negative radius means concave arc.

```
rarray(xSpacing: float, ySpacing: float, xCount: int, yCount: int, center: bool | Tuple[bool, bool] = True) \rightarrow T
```

Creates an array of points and pushes them onto the stack. If you want to position the array at another point, create another workplane that is shifted to the position you would like to use as a reference

Parameters

- **self** (T)
- **xSpacing** (*float*) spacing between points in the x direction (must be >= 0)
- ySpacing (float) spacing between points in the y direction (must be >= 0)
- **xCount** (*int*) number of points (> 0)
- yCount (int) number of points (> 0)
- **center** (*bool* | *Tuple[bool*, *bool]*) If True, the array will be centered around the workplane center. If False, the lower corner will be on the reference point and the array will extend in the positive x and y directions. Can also use a 2-tuple to specify centering along each axis.

Return type

T

 $\mathbf{rect}(xLen: float, yLen: float, centered: bool \mid Tuple[bool, bool] = True, for Construction: bool = False) \rightarrow \mathbf{T}$ Make a rectangle for each item on the stack.

- **self** (T)
- **xLen** (*float*) length in the x direction (in workplane coordinates)
- **yLen** (*float*) length in the y direction (in workplane coordinates)
- **centered** (bool | Tuple[bool, bool]) If True, the rectangle will be centered around the reference point. If False, the corner of the rectangle will be on the reference point and it will extend in the positive x and y directions. Can also use a 2-tuple to specify centering along each axis.

• forConstruction (true if the wires are for reference, false if they are creating part geometry) – should the new wires be reference geometry only?

Returns

a new CQ object with the created wires on the stack

Return type

T

A common use case is to use a for-construction rectangle to define the centers of a hole pattern:

```
s = Workplane().rect(4.0, 4.0, forConstruction=True).vertices().circle(0.25)
```

Creates 4 circles at the corners of a square centered on the origin.

Negative values for xLen and yLen are permitted, although they only have an effect when centered is False.

Future Enhancements:

• project points not in the workplane plane onto the workplane plane

```
revolve(angleDegrees: float = 360.0, axisStart: Tuple[float, float] | Tuple[float, float, float] | Vector | None = 160.0 | Vector | None = 160.0 | Vector 
                                                                                         None, axisEnd: Tuple[float, float] | Tuple[float, float, float] | Vector | None = None, combine: bool |
                                                                                         Literal['cut', 'a', 's'] = True, clean: bool = True) \rightarrow T
```

Use all un-revolved wires in the parent chain to create a solid.

Parameters

- **self** (T)
- (float, anything less than 360 degrees will leave the angleDegrees *shape open*) – the angle to revolve through.
- axisStart (Tuple[float, float] | Tuple[float, float, float] | Vector / None) – the start point of the axis of rotation
- axisEnd (Tuple[float, float] | Tuple[float, float, float] | Vector | *None*) – the end point of the axis of rotation
- combine (bool | Literal['cut', 'a', 's']) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape

Returns

a CQ object with the resulting solid selected.

Return type

The returned object is always a CQ object, and depends on whether combine is True, and whether a context solid is already defined:

- if combine is False, the new value is pushed onto the stack.
- if combine is true, the value is combined with the context solid if it exists, and the resulting solid becomes the new context solid.



Mote

Keep in mind that axisStart and axisEnd are defined relative to the current Workplane center position. So if for example you want to revolve a circle centered at (10,0,0) around the Y axis, be sure to either move() (or moveTo()) the current Workplane position or specify axisStart and axisEnd with the correct vector position. In this example (0,0,0), (0,1,0) as axis coords would fail.

rotate($axisStartPoint: Tuple[float, float] | Tuple[float, float] | Vector, <math>axisEndPoint: Tuple[float, float] | Tuple[float, float] | Vector, <math>axisEndPoint: Tuple[float, float] | Vector, angleDegrees: float) <math>\rightarrow T$

Returns a copy of all of the items on the stack rotated through and angle around the axis of rotation.

Parameters

- **self** (*T*)
- axisStartPoint (a 3-tuple of floats) The first point of the axis of rotation
- axisEndPoint (a 3-tuple of floats) The second point of the axis of rotation
- angleDegrees (float) the rotation angle, in degrees

Returns

a CQ object

Return type

T

 $\textbf{rotateAboutCenter}(\textit{axisEndPoint: Tuple[float, float]} \mid \textit{Tuple[float, float]} \mid \textit{Vector, angleDegrees:} \\ \textit{float}) \rightarrow \text{T}$

Rotates all items on the stack by the specified angle, about the specified axis

The center of rotation is a vector starting at the center of the object on the stack, and ended at the specified point.

Parameters

- **self**(T)
- axisEndPoint(a three-tuple in global coordinates) the second point of axis
 of rotation
- **angleDegrees** (*float*) the rotation angle, in degrees

Returns

a CQ object, with all items rotated.

Return type

T

WARNING: This version returns the same CQ object instead of a new one– the old object is not accessible.

Future Enhancements:

- A version of this method that returns a transformed copy, rather than modifying the originals
- This method doesn't expose a very good interface, because the axis of rotation could be inconsistent between multiple objects. This is because the beginning of the axis is variable, while the end is fixed. This is fine when operating on one object, but is not cool for multiple.

sagittaArc(endPoint: Tuple[float, float] | Tuple[float, float, float] | Vector, sag: float, forConstruction: bool = False) \rightarrow T

Draw an arc from the current point to endPoint with an arc defined by the sag (sagitta).

- **self**(T)
- endPoint (2-tuple, in workplane coordinates) end point for the arc
- **sag**(float, perpendicular distance from arc center to arc baseline.)— the sagitta of the arc
- forConstruction (bool)

a workplane with the current point at the end of the arc

Return type

T

The sagitta is the distance from the center of the arc to the arc base. Given that a closed contour is drawn clockwise; A positive sagitta means convex arc and negative sagitta means concave arc. See https://en.wikipedia.org/wiki/Sagitta_(geometry) for more information.

```
section(height: float = 0.0) \rightarrow T
```

Slices current solid at the given height.

Parameters

- **self**(T)
- **height** (*float*) height to slice at (default: 0)

Raises

ValueError – if no solids or compounds are found

Returns

a CQ object with the resulting face(s).

Return type

T

shell(*thickness: float, kind: Literal*['arc', 'intersection'] = 'arc') \rightarrow T

Remove the selected faces to create a shell of the specified thickness.

To shell, first create a solid, and in the same chain select the faces you wish to remove.

Parameters

- **self**(T)
- thickness (float) thickness of the desired shell. Negative values shell inwards, positive values shell outwards.
- **kind** (*Literal['arc'*, *'intersection']*) kind of join, arc or intersection (default: arc).

Raises

ValueError – if the current stack contains objects that are not faces of a solid further up in the chain.

Returns

a CQ object with the resulting shelled solid selected.

Return type

T

This example will create a hollowed out unit cube, where the top most face is open, and all other walls are 0.2 units thick:

```
Workplane().box(1, 1, 1).faces("+Z").shell(0.2)
```

You can also select multiple faces at once. Here is an example that creates a three-walled corner, by removing three faces of a cube:

```
Workplane().box(10, 10, 10).faces(">Z or >X or <Y").shell(1)
```

Note: When sharp edges are shelled inwards, they remain sharp corners, but **outward** shells are automatically filleted (unless kind="intersection"), because an outward offset from a corner generates a radius.

```
shells(selector: str \mid Selector \mid None = None, tag: <math>str \mid None = None) \rightarrow T
```

Select the shells of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the shells of all objects are collected and a list of all the distinct shells is returned.

Parameters

- **self** (T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

Returns

a CQ object whose stack contains all of the *distinct* shells of *all* objects on the current stack, filtered by the provided selector.

Return type

T

If there are no shells for any objects on the current stack, an empty CQ object is returned

Most solids will have a single shell, which represents the outer surface. A shell will typically be composed of multiple faces.

```
\textbf{siblings}(\textit{kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound'], level: int = 1, tag: str \mid None = None) \rightarrow T
```

Select topological siblings.

Parameters

- **self** (T)
- kind (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound']) kind of linking element, e.g. "Vertex" or "Edge"
- **level** (*int*) level of relation how many elements of kind are in the link
- tag (str / None) if set, search the tagged object instead of self

Returns

a Workplane object whose stack contains selected siblings.

Return type

T

 $size() \rightarrow int$

Return the number of objects currently on the stack

Return type

int

```
sketch() \rightarrow Sketch
```

Initialize and return a sketch

Returns

Sketch object with the current workplane as a parent.

Parameters

self(T)

Return type

Sketch

slot2D(*length: float, diameter: float, angle: float* = 0) \rightarrow T

Creates a rounded slot for each point on the stack.

Parameters

- **self** (T)
- diameter (float) desired diameter, or width, of slot
- length (float) desired end to end length of slot
- angle (float) angle of slot in degrees, with 0 being along x-axis

Returns

a new CQ object with the created wires on the stack

Return type

T

Can be used to create arrays of slots, such as in cooling applications:

```
Workplane().box(10, 25, 1).rarray(1, 2, 1, 10).slot2D(8, 1, 0).cutThruAll()
```

```
solids(selector: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
```

Select the solids of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the solids of all objects are collected and a list of all the distinct solids is returned.

Parameters

- self(T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

Returns

a CQ object whose stack contains all of the *distinct* solids of *all* objects on the current stack, filtered by the provided selector.

Return type

T

If there are no solids for any objects on the current stack, an empty CQ object is returned

The typical use is to select a single object on the stack. For example:

```
Workplane().box(1, 1, 1).solids().size()
```

returns 1, because a cube consists of one solid.

It is possible for a single CQ object (or even a single CAD primitive) to contain multiple solids.

 $\textbf{sort}(\textit{key: Callable[[Vector \mid Location \mid Shape \mid Sketch], Any])} \rightarrow T$

Sort items using a callable.

Parameters

- **self** (T)
- **key** (Callable[[Vector | Location | Shape | Sketch], Any]) Callable to be used for sorting.

Returns

Workplane object with items sorted.

Return type

T

```
sphere(radius: float, direct: Tuple[float, float] | Tuple[float, float, float] | Vector = (0, 0, 1), angle1: float = -90, angle2: float = 90, angle3: float = 360, centered: bool | Tuple[bool, bool, bool] = True, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True) \rightarrow T
```

Returns a 3D sphere with the specified radius for each point on the stack.

Parameters

- **self** (T)
- radius (float) The radius of the sphere
- **direct** (*A three-tuple*) The direction axis for the creation of the sphere
- angle 1 (float > 0) The first angle to sweep the sphere arc through
- angle2 (float > 0) The second angle to sweep the sphere arc through
- angle 3 (float > 0) The third angle to sweep the sphere arc through
- **centered** (bool | Tuple[bool, bool, bool]) If True, the sphere will be centered around the reference point. If False, the corner of a bounding box around the sphere will be on the reference point and it will extend in the positive x, y and z directions. Can also use a 3-tuple to specify centering along each axis.
- **combine** (*true to combine shapes, false otherwise*) Whether the results should be combined with other solids on the stack (and each other)
- **clean** (bool) call **clean**() afterwards to have a clean shape

Returns

A sphere object for each point on the stack

Return type

T

One sphere is created for each item on the current stack. If no items are on the stack, one box using the current workplane center is created.

If combine is true, the result will be a single object on the stack. If a solid was found in the chain, the result is that solid with all spheres produced fused onto it otherwise, the result is the combination of all the produced spheres.

If combine is false, the result will be a list of the spheres produced.

```
spline(listOfXYTuple: Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector], tangents: Sequence[Tuple[float, float] | Tuple[float, float] | Vector] | None = None, periodic: bool = False, parameters: Sequence[float] | None = None, scale: bool = True, tol: float | None = None, forConstruction: bool = False, includeCurrent: bool = False, makeWire: bool = False) \rightarrow T
```

Create a spline interpolated through the provided points (2D or 3D).

Parameters

- **self** (*T*)
- listOfXYTuple (Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector]) points to interpolate through
- tangents (Sequence[Tuple[float, float] | Tuple[float, float] | Vector] | None) vectors specifying the direction of the tangent to the curve at each of the specified interpolation points.

If only 2 tangents are given, they will be used as the initial and final tangent.

If some tangents are not specified (i.e., are None), no tangent constraint will be applied to the corresponding interpolation point.

The spline will be C2 continuous at the interpolation points where no tangent constraint is specified, and C1 continuous at the points where a tangent constraint is specified.

- **periodic** (bool) creation of periodic curves
- parameters (Sequence[float] / None) the value of the parameter at each interpolation point. (The interpolated curve is represented as a vector-valued function of a scalar parameter.)

If periodic == True, then len(parameters) must be len(interpolation points) + 1, otherwise len(parameters) must be equal to len(interpolation points).

• scale (bool) – whether to scale the specified tangent vectors before interpolating.

Each tangent is scaled, so it's length is equal to the derivative of the Lagrange interpolated curve.

I.e., set this to True, if you want to use only the direction of the tangent vectors specified by tangents, but not their magnitude.

• tol (float / None) – tolerance of the algorithm (consult OCC documentation)

Used to check that the specified points are not too close to each other, and that tangent vectors are not too short. (In either case interpolation may fail.)

Set to None to use the default tolerance.

- includeCurrent (bool) use current point as a starting point of the curve
- makeWire (bool) convert the resulting spline edge to a wire
- forConstruction (bool)

Returns

a Workplane object with the current point at the end of the spline

Return type

T

The spline will begin at the current point, and end with the last point in the XY tuple list.

This example creates a block with a spline for one side:

```
s = Workplane(Plane.XY())
sPnts = [
(2.75, 1.5),
```

(continues on next page)

(continued from previous page)

```
(2.5, 1.75),

(2.0, 1.5),

(1.5, 1.0),

(1.0, 1.25),

(0.5, 1.0),

(0, 1.0),

]

r = s.lineTo(3.0, 0).lineTo(3.0, 1.0).spline(sPnts).close()

r = r.extrude(0.5)
```

WARNING It is fairly easy to create a list of points that cannot be correctly interpreted as a spline.

```
splineApprox(points: Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector], tol: float | None = 1e-06, minDeg: int = 1, maxDeg: int = 6, smoothing: Tuple[float, float, float] | None = (1, 1, 1), forConstruction: bool = False, includeCurrent: bool = False, makeWire: bool = False) \rightarrow T
```

Create a spline interpolated through the provided points (2D or 3D).

Parameters

- **self** (T)
- points (Iterable[Tuple[float, float] | Tuple[float, float, float] | Vector]) points to interpolate through
- tol (float / None) tolerance of the algorithm (default: 1e-6)
- **minDeg** (*int*) minimum spline degree (default: 1)
- maxDeg (int) maximum spline degree (default: 6)
- **smoothing** (*Tuple[float, float, float] | None*) optional parameters for the variational smoothing algorithm (default: (1,1,1))
- includeCurrent (bool) use current point as a starting point of the curve
- makeWire (bool) convert the resulting spline edge to a wire
- forConstruction (bool)

Returns

a Workplane object with the current point at the end of the spline

Return type

T

WARNING for advanced users.

```
split(keepTop: bool = False, keepBottom: bool = False) \rightarrow T

split(splitter: Workplane | Shape) \rightarrow T
```

Splits a solid on the stack into two parts, optionally keeping the separate parts.

Parameters

- self
- **keepTop** (*bool*) True to keep the top, False or None to discard it
- **keepBottom** (*bool*) True to keep the bottom, False or None to discard it

Raises

- **ValueError** if keepTop and keepBottom are both false.
- ValueError if there is no solid in the current stack or parent chain

CQ object with the desired objects on the stack.

The most common operation splits a solid and keeps one half. This sample creates a split bushing:

```
# drill a hole in the side
c = Workplane().box(1, 1, 1).faces(">Z").workplane().circle(0.25).cutThruAll()
# now cut it in half sideways
c = c.faces(">Y").workplane(-0.5).split(keepTop=True)
```

sweep(path: Workplane | Wire | Edge, multisection: bool = False, sweepAlongWires: bool | None = None, makeSolid: bool = True, isFrenet: bool = False, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True, transition: Literal['right', 'round', 'transformed'] = 'right', normal: Tuple[float, float] | Tuple[float, float] | Vector | None = None, auxSpine: Workplane | None = None) \rightarrow T

Use all un-extruded wires in the parent chain to create a swept solid.

Parameters

- **self** (T)
- path (Workplane / Wire / Edge) A wire along which the pending wires will be swept
- **multiSection** False to create multiple swept from wires on the chain along path. True to create only one solid swept along path with shape following the list of wires on the chain
- **combine** (*bool* | *Literal* ['*cut*', 'a', 's']) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape
- transition (Literal ['right', 'round', 'transformed']) handling of profile orientation at C1 path discontinuities. Possible values are {'transformed', 'round', 'right'} (default: 'right').
- normal (Tuple[float, float] | Tuple[float, float, float] | Vector | None) optional fixed normal for extrusion
- auxSpine (Workplane / None) a wire defining the binormal along the extrusion path
- multisection (bool)
- sweepAlongWires (bool | None)
- makeSolid (bool)
- isFrenet (bool)

Returns

a CQ object with the resulting solid selected.

Return type

T

```
tag(name: str) \rightarrow T
```

Tags the current CQ object for later reference.

- **self**(T)
- name (str) the name to tag this object with

self, a CQ object with tag applied

Return type

T

tangentArcPoint(endpoint: Tuple[float, float] | Tuple[float, float, float] | Vector, for Construction: bool = False, relative: bool = True) \rightarrow T

Draw an arc as a tangent from the end of the current edge to endpoint.

Parameters

- **self** (*T*)
- endpoint (2-tuple, 3-tuple or Vector) point for the arc to end at
- **relative** (*bool*) True if endpoint is specified relative to the current point, False if endpoint is in workplane coordinates
- forConstruction (bool)

Returns

a Workplane object with an arc on the stack

Return type

T

Requires the the current first object on the stack is an Edge, as would be the case after a lineTo operation or similar.

```
text(txt: str, fontsize: float, distance: float, cut: bool = True, combine: bool | Literal['cut', 'a', 's'] = False, clean: bool = True, font: str = 'Arial', fontPath: str | None = None, kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left', 'right'] = 'center', valign: Literal['center', 'top', 'bottom'] = 'center') → T
```

Returns a 3D text.

- **self** (T)
- txt (str) text to be rendered
- **fontsize** (*float*) size of the font in model units
- **distance**(float, negative means opposite the normal direction)—the distance to extrude or cut, normal to the workplane plane
- cut (bool) True to cut the resulting solid from the parent solids if found
- **combine** (*bool | Literal* ['*cut*', 'a', 's']) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape
- **font** (*str*) font name
- **fontPath** (*str* / *None*) path to font file
- **kind** (Literal ['regular', 'bold', 'italic']) font type
- halign (Literal ['center', 'left', 'right']) horizontal alignment

• valign (Literal ['center', 'top', 'bottom']) - vertical alignment

Returns

a CQ object with the resulting solid selected

Return type

T

The returned object is always a Workplane object, and depends on whether combine is True, and whether a context solid is already defined:

- if combine is False, the new value is pushed onto the stack.
- if combine is true, the value is combined with the context solid if it exists, and the resulting solid becomes the new context solid.

Examples:

```
cq.Workplane().text("CadQuery", 5, 1)
```

Specify the font (name), and kind to use an installed system font:

```
cq.Workplane().text("CadQuery", 5, 1, font="Liberation Sans Narrow", kind=
--"italic")
```

Specify fontPath to use a font from a given file:

```
cq.Workplane().text("CadQuery", 5, 1, fontPath="/opt/fonts/texgyrecursor-bold.

→otf")
```

Cutting text into a solid:

```
cq.Workplane().box(8, 8, 8).faces(">Z").workplane().text("Z", 5, -1.0)
```

```
threePointArc(point1: Tuple[float, float] | Tuple[float, float] | Vector, <math>point2: Tuple[float, float] | Tuple[float, float] | Vector, <math>point2: Tuple[float, float] | Vector, forConstruction: bool = False) <math>\rightarrow T
```

Draw an arc from the current point, through point1, and ending at point2

Parameters

- **self** (*T*)
- point1(2-tuple, in workplane coordinates) point to draw through
- point2 (2-tuple, in workplane coordinates) end point for the arc
- forConstruction (bool)

Returns

a workplane with the current point at the end of the arc

Return type

T

Future Enhancements:

provide a version that allows an arc using relative measures provide a centerpoint arc provide tangent arcs

```
toOCC() \rightarrow Any
```

Directly returns the wrapped OCCT object.

Returns

The wrapped OCCT object

Return type

TopoDS_Shape or a subclass

$toPending() \rightarrow T$

Adds wires/edges to pendingWires/pendingEdges.

Returns

same CQ object with updated context.

Parameters

self(T)

Return type

T

toSvg(*opts*: Any = None) \rightarrow str

Returns svg text that represents the first item on the stack.

for testing purposes.

Parameters

opts (dictionary, width and height) - svg formatting options

Returns

a string that contains SVG that represents this item.

Return type

str

transformed(rotate: Tuple[float, float] | Tuple[float, float, float] | Vector = (0, 0, 0), offset: Tuple[float, float] | Vector = (0, 0, 0)) \rightarrow T

Create a new workplane based on the current one. The origin of the new plane is located at the existing origin+offset vector, where offset is given in coordinates local to the current plane The new plane is rotated through the angles specified by the components of the rotation vector.

Parameters

- **self**(T)
- rotate (Tuple[float, float] | Tuple[float, float, float] | Vector) 3-tuple of angles to rotate, in degrees relative to work plane coordinates
- offset (Tuple[float, float] | Tuple[float, float, float] | Vector) 3-tuple to offset the new plane, in local work plane coordinates

Returns

a new work plane, transformed as requested

Return type

T

 $\textbf{translate}(\textit{vec: Tuple[float, float]} \mid \textit{Tuple[float, float, float]} \mid \textit{Vector}) \rightarrow T$

Returns a copy of all of the items on the stack moved by the specified translation vector.

Parameters

- self(T)
- tupleDistance (a 3-tuple of float) distance to move, in global coordinates
- vec(Tuple[float, float] | Tuple[float, float, float] | Vector)

Returns

a CQ object

Return type

7

twistExtrude(distance: float, angleDegrees: float, combine: bool | Literal['cut', 'a', 's'] = True, clean: bool = True) $\to T$

Extrudes a wire in the direction normal to the plane, but also twists by the specified angle over the length of the extrusion.

The center point of the rotation will be the center of the workplane.

See extrude for more details, since this method is the same except for the addition of the angle. In fact, if angle=0, the result is the same as a linear extrude.

NOTE This method can create complex calculations, so be careful using it with complex geometries

Parameters

- **self** (*T*)
- **distance** (*float*) the distance to extrude normal to the workplane
- angle angle (in degrees) to rotate through the extrusion
- **combine** (*bool* | *Literal* ['*cut*', 'a', 's']) True or "a" to combine the resulting solid with parent solids if found, "cut" or "s" to remove the resulting solid from the parent solids if found. False to keep the resulting solid separated from the parent solids.
- **clean** (bool) call **clean**() afterwards to have a clean shape
- angleDegrees (float)

Returns

a CQ object with the resulting solid selected.

Return type

T

```
union(toUnion: Workplane | Solid | Compound | None = None, clean: bool = True, glue: bool = False, tol: float \mid None = None) \rightarrow T
```

Unions all of the items on the stack of toUnion with the current solid. If there is no current solid, the items in toUnion are unioned together.

Parameters

- **self** (T)
- toUnion (Workplane / Solid / Compound / None) a solid object, or a Workplane object having a solid
- **clean** (*bool*) call *clean*() afterwards to have a clean shape (default True)
- **glue** (bool) use a faster gluing mode for non-overlapping shapes (default False)
- tol (float | None) tolerance value for fuzzy bool operation mode (default None)

Raises

ValueError if there is no solid to add to in the chain

Returns

a Workplane object with the resulting object selected

Return type

T

vLine(distance: float, forConstruction: bool = False) \rightarrow T

Make a vertical line from the current point the provided distance

Parameters

- **self**(T)
- distance (float) -
- (y) distance from current point
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

Τ

vLineTo(yCoord: float, forConstruction: bool = False) \rightarrow T

Make a vertical line from the current point to the provided y coordinate.

Useful if it is more convenient to specify the end location rather than distance, as in *vLine()*

Parameters

- self(T)
- yCoord (float) y coordinate for the end of the line
- forConstruction (bool)

Returns

the Workplane object with the current point at the end of the new line

Return type

T

$val() \rightarrow Vector \mid Location \mid Shape \mid Sketch$

Return the first value on the stack. If no value is present, current plane origin is returned.

Returns

the first value on the stack.

Return type

A CAD primitive

```
vals() \rightarrow List[Vector \mid Location \mid Shape \mid Sketch]
```

get the values in the current list

Return type

list of occ_impl objects

Returns

the values of the objects on the stack.

Contrast with all(), which returns CQ objects for all of the items on the stack

```
vertices(selector: str \mid Selector \mid None = None, tag: <math>str \mid None = None) \rightarrow T
```

Select the vertices of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the vertices of all objects are collected and a list of all the distinct vertices is returned.

Parameters

- **self** (T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

Returns

a CQ object whose stack contains the *distinct* vertices of *all* objects on the current stack, after being filtered by the selector, if provided

Return type

T

If there are no vertices for any objects on the current stack, an empty CQ object is returned

The typical use is to select the vertices of a single object on the stack. For example:

```
Workplane().box(1, 1, 1).faces("+Z").vertices().size()
```

returns 4, because the topmost face of a cube will contain four vertices. While this:

```
Workplane().box(1, 1, 1).faces().vertices().size()
```

returns 8, because a cube has a total of 8 vertices

Note Circles are peculiar, they have a single vertex at the center!

```
wedge(dx: float, dy: float, dz: float, xmin: float, zmin: float, xmax: float, zmax: float, pnt:

\sim typing.Tuple[float, float] \mid \sim typing.Tuple[float, float] \mid \sim cadquery.occ\_impl.geom.Vector = Vector: (0.0, 0.0, 0.0), dir: \sim typing.Tuple[float, float] \mid \sim typing.Tuple[float, float] \mid \sim cadquery.occ\_impl.geom.Vector = Vector: (0.0, 0.0, 1.0), centered: bool \mid \sim typing.Tuple[bool, bool, bool] = True, combine: bool \mid \sim typing.Literal['cut', 'a', 's'] = True, clean: bool = True) \rightarrow T
```

Returns a 3D wedge with the specified dimensions for each point on the stack.

Parameters

- **self**(T)
- **dx** (*float*) Distance along the X axis
- **dy** (*float*) Distance along the Y axis
- **dz** (*float*) Distance along the Z axis
- **xmin** (*float*) The minimum X location
- **zmin** (*float*) The minimum Z location
- xmax (float) The maximum X location
- **zmax** (*float*) The maximum Z location
- pnt (Tuple[float, float] | Tuple[float, float, float] | Vector) A vector (or tuple) for the origin of the direction for the wedge
- dir (Tuple[float, float] | Tuple[float, float, float] | Vector) The direction vector (or tuple) for the major axis of the wedge
- **centered** (bool | Tuple[bool, bool, bool]) If True, the wedge will be centered around the reference point. If False, the corner of the wedge will be on the reference point and it will extend in the positive x, y and z directions. Can also use a 3-tuple to specify centering along each axis.

- **combine** (bool | Literal['cut', 'a', 's']) Whether the results should be combined with other solids on the stack (and each other)
- clean (bool) True to attempt to have the kernel clean up the geometry, False otherwise

Returns

A wedge object for each point on the stack

Return type

T

One wedge is created for each item on the current stack. If no items are on the stack, one wedge using the current workplane center is created.

If combine is True, the result will be a single object on the stack. If a solid was found in the chain, the result is that solid with all wedges produced fused onto it otherwise, the result is the combination of all the produced wedges.

If combine is False, the result will be a list of the wedges produced.

```
wire(forConstruction: bool = False) \rightarrow T
```

Returns a CQ object with all pending edges connected into a wire.

All edges on the stack that can be combined will be combined into a single wire object, and other objects will remain on the stack unmodified. If there are no pending edges, this method will just return self.

Parameters

- **self** (T)
- **forConstruction** (*bool*) whether the wire should be used to make a solid, or if it is just for reference

Return type

T

This method is primarily of use to plugin developers making utilities for 2D construction. This method should be called when a user operation implies that 2D construction is finished, and we are ready to begin working in 3d.

SEE '2D construction concepts' for a more detailed explanation of how CadQuery handles edges, wires, etc.

Any non edges will still remain.

```
wires(selector: str \mid Selector \mid None = None, tag: str \mid None = None) \rightarrow T
```

Select the wires of objects on the stack, optionally filtering the selection. If there are multiple objects on the stack, the wires of all objects are collected and a list of all the distinct wires is returned.

Parameters

- **self**(T)
- **selector** (*str* / Selector / *None*) optional Selector object, or string selector expression (see *StringSyntaxSelector*)
- tag (str / None) if set, search the tagged object instead of self

Returns

a CQ object whose stack contains all of the *distinct* wires of *all* objects on the current stack, filtered by the provided selector.

Return type

T

If there are no wires for any objects on the current stack, an empty CQ object is returned

The typical use is to select the wires of a single object on the stack. For example:

```
Workplane().box(1, 1, 1).faces("+Z").wires().size()
```

returns 1, because a face typically only has one outer wire

```
workplane(offset: float = 0.0, invert: bool = False, centerOption: Literal['CenterOfMass', 'ProjectedOrigin', 'CenterOfBoundBox'] = 'ProjectedOrigin', origin: Tuple[float, float] | Tuple[float, float, float] | Vector | None = None) \rightarrow T
```

Creates a new 2D workplane, located relative to the first face on the stack.

Parameters

- **self**(T)
- offset (float) offset for the workplane in its normal direction. Default
- **invert** (*bool*) invert the normal direction from that of the face.
- **centerOption** (*string or None='ProjectedOrigin'*) how local origin of workplane is determined.
- origin (Tuple[float, float] | Tuple[float, float, float] | Vector | None) origin for plane center, requires 'ProjectedOrigin' centerOption.

Return type

Workplane object

The first element on the stack must be a face, a set of co-planar faces or a vertex. If a vertex, then the parent item on the chain immediately before the vertex must be a face.

The result will be a 2D working plane with a new coordinate system set up as follows:

- The centerOption parameter sets how the center is defined. Options are 'CenterOfMass', 'CenterOfBoundBox', or 'ProjectedOrigin'. 'CenterOfMass' and 'CenterOfBoundBox' are in relation to the selected face(s) or vertex (vertices). 'ProjectedOrigin' uses by default the current origin or the optional origin parameter (if specified) and projects it onto the plane defined by the selected face(s).
- The Z direction will be the normal of the face, computed at the center point.
- The X direction will be parallel to the x-y plane. If the workplane is parallel to the global x-y plane, the x direction of the workplane will co-incide with the global x direction.

Most commonly, the selected face will be planar, and the workplane lies in the same plane of the face (IE, offset=0). Occasionally, it is useful to define a face offset from an existing surface, and even more rarely to define a workplane based on a face that is not planar.

```
workplaneFromTagged(name: str) \rightarrow Workplane
```

Copies the workplane from a tagged parent.

Parameters

```
name (str) – tag to search for
```

Returns

a CQ object with name's workplane

Return type

Workplane

```
cadquery.sortWiresByBuildOrder(wireList: List[Wire]) → List[List[Wire]]
```

Tries to determine how wires should be combined into faces.

Assume:

The wires make up one or more faces, which could have 'holes' Outer wires are listed ahead of inner wires there are no wires inside wires (IE, islands – we can deal with that later on) none of the wires are construction wires

Compute:

one or more sets of wires, with the outer wire listed first, and inner ones

Returns, list of lists.

```
Parameters
```

wireList(List[Wire])

Return type

List[*List*[Wire]]

class cadquery.occ_impl.shapes.CompSolid(obj: TopoDS_Shape)

Bases: Shape, Mixin3D

a single compsolid

Parameters

obj (TopoDS_Shape)

class cadquery.occ_impl.shapes.**Compound**(obj: TopoDS_Shape)

Bases: Shape, Mixin3D

a collection of disconnected solids

Parameters

obj (TopoDS_Shape)

ancestors(shape: Shape, kind: $Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound']) <math>\rightarrow Compound$

Iterate over ancestors, i.e. shapes of same kind within shape that contain elements of self.

Parameters

- shape (Shape)
- kind (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid', 'Compound'])

Return type

Compound

cut(**toCut*: Shape, *tol*: *float* | *None* = *None*) \rightarrow *Compound*

Remove the positional arguments from this Shape.

Parameters

- tol (float / None) Fuzzy mode tolerance
- toCut (Shape)

Return type

Compound

```
fuse(*toFuse: Shape, glue: bool = False, tol: float | None = None) \rightarrow Compound
     Fuse shapes together
         Parameters
              • toFuse (Shape)
              • glue (bool)
              • tol (float | None)
         Return type
             Compound
intersect(*toIntersect: Shape, tol: float | None = None) \rightarrow Compound
     Intersection of the positional arguments and this Shape.
         Parameters
              • tol (float / None) – Fuzzy mode tolerance
              • toIntersect (Shape)
         Return type
             Compound
classmethod makeCompound(listOfShapes: Iterable[Shape]) \rightarrow Compound
     Create a compound out of a list of shapes
         Parameters
             listOfShapes (Iterable[Shape])
         Return type
             Compound
classmethod makeText(text: str, size: float, height: float, font: str = 'Arial', fontPath: str | None = None,
                          kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left',
                          'right'] = 'center', valign: Literal['center', 'top', 'bottom'] = 'center', position: Plane
                          = Plane(origin=(0.0, 0.0, 0.0), xDir=(1.0, 0.0, 0.0), normal=(0.0, 0.0, 1.0))) \rightarrow
                          Shape
     Create a 3D text
         Parameters
              • text (str)
              • size (float)
              • height (float)
              • font (str)
              • fontPath(str | None)
              • kind (Literal['regular', 'bold', 'italic'])
              • halign (Literal['center', 'left', 'right'])
              • valign(Literal['center', 'top', 'bottom'])
              • position (Plane)
         Return type
```

Shape

```
remove(shape: Shape)
           Remove the specified shape.
                Parameters
                    shape (Shape)
      siblings (shape: Shape, kind: Literal ['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
                  'Compound'], level: int = 1) \rightarrow Compound
           Iterate over siblings, i.e. shapes within shape that share subshapes of kind with the elements of self.
                Parameters
                     • shape (Shape)
                    kind
                                           (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                       'CompSolid', 'Compound'])
                     • level (int)
                Return type
                    Compound
class cadquery.occ_impl.shapes.Edge(obj: TopoDS_Shape)
      Bases: Shape, Mixin1D
      A trimmed curve that represents the border of a face
           Parameters
                obj (TopoDS_Shape)
      arcCenter() \rightarrow Vector
           Center of an underlying circle or ellipse geometry.
                Return type
                     Vector
      close() \rightarrow Edge \mid Wire
           Close an Edge
                Return type
                    Edge | Wire
      classmethod makeBezier(points: List[Vector]) \rightarrow Edge
           Create a cubic Bézier Curve from the points.
                Parameters
                    points (List [Vector]) – a list of Vectors that represent the points. The edge will pass
                    through the first and the last point, and the inner points are Bézier control points.
                Returns
                    An edge
                Return type
                    Edge
      classmethod makeEllipse(x_radius: float, y_radius: float, pnt: ~cadquery.occ_impl.geom.Vector |
                                     ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int |
                                     float] = Vector: (0.0, 0.0, 0.0), dir: \sim cadquery.occ_impl.geom.Vector
                                     ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int |
                                     float] = Vector: (0.0, 0.0, 1.0), xdir: \sim cadquery.occ\_impl.geom.Vector
                                     ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int |
                                     float] = Vector: (1.0, 0.0, 0.0), angle1: float = 360.0, angle2: float = 360.0,
```

sense: $\sim typing.Literal[-1, 1] = 1) \rightarrow Edge$

Makes an Ellipse centered at the provided point, having normal in the provided direction.

Parameters

- cls
- **x_radius** (*float*) x radius of the ellipse (along the x-axis of plane the ellipse should lie in)
- **y_radius** (*float*) y radius of the ellipse (along the y-axis of plane the ellipse should lie in)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the center of the ellipse
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the direction of the plane the ellipse should lie in
- angle1 (float) start angle of arc
- **angle2** (*float*) end angle of arc (angle2 == angle1 return closed ellipse = default)
- sense (Literal [-1, 1]) clockwise (-1) or counter clockwise (1)
- xdir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Returns

an Edge

Return type

Edge

classmethod makeLine(v1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) $\rightarrow Edge$

Create a line between two points

Parameters

- v1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Vector that represents the first point
- v2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Vector that represents the second point

Returns

A linear edge between the two provided points

Return type

Edge

classmethod makeSpline(listOfVector: List[Vector], tangents: Sequence[Vector] | None = None, periodic: bool = False, parameters: Sequence[float] | None = None, scale: bool = True, tol: float = 1e-06) $\rightarrow Edge$

Interpolate a spline through the provided points.

Parameters

- **listOfVector** (*List* [Vector]) a list of Vectors that represent the points
- tangents (Sequence[Vector] / None) tuple of Vectors specifying start and finish tangent

- **periodic** (*bool*) creation of periodic curves
- parameters (Sequence[float] | None) the value of the parameter at each interpolation point. (The interpolated curve is represented as a vector-valued function of a scalar parameter.) If periodic == True, then len(parameters) must be len(interpolation points) + 1, otherwise len(parameters) must be equal to len(interpolation points).
- **scale** (*boo1*) whether to scale the specified tangent vectors before interpolating. Each tangent is scaled, so it's length is equal to the derivative of the Lagrange interpolated curve. I.e., set this to True, if you want to use only the direction of the tangent vectors specified by tangents, but not their magnitude.
- **tol** (*float*) tolerance of the algorithm (consult OCC documentation). Used to check that the specified points are not too close to each other, and that tangent vectors are not too short. (In either case interpolation may fail.)

Returns

an Edge

Return type

Edge

classmethod makeSplineApprox(listOfVector: List[Vector], tol: float = 0.001, smoothing: Tuple[float, float, float] | None = None, minDeg: int = 1, maxDeg: int = 6) \rightarrow Edge

Approximate a spline through the provided points.

Parameters

- **listOfVector** (*List* [Vector]) a list of Vectors that represent the points
- **tol** (*float*) tolerance of the algorithm (consult OCC documentation).
- **smoothing** (*Tuple[float, float, float] | None*) optional tuple of 3 weights use for variational smoothing (default: None)
- **minDeg** (*int*) minimum spline degree. Enforced only when smothing is None (default: 1)
- maxDeg (int) maximum spline degree (default: 6)

Returns

an Edge

Return type

Edge

classmethod makeTangentArc(v1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], v3: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Edge

Makes a tangent arc from point v1, in the direction of v2 and ends at v3.

Parameters

- cls
- v1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) start vector
- v2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) tangent vector

• v3

```
int | float, int | float]) - end vector
               Returns
                   an edge
               Return type
                   Edge
     classmethod makeThreePointArc(v1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int |
                                          float], v2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int |
                                          float, int | float], v3: Vector | Tuple[int | float, int | float] | Tuple[int |
                                          float, int | float, int | float]) \rightarrow Edge
           Makes a three point arc through the provided points
               Parameters
                   • cls
                   • v1
                             (Vector | Tuple[int | float, int | float] | Tuple[int | float,
                     int | float, int | float]) - start vector
                             (Vector | Tuple[int | float, int | float] | Tuple[int | float,
                   • v2
                     int | float, int | float]) - middle vector
                   • v3
                             (Vector | Tuple[int | float, int | float] | Tuple[int | float,
                     int | float, int | float]) - end vector
               Returns
                   an edge object through the three points
               Return type
                   Edge
     trim(u0: float | int, u1: float | int) \rightarrow Edge
           Trim the edge in the parametric space to (u0, u1).
           NB: this operation is done on the base geometry.
               Parameters
                   • u0 (float | int)
                   • u1 (float | int)
               Return type
                   Edge
class cadquery.occ_impl.shapes.Face(obj: TopoDS_Shape)
     Bases: Shape
     a bounded surface that represents part of the boundary of a solid
           Parameters
               obj (TopoDS_Shape)
     Center() → Vector
               Returns
                   The point of the center of mass of this Shape
               Return type
                   Vector
```

(Vector | Tuple[int | float, int | float] | Tuple[int | float,

```
chamfer2D(d: float, vertices: Iterable[Vertex]) \rightarrow Face
     Apply 2D chamfer to a face
         Parameters
              • d(float)
              • vertices (Iterable[Vertex])
         Return type
              Face
fillet2D(radius: float, vertices: Iterable[Vertex]) <math>\rightarrow Face
     Apply 2D fillet to a face
         Parameters
              • radius (float)
              • vertices (Iterable[Vertex])
         Return type
              Face
isoline(param: float | int, direction: Literal['u', 'v'] = 'v') \rightarrow Edge
     Construct an isoline.
         Parameters
              • param (float | int)
              • direction (Literal['u', 'v'])
         Return type
              Edge
isolines(params: Iterable[float | int], direction: Literal['u', 'v'] = 'v') <math>\rightarrow List[Edge]
     Construct multiple isolines.
         Parameters
              • params (Iterable[float | int])
              • direction (Literal['u', 'v'])
         Return type
              List[Edge]
classmethod makeFromWires(outerWire: Wire, innerWires: List[Wire] = []) \rightarrow Face
     Makes a planar face from one or more wires
         Parameters
              • outerWire (Wire)
              • innerWires (List[Wire])
         Return type
              Face
```

```
classmethod makeNSidedSurface(edges: ~typing.Iterable[~cadquery.occ_impl.shapes.Edge | ~cadquery.occ_impl.shapes.Wire], constraints: ~typing.Iterable[~cadquery.occ_impl.shapes.Edge | ~cadquery.occ_impl.shapes.Wire | ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] | ~OCP.gp.gp_Pnt], continuity: ~OCP.GeomAbs_GeomAbs_Shape = <GeomAbs_Shape.GeomAbs_C0: 0>, degree: int = 3, nbPtsOnCur: int = 15, nbIter: int = 2, anisotropy: bool = False, tol2d: float = 1e-05, tol3d: float = 0.0001, tolAng: float = 0.01, tolCurv: float = 0.1, maxDeg: int = 8, maxSegments: int = 9) → Face
```

Returns a surface enclosed by a closed polygon defined by 'edges' and 'constraints'.

Parameters

- edges (list of edges or wires) edges
- constraints (list of points or edges) constraints
- **continuity** (GeomAbs_Shape) OCC.Core.GeomAbs continuity condition
- degree (int) >= 2
- **nbPtsOnCur** (*int*) number of points on curve >= 15
- **nbIter** (int) number of iterations >= 2
- anisotropy (bool) bool Anisotropy
- **tol2d** (*float*) 2D tolerance >0
- **tol3d** (*float*) 3D tolerance >0
- tolAng (float) angular tolerance
- **tolCurv** (*float*) tolerance for curvature >0
- maxDeg (int) highest polynomial degree >= 2
- maxSegments (int) greatest number of segments >= 2

Return type

Face

```
classmethod makeRuledSurface(edgeOrWire1: Edge, edgeOrWire2: Edge) \rightarrow Face classmethod makeRuledSurface(edgeOrWire1: Wire, edgeOrWire2: Wire) \rightarrow Face
```

 $makeRuledSurface(Edge|Wire, Edge|Wire) - Make \ a \ ruled \ surface \ Create \ a \ ruled \ surface \ out \ of \ two \ edges \ or \ wires. \ If \ wires \ are \ used \ then \ these \ must \ have \ the \ same \ number \ of \ edges$

```
classmethod makeSplineApprox(points: List[List[Vector]], tol: float = 0.01, smoothing: Tuple[float, float, float] | None = None, minDeg: int = 1, maxDeg: int = 3) \rightarrow Face
```

Approximate a spline surface through the provided points.

Parameters

- points (List[Vector]]) a 2D list of Vectors that represent the points
- **tol** (*float*) tolerance of the algorithm (consult OCC documentation).
- **smoothing** (*Tuple[float, float, float] | None*) optional tuple of 3 weights use for variational smoothing (default: None)
- **minDeg** (*int*) minimum spline degree. Enforced only when smothing is None (default: 1)

• maxDeg (int) – maximum spline degree (default: 6)

Return type

Face

```
normalAt(u: float | int, v: float | int) \rightarrow Tuple[Vector, Vector]
```

 $normalAt(locationVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] | None = None) \rightarrow Vector$

Computes the normal vector at the desired location on the face.

Returns

a vector representing the direction

Parameters

locationVector (a vector that lies on the surface.) – the location to compute the normal at. If none, the center of the face is used.

Return type

Vector

Computes the normal vector at the desired location in the u,v parameter space.

Returns

a vector representing the normal direction and the position

Parameters

- \mathbf{u} the u parametric location to compute the normal at.
- \mathbf{v} the v parametric location to compute the normal at.
- locationVector (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] | None)

Return type

Vector

normals($us: Iterable[float | int], vs: Iterable[float | int]) <math>\rightarrow$ Tuple[List[Vector], List[Vector]]

Computes the normal vectors at the desired locations in the u,v parameter space.

Returns

a tuple of list of vectors representing the normal directions and the positions

Parameters

- us (Iterable[float | int]) the u parametric locations to compute the normal at.
- **vs** (*Iterable[float | int]*) the v parametric locations to compute the normal at.

Return type

Tuple[List[Vector], List[Vector]]

thicken(*thickness: float*) \rightarrow *Solid*

Return a thickened face

Parameters

thickness (float)

Return type

Solid

toArcs(tolerance: float = 0.001) $\rightarrow Face$

Approximate planar face with arcs and straight line segments.

Parameters

tolerance (*float*) – Approximation tolerance.

Return type

Face

```
toPln() \rightarrow gp Pln
```

Convert this face to a gp_Pln.

Note the Location of the resulting plane may not equal the center of this face, however the resulting plane will still contain the center of this face.

Return type

 gp_Pln

 $\textbf{trim}(\textit{u0: float} \mid \textit{int, u1: float} \mid \textit{int, v0: float} \mid \textit{int, v1: float} \mid \textit{int, tol: float} \mid \textit{int} = \textit{1e-06}) \rightarrow \textit{Face}$

Trim the face in the parametric space to (u0, u1).

NB: this operation is done on the base geometry.

Parameters

- **u0** (float | int)
- **u1** (float | int)
- **v0** (float | int)
- **v1**(float | int)
- tol (float | int)

Return type

Face

class cadquery.occ_impl.shapes.Mixin1DProtocol(wrapped: TopoDS_Shape)

Bases: ShapeProtocol, Protocol

Parameters

wrapped (TopoDS_Shape)

class cadquery.occ_impl.shapes.Shape(obj: TopoDS_Shape)

Bases: object

Represents a shape in the system. Wraps TopoDS_Shape.

Parameters

obj (TopoDS_Shape)

 $Area() \rightarrow float$

Returns

The surface area of all faces in this Shape

Return type

float

BoundingBox($tolerance: float \mid None = None$) $\rightarrow BoundBox$

Create a bounding box for this Shape.

Parameters

tolerance (float / None) – Tolerance value passed to BoundBox

Returns

A BoundBox object for this Shape

```
Return type
              BoundBox
Center() → Vector
         Returns
              The point of the center of mass of this Shape
         Return type
              Vector
CenterOfBoundBox(tolerance: float \mid None = None) \rightarrow Vector
         Parameters
              tolerance (float / None) - Tolerance passed to the BoundingBox() method
         Returns
             Center of the bounding box of this shape
         Return type
              Vector
Closed() \rightarrow bool
         Returns
              The closedness flag
         Return type
             bool
static CombinedCenter(objects: Iterable[Shape]) \rightarrow Vector
     Calculates the center of mass of multiple objects.
         Parameters
             objects (Iterable [Shape]) – A list of objects with mass
         Return type
              Vector
static CombinedCenterOfBoundBox(objects: List[Shape]) \rightarrow Vector
     Calculates the center of a bounding box of multiple objects.
         Parameters
             objects (List[Shape]) - A list of objects
         Return type
              Vector
CompSolids() \rightarrow List[CompSolid]
         Returns
              All the compsolids in this Shape
         Return type
             List[CompSolid]
Compounds() \rightarrow List[Compound]
         Returns
              All the compounds in this Shape
```

Return type

List[Compound]

```
Edges() \rightarrow List[Edge]
          Returns
               All the edges in this Shape
          Return type
               List[Edge]
Faces() \rightarrow List[Face]
          Returns
               All the faces in this Shape
          Return type
               List[Face]
Shells() \rightarrow List[Shell]
          Returns
               All the shells in this Shape
          Return type
               List[Shell]
Solids() \rightarrow List[Solid]
          Returns
               All the solids in this Shape
          Return type
               List[Solid]
Vertices() \rightarrow List[Vertex]
          Returns
               All the vertices in this Shape
          Return type
               List[Vertex]
Volume() \rightarrow float
          Returns
               The volume of this Shape
          Return type
               float
Wires() \rightarrow List[Wire]
          Returns
               All the wires in this Shape
          Return type
               List[Wire]
ancestors(shape: Shape, kind: Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
              'Compound']) \rightarrow Compound
      Iterate over ancestors, i.e. shapes of same kind within shape that contain self.
          Parameters
               • shape (Shape)
```

```
kind
                                    (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                'CompSolid', 'Compound'])
         Return type
              Compound
classmethod cast(obj: TopoDS\_Shape, forConstruction: bool = False) \rightarrow Shape
     Returns the right type of wrapper, given a OCCT object
         Parameters
              • obj (TopoDS_Shape)
              • forConstruction (bool)
         Return type
              Shape
static centerOfMass(obj: Shape) \rightarrow Vector
     Calculates the center of 'mass' of an object.
         Parameters
              obj (Shape) – Compute the center of mass of this object
         Return type
              Vector
clean() \rightarrow T
     Experimental clean using ShapeUpgrade
         Parameters
              self(T)
         Return type
static computeMass(obj: Shape) \rightarrow float
     Calculates the 'mass' of an object.
         Parameters
              obj (Shape) – Compute the mass of this object
         Return type
              float
copy(mesh: bool = False) \rightarrow T
     Creates a new object that is a copy of this object.
         Parameters
              • self(T)
              • mesh (bool) – should I copy the triangulation too (default: False)
         Returns
             a copy of the object
         Return type
cut(*toCut: Shape, tol: float | None = None) \rightarrow Shape
     Remove the positional arguments from this Shape.
         Parameters
```

```
• tol (float / None) - Fuzzy mode tolerance
              • toCut (Shape)
         Return type
             Shape
distance(other: Shape) \rightarrow float
     Minimal distance between two shapes
         Parameters
             other (Shape)
         Return type
             float
distances(*others: Shape) → Iterator[float]
     Minimal distances to between self and other shapes
         Parameters
             others (Shape)
         Return type
             Iterator[float]
edges(selector: Selector | str | None = None) \rightarrow Shape
     Select edges.
         Parameters
              selector (Selector | str | None)
         Return type
             Shape
export (fname: str, tolerance: float = 0.1, angularTolerance: float = 0.1, opt: Dict[str, Any] \mid None = None)
     Export Shape to file.
         Parameters
              • self(T)
              • fname (str)
              • tolerance (float)
              • angularTolerance (float)
              • opt (Dict[str, Any] | None)
exportBin(f: str \mid BytesIO) \rightarrow bool
     Export this shape to a binary BREP file.
         Parameters
             f(str | BytesI0)
         Return type
             bool
exportBrep(f: str \mid BytesIO) \rightarrow bool
     Export this shape to a BREP file
         Parameters
             f(str | BytesI0)
```

Return type

bool

exportStep(*fileName: str*, **kwargs) → IFSelect_ReturnStatus

Export this shape to a STEP file.

kwargs is used to provide optional keyword arguments to configure the exporter.

Parameters

- **fileName** (str) Path and filename for writing.
- write_pcurves (*boo1*) Enable or disable writing parametric curves to the STEP file. Default True.

If False, writes STEP file without pourves. This decreases the size of the resulting STEP file.

• **precision_mode** (*int*) – Controls the uncertainty value for STEP entities. Specify -1, 0, or 1. Default 0. See OCCT documentation.

Return type

IFSelect_ReturnStatus

exportStl(fileName: str, tolerance: float = 0.001, angularTolerance: float = 0.1, ascii: bool = False, relative: bool = True, parallel: bool = True) \rightarrow bool

Exports a shape to a specified STL file.

Parameters

- **fileName** (*str*) The path and file name to write the STL output to.
- **tolerance** (*float*) A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 1e-3, which is a good starting point for a range of cases.
- **angularTolerance** (*float*) Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.
- **ascii** (*bool*) Export the file as ASCII (True) or binary (False) STL format. Default is binary.
- **relative** (*bool*) If True, tolerance will be scaled by the size of the edge being meshed. Default is True. Setting this value to True may cause large features to become faceted, or small features dense.
- parallel (bool) If True, OCCT will use parallel processing to mesh the shape. Default is True.

Return type

bool

faces($selector: Selector | str | None = None) \rightarrow Shape$

Select faces.

Parameters

```
selector (Selector | str | None)
```

Return type

Shape

facesIntersectedByLine(point: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axis: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], tol: float = 0.0001, direction: Literal['AlongAxis', 'Opposite'] | None = None)

Computes the intersections between the provided line and the faces of this Shape

Parameters

- point (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Base point for defining a line
- axis (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) Axis on which the line rests
- tol (float) Intersection tolerance
- **direction** (*Literal['AlongAxis'*, 'Opposite'] | None) Valid values: "AlongAxis", "Opposite"; If specified, will ignore all faces that are not in the specified direction including the face where the point lies if it is the case

Returns

A list of intersected faces sorted by distance from point

```
fix() \rightarrow T
```

Try to fix shape if not valid

Parameters

self(T)

Return type

T

fuse(*toFuse: Shape, glue: bool = False, tol: float | None = None) \rightarrow Shape

Fuse the positional arguments with this Shape.

Parameters

- **glue** (*bool*) Sets the glue option for the algorithm, which allows increasing performance of the intersection of the input shapes
- tol (float / None) Fuzzy mode tolerance
- toFuse (Shape)

Return type

Shape

```
geomType() → Literal['Vertex', 'Wire', 'Shell', 'Solid', 'Compound', 'PLANE', 'CYLINDER', 'CONE', 'SPHERE', 'TORUS', 'BEZIER', 'BSPLINE', 'REVOLUTION', 'EXTRUSION', 'OFFSET', 'OTHER', 'LINE', 'CIRCLE', 'ELLIPSE', 'HYPERBOLA', 'PARABOLA']
```

Gets the underlying geometry type.

Implementations can return any values desired, but the values the user uses in type filters should correspond to these.

As an example, if a user does:

```
CQ(object).faces("%mytype")
```

The expectation is that the geomType attribute will return 'mytype'

The return values depend on the type of the shape:

```
Vertex: always 'Vertex'
```

Edge: LINE, CIRCLE, ELLIPSE, HYPERBOLA, PARABOLA, BEZIER,

BSPLINE, OFFSET, OTHER

Face: PLANE, CYLINDER, CONE, SPHERE, TORUS, BEZIER, BSPLINE,

REVOLUTION, EXTRUSION, OFFSET, OTHER

Solid: 'Solid' Shell: 'Shell'

Compound: 'Compound'

Wire: 'Wire'

Returns

A string according to the geometry type

Return type

Literal['Vertex', 'Wire', 'Shell', 'Solid', 'Compound', 'PLANE', 'CYLINDER', 'CONE', 'SPHERE', 'TORUS', 'BEZIER', 'BSPLINE', 'REVOLUTION', 'EXTRUSION', 'OFFSET', 'OTHER', 'LINE', 'CIRCLE', 'ELLIPSE', 'HYPERBOLA', 'PARABOLA']

$hashCode() \rightarrow int$

Returns a hashed value denoting this shape. It is computed from the TShape and the Location. The Orientation is not used.

Return type

int

classmethod importBin($f: str \mid BytesIO$) $\rightarrow Shape$

Import shape from a binary BREP file.

Parameters

f(str | BytesI0)

Return type

Shape

classmethod importBrep($f: str \mid BytesIO$) $\rightarrow Shape$

Import shape from a BREP file

Parameters

f(str | BytesI0)

Return type

Shape

 $intersect(*toIntersect: Shape, tol: float | None = None) \rightarrow Shape$

Intersection of the positional arguments and this Shape.

Parameters

- tol (float / None) Fuzzy mode tolerance
- toIntersect (Shape)

Return type

Shape

isEqual(other: Shape) $\rightarrow bool$

Returns True if two shapes are equal, i.e. if they share the same TShape with the same Locations and Orientations. Also see *isSame()*.

```
Parameters
              other (Shape)
          Return type
              bool
isNull() \rightarrow bool
     Returns true if this shape is null. In other words, it references no underlying shape with the potential to be
     given a location and an orientation.
          Return type
              bool
isSame(other: Shape) \rightarrow bool
     Returns True if other and this shape are same, i.e. if they share the same TShape with the same Locations.
     Orientations may differ. Also see isEqual()
          Parameters
              other (Shape)
          Return type
              bool
isValid() \rightarrow bool
     Returns True if no defect is detected on the shape S or any of its subshapes. See the OCCT docs on
     BRepCheck_Analyzer::IsValid for a full description of what is checked.
          Return type
              bool
locate(loc: Location) \rightarrow T
     Apply a location in absolute sense to self.
          Parameters
              • self(T)
              • loc (Location)
          Return type
located(loc: Location) \rightarrow T
     Apply a location in absolute sense to a copy of self.
          Parameters
              • self(T)
              • loc (Location)
          Return type
location() \rightarrow Location
     Return the current location
          Return type
              Location
```

static matrixOfInertia(obj: Shape) → List[List[float]]

Calculates the matrix of inertia of an object. Since the part's density is unknown, this result is inertia/density with units of [1/length]. :param obj: Compute the matrix of inertia of this object

Parameters

obj (Shape)

Return type

List[*List*[float]]

mesh(tolerance: float, angularTolerance: float = 0.1)

Generate triangulation if none exists.

Parameters

- tolerance (float)
- angularTolerance (float)

mirror(mirrorPlane: Literal['XY', 'YX', 'XZ', 'ZX', 'YZ', 'ZY'] | Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] = 'XY', basePointVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float] = (0, 0, 0) \rightarrow Shape

Applies a mirror transform to this Shape. Does not duplicate objects about the plane.

Parameters

- mirrorPlane (Literal['XY', 'YX', 'XZ', 'ZX', 'YZ', 'ZY'] | ~cadquery. occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float]) The direction of the plane to mirror about one of 'XY', 'XZ' or 'YZ'
- basePointVector (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) The origin of the plane to mirror about

Returns

The mirrored shape

Return type

Shape

```
move (x: float | int = 0, y: float | int = 0, z: float | int = 0, rx: float | int = 0, ry: float | int = 0, rz: float | int = 0) \rightarrow T
```

```
move(loc: Vector \mid Tuple[int \mid float, int \mid float] \mid Tuple[int \mid float, int \mid float, int \mid float]) <math>\rightarrow T
move(loc: Location) \rightarrow T
```

Apply a location in relative sense (i.e. update current location) to self.

Apply translation and rotation in relative sense (i.e. update current location) to self.

Apply a VectorLike in relative sense (i.e. update current location) to self.

Parameters

- **self**(T)
- loc (Location)

float | $Tuple[int | float, int | float, int | float]) <math>\rightarrow T$

Return type

T

```
moved(loc: Sequence[Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]]) → T
moved(loc: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) → T
moved(loc1: Location, loc2: Location, *locs: Location) → T
moved(loc1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], loc2: Vector |
Tuple[int | float, int | float] | Tuple[int | float, int | float], *locs: Vector | Tuple[int | float, int |
```

```
moved(locs: Sequence[Location]) \rightarrow T
moved(loc: Location) \rightarrow T
moved(x: float \mid int = 0, y: float \mid int = 0, z: float \mid int = 0, rx: float \mid int = 0, ry: float \mid int = 0, rz: 
              Apply a location in relative sense (i.e. update current location) to a copy of self.
              Apply multiple locations.
              Apply multiple locations.
              Apply translation and rotation in relative sense to a copy of self.
              Apply a VectorLike in relative sense to a copy of self.
              Apply multiple VectorLikes in relative sense to a copy of self.
              Apply multiple VectorLikes in relative sense to a copy of self.
                          Parameters
                                      • self(T)
                                      • loc (Location)
                          Return type
rotate(startVector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], endVector:
                        Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], angleDegrees: float) \rightarrow T
              Rotates a shape around an axis.
                          Parameters
                                      • self (T)
                                      • startVector (either a 3-tuple or a Vector) – start point of rotation axis
                                      • endVector (either a 3-tuple or a Vector) – end point of rotation axis
                                      • angleDegrees (float) – angle to rotate, in degrees
                          Returns
                                     a copy of the shape, rotated
                          Return type
scale(factor: float) \rightarrow Shape
              Scales this shape through a transformation.
                          Parameters
                                     factor (float)
                          Return type
                                     Shape
shells(selector: Selector | str | None = None) \rightarrow Shape
              Select shells.
                          Parameters
                                     selector (Selector | str | None)
                          Return type
                                     Shape
```

```
siblings (shape: Shape, kind: Literal ['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid', 'CompSolid',
           'Compound'], level: int = 1) \rightarrow Compound
     Iterate over siblings, i.e. shapes within shape that share subshapes of kind with self.
         Parameters
              • shape (Shape)
              kind
                                    (Literal['Vertex', 'Edge', 'Wire', 'Face', 'Shell', 'Solid',
                'CompSolid', 'Compound'])
              • level (int)
         Return type
              Compound
solids(selector: Selector | str | None = None) \rightarrow Shape
     Select solids.
         Parameters
              selector (Selector | str | None)
         Return type
              Shape
split(*splitters: Shape) \rightarrow Shape
     Split this shape with the positional arguments.
         Parameters
              splitters (Shape)
         Return type
              Shape
toSplines(degree: int = 3, tolerance: float = 0.001, nurbs: bool = False) <math>\rightarrow T
     Approximate shape with b-splines of the specified degree.
         Parameters
              • self (T)
              • degree (int) – Maximum degree.
              • tolerance (float) – Approximation tolerance.
              • nurbs (boo1) – Use rational splines.
         Return type
toVtkPolyData(tolerance: float | None = None, angularTolerance: float | None = None, normals: bool =
                 False) \rightarrow vtkPolyData
     Convert shape to vtkPolyData
         Parameters
              • tolerance (float | None)
              • angularTolerance (float | None)
              • normals (bool)
         Return type
              vtkPolyData
```

```
transformGeometry(tMatrix: Matrix) \rightarrow Shape
     Transforms this shape by tMatrix.
     WARNING: transformGeometry will sometimes convert lines and circles to splines, but it also has the
     ability to handle skew and stretching transformations.
     If your transformation is only translation and rotation, it is safer to use transformShape(), which doesn't
     change the underlying type of the geometry, but cannot handle skew transformations.
         Parameters
              tMatrix (Matrix) - The transformation matrix
         Returns
              a copy of the object, but with geometry transformed instead of just rotated.
         Return type
              Shape
transformShape(tMatrix: Matrix) \rightarrow Shape
     Transforms this Shape by tMatrix. Also see transformGeometry().
         Parameters
              tMatrix (Matrix) – The transformation matrix
         Returns
              a copy of the object, transformed by the provided matrix, with all objects keeping their type
         Return type
              Shape
translate(vector: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow T
     Translates this shape through a transformation.
         Parameters
              • self(T)
              vector
                                (Vector | Tuple[int | float, int | float] | Tuple[int |
                float, int | float, int | float])
         Return type
vertices(selector: Selector | str | None = None) \rightarrow Shape
     Select vertices.
         Parameters
              selector (Selector | str | None)
         Return type
              Shape
wires(selector: Selector | str | None = None) \rightarrow Shape
     Select wires.
         Parameters
              selector (Selector | str | None)
          Return type
```

Shape

```
class cadquery.occ_impl.shapes.ShapeProtocol(wrapped: TopoDS_Shape)
     Bases: Protocol
           Parameters
               wrapped (TopoDS_Shape)
class cadquery.occ_impl.shapes.Shell(obj: TopoDS_Shape)
     Bases: Shape
     the outer boundary of a surface
           Parameters
               obj (TopoDS_Shape)
     classmethod makeShell(listOfFaces: Iterable[Face]) \rightarrow Shell
           Makes a shell from faces.
               Parameters
                   listOfFaces (Iterable[Face])
               Return type
                   Shell
class cadquery.occ_impl.shapes.Solid(obj: TopoDS_Shape)
     Bases: Shape, Mixin3D
     a single solid
           Parameters
               obj (TopoDS_Shape)
     classmethod extrudeLinear(outerWire: Wire, innerWires: List[Wire], vecNormal: Vector | Tuple[int |
                                      float, int | float] | Tuple[int | float, int | float, int | float], taper: float | int = 0)
                                      \rightarrow Solid
     classmethod extrudeLinear(face: Face, vecNormal: Vector | Tuple[int | float, int | float] | Tuple[int | float,
                                      int \mid float, int \mid float], taper: float \mid int = 0) \rightarrow Solid
           Attempt to extrude the list of wires into a prismatic solid in the provided direction
               Parameters
                   • outerWire (Wire) - the outermost wire
                   • innerWires (List[Wire]) – a list of inner wires

    vecNormal

                                      (Vector | Tuple[int | float, int | float] | Tuple[int |
                      float, int | float, int | float]) - a vector along which to extrude the wires
                   • taper (float | int) – taper angle, default=0
               Returns
                   a Solid object
               Return type
                   Solid
```

The wires must not intersect

Extruding wires is very non-trivial. Nested wires imply very different geometry, and there are many geometries that are invalid. In general, the following conditions must be met:

- all wires must be closed
- there cannot be any intersecting or self-intersecting wires

- · wires must be listed from outside in
- more than one levels of nesting is not supported reliably

This method will attempt to sort the wires, but there is much work remaining to make this method reliable.

classmethod extrudeLinearWithRotation(outerWire: Wire, innerWires: List[Wire], vecCenter: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float, int | float], vecNormal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], angleDegrees: float | int) \rightarrow Solid

classmethod extrudeLinearWithRotation(face: Face, vecCenter: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], vecNormal: Vector | Tuple[int | float, int | float, int | float] | Tuple[int | float, int | float, int | float], angleDegrees: float | int) \rightarrow Solid

Creates a 'twisted prism' by extruding, while simultaneously rotating around the extrusion vector.

Though the signature may appear to be similar enough to extrudeLinear to merit combining them, the construction methods used here are different enough that they should be separate.

At a high level, the steps followed are:

- (1) accept a set of wires
- (2) create another set of wires like this one, but which are transformed and rotated
- (3) create a ruledSurface between the sets of wires
- (4) create a shell and compute the resulting object

Parameters

- outerWire (Wire) the outermost wire
- **innerWires** (*List* [Wire]) a list of inner wires
- vecCenter (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) the center point about which to rotate. the axis of rotation is defined by vecNormal, located at vecCenter.
- vecNormal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) a vector along which to extrude the wires
- angleDegrees (float / int) the angle to rotate through while extruding

Returns

a Solid object

Return type

Solid

 $innerShells() \rightarrow List[Shell]$

Returns inner shells.

Return type

List[Shell]

classmethod interpPlate($surf_edges$, $surf_pts$, thickness, degree=3, nbPtsOnCur=15, nbIter=2, anisotropy=False, tol2d=1e-05, tol3d=0.0001, tolAng=0.01, tolCurv=0.1, maxDeg=8, maxSegments=9) $\rightarrow Solid \mid Face$

Returns a plate surface that is 'thickness' thick, enclosed by 'surf_edge_pts' points, and going through 'surf_pts' points.

Parameters

- surf_edges list of [x,y,z] float ordered coordinates or list of ordered or unordered wires
- **surf_pts** list of [x,y,z] float coordinates (uses only edges if [])
- **thickness** thickness may be negative or positive depending on direction, (returns 2D surface if 0)
- degree ->=2
- **nbPtsOnCur** number of points on curve >= 15
- **nbIter** number of iterations >= 2
- anisotropy bool Anisotropy
- **tol2d** 2D tolerance >0
- **tol3d** 3D tolerance >0
- tolAng angular tolerance
- **tolCurv** tolerance for curvature >0
- maxDeg highest polynomial degree >= 2
- maxSegments greatest number of segments >= 2

Return type

Solid | Face

static isSolid(obj: Shape) \rightarrow bool

Returns true if the object is a solid, false otherwise

Parameters

obj (Shape)

Return type

bool

classmethod makeBox(length,width,height,[pnt,dir]) -- Make a box located in pnt with the dimensions (length,width,height)

By default pnt=Vector(0,0,0) and dir=Vector(0,0,1)

Parameters

- length (float)
- width (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Solid

classmethod makeCone (radius1: float, radius2: float, height: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0, 0.0), angleDegrees: float = 360) \rightarrow Solid

Make a cone with given radii and height By default pnt=Vector(0,0,0), dir=Vector(0,0,1) and angle=360

Parameters

- radius1 (float)
- radius2 (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees (float)

Return type

Solid

```
classmethod makeCylinder(radius: float, height: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees: float = 360) \rightarrow Solid
```

makeCylinder(radius,height,[pnt,dir,angle]) – Make a cylinder with a given radius and height By default pnt=Vector(0,0,0),dir=Vector(0,0,1) and angle=360

Parameters

- radius (float)
- height (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees (float)

Return type

Solid

classmethod makeLoft($listOfWire: List[Wire], ruled: bool = False) \rightarrow Solid$

makes a loft from a list of wires The wires will be converted into faces when possible—it is presumed that nobody ever actually wants to make an infinitely thin shell for a real FreeCADPart.

Parameters

- listOfWire (List[Wire])
- ruled (bool)

Return type

Solid

classmethod makeSolid($shell: Shell) \rightarrow Solid$

Makes a solid from a single shell.

Parameters

shell (Shell)

Return type

Solid

classmethod makeSphere(radius: float, pnt: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees1: float = 0, angleDegrees2: float = 90, angleDegrees3: float = 360) \rightarrow Shape

Make a sphere with a given radius By default pnt=Vector(0,0,0), dir=Vector(0,0,1), angle1=0, angle2=90 and angle3=360

Parameters

- radius (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees1 (float)
- angleDegrees2 (float)
- angleDegrees3 (float)

Return type

Shape

classmethod makeTorus(radius1: float, radius2: float, pnt: ~cadquery.occ_impl.geom.Vector |

~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angleDegrees1: float = 0, angleDegrees2: float = 360) \rightarrow Solid

make Torus(radius1, radius2, [pnt, dir, angle1, angle2, angle]) - Make a torus with a given radii and angles By default pnt=Vector(0,0,0), dir=Vector(0,0,1), angle1=0 , angle1=360 and angle=360

Parameters

- radius1 (float)
- radius2 (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- angleDegrees1 (float)
- angleDegrees2 (float)

Return type

Solid

classmethod makeWedge(dx: float, dy: float, dz: float, xmin: float, xmin: float, xmax: float, xma

Make a wedge located in pnt By default pnt=Vector(0,0,0) and dir=Vector(0,0,1)

Parameters

- dx (float)
- dy (float)
- dz (float)
- xmin (float)
- zmin (float)
- xmax (float)
- zmax (float)
- pnt (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- dir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Solid

 $outerShell() \rightarrow Shell$

Returns outer shell.

Return type

Shell

 $\textbf{classmethod revolve} (\textit{outerWire}: \ \textit{Wire}, \textit{innerWires}: \ \textit{List[Wire]}, \textit{angleDegrees}: \textit{float} \mid \textit{int}, \textit{axisStart}:$

Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axisEnd: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow Solid

classmethod revolve(face: Face, angleDegrees: float | int, axisStart: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], axisEnd: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow Solid

Attempt to revolve the list of wires into a solid in the provided direction

Parameters

- outerWire (Wire) the outermost wire
- innerWires (List[Wire]) a list of inner wires
- angleDegrees (float, anything less than 360 degrees will leave the shape open) the angle to revolve through.
- axisStart (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) the start point of the axis of rotation
- axisEnd (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) the end point of the axis of rotation

Returns

a Solid object

Return type

Solid

The wires must not intersect

- · all wires must be closed
- there cannot be any intersecting or self-intersecting wires
- wires must be listed from outside in
- more than one levels of nesting is not supported reliably
- the wire(s) that you're revolving cannot be centered

This method will attempt to sort the wires, but there is much work remaining to make this method reliable.

```
classmethod sweep(face: Face, path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None, transitionMode: Literal['transformed', 'round', 'right'] = 'transformed') \rightarrow Shape
```

classmethod sweep(outerWire: Wire, innerWires: List[Wire], path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None, transitionMode: Literal['transformed', 'round', 'right'] = 'transformed') \rightarrow Shape

Attempt to sweep the list of wires into a prismatic solid along the provided path

Parameters

- outerWire (Wire) the outermost wire
- innerWires (List[Wire]) a list of inner wires
- path (Wire / Edge) The wire to sweep the face resulting from the wires over
- makeSolid (bool) return Solid or Shell (default True)
- **isFrenet** (*bool*) Frenet mode (default False)
- mode (Vector / Wire / Edge / None) additional sweep mode parameters
- transitionMode (Literal ['transformed', 'round', 'right']) handling of profile orientation at C1 path discontinuities. Possible values are {'transformed','round', 'right'} (default: 'right').

Returns

a Solid object

Return type

Shape

classmethod sweep_multi(profiles: Iterable[Wire | Face], path: Wire | Edge, makeSolid: bool = True, isFrenet: bool = False, mode: Vector | Wire | Edge | None = None) \rightarrow Solid

Multi section sweep. Only single outer profile per section is allowed.

Parameters

- **profiles** (*Iterable* [Wire | Face]) list of profiles
- path (Wire / Edge) The wire to sweep the face resulting from the wires over
- mode (Vector / Wire / Edge / None) additional sweep mode parameters.
- makeSolid (bool)
- isFrenet (bool)

Returns

a Solid object

Return type

Solid

```
class cadquery.occ_impl.shapes.Vertex(obj: TopoDS_Shape, forConstruction: bool = False)
     Bases: Shape
     A Single Point in Space
           Parameters
                 • obj (TopoDS_Shape)
                 • forConstruction (bool)
     Center() → Vector
           The center of a vertex is itself!
               Return type
                   Vector
class cadquery.occ_impl.shapes.Wire(obj: TopoDS_Shape)
     Bases: Shape, Mixin1D
     A series of connected, ordered Edges, that typically bounds a Face
           Parameters
               obj (TopoDS_Shape)
     Vertices() \rightarrow List[Vertex]
           Ordered list of vertices of the wire.
               Return type
                   List [Vertex]
     classmethod assembleEdges(listOfEdges: Iterable[Edge]) \rightarrow Wire
           Attempts to build a wire that consists of the edges in the provided list
               Parameters
                   • cls
                   • listOfEdges (Iterable [Edge]) – a list of Edge objects. The edges are not to be con-
                     secutive.
               Returns
                   a wire with the edges assembled
               Return type
                   Wire
           BRepBuilderAPI_MakeWire::Error() values:
             • BRepBuilderAPI_WireDone = 0
             • BRepBuilderAPI_EmptyWire = 1
             • BRepBuilderAPI_DisconnectedWire = 2
             • BRepBuilderAPI_NonManifoldWire = 3
     chamfer2D(d: float, vertices: Iterable[Vertex]) \rightarrow Wire
           Apply 2D chamfer to a wire
               Parameters
                   • d(float)
                   • vertices (Iterable[Vertex])
```

Return type

Wire

 $close() \rightarrow Wire$

Close a Wire

Return type

Wire

classmethod combine(listOfWires: Iterable[Wire | Edge], tol: float = 1e-09) \rightarrow List[Wire]

Attempt to combine a list of wires and edges into a new wire.

Parameters

- cls
- listOfWires (Iterable [Wire | Edge])
- tol (float) default 1e-9

Returns

List[Wire]

Return type

List[Wire]

fillet($radius: float, vertices: Iterable[Vertex] | None = None) <math>\rightarrow Wire$

Apply 2D or 3D fillet to a wire

Parameters

- radius (float) the radius of the fillet, must be > zero
- **vertices** (*Iterable* [Vertex] / *None*) the vertices to delete (where the fillet will be applied). By default all vertices are deleted except ends of open wires.

Returns

A wire with filleted corners

Return type

Wire

 $fillet2D(radius: float, vertices: Iterable[Vertex]) \rightarrow Wire$

Apply 2D fillet to a wire

Parameters

- radius (float)
- vertices (Iterable[Vertex])

Return type

Wire

classmethod makeCircle(radius: float, center: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], normal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Wire

Makes a Circle centered at the provided point, having normal in the provided direction

Parameters

• radius (float) – floating point radius of the circle, must be > 0

- center (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the center of the circle
- normal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the direction of the plane the circle should lie in

Return type

Wire

classmethod makeEllipse(x_radius : float, y_radius : float, center: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], normal: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], xDir: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], angle1: float = 360.0, angle2: float = 360.0, rotation_angle: float = 0.0, closed: bool = True) \rightarrow Wire

Makes an Ellipse centered at the provided point, having normal in the provided direction

Parameters

- **x_radius** (*float*) floating point major radius of the ellipse (x-axis), must be > 0
- **y_radius** (*float*) floating point minor radius of the ellipse (y-axis), must be > 0
- center (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the center of the circle
- normal (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) vector representing the direction of the plane the circle should lie in
- angle1 (float) start angle of arc
- angle2 (float) end angle of arc
- rotation_angle (float) angle to rotate the created ellipse / arc
- xDir (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- closed (bool)

Return type

Wire

classmethod makeHelix(pitch: float, height: float, radius: float, center: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float] = Vector: (0.0, 0.0, 0.0), dir: ~cadquery.occ_impl.geom.Vector | ~typing.Tuple[int | float, int | float] | ~typing.Tuple[int | float, int | float, int | float] = Vector: (0.0, 0.0, 1.0), angle: float = 360.0, lefthand: bool = False) \rightarrow Wire

Make a helix with a given pitch, height and radius By default a cylindrical surface is used to create the helix. If the fourth parameter is set (the apex given in degree) a conical surface is used instead'

- pitch (float)
- height (float)
- radius (float)

```
(Vector | Tuple[int | float, int | float] | Tuple[int |
                   • center
                     float, int | float, int | float])
                            (Vector | Tuple[int | float, int | float] | Tuple[int | float,
                     int | float, int | float])
                   • angle (float)
                   • lefthand (bool)
               Return type
                   Wire
     classmethod makePolygon(listOfVertices: Iterable[Vector | Tuple[int | float, int | float] | Tuple[int | float,
                                   int \mid float, int \mid float \mid f, for Construction: bool = False, close: bool = False) \rightarrow
                                   Wire
          Construct a polygonal wire from points.
               Parameters
                   • listOfVertices (Iterable[Vector | Tuple[int | float, int | float] |
                     Tuple[int | float, int | float, int | float]])
                   • forConstruction (bool)
                   • close (bool)
               Return type
                   Wire
     offset2D(d: float, kind: Literal['arc', 'intersection', 'tangent'] = 'arc') \rightarrow List[Wire]
          Offsets a planar wire
               Parameters
                   • d(float)
                   • kind (Literal['arc', 'intersection', 'tangent'])
               Return type
                   List[Wire]
     stitch(other: Wire) \rightarrow Wire
          Attempt to stitch wires
               Parameters
                   other (Wire)
               Return type
                   Wire
cadquery.occ_impl.shapes.box(w: float, l: float, h: float) \rightarrow Shape
     Construct a solid box.
          Parameters
                 • w(float)
                 • 1 (float)
                 • h (float)
          Return type
               Shape
```

```
cadquery.occ_impl.shapes.cap(s: Shape, ctx: Shape, constraints: Sequence[Shape | Vector | Tuple[int | float,
                                    int \mid float] \mid Tuple[int \mid float, int \mid float, int \mid float]] = ()) \rightarrow Shape
     Fill edges/wire possibly obeying constraints and try to connect smoothly to the context shape.
           Parameters
                 • s (Shape)
                 • ctx (Shape)
                 • constraints (Sequence [Shape | Vector | Tuple [int | float, int | float]
                    | Tuple[int | float, int | float, int | float]])
           Return type
               Shape
cadquery.occ_impl.shapes.chamfer(s: Shape, e: Shape, d: float) \rightarrow Shape
     Chamfer selected edges in a given shell or solid.
           Parameters
                 • s (Shape)
                 • e (Shape)
                 • d(float)
           Return type
               Shape
cadquery.occ_impl.shapes.check(s: Shape, results: List[Tuple[List[Shape], Any]] | None = None) \rightarrow bool
     Check if a shape is valid.
           Parameters
                 • s (Shape)
                 • results (List[Tuple[List[Shape], Any]] | None)
           Return type
               bool
cadquery.occ\_impl.shapes.circle(r: float) \rightarrow Shape
     Construct a circle.
           Parameters
               r (float)
           Return type
               Shape
cadquery.occ_impl.shapes.clean(s: Shape) \rightarrow Shape
     Clean superfluous edges and faces.
           Parameters
               s (Shape)
           Return type
               Shape
cadquery.occ\_impl.shapes.compound(*s: cadquery.occ\_impl.shapes.Shape) \rightarrow
                                          cadquery.occ_impl.shapes.Shape
```

Build compound from shapes.

```
compound(s: Sequence[cadquery.occ_impl.shapes.Shape]) -> cadquery.occ_impl.shapes.Shape
           Build compound from a sequence of shapes.
           Parameters
               s (Shape)
           Return type
               Shape
cadquery.occ_impl.shapes.cone(d1: float | int, d2: float | int, h: float | int) \rightarrow
                                     cadquery.occ_impl.shapes.Shape
           Construct a partial solid cone.
     cone(d: Union[float, int], h: Union[float, int]) -> cadquery.occ_impl.shapes.Shape
           Construct a full solid cone.
           Parameters
                 • d1 (float | int)
                 • d2 (float | int)
                 • h (float | int)
           Return type
               Shape
cadquery.occ_impl.shapes.cut(s1: Shape, s2: Shape, tol: float = 0.0) \rightarrow Shape
     Subtract two shapes.
           Parameters
                 • s1 (Shape)
                 • s2 (Shape)
```

• tol (float)

Return type

Shape

cadquery.occ_impl.shapes.cylinder(d: float, h: float) $\rightarrow Shape$ Construct a solid cylinder.

Parameters

- d(float)
- h (float)

Return type

Shape

 $cadquery.occ_impl.shapes.downcast(obj: TopoDS_Shape) \rightarrow TopoDS_Shape$ Downcasts a TopoDS object to suitable specialized type

Parameters

obj (TopoDS_Shape)

Return type

TopoDS_Shape

```
cadquery.occ_impl.shapes.edgesToWires(edges: Iterable[Edge], tol: float = 1e-06) \rightarrow List[Wire] Convert edges to a list of wires.
```

Parameters

- edges (Iterable [Edge])
- tol (float)

Return type

List[Wire]

 $\verb|cadquery.occ_impl.shapes.ellipse| (r1: \textit{float}, r2: \textit{float}) \rightarrow \textit{Shape}|$

Construct an ellipse.

Parameters

- **r1** (float)
- **r2** (float)

Return type

Shape

cadquery.occ_impl.shapes.extrude(s: Shape, d: Vector | $Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Shape$

Extrude a shape.

Parameters

- **s** (Shape)
- d (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Shape

 ${\tt cadquery.occ_impl.shapes.Shape}) \rightarrow {\it cadquery.occ_impl.shapes.Shape}) \rightarrow {\it cadquery.occ_impl.shapes.Shape}$

Build face from edges or wires.

face(s: Sequence[cadquery.occ_impl.shapes.Shape]) -> cadquery.occ_impl.shapes.Shape

Build face from a sequence of edges or wires.

Parameters

s (Shape)

Return type

Shape

cadquery.occ_impl.shapes.fill(s: Shape, constraints: Sequence[Shape | Vector | Tuple[int | float, int | float] | $Tuple[int | float, int | float, int | float, int | float]] = ()) \rightarrow Shape$

Fill edges/wire possibly obeying constraints.

- **s** (Shape)
- constraints (Sequence [Shape | Vector | Tuple [int | float, int | float] | Tuple [int | float, int | float, int | float]])

Return type

Shape

cadquery.occ_impl.shapes.fillet(s: Shape, e: Shape, r: float) \rightarrow Shape Fillet selected edges in a given shell or solid.

Parameters

- **s** (Shape)
- **e** (Shape)
- r(float)

Return type

Shape

cadquery.occ_impl.shapes.fix(obj: TopoDS_Shape) → TopoDS_Shape Fix a TopoDS object to suitable specialized type

Parameters

obj (TopoDS_Shape)

Return type

TopoDS_Shape

cadquery.occ_impl.shapes.**fuse**(s1: Shape, s2: Shape, tol: float = 0.0) \rightarrow Shape Fuse two shapes.

Parameters

- s1 (Shape)
- s2 (Shape)
- tol (float)

Return type

Shape

cadquery.occ_impl.shapes.intersect(s1: Shape, s2: Shape, tol: float = 0.0) \rightarrow Shape Intersect two shapes.

Parameters

- **s1** (Shape)
- **s2** (Shape)
- tol (float)

Return type

Shape

cadquery.occ_impl.shapes.loft(s: Sequence[cadquery.occ_impl.shapes.Shape], cap: bool = False, ruled: bool = False, continuity: Literal['C1', 'C2', 'C3'] = 'C2', parametrization: Literal['uniform', 'chordal', 'centripetal'] = 'uniform', degree: int = 3, compat: bool = True, smoothing: bool = False, weights: Tuple[float, float, float] = (1, 1, 1)) \rightarrow cadquery.occ_impl.shapes.Shape

Loft edges, wires or faces. For faces cap has no effect. Do not mix faces with other types.

loft(*s: cadquery.occ_impl.shapes.Shape, cap: bool = False, ruled: bool = False, continuity: Literal['C1', 'C2', 'C3'] = 'C2', parametrization: Literal['uniform', 'chordal', 'centripetal'] = 'uniform', degree: int =

3, compat: bool = True, smoothing: bool = False, weights: $Tuple[float, float, float] = (1, 1, 1)) \rightarrow cad-query.occ_impl.shapes.Shape$

Variadic loft overload.

Parameters

- **s** (Sequence[Shape])
- cap (bool)
- ruled (bool)
- continuity (Literal['C1', 'C2', 'C3'])
- parametrization (Literal['uniform', 'chordal', 'centripetal'])
- degree (int)
- compat (bool)
- smoothing (bool)
- weights (Tuple[float, float, float])

Return type

Shape

cadquery.occ_impl.shapes.offset(s: Shape, t: float, cap=True, both: bool = False, tol: float = le-06) \rightarrow Shape

Offset or thicken faces or shells.

Parameters

- **s** (Shape)
- t(float)
- both (bool)
- tol (float)

Return type

Shape

cadquery.occ_impl.shapes.plane(w: float | int, l: float | int) \rightarrow cadquery.occ_impl.shapes.Shape

Construct a finite planar face.

plane() -> cadquery.occ_impl.shapes.Shape

Construct an infinite planar face.

This is a crude approximation. Truly infinite faces in OCCT do not work as expected in all contexts.

Parameters

- w(float | int)
- 1(float | int)

Return type

Shape

cadquery.occ_impl.shapes.polygon(*pts: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) \rightarrow Shape

Construct a polygon (closed polyline) from points.

Parameters

```
pts (Vector | Tuple[int | float, int | float] | Tuple[int | float, int |
float, int | float])
```

Return type

Shape

cadquery.occ_impl.shapes.polyline(*pts: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) \rightarrow Shape

Construct a polyline from points.

Parameters

```
pts (Vector | Tuple[int | float, int | float] | Tuple[int | float, int |
float, int | float])
```

Return type

Shape

cadquery.occ_impl.shapes.rect(w: float, h: float) \rightarrow Shape

Construct a rectangle.

Parameters

- w(float)
- h (float)

Return type

Shape

cadquery.occ_impl.shapes.revolve(s: Shape, p: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], d: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], a: float = 360)

Revolve a shape.

Parameters

- **s** (Shape)
- p (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- d (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- a (float)

cadquery.occ_impl.shapes.segment(p1: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float], p2: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float]) $\rightarrow Shape$

Construct a segment from two points.

- p1 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- p2 (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])

Return type

Shape

cadquery.occ_impl.shapes.Shape, tol: float = le-06) \rightarrow cadquery.occ_impl.shapes.Shape

Build shell from faces.

shell(s: Sequence[cadquery.occ_impl.shapes.Shape], tol: float = 1e-06) -> cadquery.occ_impl.shapes.Shape

Build shell from a sequence of faces.

Parameters

- **s** (Shape)
- tol (float)

Return type

Shape

cadquery.occ_impl.shapes.Shape, *sn: cadquery.occ_impl.shapes.Shape, tol: float = 1e-06) $\rightarrow cadquery.occ_impl.shapes.Shape$

Build solid from faces or shells.

solid(s: Sequence[cadquery.occ_impl.shapes.Shape], inner: Optional[Sequence[cadquery.occ_impl.shapes.Shape]] = None, tol: float = 1e-06) -> cadquery.occ_impl.shapes.Shape

Build solid from a sequence of faces.

Parameters

- **s1** (Shape)
- sn (Shape)
- tol (float)

Return type

Shape

 $cadquery.occ_impl.shapes.sortWiresByBuildOrder(wireList: List[Wire]) \rightarrow List[List[Wire]]$

Tries to determine how wires should be combined into faces.

Assume:

The wires make up one or more faces, which could have 'holes' Outer wires are listed ahead of inner wires there are no wires inside wires ($\rm IE$, islands – we can deal with that later on) none of the wires are construction wires

Compute:

one or more sets of wires, with the outer wire listed first, and inner ones

Returns, list of lists.

Parameters

```
wireList(List[Wire])
```

Return type

List[List[Wire]]

```
cadquery.occ_impl.shapes.sphere(d: float) \rightarrow Shape
Construct a solid sphere.
```

Parameters

d(float)

Return type

Shape

cadquery.occ_impl.shapes.spline(*pts: ForwardRef('Vector') | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], tol: float = 1e-06, periodic: bool = False) \rightarrow cadquery.occ impl.shapes.Shape

Construct a spline from points.

spline(pts: Sequence[Union[ForwardRef('Vector'), Tuple[Union[int, float], Union[int, float]], Tuple[Union[int, float]], Tuple[Union[int, float]], Union[int, float], Union[int, float]]]], tgts: Optional[Sequence[Union[ForwardRef('Vector'), Tuple[Union[int, float], Union[int, float]], Union[int, float]]]]] = None, params: Optional[Sequence[float]] = None, tol: float = 1e-06, periodic: bool = False, scale: bool = True) -> cadquery.occ_impl.shapes.Shape

Construct a spline from a sequence points.

Parameters

- pts (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float])
- tol (float)
- periodic (bool)

Return type

Shape

cadquery.occ_impl.shapes.split(s1: Shape, s2: Shape) \rightarrow Shape Split one shape with another.

Parameters

- **s1** (Shape)
- **s2** (Shape)

Return type

Shape

cadquery.occ_impl.shapes.sweep(s: cadquery.occ_impl.shapes.Shape, path: cadquery.occ_impl.shapes.Shape, aux: cadquery.occ_impl.shapes.Shape | None = None, cap: bool = False)

\$\times cadquery.occ impl.shapes.Shape\$

Sweep edge, wire or face along a path. For faces cap has no effect. Do not mix faces with other types.

sweep(s: Sequence[cadquery.occ_impl.shapes.Shape], path: cadquery.occ_impl.shapes.Shape, aux: Optional[cadquery.occ_impl.shapes.Shape] = None, cap: bool = False) -> cadquery.occ_impl.shapes.Shape

Sweep edges, wires or faces along a path, multiple sections are supported. For faces cap has no effect. Do not mix faces with other types.

Parameters

• **s** (Shape)

```
path (Shape)aux (Shape / None)cap (bool)
```

Return type

Shape

cadquery.occ_impl.shapes.text(txt: str, size: float | int, font: str = 'Arial', path: str | None = None, kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left', 'right'] = 'center', valign: $Literal['center', 'top', 'bottom'] = 'center') \rightarrow cadquery.occ_impl.shapes.Shape$

Create a flat text.

text(txt: str, size: Union[float, int], spine: cadquery.occ_impl.shapes.Shape, planar: bool = False, font: str = 'Arial', path: Optional[str] = None, kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left', 'right'] = 'center', valign: Literal['center', 'top', 'bottom'] = 'center') -> cadquery.occ_impl.shapes.Shape

Create a text on a spine.

text(txt: str, size: Union[float, int], spine: cadquery.occ_impl.shapes.Shape, base: cadquery.occ_impl.shapes.Shape, font: str = 'Arial', path: Optional[str] = None, kind: Literal['regular', 'bold', 'italic'] = 'regular', halign: Literal['center', 'left', 'right'] = 'center', valign: Literal['center', 'top', 'bottom'] = 'center') -> cadquery.occ_impl.shapes.Shape

Create a text on a spine and a base surface.

Parameters

- **txt** (str)
- size (float | int)
- **font** (*str*)
- path (str | None)
- kind (Literal['regular', 'bold', 'italic'])
- halign (Literal['center', 'left', 'right'])
- valign(Literal['center', 'top', 'bottom'])

Return type

Shape

cadquery.occ_impl.shapes.torus(d1: float, d2: float) $\rightarrow Shape$ Construct a solid torus.

Parameters

- d1 (float)
- **d2** (float)

Return type

Shape

cadquery.occ_impl.shapes.vertex(x: float | int, y: float | int, z: float | int) \rightarrow cadquery.occ_impl.shapes.Shape

Construct a vertex from coordinates.

vertex(p: Union[ForwardRef('Vector'), Tuple[Union[int, float], Union[int, float]], Tuple[Union[int, float], Union[int, float]])

Construct a vertex from VectorLike.

Parameters

- x(float | int)
- y(float | int)
- **z**(float | int)

Return type

Shape

cadquery.occ_impl.shapes.wire(*s: cadquery.occ_impl.shapes.Shape) \rightarrow cadquery.occ_impl.shapes.Shape Build wire from edges.

Parameters

s (Shape)

Return type

Shape

 $cadquery.occ_impl.shapes.wiresToFaces(wireList: List[Wire]) \rightarrow List[Face]$

Convert wires to a list of faces.

Parameters

wireList(List[Wire])

Return type

List[Face]

class cadquery.occ_impl.shapes.Mixin1D

Bases: object

curvatureAt(d: float, mode: Literal['length', 'parameter'] = 'length', resolution: <math>float = 1e-06) \rightarrow float Calculate mean curvature along the underlying curve.

Parameters

- **self** (Mixin1DProtocol)
- **d** (*float*) distance or parameter value
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)
- **resolution** (*float*) resolution of the calculation (default: 1e-6)

Returns

mean curvature value at the specified d value.

Return type

float

curvatures(ds: Iterable[float], mode: Literal['length', 'parameter'] = 'length', resolution: <math>float = 1e-06) \rightarrow List[float]

Calculate mean curvatures along the underlying curve.

Parameters

• **self** (Mixin1DProtocol)

- **d** distance or parameter values
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)
- **resolution** (*float*) resolution of the calculation (default: 1e-6)
- **ds** (Iterable[float])

Returns

mean curvature value at the specified d value.

Return type

List[float]

endPoint() → Vector

Returns

a vector representing the end point of this edge.

Parameters

self (Mixin1DProtocol)

Return type

Vector

Note, circles may have the start and end points the same

locationAt(d: float, mode: Literal['length', 'parameter'] = 'length', frame: Literal['frenet', 'corrected'] = 'frenet', planar: $bool = False) \rightarrow Location$

Generate a location along the underlying curve.

Parameters

- **self** (Mixin1DProtocol)
- **d** (*float*) distance or parameter value
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)
- **frame** (Literal['frenet', 'corrected']) moving frame calculation method (default: frenet)
- planar (bool) planar mode

Returns

A Location object representing local coordinate system at the specified distance.

Return type

Location

 $\begin{tabular}{l} \textbf{locations} (\textit{ds: Iterable[float]}, \textit{mode: Literal['length', 'parameter'] = 'length', frame: Literal['frenet', 'corrected'] = 'frenet', planar: bool = False) \rightarrow List[\textit{Location}]$ \\ \end{tabular}$

Generate locations along the curve.

- **self** (Mixin1DProtocol)
- **ds** (*Iterable[float]*) distance or parameter values
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)
- **frame** (Literal ['frenet', 'corrected']) moving frame calculation method (default: frenet)
- planar (bool) planar mode

Returns

A list of Location objects representing local coordinate systems at the specified distances.

Return type

List[Location]

```
normal() \rightarrow Vector
```

Calculate the normal Vector. Only possible for planar curves.

Returns

normal vector

Parameters

self (Mixin1DProtocol)

Return type

Vector

 $paramAt(d: float | int | Vector) \rightarrow float$

Compute parameter value at the specified normalized distance or a point.

Parameters

- **self** (Mixin1DProtocol)
- d (float / int / Vector) normalized distance [0, 1] or a point

Returns

parameter value

Return type

float

 $positionAt(d: float, mode: Literal['length', 'parameter'] = 'length') \rightarrow Vector$

Generate a position along the underlying curve.

Parameters

- **self** (Mixin1DProtocol)
- **d** (*float*) distance or parameter value
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)

Returns

A Vector on the underlying curve located at the specified d value.

Return type

Vector

 $positions(ds: Iterable[float], mode: Literal['length', 'parameter'] = 'length') \rightarrow List[Vector]$

Generate positions along the underlying curve.

Parameters

- **self** (Mixin1DProtocol)
- **ds** (*Iterable[float]*) distance or parameter values
- mode (Literal ['length', 'parameter']) position calculation mode (default: length)

Returns

A list of Vector objects.

Return type

List[Vector]

```
project(face: Face, d: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float, int | float], closest:
          bool = True) \rightarrow T1D \mid List[T1D]
     Project onto a face along the specified direction
          Parameters
              • self (T1D)
              • face (Face)
              • d (Vector | Tuple[int | float, int | float] | Tuple[int | float, int
                 | float, int | float])
              • closest (bool)
          Return type
              T1D | List[T1D]
radius() \rightarrow float
     Calculate the radius.
     Note that when applied to a Wire, the radius is simply the radius of the first edge.
          Returns
              radius
          Raises
              ValueError – if kernel can not reduce the shape to a circular edge
          Parameters
              self (Mixin1DProtocol)
          Return type
              float
sample(n: int | float) \rightarrow Tuple[List[Vector], List[float]]
     Sample a curve based on a number of points or deflection.
          Parameters
              • self (Mixin1DProtocol)
              • n (int / float) – Number of positions or deflection
          Returns
              A list of Vectors and a list of parameters.
          Return type
              Tuple[List[Vector], List[float]]
startPoint() \rightarrow Vector
          Returns
              a vector representing the start point of this edge
          Parameters
              self (Mixin1DProtocol)
          Return type
              Vector
```

Note, circles may have the start and end points the same

tangentAt(locationParam: float = 0.5, mode: Literal['length', 'parameter'] = 'length') \rightarrow Vector Compute tangent vector at the specified location.

Parameters

- **self** (Mixin1DProtocol)
- **locationParam** (*float*) distance or parameter value (default: 0.5)
- mode (Literal['length', 'parameter']) position calculation mode (default: parameter)

Returns

tangent vector

Return type

Vector

class cadquery.occ_impl.shapes.Mixin3D

Bases: object

chamfer (length: float, length2: float | None, edgeList: Iterable[Edge]) \rightarrow Any Chamfers the specified edges of this solid.

Parameters

- self (Any)
- **length** (*float*) length > 0, the length (length) of the chamfer
- **length2** (*float* / *None*) length2 > 0, optional parameter for asymmetrical chamfer. Should be *None* if not required.
- edgeList (Iterable[Edge]) a list of Edge objects, which must belong to this solid

Returns

Chamfered solid

Return type

Any

```
dprism(basis: Face | None, faces: List[Face], depth: float | int | None = None, taper: float | int = 0, upToFace: Face | None = None, thruAll: bool = True, additive: bool = True) \rightarrow Solid
```

dprism(basis: Face | None, profiles: List[Wire], depth: float | int | None = None, taper: float | int = 0, upToFace: Face | None = None, thruAll: bool = True, additive: bool = True) $\rightarrow Solid$

Make a prismatic feature (additive or subtractive)

- self(TS)
- basis (Face / None) face to perform the operation on
- profiles (List[Wire]) list of profiles
- **depth** (*float* / *int* / *None*) depth of the cut or extrusion
- upToFace (Face / None) a face to extrude until
- **thruAll** (bool) cut thruAll
- taper (float | int)
- additive (bool)

Returns

a Solid object

Return type

Solid

fillet($radius: float, edgeList: Iterable[Edge]) <math>\rightarrow$ Any

Fillets the specified edges of this solid.

Parameters

- self (Any)
- radius (float) float > 0, the radius of the fillet
- edgeList (Iterable [Edge]) a list of Edge objects, which must belong to this solid

Returns

Filleted solid

Return type

Any

isInside(point: Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float], tolerance: float = 1e-06) \rightarrow bool

Returns whether or not the point is inside a solid or compound object within the specified tolerance.

Parameters

- **self** (ShapeProtocol)
- point (Vector | Tuple[int | float, int | float] | Tuple[int | float, int | float, int | float]) tuple or Vector representing 3D point to be tested
- **tolerance** (*float*) tolerance for inside determination, default=1.0e-6

Returns

bool indicating whether or not point is within solid

Return type

bool

shell(faceList: Iterable[Face] | None, thickness: float, tolerance: float = 0.0001, kind: Literal['arc', 'intersection'] = 'arc') \rightarrow Any

Make a shelled solid of self.

Parameters

- self (Any)
- **faceList** (*Iterable* [Face] / *None*) List of faces to be removed, which must be part of the solid. Can be an empty list.
- thickness (float) Floating point thickness. Positive shells outwards, negative shells inwards.
- **tolerance** (*float*) Modelling tolerance of the method, default=0.0001.
- kind (Literal ['arc', 'intersection'])

Returns

A shelled solid.

Return type

Any

class cadquery.selectors.AndSelector(left, right)

```
Bases: BinarySelector
```

Intersection selector. Returns objects that is selected by both selectors.

class cadquery.selectors.AreaNthSelector(n: int, directionMax: bool = True, tolerance: float = 0.0001)

```
Bases: _NthSelector
```

Selects the object(s) with Nth area

Applicability:

- Faces, Shells, Solids Shape.Area() is used to compute area
- closed planar Wires a temporary face is created to compute area

Will ignore non-planar or non-closed wires.

Among other things can be used to select one of the nested coplanar wires or faces.

For example to create a fillet on a shank:

```
result = (
    cq.Workplane("XY")
    .circle(5)
    .extrude(2)
    .circle(2)
    .extrude(10)
    .faces(">Z[-2]")
    .wires(AreaNthSelector(0))
    .fillet(2)
)
```

Or to create a lip on a case seam:

```
result = (
    cq.Workplane("XY")
    .rect(20, 20)
    .extrude(10)
    .edges("|Z or <Z")</pre>
    .fillet(2)
    .faces(">Z")
    .shell(2)
    .faces(">Z")
    .wires(AreaNthSelector(-1))
    .toPending()
    .workplane()
    .offset2D(-1)
    .extrude(1)
    .faces(">Z[-2]")
    .wires(AreaNthSelector(0))
    .toPending()
    .workplane()
    .cutBlind(2)
```

```
• n (int)
```

- directionMax (bool)
- tolerance (float)

```
\mathbf{key}(obj: Shape) \rightarrow \mathbf{float}
```

Return the key for ordering. Can raise a ValueError if obj can not be used to create a key, which will result in obj being dropped by the clustering method.

Parameters

obj (Shape)

Return type

float

class cadquery.selectors.**BaseDirSelector**(*vector*: Vector, *tolerance*: *float* = 0.0001)

Bases: Selector

A selector that handles selection on the basis of a single direction vector.

Parameters

- vector (Vector)
- tolerance (float)

filter($objectList: Sequence[Shape]) \rightarrow List[Shape]$

There are lots of kinds of filters, but for planes they are always based on the normal of the plane, and for edges on the tangent vector along the edge

Parameters

```
objectList (Sequence[Shape])
```

Return type

List[Shape]

```
test(vec: Vector) \rightarrow bool
```

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

class cadquery.selectors.BinarySelector(left, right)

Bases: Selector

Base class for selectors that operates with two other selectors. Subclass must implement the :filterResults(): method.

```
filter(objectList: Sequence[Shape])
```

Filter the provided list.

The default implementation returns the original list unfiltered.

Parameters

```
objectList (list of OCCT primitives) - list to filter
```

Returns

filtered list

class cadquery.selectors.BoxSelector(point0, point1, boundingbox=False)

Bases: Selector

Selects objects inside the 3D box defined by 2 points.

If *boundingbox* is True only the objects that have their bounding box inside the given box is selected. Otherwise only center point of the object is tested.

Applicability: all types of shapes

Example:

```
CQ(aCube).edges(BoxSelector((0, 1, 0), (1, 2, 1)))
```

filter(objectList: Sequence[Shape])

Filter the provided list.

The default implementation returns the original list unfiltered.

Parameters

objectList (list of OCCT primitives) - list to filter

Returns

filtered list

class cadquery.selectors.CenterNthSelector(vector: Vector, n: int, directionMax: bool = True, tolerance: float = 0.0001)

Bases: _NthSelector

Sorts objects into a list with order determined by the distance of their center projected onto the specified direction.

Applicability:

All Shapes.

Parameters

- vector (Vector)
- **n**(int)
- directionMax (bool)
- tolerance (float)

key(obj: Shape) \rightarrow float

Return the key for ordering. Can raise a ValueError if obj can not be used to create a key, which will result in obj being dropped by the clustering method.

Parameters

obj (Shape)

Return type

float

class cadquery.selectors.DirectionMinMaxSelector(vector: Vector, directionMax: bool = True, tolerance: float = 0.0001)

Bases: CenterNthSelector

Selects objects closest or farthest in the specified direction.

Applicability:

All object types. for a vertex, its point is used. for all other kinds of objects, the center of mass of the object is used.

You can use the string shortcuts >(X|Y|Z) or <(X|Y|Z) if you want to select based on a cardinal direction.

For example this:

```
CQ(aCube).faces(DirectionMinMaxSelector((0, 0, 1), True))
```

Means to select the face having the center of mass farthest in the positive z direction, and is the same as:

```
CQ(aCube).faces(">Z")
```

Parameters

- vector (Vector)
- directionMax (bool)
- tolerance (float)

class cadquery.selectors.DirectionNthSelector(vector: Vector, n: int, directionMax: bool = True, tolerance: float = 0.0001)

Bases: ParallelDirSelector, CenterNthSelector

Filters for objects parallel (or normal) to the specified direction then returns the Nth one.

Applicability:

Linear Edges Planar Faces

Parameters

- vector (Vector)
- **n** (int)
- directionMax (bool)
- tolerance (float)

filter(*objectlist: Sequence*[*Shape*]) → List[Shape]

There are lots of kinds of filters, but for planes they are always based on the normal of the plane, and for edges on the tangent vector along the edge

Parameters

```
objectlist (Sequence[Shape])
```

Return type

List[Shape]

class cadquery.selectors.**DirectionSelector**(*vector*: Vector, *tolerance*: *float* = 0.0001)

Bases: BaseDirSelector

Selects objects aligned with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut +/-(X|Y|Z) if you want to select based on a cardinal direction.

Example:

```
CQ(aCube) faces(DirectionSelector((0, 0, 1)))
```

selects faces with the normal in the z direction, and is equivalent to:

```
CQ(aCube).faces("+Z")
```

Parameters

- vector (Vector)
- tolerance (float)

 $test(vec: Vector) \rightarrow bool$

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

class cadquery.selectors.InverseSelector(selector)

Bases: Selector

Inverts the selection of given selector. In other words, selects all objects that is not selected by given selector.

filter(objectList: Sequence[Shape])

Filter the provided list.

The default implementation returns the original list unfiltered.

Parameters

```
objectList (list of OCCT primitives) – list to filter
```

Returns

filtered list

class cadquery.selectors.LengthNthSelector(n: int, directionMax: bool = True, tolerance: float = 0.0001)

Bases: _NthSelector

Select the object(s) with the Nth length

Applicability:

All Edge and Wire objects

Parameters

- **n** (int)
- directionMax (bool)
- tolerance (float)

key(obj: Shape) \rightarrow float

Return the key for ordering. Can raise a ValueError if obj can not be used to create a key, which will result in obj being dropped by the clustering method.

Parameters

obj (Shape)

Return type

float

class cadquery.selectors.NearestToPointSelector(pnt)

Bases: Selector

Selects object nearest the provided point.

If the object is a vertex or point, the distance is used. For other kinds of shapes, the center of mass is used to to compute which is closest.

Applicability: All Types of Shapes

Example:

```
CQ(aCube).vertices(NearestToPointSelector((0, 1, 0)))
```

returns the vertex of the unit cube closest to the point x=0,y=1,z=0

filter(objectList: Sequence[Shape])

Filter the provided list.

The default implementation returns the original list unfiltered.

Parameters

```
objectList (list of OCCT primitives) - list to filter
```

Returns

filtered list

class cadquery.selectors.**ParallelDirSelector**(*vector*: Vector, *tolerance*: *float* = 0.0001)

Bases: BaseDirSelector

Selects objects parallel with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut |(X|Y|Z) if you want to select based on a cardinal direction.

Example:

```
CQ(aCube).faces(ParallelDirSelector((0, 0, 1)))
```

selects faces with the normal parallel to the z direction, and is equivalent to:

```
CQ(aCube).faces("|Z")
```

Parameters

- vector (Vector)
- tolerance (float)

test(vec: Vector) $\rightarrow bool$

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

class cadquery.selectors.PerpendicularDirSelector(vector: Vector, tolerance: float = 0.0001)

Bases: BaseDirSelector

Selects objects perpendicular with the provided direction.

Applicability:

Linear Edges Planar Faces

Use the string syntax shortcut #(X|Y|Z) if you want to select based on a cardinal direction.

Example:

```
CQ(aCube).faces(PerpendicularDirSelector((0, 0, 1)))
```

selects faces with the normal perpendicular to the z direction, and is equivalent to:

```
CQ(aCube).faces("#Z")
```

Parameters

- vector (Vector)
- tolerance (float)

 $\textbf{test}(\textit{vec} \colon \textit{Vector}) \to \textit{bool}$

Test a specified vector. Subclasses override to provide other implementations

Parameters

vec (Vector)

Return type

bool

Bases: _NthSelector

Select the object with the Nth radius.

Applicability:

All Edge and Wires.

Will ignore any shape that can not be represented as a circle or an arc of a circle.

Parameters

- **n** (int)
- directionMax (bool)
- tolerance (float)

key(obj: Shape) \rightarrow float

Return the key for ordering. Can raise a ValueError if obj can not be used to create a key, which will result in obj being dropped by the clustering method.

Parameters

obj (Shape)

Return type

float

```
class cadquery.selectors.Selector
      Bases: object
      Filters a list of objects.
      Filters must provide a single method that filters objects.
      filter(objectList: Sequence[Shape]) → List[Shape]
           Filter the provided list.
           The default implementation returns the original list unfiltered.
               Parameters
                    objectList (list of OCCT primitives) - list to filter
               Returns
                    filtered list
               Return type
                    List[Shape]
class cadquery.selectors.StringSyntaxSelector(selectorString)
      Bases: Selector
      Filter lists objects using a simple string syntax. All of the filters available in the string syntax are also available
      ( usually with more functionality ) through the creation of full-fledged selector objects. see Selector and its
      subclasses
      Filtering works differently depending on the type of object list being filtered.
           Parameters
               selectorString – A two-part selector string, [selector][axis]
           Returns
```

objects that match the specified selector

```
*Modifiers* are ('|','+','-','<','>','%')

| parallel to (same as ParallelDirSelector). Can return multiple objects.

# perpendicular to (same as PerpendicularDirSelector)

+ positive direction (same as DirectionSelector)

- negative direction (same as DirectionSelector)

> maximize (same as DirectionMinMaxSelector with directionMax=True)

< minimize (same as DirectionMinMaxSelector with directionMax=False)

% curve/surface type (same as TypeSelector)
```

axisStrings are: X,Y,Z,XY,YZ,XZ or (x,y,z) which defines an arbitrary direction

It is possible to combine simple selectors together using logical operations. The following operations are supported

```
and
                  Logical AND, e.g. >X and >Y
               or
                   Logical OR, e.g. |X or |Y
               not
                  Logical NOT, e.g. not #XY
               exc(ept)
                   Set difference (equivalent to AND NOT): |X exc >Z
     Finally, it is also possible to use even more complex expressions with nesting and arbitrary number of terms, e.g.
          (not >X[0] and \#XY) or >XY[0]
     Selectors are a complex topic: see Selectors Reference for more information
     filter(objectList: Sequence[Shape])
          Filter give object list through th already constructed complex selector object
               Parameters
                   objectList (Sequence[Shape])
class cadquery.selectors.SubtractSelector(left, right)
     Bases: BinarySelector
     Difference selector. Subtract results of a selector from another selectors results.
class cadquery.selectors.SumSelector(left, right)
     Bases: BinarySelector
     Union selector. Returns the sum of two selectors results.
class cadquery.selectors.TypeSelector(typeString: str)
     Bases: Selector
     Selects objects having the prescribed geometry type.
     Applicability:
          Faces: PLANE, CYLINDER, CONE, SPHERE, TORUS, BEZIER, BSPLINE, REVOLUTION, EXTRU-
          SION, OFFSET, OTHER Edges: LINE, CIRCLE, ELLIPSE, HYPERBOLA, PARABOLA, BEZIER,
          BSPLINE, OFFSET, OTHER
     You can use the string selector syntax. For example this:
     CQ(aCube).faces(TypeSelector("PLANE"))
     will select 6 faces, and is equivalent to:
     CQ(aCube).faces("%PLANE")
          Parameters
               typeString(str)
     filter(objectList: Sequence[Shape]) \rightarrow List[Shape]
          Filter the provided list.
          The default implementation returns the original list unfiltered.
               Parameters
                   objectList (list of OCCT primitives) - list to filter
```

Returns

filtered list

Return type

List[Shape]

cadquery.occ_impl.exporters.assembly.exportAssembly(assy: AssemblyProtocol, path: str, mode: Literal['default', 'fused'] = 'default', **kwargs) $\rightarrow bool$

Export an assembly to a STEP file.

kwargs is used to provide optional keyword arguments to configure the exporter.

Parameters

- assy (AssemblyProtocol) assembly
- **path** (*str*) Path and filename for writing
- mode (Literal ['default', 'fused']) STEP export mode. The options are "default", and "fused" (a single fused compound). It is possible that fused mode may exhibit low performance.
- **fuzzy_tol** (*float*) OCCT fuse operation tolerance setting used only for fused assembly export.
- **glue** (*bool*) Enable gluing mode for improved performance during fused assembly export. This option should only be used for non-intersecting shapes or those that are only touching or partially overlapping. Note that when glue is enabled, the resulting fused shape may be invalid if shapes are intersecting in an incompatible way. Defaults to False.
- write_pcurves (boo1) Enable or disable writing parametric curves to the STEP file. Default True. If False, writes STEP file without pcurves. This decreases the size of the resulting STEP file.
- **precision_mode** (*int*) Controls the uncertainty value for STEP entities. Specify -1, 0, or 1. Default 0. See OCCT documentation.

Return type

bool

cadquery.occ_impl.exporters.assembly.exportCAF(assy: AssemblyProtocol, path: $str) \rightarrow bool$ Export an assembly to a OCAF xml file (internal OCCT format).

Parameters

- assy (AssemblyProtocol)
- path (str)

Return type

bool

cadquery.occ_impl.exporters.assembly.exportGLTF(assy: AssemblyProtocol, path: str, binary: bool | None = None, tolerance: float = 0.001, angularTolerance: float = 0.1)

Export an assembly to a gltf file.

- assy (AssemblyProtocol)
- **path** (*str*)

- binary (bool | None)
- tolerance (float)
- angularTolerance (float)

cadquery.occ_impl.exporters.assembly.exportVRML(assy: AssemblyProtocol, path: str, tolerance: float = 0.001, angularTolerance: float = 0.1)

Export an assembly to a vrml file using vtk.

Parameters

- assy (AssemblyProtocol)
- path (str)
- tolerance (float)
- angularTolerance (float)

cadquery.occ_impl.exporters.assembly.exportVTKJS(assy: AssemblyProtocol, path: str)

Export an assembly to a zipped vtkjs. NB: .zip extensions is added to path.

Parameters

- assy (AssemblyProtocol)
- **path** (*str*)

Export an object to a structure suitable for converting to VTK.js JSON.

Parameters

- assy (AssemblyProtocol)
- color (Tuple[float, float, float, float])
- tolerance (float)

Return type

List[Dict[str, Any]]

```
class cadquery.occ_impl.exporters.dxf.DxfDocument(dxfversion: str = 'AC1027', setup: bool | List[str] = False, doc_units: int = 4, *, metadata: Dict[str, str] | None = None, approx: Literal['spline', 'arc'] | None = None, tolerance: float = 0.001)
```

Create DXF document from CadQuery objects.

A wrapper for ezdxf providing methods for converting cadquery. Workplane objects to DXF entities.

The ezdxf document is available as the property document, allowing most features of ezdxf to be utilised directly.

Example usage

Listing 3: Single layer DXF document

```
rectangle = cq.Workplane().rect(10, 20)

dxf = DxfDocument()
dxf.add_shape(rectangle)
dxf.document.saveas("rectangle.dxf")
```

Listing 4: Multilayer DXF document

```
rectangle = cq.Workplane().rect(10, 20)
circle = cq.Workplane().circle(3)

dxf = DxfDocument()
dxf = (
    dxf.add_layer("layer_1", color=2)
    .add_layer("layer_2", color=3)
    .add_shape(rectangle, "layer_1")
    .add_shape(circle, "layer_2")
)
dxf.document.saveas("rectangle-with-hole.dxf")
```

Parameters

- dxfversion (str)
- **setup** (bool | List[str])
- doc_units (int)
- metadata (Dict[str, str] | None)
- approx(Literal['spline', 'arc'] | None)
- tolerance (float)

__init__(dxfversion: str = 'AC1027', setup: bool | List[str] = False, doc_units: int = 4, *, metadata:

Dict[str, str] | None = None, approx: Literal['spline', 'arc'] | None = None, tolerance: float = 0.001)

Initialize DXF document.

Parameters

- **dxfversion** (*str*) DXF version specifier as string, default is "AC1027" respectively "R2013"
- **setup** (*bool* | *List[str]*) setup default styles, False for no setup, True to set up everything or a list of topics as strings, e.g. ["linetypes", "styles"] refer to ezdxf. new().
- **doc_units** (*int*) ezdxf document/modelspace units
- **metadata** (Dict[str, str] | None) document metadata a dictionary of name value pairs
- approx (Literal['spline', 'arc'] | None) Approximation strategy for converting cadquery. Workplane objects to DXF entities:

None

no approximation applied

"spline"

all splines approximated as cubic splines

"arc"

all curves approximated as arcs and straight segments

• **tolerance** (*float*) – Approximation tolerance for converting *cadquery*. *Workplane* objects to DXF entities.

add_layer($name: str, *, color: int = 7, linetype: <math>str = 'CONTINUOUS') \rightarrow Self$

Create a layer definition

Refer to ezdxf layers and ezdxf layer tutorial.

Parameters

- name (str) layer definition name
- **color** (*int*) color index. Standard colors include: 1 red, 2 yellow, 3 green, 4 cyan, 5 blue, 6 magenta, 7 white/black
- linetype (str) ezdxf line type

Return type

Self

 $add_shape(\mathit{shape}: \mathit{WorkplaneLike} \mid \mathit{Shape}, \mathit{layer}: \mathit{str} = ") \rightarrow \mathit{Self}$

Add CadQuery shape to a DXF layer.

Parameters

- s CadQuery Workplane or Shape
- layer (str) layer definition name
- **shape** (WorkplaneLike | Shape)

Return type

Self

3.16 Importing and Exporting Files

3.16.1 Introduction

The purpose of this section is to explain how to import external file formats into CadQuery, and export files from it as well. While the external file formats can be used to interchange CAD model data with other software, CadQuery does not support any formats that carry parametric data with them at this time. The only format that is fully parametric is CadQuery's own Python format. Below are lists of the import and export file formats that CadQuery supports.

Import Formats

- DXF
- STEP

Export Formats

- DXF
- SVG
- STEP
- STL
- AMF
- TJS
- VRML

- VTP
- 3MF
- glTF

Notes on the Formats

- DXF is useful for importing complex 2D profiles that would be tedious to create using CadQuery's 2D operations. An example is that the 2D profiles of aluminum extrusion are often provided in DXF format. These can be imported and extruded to create the length of extrusion that is needed in a design.
- STEP files are useful for interchanging model data with other CAD and analysis systems, such as FreeCAD. Many parts such as screws have STEP files available, which can be imported and used in CadQuery assemblies.
- STL, AMF and 3MF files are mesh-based formats which are typically used in additive manufacturing (i.e. 3D printing). AMF and 3MF files support more features, but are not as universally supported as STL files.
- TJS is short for ThreeJS, and is a JSON mesh format that is useful for displaying 3D models in web browsers. The TJS format is used to display embedded 3D examples within the CadQuery documentation.
- VRML is a mesh-based format for representing interactive 3D objects in a web browser.
- VTP is a mesh-based format used by the VTK library.
- gITF is a mesh-based format useful for viewing models on the web. Whether the resulting gITF file is binary (.glb) or text (.gltf) is set by the file extension. This export format is only available for assemblies.

3.16.2 Importing DXF

DXF files can be imported using the importers.importDXF() method.

```
importers.importDXF(tol: float = 1e-06, exclude: List[str] = [], include: List[str] = []) \rightarrow Workplane Loads a DXF file into a Workplane.
```

All layers are imported by default. Provide a layer include or exclude list to select layers. Layer names are handled as case-insensitive.

Parameters

- **filename** (str) The path and name of the DXF file to be imported
- tol (float) The tolerance used for merging edges into wires
- **exclude** (*List[str]*) a list of layer names not to import
- include (List[str]) a list of layer names to import

Return type

Workplane

Importing a DXF profile with default settings and using it within a CadQuery script is shown in the following code.

```
import cadquery as cq
result = (
    cq.importers.importDXF("/path/to/dxf/circle.dxf").wires().toPending().extrude(10)
)
```

Note the use of the <code>Workplane.wires()</code> and <code>Workplane.toPending()</code> methods to make the DXF profile ready for use during subsequent operations. Calling <code>toPending()</code> tells CadQuery to make the edges/wires available to the next modelling operation that is called in the chain.

3.16.3 Importing STEP

STEP files can be imported using the importers.importStep() method (note the capitalization of "Step"). There are no parameters for this method other than the file path to import.

```
import cadquery as cq
result = cq.importers.importStep("/path/to/step/block.stp")
```

3.16.4 Exporting STEP

This section covers exporting CadQuery Workplane objects to STEP. For exporting assemblies to STEP, see the next section.

Default

The exporters module handles exporting Workplane objects to STEP. It is not necessary to set the export type explicitly since it will be determined from the file extension. Below is an example.

```
# Create a simple object
box = cq.Workplane().box(10, 10, 10)
# Export the box
box.export("/path/to/step/box.step")
```

Non-Default File Extensions

If there is a requirement to export the STEP file using an "stp" extension, CadQuery will throw an error saying that it does not recognize the file extension. In that case the export type has to be specified.

```
# Create a simple object
box = cq.Workplane().box(10, 10, 10)

# Export the box
box.export("/path/to/step/box.stp", cq.exporters.ExportTypes.STEP)

# The export type may also be specified as a literal
box.export("/path/to/step/box2.stp", "STEP")
```

Setting Extra Options

There are additional options that can be set when exporting an object to a STEP file. For an explanation of the options available, see the documentation of the <code>Shape.exportStep()</code> method or the <code>Assembly.exportAssembly`()</code> method.

```
# Create a simple object
box = cq.Workplane().box(10, 10, 10)

# Export the box, provide additional options with the opt dict
box.export("/path/to/step/box.step", opt={"write_pcurves": False})

# or equivalently when exporting a lower level Shape object
box.val().export("/path/to/step/box2.step", opt={"write_pcurves": False})
```

3.16.5 Exporting Assemblies to STEP

It is possible to export CadQuery assemblies directly to STEP. The STEP exporter has multiple options which change the way exported STEP files will appear and operate when opened in other CAD programs. All assembly export methods shown here will preserve the color information from the assembly.

Default

CadQuery assemblies have a *Assembly.save()* method which can write an assembly to a STEP file. An example assembly export with all defaults is shown below.

```
import cadquery as cq

# Create a sample assembly
assy = cq.Assembly()
body = cq.Workplane().box(10, 10, 10)
assy.add(body, color=cq.Color(1, 0, 0), name="body")
pin = cq.Workplane().center(2, 2).cylinder(radius=2, height=20)
assy.add(pin, color=cq.Color(0, 1, 0), name="pin")

# Save the assembly to STEP
assy.export("out.step")
```

This will produce a STEP file that is nested with auto-generated object names. The colors of each assembly object will be preserved, but the names that were set for each will not.

Fused

The following will attempt to create a single, fused shape while preserving the name and color information of each assembly object. The process of fusing the solid may cause performance issues in some cases, and is likely to alter the faces of the fused solids.

```
import cadquery as cq

# Create a sample assembly
assy = cq.Assembly()
body = cq.Workplane().box(10, 10, 10)
assy.add(body, color=cq.Color(1, 0, 0), name="body")
pin = cq.Workplane().center(2, 2).cylinder(radius=2, height=20)
assy.add(pin, color=cq.Color(0, 1, 0), name="pin")

# Save the assembly to STEP
assy.export("out.stp", "STEP", mode="fused")

# Specify additional options such as glue as keyword arguments
assy.export("out_glue.step", mode="fused", glue=True, write_pcurves=False)
```

Naming

It is also possible to set the name of the top level assembly object in the STEP file with either the DEFAULT or FUSED methods. This is done by setting the name property of the assembly before calling Assembly.save().

```
assy = Assembly(name="my_assembly")
assy.export(
    "out.stp",
    (continues on next page)
```

(continued from previous page)

```
cq.exporters.ExportTypes.STEP,
  mode=cq.exporters.assembly.ExportModes.FUSED,
)
```

If an assembly name is not specified, a UUID will be used to avoid name conflicts.

3.16.6 Exporting Assemblies to gITF

It is possible to export CadQuery assemblies to gITF format. gITF is a mesh-based format useful for viewing models on the web. Whether the resulting gITF file is binary (.glb) or text (.gltf) is set by the file extension.

CadQuery assemblies have a *Assembly.save()* method which can write an assembly to a glTF file. An example assembly export with all defaults is shown below. To export to a binary glTF file, change the extension to glb.

```
import cadquery as cq

# Create a sample assembly
assy = cq.Assembly()
body = cq.Workplane().box(10, 10, 10)
assy.add(body, color=cq.Color(1, 0, 0), name="body")
pin = cq.Workplane().center(2, 2).cylinder(radius=2, height=20)
assy.add(pin, color=cq.Color(0, 1, 0), name="pin")

# Save the assembly to GLTF
assy.export("out.gltf")
```

3.16.7 Exporting SVG

The SVG exporter has several options which can be useful for achieving the desired final output. Those options are as follows.

- width Width of the resulting image (None to fit based on height).
- *height* Height of the resulting image (None to fit based on width).
- marginLeft Inset margin from the left side of the document.
- marginTop Inset margin from the top side of the document.
- projectionDir Direction the camera will view the shape from.
- *showAxes* Whether or not to show the axes indicator, which will only be visible when the projectionDir is also at the default.
- strokeWidth Width of the line that visible edges are drawn with.
- strokeColor Color of the line that visible edges are drawn with.
- hiddenColor Color of the line that hidden edges are drawn with.
- showHidden Whether or not to show hidden lines.
- focus If specified, creates a perspective SVG with the projector at the distance specified.

The options are passed to the exporter in a dictionary, and can be left out to force the SVG to be created with default options. Below are examples with and without options set.

Without options:

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export("/path/to/file/box.svg")
```

Results in:

Note that the exporters API figured out the format type from the file extension. The format type can be set explicitly by using exporters. ExportTypes.

The following is an example of using options to alter the resulting SVG output by passing in the opt parameter.

```
import cadquery as cq
from cadquery import exporters
result = cq.Workplane().box(10, 10, 10)
result.export(
    "/path/to/file/box_custom_options.svg",
    opt={
        "width": 300,
        "height": 300,
        "marginLeft": 10,
        "marginTop": 10,
        "showAxes": False,
        "projectionDir": (0.5, 0.5, 0.5),
        "strokeWidth": 0.25,
        "strokeColor": (255, 0, 0),
        "hiddenColor": (0, 0, 255),
        "showHidden": True,
    },
)
```

Which results in the following image:

Exporting with the additional option "focus": 25 results in the following output SVG with perspective:

3.16.8 Exporting STL

The STL exporter is capable of adjusting the quality of the resulting mesh, and accepts the following parameters.

Shape.exportStl(fileName: str, tolerance: float = 0.001, angularTolerance: float = 0.1, ascii: bool = False, relative: bool = True, parallel: bool = True) \rightarrow bool

Exports a shape to a specified STL file.

Parameters

• **fileName** (*str*) – The path and file name to write the STL output to.

- **tolerance** (*float*) A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 1e-3, which is a good starting point for a range of cases.
- **angularTolerance** (*float*) Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.
- **ascii** (*bool*) Export the file as ASCII (True) or binary (False) STL format. Default is binary.
- **relative** (*bool*) If True, tolerance will be scaled by the size of the edge being meshed. Default is True. Setting this value to True may cause large features to become faceted, or small features dense.
- parallel (bool) If True, OCCT will use parallel processing to mesh the shape. Default is True.

Return type

bool

For more complex objects, some experimentation with tolerance and angularTolerance may be required to find the optimum values that will produce an acceptable mesh.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export("/path/to/file/mesh.stl")
```

3.16.9 Exporting AMF and 3MF

The AMF and 3MF exporters are capable of adjusting the quality of the resulting mesh, and accept the following parameters.

- fileName The path and file name to write the AMF output to.
- tolerance A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 0.1, which is good starting point for a range of cases.
- angularTolerance Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.

For more complex objects, some experimentation with tolerance and angularTolerance may be required to find the optimum values that will produce an acceptable mesh. Note that parameters for color and material are absent.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export("/path/to/file/mesh.amf", tolerance=0.01, angularTolerance=0.1)
```

3.16.10 Exporting TJS

The TJS (ThreeJS) exporter produces a file in JSON format that describes a scene for the ThreeJS WebGL renderer. The objects in the first argument are converted into a mesh and then form the ThreeJS geometry for the scene. The mesh can be adjusted with the following parameters.

- fileName The path and file name to write the ThreeJS output to.
- tolerance A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 0.1, which is good starting point for a range of cases
- angularTolerance Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.

For more complex objects, some experimentation with tolerance and angularTolerance may be required to find the optimum values that will produce an acceptable mesh.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export(
    "/path/to/file/mesh.json",
    tolerance=0.01,
    angularTolerance=0.1,
    exportType=exporters.ExportTypes.TJS,
)
```

Note that the export type was explicitly specified as TJS because the extension that was used for the file name was .json. If the extension .tjs had been used, CadQuery would have understood to use the TJS export format.

3.16.11 Exporting VRML

The VRML exporter is capable of adjusting the quality of the resulting mesh, and accepts the following parameters.

- fileName The path and file name to write the VRML output to.
- tolerance A linear deflection setting which limits the distance between a curve and its tessellation. Setting this value too low will result in large meshes that can consume computing resources. Setting the value too high can result in meshes with a level of detail that is too low. Default is 0.1, which is good starting point for a range of cases.
- angularTolerance Angular deflection setting which limits the angle between subsequent segments in a polyline. Default is 0.1.

For more complex objects, some experimentation with tolerance and angularTolerance may be required to find the optimum values that will produce an acceptable mesh.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export(
    "/path/to/file/mesh.vrml", tolerance=0.01, angularTolerance=0.1
)
```

3.16.12 Exporting DXF

♂ See also

cadquery.occ_impl.exporters.dxf.DxfDocument for exporting multiple Workplanes to one or many layers of a DXF document.

Options

approx

Approximation strategy for converting *cadquery*. *Workplane* objects to DXF entities:

None

no approximation applied

"spline"

all splines approximated as cubic splines

"arc'

all curves approximated as arcs and straight segments

tolerance

Approximation tolerance for converting *cadquery.Workplane* objects to DXF entities. See *Approximation strategy*.

doc_units

Ezdxf document/modelspace units. See Units.

Listing 5: DXF of workplanes.

```
import cadquery as cq
result = cq.Workplane().box(10, 10, 10).section()
exporters.exportDXF(result, "/path/to/file/object.dxf")
# or
result.export("/path/to/file/object.dxf")
```

Sketches can also be directly exported to DXF.

Listing 6: DXF export of sketches.

```
import cadquery as cq
result = cq.Sketch().rect(1,1)
result.export("/path/to/file/object.dxf")
```

Units

The default DXF document units are mm (doc_units = 4).

doc_units	Unit
0	Unitless
1	Inches
2	Feet
3	Miles
4	Millimeters
5	Centimeters
6	Meters

Document units can be set to any unit supported by ezdxf.

Listing 7: DXF document with units set to meters.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10).section()

exporters.exportDXF(
    result,
    "/path/to/file/object.dxf",
    doc_units=6, # set DXF document units to meters
)

# or

result.export(
    "/path/to/file/object.dxf",
    opt={"doc_units": 6}, # set DXF document units to meters
)
```

Approximation strategy

By default, the DXF exporter will output splines exactly as they are represented by the OpenCascade kernel. Unfortunately some software cannot handle higher-order splines resulting in missing curves after DXF import. To resolve this, specify an approximation strategy controlled by the following options:

• approx - None, "spline" or "arc". "spline" results in all splines approximated with cubic splines. "arc" results in all curves approximated with arcs and line segments.

• tolerance: Acceptable error of the approximation, in document/modelspace units. Defaults to 0.001 (1 thou for inch-scale drawings, 1 µm for mm-scale drawings).

Listing 8: DXF document with curves approximated with cubic splines.

```
cq.exporters.exportDXF(result, "/path/to/file/object.dxf", approx="spline")
```

3.16.13 Exporting Other Formats

The remaining export formats do not accept any additional parameters other than file name, and can be exported using the following structure.

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10)

result.export("/path/to/file/object.[file_extension]")
```

Be sure to use the correct file extension so that CadQuery can determine the export format. If in doubt, fall back to setting the type explicitly by using exporters. ExportTypes.

For example:

```
import cadquery as cq
from cadquery import exporters

result = cq.Workplane().box(10, 10, 10).section()

result.export("/path/to/file/object.dxf", exporters.ExportTypes.DXF)
```

3.17 The CadQuery Gateway Interface

CadQuery is first and foremost designed as a library, which can be used as a part of any project. In this context, there is no need for a standard script format or gateway API.

Though the embedded use case is the most common, several tools have been created which run cadquery scripts on behalf of the user, and then render the result of the script visually.

These execution environments (EE) generally accept a script and user input values for script parameters, and then display the resulting objects visually to the user.

Today, three execution environments exist:

- CQ-editor, which runs scripts inside of a CadQuery IDE, and displays objects in the display window and includes features like debugging.
- The cq-directive, which is used to execute scripts inside of sphinx-doc, producing documented examples that include both a script and an SVG representation of the object that results.

The CQGI is distributed with CadQuery, and standardizes the interface between execution environments and CadQuery scripts.

3.17.1 The Script Side

CQGI compliant containers provide an execution environment for scripts. The environment includes:

- the cadquery library is automatically imported as 'cq'.
- the cadquery.cqgi.ScriptCallback.show_object() method is defined that should be used to export a shape to the execution environment
- the cadquery.cqgi.ScriptCallBack.debug() method is defined, which can be used by scripts to debug model output during execution.

Scripts must call show_object at least once. Invoking show_object more than once will send multiple objects to the container. An error will occur if the script does not return an object using the show_object() method.

This CQGI compliant script produces a cube with a circle on top, and displays a workplane as well as an intermediate circle as debug output:

```
base_cube = cq.Workplane("XY").rect(1.0, 1.0).extrude(1.0)
top_of_cube_plane = base_cube.faces(">Z").workplane()
debug(
    top_of_cube_plane,
    {
        "color": "yellow",
    },
)
debug(top_of_cube_plane.center, {"color": "blue"})
circle = top_of_cube_plane.circle(0.5)
debug(circle, {"color": "red"})
show_object(circle.extrude(1.0))
```

Note that importing cadquery is not required. At the end of this script, one object will be displayed, in addition to a workplane, a point, and a circle

Future enhancements will include several other methods, used to provide more metadata for the execution environment:

- cadquery.cqgi.ScriptCallback.add_error(), indicates an error with an input parameter
- cadquery.cqgi.ScriptCallback.describe_parameter(), provides extra information about a parameter in the script,

3.17.2 The execution environment side

CQGI makes it easy to run cadquery scripts in a standard way. To run a script from an execution environment, run code like this:

```
from cadquery import cqgi
user_script = ...
build_result = cqgi.parse(user_script).build()
```

The cadquery.cqgi.parse() method returns a cadquery.cqgi.CQModel object.

The *metadata* 'p property of the object contains a 'cadquery.cqgi.ScriptMetaData object, which can be used to discover the user parameters available. This is useful if the execution environment would like to present a GUI to allow the user to change the model parameters. Typically, after collecting new values, the environment will supply them in the build() method.

This code will return a dictionary of parameter values in the model text SCRIPT::

parameters = cqgi.parse(SCRIPT).metadata.parameters

The dictionary you get back is a map where key is the parameter name, and value is an InputParameter object, which has a name, type, and default value.

The type is an object which extends ParameterType— you can use this to determine what kind of widget to render (checkbox for boolean, for example).

The parameter object also has a description, valid values, minimum, and maximum values, if the user has provided them using the describe_parameter() method.

Calling cadquery.cqgi.CQModel.build() returns a cadquery.cqgi.BuildResult object, ,which includes the script execution time, and a success flag.

If the script was successful, the results property will include a list of results returned by the script, as well as any debug the script produced

If the script failed, the exception property contains the exception object.

If you have a way to get inputs from a user, you can override any of the constants defined in the user script with new values:

```
from cadquery import cqgi

user_script = ...
build_result = cqgi.parse(user_script).build(
    build_parameters={"param": 2}, build_options={}
)
```

If a parameter called 'param' is defined in the model, it will be assigned the value 2 before the script runs. An error will occur if a value is provided that is not defined in the model, or if the value provided cannot be assigned to a variable with the given name.

build_options is used to set server-side settings like timeouts, tessellation tolerances, and other details about how the model should be built.

3.17.3 More about script variables

CQGI uses the following rules to find input variables for a script:

- · only top-level statements are considered
- only assignments of constant values to a local name are considered.

For example, in the following script:

```
h = 1.0
w = 2.0
foo = "bar"

def some_function():
    x = 1
```

h, w, and foo will be overridable script variables, but x is not.

You can list the variables defined in the model by using the return value of the parse method:

```
model = cqgi.parse(user_script)

# a dictionary of InputParameter objects
parameters = model.metadata.parameters
```

The key of the dictionary is a string, and the value is a *cadquery.cqgi.InputParameter* object See the CQGI API docs for more details.

Future enhancements will include a safer sandbox to prevent malicious scripts.

3.17.4 Automating export to STL

A common use-case for the CQGI is the automation of processing cadquery code into geometry, doing so via the CQGI rather than an export line in the script itself leads to a much tidier environment; you may need to do this as part of an automated-workflow, batch-conversion, exporting to another software for assembly, or running stress simulations on resulting bodies.

The below Python script demonstrates how to open, process, and export an STL file from any valid cadquery script:

```
# Load CQGI
import cadquery.cqgi as cqgi
import cadquery as cq

# load the cadquery script
model = cqgi.parse(open("example.py").read())

# run the script and store the result (from the show_object call in the script)
build_result = model.build()

# test to ensure the process worked.
if build_result.success:
    # loop through all the shapes returned and export to STL
    for i, result in enumerate(build_result.results):
        cq.exporters.export(result.shape, f"example_output{i}.stl")
else:
    print(f"BUILD FAILED: {build_result.exception}")
```

3.17.5 Important CQGI Methods

These are the most important Methods and classes of the CQGI

<pre>parse(script_source)</pre>	Parses the script as a model, and returns a model.
<pre>CQModel.build([build_parameters, build_options])</pre>	Executes the script, using the optional parameters to override those in the model
BuildResult()	The result of executing a CadQuery script.
<pre>ScriptCallback.show_object(shape[, options])</pre>	Return an object to the executing environment, with options.

3.17.6 Complete CQGI API

The CadQuery Gateway Interface. Provides classes and tools for executing CadQuery scripts

class cadquery.cqgi.BuildResult

The result of executing a CadQuery script. The success property contains whether the execution was successful.

If successful, the results property contains a list of all results, and the first_result property contains the first result.

If unsuccessful, the exception property contains a reference to the stack trace that occurred.

class cadquery.cqgi.CQModel(script_source)

Represents a Cadquery Script.

After construction, the metadata property contains a ScriptMetaData object, which describes the model in more detail, and can be used to retrieve the parameters defined by the model.

the build method can be used to generate a 3d model

build(build_parameters=None, build_options=None)

Executes the script, using the optional parameters to override those in the model

Parameters

- **build_parameters** a dictionary of variables. The variables must be assignable to the underlying variable type. These variables override default values in the script
- build_options build options for how to build the model. Build options include things like timeouts, tessellation tolerances, etc

Raises

Nothing. If there is an exception, it will be on the exception property of the result. This is the interface so that we can return other information on the result, such as the build time

Returns

a BuildResult object, which includes the status of the result, and either a resulting shape or an exception

validate(params)

Determine if the supplied parameters are valid. NOT IMPLEMENTED YET-raises NotImplementedError

Parameters

params – a dictionary of parameters

class cadquery.cqgi.ConstantAssignmentFinder(cq_model)

Visits a parse tree, and adds script parameters to the cqModel

class cadquery.cqgi.EnvironmentBuilder

Builds an execution environment for a cadquery script. The environment includes the builtins, as well as the other methods the script will need.

class cadquery.cqgi.InputParameter

Defines a parameter that can be supplied when the model is executed.

Name, varType, and default_value are always available, because they are computed from a variable assignment line of code:

The others are only available if the script has used define_parameter() to provide additional metadata

default_value

the default value for the variable.

desc

help text describing the variable. Only available if the script used describe_parameter()

name

the name of the parameter.

valid_values

valid values for the variable. Only available if the script used describe_parameter()

varType

type of the variable: BooleanParameter, StringParameter, NumericParameter

exception cadquery.cqgi.InvalidParameterError

Raised when an attempt is made to provide a new parameter value that cannot be assigned to the model

exception cadquery.cqgi.NoOutputError

Raised when the script does not execute the show_object() method to return a solid

class cadquery.cqgi.ParameterDescriptionFinder(cq_model)

Visits a parse tree, looking for function calls to describe_parameter(var, description)

visit_Call(node)

Called when we see a function call. Is it describe_parameter?

class cadquery.cqgi.ScriptCallback

Allows a script to communicate with the container the show_object() method is exposed to CQ scripts, to allow them to return objects to the execution environment

add_error(param, field list)

Not implemented yet: allows scripts to indicate that there are problems with inputs

$debug(obj, args=\{\})$

Debug print/output an object, with optional arguments.

describe_parameter(var_data)

Do Nothing- we parsed the ast ahead of execution to get what we need.

```
show_object(shape, options={'name': 'door'}, **kwargs)
```

Return an object to the executing environment, with options.

Parameters

- **shape** a cadquery object
- options a dictionary of options that will be made available to the executing environment

exception cadquery.cqgi.ScriptExecutionError(line=None, message=None)

Represents a script syntax error. Useful for helping clients pinpoint issues with the script interactively

class cadquery.cqgi.ScriptMetadata

Defines the metadata for a parsed CQ Script. the parameters property is a dict of InputParameter objects.

class cadquery.cqgi.ShapeResult

An object created by a build, including the user parameters provided

cadquery.cqgi.parse(script_source)

Parses the script as a model, and returns a model.

If you would prefer to access the underlying model without building it, for example, to inspect its available parameters, construct a CQModel object.

Parameters

script_source – the script to run. Must be a valid cadquery script

Returns

a CQModel object that defines the script and allows execution

3.18 Extending CadQuery

If you find that CadQuery does not suit your needs, you can easily extend it. CadQuery provides several extension methods:

- You can load plugins others have developed. This is by far the easiest way to access other code
- You can define your own plugins.
- You can use OCP scripting directly

3.18.1 Using OpenCascade methods

The easiest way to extend CadQuery is to simply use OpenCascade/OCP scripting inside of your build method. Just about any valid OCP script will execute just fine. For example, this simple CadQuery script:

```
return cq.Workplane("XY").box(1.0, 2.0, 3.0).val()
```

is actually equivalent to:

As long as you return a valid OCP Shape, you can use any OCP methods you like. You can even mix and match the two. For example, consider this script, which creates a OCP box, but then uses CadQuery to select its faces:

3.18.2 Extending CadQuery: Plugins

Though you can get a lot done with OpenCascade, the code gets pretty nasty in a hurry. CadQuery shields you from a lot of the complexity of the OpenCascade API.

You can get the best of both worlds by wrapping your OCP script into a CadQuery plugin.

A CadQuery plugin is simply a function that is attached to the CadQuery cadquery. CQ() or cadquery. Workplane() class. When connected, your plugin can be used in the chain just like the built-in functions.

There are a few key concepts important to understand when building a plugin

3.18.3 The Stack

Every CadQuery object has a local stack, which contains a list of items. The items on the stack will be one of these types:

• A CadQuery SolidReference object, which holds a reference to a OCP solid

• A OCP object, a Vertex, Edge, Wire, Face, Shell, Solid, or Compound

The stack is available by using self.objects, and will always contain at least one object.



1 Note

Objects and points on the stack are always in global coordinates. Similarly, any objects you create must be created in terms of global coordinates as well!

3.18.4 Preserving the Chain

CadQuery's fluent API relies on the ability to chain calls together one after another. For this to work, you must return a valid CadQuery object as a return value. If you choose not to return a CadQuery object, then your plugin will end the chain. Sometimes this is desired for example cadquery. Workplane.size()

There are two ways you can safely continue the chain:

- 1. **return self** If you simply wish to modify the stack contents, you can simply return a reference to self. This approach is destructive, because the contents of the stack are modified, but it is also the simplest.
- 2. cadquery. Workplane.newObject() Most of the time, you will want to return a new object. Using newObject will return a new CQ or Workplane object having the stack you specify, and will link this object to the previous one. This preserves the original object and its stack.

3.18.5 Helper Methods

When you implement a CadQuery plugin, you are extending CadQuery's base objects. As a result, you can call any CadQuery or Workplane methods from inside of your extension. You can also call a number of internal methods that are designed to aid in plugin creation:

- cadquery.Workplane._makeWireAtPoints() will invoke a factory function you supply for all points on the stack, and return a properly constructed cadquery object. This function takes care of registering wires for you and everything like that
- cadquery. Workplane.newObject() returns a new Workplane object with the provided stack, and with its parent set to the current object. The preferred way to continue the chain
- cadquery. Workplane. findSolid() returns the first Solid found in the chain, working from the current object upwards in the chain. commonly used when your plugin will modify an existing solid, or needs to create objects and then combine them onto the 'main' part that is in progress
- cadquery.Workplane._addPendingWire() must be called if you add a wire. This allows the base class to track all the wires that are created, so that they can be managed when extrusion occurs.
- cadquery. Workplane.wire() gathers up all of the edges that have been drawn (eg, by line, vline, etc), and attempts to combine them into a single wire, which is returned. This should be used when your plugin creates 2D edges, and you know it is time to collect them into a single wire.
- cadquery.Workplane.plane() provides a reference to the workplane, which allows you to convert between workplane coordinates and global coordinates: * cadquery.occ_impl.geom.Plane.toWorldCoords() will convert local coordinates to global ones * cadquery.occ_impl.geom.Plane.toLocalCoords() will convert from global coordinates to local coordinates

3.18.6 Coordinate Systems

Keep in mind that the user may be using a work plane that has created a local coordinate system. Consequently, the orientation of shapes that you create are often implicitly defined by the user's workplane.

Any objects that you create must be fully defined in *global coordinates*, even though some or all of the users' inputs may be defined in terms of local coordinates.

3.18.7 Linking in your plugin

Your plugin is a single method, which is attached to the main Workplane or CadQuery object.

Your plugin method's first parameter should be 'self', which will provide a reference to base class functionality. You can also accept other arguments.

To install it, simply attach it to the CadQuery or Workplane object, like this:

```
def _yourFunction(self, arg1, arg):
    # do stuff
    return whatever_you_want

cq.Workplane.yourPlugin = _yourFunction
```

That's it!

3.18.8 CadQueryExample Plugins

Some core cadquery code is intentionally written exactly like a plugin. If you are writing your own plugins, have a look at these methods for inspiration:

- cadquery.Workplane.polygon()
- cadquery.Workplane.cboreHole()

3.18.9 Plugin Example

This ultra simple plugin makes cubes of the specified size for each stack point.

(The cubes are off-center because the boxes have their lower left corner at the reference points.)

(continues on next page)

(continued from previous page)

```
# link the plugin into CadQuery
cq.Workplane.makeCubes = makeCubes

# use the plugin
result = (
    cq.Workplane("XY")
    .box(6.0, 8.0, 0.5)
    .faces(">Z")
    .rect(4.0, 4.0, forConstruction=True)
    .vertices()
    .makeCubes(1.0)
    .combineSolids()
)
```

3.18.10 Extending CadQuery: Special Methods

The above-mentioned approach has one drawback, it requires monkey-patching or subclassing. To avoid this one can also use the following special methods of *cadquery.Workplane* and *cadquery.Sketch* and write plugins in a more functional style.

```
• cadquery.Workplane.map()
```

- cadquery.Workplane.apply()
- cadquery.Workplane.invoke()
- cadquery.Sketch.map()
- cadquery.Sketch.apply()
- cadquery.Sketch.invoke()

Here is the same plugin rewritten using one of those methods.

```
from cadquery.occ_impl.shapes import box
def makeCubes(length):
    # inner method that creates the cubes
   def callback(wp):
        return wp.eachpoint(box(length, length, length), True)
   return callback
# use the plugin
result = (
   cq.Workplane("XY")
    .box(6.0, 8.0, 0.5)
    .faces(">Z")
    .rect(4.0, 4.0, forConstruction=True)
    .vertices()
    .invoke(makeCubes(1.0))
    .combineSolids()
)
```

Such an approach is more friendly for auto-completion and static analysis tools.

3.19 Citing

Please use our Zenodo DOI if you use CadQuery for scientific research: https://doi.org/10.5281/zenodo.3955118.

3.19. Citing 299

CHAPTER

FOUR

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

С

```
cadquery, 109
cadquery.cqgi, 292
cadquery.occ_impl.exporters.assembly, 276
cadquery.occ_impl.shapes, 219
cadquery.selectors, 266
```

304 Python Module Index

INDEX

Symbols	mul() (cadquery.Workplane method), 173
add() (cadquery.Shape method), 132	ne() (cadquery.Plane method), 128
add() (cadquery.Sketch method), 144	or() (cadquery.Workplane method), 173
add() (cadquery.Workplane method), 172	repr() (cadquery.Matrix method), 125
and() (cadquery.Workplane method), 172	repr() (cadquery.Plane method), 128
bool() (cadquery.Compound method), 114	repr() (cadquery. Vector method), 166
eq() (cadquery.Color method), 113	str() (cadquery.Vector method), 166
eq() (cadquery.Plane method), 127	sub() (cadquery.Shape method), 133
eq() (cadquery.Shape method), 132	sub() (cadquery.Sketch method), 144
eq() (cadquery. Vector method), 166	sub() (cadquery.Workplane method), 174
getitem() (cadquery.Matrix method), 125	truediv() (cadquery.Shape method), 133
hash (cadquery.Plane attribute), 127	truediv() (cadquery.Sketch method), 145
hash (cadquery. Vector attribute), 166	truediv() (cadquery.Workplane method), 174
hash() (cadquery.Color method), 113	weakref (cadquery.Assembly attribute), 110
hash() (cadquery.Shape method), 132	weakref (cadquery.BoundBox attribute), 112
init() (cadquery.Assembly method), 109	weakref (cadquery.Color attribute), 113
init() (cadquery.BoundBox method), 112	weakref (cadquery.Location attribute), 125
init() (cadquery.Color method), 113	weakref (cadquery.Matrix attribute), 125
init() (cadquery.DirectionMinMaxSelector	weakref (cadquery.Plane attribute), 128
method), 116	weakref (cadquery.Selector attribute), 130
init() (cadquery.Location method), 124	weakref (cadquery.Shape attribute), 133
init() (cadquery.Matrix method), 125	weakref (cadquery.Sketch attribute), 145
init() (cadquery.NearestToPointSelector method),	weakref (cadquery. Vector attribute), 166
126	weakref (cadquery.Workplane attribute), 174
init() (cadquery.Plane method), 127	Δ.
init() (cadquery.Shape method), 132	A
init() (cadquery.Sketch method), 144	add() (cadquery.Assembly method), 110
init() (cadquery.StringSyntaxSelector method),	add() (cadquery.BoundBox method), 112
164	add() (cadquery.Sketch method), 145
init() (cadquery.TypeSelector method), 165	add() (cadquery. Workplane method), 174
init() (cadquery.Vector method), 166	<pre>add_error() (cadquery.cqgi.ScriptCallback method),</pre>
init() (cadquery.Vertex method), 167	294
init() (cadquery.Workplane method), 172	<pre>add_layer() (cadquery.occ_impl.exporters.dxf.DxfDocument</pre>
init() (cadquery.occ_impl.exporters.dxf.DxfDocum	
method), 278	<pre>add_shape() (cadquery.occ_impl.exporters.dxf.DxfDocument</pre>
iter() (cadquery.Assembly method), 110	method), 279
iter() (cadquery.Shape method), 133	all() (cadquery. Workplane method), 175
iter() (cadquery.Sketch method), 144	<pre>ancestors() (cadquery.Compound method), 114</pre>
iter() (cadquery.Wire method), 168	<pre>ancestors() (cadquery.occ_impl.shapes.Compound</pre>
iter() (cadquery.Workplane method), 173	method), 219
mul() (cadquery.Shape method), 133	<pre>ancestors() (cadquery.occ_impl.shapes.Shape</pre>
mul() (cadquery.Sketch method), 144	method), 230

ancestors() (cadquery.Shape method), 133	Center() (cadquery.occ_impl.shapes.Vertex method),
ancestors() (cadquery. Workplane method), 175	(contact) (and grown Shape method) 120
AndSelector (class in cadquery.selectors), 266	Center() (cadquery.Shape method), 130
apply() (cadquery.Sketch method), 145	Center() (cadquery. Vector method), 166
apply() (cadquery. Workplane method), 175	Center() (cadquery. Vertex method), 167
arc() (cadquery.Sketch method), 145	center() (cadquery.Workplane method), 177
arcCenter() (cadquery.Edge method), 117	CenterNthSelector (class in cadquery.selectors), 269
<pre>arcCenter() (cadquery.occ_impl.shapes.Edge method),</pre>	CenterOfBoundBox() (cad-
221	query.occ_impl.shapes.Shape method), 229
Area() (cadquery.occ_impl.shapes.Shape method), 228	CenterOfBoundBox() (cadquery.Shape method), 130
Area() (cadquery.Shape method), 130	<pre>centerOfMass() (cadquery.occ_impl.shapes.Shape</pre>
AreaNthSelector (class in cadquery.selectors), 267	static method), 231
assemble() (cadquery.Sketch method), 146	centerOfMass() (cadquery.Shape static method), 134
assembleEdges() (cadquery.occ_impl.shapes.Wire	chamfer() (cadquery.occ_impl.shapes.Mixin3D
class method), 248	method), 265
assembleEdges() (cadquery.Wire class method), 168	chamfer() (cadquery.Sketch method), 146
Assembly (class in cadquery), 109	chamfer() (cadquery.Workplane method), 178
D	<pre>chamfer() (in module cadquery.occ_impl.shapes), 252</pre>
В	chamfer2D() (cadquery.Face method), 120
BaseDirSelector (class in cadquery.selectors), 268	<pre>chamfer2D() (cadquery.occ_impl.shapes.Face method),</pre>
bezier() (cadquery.Sketch method), 146	224
bezier() (cadquery.Workplane method), 175	<pre>chamfer2D() (cadquery.occ_impl.shapes.Wire method),</pre>
BinarySelector (class in cadquery.selectors), 268	248
BoundBox (class in cadquery), 112	chamfer2D() (cadquery.Wire method), 168
BoundingBox() (cadquery.occ_impl.shapes.Shape	check() (in module cadquery.occ_impl.shapes), 252
method), 228	circle() (cadquery.Sketch method), 146
BoundingBox() (cadquery.Shape method), 130	circle() (cadquery.Workplane method), 179
box() (cadquery.Workplane method), 176	circle() (in module cadquery.occ_impl.shapes), 252
box() (in module cadquery.occ_impl.shapes), 251	clean() (cadquery.occ_impl.shapes.Shape method), 231
BoxSelector (class in cadquery.selectors), 268	clean() (cadquery.Shape method), 134
build() (cadquery.cqgi.CQModel method), 293	clean() (cadquery.Sketch method), 147
BuildResult (class in cadquery.cqgi), 292	clean() (cadquery.Workplane method), 179
	<pre>clean() (in module cadquery.occ_impl.shapes), 252</pre>
C	close() (cadquery.Edge method), 117
cadquery	close() (cadquery.occ_impl.shapes.Edge method), 221
module, 109	close() (cadquery.occ_impl.shapes.Wire method), 249
cadquery.cqgi	close() (cadquery.Sketch method), 147
module, 292	close() (cadquery.Wire method), 168
cadquery.occ_impl.exporters.assembly	close() (cadquery.Workplane method), 179
module, 276	Closed() (cadquery.occ_impl.shapes.Shape method),
cadquery.occ_impl.shapes	229
module, 219	Closed() (cadquery.Shape method), 131
cadquery.selectors	Color (class in cadquery), 113
module, 266	combine() (cadquery.occ_impl.shapes.Wire class
cap() (in module cadquery.occ_impl.shapes), 251	method), 249
cast() (cadquery.occ_impl.shapes.Shape class method),	combine() (cadquery.Wire class method), 169
231	combine() (cadquery.Workplane method), 180
cast() (cadquery.Shape class method), 133	CombinedCenter() (cadquery.occ_impl.shapes.Shape
cboreHole() (cadquery.Workplane method), 177	static method), 229
Center() (cadquery.Face method), 120	CombinedCenter() (cadquery.Shape static method),
Center() (cadquery.occ_impl.shapes.Face method), 224	131
Center() (cadquery.occ_impl.shapes.Shape method),	CombinedCenterOfBoundBox() (cad-
229	query.occ_impl.shapes.Shape static method),
22/	229

CombinedCenterOfBoundBox() (cadquery.Shape static method), 131 combineSolids() (cadquery.Workplane method), 180	<pre>desc (cadquery.cqgi.InputParameter attribute), 293 describe_parameter() (cadquery.cqgi.ScriptCallback</pre>
Compound (class in cadquery), 113	DirectionMinMaxSelector (class in cadquery), 115
Compound (class in cadquery.occ_impl.shapes), 219	DirectionMinMaxSelector (class in cad-
compound() (in module cadquery.occ_impl.shapes), 252	query.selectors), 269
Compounds() (cadquery.occ_impl.shapes.Shape	DirectionNthSelector (class in cadquery.selectors),
method), 229	270
Compounds() (cadquery.Shape method), 131	DirectionSelector (class in cadquery), 116
compounds() (cadquery.Workplane method), 180	DirectionSelector (class in cadquery, selectors), 270
CompSolid (class in cadquery.occ_impl.shapes), 219	distance() (cadquery.occ_impl.shapes.Shape method),
CompSolids() (cadquery.occ_impl.shapes.Shape	232
method), 229	distance() (cadquery.Shape method), 134
CompSolids() (cadquery.Shape method), 131	\cdot
computeMass() (cadquery.occ_impl.shapes.Shape static	method), 232
method), 231	distances() (cadquery.Shape method), 135
computeMass() (cadquery.Shape static method), 134	distribute() (cadquery.Sketch method), 147
cone() (in module cadquery.occ_impl.shapes), 253	downcast() (in module cadquery.occ_impl.shapes), 253
consolidateWires() (cadquery.Workplane method),	<pre>dprism() (cadquery.occ_impl.shapes.Mixin3D method),</pre>
181	265
ConstantAssignmentFinder (class in cadquery.cqgi),	DxfDocument (class in cad-
293	query.occ_impl.exporters.dxf), 277
constrain() (cadquery.Assembly method), 110	E
constrain() (cadquery.Sketch method), 147	
Constraint (in module cadquery), 115	each() (cadquery.Sketch method), 148
copy() (cadquery.occ_impl.shapes.Shape method), 231	each() (cadquery.Workplane method), 184
copy() (cadquery.Shape method), 134	<pre>eachpoint() (cadquery.Workplane method), 185</pre>
copy() (cadquery.Sketch method), 147	Edge (class in cadquery), 117
copyWorkplane() (cadquery.Workplane method), 181	Edge (class in cadquery.occ_impl.shapes), 221
CQ (in module cadquery), 113	edge() (cadquery.Sketch method), 148
CQModel (class in cadquery.cqgi), 293	<pre>Edges() (cadquery.occ_impl.shapes.Shape method), 229</pre>
cskHole() (cadquery.Workplane method), 181	<pre>edges() (cadquery.occ_impl.shapes.Shape method), 232</pre>
<pre>curvatureAt() (cadquery.occ_impl.shapes.Mixin1D</pre>	Edges() (cadquery.Shape method), 131
method), 261	edges() (cadquery.Shape method), 135
curvatures() (cadquery.occ_impl.shapes.Mixin1D	edges() (cadquery.Sketch method), 148
method), 261	edges() (cadquery.Workplane method), 185
cut() (cadquery.Compound method), 114	edgesToWires() (in module cad-
<pre>cut() (cadquery.occ_impl.shapes.Compound method),</pre>	query.occ_impl.shapes), 253
219	ellipse() (cadquery.Sketch method), 148
cut() (cadquery.occ_impl.shapes.Shape method), 231	ellipse() (cadquery.Workplane method), 186
cut() (cadquery.Shape method), 134	ellipse() (in module cadquery.occ_impl.shapes), 254
cut() (cadquery.Workplane method), 182	ellipseArc() (cadquery.Workplane method), 186
<pre>cut() (in module cadquery.occ_impl.shapes), 253</pre>	end() (cadquery.Workplane method), 187
cutBlind() (cadquery.Workplane method), 182	<pre>endPoint() (cadquery.occ_impl.shapes.Mixin1D</pre>
<pre>cutEach() (cadquery.Workplane method), 183</pre>	method), 262
cutThruAll() (cadquery.Workplane method), 183	enlarge() (cadquery.BoundBox method), 112
<pre>cylinder() (cadquery.Workplane method), 184</pre>	EnvironmentBuilder (class in cadquery.cqgi), 293
<pre>cylinder() (in module cadquery.occ_impl.shapes), 253</pre>	export() (cadquery.Assembly method), 110
D	<pre>export() (cadquery.occ_impl.shapes.Shape method),</pre>
D	232
debug() (cadquery.cqgi.ScriptCallback method), 294	<pre>export() (cadquery.Shape method), 135</pre>
default_value (cadquery.cqgi.InputParameter at-	export() (cadquery.Sketch method), 149
tribute), 293	export() (cadquery. Workplane method), 187
delete() (cadquery.Sketch method), 147	

<pre>exportAssembly() (in module cad-</pre>	fillet() (cadquery.Wire method), 169
query.occ_impl.exporters.assembly), 276	fillet() (cadquery.Workplane method), 189
<pre>exportBin() (cadquery.occ_impl.shapes.Shape</pre>	<pre>fillet() (in module cadquery.occ_impl.shapes), 255</pre>
method), 232	fillet2D() (cadquery.Face method), 120
<pre>exportBin() (cadquery.Shape method), 135</pre>	<pre>fillet2D() (cadquery.occ_impl.shapes.Face method),</pre>
<pre>exportBrep() (cadquery.occ_impl.shapes.Shape</pre>	225
method), 232	<pre>fillet2D() (cadquery.occ_impl.shapes.Wire method),</pre>
<pre>exportBrep() (cadquery.Shape method), 135</pre>	249
exportCAF() (in module cad-	fillet2D() (cadquery.Wire method), 169
query.occ_impl.exporters.assembly), 276	<pre>filter() (cadquery.NearestToPointSelector method),</pre>
exportGLTF() (in module cad-	126
query.occ_impl.exporters.assembly), 276	filter() (cadquery.Selector method), 130
<pre>exportStep() (cadquery.occ_impl.shapes.Shape</pre>	$\verb filter() (cadquery.selectors.BaseDirSelector method), \\$
method), 233	268
<pre>exportStep() (cadquery.Shape method), 135</pre>	<pre>filter() (cadquery.selectors.BinarySelector method),</pre>
exportStl() (cadquery.occ_impl.shapes.Shape	268
method), 233, 284	<pre>filter() (cadquery.selectors.BoxSelector method), 269</pre>
<pre>exportStl() (cadquery.Shape method), 136</pre>	filter() (cadquery.selectors.DirectionNthSelector
exportSvg() (cadquery.Workplane method), 187	method), 270
exportVRML() (in module cad-	filter() (cadquery.selectors.InverseSelector method),
query.occ_impl.exporters.assembly), 277	271
exportVTKJS() (in module cad-	filter() (cadquery.selectors.NearestToPointSelector
query.occ_impl.exporters.assembly), 277	method), 272
extrude() (cadquery.Workplane method), 188	filter() (cadquery.selectors.Selector method), 274
extrude() (in module cadquery.occ_impl.shapes), 254	filter() (cadquery.selectors.StringSyntaxSelector
extrudeLinear() (cadquery.occ_impl.shapes.Solid	method), 275
class method), 241	filter() (cadquery.selectors.TypeSelector method), 275
extrudeLinear() (cadquery.Solid class method), 157 extrudeLinearWithRotation() (cad-	
extrudeLinearWithRotation() (cad- query.occ_impl.shapes.Solid class method),	<pre>filter() (cadquery.Sketch method), 150 filter() (cadquery.StringSyntaxSelector method), 164</pre>
query.occ_impi.snapes.soita ciass meinoa), 242	filter() (cadquery.TypeSelector method), 165
extrudeLinearWithRotation() (cadquery.Solid class	filter() (cadquery.Workplane method), 189
method), 158	finalize() (cadquery.Sketch method), 150
menou), 130	findFace() (cadquery.Workplane method), 190
F	findOutsideBox2D() (cadquery.BoundBox static
Face (class in cadquery), 120	method), 113
Face (class in cadquery.occ_impl.shapes), 224	findSolid() (cadquery.Workplane method), 190
face() (cadquery.Sketch method), 149	first() (cadquery.Workplane method), 190
face() (in module cadquery.occ_impl.shapes), 254	fix() (cadquery.occ_impl.shapes.Shape method), 234
Faces() (cadquery.occ_impl.shapes.Shape method), 230	fix() (cadquery.Shape method), 137
faces() (cadquery.occ_impl.shapes.Shape method), 233	<pre>fix() (in module cadquery.occ_impl.shapes), 255</pre>
Faces() (cadquery.Shape method), 131	fuse() (cadquery.Compound method), 114
faces() (cadquery.Shape method), 136	<pre>fuse() (cadquery.occ_impl.shapes.Compound method),</pre>
faces() (cadquery.Sketch method), 149	219
faces() (cadquery. Workplane method), 188	fuse() (cadquery.occ_impl.shapes.Shape method), 234
<pre>facesIntersectedByLine() (cad-</pre>	fuse() (cadquery.Shape method), 137
query.occ_impl.shapes.Shape method), 233	<pre>fuse() (in module cadquery.occ_impl.shapes), 255</pre>
<pre>facesIntersectedByLine() (cadquery.Shape</pre>	G
method), 136	G
fill() (in module cadquery.occ_impl.shapes), 254	<pre>geomType() (cadquery.occ_impl.shapes.Shape method),</pre>
fillet() (cadquery.occ_impl.shapes.Mixin3D method),	234
266	<pre>geomType() (cadquery.Shape method), 137</pre>
fillet() (cadquery.occ_impl.shapes.Wire method), 249 fillet() (cadquery.Sketch method), 150	

Н	$\verb isSame() (cadquery.occ_impl.shapes.Shape method), \\$
hashCode() (cadquery.occ_impl.shapes.Shape method),	236
235	isSame() (cadquery.Shape method), 138 isSolid() (cadquery.occ_impl.shapes.Solid static
hashCode() (cadquery.Shape method), 138	method), 243
hLine() (cadquery.Workplane method), 190	isSolid() (cadquery.Solid static method), 159
hLineTo() (cadquery. Workplane method), 191	isValid() (cadquery.occ_impl.shapes.Shape method),
hole() (cadquery. Workplane method), 191	236
hull() (cadquery.Sketch method), 150	isValid() (cadquery.Shape method), 139
I	item() (cadquery.Workplane method), 193
<pre>importBin() (cadquery.occ_impl.shapes.Shape class method), 235</pre>	K
<pre>importBin() (cadquery.Shape class method), 138</pre>	key() (cadquery.selectors.AreaNthSelector method), 268
<pre>importBrep() (cadquery.occ_impl.shapes.Shape class method), 235</pre>	key() (cadquery.selectors.CenterNthSelector method), 269
<pre>importBrep() (cadquery.Shape class method), 138 importDXF() (cadquery.importers method), 280</pre>	key() (cadquery.selectors.LengthNthSelector method), 271
importDXF() (cadquery.Sketch method), 150	$\verb"key()" (cadquery.selectors.RadiusNthSelector method),$
innerShells() (cadquery.occ_impl.shapes.Solid	273
method), 242	1
innerShells() (cadquery.Solid method), 158	
InputParameter (class in cadquery.cqgi), 293	largestDimension() (cadquery.Workplane method),
<pre>interpPlate() (cadquery.occ_impl.shapes.Solid class</pre>	last() (cadquery.Workplane method), 193
method), 242 interpPlate() (cadquery.Solid class method), 158	LengthNthSelector (class in cadquery.selectors), 271
interpriate() (caaquery. Workplane method), 192	line() (cadquery.Workplane method), 193
intersect() (cadquery.Compound method), 114	lineTo() (cadquery.Workplane method), 194
<pre>intersect() (cadquery.occ_impl.shapes.Compound</pre>	<pre>locate() (cadquery.occ_impl.shapes.Shape method),</pre>
method), 220	236
<pre>intersect() (cadquery.occ_impl.shapes.Shape</pre>	locate() (cadquery.Shape method), 139
method), 235	located() (cadquery.occ_impl.shapes.Shape method),
intersect() (cadquery.Shape method), 138	236
intersect() (cadquery.Workplane method), 192	located() (cadquery.Shape method), 139 located() (cadquery.Sketch method), 151
<pre>intersect() (in module cadquery.occ_impl.shapes),</pre>	Location (class in cadquery), 124
InvalidParameterError, 294	location() (cadquery.occ_impl.shapes.Shape method),
InverseSelector (class in cadquery.selectors), 271	236
invoke() (cadquery.Sketch method), 151	<pre>location() (cadquery.Shape method), 139</pre>
invoke() (cadquery. Workplane method), 193	<pre>locationAt() (cadquery.occ_impl.shapes.Mixin1D</pre>
<pre>isEqual() (cadquery.occ_impl.shapes.Shape method),</pre>	method), 262
235	locations() (cadquery.occ_impl.shapes.Mixin1D
isEqual() (cadquery.Shape method), 138	method), 262
isInside() (cadquery.BoundBox method), 113	loft() (cadquery. Workplane method), 194
isInside() (cadquery.occ_impl.shapes.Mixin3D	loft() (in module cadquery.occ_impl.shapes), 255
<pre>method), 266 isNull() (cadquery.occ_impl.shapes.Shape method),</pre>	M
15Nu11() (caaquery.occ_impi.snapes.snape meinoa), 236	makeBezier() (cadquery.Edge class method), 117
isNull() (cadquery.Shape method), 138	makeBezier() (cadquery.occ_impl.shapes.Edge class
isoline() (cadquery.Face method), 121	method), 221
isoline() (cadquery.occ_impl.shapes.Face method),	makeBox() (cadquery.occ_impl.shapes.Solid class
225	method), 243
isolines() (cadquery.Face method), 121	makeBox() (cadquery.Solid class method), 159
isolines() (cadquery.occ_impl.shapes.Face method),	<pre>makeCircle() (cadquery.occ_impl.shapes.Wire class</pre>
225	method). 249

makeCircle() (cadquery.Wire class method), 169 makeCompound() (cadquery.Compound class method),	<pre>makeSplineApprox() (cadquery.Edge class method),</pre>
114	<pre>makeSplineApprox() (cadquery.Face class method),</pre>
makeCompound() (cad-	122
query.occ_impl.shapes.Compound class method), 220	<pre>makeSplineApprox() (cadquery.occ_impl.shapes.Edge</pre>
makeCone() (cadquery.occ_impl.shapes.Solid class	makeSplineApprox() (cadquery.occ_impl.shapes.Face
method), 243	class method), 226
makeCone() (cadquery.Solid class method), 159	makeTangentArc() (cadquery.Edge class method), 119
makeCylinder() (cadquery.occ_impl.shapes.Solid class method), 244	makeTangentArc() (cadquery.occ_impl.shapes.Edge class method), 223
makeCylinder() (cadquery.Solid class method), 160	makeText() (cadquery.Compound class method), 115
<pre>makeEllipse() (cadquery.Edge class method), 117</pre>	<pre>makeText() (cadquery.occ_impl.shapes.Compound</pre>
<pre>makeEllipse() (cadquery.occ_impl.shapes.Edge class</pre>	class method), 220
method), 221	<pre>makeThreePointArc() (cadquery.Edge class method),</pre>
<pre>makeEllipse() (cadquery.occ_impl.shapes.Wire class</pre>	119
method), 250	makeThreePointArc() (cad-
makeEllipse() (cadquery.Wire class method), 170	query.occ_impl.shapes.Edge class method),
makeFromWires() (cadquery.Face class method), 121	224
makeFromWires() (cadquery.occ_impl.shapes.Face	makeTorus() (cadquery.occ_impl.shapes.Solid class
<pre>class method), 225 makeHelix() (cadquery.occ_impl.shapes.Wire class</pre>	method), 245 makeTorus() (cadquery.Solid class method), 161
<pre>makeHelix() (cadquery.occ_impl.shapes.Wire class method), 250</pre>	makeWedge() (cadquery.occ_impl.shapes.Solid class
makeHelix() (cadquery. Wire class method), 170	method), 245
makeLine() (cadquery.Edge class method), 118	makeWedge() (cadquery.Solid class method), 161
makeLine() (cadquery.occ_impl.shapes.Edge class	map() (cadquery.Sketch method), 151
method), 222	map() (cadquery. Workplane method), 194
<pre>makeLoft() (cadquery.occ_impl.shapes.Solid class</pre>	Matrix (class in cadquery), 125
method), 244	<pre>matrixOfInertia() (cadquery.occ_impl.shapes.Shape</pre>
<pre>makeLoft() (cadquery.Solid class method), 160</pre>	static method), 236
<pre>makeNSidedSurface() (cadquery.Face class method),</pre>	<pre>matrixOfInertia() (cadquery.Shape static method),</pre>
121	139
makeNSidedSurface() (cad-	mesh() (cadquery.occ_impl.shapes.Shape method), 237
query.occ_impl.shapes.Face class method),	mesh() (cadquery.Shape method), 139
225	mirror() (cadquery.occ_impl.shapes.Shape method),
<pre>makePolygon() (cadquery.occ_impl.shapes.Wire class</pre>	mirror() (cadquery.Shape method), 140
makePolygon() (cadquery.Wire class method), 171	mirror() (cadquery.Workplane method), 195
makeRuledSurface() (cadquery.Face class method),	mirrorX() (cadquery.Workplane method), 195
122	mirrorY() (cadquery.Workplane method), 195
<pre>makeRuledSurface() (cadquery.occ_impl.shapes.Face</pre>	Mixin1D (class in cadquery.occ_impl.shapes), 261
class method), 226	Mixin1DProtocol (class in cadquery.occ_impl.shapes),
<pre>makeShell() (cadquery.occ_impl.shapes.Shell class</pre>	228
method), 241	Mixin3D (class in cadquery.occ_impl.shapes), 265
makeShell() (cadquery.Shell class method), 143	module
<pre>makeSolid() (cadquery.occ_impl.shapes.Solid class</pre>	cadquery, 109
method), 244	cadquery.cqgi,292
makeSolid() (cadquery.Solid class method), 160	cadquery.occ_impl.exporters.assembly, 276
makeSphere() (cadquery.occ_impl.shapes.Solid class	cadquery.occ_impl.shapes, 219
method), 245 makeSphere() (cadquery.Solid class method), 160	<pre>cadquery.selectors, 266 move() (cadquery.occ_impl.shapes.Shape method), 237</pre>
makeSpline() (cadquery.Edge class method), 118	move() (caaquery.occ_impi.snapes.snape method), 257 move() (caaquery.Shape method), 140
makeSpline() (cadquery.occ_impl.shapes.Edge class	move() (cadquery.Workplane method), 196
method) 222	moved() (cadquery.occ impl.shapes.Shape method), 237

moved() (cadquery.Shape method), 140 moved() (cadquery.Sketch method), 151 moveTo() (cadquery.Workplane method), 196 multiply() (cadquery.Vector method), 166	polarArray() (cadquery.Workplane method), 198 polarLine() (cadquery.Workplane method), 198 polarLineTo() (cadquery.Workplane method), 199 polygon() (cadquery.Sketch method), 152
N	polygon() (cadquery.Workplane method), 199 polygon() (in module cadquery.occ_impl.shapes), 256
name (cadquery.cqgi.InputParameter attribute), 293 named() (cadquery.Plane class method), 128 NearestToPointSelector (class in cadquery), 126 NearestToPointSelector (class in cadquery.selectors), 272 newObject() (cadquery.Workplane method), 196 NoOutputError, 294 normal() (cadquery.occ_impl.shapes.Mixin1D method), 263 normalAt() (cadquery.Face method), 122 normalAt() (cadquery.occ_impl.shapes.Face method), 227	polyline() (cadquery.Workplane method), 200 polyline() (in module cadquery.occ_impl.shapes), 257 positionAt() (cadquery.occ_impl.shapes.Mixin1D
normalized() (cadquery. Vector method), 167 normals() (cadquery. Face method), 123	R
normals() (cadquery.occ_impl.shapes.Face method), 227	${\tt radius()}~(cad query.occ_impl.shapes.Mixin1D~method),\\ 264$
offset() (cadquery.Sketch method), 152 offset() (in module cadquery.occ_impl.shapes), 256 offset2D() (cadquery.occ_impl.shapes.Wire method),	radiusArc() (cadquery.Workplane method), 200 RadiusNthSelector (class in cadquery.selectors), 273 rarray() (cadquery.Sketch method), 153 rarray() (cadquery.Workplane method), 201 rect() (cadquery.Sketch method), 153 rect() (cadquery.Workplane method), 201 rect() (in module cadquery.occ_impl.shapes), 257 regularPolygon() (cadquery.Sketch method), 153 remove() (cadquery.Compound method), 115 remove() (cadquery.coc_impl.shapes.Compound
outerShell() (cadquery.Solid method), 162	method), 220 replace() (cadquery.Sketch method), 154
P	reset() (cadquery.Sketch method), 154
ParallelDirSelector (class in cadquery), 126 ParallelDirSelector (class in cadquery.selectors), 272 paramAt() (cadquery.occ_impl.shapes.Mixin1D method), 263 ParameterDescriptionFinder (class in cadquery.cqqi), 294	revolve() (cadquery.occ_impl.shapes.Solid class method), 246 revolve() (cadquery.Solid class method), 162 revolve() (cadquery.Workplane method), 202 revolve() (in module cadquery.occ_impl.shapes), 257 rotate() (cadquery.occ_impl.shapes.Shape method), 238
parametricCurve() (cadquery.Workplane method), 197 parametricSurface() (cadquery.Workplane method), 197	rotate() (cadquery.Shape method), 141 rotate() (cadquery.Workplane method), 203 rotateAboutCenter() (cadquery.Workplane method), 203
parray() (cadquery.Sketch method), 152	rotated() (cadquery.Plane method), 128
parse() (in module cadquery.cqgi), 294 PerpendicularDirSelector (class in cadquery), 127	S
PerpendicularDirSelector (class in cad- query.selectors), 272 placeSketch() (cadquery.Workplane method), 198	<pre>sagittaArc() (cadquery.Workplane method), 203 sample() (cadquery.occ_impl.shapes.Mixin1D method),</pre>
Plane (class in cadquery), 127 plane() (in module cadquery.occ_impl.shapes), 256	save() (cadquery.Assembly method), 111 scale() (cadquery.occ_impl.shapes.Shape method), 238
prane() (in moune cauquery.occ_impi.snapes), 230	scare() (caaquet y.occ_impi.snapes.snape memoa), 258

scale() (cadquery.Shape method), 141 ScriptCallback (class in cadquery.cqgi), 294	<pre>solve() (cadquery.Assembly method), 111 solve() (cadquery.Sketch method), 155</pre>
ScriptExecutionError, 294	sort() (cadquery.Sketch method), 155
ScriptMetadata (class in cadquery.cqgi), 294	sort() (cadquery. Workplane method), 206
section() (cadquery.Workplane method), 204	<pre>sortWiresByBuildOrder() (in module cadquery), 218</pre>
segment() (cadquery.Sketch method), 154	<pre>sortWiresByBuildOrder() (in module cad-</pre>
<pre>segment() (in module cadquery.occ_impl.shapes), 257</pre>	query.occ_impl.shapes), 258
select() (cadquery.Sketch method), 154	sphere() (cadquery. Workplane method), 207
Selector (class in cadquery), 129	sphere() (in module cadquery.occ_impl.shapes), 258
Selector (class in cadquery.selectors), 273	spline() (cadquery.Sketch method), 155
<pre>setOrigin2d() (cadquery.Plane method), 129</pre>	spline() (cadquery. Workplane method), 207
Shape (class in cadquery), 130	<pre>spline() (in module cadquery.occ_impl.shapes), 259</pre>
Shape (class in cadquery.occ_impl.shapes), 228	<pre>splineApprox() (cadquery.Workplane method), 209</pre>
ShapeProtocol (class in cadquery.occ_impl.shapes),	<pre>split() (cadquery.occ_impl.shapes.Shape method), 239</pre>
240	split() (cadquery.Shape method), 142
ShapeResult (class in cadquery.cqgi), 294	split() (cadquery.Workplane method), 209
shapes (cadquery.Assembly property), 111	<pre>split() (in module cadquery.occ_impl.shapes), 259</pre>
Shell (class in cadquery), 143	<pre>startPoint() (cadquery.occ_impl.shapes.Mixin1D</pre>
Shell (class in cadquery.occ_impl.shapes), 241	method), 264
<pre>shell() (cadquery.occ_impl.shapes.Mixin3D method),</pre>	<pre>stitch() (cadquery.occ_impl.shapes.Wire method), 251</pre>
266	<pre>stitch() (cadquery.Wire method), 171</pre>
shell() (cadquery.Workplane method), 204	StringSyntaxSelector (class in cadquery), 163
shell() (in module cadquery.occ_impl.shapes), 258	StringSyntaxSelector (class in cadquery.selectors),
Shells() (cadquery.occ_impl.shapes.Shape method), 230	274 subtract() (cadquery.Sketch method), 155
<pre>shells() (cadquery.occ_impl.shapes.Shape method),</pre>	SubtractSelector (class in cadquery.selectors), 275
238	SumSelector (class in cadquery.selectors), 275
Shells() (cadquery.Shape method), 131 shells() (cadquery.Shape method), 141	<pre>sweep() (cadquery.occ_impl.shapes.Solid class method),</pre>
shells() (cadquery.Workplane method), 205	<pre>sweep() (cadquery.Solid class method), 163</pre>
<pre>show_object() (cadquery.cqgi.ScriptCallback method),</pre>	<pre>sweep() (cadquery.Workplane method), 210</pre>
294	<pre>sweep() (in module cadquery.occ_impl.shapes), 259</pre>
siblings() (cadquery.Compound method), 115	<pre>sweep_multi() (cadquery.occ_impl.shapes.Solid class</pre>
siblings() (cadquery.occ_impl.shapes.Compound	method), 247
method), 221	<pre>sweep_multi() (cadquery.Solid class method), 163</pre>
siblings() (cadquery.occ_impl.shapes.Shape method), 238	Т
siblings() (cadquery.Shape method), 141	tag() (cadquery.Sketch method), 156
siblings() (cadquery.Workplane method), 205	tag() (cadquery. Workplane method), 210
size() (cadquery.Workplane method), 205	<pre>tangentArcPoint() (cadquery.Workplane method),</pre>
Sketch (class in cadquery), 144	211
sketch() (cadquery.Workplane method), 205	tangentAt() (cadquery.occ_impl.shapes.Mixin1D
slot() (cadquery.Sketch method), 154	method), 264
slot2D() (cadquery.Workplane method), 206	test() (cadquery.DirectionSelector method), 116
Solid (class in cadquery), 157	test() (cadquery.ParallelDirSelector method), 126
Solid (class in cadquery.occ_impl.shapes), 241	test() (cadquery.PerpendicularDirSelector method),
solid() (in module cadquery.occ_impl.shapes), 258	127
Solids() (cadquery.occ_impl.shapes.Shape method), 230	test() (cadquery.selectors.BaseDirSelector method), 268
solids() (cadquery.occ_impl.shapes.Shape method), 239	test() (cadquery.selectors.DirectionSelector method), 271
Solids() (cadquery.Shape method), 132	$\verb test() (cadquery.selectors.ParallelDirSelector\ method),$
solids() (cadquery.Shape method), 142 solids() (cadquery.Workplane method), 206	272

test() (cadquery.selectors.PerpendicularDirSelector	V
method), 273	val() (cadquery.Sketch method), 156
text() (cadquery.Workplane method), 211	val() (cadquery. Workplane method), 215
text() (in module cadquery.occ_impl.shapes), 260	valid_values (cadquery.cqgi.InputParameter at-
thicken() (cadquery.Face method), 123	tribute), 294
thicken() (cadquery.occ_impl.shapes.Face method),	validate() (cadquery.cqgi.CQModel method), 293
227	vals() (cadquery.Sketch method), 156
threePointArc() (cadquery.Workplane method), 212	vals() (cadquery. Workplane method), 215
toArcs() (cadquery.Face method), 123	varType (cadquery.cqgi.InputParameter attribute), 294
toArcs() (cadquery.occ_impl.shapes.Face method), 227	Vector (class in cadquery), 165
toCompound() (cadquery.Assembly method), 112	Vertex (class in cadquery), 167
toJSON() (in module cadquery.occ_impl.assembly), 277	Vertex (class in cadquery.occ_impl.shapes), 247
toLocalCoords() (cadquery.Plane method), 129	<pre>vertex() (in module cadquery.occ_impl.shapes), 260</pre>
toOCC() (cadquery.Workplane method), 212	<pre>Vertices() (cadquery.occ_impl.shapes.Shape method),</pre>
toPending() (cadquery.Workplane method), 213	230
toPln() (cadquery.Face method), 123	<pre>vertices() (cadquery.occ_impl.shapes.Shape method),</pre>
toPln() (cadquery.occ_impl.shapes.Face method), 228	240
torus() (in module cadquery.occ_impl.shapes), 260	<pre>Vertices() (cadquery.occ_impl.shapes.Wire method),</pre>
toSplines() (cadquery.occ_impl.shapes.Shape	248
method), 239	<pre>Vertices() (cadquery.Shape method), 132</pre>
toSplines() (cadquery.Shape method), 142	vertices() (cadquery.Shape method), 143
toSvg() (cadquery.Workplane method), 213	vertices() (cadquery.Sketch method), 156
toTuple() (cadquery.Color method), 113	Vertices() (cadquery.Wire method), 168
toTuple() (cadquery.Location method), 125	vertices() (cadquery.Workplane method), 215
toVtkPolyData() (cadquery.occ_impl.shapes.Shape	$\verb visit_Call() (cadquery.cqgi.ParameterDescriptionFinde) $
method), 239	method), 294
toVtkPolyData() (cadquery.Shape method), 142	vLine() (cadquery.Workplane method), 215
toWorldCoords() (cadquery.Plane method), 129	vLineTo() (cadquery.Workplane method), 215
transformed() (cadquery.Workplane method), 213 transformGeometry() (cad-	Volume() (cadquery.occ_impl.shapes.Shape method),
	230
query.occ_impl.shapes.Shape method), 239	Volume() (cadquery.Shape method), 132
transformGeometry() (cadquery.Shape method), 142	١٨/
transformShape() (cadquery.occ_impl.shapes.Shape method), 240	W wedge() (cadquery. Workplane method), 216
transformShape() (cadquery.Shape method), 143	Wire (class in cadquery), 168
translate() (cadquery.occ_impl.shapes.Shape	Wire (class in cadquery.occ_impl.shapes), 248
method), 240	wire() (cadquery. Workplane method), 217
translate() (cadquery.Shape method), 143	wire() (in module cadquery.occ_impl.shapes), 261
translate() (cadquery.Workplane method), 213	Wires() (cadquery.occ_impl.shapes.Shape method), 230
transposed_list() (cadquery.Matrix method), 125	wires() (cadquery.occ_impl.shapes.Shape method), 240
trapezoid() (cadquery.Sketch method), 156	Wires() (cadquery.Shape method), 132
traverse() (cadquery.Assembly method), 112	wires() (cadquery.Shape method), 143
trim() (cadquery.Edge method), 120	wires() (cadquery.Sketch method), 157
trim() (cadquery.Face method), 123	wires() (cadquery. Workplane method), 217
trim() (cadquery.occ_impl.shapes.Edge method), 224	<pre>wiresToFaces() (in module cad-</pre>
trim() (cadquery.occ_impl.shapes.Face method), 228	query.occ_impl.shapes), 261
twistExtrude() (cadquery. Workplane method), 214	Workplane (class in cadquery), 171
TypeSelector (class in cadquery), 165	workplane() (cadquery. Workplane method), 218
TypeSelector (class in cadquery.selectors), 275	workplaneFromTagged() (cadquery.Workplane
U	method), 218
-	

union() (cadquery. Workplane method), 214