


Destination NAT Lab:

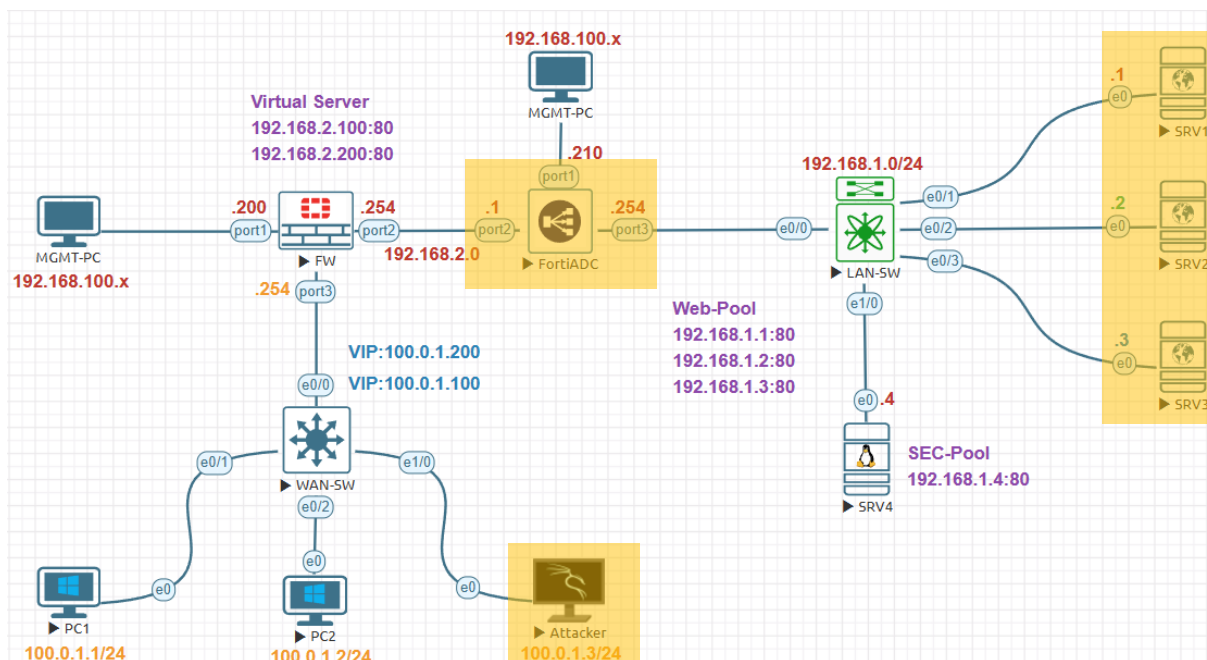

Management Subnet	192.168.100.0/24
FortiGate Management IP	192.168.100.200
FortiADC Management IP	192.168.100.210
Internal Servers Subnet	192.168.1.0/24
FortiADC External Subnet	192.168.2.0/24
FortiGate Firewall External	100.0.1.0/24
FortiADC Internal IP Address	192.168.1.254
FortiADC External IP Address	192.168.2.1
FortiGate Firewall Internal IP	192.168.2.254
FortiGate Firewall External IP	100.0.1.254
SRV1 IP Address	192.168.1.1
SRV2 IP Address	192.168.1.2
SRV3 IP Address	192.168.1.3
SRV3 IP Address	192.168.1.4
Virtual Sever-1	192.168.2.100
Virtual Sever-2	192.168.2.200
FortiGate VIP-1	100.0.1.100
FortiGate VIP-2	100.0.1.200
External PC1 IP Address	100.0.1.1
External PC2 IP Address	100.0.1.2
External PC3 IP Address	100.0.1.3

Disable Health Checks:

Click **Server Load Balance > Real Server Pool**. Click the edit icon or double click to edit the WEB-Pool real server pool.

Dashboard > Security Fabric > FortiView > System > Shared Resources > Network > **Server Load Balance** > **Real Server Pool**

Real Server Pool Real Server Server SSL

Delete + Create New + Add Filter

Name	Address Type	Health Check
WEB-Pool	IPv4	Enable
SEC-Pool	IPv4	Disable

Showing 1 to 2 of 2 entries 0 rows selected Show 25 entries

Disable the **Health Check** option. Click **Save**.

Dashboard > Security Fabric > FortiView > System > Shared Resources > Network > **Server Load Balance** > **Real Server Pool**

Real Server Pool

Name WEB-Pool

Address Type IPv4 IPv6

Type Static Dynamic

Health Check ☐

Real Server SSL Profile NONE

Member

Delete + Create New + Add Filter

ID	Name	Address
1	SRV1	192.168.1.1

Now, only user-generated traffic arrives at the servers, and not health check traffic.


DNAT Traffic Capture:

Open Console or SSH connection to the FortiADC, Enter the following CLI command to enable the sniffer and capture of HTTP traffic:

diagnose sniffer packet any "port 80" 4

On the Kali Linux-External PC, open a browser, and then connect to the virtual server at

<http://100.0.1.100>

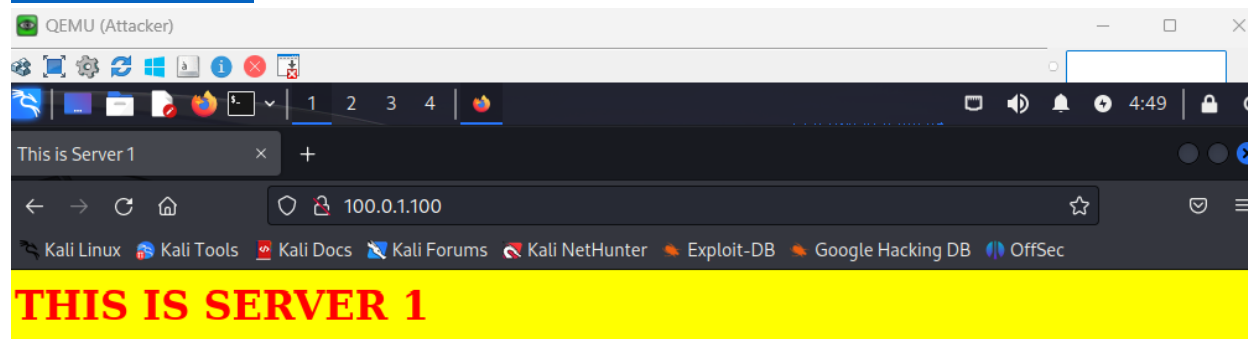

Return to the FortiADC session, and then observe the sniffer output.

```
FortiADC # diagnose sniffer packet any "port 80" 4
interfaces=[any]
filters=[port 80]
8.604596 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: syn 995850887
8.604794 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: syn 995850887
8.605593 port3 in 192.168.1.2.80 -> 100.0.1.3.46708: syn 2562262053 ack 995850888
8.605626 port2 out 192.168.2.100.80 -> 100.0.1.3.46708: syn 2562262053 ack 995850888
8.606912 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: ack 2562262054
8.606920 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: ack 2562262054
8.607332 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: psh 995850888 ack 2562262054
8.607338 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: psh 995850888 ack 2562262054
8.607905 port3 in 192.168.1.2.80 -> 100.0.1.3.46708: ack 995851266
8.607913 port2 out 192.168.2.100.80 -> 100.0.1.3.46708: ack 995851266
8.610482 port3 in 192.168.1.2.80 -> 100.0.1.3.46708: psh 2562262054 ack 995851266
8.610501 port2 out 192.168.2.100.80 -> 100.0.1.3.46708: psh 2562262054 ack 995851266
8.611779 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: ack 2562262529
8.611791 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: ack 2562262529
8.736472 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: psh 995851266 ack 2562262529
8.736494 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: psh 995851266 ack 2562262529
8.737465 port3 in 192.168.1.2.80 -> 100.0.1.3.46708: psh 2562262529 ack 995851595
8.737481 port2 out 192.168.2.100.80 -> 100.0.1.3.46708: psh 2562262529 ack 995851595
8.739219 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: ack 2562263031
8.739238 port3 out 100.0.1.3.46708 -> 192.168.1.2.80: ack 2562263031
9.272623 port2 in 100.0.1.3.46708 -> 192.168.2.100.80: fin 995851595 ack 2562263031
```

Notice that the traffic is between the IP address **100.0.1.3** which is the IP address of the Kali Linux External PC and a real server IP address (**192.168.1.3**). The FortiADC is translating the destination IP address of the client traffic from the virtual server IP address (**192.168.2.100**) to one of the real server IP addresses.

However, the FortiADC is not changing the source IP address because **DNAT** is the default setting for the Packet-Forwarding Method in a Layer 4 virtual server.

Navigate to **Server Load Balance > Virtual Server** double click on the Virtual Server **WEB-Pool** to verify **Packet Forwarding Method** is **DNAT** Destination NAT

The screenshot displays the FortiGate Web UI configuration page for a Virtual Server. The left sidebar shows the navigation menu with 'Server Load Balance' and 'Virtual Server' highlighted. The main content area shows the configuration for a Virtual Server named 'WEB-VS'. The 'Basic' tab is selected, and the 'Packet Forwarding Method' is set to 'DNAT'.

Virtual Server	
Basic General Security Monitoring	
Name	WEB-VS
Type	Layer 7 Layer 4 Layer 2
Status	Enable Disable Maintain
Address Type	IPv4 IPv6
Traffic Group	default
Comments	Specify the comments
Specifics	
Schedule Pool	☐
Content Routing	☐
Packet Forwarding Method	DNAT