

Compare In-Band and Out-of-Band:


- o There are basically, two primarily ways to manage the network devices.
- o In-Band Network Management and Out-of-Band management (OBM).
- o In-Band Management is managing locally through the network itself.
- o Using Telnet, SSH connection to a Router or by using SNMP-based tools.
- o If the network is down cannot use the network to reach the affected devices.
- o Need an alternate or secondary access path to access the affected devices.
- o That is essentially what Out-of-Band Management (OBM) provides to Admin.


In-Band (IB):

- o Connecting to a Router via Telnet or SSH means have IP reachability to the device.
- o In-Band traffic is using the same networks for Management protocols & data traffic.

Out-Of-Band (OOB):

- o Connecting to a Router or Switch via the console port rather than Telnet or SSH.
- o In Out-Of-Band Management does not require IP reachability to network devices.
- o Out-of-Band management is another way or method to reach devices to manage.
- o Out-of-Band (OOB) management implies that there is a completely separate network.
- o Just for management protocols and a different network for end users and their traffic.

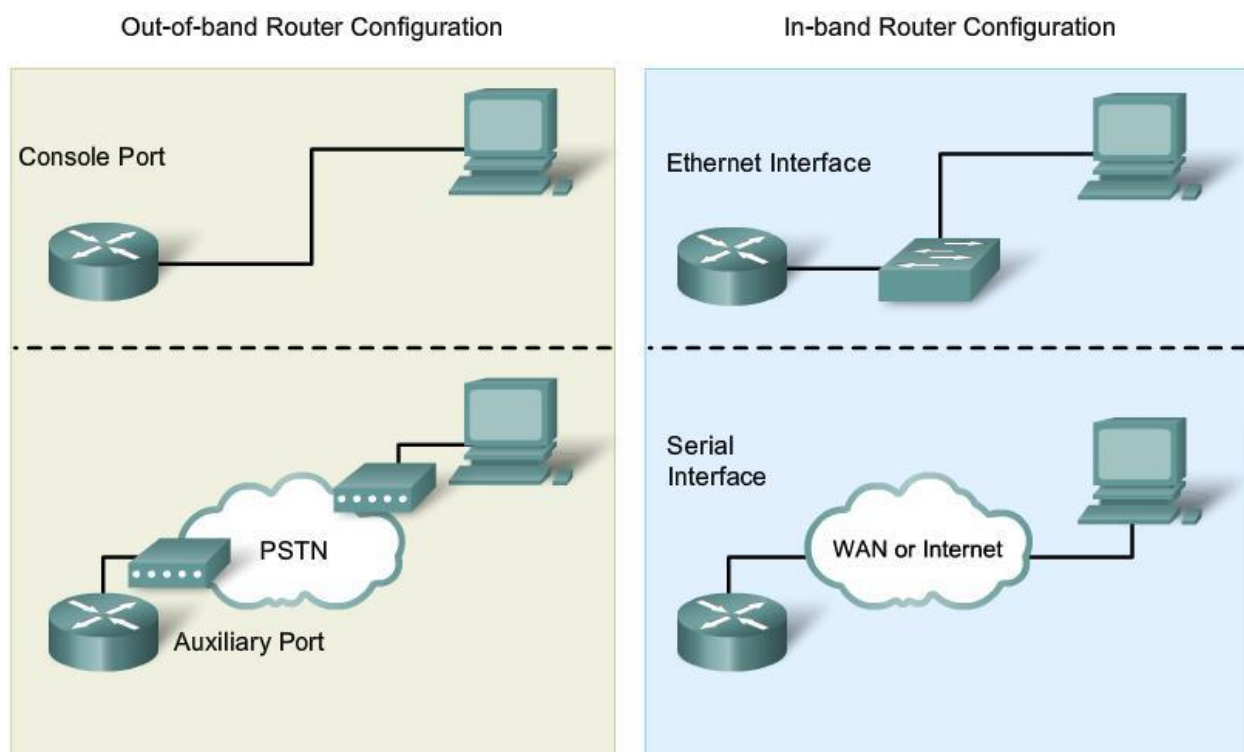


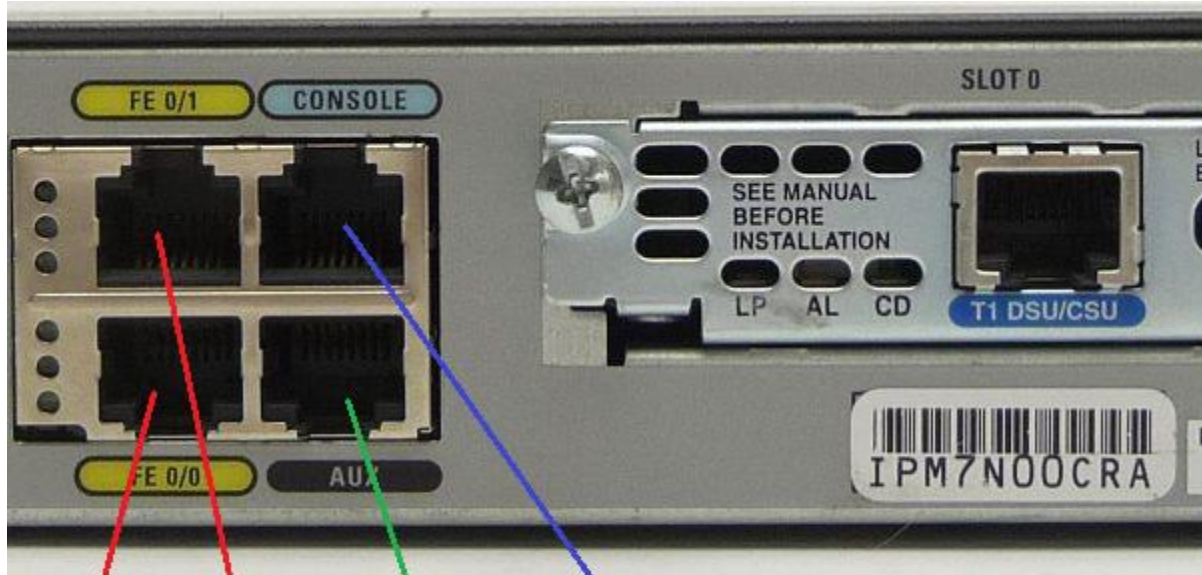

Data Port/Network, In Band

Console Port/Serial Out of Band

Auxiliary Port, Out of Band

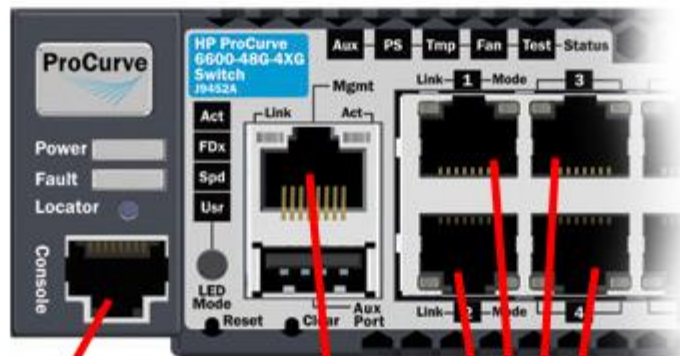

console port
(serial, out of band)

data ports
(networked, in band)

management port
(networked, out of band)