
4-Channel Data Logging Utility Module

Description

This module stores the real-time values of four user selectable software Q15 variables in the data RAM provided on the 28xx DSP. Four variables are selected by configuring four module inputs, *iptr1*, *iptr2*, *iptr3* and *iptr4*, point to the address of the four variables. The starting addresses of the four RAM locations, where the data values are stored, are set to DLOG_4CH_buff1, DLOG_4CH_buff2, DLOG_4CH_buff3, and DLOG_4CH_buff4. The DATALOG buffer size, prescalar, and trigger value are also configurable.



Availability

This 16-bit module is available in one interface format:

1) The CcA interface version

Module Properties

Type: Target Dependent, Application Independent

Target Devices: x281x or x280x

CcA Version File Names: dlog4chc.asm, dlog4ch.h

IQmath library files for C: N/A

Item	C version	Comments
Code Size [□]	75/75 words	
(x281x/x280x)		
Data RAM	0 words*	
xDAIS ready	No	
XDAIS component	No	IALG layer not implemented
Multiple instances	Yes	
Reentrancy	Yes	

Each pre-initialized DLOG_4CH structure consumes 21 words in the data memory

Code size mentioned here is the size of the *init()* and *update()* functions

C Interface

Object Definition

The structure of DLOG_4CH object is defined by following structure definition

```
typedef struct { long task;
                                  // Variable: Task address pointer
                 int *iptr1;
                                  // Input: First input pointer (Q15)
                                  // Input: Second input pointer (Q15)
                 int *iptr2;
                                  // Input: Third input pointer (Q15)
                  int *iptr3;
                  int *iptr4;
                                  // Input: Fourth input pointer (Q15)
                  int trig value; // Input: Trigger point (Q15)
                  int prescalar; // Parameter: Data log prescale
                  int skip_cntr; // Variable: Data log skip counter
                  int cntr;
                                 // Variable: Data log counter
                  long write_ptr; // Variable: Graph address pointer
                  int size;
                                  // Parameter: Maximum data buffer
                  int (*init)();
                                  // Pointer to init function
                  int (*update)(); // Pointer to update function
               } DLOG_4CH;
```

typedef DLOG 4CH *DLOG 4CH handle;

Item	Name	Description	Format	Range(Hex)
Inputs	iptr1	Input pointer for the first Q15 variable	Q0	00000000-FFFFFFF
	iptr2	Input pointer for the second Q15 variable	Q0	00000000-FFFFFFF
	iptr3	Input pointer for the third Q15 variable	Q0	00000000-FFFFFFF
	iptr4	Input pointer for the fourth Q15 variable	Q0	00000000-FFFFFFF
Outputs	N/A	Data RAM	N/A	N/A
DATALOG	prescalar	Data log prescaler	Q0	0000-7FFF
Parameter	trig_value	Trigger point based on the fist Q15 variable	Q15	8000-7FFF
	size	Maximum data buffer	Q0	0000-7FFF
Internal	skip_cntr	Data log skip counter	Q0	0000-7FFF
	cntr	Data log counter	Q0	0000-7FFF
	write_ptr	Graph address pointer	Q0	00000000-FFFFFFF
	task	Task address pointer	Q0	00000000-FFFFFFF

Note: The trigger value is with reference to the input *iptr1. In accordance with this, the input connected to channel 1 should be time varying, and the trigger value should be set up such that input crosses the trigger value.

The other channels are captured synchronous to the channel 1. There is no trigger mechanism on channels 2 through 4.

Special Constants and Data types

DLOG 4CH

The module definition is created as a data type. This makes it convenient to instance an interface to the DATALOG driver. To create multiple instances of the module simply declare variables of type DLOG_4CH.

DLOG 4CH handle

User defined Data type of pointer to DATALOG module

DLOG 4CH DEFAULTS

Structure symbolic constant to initialize DATALOG module. This provides the initial values to the terminal variables as well as method pointers.

Methods

```
int DLOG_4CH_init(DLOG_4CH *);
int DLOG_4CH_update(DLOG_4CH *);
```

This default definition of the object implements two methods – the initialization and the runtime update function for DATALOG. This is implemented by means of a function pointer, and the initializer sets this to DLOG_4CH_init and DLOG_4CH_update functions for x281x/x280x. The argument to this function is the address of the DATALOG object.

Module Usage

Instantiation

The following example instances one DATALOG object DLOG 4CH dlog1:

Initialization

To Instance pre-initialized objects
DLOG 4CH dlog1 = DLOG 4CH DEFAULTS;

Invoking the computation function

```
dlog1.init(&dlog1);
dlog1.update(&dlog1);
```


Example

The following pseudo code provides the information about the module usage.


```
main()
       dlog1.iptr1 = &Q15 var1;
                                      // Pass input to DATALOG module
       dlog1.iptr2 = &Q15 var2;
                                      // Pass input to DATALOG module
                                      // Pass input to DATALOG module
       dlog1.iptr3 = &Q15_var3;
                                      // Pass input to DATALOG module
       dlog1.iptr4 = &Q15 var4;
       dlog1.trig value = 0x0;
                                      // Pass input to DATALOG module
       dlog1.size = 0x400;
                                      // Pass input to DATALOG module
       dlog1.prescalar = 1;
                                      // Pass input to DATALOG module
       dlog1.init(dlog1);
                                      // Call init function for dlog1
}
void interrupt periodic_interrupt_isr()
       dlog1.update(&dlog1);
                                      // Call update function for dlog1
}
```


Technical Background

This software module stores up to four real-time Q15 values of each of the selected input variables in the data RAM as illustrated in the following figures. The starting addresses of four RAM sections, where the data values are stored, are set to DLOG_4CH_buff1, DLOG_4CH_buff2, DLOG_4CH_buff3, and DLOG_4CH_buff4.

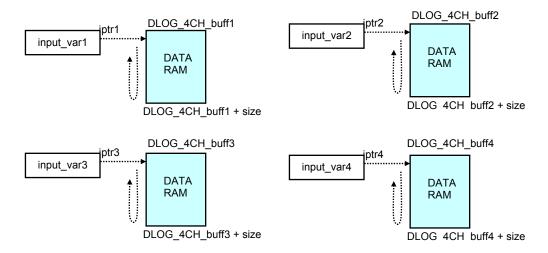

To show four stored Q15 variables in CCS graphs properly, the properties of two dual time graphs for these variables should be configured as shown in the following figures. In the software, the default buffer size is 0x400. The sampling rate is usually same as ISR frequency. In this case, it is 20 kHz with the prescalar of 1.

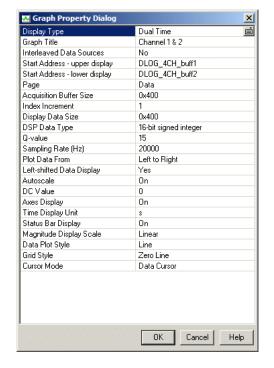

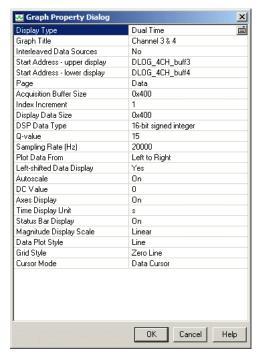

Digital Control Systems (DCS) Group Texas Instruments