



5 BURNER BBQ WITH SIDE BURNER

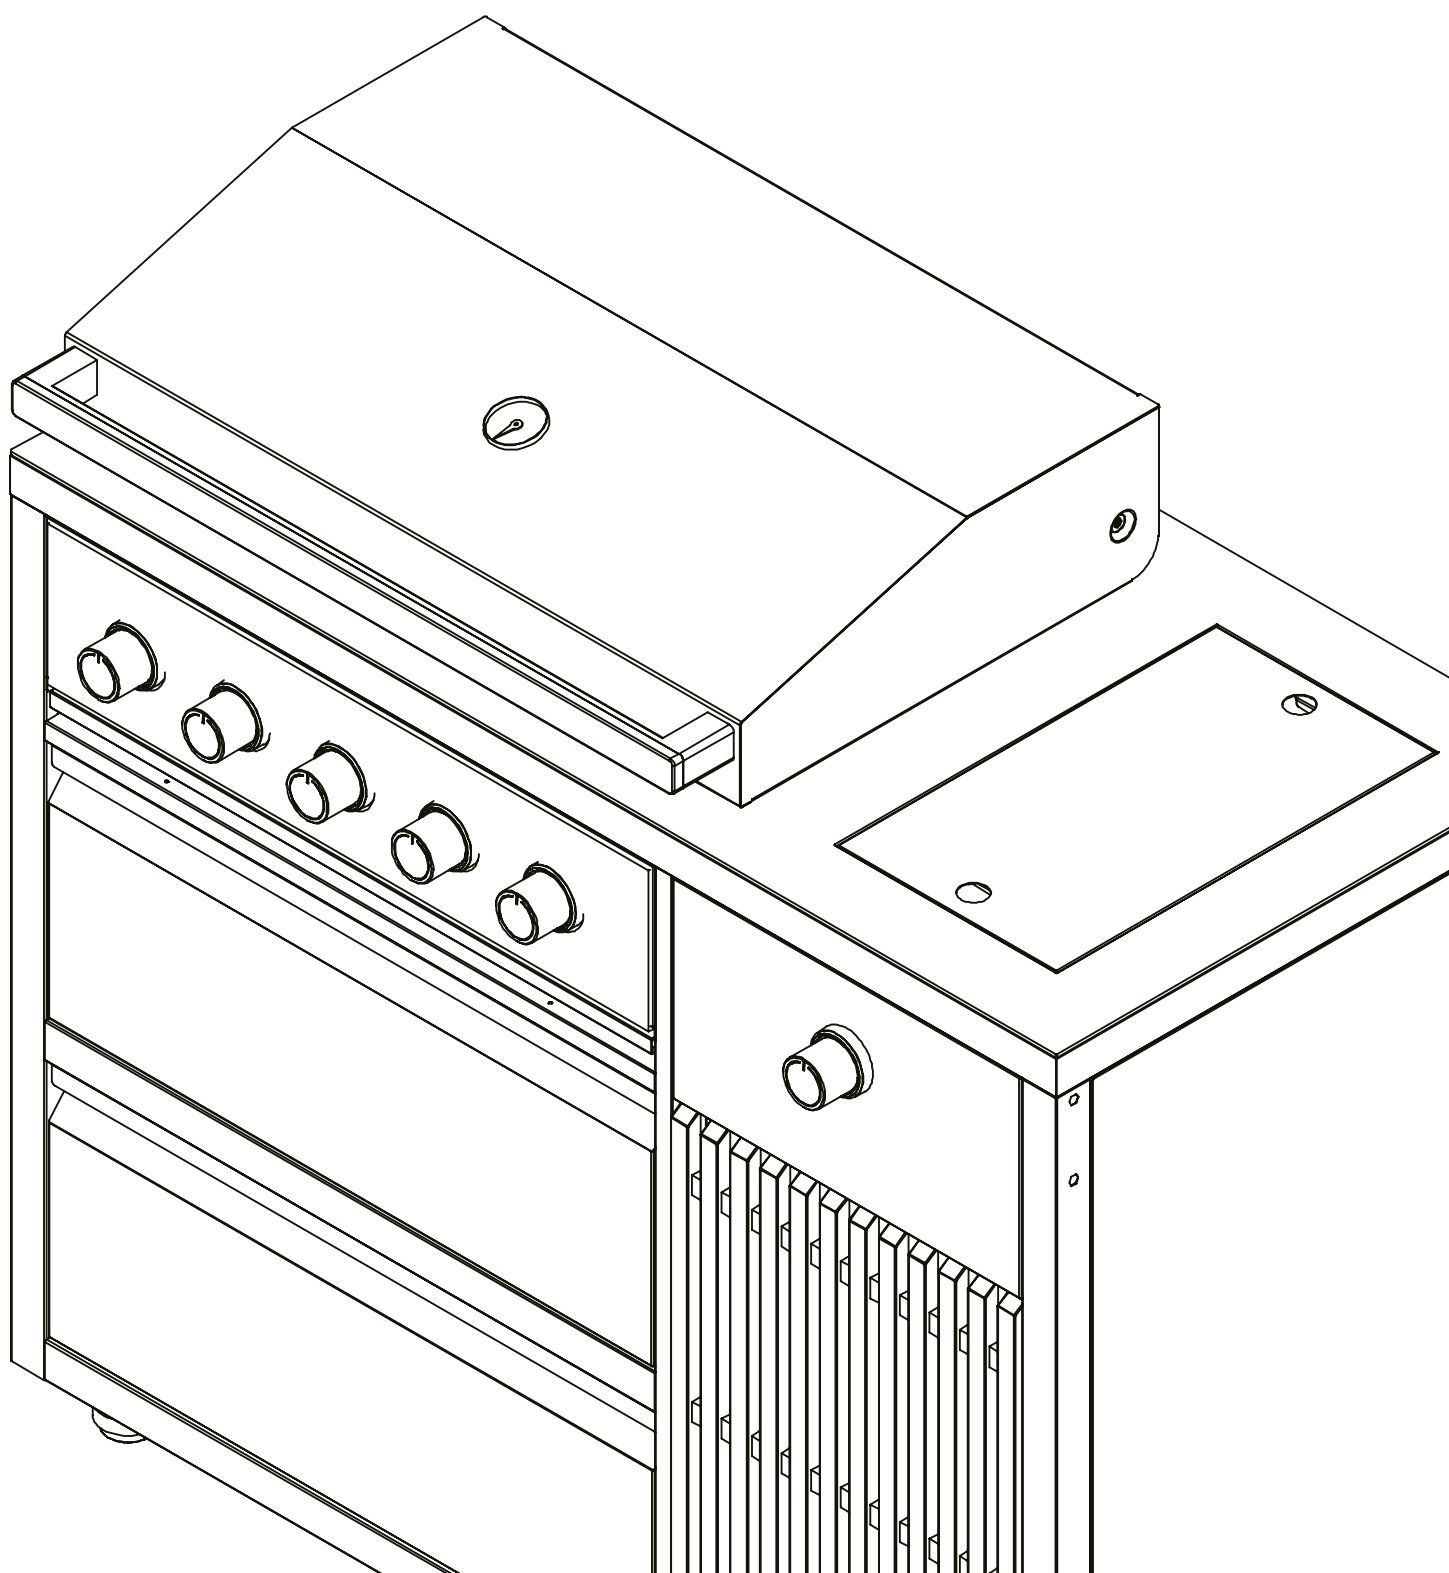


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

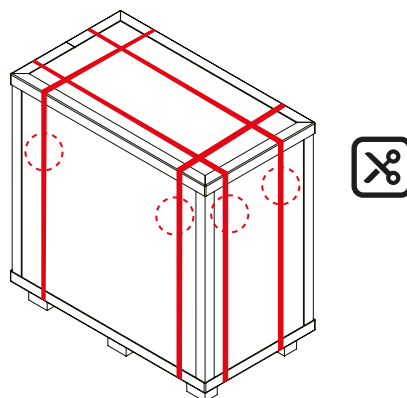

STEP 02. REMOVE THE TOP COVER OF THE CARTON

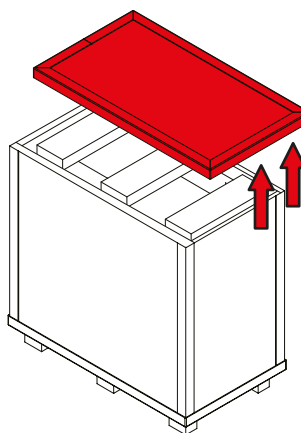


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

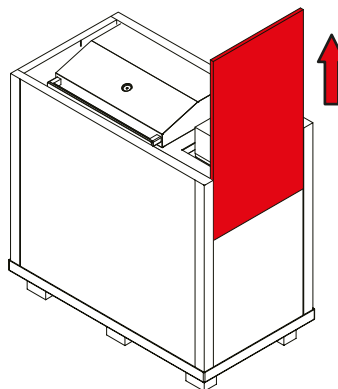

STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.


NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 4 PEOPLE SINCE IT IS VERY HEAVY.

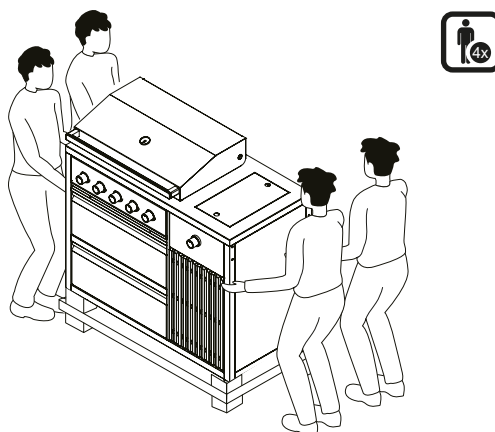


02 ASSEMBLING THE GRILL

STEP 01. CUT THE CABLE TIES OF THE WARMING RACK USING SCISSORS.


NOTE! PLEASE DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE CABLE TIES AS THIS COULD CAUSE DAMAGE TO THE BARBECUE CABINET, WARMING RACK OR OTHER COMPONENTS.

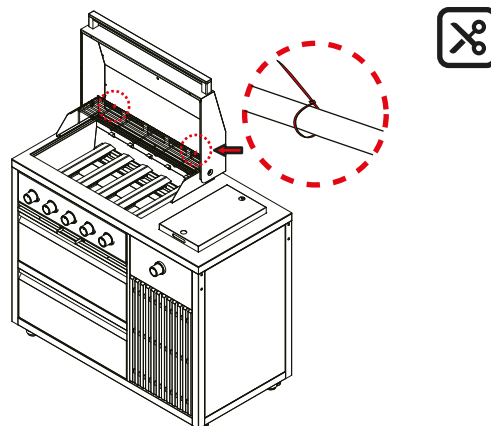


STEP 02. UNPACK THE FLAVOURISER PLATES AND PLACE ABOVE EACH BURNER.
EACH PLATE HAS A LOCATION SLOT.
ALL PLATES MUST BE PLACED CORRECTLY IN ORDER TO USE THE UNIT.

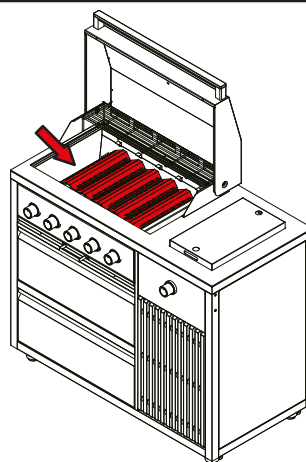

STEP 03. UNPACK THE THREE COOKING GRILLS AND PLACE INTO THE UNIT.
CAST IRON GRIDDLE IS AVAILABLE FOR PURCHASE SEPARATELY.

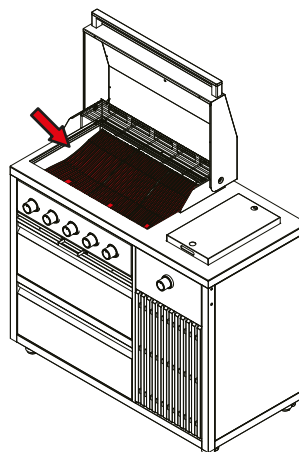


STEP 04. UNPACK THE SIDE BURNER COVER AND DROP INTO PLACE.

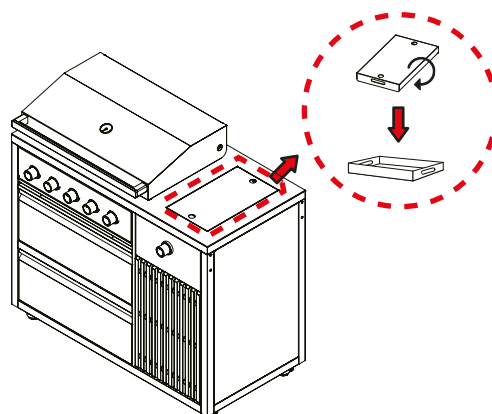


STEP 04.A. LIFT OUT THE PAN SUPPORT AND PLACE INTO THE HIGHER POSITION OF THE SIDE BURNER.

NOTE! THE SIDE BURNER IS DESIGNED FOR PAN COOKING ONLY DO NOT GRILL DIRECTLY ON THE BURNER.

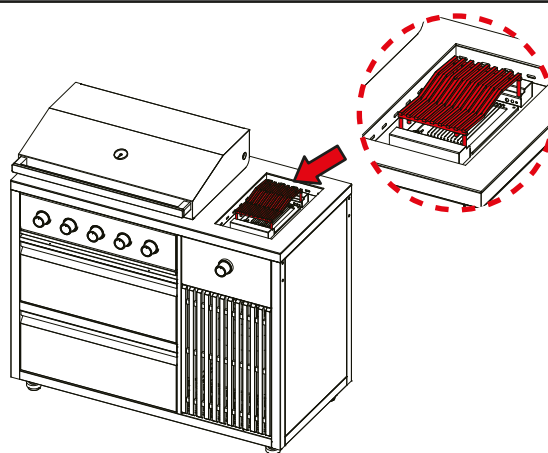


STEP 05. THE IGNITION SYSTEM AND GAS TANK IS STORED INSIDE THE CABINET BEHIND THE TEAK PANEL.

PRESS THE UPPER PART OF THE TEAK PANEL TO ACCESS THE CABINET.

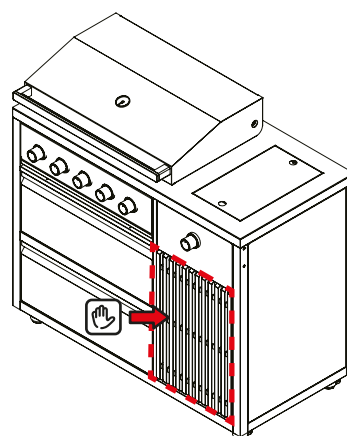


STEP 05.A. LOCATE THE IGNITION BATTERY BOX AND UNDO EITHER SIDE FOLLOWED BY THE BACK AND FRONT SECTIONS. INSERT 1x AA BATTERY WITH THE + TERMINAL FACING DOWNWARDS AS SHOWN.

SCREW THE BATTERY BOX CAP BACK INTO PLACE.

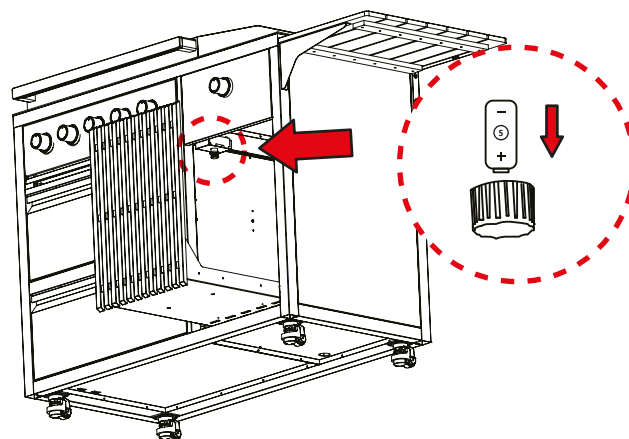


STEP 05.B. ENSURE THAT THE BATTERY IS CORRECTLY INSTALLED INTO THE IGNITION SYSTEM BY PRESSING A KNOB OF YOUR CHOOSING.

LISTEN FOR THE PULSATING SPARK.
IF NO SOUND CAN BE HEARD, PLEASE CHECK IF THE BATTERY IS INSTALLED CORRECTLY / DISCHARGED.

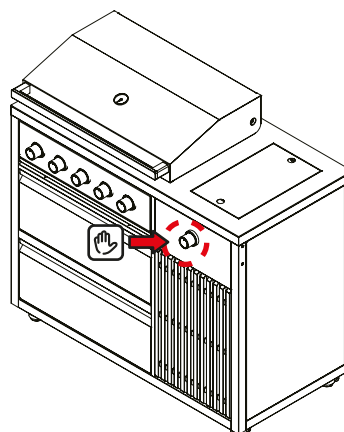

STEP 05.C. PLACE YOUR GAS CYLINDER INTO THE CABINET.

NOTE! MAXIMUM HEIGHT FOR THE GAS CYLINDER IS 53CM

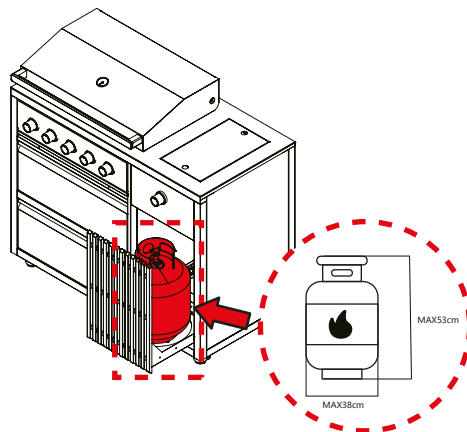

STEP 05.D. UNPACK THE GAS REGULATOR AND INSTALL IT ONTO THE GAS CYLINDER.


NOTE! PLEASE MAKE SURE THAT THE GAS HOSE IS STRAIGHT AND NOT KINKED.
TEST FOR GAS LEAKAGE TO ENSURE THAT THE CONNECTION IS TIGHT.
CONTACT YOUR LOCAL GAS SUPPLIER TO CONFIRM THE REGULATOR IS CORRECT FOR YOUR GAS CYLINDER.

WARNING



STEP 06. IN ORDER TO ILLUMINATE THE GRILL, A POWERBANK MUST BE INSTALLED.

STEP 06.A. OPEN THE TOP DRAWER AS SHOWN IN THE ILLUSTRATION TO LOCATE THE USB-CABLE ON THE LEFT SIDE.

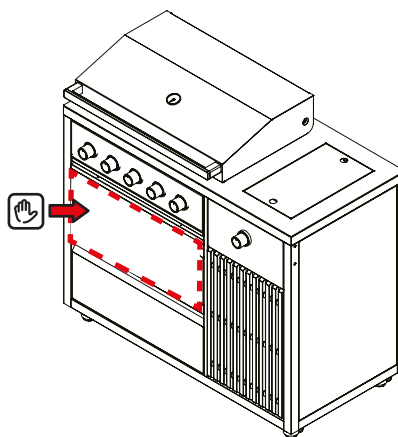


STEP 06.B. CONNECT THE CABLE TO THE POWERBANK AND PLACE IT IN THE HOLDER ON THE LEFT SIDE, AS SHOWN IN THE ILLUSTRATION.


STEP 06.C. TEST THE LIGHTNING BY PRESSING A KNOB OF YOUR CHOOSING.
IF A BLUE LIGHT IS ILLUMINATED, THE INSTALLATION IS COMPLETE.

STEP 06.D. YOU CAN NOW CLOSE THE DRAWER. THE BARBEQUE IS READY FOR USE.

NOTE! POWERBANK IS NOT INCLUDED.

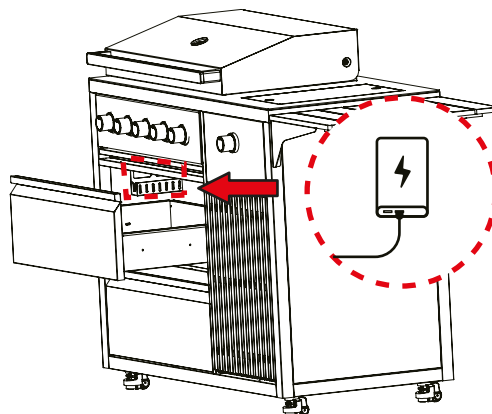


SINK UNIT

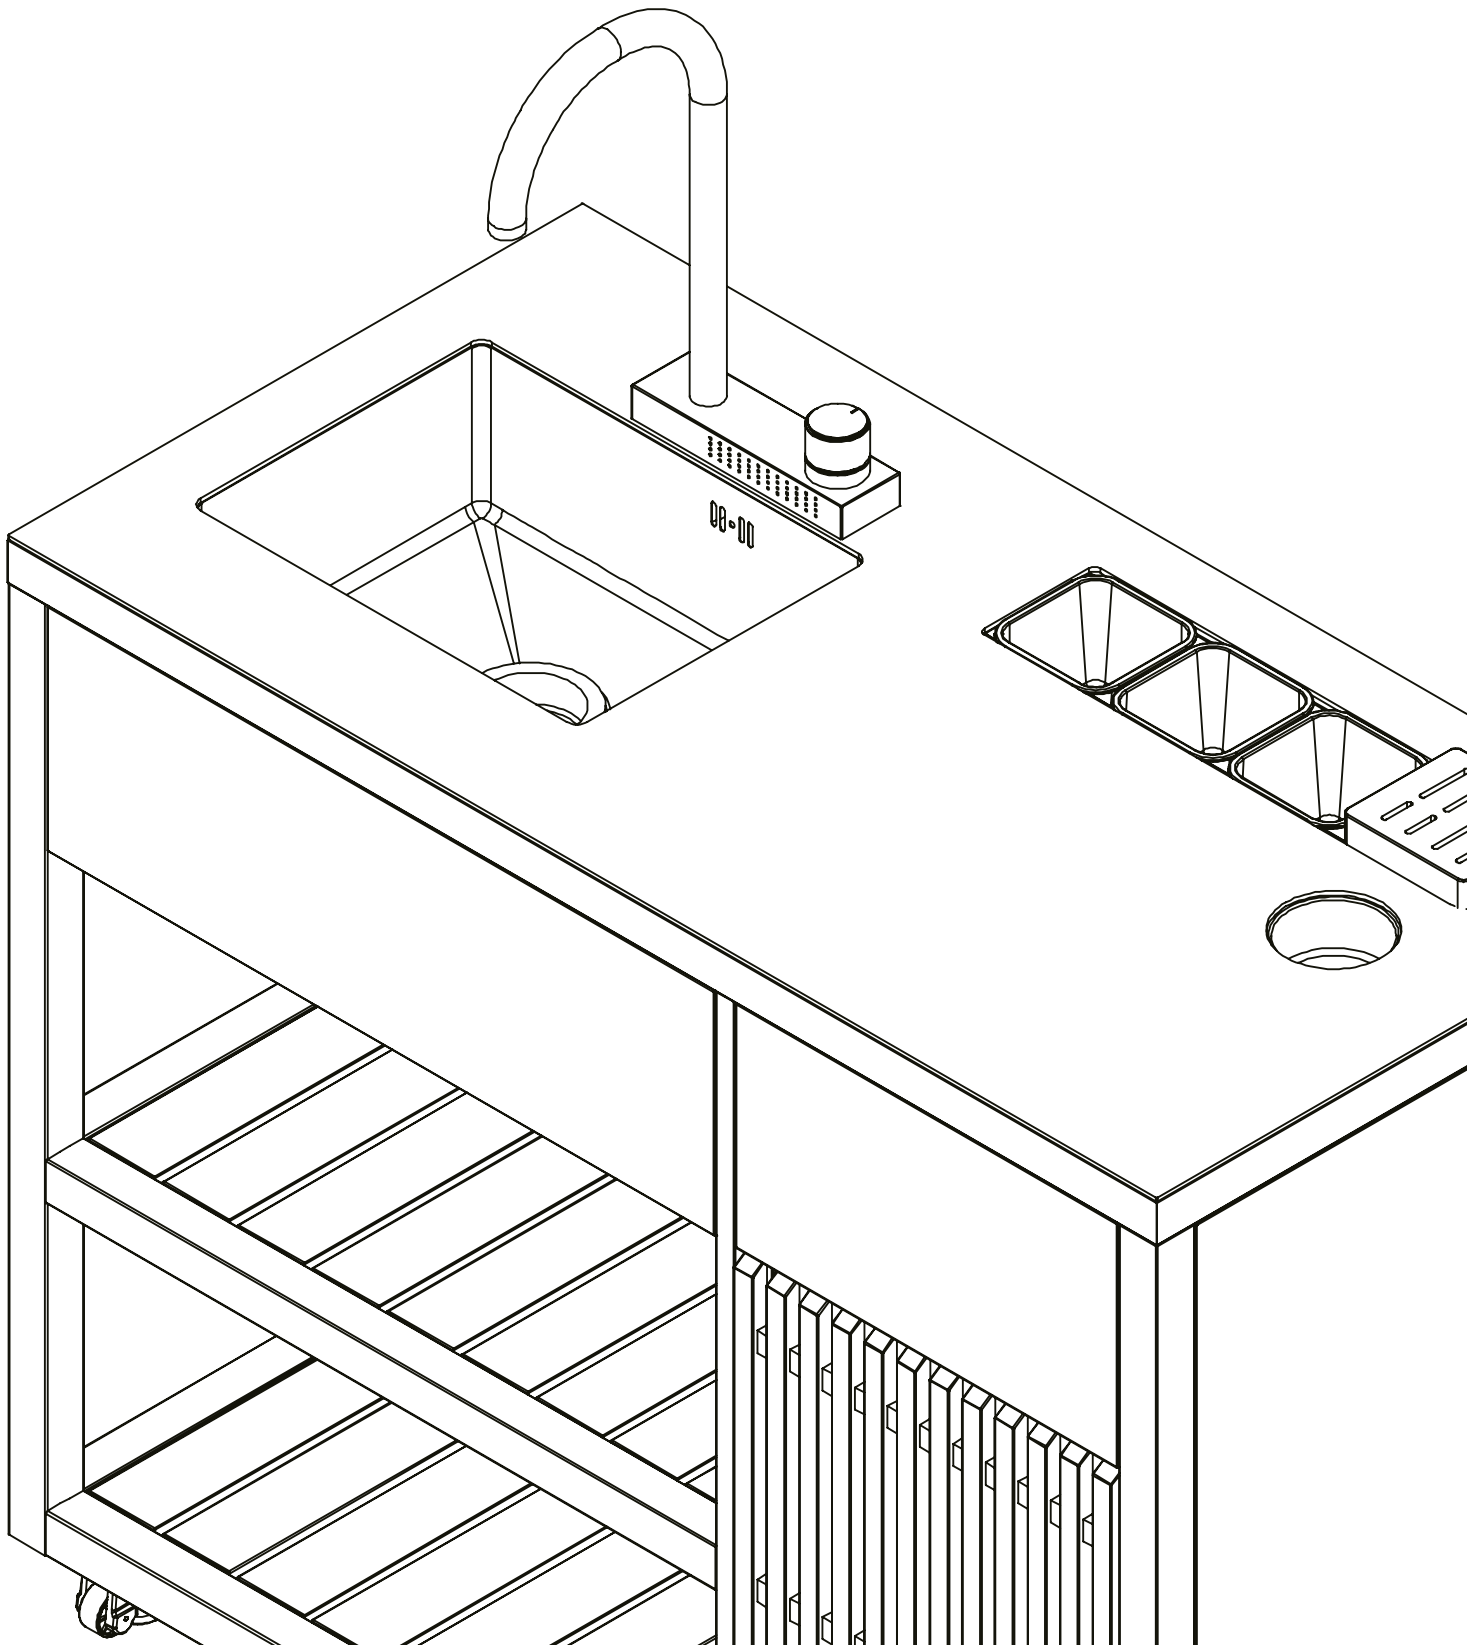


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

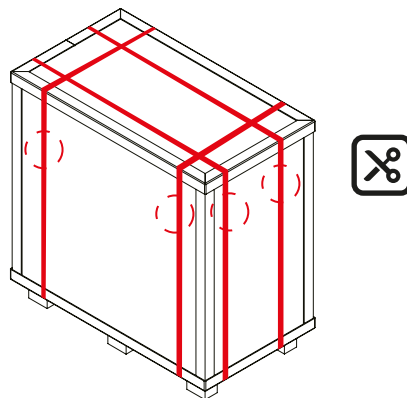

STEP 02. REMOVE THE TOP COVER OF THE CARTON

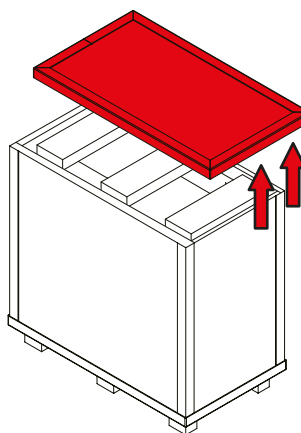


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

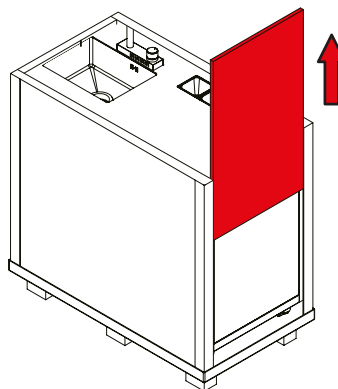


STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.

NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 4 PEOPLE SINCE IT IS VERY HEAVY.

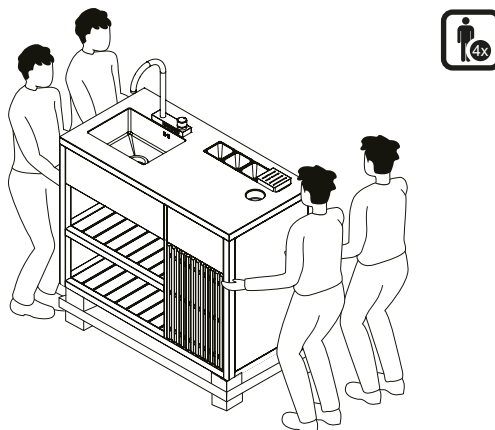


02 ASSEMBLING THE SINK AND WORKTOP UNIT

STEP 01. PUSH THE TEAK PANEL TO OPEN THE WASTE BIN CABINET.
TAKE OUT THE KNIFE HOLDER AND SEASONING BOXES.

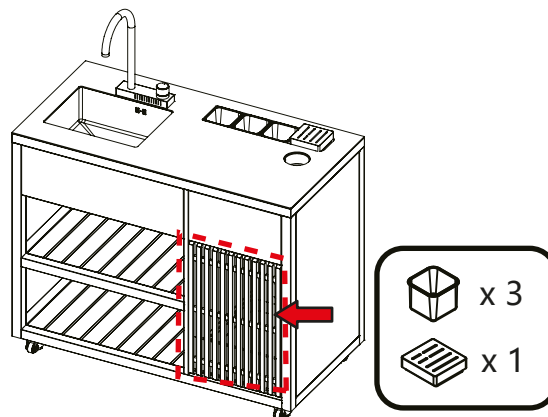


STEP 02. INSERT THE SEASONING BOXES AND KNIFE HOLDER INTO THE OPENINGS OF THE WORKTOP

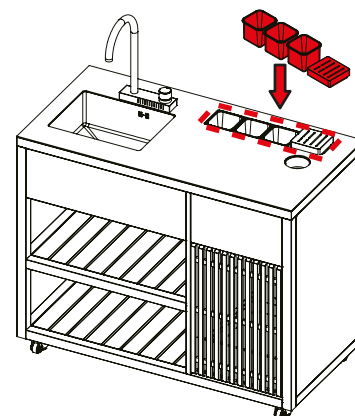

STEP 03. WASTE CAN BE DIRECTLY DROPPED INTO THE BIN BELOW THROUGH THE HOLE OF THE WORKTOP AS SHOWN IN THE ILLUSTRATION.

NOTE! PLEASE CHECK THE PLACEMENT OF THE WASTE BINS TO ENSURE THAT WASTE IS LANDING CORRECTLY.

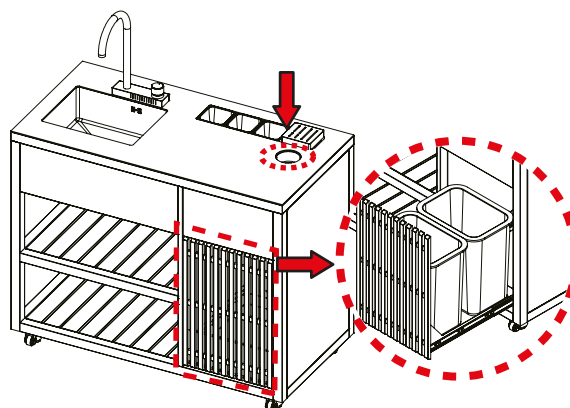


STEP 04. CONNECT THE INCLUDED WATERHOSE TO THE MALE HOSE CONNECTOR AS SHOWN IN THE ILLUSTRATION.

NOTE!


THE SINK AND WORKTOP UNIT IS PRE-INSTALLED WITH A MALE HOSE CONNECTOR.

DURING THE WINTER MONTHS THE WATER SUPPLY MUST BE DISCONNECTED AND THE SYSTEM MUST BE DRAINED TO AVOID ANY FROST DAMAGE


DAMAGE CAUSED BY FROST TO THE HOSE SYSTEM OR TAP IS NOT COVERED UNDER ANY WARRANTY

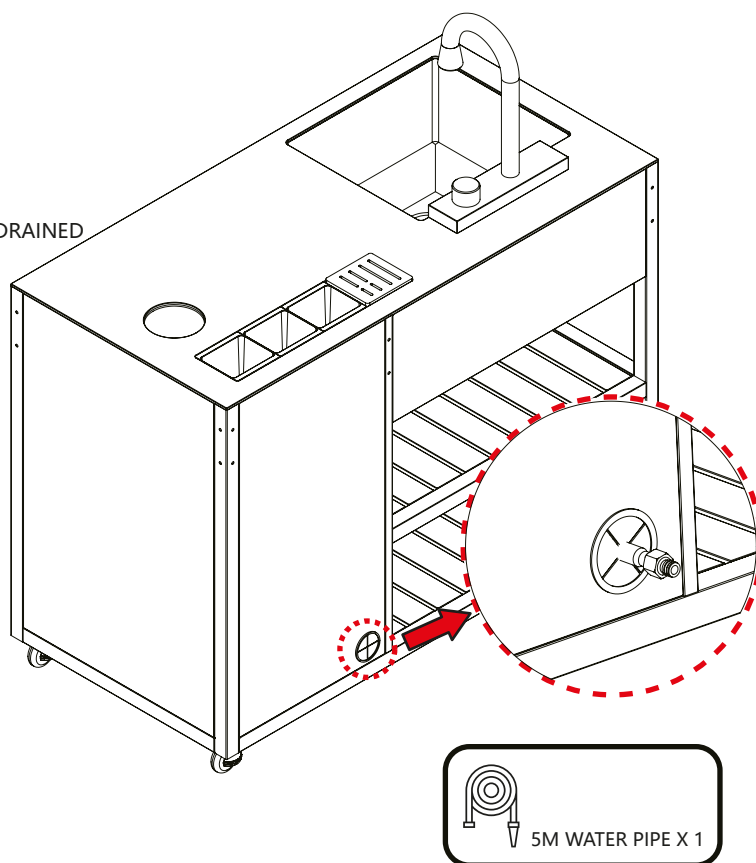

STEP 05. INSERT THE TAP NECK INTO THE TAP BASE AND FIX IN PLACE USING THE SCREW & ALLEN KEY PROVIDED.

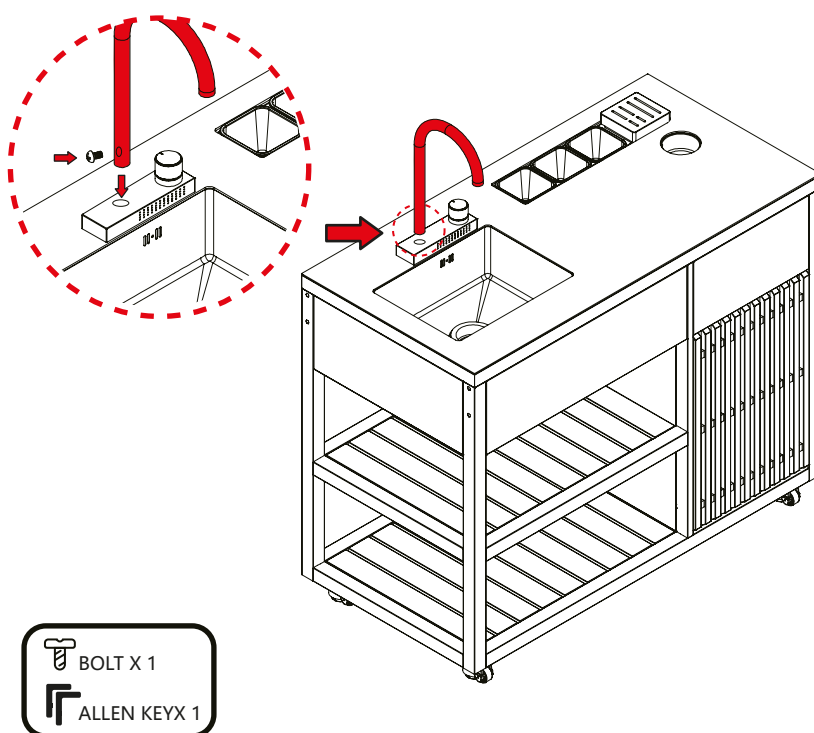


FRIDGE UNIT

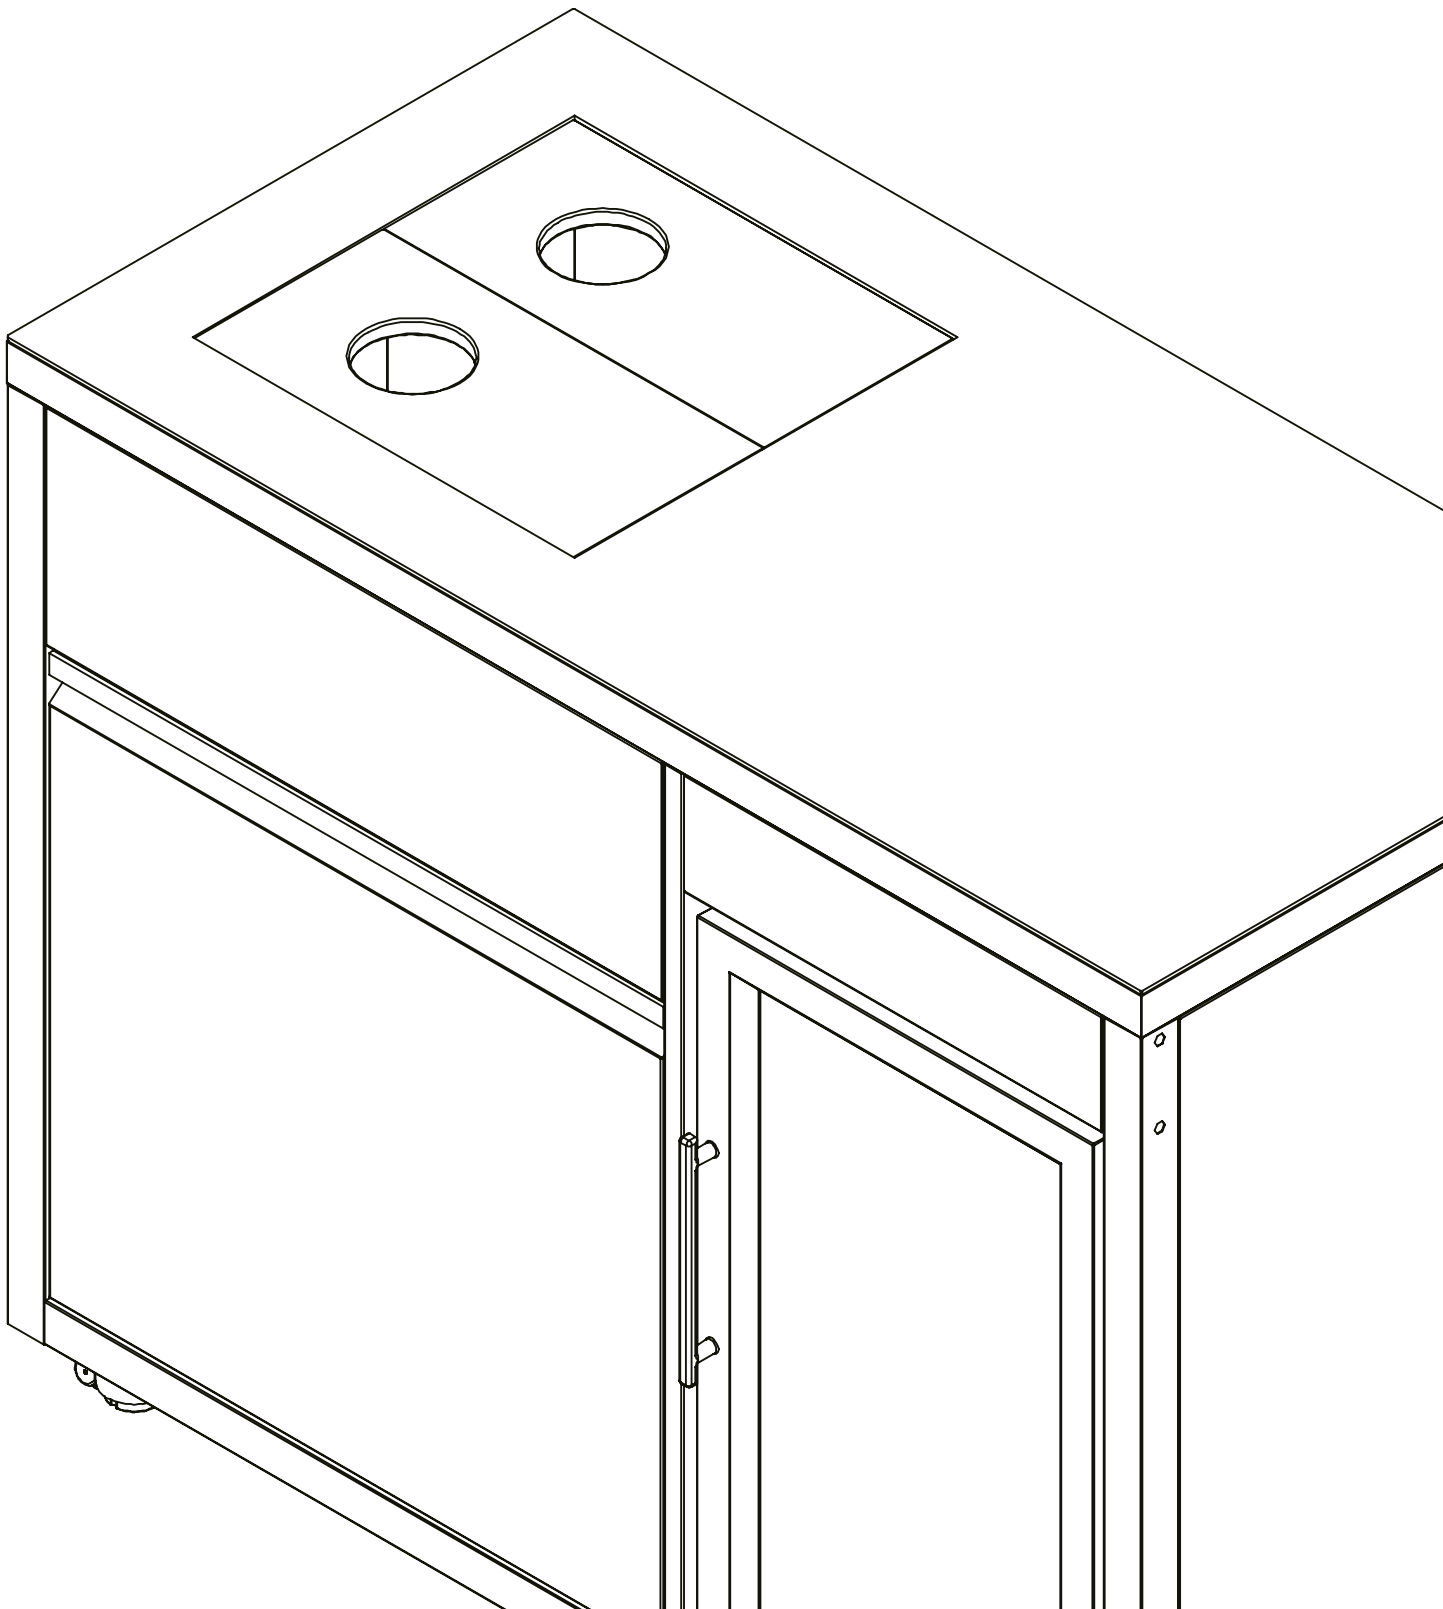


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

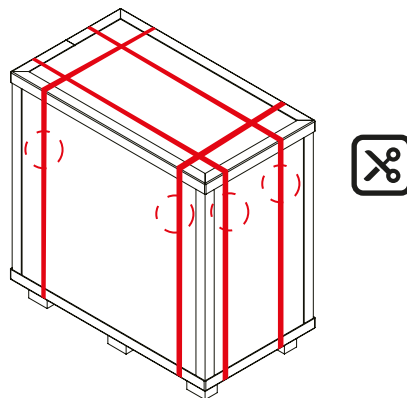

STEP 02. REMOVE THE TOP COVER OF THE CARTON

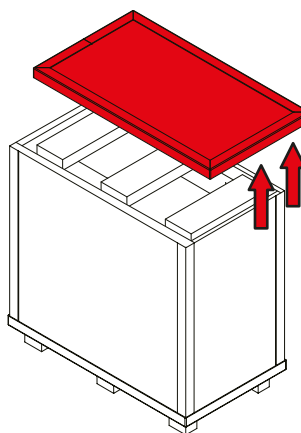


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

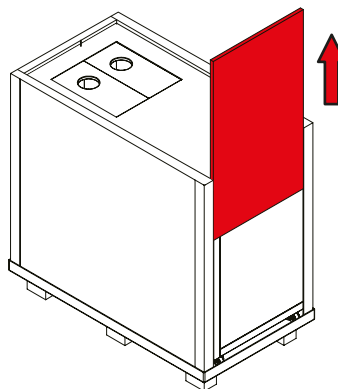

STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.

NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 4 PEOPLE SINCE IT IS VERY HEAVY.

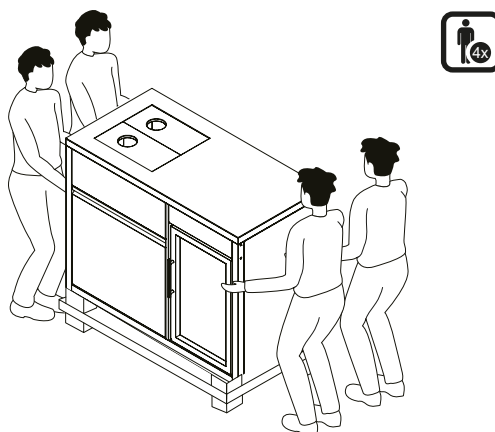


02 ASSEMBLING THE FRIDGE UNIT

STEP 01. TAKE OUT THE HANDLE FROM THE INSIDE OF THE COOLER AND INSTALL IT TO THE FRONT OF THE COOLER.




NOTE! IN ORDER TO REACH THE SCREW HOLES, THE SEAL MUST BE REMOVED FROM THE INNER DOOR FRAME. THE SEAL CAN BE PUT BACK INTO PLACE EASILY ONCE THE HANDLE IS INSTALLED.

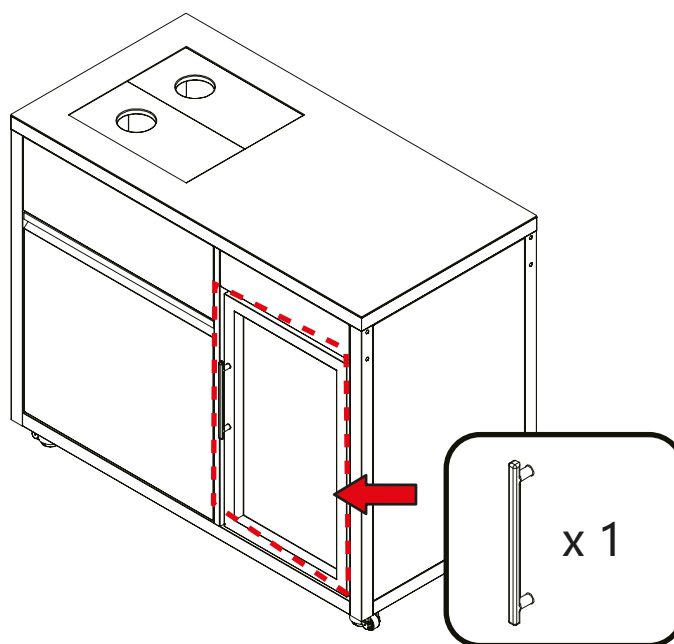


STEP 02. DONE.

NOTE! THE TEAK LIDS OF THE ICE BUCKETS ARE REMOVEABLE. THE ICE BUCKETS CAN BE EASILY REMOVED FOR EMPTYING.

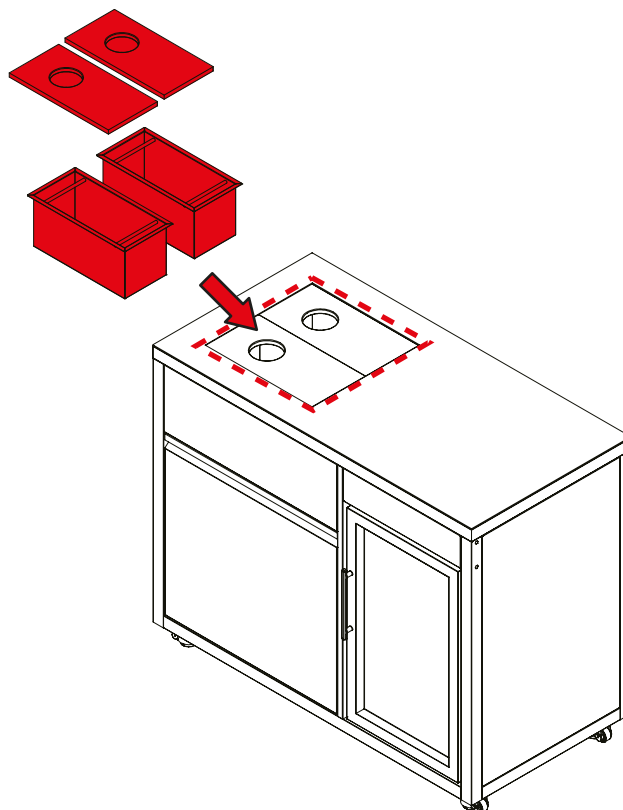


CORNER UNIT

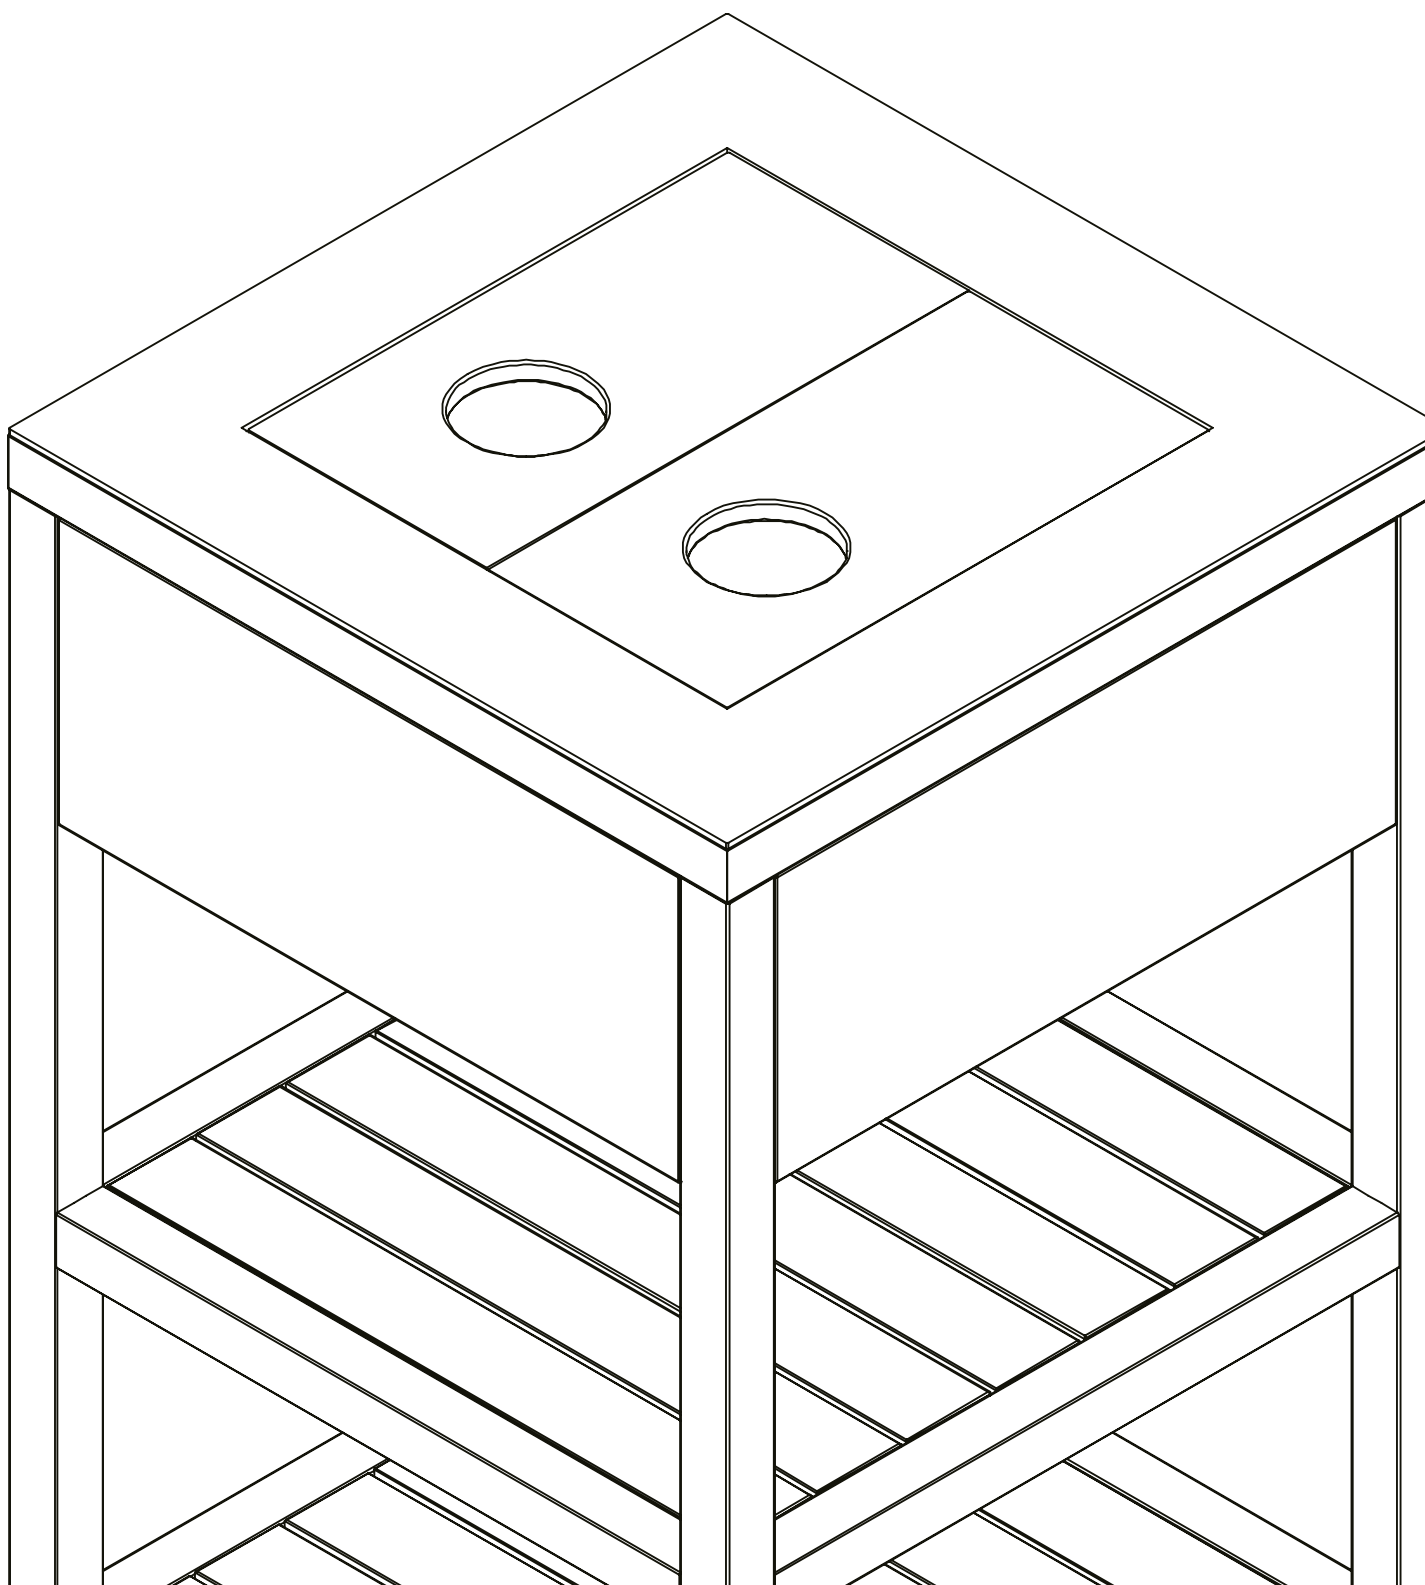


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

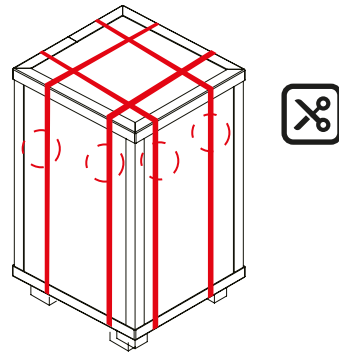

STEP 02. REMOVE THE TOP COVER OF THE CARTON

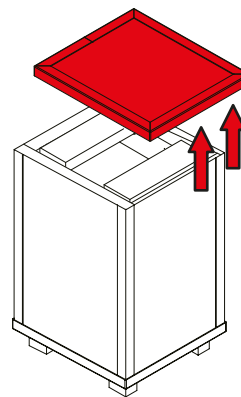


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

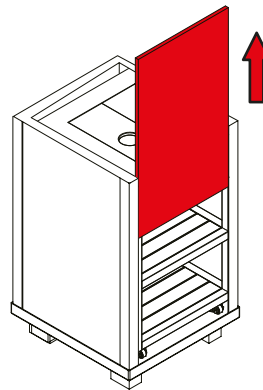


STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.

NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 2 PEOPLE SINCE IT IS VERY HEAVY.

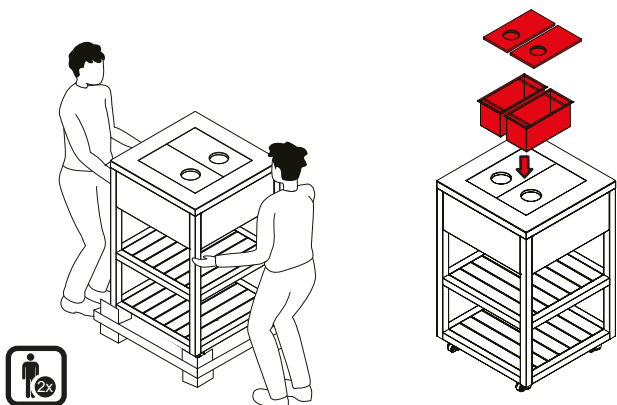


DRAWER UNIT

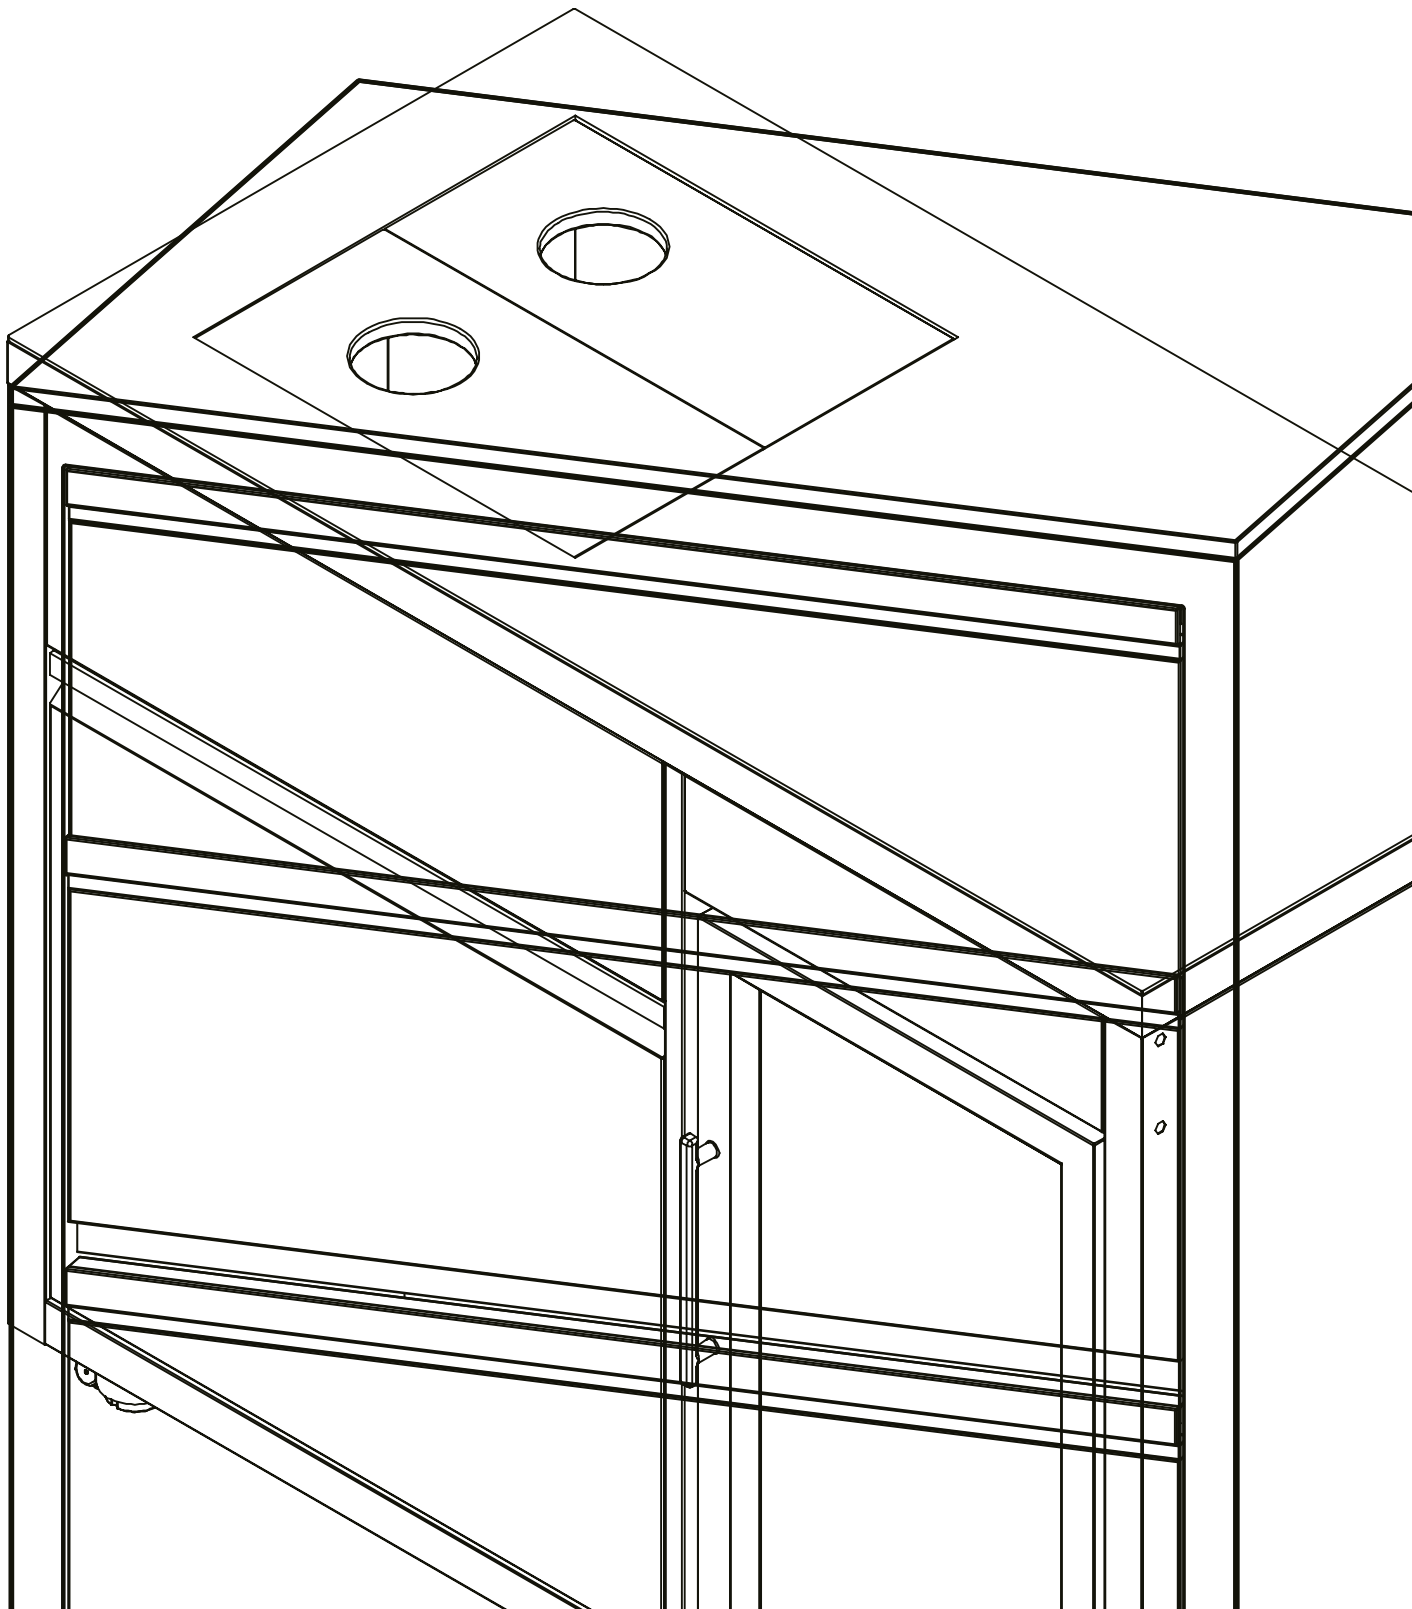


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

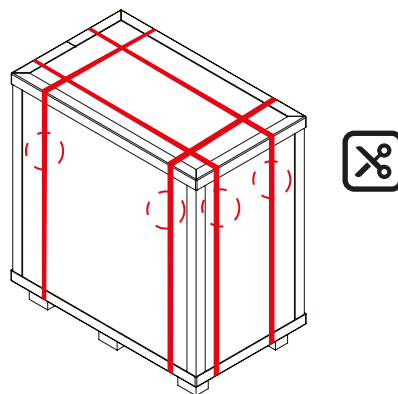

STEP 02. REMOVE THE TOP COVER OF THE CARTON

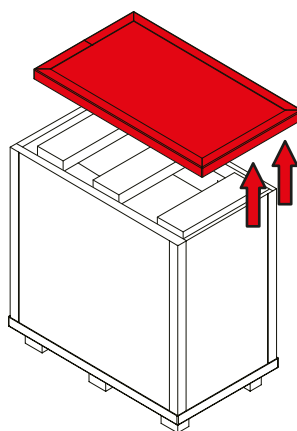


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

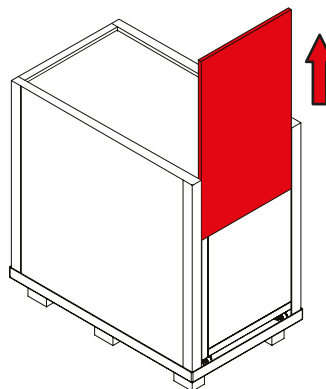


STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.

NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 4 PEOPLE SINCE IT IS VERY HEAVY.

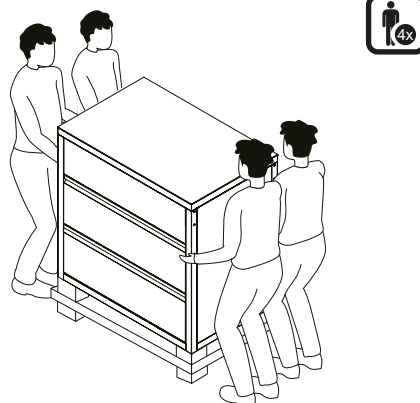


KAMADO STAND UNIT

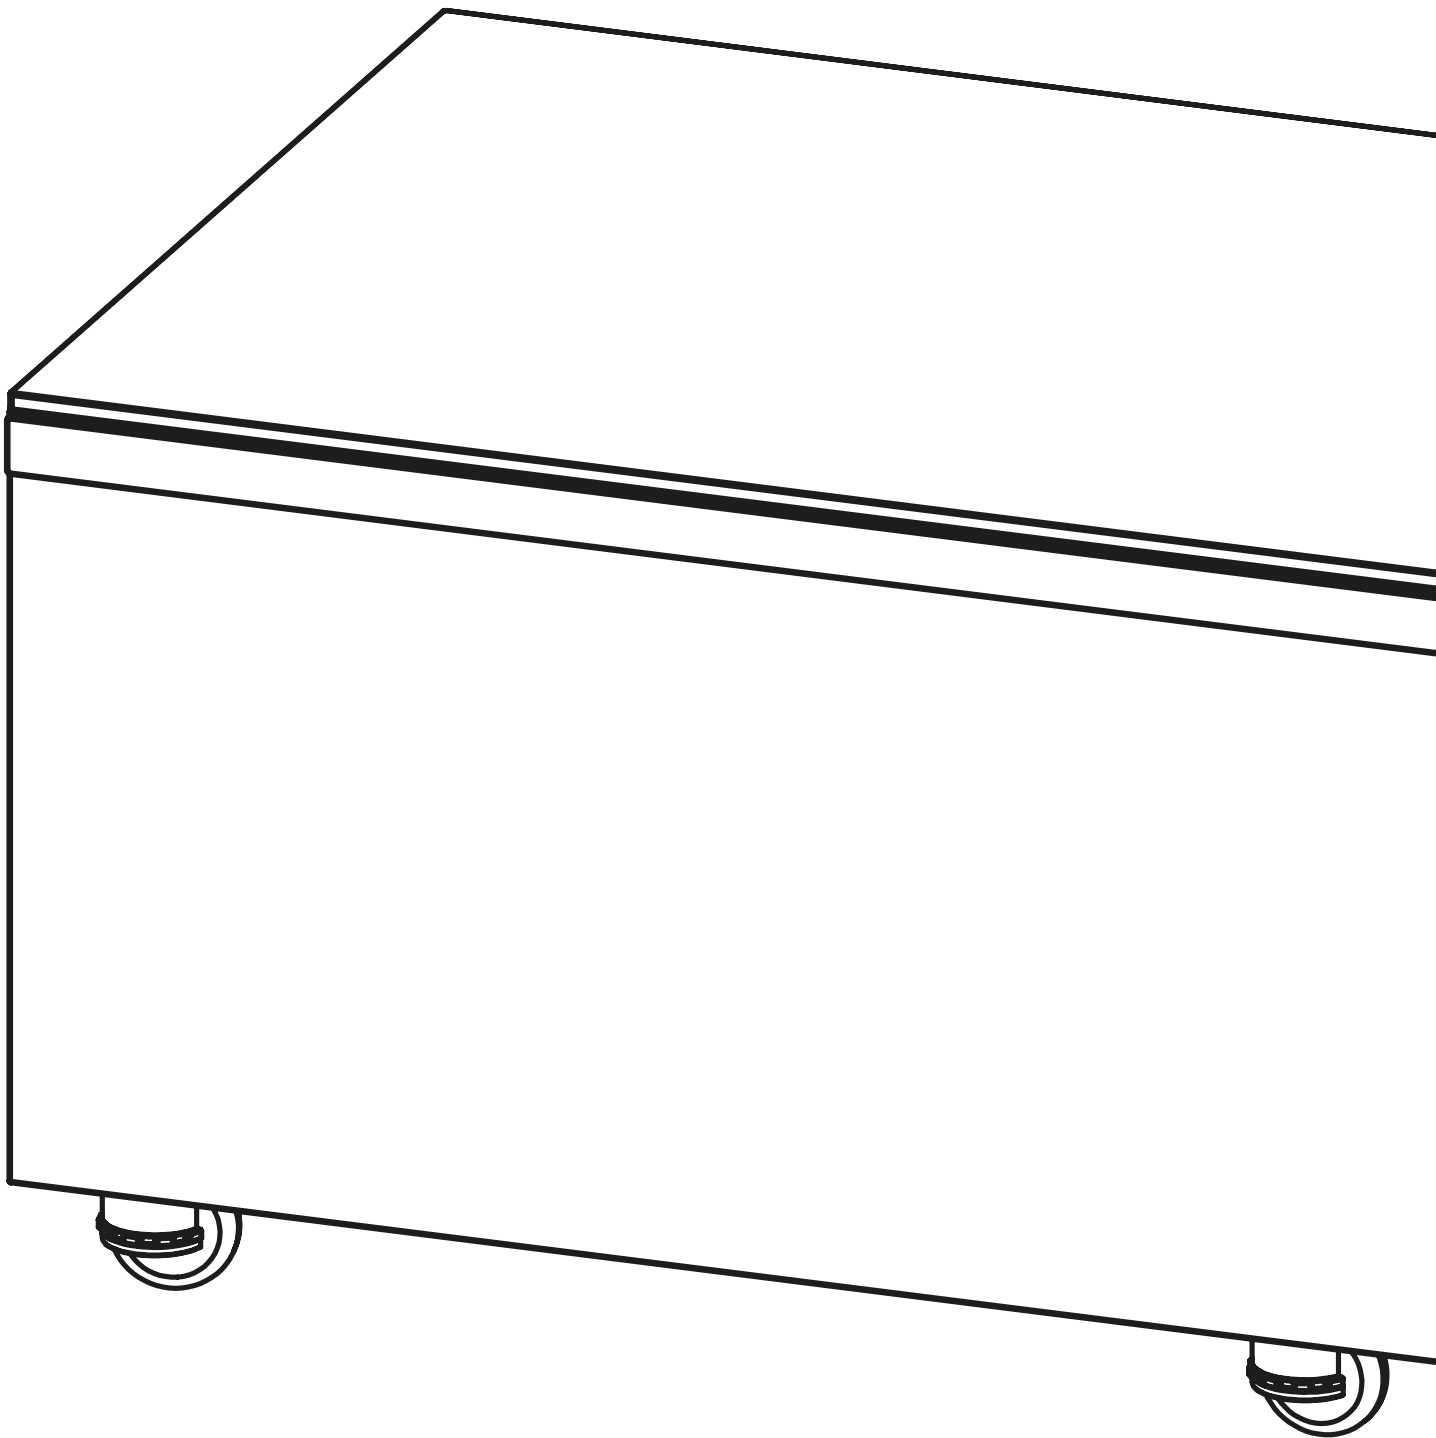


01 UNPACKING GUIDE

STEP 01. CUT OFF THE PACKAGE BANDS USING SCISSORS.


NOTE! DO NOT USE A KNIFE OR OTHER SHARP BLADED ITEM TO CUT OFF THE PACKAGING BANDING AS THIS COULD CAUSE DAMAGE TO THE CABINET.

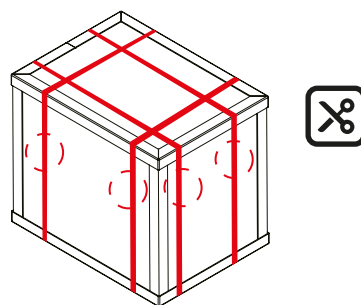

STEP 02. REMOVE THE TOP COVER OF THE CARTON

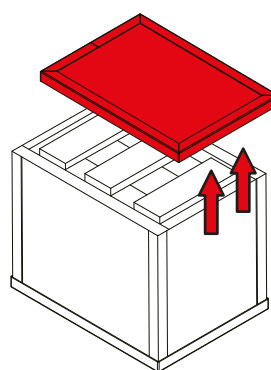


STEP 03. REMOVE THE SIDE SECTIONS OF THE CARTON BY SLIDING EITHER SIDE UPWARDS, FOLLOWED BY THE FRONT AND BACK SECTIONS.

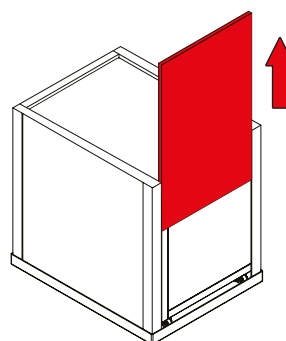


STEP 04. MAKE SURE THAT YOU CLEAR THE AREA BEFORE THE UNIT IS MOVED FROM THE PALLET.

NOTE! LIFT THE UNIT UPWARDS OUT OF THE PALLET BASE BEFORE REMOVING AND PLACING ON A FIRM LEVEL SURFACE. ITS RECOMMENDED THAT THE UNIT IS LIFTED BY 4 PEOPLE SINCE IT IS VERY HEAVY.


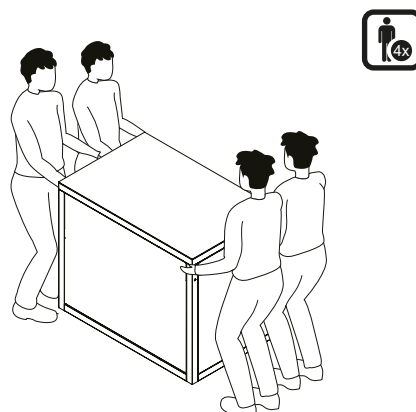


HOW TO INTALL THE OPTIONAL TEAK SIDE SHELVES AND BAR UNIT ACCESSORIES

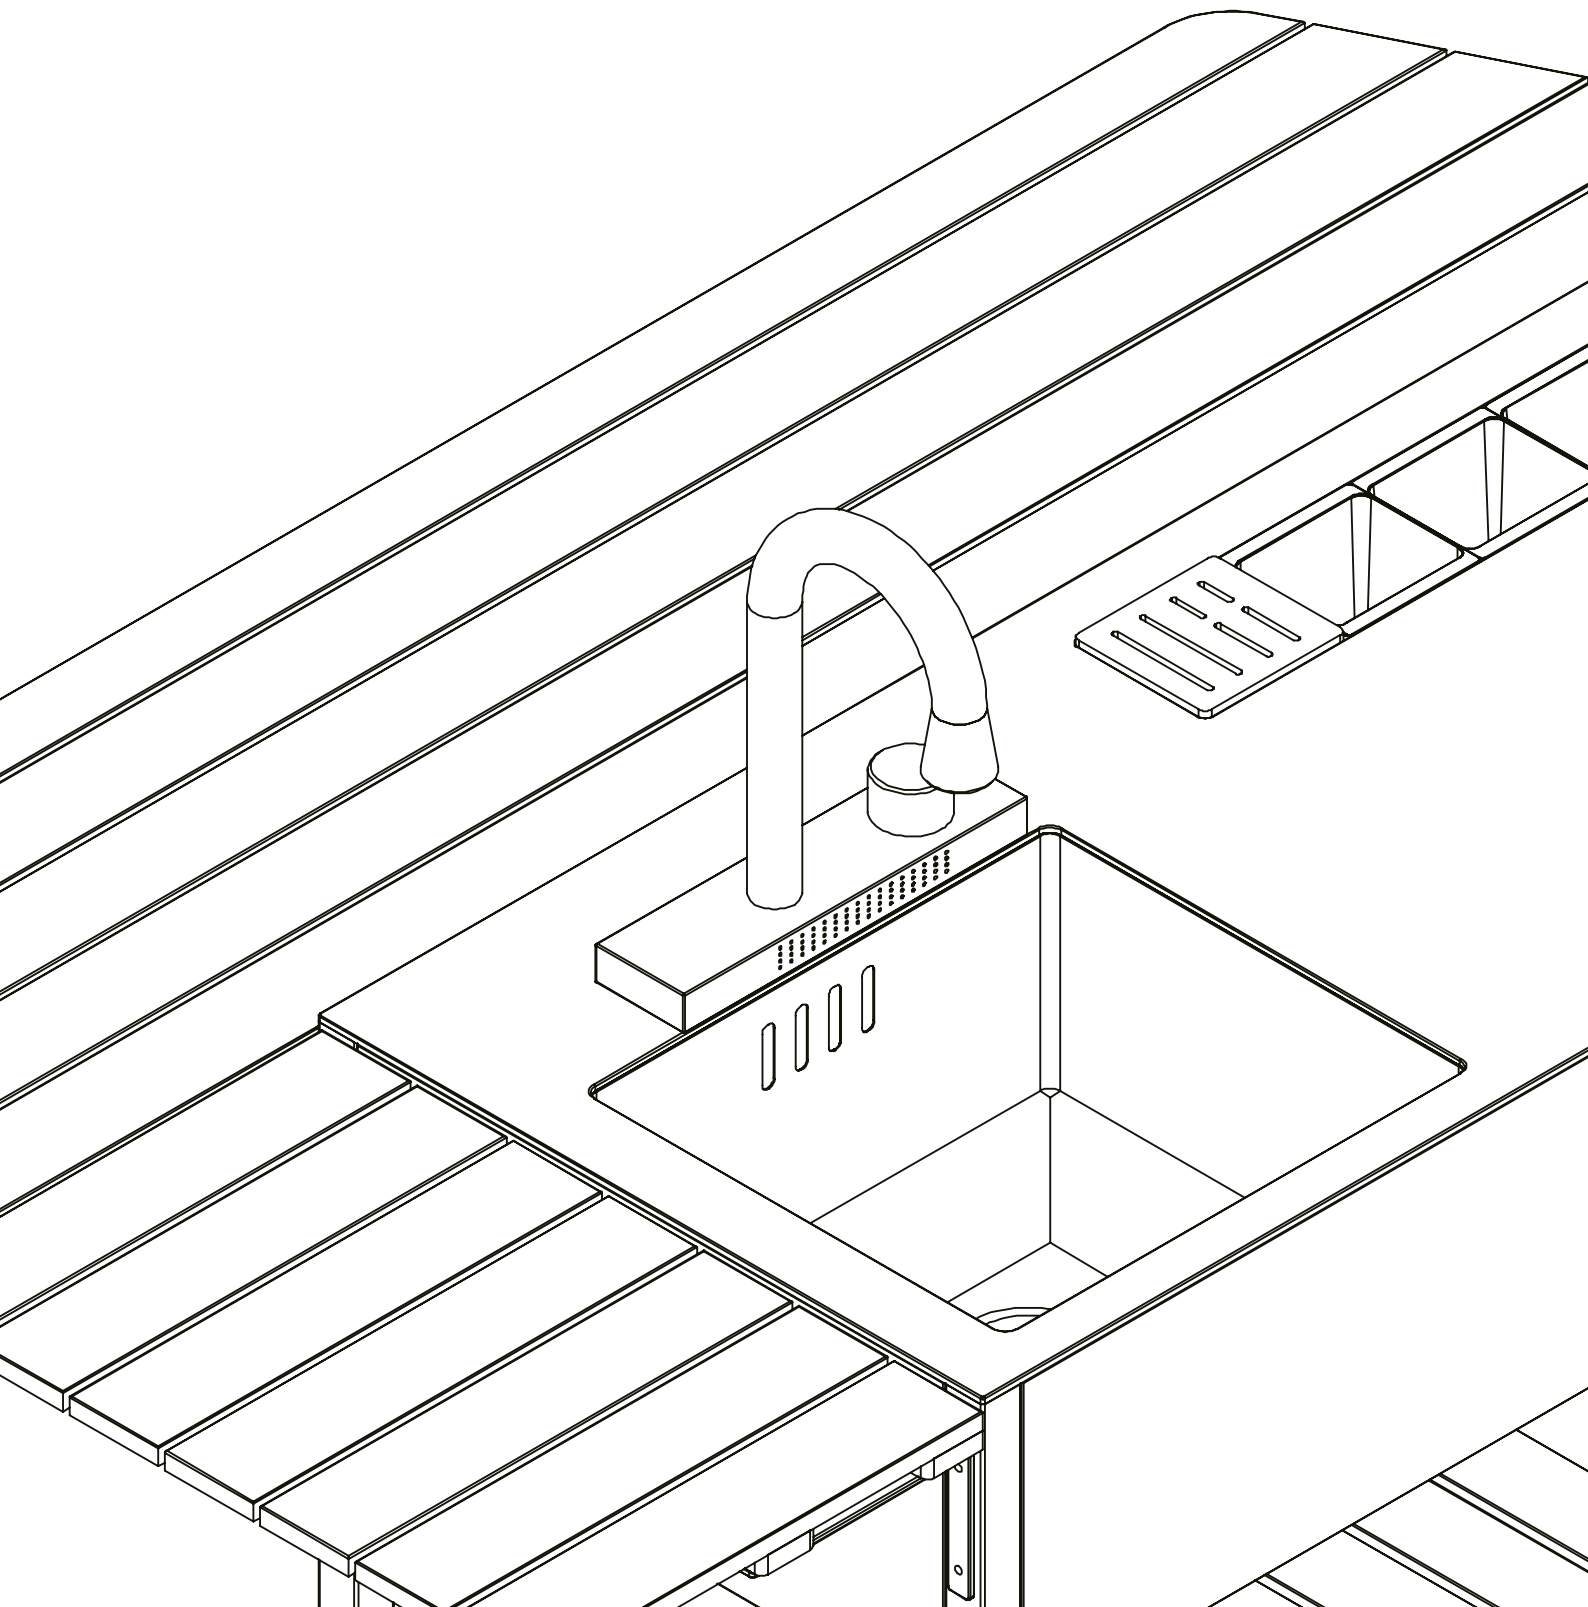



GRILL UNIT - SIDETABLE

USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE GRILL AS SHOWN.
ATTACH THE SUPPORT BRACKETS TO THE TEAK SIDE TABLE AND THEN FIX TO THE SIDE OF THE BARBECUE UNIT.

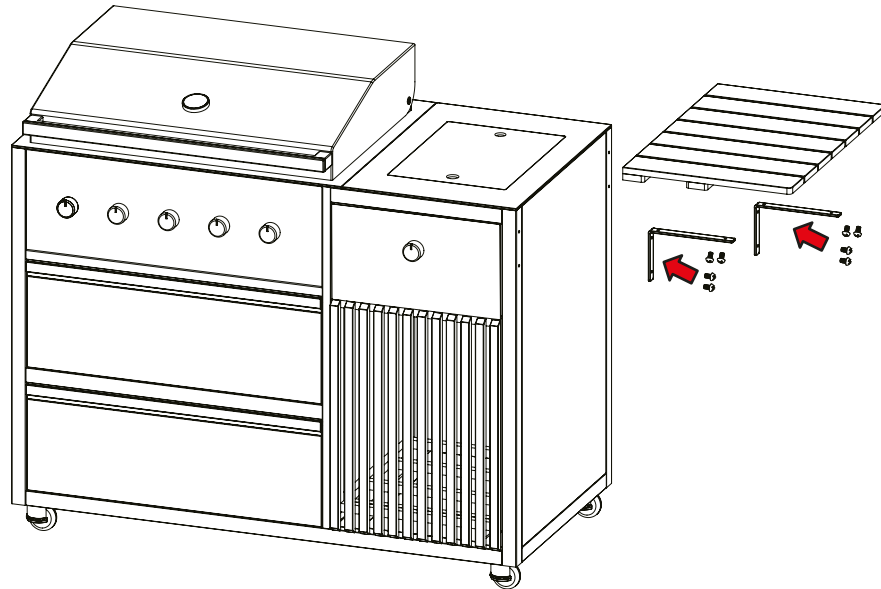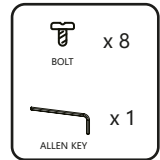



GRILL UNIT - HEAT PROTECTION & BACK TABLE

USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE GRILL AS SHOWN.
FIRST, INSTALL THE HEAT PROTECTION TO THE BACK OF THE GRILL AS SHOWN.
ATTACH THE SUPPORTING BRACKETS TO THE BACK TABLE AND INSTALL IT TO THE BACK OF THE GRILL.

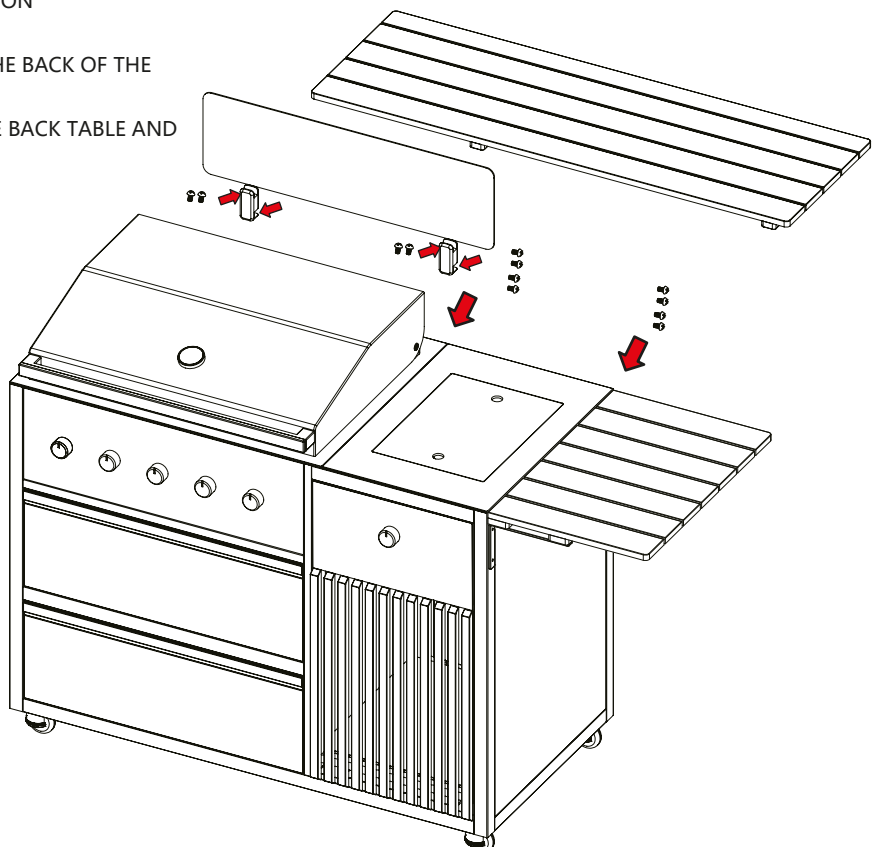



SINK UNIT - SIDE- & BACK TABLE

AS SHOWN, USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE SINK UNIT.
ATTACH THE SUPPORT BRACKETS TO THE TEAK TABLE AND INSTALL IT ONTO THE REAR / SIDE OF THE UNIT.

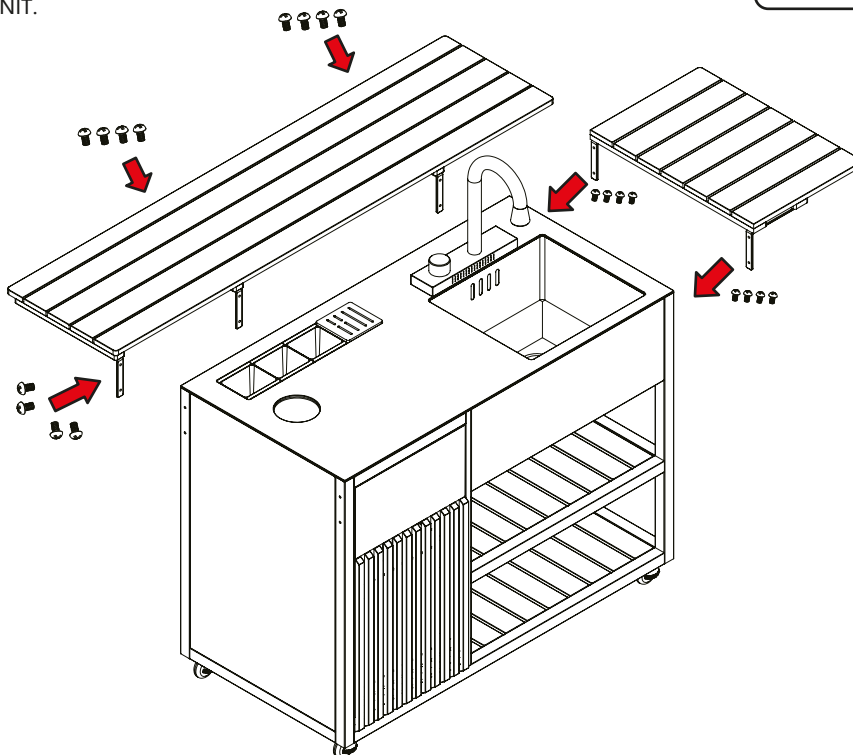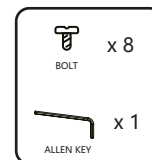


FRIDGE UNIT - SIDE- & BACK TABLE

AS SHOWN, USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE FRIDGE UNIT.
ATTACH THE SUPPORT BRACKETS TO THE TEAK TABLE AND INSTALL IT ONTO THE REAR / SIDE OF THE UNIT.

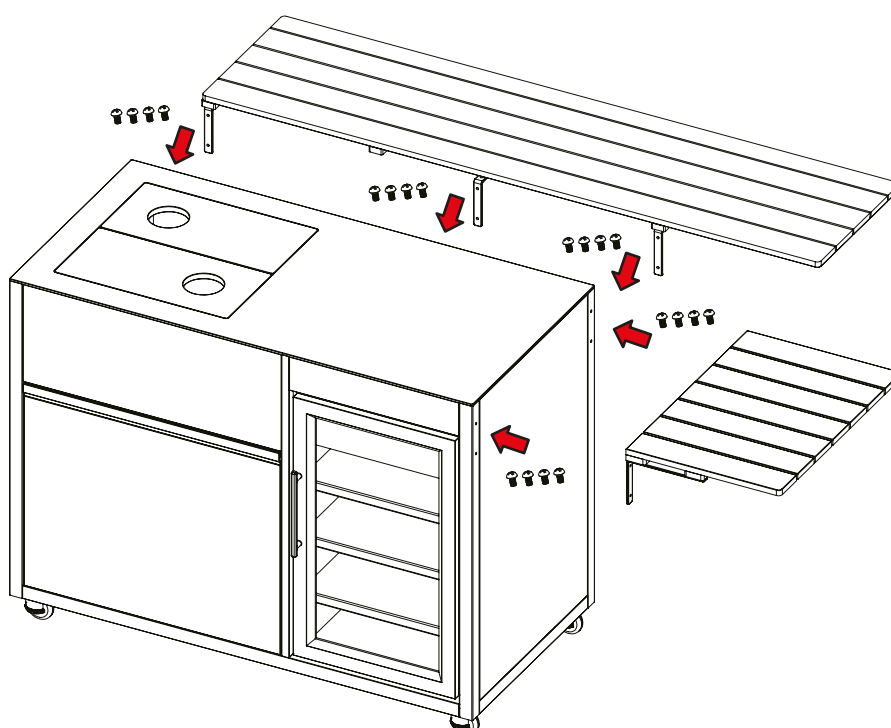

CORNER UNIT - HANDLE & SIDE TABLE

STEP 01. AS SHOWN, USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE CORNER UNIT.
ATTACH THE HANDLE ON THE CORNER UNIT'S SIDE.

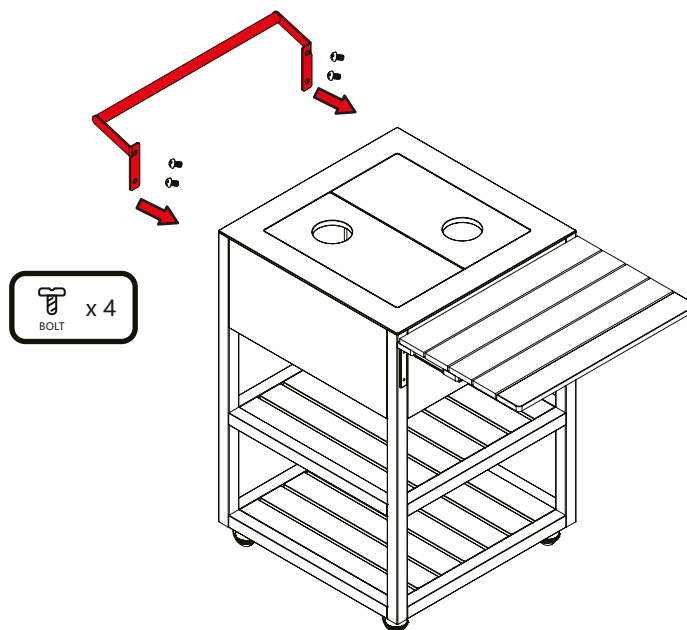

STEP 02. USE AN ALLEN KEY TO UNDO THE M6 BOLTS ON THE CORNER UNIT.
ATTACH THE SUPPORT BRACKETS TO THE TEAK TABLE AND
INSTALL IT ON THE OPPOSITE SIDE OF THE HANDLE.

