Second generation app manual

Install, connect and prepare

Before starting: use the matching app on Android 7.0 / API 24 or later, with a compatible device server reachable from the phone. Have the device network details and your team's approved assay instructions ready.

1 Install the matching app

Download the second-generation APK. The supplied package is **com.chuangxin.socket**, version 1.0. Follow Android's installation prompt. Keep the app generation with your experiment record.

2 Connect to the device

Join a network that can reach the device server. Enter its IP address and TCP port, select **Connect to Server**, and check the returned status. **10.42.0.1:8080** is the recorded example; use your device's actual address.



Connection controls from a supplied screen. This is a shared interface reference; the exact screenshot build has not been identified.

3 Find the app screens

Use **Ded., Data, Servo and Setting** to move between supported screens. Ded. displays returned images and tube labels; Data shows received curves and temperature. Setting contains timing and device controls.

4 Set timing and device controls

In Setting, adjust the heating-time control or use **Manually enter the time**; the +10s and -10s buttons adjust the app timer. **Heating countdown** controls that timer. Use the temperature controls only according to the matching device and assay instructions. Check returned temperature and status when monitoring the device.

Device information to be added

Network name/password, confirmed app-device compatibility, the device start/shutdown sequence, and assay-specific temperatures and durations are not supplied here. A running app countdown alone does not confirm that the device has started.


The Hardware manual and operation video currently lead to the common Hardware page. Their final sections and links will be added by the team.

Sources: supplied Software Word materials, earlier illustrated guide, and generation-matched Android source at b06ba6a. Prepared 6 October 2026.

App source Hardware manual (to be added) Hardware video (to be added)

Second generation app manual

Monitor, inspect and use device controls

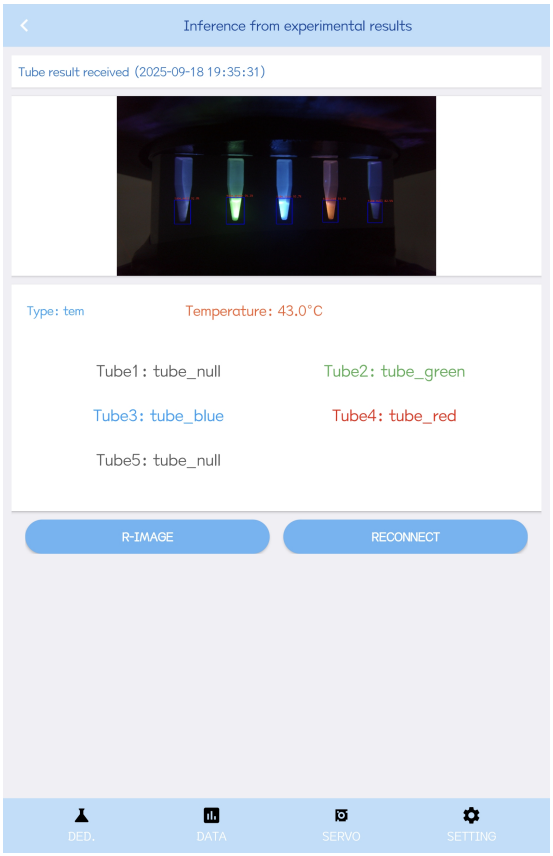

Supplied result screen with five tube labels. Only the phone's top status bar is cropped; the historical message date is preserved.

5 Monitor the returned data

In Data, check temperature and the received chart updates. The published second-generation source supports five chart series, while supplied screenshots show two. Use the labels in your installed build; the exact APK/screenshot match remains to be confirmed.

6 Inspect the five tube labels

Open Ded. and use **R-Image** for an image request. Read the five returned tube-label fields together with that image. The automatic-request control starts or stops repeated image requests. Interpret result colors using the matching assay instructions.

7 Use Servo with device instructions

The Servo screen provides **Reset Position**, **Position 1** and **Position 2**. The physical positions and operating sequence have not been supplied; use these controls only with the corresponding Hardware instructions.

8 Reconnect and keep the image

If updates stop, check the server, network, IP and port; select **Reconnect** after disconnection and request an image again. Check the save confirmation and Android gallery after receiving an image. If saving fails, review storage permission and confirm the file exists before leaving the session.

Information to be added: exact released-build/chart correspondence, device position meanings and temperature-control sequence, assay result thresholds, and a complete measurement-export/history procedure. Final Hardware manual/video links remain to be added.

Sources: supplied Software Word materials, earlier illustrated guide, and generation-matched Android source at b06ba6a. Prepared 6 October 2026.

App source Hardware manual (to be added) Hardware video (to be added)